GENERAL INFORMATION

Diagnostic Connector (DLC) Locations

DOMESTIC CARS

CHRYSLER GROUP LLC

NOTE: **This table provides a quick reference for self-diagnostic connector locations, when available from manufacturer, that ARE NOT located at the lower left side of the dash, as mandated in 1996 by the Federal government.**

CHRYSLER GROUP LLC - DOMESTIC CARS

Application	Connector Location
Acclaim	
1989-90	Under Left Side Of Dash
1991-92	On Left Front Fender Panel, Near Shock Tower
1993-94	Near Battery
1995	Behind Left Side Of Dash, Near Fuse Block
Aries, Caravelle, Dynasty, E Class, Executive Sedan, LeBaron Sedan, New Yorker, Reliant, Town & Country, 400 & 600	
1984-85	On Left Fender Apron, Behind Battery (2.2L Only)
1986-87	On Front Of Right Shock Tower (2.2L & 2.5L Only)
1988-89	On Left Fenderwell
1990	Under Left Side Of Dash
1991-92	On Left Front Fender Panel, Near Shock Tower
1993 (Except New Yorker)	Near Battery
1993 (New Yorker)	On Left Fender Panel Near PCM
Avenger (1995-00)	Under Center Of Dash, Near Center Console
Breeze, Cirrus & Stratus (1995)	Left Of Steering Column, On BCM
Charger, Horizon, Omni, Rampage, Scamp & Turismo	
1985-89	
2.2L Carbureted	On Left Fender Apron
2.2L Turbo	On Front Of Right Shock Tower
Concorde, Intrepid, LHS, New Yorker, Vision & 300M	
1993-95	Behind Left Side Of Dash
1996-97	Under Left Side Of Dash, Near Center Console
Daytona	

1984-87	On Front Of Right Shock Tower
1988-89	On Left Fenderwell
1990-92	On Left Front Fender Panel, Near Shock Tower
1993	On Left Front Inner Fender Or Under Steering Column
Dynasty	
1990	Under Left Side Of Dash
1991-93	On Left Fender Panel, Near SBEC/PCM
Fifth Avenue	
1990	Under Left Side Of Dash
1991-93	On Left Fender Panel Near SBEC/PCM
Horizon & Omni (1989-90)	Under Left Side Of Dash
Imperial	
1981-83	CCC Connector Left Of Air Cleaner
1990	Under Left Side Of Dash
1991-93	On Left Fender Panel Near SBEC/PCM
LeBaron Coupe & Convertible	
1985-87	On Right Front Shock Tower
1988-89	On Left Fenderwell
1990-92	On Left Front Fender Panel, Near Shock Tower
1993	On Left Front Inner Fender Or Under Steering Column
1994	Near Battery
1995	Behind Left Side Of Dash, Near Fuse Block
Lancer	
1985-87	On Right Front Shock Tower
1988-89	On Left Fenderwell
Laser	
1990-94	Above Left Kick Panel, Near Fuse Block
1995	Under Left Side Of Dash, Near Center Console
Monaco & Premier	
1990	On Right Front Fender Panel
1991-92	On Left Fender Panel, Next To SBEC
Neon (1995)	Under Headlight Switch, Under Left Side Of Dash
Shadow	
1985-87	On Right Front Shock Tower
1988	On Left Fenderwell
1989	Under Dash, To Right Of Steering Column

1990	On Left Fender Front Panel, Near SBEC
1991-92	On Left Front Fender Panel, Near Shock Tower
1993-94	Near Battery
Spirit & Sundance	
1985-87	On Right Front Shock Tower
1989-90	Under Left Side Of Dash
1991-92	On Left Front Fender Panel, Near Shock Tower
1993-94	Near Battery
1995	Behind Left Side Of Dash, Near Fuse Block
Talon	
1990-94	Above Left Kick Panel, Near Fuse Block
1995-98	Under Left Side Of Dash, Near Center Console

FORD MOTOR CO.

NOTE: This table provides a quick reference for self-diagnostic connector locations, when available from manufacturer, that ARE NOT located at the lower left side of the dash, as mandated in 1996 by the Federal government.

FORD MOTOR CO. - DOMESTIC CARS

Application	Connector Location
Bobcat & Pinto	On Center Of Right Fender Apron
Capri	
1980-85	On Center Of Left Front Fender Apron
1986	On Left Rear Corner Of Engine Compartment
Continental	
1984-89	On Right Rear Corner Of Engine Compartment
1990-91	On Right Rear Corner Of Firewall, On Electronic Assembly Cover
1992	On Right Fender Apron
1993-94	VIP Connectors (2) On Right Rear Of Engine Compartment, On PCM Cover
Contour & Mystique	
1995	On Left Rear Corner Of Engine Compartment
Cougar & Thunderbird	
1982-90	On Left Fender Apron
1991	On Rear Of Right Front Fender Panel
1992	Front Of Right Shock Tower
1993	2 Connectors In Right Rear Corner Of Engine Compartment

1994	On Right Side Of Engine Compartment & Below Glove Box
1995	
3.8L	On Right Side Of Engine Compartment & Below Glove Box
4.6L	Behind Right Side Of Dash, Below Glove Box
1996	Lower Right Side Of Dash, Below Glove Box
Crown Victoria, Grand Marquis & Lincoln Town Car	
1983 & 1987	On Right Fender Apron
1985-86 & 1988-90	On Left Fender Apron
1992	On Left Front Fender Panel
1993-94	On Top Of Left Front Wheelwell
Escort, EXP, Lynx & Tracer	
1985-90	On Right Fender Apron Near Firewall
1991	On Left Rear Of Engine Compartment
1992	On Right Rear Of Engine Compartment, Near Cowl
1993-95	On Left Side Of Firewall
LTD & Marquis	
1983	On Left Fender Apron
1984-86	On Left Rear Corner Of Engine Compartment
Mark VII	
1984-87	On Right Rear Corner Of Engine Compartment
1988-90	Front Of Right Fender Apron
1991	On Right Side Of Engine Compartment, Near Thermactor Solenoids
Mark VIII	
1993-96	On Top Of Left Wheelwell
Mustang	
1980-85	On Center Of Left Front Fender Apron
1986-91	On Left Rear Corner Of Engine Compartment
1992	On Left Shock Tower, Near Ignition Coil
1993	2 Connectors On Right Front Strut Tower
1994-95	Behind Right Front Strut Tower & Right Of Steering Column
Probe	
1991-92	On Left Rear Corner Of Engine Compartment
1993	DLC - Behind Left Side Of Dash; STI Connector - On Left Inner Fender Panel
1994-95	On Left Front Inner Fender Panel
Sable & Taurus	
1986-87 (3.0L Only)	Near Alternator
1988-90	
2.5L	On Engine Harness Near PCV Hose
3.0L	On Right Rear Corner Of Engine Compartment

1991	On Right Rear Corner Of Engine Compartment, On ECA Cover
1992	On Right Rear Corner Of Engine Compartment, Below MAP Sensor
1993-95	Right Rear Of Engine Compartment
Tempo & Topaz	
1984-92	On Right Rear Corner Of Engine Compartment
1993-94	In Engine Compartment, On Left Strut Tower

GENERAL MOTORS

NOTE: This table provides a quick reference for self-diagnostic connector locations, when available from manufacturer, that ARE NOT located at the lower left side of the dash, as mandated in 1996 by the Federal government.

GENERAL MOTORS - DOMESTIC CARS

Application	Connector Location
Allante	Enter Diagnostic Mode By Pressing OFF & WARM Buttons On Instrument Panel
Bonneville (1980-81)	ECU Connector On Upper Right Kick Panel
Brougham (1987-92)	Bottom Center Of Instrument Panel
Camaro & Firebird (1980)	Diagnostic Ground Lead Connector On Right Shroud Above ECM
Caprice Classic	
1980-81	ECU Connector On Upper Right Kick Panel
1982-88	Under Center Of Instrument Panel
Catalina	ECU Connector On Upper Right Kick Panel
Cavalier (1982-88)	On Side Of Fuse Block
Cimarron	On Side Of Fuse Block
Century	Under Left Of Dash Ashtray
Corvette (1980-83)	In Center Console, Under Ashtray
Custom Cruiser	
1980-81	ECU Connector On Upper Right Kick Panel
1982-88	Under Center Of Instrument Panel
DeVille (1981-88)	Enter Diagnostic Mode By Pressing OFF & WARMER Buttons On Instrument Panel
Delta 88	ECU Connector On Upper Right Kick Panel
Eldorado (1981-88)	Enter Diagnostic Mode By Pressing OFF & WARMER Buttons On Instrument Panel
Electra (1980-81)	ECU Connector On Upper Right Kick Panel
Estate Wagon	ECU Connector On Upper Right Kick Panel
Fiero	Under Ashtray Or Cigar Lighter Panel Within Center Console
Firenza	On Side Of Fuse Block

Fleetwood (1981-88)	Enter Diagnostic Mode By Pressing OFF & WARMER Buttons On Instrument Panel
Fleetwood Brougham	On Bottom Center Of Dash, Near Ashtray
Impala (1982-88)	Under Center Of Instrument Panel
LeMans	ECM Connector On Right Kick Panel Or Under Left Side Of Dash
LeSabre (1980-81)	ECU Connector On Upper Right Kick Panel
LeSabre Wagon (1982-88)	Under Center Of Instrument Panel
Monza	Under Right Side Of Dash
Ninety-Eight (1980-81)	ECU Connector On Upper Right Kick Pane
Nova	Behind Right Strut Tower
Parisienne	Under Center Of Instrument Panel
Reatta	
1988-92 (MFI)	Enter Diagnostic Mode By Pressing OFF & WARM Buttons On Instrument Panel
1991-93	Above Parking Brake Pedal
Riviera	
1980-85 (Carbureted)	Under Left Or Center Of Dash
1986-92 (MFI)	Enter Diagnostic Mode By Pressing OFF & WARM Buttons On Instrument Panel
Safari	Under Center Of Instrument Panel
Seville (1981-88)	Enter Diagnostic Mode By Pressing OFF & WARMER Buttons On Instrument Panel
Skyhawk	Under Right Side Of Dash
Starfire	Under Right Side Of Dash
Sunbird	On Side Of Fuse Block, Under Right Side Of Dash
Toronado	
1980-85 (Carbureted)	Under Left Or Center Of Dash
1986-92 (MFI)	Enter Diagnostic Mode By Pressing OFF & WARM Buttons On Instrument Panel
Trofeo	
1988-92 (MFI)	Enter Diagnostic Mode By Pressing OFF & WARM Buttons On Instrument Panel
1991-93	Above Parking Brake Pedal
2000	On Side Of Fuse Block

DOMESTIC LIGHT TRUCKS & VANS

CHRYSLER GROUP LLC

NOTE: This table provides a quick reference for self-diagnostic connector locations, when available from manufacturer, that ARE NOT located at the lower left side of the dash, as mandated in 1996 by the Federal government.

CHRYSLER GROUP LLC - DOMESTIC LIGHT TRUCKS & VANS

Application	Connector Location
Caravan, Grand Caravan, Grand Voyager, Mini Ram Van, Town & Country, & Voyager	
1984-92	On Left Side Fender Apron
1993	On Left Fender Front Fender Panel, Near SBEC
1994-95	On Wiring Harness, On Center Of Firewall
Dakota	
1987-88	On Right Side Fender Apron
1989	On Left Side Of Firewall
1990-92	On Right Side Of Firewall
1993-95	On Right Rear Corner Of Engine Compartment
Jeep	
Cherokee (1992-95)	On Left Front Fender Apron, Behind Air Cleaner
Comanche	On Left Front Fender Apron, Behind Air Cleaner
Grand Cherokee & Wagoneer	
1993-95	
PCM	On Right Rear Of Engine Compartment, Near PCM
TCM	Behind Left Side Of Instrument Panel
Wrangler (1992-95)	On Left Side Of Firewall, Near PCM
Pickup & Ramcharger	
1985-90	On Left Side Of Firewall
1991-93	On Left Front Fender Panel, Next To SBEC/PCM
1995 Pickup	On Right Side Of Firewall
Ram Wagon & Van	
1985-90	On Left Side Of Firewall
1991-95	On Center Of Firewall, Near SBEC/PCM

FORD MOTOR CO.

NOTE: This table provides a quick reference for self-diagnostic connector locations, when available from manufacturer, that ARE NOT located at the lower left side of the dash, as mandated in 1996 by the Federal government.

FORD MOTOR CO. - DOMESTIC LIGHT TRUCKS & VANS

Application	Connector Location
Aerostar	
1986-90	On Left Front Fender
1991	Near Starter Relay
1992	On Left Front Inner Fender Panel
1993-95	On Left Side Of Firewall

Bronco	
1982-85	
6-Cylinder	On Left Front Fender
V8	On Right Inner Fender Panel
1986-87	On Right Front Fender, Near Starter Relay
1988-92	On Left Fender Apron
1993-95	2 Connectors In Left Rear Of Engine Compartment, On Bracket
1996-	Below Glove Box
Bronco II	
1983-85	On Right Front Inner Fender Panel (2.3L Only)
1986-90	On Right Front Fender Apron
Excursion	Behind Center Of Dash
Explorer & Mountaineer (1991-94)	On Right Rear Of Engine Compartment, Near A/C-Heater Blower
Pickup	
1982-85	
6-Cylinder	On Left Front Fender
V8	On Right Inner Fender Panel
1986-87	On Right Front Fender, Near Starter Relay
1988-92	On Left Fender Apron
1993-95	2 Connectors In Left Rear Of Engine Compartment, On Bracket
1996-	Below Center Of Instrument Panel
Pickup (F250 Heavy Duty & F350)	Under Right Side Of Dash
Ranger	
1983-85	On Right Front Inner Fender Panel (2.3L Only)
1986-90	On Right Front Fender Apron
1991	Behind Engine Compartment Fuse/Relay Block
1992	On Left Front Inner Fender Panel
1993-95	On Rear Of Engine Compartment Fuse/Relay Block
Van	
1986-92	On Right Fender Apron
1993-95	On Left Front Corner Of Engine Compartment
1996	
5.8L (49 State, Over 8600 GVW) & 7.5L (Except Calif.)	On Left Front Corner Of Engine Compartment

All Others	Under Left Side Of Dash
1997-98	
Diesel	Under Left Side Of Dash
All Others	Left Front Corner Of Engine Compartment
Villager (1993)	On Left Side Of Engine Compartment, Below Coolant Reservoir

GENERAL MOTORS

NOTE: This table provides a quick reference for self-diagnostic connector locations, when available from manufacturer, that ARE NOT located at the lower left side of the dash, as mandated in 1996 by the Federal government.

GENERAL MOTORS - DOMESTIC LIGHT TRUCKS & VANS

Application	Connector Location
Astro & Safari Van (1986-87)	Under Left Corner Of Cowl
"S" & "T" Series Blazer, Bravada, Envoy, Jimmy, Pickup & Sonoma	
1982-85	
1.9L	Under Left Side Of Dash, Behind ECM
2.0L & 2.8L	Under Ashtray
2.5L	Under Left Side Of Dash
1986-87	Under Ashtray
Van ("G" Series) (1982-87)	Under Driver's Seat

IMPORTED CARS & TRUCKS

ACURA

NOTE: This table provides a quick reference for self-diagnostic connector locations, when available from manufacturer, that ARE NOT located at the lower left side of the dash, as mandated in 1996 by the Federal government.

ACURA - IMPORTED CARS & TRUCKS

Application	Connector Location
Integra	
1991-93	Behind Right Kick Panel
1994-97	Behind Glove Compartment
1998-02	Behind Right Side Of Center Console
Legend	
1991-93	Under Right Side Of Dash, Above PGM-FI ECU/PCM
1994-95	Behind Glove Compartment
NSX (1997-01)	Under Glove Compartment

SLX	Behind Lower Left Corner Of Dash, Behind Cover
Vigor	
1992-93	Under Right Side Of Dash, Near Center Console
1994	Behind Glove Compartment
2.2CL & 2.3CL	In Front Of Shift Lever, Behind Ashtray
2.5TL	In Front Of Shift Lever, Behind Ashtray
3.0CL	In Front Of Shift Lever, Behind Ashtray
3.2TL & 3.5RL	In Front Of Shift Lever, Behind Ashtray

AUDI

NOTE: This table provides a quick reference for self-diagnostic connector locations, when available from manufacturer, that ARE NOT located at the lower left side of the dash, as mandated in 1996 by the Federal government.

AUDI - IMPORTED CARS & TRUCKS

Application	Connector Location
A4	
1996	Next To Rear Ashtray
1997-01 (1.8L Turbo)	Behind Cover, Under Left Side Of Steering Column
1997-99 (2.8L V6)	Under Cover, Next To Rear Ashtray
1997-	Under Left Side Of Dash, Behind Cover
A6	
1995	Under Ashtray, In Front Storage Compartment Of Center Console
1996-97	Under Cover, Next To Parking Brake Handle
Cabriolet	
1994-96	In Fuse/Relay Block, On Left Side Of Dash
1997-98	Under Ashtray, At Rear Of Center Console
Coupe GT, 4000S & 4000S Quattro	In Fuse Socket, On Fuel Pump Relay
80	In Fuse Socket, On Fuel Pump Relay
90	
1988-92	In Fuse Socket, On Fuel Pump Relay
1993	In Main Fuse/Relay Block, On Plenum Tray
1994-95	In Fuse/Relay Block, On Left Side Of Dash
100	
1989-91	Under Left Side Of Dash
1992-94	In Auxiliary Relay Station No. 1, On Left

	Rear Of Engine Compartment
5000CS Quattro, 5000CS Turbo & 5000S	In Fuse Socket, On Fuel Pump Relay

BENTLEY

NOTE: This table provides a quick reference for self-diagnostic connector locations, when available from manufacturer, that ARE NOT located at the lower left side of the dash, as mandated in 1996 by the Federal government.

BENTLEY - IMPORTED CARS & TRUCKS

Application	Connector Location
1996-00	
All Models	In Glove Compartment
2001-04	
Arnage	Below Left Side Of Dash
2001-	
Azure Convertible	In Glove Compartment
Continental	In Glove Compartment

BMW

NOTE: This table provides a quick reference for self-diagnostic connector locations, when available from manufacturer, that ARE NOT located at the lower left side of the dash, as mandated in 1996 by the Federal government.

BMW - IMPORTED CARS & TRUCKS

Application	Connector Location
Z3	Behind Cover, On Right Side Of Center Console
Z4 & Z8	Under Left Side Of Dash, Left Of Steering Column, Behind Cover
318 & 325	
1991	On Bracket, Above Thermostat Housing
1992-95	On Right Rear Of Engine Compartment
1996	Under Left Side Of Dash, Behind Panel Labeled OBD
330	Behind Cover, On Right Side Of Center Console
524t	On Top Rear Of Engine
525i & 535i	
1990-91 (Black 20-Pin Connector)	Left Rear Corner Of Engine Compartment

1992-95	Outside Of Engine Compartment Fuse/Relay Block
528e	On Intake Manifold Bracket, Behind Thermostat Housing
635CSi	On Bracket, Next To Fuse/Relay Block
735i	
1986-87	On Bracket, On Top Of Engine
1988-92	On Right Side Of Engine Compartment, On Shock Tower
740 & 750	Under Left Side Of Dash, Behind Panel Labeled OBD
740i & 740iL (1993-01)	Behind Cover On Lower Left Corner Of A/C Control Panel
750iL	Behind Cover On Lower Left Corner Of A/C Control Panel

DAIHATSU

NOTE: This table provides a quick reference for self-diagnostic connector locations, when available from manufacturer, that ARE NOT located at the lower left side of the dash, as mandated in 1996 by the Federal government.

DAIHATSU - IMPORTED CARS & TRUCKS

Application	Connector Location
Charade	At Upper Section Of Transmission
Rocky	On Right Front Fender Panel

CHRYSLER GROUP LLC

NOTE: This table provides a quick reference for self-diagnostic connector locations, when available from manufacturer, that ARE NOT located at the lower left side of the dash, as mandated in 1996 by the Federal government.

CHRYSLER GROUP LLC - IMPORTED CARS & TRUCKS

Application	Connector Location
Colt & Summit	
1986-87	Above Inside Of Glove Compartment
1988	On Left Rear Corner Of Engine Compartment
1989-98	Under Left Side Of Dash, Near Fuse/Relay Block
Colt Vista	
1987	Behind Glove Compartment

1988-89	Under Left Side Of Dash, Near Hood Release Handle
1990-96	Under Right Side Of Dash
Conquest & Starion	Behind Glove Compartment
Expo	Under Left Side Of Dash, Near Fuse/Relay Block
Medallion	On Left Side Of Firewall
Pickup	Under Left Side Of Dash, Near Fuse/Relay Block
Ram-50	Under Left Side Of Dash, Near Fuse/Relay Block
Sigma	In Glove Compartment
Stealth	
1991-98	Under Left Side Of Dash, On Fuse/Relay Block
1999	Under Left Side Of Dash, Left Of Center Console
Summit Wagon	Under Right Side Of Dash
Vista Wagon	Under Right Side Of Dash

FERRARI

FERRARI - IMPORTED CARS & TRUCKS

Application	Connector Location
All Models	
1996-	Behind Left Side Of Dash

FORD MOTOR CO.

NOTE: This table provides a quick reference for self-diagnostic connector locations, when available from manufacturer, that ARE NOT located at the lower left side of the dash, as mandated in 1996 by the Federal government.

FORD MOTOR CO. - IMPORTED CARS & TRUCKS

Application	Connector Location
Aspire	
1994-95	On Left Rear Corner Of Engine Compartment
1996-97	Under Left Side Of Dash
Capri	
1991	Behind Right Side Of Dash, Behind Glove Compartment
1992	
1.3L	On Left Rear Corner Of Engine

	Compartment
1.6L	On Right Rear Corner Of Engine Compartment
1993-94	On Right Rear Corner Of Engine Compartment
Festiva	
1992-93	
1.3L	On Left Rear Corner Of Engine Compartment
1.6L	On Right Rear Corner Of Engine Compartment
Merkur XR4Ti	On Right Front Fender Apron, Near Battery
Scorpio	On Right Rear Corner Of Engine Compartment
Tracer	On Left Rear Corner Of Engine Compartment

GENERAL MOTORS

NOTE: This table provides a quick reference for self-diagnostic connector locations, when available from manufacturer, that ARE NOT located at the lower left side of the dash, as mandated in 1996 by the Federal government.

GENERAL MOTORS & GEO - IMPORTED CARS & TRUCKS

Application	Connector Location
LeMans	Behind Right Kick Panel, Above ECM
Metro	
1989-95	Under Left Side Of Dash, Near Fuse Block
1996	Under Right Side Of Dash, Near Center Console
1997-01	Under Left Side Of Dash
Prizm & Prizm LSi	
1989-95	On Left Front Strut Tower
1996-02	Under Left Side Of Dash
Spectrum	Under Right Side Of Dash, Above A/C-Heater Blower Motor
Sprint	On Left Front Shock Tower, Near Battery
Storm	
1990-91	Behind Right Side Of Dash, Above A/C-Heater Blower Motor
1992-93	Behind Right Kick Panel
Tracker	
1989-95	Under Left Side Of Dash, Near Fuse Block
1996	In Engine Compartment, Near MAP Sensor
1997-	Under Left Side Of Dash

HONDA

NOTE: **This table provides a quick reference for self-diagnostic connector locations, when available from manufacturer, that ARE NOT located at the lower left side of the dash, as mandated in 1996 by the Federal government.**

HONDA - IMPORTED CARS & TRUCKS

Application	Connector Location
Accord	
1990-95	Behind Right Side Of Dash, Above Kick Panel
1996-97	Behind Ashtray In Center Console
Civic (1992-95)	Behind Right Side Of Dash, Near PGM-FI ECM
Civic Del Sol	
1992-95	Behind Right Side Of Dash, Near PGM-FI ECM
1996-97	Under Removable Cover On Right Side Of Center Console
CR-V	Behind Passenger Side Of Center Console
Element	
2003-11	Above Gas Pedal, Below Fuse Block
Insight (2010-11)	Below Left-of-Center Of Dash
Odyssey	
1995	Behind Right Side Of Dash, Above Kick Panel
1996-98	Behind Passenger Side Of Center Console
Passport (1995)	Behind Left Kick Panel
Prelude	
1992-95	Behind Center Console
1996	Under Beverage Holder In Center Console
1997-02	Under Removable Cover On Right Side Of Center Console
S2000	Behind Right Side Of Center Console

HYUNDAI

NOTE: **This table provides a quick reference for self-diagnostic connector locations, when available from manufacturer, that ARE NOT located at the lower left side of the dash, as mandated in 1996 by the Federal government.**

HYUNDAI - IMPORTED CARS & TRUCKS

Application	Connector Location
Accent (1995)	In Coin Box
Sonata	
1989	Under Left Side Of Dash, In Fuse Block
1990	
W/Passive Seat Belt Restraints	In Fuse Block

W/O Passive Seat Belt Restraints	On Lower Left Of Steering Column

INFINITI

NOTE: This table provides a quick reference for self-diagnostic connector locations, when available from manufacturer, that ARE NOT located at the lower left side of the dash, as mandated in 1996 by the Federal government.

INFINITI - IMPORTED CARS & TRUCKS

Application	Connector Location
G20 (1993-95)	In ECCS Control Unit, Behind Center Console
I30 (1995)	Beside Fuse Box
J30	
1993	Under Left Side Of Dash
1994-95	In ECM, Behind Right Kick Panel
1996-98	Under Left Side Of Dash
M30	Under Left Side Of Dash, Near Fuse Block
Q45	
1990-93	Under Left Side Of Dash, Near Fuse Block
1994-95	In ECM, Behind Right Kick Panel

ISUZU

NOTE: This table provides a quick reference for self-diagnostic connector locations, when available from manufacturer, that ARE NOT located at the lower left side of the dash, as mandated in 1996 by the Federal government.

ISUZU - IMPORTED CARS & TRUCKS

Application	Connector Location
Amigo & Pickup	
1986-89	Under Left Side Of Dash
1990-95	Behind Left Kick Panel, Near ECM
1998-00	Lower Left Corner Of Dash, Behind Small Cover
Hombre	Under Lower Left Side Of Dash, Behind Cover
Impulse	
1986-89	Under Left Side Of Dash, Above ECU
1990-92	Behind Right Kick Panel
1993-95	Behind Left Kick Panel, Near ECM
I-Mark	Behind Right Side Of Dash, Above A/C-Heater Blower Motor
Oasis	Behind Right Side Of Center Console

Rodeo	
1991-95	Behind Left Kick Panel
1996-	Lower Left Side Of Dash, Behind Small Cover
Stylus	Behind Right Kick Panel
Trooper & Trooper II	
1986	Under Left Side Of Dash
1987-91	Under Center Console
1992	
DOHC	Behind Center Of Dash, Right Of Steering Column
SOHC	Under Left Side Of Dash
1993-95	Under Left Side Of Dash, Right Of Steering Column
1996-02	Lower Left Side Of Dash, Behind Small Cover
VehiCROSS	Under Left Side Of Dash

JAGUAR

NOTE: This table provides a quick reference for self-diagnostic connector locations, when available from manufacturer, that ARE NOT located at the lower left side of the dash, as mandated in 1996 by the Federal government.

JAGUAR - IMPORTED CARS & TRUCKS

Application	Connector Location
XJR (1995-97)	Near Center Console
XJS	
1992	On Left Rear Trunk Wheel Arch, Behind Trim Panel
1993-94	Under Battery Tray, On Right Front Of Luggage Compartment
1995-96	Near Center Console
XJ6	
1992	On Left Rear Of Engine Compartment
1993-94	Under Battery Tray, On Right Front Of Luggage Compartment
1995-97	Under Left Side Of Dash, Near Center Console
XJ12	Near Center Console

KIA

NOTE: **This table provides a quick reference for self-diagnostic connector locations, when available from manufacturer, that ARE NOT located at the lower left side of the dash, as mandated in 1996 by the Federal government.**

KIA - IMPORTED CARS & TRUCKS

Application	Connector Location
Sephia	
1994	On Center Of Firewall
1995 & 1996	
1.6L	Under Center Of Dash, Mounted On Floorboard
2.0L	Under Right Side Of Dash, Near Kick Panel
Sportage	
1994	On Center Of Firewall
1995 & 1996	
1.6L	Under Center Of Dash, Mounted On Floorboard
2.0L	Under Right Side Of Dash, Near Kick Panel

LAND ROVER

NOTE: **This table provides a quick reference for self-diagnostic connector locations, when available from manufacturer, that ARE NOT located at the lower left side of the dash, as mandated in 1996 by the Federal government.**

LAND ROVER - IMPORTED CARS & TRUCKS

Application	Connector Location
Defender 90	Behind Fuse Cover, In Center Of Console
Range Rover	Under Right Side Of Dash, In Footwell

LEXUS

NOTE: **This table provides a quick reference for self-diagnostic connector locations, when available from manufacturer, that ARE NOT located at the lower left side of the dash, as mandated in 1996 by the Federal government.**

LEXUS - IMPORTED CARS & TRUCKS

Application	Connector Location
ES Series	
1990-91	
DLC	Near Left Shock Tower

Total Diagnostic Communication Link Connector	Under Left Side Of Dash
1992-94	
DLC No. 1	On Bracket, Behind Right Front Strut Tower
DLC No. 2 & 3	Under Left Side Of Dash
1995-97	In Fuse Box At Lower Left Of Dash
GS Series	
1990-95	
DLC No. 1	On Bracket, On Top Of Engine
DLC No. 2	Under Left Side Of Dash
1996-00	In Fuse Box At Lower Left Of Dash
LS Series	
1990-94	
DLC No. 1	On Bracket, On Top Of Engine
DLC No. 2	Under Left Side Of Dash
1995-00	In Fuse Box At Lower Left Of Dash
SC Series	
1992-95	
DLC No. 1	On Bracket, Behind Right Front Strut Tower
DLC No. 2 & 3	Under Left Side Of Dash
1996-00	In Fuse Box At Lower Left Of Dash

MAZDA

NOTE: This table provides a quick reference for self-diagnostic connector locations, when available from manufacturer, that ARE NOT located at the lower left side of the dash, as mandated in 1996 by the Federal government.

MAZDA - IMPORTED CARS & TRUCKS

Application	Connector Location
B-Series	
1987-88	On Right Front Fender Apron
1989-93	
Engine Control Check Connector (Black 6-Pin)	Near Windshield Washer Motor
Trouble Codes Connector (Green 1-Pin)	Near Black 6-Pin Connector (Engine Control)
1994-95	On Right Front Fender Panel
Miata (1990-95)	On Left Rear Of Engine Compartment, Near Master Cylinder
MPV (1989-95)	
Engine Control Unit (Green 6-Pin & 1-Pin	On Left Side Of Engine Compartment, Near

Connectors)	Inner Fender Panel
MX-3	Mounted On Bracket, On Left Front Strut Tower
MX-6 & 626	
1988	Behind Left Front Shock Tower
1989	On Left Front Corner Of Engine Compartment
1990-91	At ECU Connector Terminal
1992	On Left Rear Corner Of Engine Compartment
1993	On Side Of Fuse/Relay Block, Near Battery
1994-95	On Left Front Fender Apron
Navajo	
1991-93	On Right Rear Corner Of Engine Compartment
1994-95	On Right Front Fender Panel
Protege	
1987-89	On Passenger's Footwell (Left Foot Area)
1990-95	On Left Side Of Firewall, Near Wiper Motor
RX7	
1986-88 (3 Check Connectors)	At Left & Right Corners Of Engine Compartment
1989-91 (Green 6-Pin Connector)	Behind Ignition Coil
1993-95	On Bracket, On Left Front Strut Tower
323	
1986-88	Front Left Of Engine Compartment, Near Ignition Coil
1989 (Green 6-Pin & Green 1-Pin Connectors)	On Left Side Of Firewall
1990-95	On Left Side Of Firewall, Near Wiper Motor
929	
1989	Near Air Cleaner
1990-91 (Green 6-Pin Connector)	In Left Front Corner Of Engine Compartment
1992-93	Mounted On Air Cleaner Housing
1994-95	On Left Front Strut Tower

MERCEDES-BENZ

NOTE: This table provides a quick reference for self-diagnostic connector locations, when available from manufacturer, that ARE NOT located at the lower left side of the dash, as mandated in 1996 by the Federal government.

MERCEDES-BENZ - IMPORTED CARS & TRUCKS

Application	Connector Location
C-Class (1994)	On Right Rear Of Engine Compartment

E-Class	
1994-97	On Right Rear Of Engine Compartment
G-Class	Under Left Side Of Dash, Behind Cover
ML-Class	Under Left Side Of Dash, Behind Cover
S-Class	
140 Platform (1994-99)	On Right Rear Of Engine Compartment
190 Series	
1986-87	On Left Rear Of Engine Compartment
1988-93	
All Models	In Engine Compartment, On Left Front Fender
California (OBD)	On Right Side Of Firewall, Near Battery
1994	On Right Rear Of Engine Compartment
260E	
1987	On Left Front Fender Apron, Next To Ignition Control Module
1988-89	
All Models	In Engine Compartment, On Left Front Fender
California (OBD)	On Right Side Of Firewall, Near Battery
300 Series	
1986-87	On Left Front Fender Apron, Next To Ignition Control Module
1988-92	
All Models	In Engine Compartment, On Left Front Fender
California (OBD)	On Right Side Of Firewall, Near Battery
1993	
Except 300E	Left Fender Apron
300E	Right Rear Corner Of Engine Compartment
1994-95 (All Models)	On Right Rear Of Engine Compartment
400 & 500 Series	
1993	
12-Pin Connector	On Rear Of Left Front Inner Fender Panel
38-Pin (Impulse Readout)	In Module Box, On Right Rear Of Engine Compartment
1994-95	On Right Rear Of Engine Compartment
420SEL & 560 Series (Except 2.2L)	
1986-89	
All Models	In Engine Compartment, On Left Front Fender

California (OBD)	On Right Side Of Firewall, Near Battery
1990-91	In Engine Compartment, On Left Front Fender
560 Series (2.2L)	On Lower Left Side Of Engine Connector

MITSUBISHI

NOTE: This table provides a quick reference for self-diagnostic connector locations, when available from manufacturer, that ARE NOT located at the lower left side of the dash, as mandated in 1996 by the Federal government.

MITSUBISHI - IMPORTED CARS & TRUCKS

Application	Connector Location
Diamante (1992-98)	Under Left Side Of Dash, Near Fuse/Relay Block
Expo	Under Left Side Of Dash, Near Fuse/Relay Block
Montero	
1986-88	Left Rear Corner Of Engine Compartment
1989-91	Behind Glove Compartment
Pickup	Under Left Side Of Dash, Near Fuse/Relay Block
Raider	
1987-88	Left Rear Corner Of Engine Compartment
1989	Behind Glove Compartment
3000GT	
1991-98	Under Left Side Of Dash, On Fuse/Relay Block
1999	Under Left Side Of Dash, Left Of Center Console

NISSAN

NOTE: This table provides a quick reference for self-diagnostic connector locations, when available from manufacturer, that ARE NOT located at the lower left side of the dash, as mandated in 1996 by the Federal government.

NISSAN - IMPORTED CARS & TRUCKS

Application	Connector Location
Altima	
1993-94	On Driver-Side Of Center Console, Above Accelerator Pedal
1995-96	Below Fuse Box

Maxima	
1989-94	Under Left Side Of Dash
1995-96	Below Fuse Box
NX & Sentra	Under Left Side Of Dash, Near Fuse Block
Pulsar NX	
1986	Above Right Side Of Dash, Below Wiper Motor
1987	Above Steering Column
Quest (1993-95)	
CONSULT Tester Connector	On Driver-Side Of Center Console, Above Accelerator Pedal
Self-Test Connector	Located Near Starter
Stanza	Below Center Of Dash, Near Center Console
Van	On Right Side Of Engine Compartment, Behind Fuel Filter
200SX (1995-96)	Below Fuse Box
240SX	
1991-94	Under Left Side Of Dash, Below Fuse Block
1995-96	In Glove Box
300ZX (1990)	Near Parking Brake

PEUGEOT

NOTE: This table provides a quick reference for self-diagnostic connector locations, when available from manufacturer, that ARE NOT located at the lower left side of the dash, as mandated in 1996 by the Federal government.

PEUGEOT - IMPORTED CARS & TRUCKS

Application	Connector Location
505 Series	On Lower Left Side Of Engine Connector

PORSCHE

NOTE: This table provides a quick reference for self-diagnostic connector locations, when available from manufacturer, that ARE NOT located at the lower left side of the dash, as mandated in 1996 by the Federal government.

PORSCHE - IMPORTED CARS & TRUCKS

Application	Connector Location
911 Series	
1992-95	In Passenger's Footwell
1996	Left Side Of Center Console

928S	Top Front Of Engine
944 Series	On Left Side Of Engine Compartment

RENAULT

NOTE: This table provides a quick reference for self-diagnostic connector locations, when available from manufacturer, that ARE NOT located at the lower left side of the dash, as mandated in 1996 by the Federal government.

RENAULT - IMPORTED CARS & TRUCKS

Application	Connector Location
Sportwagon	
Engine Diagnostic	On Center Of Firewall
Fuel Injection Diagnostic	Right Rear Of Engine Compartment, Behind Airflow Meter

ROLLS-ROYCE

NOTE: This table provides a quick reference for self-diagnostic connector locations, when available from manufacturer, that ARE NOT located at the lower left side of the dash, as mandated in 1996 by the Federal government.

ROLLS-ROYCE - IMPORTED CARS & TRUCKS

Application	Connector Location
All Models	
1996-00	In Glove Compartment
2001-	Under Left Side Of Dash

SAAB

NOTE: This table provides a quick reference for self-diagnostic connector locations, when available from manufacturer, that ARE NOT located at the lower left side of the dash, as mandated in 1996 by the Federal government.

SAAB - IMPORTED CARS & TRUCKS

Application	Connector Location
900 Series	
1986-90	In Front Of Fuse/Relay Panel
1991-93	Under Back Seat, On Right Side
1994	
Convertible	Under Rear Seat
Hatchback	Under Steering Column
All Others	Under Right Front Seat

9000 Series	
1990	On Left Side Of Engine Compartment
1991-92	Under Passenger's Seat
1993	On Left Of Firewall
1994-95	Under Right Front Seat

SUBARU

NOTE: This table provides a quick reference for self-diagnostic connector locations, when available from manufacturer, that ARE NOT located at the lower left side of the dash, as mandated in 1996 by the Federal government.

SUBARU - IMPORTED CARS & TRUCKS

Application	Connector Location
Brat, Coupe, Hatchback, Sedan & Wagon	
1987	
Read Memory Connector	Under Left Side Of Dash, Next To MFI/SMFI Control Unit
Test Mode Connector	
MFI	On Left Side Of Dash, Next To MFI Control Unit
Sequential MFI	On Left Side Of Firewall
1988-89	On Left Side Of Dash, Next To ECU
Forester	Under Left Side of Dash, Behind Cover
Justy	
1987-88	
Read Memory Connector (Factory)	On Right Front Fender, Near Strut Tower
Test Mode Connector	On Driver-Side Kick Panel Or ECU
1989-95	
Read Memory Connector (Factory)	Under Left Side Of Dash
Test Mode Connector	On Driver-Side Kick Panel Or ECU
Legacy	
1990-94	
Check Connector (Black Connector)	Behind Right Side Of Steering Column, Near Heater Case
Diagnostic Connector (Black 4-Pin Connector)	Behind Right Side Of Steering Column, Near Heater Case
Read Memory Connector (Black Connector)	Behind Knee Panel, Right Of Steering Column
Select Monitor Connector (Yellow Connector)	Behind Right Side Of Steering Column, Near Heater Case
Test Mode Connector (Green Connector)	Behind Knee Panel, Right Of Steering Column

1995-	Under Left Side Of Dash, Behind Cover
Loyale	
1990-91	
MFI (5-Pin Connector)	In Front Of ECU
SMFI (Yellow 9-Pin & Black 13-Pin Connectors)	Near Brake Booster
1992-95	
Diagnostic Check Connector (Yellow 9-Pin & Black 13-Pin Connectors)	Behind Brake Booster
Diagnostic Read-Memory Connector (2-Single Wire Connectors)	Behind Left Front Strut Tower
Outback & Outback Sport	Under Center Of Dash
SVX	
1992-96	Under Left Side Of Dash
1997	Right Of Steering Column, On Center Console

SUZUKI

NOTE: This table provides a quick reference for self-diagnostic connector locations, when available from manufacturer, that ARE NOT located at the lower left side of the dash, as mandated in 1996 by the Federal government.

SUZUKI - IMPORTED CARS & TRUCKS

Application	Connector Location
Esteem (1995)	Near Battery
Samurai	
1986-90	Under Right Side Of Dash, Behind Glove Compartment
1991-92	On Right Side Of Firewall
1993-95	Under Left Side Of Dash, In Fuse Block
Sidekick & X90	
1989-91	Under Left Side Of Dash, In Fuse Block
1992-93	
ALDL Connector	Under Left Side Of Dash
Engine Connector	Under Left Side Of Dash, Near Fuse Block
1994-96	In Engine Compartment, Near Battery
Swift	
1989-91	Under Left Side Of Dash, In Fuse Block
1992	
ALDL Connector	Under Left Side Of Dash

Diagnostic Test Terminal	In Fuse Block
1993-95	Under Left Side Of Dash, In Fuse Block

TOYOTA

NOTE: This table provides a quick reference for self-diagnostic connector locations, when available from manufacturer, that ARE NOT located at the lower left side of the dash, as mandated in 1996 by the Federal government.

TOYOTA - IMPORTED CARS & TRUCKS

Application	Connector Location
Camry	
1983-90	Next To Brake Master Cylinder
1991	Near Left Front Shock Tower
1992-95	
4-Cylinder	Near Wiper Motor
V6	Under Left Side Of Dash
Celica	
1983-84	Next To Battery
1985-95	Behind Left Front Shock Tower
Celica Supra	Rear Of Battery, Near Relay Panel (2-Pin Connector)
Corolla	
Front Wheel Drive	
1987	Side Of Left Front Shock Tower (2-Pin Connector)
1988-94	Behind Left Front Shock Tower
Rear Wheel Drive	
1985-86	Side Of Right Front Shock Tower (2-Pin Connector)
1987	Right Rear Corner Of Engine Compartment
Cressida	
1988-93	
Check Connector	On Left Front Shock Tower
Total Diagnostic Communication Link Connector	Under Left Side Of Dash
Land Cruiser (1988-94)	Near Wiper Motor
MR2	
1986-90	Near Airflow Meter
1992-95	On Right Rear Of Engine Compartment, Near MAP Sensor
Paseo (1992-95)	On Side Of Engine Compartment Fuse/Relay Block No. 2, Near Battery

Pickup	
1984-86	Near Ignition Coil, Near Master Cylinder (2-Pin Connector)
1987-90	Right Front Inner Fender Panel, Near Relay Block
1992-94	On Side Of Engine Compartment Fuse/Relay Block No. 2, Near Battery
Previa	
1992-93	Under Front Of Driver's Seat
1994	
Except Supercharged	Under Center Console, Near Parking Brake Lever
Supercharged	Under Cover, On Top Center Of Instrument Panel
1995-97	On Top Center Of Instrument Panel
RAV4	Under Dash, Near Center Console
Starlet	
1981-82	On Instrument Panel Fuse Block, On Top Of Dash
1983-84	Right Rear Of Engine Compartment
Supra	
1986-90	Rear Of Battery, Near Relay Panel
1991-92	On Left Front Shock Tower
1993-94	
DLC No. 1	On Right Side Of Firewall
DLC No. 2	Under Left Side Of Dash, Near Kick Panel
Tacoma & T100	
1993	On Side Of Engine Compartment Fuse/Relay Block No. 2, Near Battery
1994-95	
Except OBD-II DLC	On Side Of Engine Compartment Fuse/Relay Block No. 2, Near Battery
OBD-II DLC	Under Left Side Of Dash
Tercel	
1987-90	In Engine Compartment, Next To Master Cylinder
1991-94	On Side Of Engine Compartment Fuse/Relay Block No. 2, Near Battery
1995-98	Near Steering Column
Van	Near Airflow Meter
4Runner	
1985-86	Near Ignition Coil, Next To Master Cylinder (2-Pin Connector)

1987-95	On Side Of Engine Compartment Fuse/Relay Block No. 2, Near Battery

VOLKSWAGEN

NOTE: This table provides a quick reference for self-diagnostic connector locations, when available from manufacturer, that ARE NOT located at the lower left side of the dash, as mandated in 1996 by the Federal government.

VOLKSWAGEN - IMPORTED CARS & TRUCKS

Application	Connector Location
Cabrio	
1996	In Center Console, Below Tachometer
1997-02	On Center Dash, Behind Panel Near Ashtray
Corrado	Under Center Console Trim Plate
Fox	Under Center Console, Near Shift Lever
Golf	
1993	On Center Of Dash, Below A/C-Heater Control Knobs
1994	Under Center Console
1998-03	In Center Console
Golf III 2.0L	
1995-96	Below A/C-Heater Control Panel
1997-98	On Center Dash, Behind Panel Adjacent To Ashtray
GTI	
1993	On Center Of Dash, Below A/C-Heater Control Knobs
1994	Under Center Console
GTI 2.8L	On Center Dash, Behind Panel Adjacent To Ashtray
Jetta	
1993	On Center Of Dash, Below A/C-Heater Control Knobs
1994	Under Center Console
Jetta III 2.0L	
1995-96	Below A/C-Heater Control Panel
1997-98	On Center Dash, Behind Panel Adjacent To Ashtray
Jetta/Jetta III 2.8L	On Center Dash, Behind Panel Adjacent To Ashtray
New Beetle	Lower Part of Dash, In Front Of Shift Lever

Passat	
1992-94	Under Center Console, Forward Of Shift Lever
1995-97	On Center Dash, Behind Panel Near Ashtray

VOLVO

NOTE: This table provides a quick reference for self-diagnostic connector locations, when available from manufacturer, that ARE NOT located at the lower left side of the dash, as mandated in 1996 by the Federal government.

VOLVO - IMPORTED CARS & TRUCKS

Application	Connector Location
C30	Under Left Center Of Dash
C70	Behind Cover, Below Parking Brake Lever
S40	Under Left Center Of Dash
S70	Behind Cover, Below Parking Brake Lever
S90	Behind Cover, Below Parking Brake Lever
V40	Under Left Center Of Dash
V70 (1997-00)	Behind Cover Below Parking Brake Lever
V90	Behind Cover, Below Parking Brake Lever
240	
1986-92	Left Rear Corner Of Engine Compartment
1993	Behind Left Front Strut Tower
740 & 760	
1986-92	
Ignition System	On Left Front Fender Apron
Fuel Injection (1990-92 Only)	Left Rear Corner Of Engine Compartment
780	On Left Front Fender, Behind Air Cleaner Housing
850	
1993	On Center Console, Forward Of Shift Lever & Near ECM
1994-95	
Non-Turbo	On Right Front Strut Tower
Turbo	Behind Cover, Forward Of Shift Lever
1996-97	Behind Cover, Forward Of Shift Lever
940	
1991-93	
Ignition System	On Left Front Fender Apron
Fuel Injection	Left Rear Corner Of Engine Compartment

1994-95	Behind Left Front Strut Tower
960	
1992-95	On Left Front Strut Tower
1996	In Center Console, To Right Of Parking Brake Lever
1997	Behind Cover, Forward Of Shift Lever

BUZZERS, RELAYS & TIMERS

BUZZERS, RELAYS & TIMERS LOCATION

Component	Location
Auxiliary Direction Indicators Relay (K441)	Right side of luggage compartment. See **Fig. 112**.
Electric Vacuum Pump Relay (K213)	Right rear of engine compartment. See **Fig. 111**.
Gun Mount Relay (K424)	Right side of luggage compartment. See **Fig. 112**.
Hardtop Driver Unit Relay 1 (K18363a)	Behind battery. See **Fig. 77**.
Hardtop Driver Unit Relay 2 (K18364a)	Behind battery. See **Fig. 78**.
SCR System Load Relay (K2085)	Right rear of engine compartment. See **Fig. 113**.
Transceiver Relay (K411)	Right side of luggage compartment. See **Fig. 112**.
WT Relay (K6319)	Left rear of engine compartment. See **Fig. 76**.

CIRCUIT PROTECTION DEVICES

CIRCUIT PROTECTION DEVICES LOCATION

Component	Location
E Box	Left rear of engine compartment.
Engine Electronics Fuse Carrier (A8682)	Left rear of engine compartment. See **Fig. 32**.
Fuse Box (A400 & A404)	Right side luggage compartment. See **Fig. 24**.
Fuse Carrier - Rear (A46)	In luggage compartment. See **Fig. 114**.
Junction Box (A4010)	Right side of dash. See **Fig. 28**.

CONTROL UNITS

CONTROL UNITS LOCATION

Component	Location
Accelerator Pedal Module (A234a)	On accelerator pedal bracket. See **Fig. 23**.
Active Steering (A467)	Behind left front wheelwell. See **Fig. 26**.
Basic Deployment Control Module (A482)	Right rear of luggage compartment. See **Fig. 27**.
Car Access System (A149a)	Under left side of dash. See **Fig. 15**.
Comfort Access Control Module (A215)	Right rear of luggage compartment. See **Fig. 22**.
Convertible Top Module (A96a)	Right rear of luggage compartment. See **Fig. 10**.
Crash Safety Module (A12a)	Rear of center console. See **Fig. 3**.
DME Control Module (A6000)	Right rear of engine compartment. See **Fig. 30**.
Driver's Seat Heating Module (A187a)	Under driver's seat. See **Fig. 20**.
Driver's Seat Module (A187)	Under driver's seat. See **Fig. 21**.
Dynamic Stability Control (DSC) (A65)	Left side of engine compartment. See **Fig. 6**.

EDC Electronic Damper Control (A80a)	Left rear of engine compartment. See **Fig. 7**.
Electronic Power Steering (EPS) (A60233)	On steering rack assembly. See **Fig. 35**.
Footwell Module (A4011)	Under left side of dash. See **Fig. 29**.
Fuel Pump Control (EKPS) (A13663)	Right side of luggage compartment. See **Fig. 33**.
Independent/Auxiliary Heating Control Module (A14)	Left front of engine compartment. See **Fig. 4**.
Longitudinal Dynamics Management (A14282)	Under left side of dash. See **Fig. 118**.
Multi-Drive Sliding Sunroof (A14102)	Center rear of roof. See **Fig. 117**.
Multiple Restraint System Control Module (A12)	Front of center console. See **Fig. 2**.
Navigation System (A112a)	Right rear of luggage compartment. See **Fig. 11**.
Park Distance Control (PDC) (A81a)	Right rear of luggage compartment. See **Fig. 8**.
Parking Brake Control Module (A164a)	Right rear of luggage compartment. See **Fig. 16**.
Passenger's Seat Heating Module (A186a)	Under passenger's seat. See **Fig. 19**.
Seat Module - Passenger (A186)	Under passenger seat. See **Fig. 115**.
Tire Pressure Control (RDC) (A85a)	Right rear luggage compartment. See **Fig. 9**.
Tone Sequence Control Module (A409)	Left rear of luggage compartment. See **Fig. 37**.
Transfer Box Control Unit (A70006)	On transmission. See **Fig. 119**.
Transmission Control (A7000a)	On transmission assembly. See **Fig. 31**.
Transmission Control DKG (A70020)	On transmission assembly. See **Fig. 36**.

MOTORS

MOTORS LOCATION

Component	Location
Air Distribution Flap Motor (M150)	On HVAC unit. See **Fig. 148**.
Auxiliary Water Pump (M37)	Left side of engine compartment.
Blower Motor	On HVAC assembly.
Convertible Top Unlocking Motor (I01209)	Center front of convertible top. See **Fig. 136**.
Defrosting Flap Motor (M35a)	Right side of HVAC assembly. See **Fig. 145**.
Diagnosis Module For Tank Leakage (M119a)	Under left rear of vehicle. See **Fig. 147**.
Driver's Window Motor	In driver's door.
E-Box Fan (M6506)	Left rear of engine compartment. See **Fig. 76**.
Electric Coolant Fan (M6035)	Lower right front of engine. See **Fig. 79**.
Footwell Flap Motor (M31)	Left side of HVAC assembly. See **Fig. 144**.
Fresh Air/Recirculated Air Flap Motor (M111)	Right side of HVAC assembly.
Front Stratification Flap Motor (M4729)	Left side of HVAC unit. See **Fig. 144**.
Fuel Filler Flap Central Locking Drive (M16)	Right rear quarterpanel. See **Fig. 143**.
Hard Top Drive (M101a)	Behind battery. See **Fig. 146**.
Headlamp Washer Pump (M7)	On washer fluid reservoir. See **Fig. 142**.
Mixing Flap Motor - Left (M153)	Left side of HVAC unit. See **Fig. 144**.
Mixing Flap Motor - Right (M154)	Right side of HVAC unit. See **Fig. 145**.

Passenger's Window Motor	In passenger door.
Radiator Shutter Driver (M1997)	Behind center of front fascia. See **Fig. 149**.
Ventilation Flap Motor (M38)	Right side of HVAC assembly. See **Fig. 145**.
Windshield Washer Pump (M4)	On washer fluid reservoir. See **Fig. 142**.
Wiper Motor	Left rear of engine compartment.

SENDING UNITS & SENSORS

SENDING UNITS & SENSORS LOCATION

Component	Location
Acceleration Sensor (Left Front) (B6249)	Front of left front strut, on chassis. See **Fig. 60**.
Airbag Sensor (Left "B" Pillar) (A173)	Base of left "B" pillar. See **Fig. 17**.
Airbag Sensor (Left Door) (B78)	Top front of left door. See **Fig. 53**.
Airbag Sensor (Left Front) (B10508)	Left front of engine compartment. See **Fig. 62**.
Airbag Sensor (Right "B" Pillar) (A174)	Base of right "B" pillar. See **Fig. 18**.
Airbag Sensor (Right Door) (B79)	Top front of right door. See **Fig. 54**.
Airbag Sensor (Right Front) (B10509)	Right front of engine compartment. See **Fig. 63**.
Air Mass Sensor (B6207b)	On air intake duct. See **Fig. 127**.
Automatic Air Recirculation Sensor (B414)	Right rear of engine compartment. See **Fig. 56**.
Battery Temperature Sensor (B895)	On battery positive terminal. See **Fig. 14**.
Brake Pad Wear Sensor (Left Front) (B16a)	On left front wheel hub assembly. See **Fig. 121**.
Brake Pad Wear Sensor (Right Rear)	On right rear wheel hub assembly.
Condensation Sensor	Center of headliner.
Coolant Temperature Sensor (B8)	Right side of engine compartment. See **Fig. 38**.
Crankshaft Position/RPM Sensor (B6203)	Left rear of engine. See **Fig. 57**.
Double Knock Sensor (B62400)	Left side of engine. See **Fig. 67**.
Driving Lights/Rain Sensor (B57)	Top center of windshield. See **Fig. 124**.
Eccentric Shaft Sensor (B60213)	Right side of engine. See **Fig. 128**.
Engine Coolant Temperature Sensor (B6236)	Right front of engine. See **Fig. 58**.
Evaporator Temperature Sensor (B14a)	On HVAC assembly. See **Fig. 39**.
Exhaust Camshaft Sensor (B6224)	Right front of engine. See **Fig. 42**.
Exhaust Temperature Sensor 3 (B62203)	Left rear of engine. See **Fig. 66**.
Fogging Sensor (B100)	Top center of windshield. See **Fig. 124**.
Footwell Temperature Sensor (B109a)	On HVAC assembly. See **Fig. 55**.
Fuel Tank Sensor (Left Half Tank) (B25a)	Top left side of fuel tank. See **Fig. 122**.
Hall Sensor - Roof Shell 2 Packed (I01243)	Right roof shell 2 hinge. See **Fig. 141**.
Hall Sensor 1.1 (I01203)	Near right convertible top hinge. See **Fig. 137**.
Hall Sensor 9 (B6229)	Left rear of luggage compartment. See **Fig. 1**.
Intake Camshaft Sensor (B6214)	Right front of engine. See **Fig. 42**.
Intake Pipe Pressure Sensor (M6239)	Left rear of engine. See **Fig. 59**.
Intake Temperature Boost Pressure Sensor (B6583)	Left rear of engine. See **Fig. 61**.

Interior Movement Detector (A121b)	Center of roof. See **Fig. 116**.
Low Beam/Rain Sensor	Behind inside rear view mirror.
Microwave Sensor - Driver's Door (B14143) (Passenger's Door - B14144 Similar)	In respective front door. See **Fig. 64**.
Oil Quality Sensor (B62540)	Bottom rear of oil pan. See **Fig. 68**.
Outside Temperature Sensor (B21)	Left front corner of vehicle. See **Fig. 43**.
Oxygen Sensor (Before Catalytic Converter) (B62101)	Right side of engine. See **Fig. 65**.
Oxygen Sensor 2 (Before Catalytic Converter) (B62201)	Right side of engine. See **Fig. 65**.
Rear Acceleration Sensor (B48)	Right rear luggage compartment. See **Fig. 51**.
Ride Height Sensor (B42b)	Behind right front axle. See **Fig. 45**.
Right Front Accelerator Sensor (B41)	Front of right front wheelwell. See **Fig. 44**.
Seat Occupation Recognition (A113)	Under passenger's seat. See **Fig. 12**.
Secondary Air Hot Film Air Mass Sensor (B6206)	Right front of engine. See **Fig. 126**.
Siren W/Tilt Alarm Sensor (A14147)	Front of left front wheelwell. See **Fig. 34**.
Solar Sensor (B66)	Top center of dash. See **Fig. 125**.
Steering Torque Sensor (I01096)	On steering rack assembly. See **Fig. 135**.
Ultrasonic Sensors - Front (4)	In front bumper fascia.
Ultrasonic Sensors - Rear (4)	In rear bumper fascia.
Ventilation Temperature Sensor (B62)	On HVAC assembly. See **Fig. 52**.
Wheel Electronics - Front Left, Front Right, Rear Left & Rear Right (B43b, B47b, B45b & B44b)	On respective wheel assembly. See **Fig. 123**.
Wheel Speed Sensor - Front Right (B1) (Front Left - B2 Similar)	On respective front wheel hub assembly. See **Fig. 120**.

SOLENOIDS & SOLENOID VALVES

SOLENOIDS & SOLENOID VALVES LOCATION

Component	Location
Damper Valves (Left/Right Front, Left/Right Rear)	On respective shock absorber.
Evaporative Emission Valve (Y6120)	Left rear of engine. See **Fig. 81**.
Exhaust ANOS Solenoid Valve (Y6276)	Right front of engine. See **Fig. 58**.
Intake VANOS Solenoid Valve (Y6275)	Right front of engine. See **Fig. 42**.
Radiator Shutter Solenoid	Below center of front grille.
Retractable Hardtop Valve 1 (I01254)	Behind battery. See **Fig. 71**.
Retractable Hardtop Valve 2 (I01255)	Behind battery. See **Fig. 72**.
Retractable Hardtop Valve 3 (I01256)	Behind battery. See **Fig. 73**.
Servotronic Valve (B15a)	Right front of engine. See **Fig. 40**.

SWITCHES

SWITCHES LOCATION

Component	Location
Air Distribution Microswitch (Y715)	Under left side of dash.
Brake Fluid Level Switch (B18a)	On brake fluid reservoir. See **Fig. 41**.
Brake Light Switch	On brake pedal bracket.
Coolant Level Switch	Right front of engine.
Hood Contact Switch	Right front of engine compartment.
Micro Switches 4.1 (I01200) & 4.2 (I01201)	On convertible top unlocking motor. See **Fig. 136**.
Microswitch - Roof Package Down (I01240)	Right side of convertible roof compartment. See **Fig. 138**.
Microswitch - Roof Shell 2 Closed (Left) (I01242)	Left roof shell 2 hinge. See **Fig. 140**.
Microswitch - Roof Shell 2 Closed (Right) (I01241)	Right roof shell 2 hinge. See **Fig. 139**.
Oil Pressure Switch (B6231)	Rear of engine. See **Fig. 49**.
Park/Neutral Position Switch	On gear selector.
Washer Fluid Level Switch (S136a)	On washer fluid reservoir. See **Fig. 142**.

MISCELLANEOUS

MISCELLANEOUS LOCATION

Component	Location
Active Cruise Control (A114a)	Under right front grille. See **Fig. 13**.
Amplifier (A18)	Rear luggage compartment. See **Fig. 5**.
Blower Output Stage	Center right of dash.
Bluetooth Antenna	Under left end of dash.
Digital Tuner Antenna (I01260)	Center front of roof. See **Fig. 74**.
Digital Tuner II Antenna (I01261)	Right end of rear bumper. See **Fig. 75**.
Electric Steering Lock	Under steering column.
Emergency Antenna	Center console.
Exhaust Flap	Left rear of engine compartment.
Fender Aerial (Rear)	Center of rear bumper.
Generator - Driver Belt Tensioner (G12) & Passenger Belt Tensioner (G13)	Under respective front seat. See **Fig. 132**.
Generator - Driver Knee Airbag (G30a)	Under left side of dash. See **Fig. 133**.
Generator - Passenger Knee Airbag (G31a)	Under right side of dash. See **Fig. 134**.
Generators - Driver's Airbag (G5)	In steering wheel. See **Fig. 130**.
Generators - Passenger Airbag (G6)	Right side of dash. See **Fig. 131**.
GPS Antenna	Center of headliner.
Heated Spray Nozzles - Left (E51a) & Right (E52a)	Rear of engine hood. See **Fig. 129**.
Horn (H2c)	Left front corner of engine compartment. See **Fig. 43**.
Horn 2 (H3c)	Left front corner of engine compartment. See **Fig. 43**.

Inner Antenna	Front center console.
Interference Suppression Capacitor (Ignition Coil) (I01046)	Top left of engine. See **Fig. 70**.
Jump Start Terminal Point (G6430)	Left rear of engine compartment. See **Fig. 69**.
Radiator Shutter Drive Unit	Center of front grille.
RDC Transmitter (Left Front) (B43a)	Rear of left front wheelwell. See **Fig. 46**.
RDC Transmitter (Left Rear) (B45a)	Rear of left rear wheelwell. See **Fig. 48**.
RDC Transmitter (Right Front) (B47a)	Rear of right front wheelwell. See **Fig. 50**.
RDC Transmitter (Right Rear) (B44a)	Rear of right rear wheelwell. See **Fig. 47**.
Satellite Receiver (N47)	Left rear of luggage compartment. See **Fig. 80**.
VICS Antenna (A460)	Center of headliner. See **Fig. 25**.

CONNECTORS

CONNECTORS LOCATION

Component	Location
X609 (Black, 15 Pin)	Center of luggage compartment. See **Fig. 107**.
X624 (Black, 6 Pin)	Passenger's door. See **Fig. 108**.
X1265 (Black, 1 Pin)	Center of rear window. See **Fig. 105**.
X6500 (Black, 2 Pin)	Center console. See **Fig. 109**.
X6506 (Natural, 2 Pin)	Right rear of engine compartment. See **Fig. 110**.
X10497 (Blue, 6 Pin)	Right side of luggage compartment. See **Fig. 106**.

GROUNDS

GROUNDS LOCATION

Component	Location
X164	Below left front strut tower. See **Fig. 84**.
X166	Below right front strut tower. See **Fig. 85**.
X170	Below left front strut tower. See **Fig. 84**.
X173	Front of left footwell. See **Fig. 83**.
X217	Front of left footwell. See **Fig. 83**.
X219	Right kick panel. See **Fig. 89**.
X490	Right kick panel. See **Fig. 82**.
X498	Right front of luggage compartment. See **Fig. 90**.
X1091	Below steering column. See **Fig. 86**.
X1108	Front of left footwell. See **Fig. 83**.
X1441	Right front of center console. See **Fig. 96**.
X1703	Below left front strut tower. See **Fig. 84**.
X3313	Left front of luggage compartment. See **Fig. 91**.
X5991	Right front of luggage lid. See **Fig. 92**.

X5992	Right front of luggage lid. See **Fig. 92**.
X6176	Top right side of engine. See **Fig. 95**.
X6454	Left rear of engine compartment. See **Fig. 94**.
X6478	Center right of dash. See **Fig. 93**.
X10012	Right kick panel. See **Fig. 82**.
X10237	Center right of dash. See **Fig. 87**.
X13016	Left front of luggage compartment. See **Fig. 88**.

SPLICES

SPLICES LOCATION

Component	Location
X181	Left kick panel. See **Fig. 99**.
X1019	Left kick panel. See **Fig. 99**.
X1179	Center right of dash. See **Fig. 102**.
X1362	Under left end of dash. See **Fig. 103**.
X1991	Center of dash. See **Fig. 104**.
X1992	Center of dash. See **Fig. 104**.
X6038	Left rear of engine compartment. See **Fig. 98**.
X6356	Left rear of engine compartment. See **Fig. 97**.
X6357	Left rear of engine compartment. See **Fig. 97**.
X19515	Front of driver's door. See **Fig. 101**.
X19516	Front of passenger's door. See **Fig. 100**.

COMPONENT LOCATION GRAPHICS

NOTE: Figures may show multiple component locations. Refer to appropriate table for proper figure references.

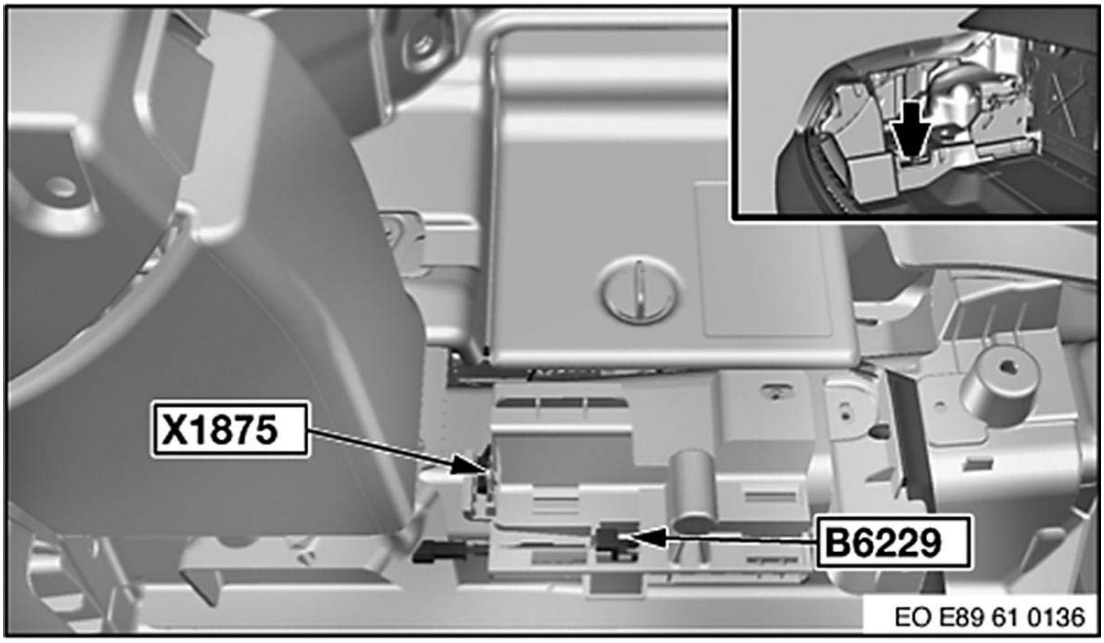

Fig. 1: Left Side Of Luggage Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

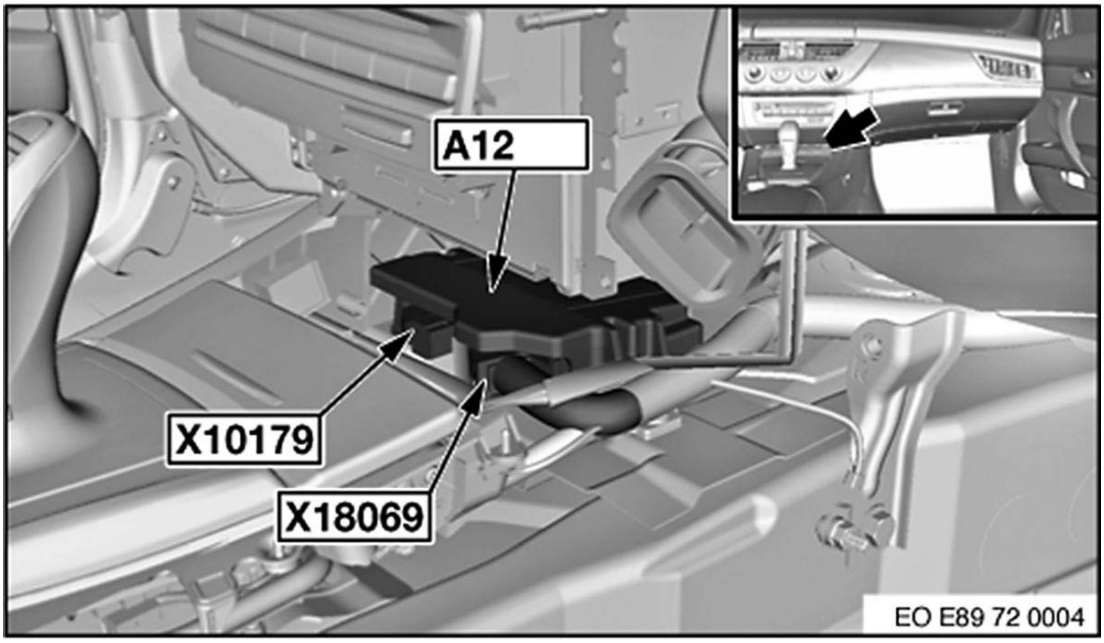

Fig. 2: Front Of Center Console
Courtesy of BMW OF NORTH AMERICA, INC.

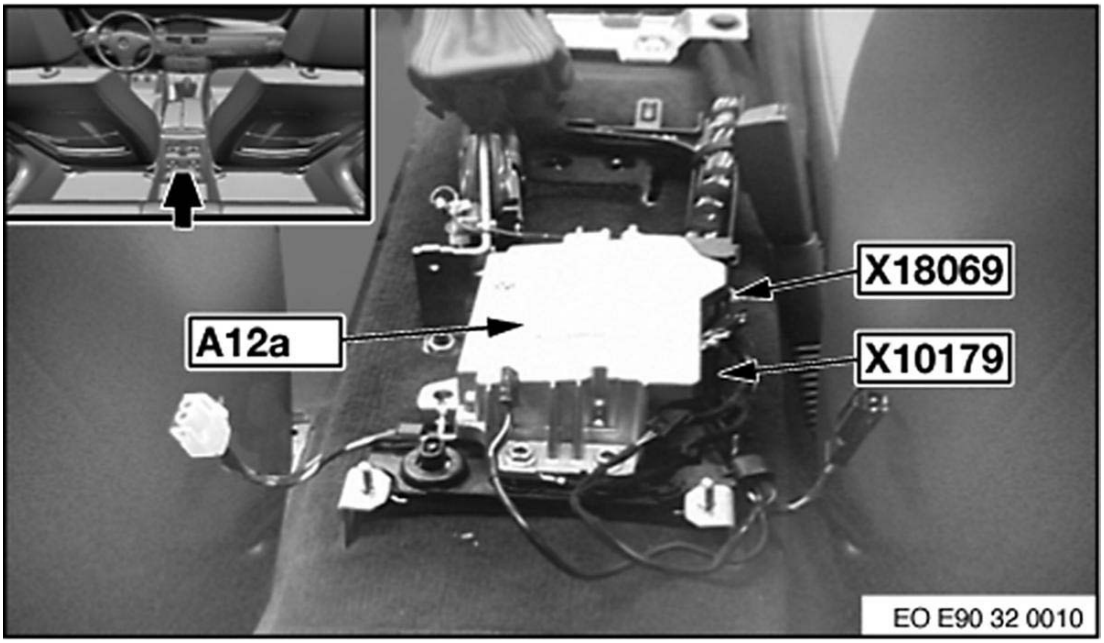

Fig. 3: Center Console
Courtesy of BMW OF NORTH AMERICA, INC.

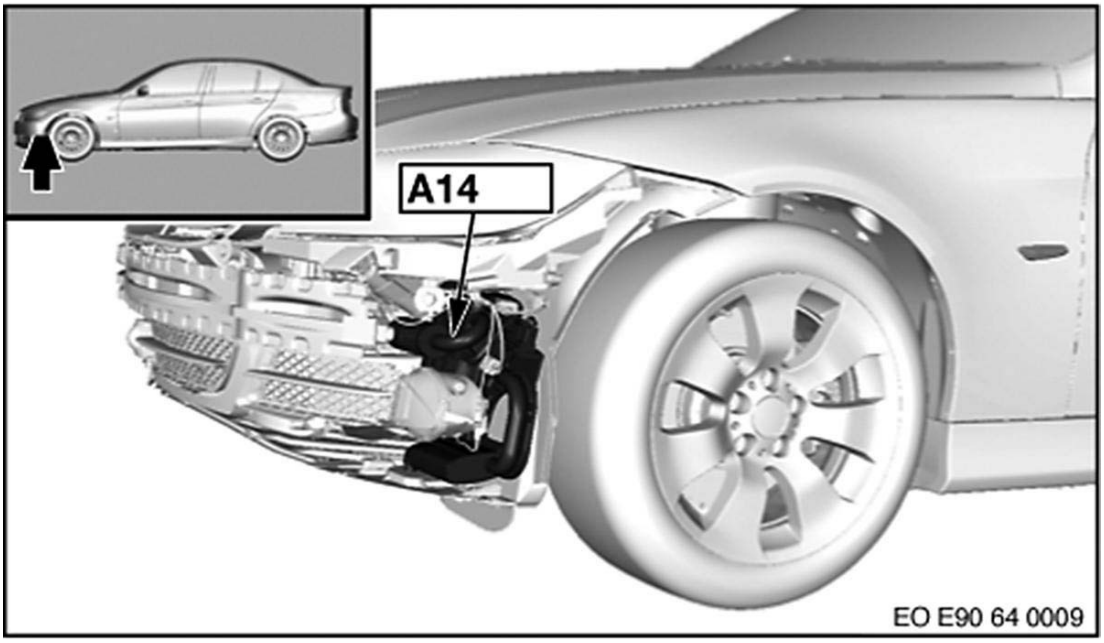

Fig. 4: Left Front Of Engine Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

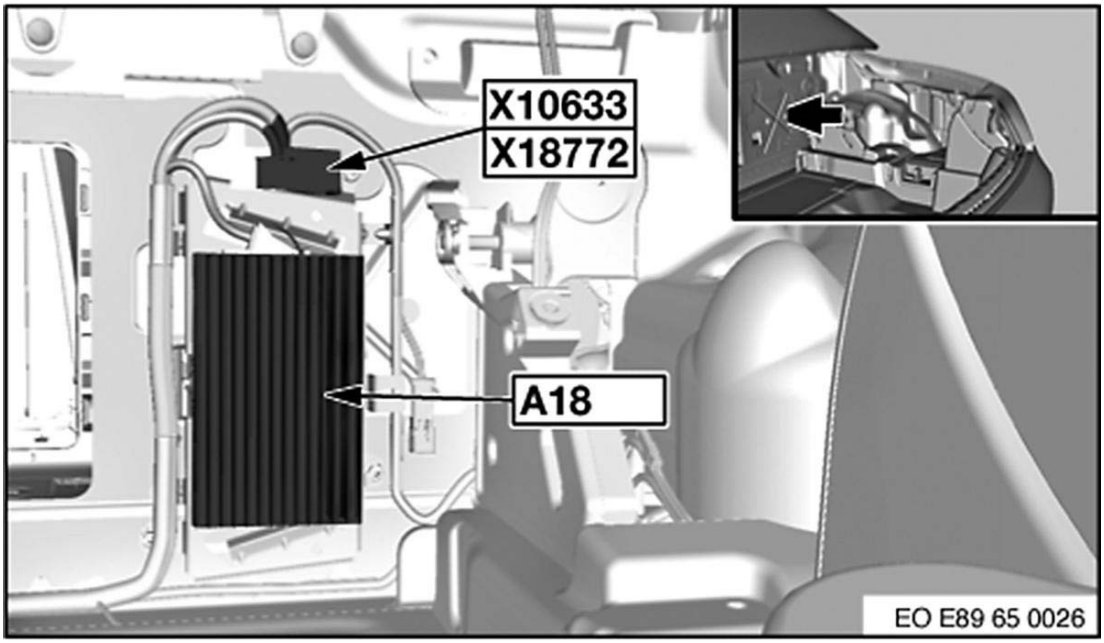

Fig. 5: Rear Of Luggage Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

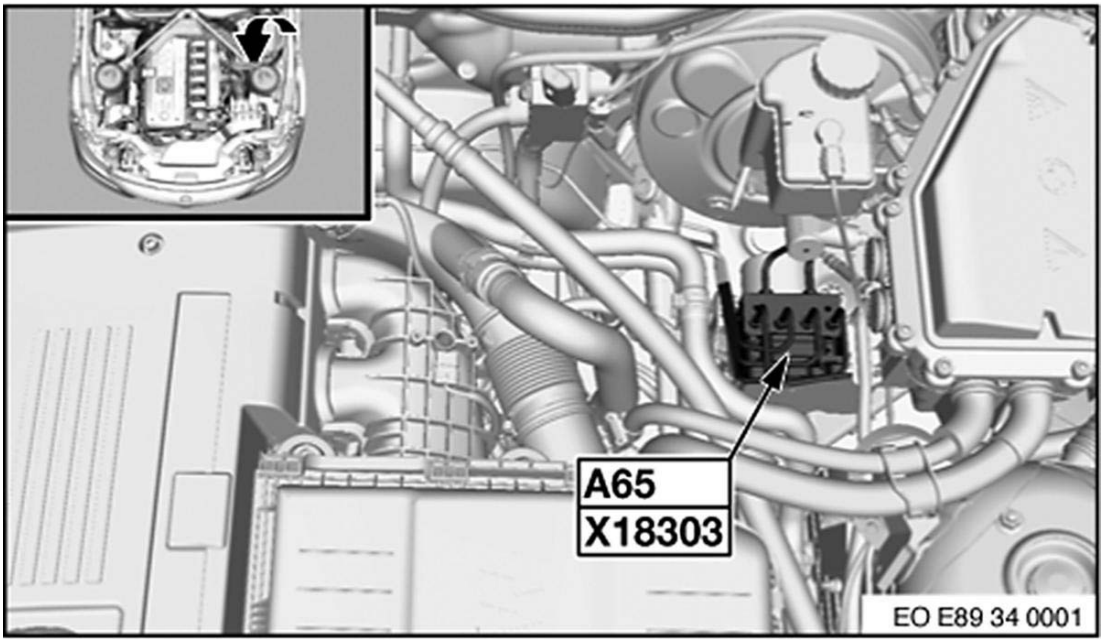

Fig. 6: Left Side Of Engine Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

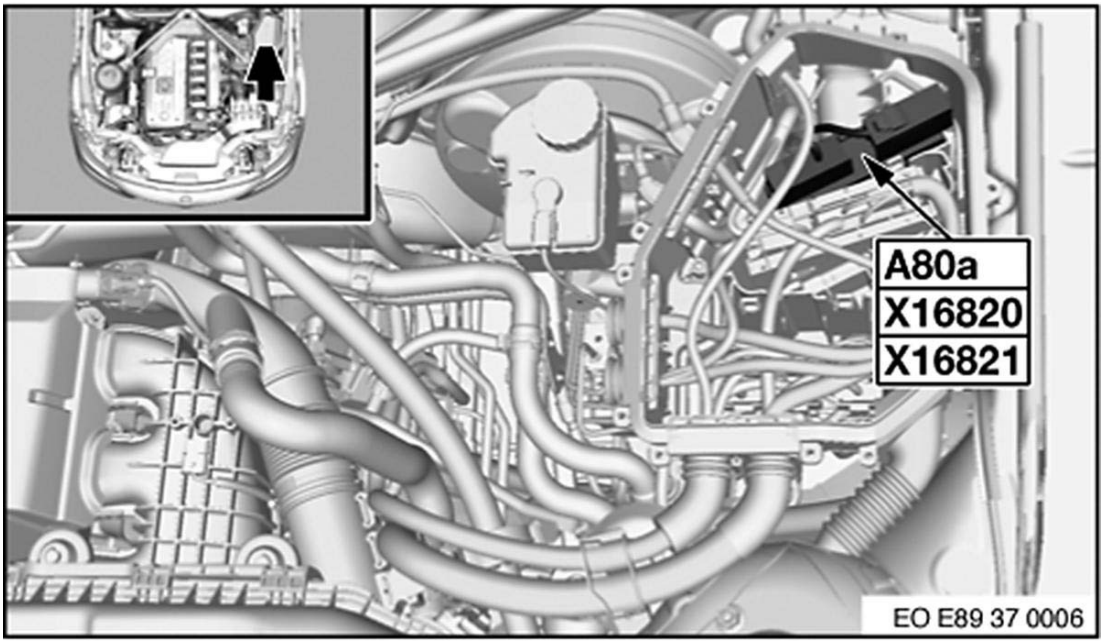

Fig. 7: Left Rear Of Engine Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

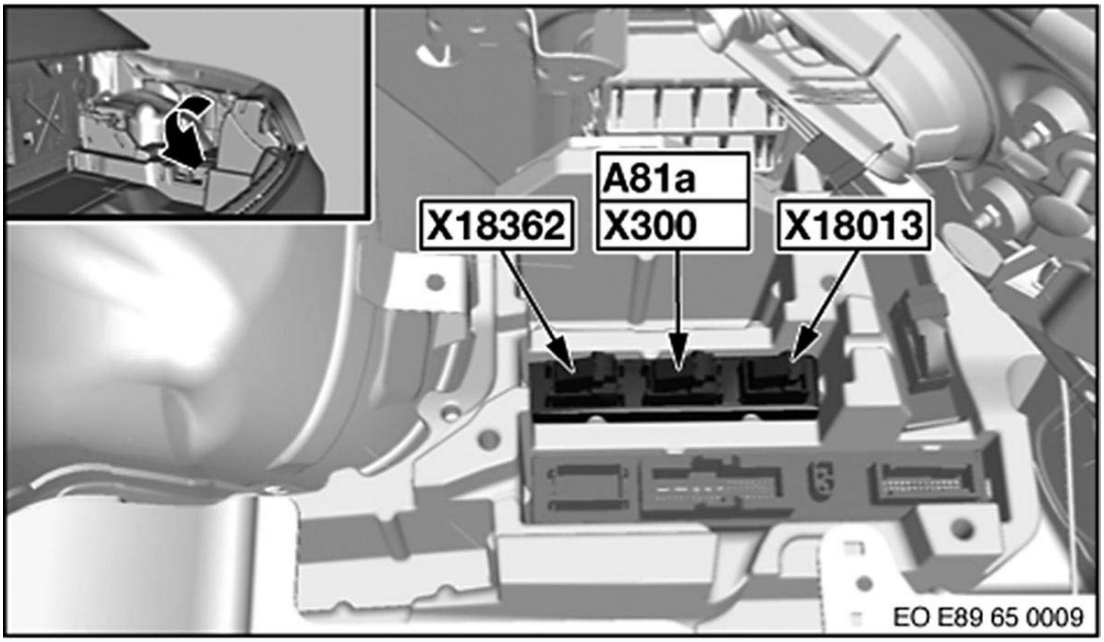

Fig. 8: Right Rear Of Luggage Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

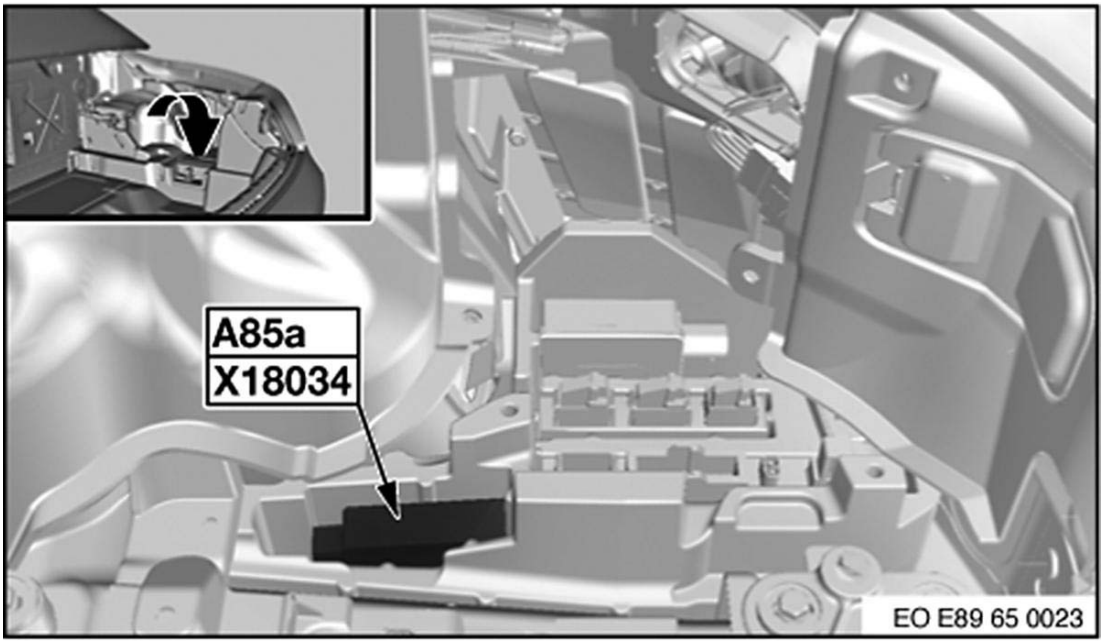

Fig. 9: Right Rear Of Luggage Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

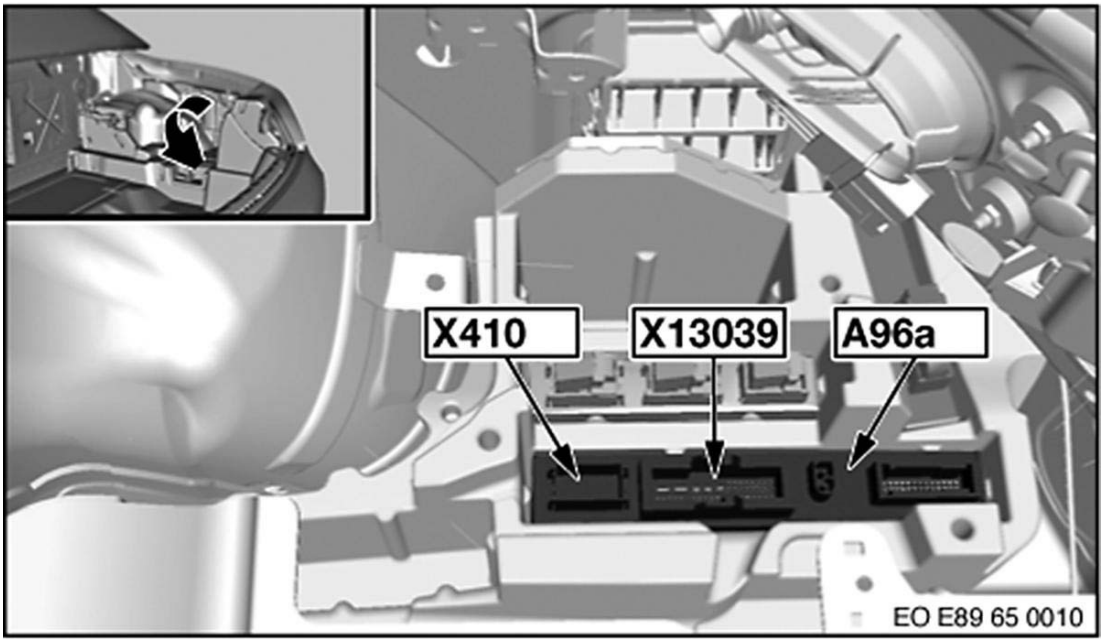

Fig. 10: Right Rear Of Luggage Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

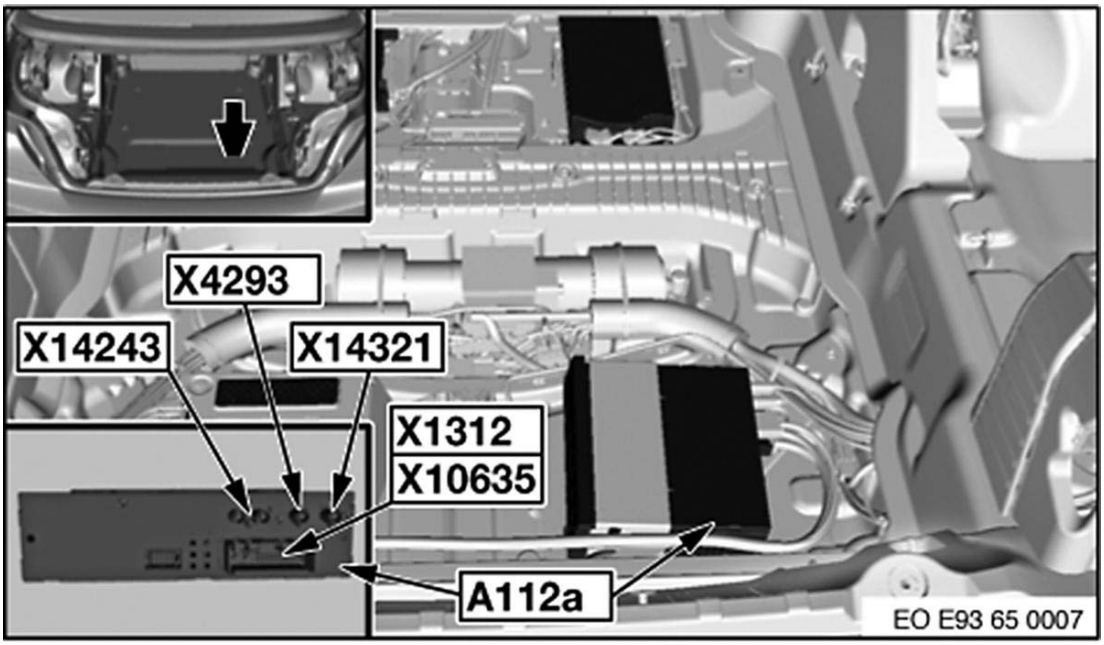

Fig. 11: Luggage Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

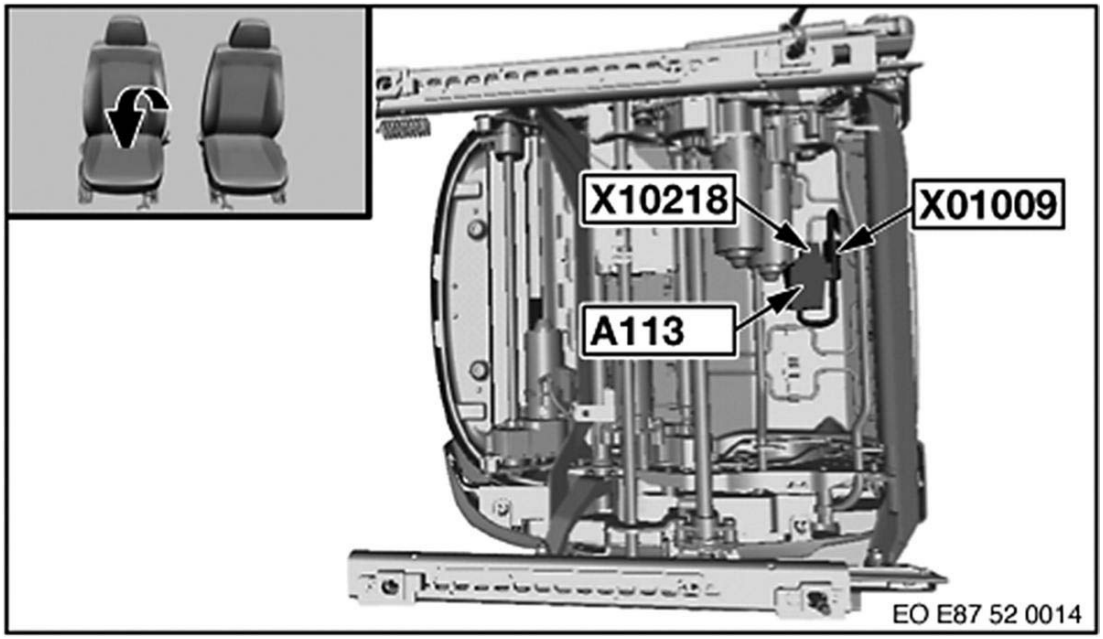

Fig. 12: Passenger's Seat
Courtesy of BMW OF NORTH AMERICA, INC.

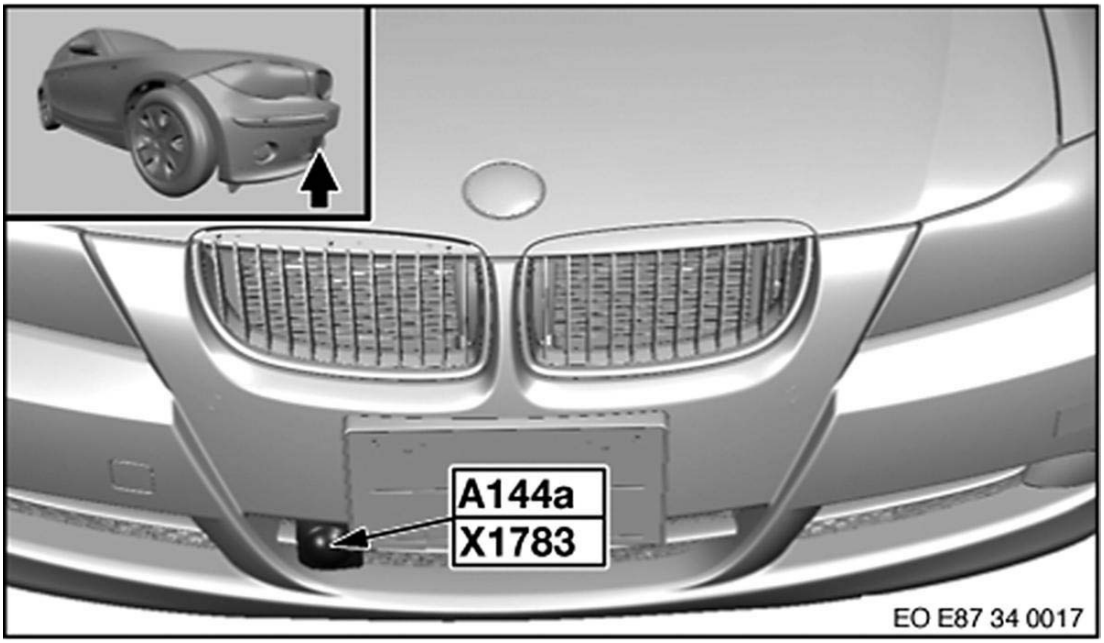

Fig. 13: Front Of Vehicle
Courtesy of BMW OF NORTH AMERICA, INC.

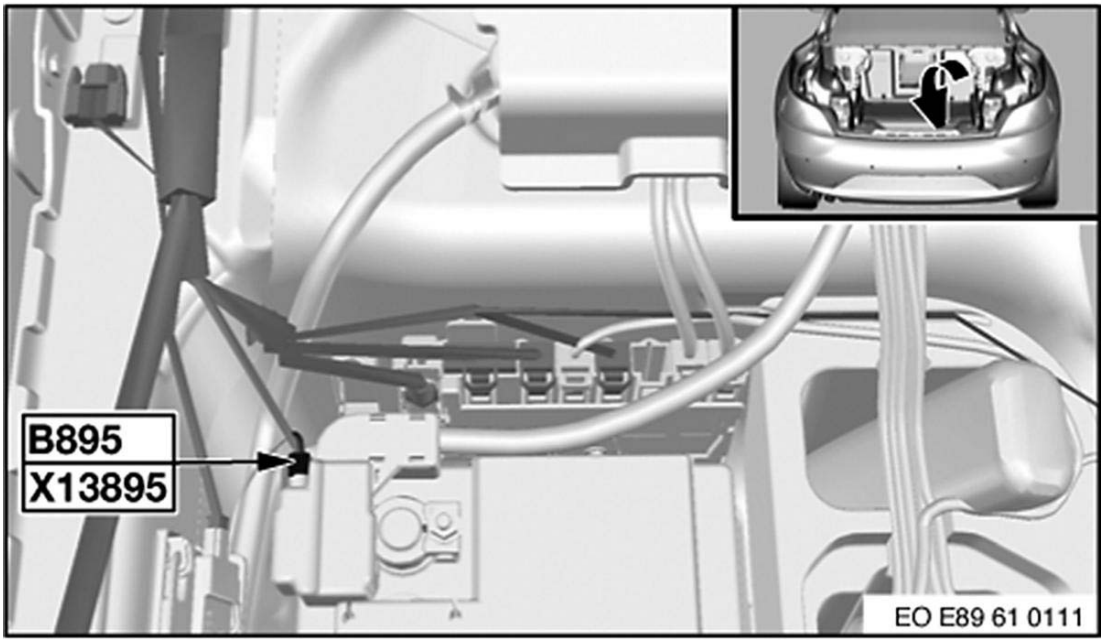

Fig. 14: Luggage Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

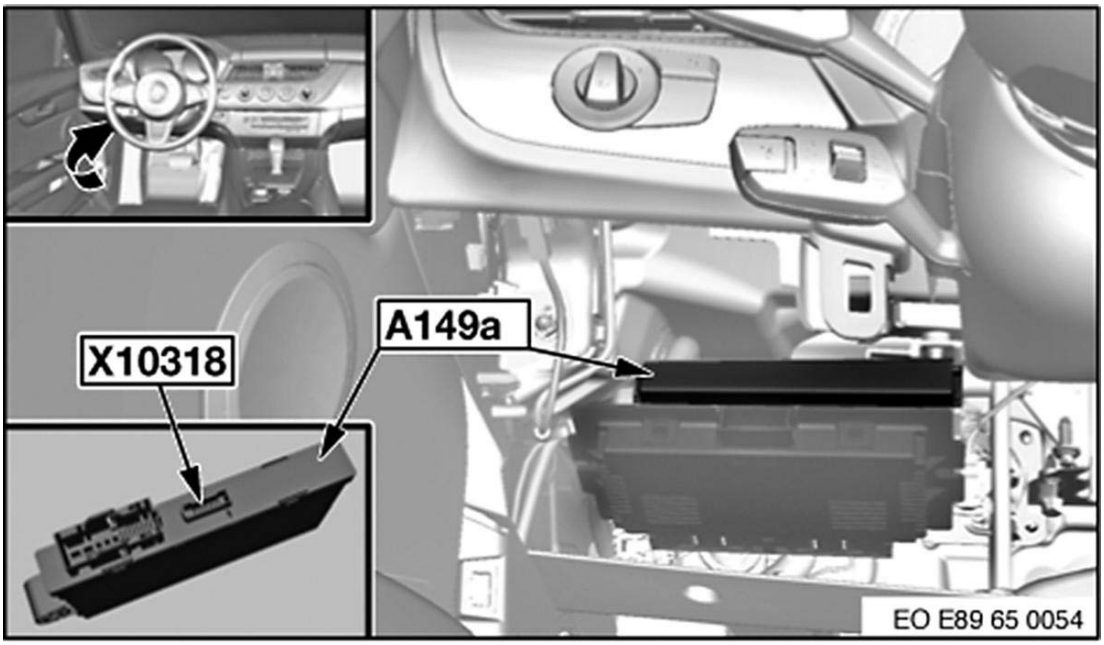

Fig. 15: Under Left Side Of Dash
Courtesy of BMW OF NORTH AMERICA, INC.

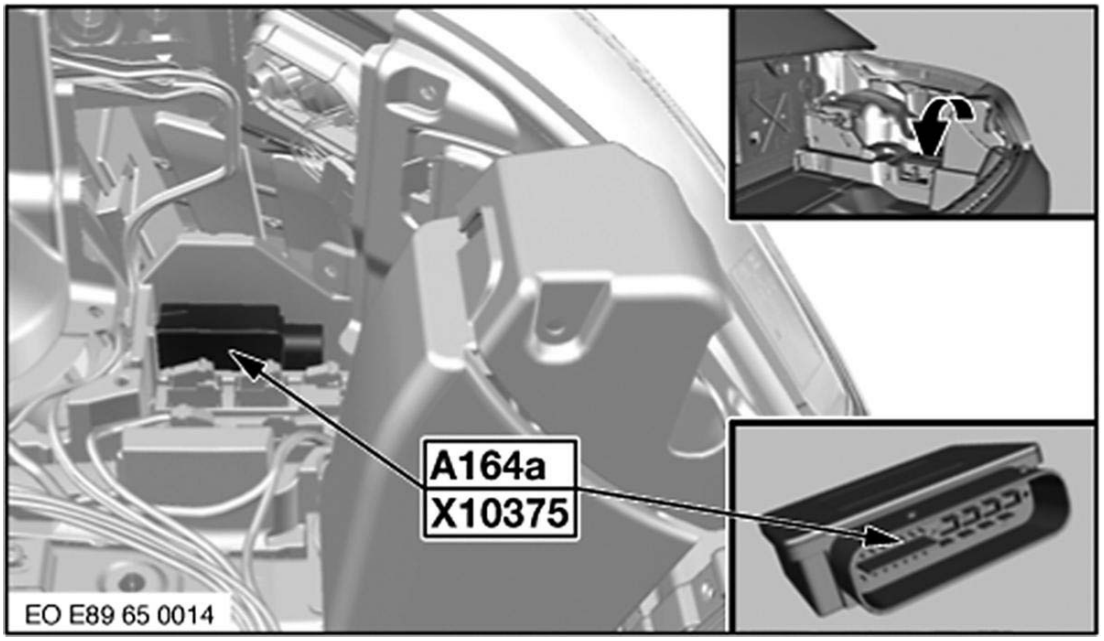

Fig. 16: Luggage Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

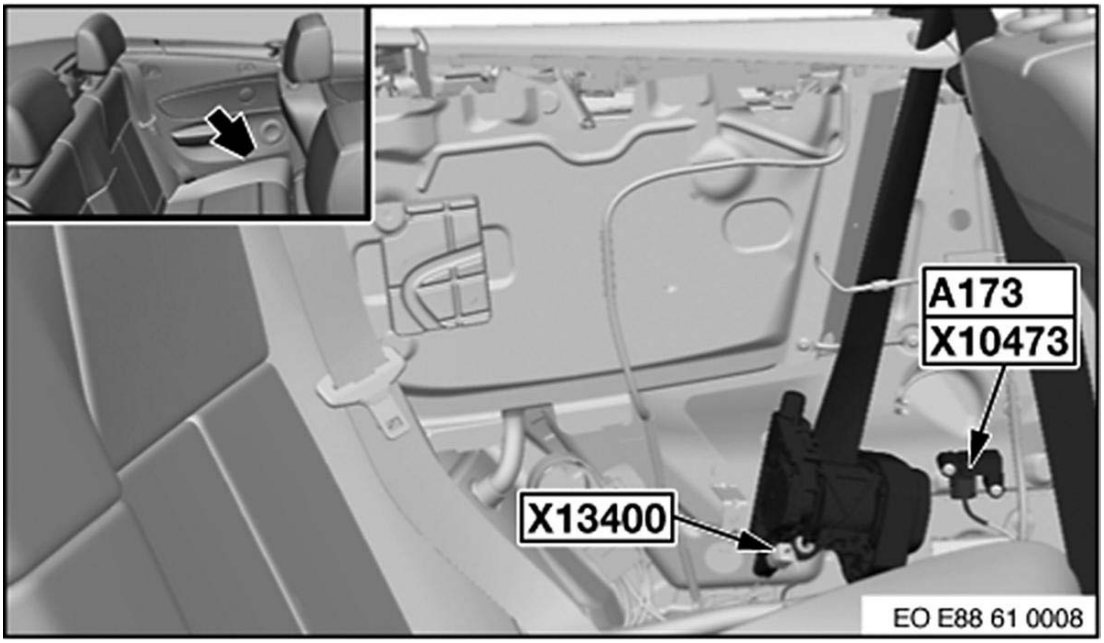

Fig. 17: Left "B" Pillar
Courtesy of BMW OF NORTH AMERICA, INC.

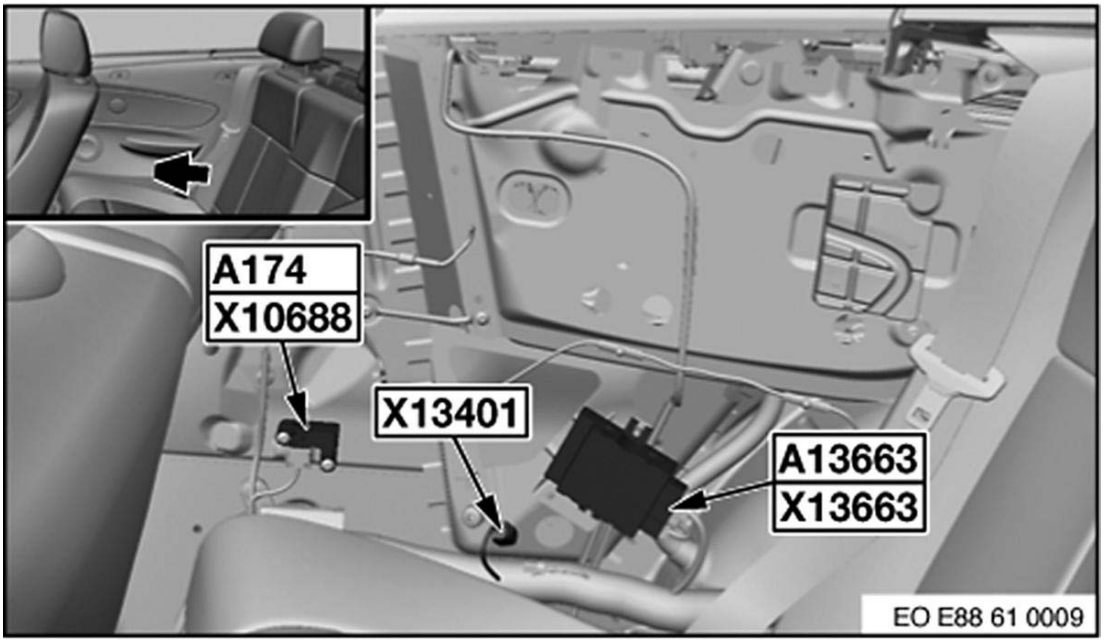

Fig. 18: Right "B" Pillar
Courtesy of BMW OF NORTH AMERICA, INC.

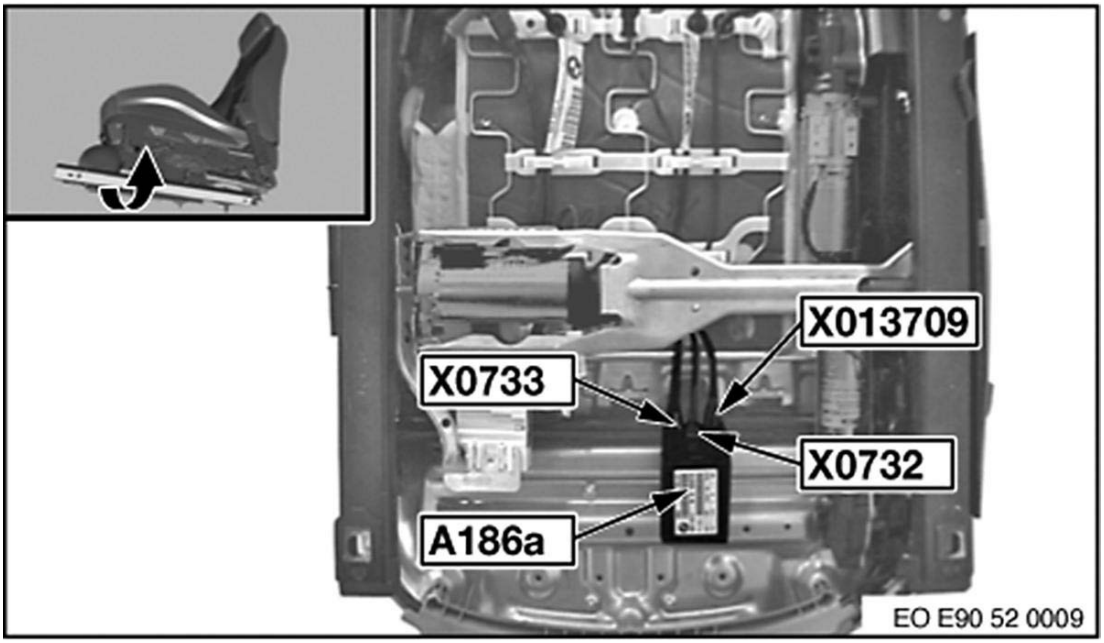

Fig. 19: Passenger's Seat
Courtesy of BMW OF NORTH AMERICA, INC.

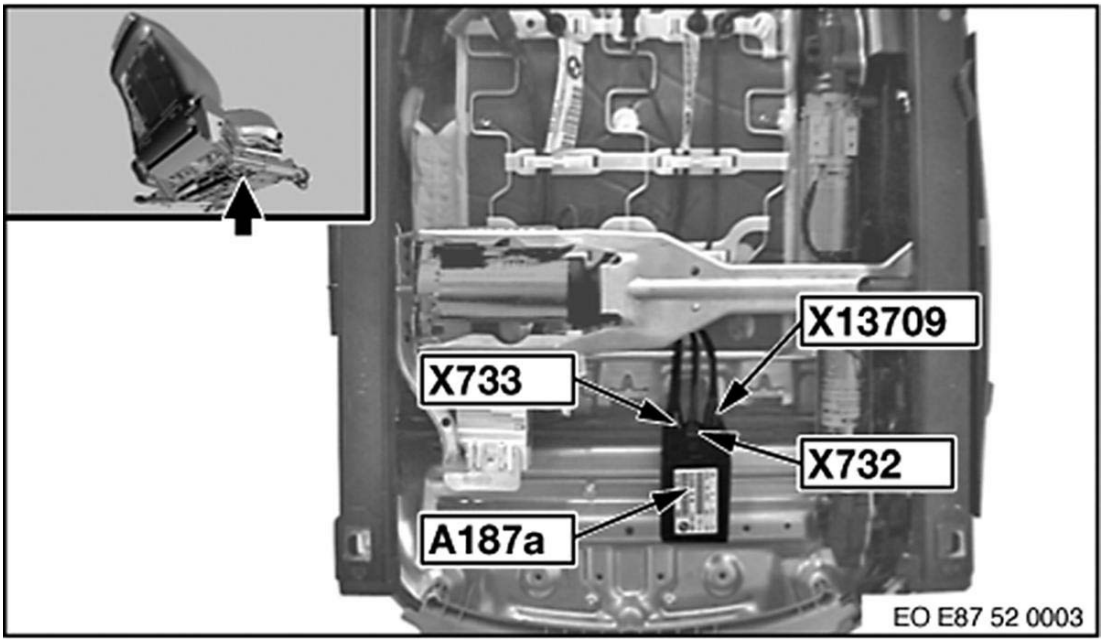

Fig. 20: Driver's Seat
Courtesy of BMW OF NORTH AMERICA, INC.

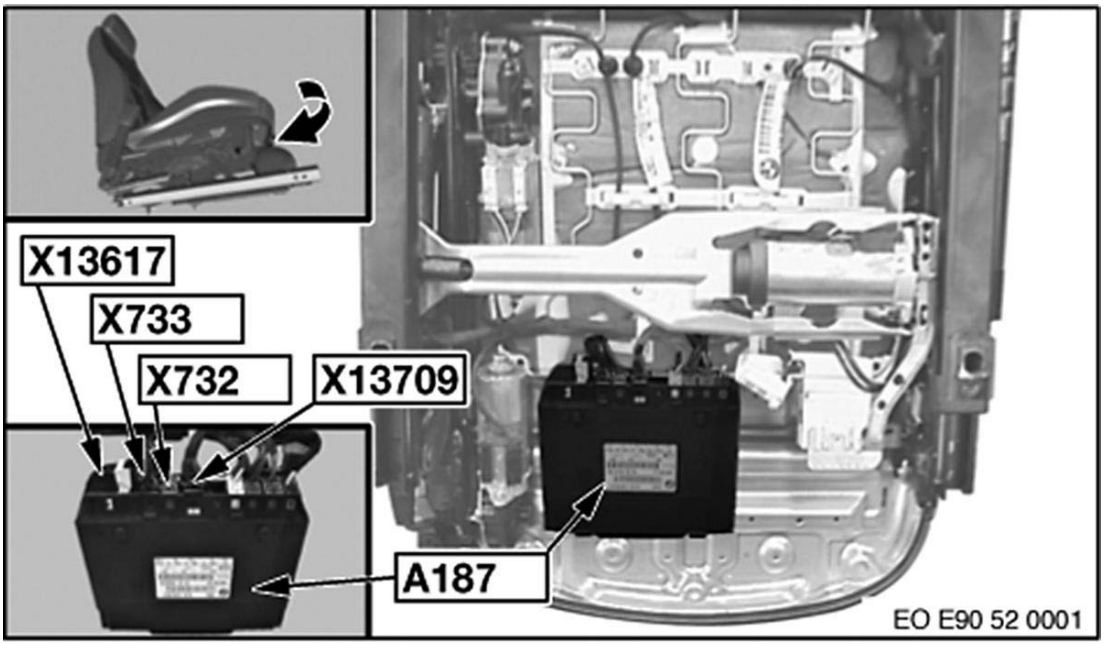

Fig. 21: Driver's Seat
Courtesy of BMW OF NORTH AMERICA, INC.

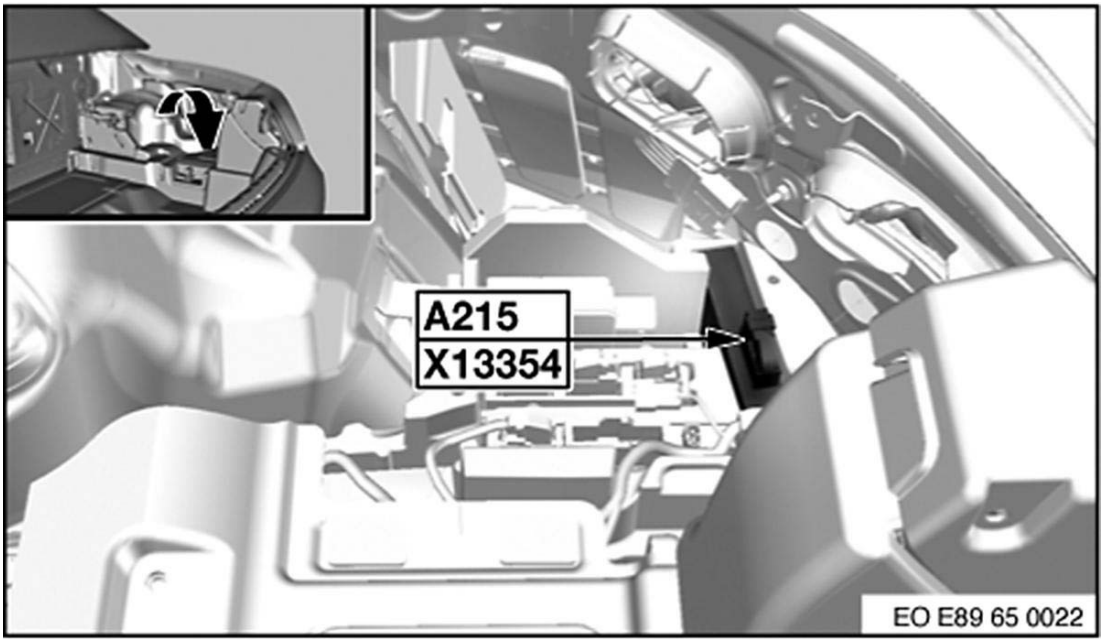

Fig. 22: Luggage Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

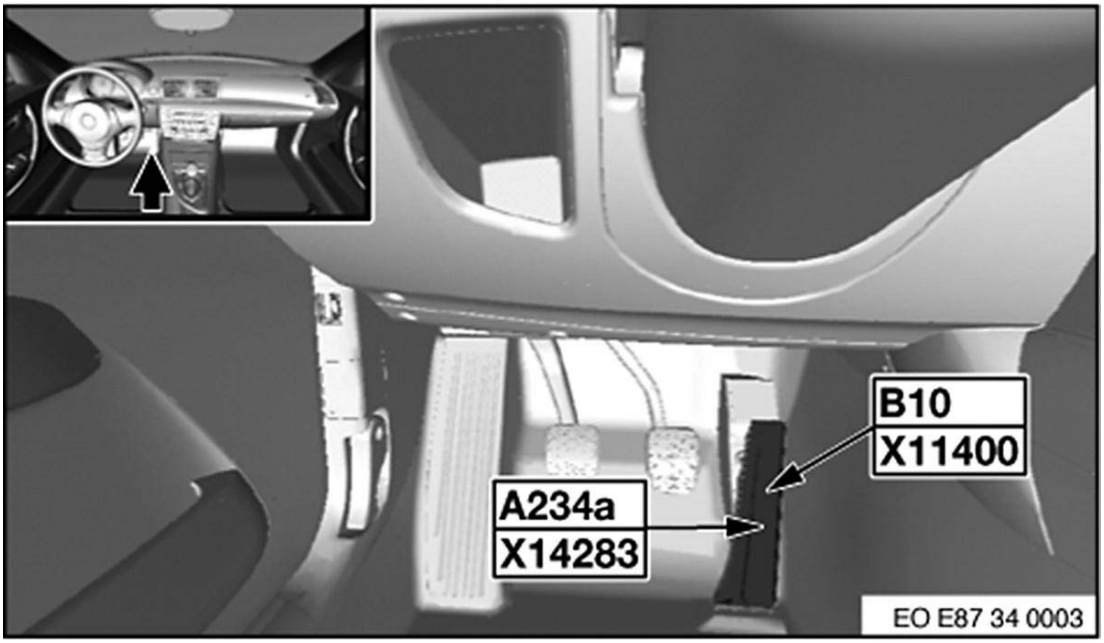

Fig. 23: Driver's Footwell
Courtesy of BMW OF NORTH AMERICA, INC.

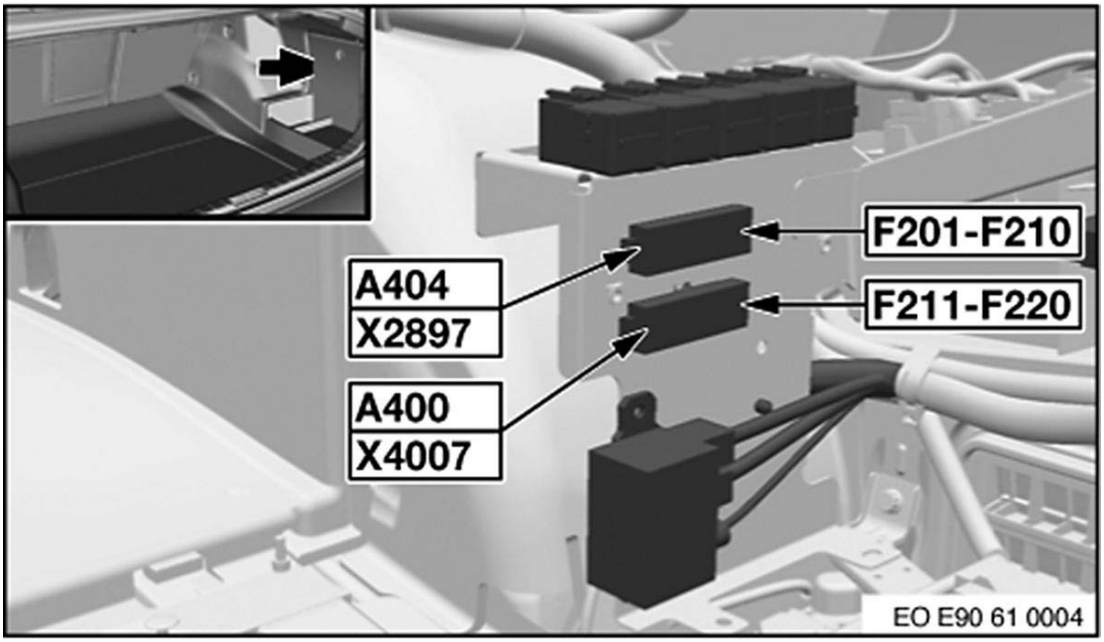

Fig. 24: Right Side Of Luggage Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

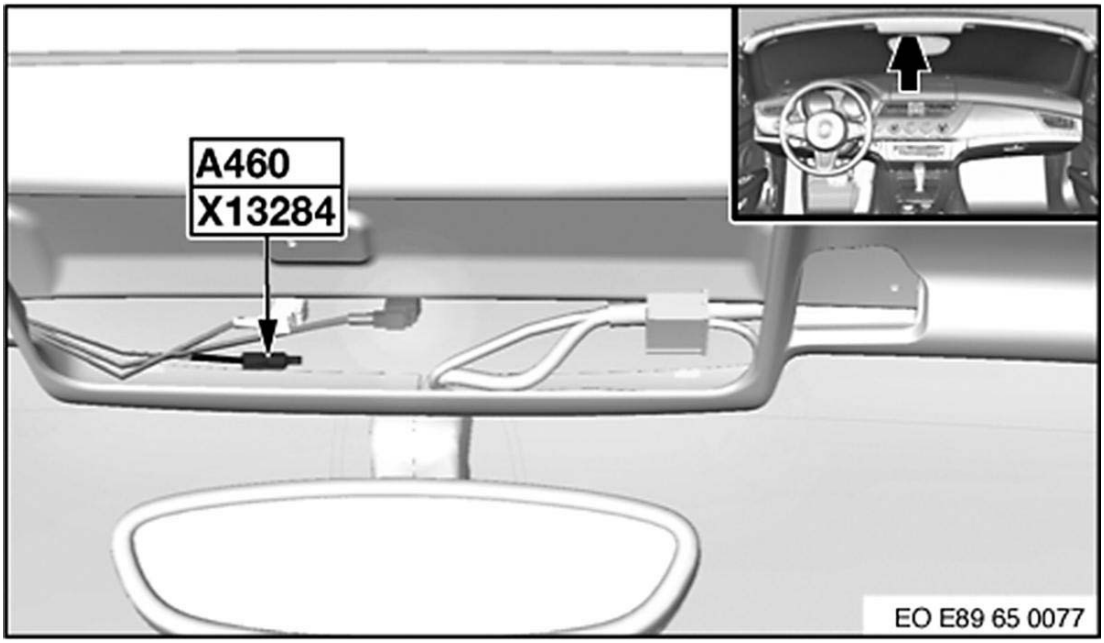

Fig. 25: Headliner
Courtesy of BMW OF NORTH AMERICA, INC.

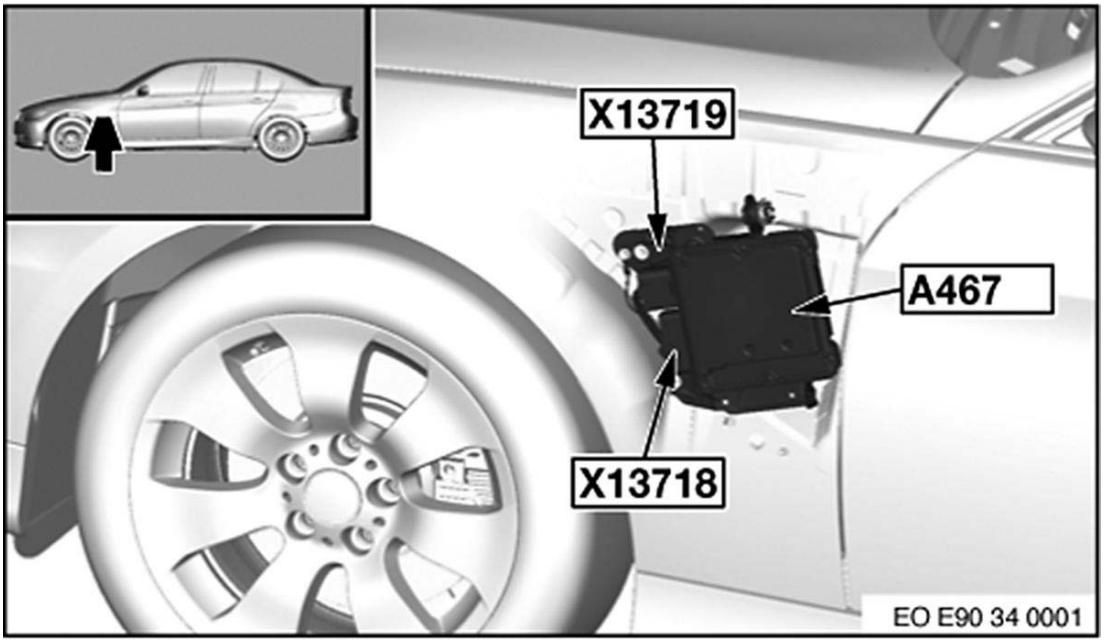

Fig. 26: Left Front Wheelwell
Courtesy of BMW OF NORTH AMERICA, INC.

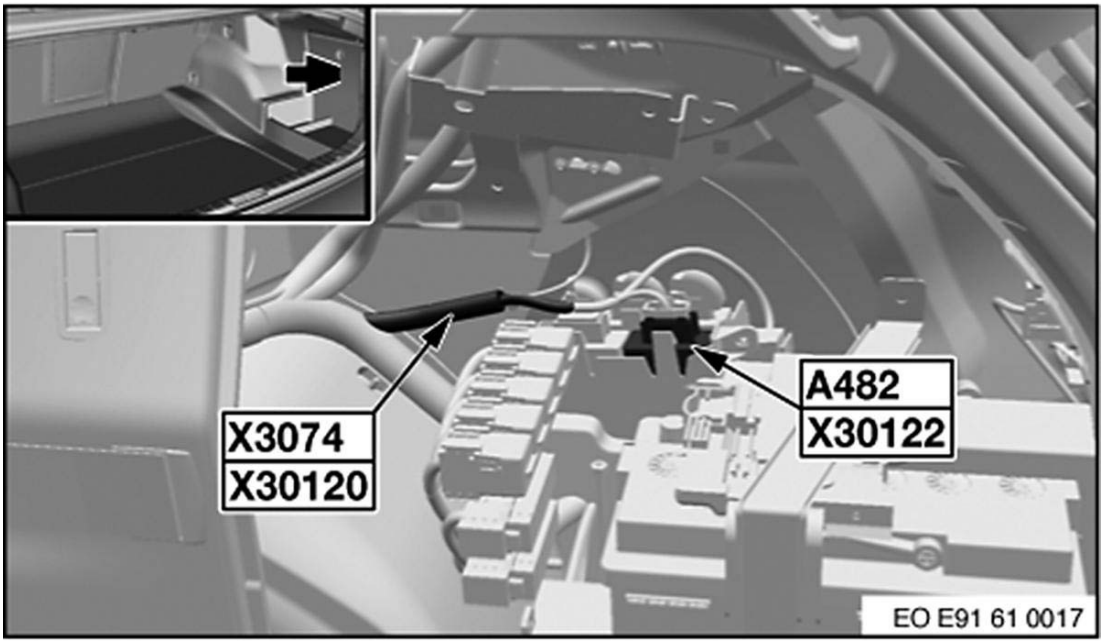

Fig. 27: Right Rear Of Luggage Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

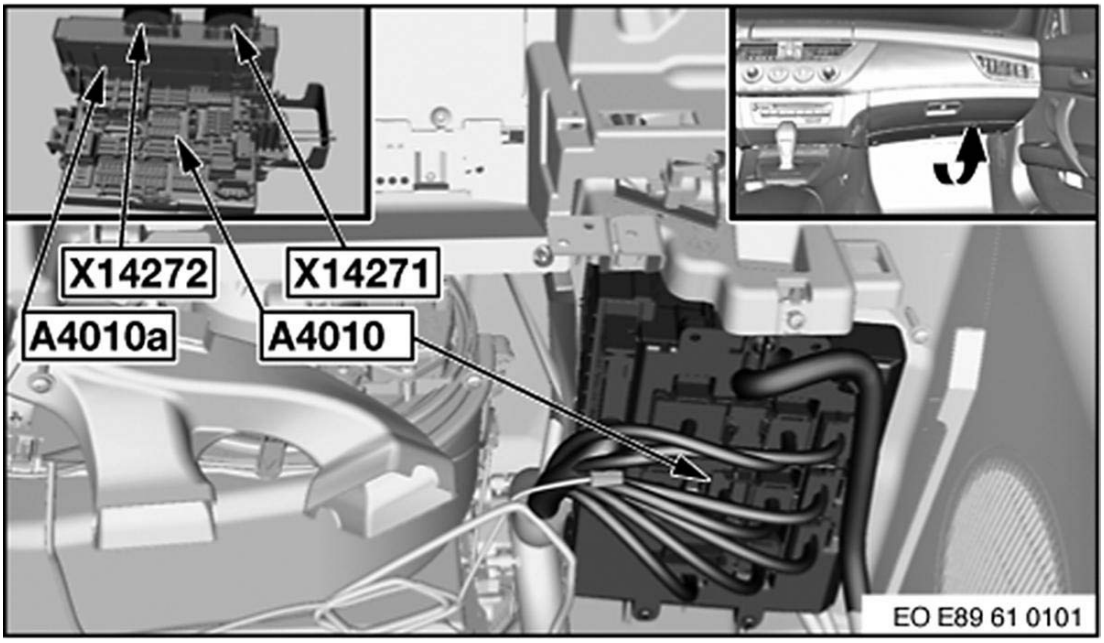

Fig. 28: Right Side Of Dash
Courtesy of BMW OF NORTH AMERICA, INC.

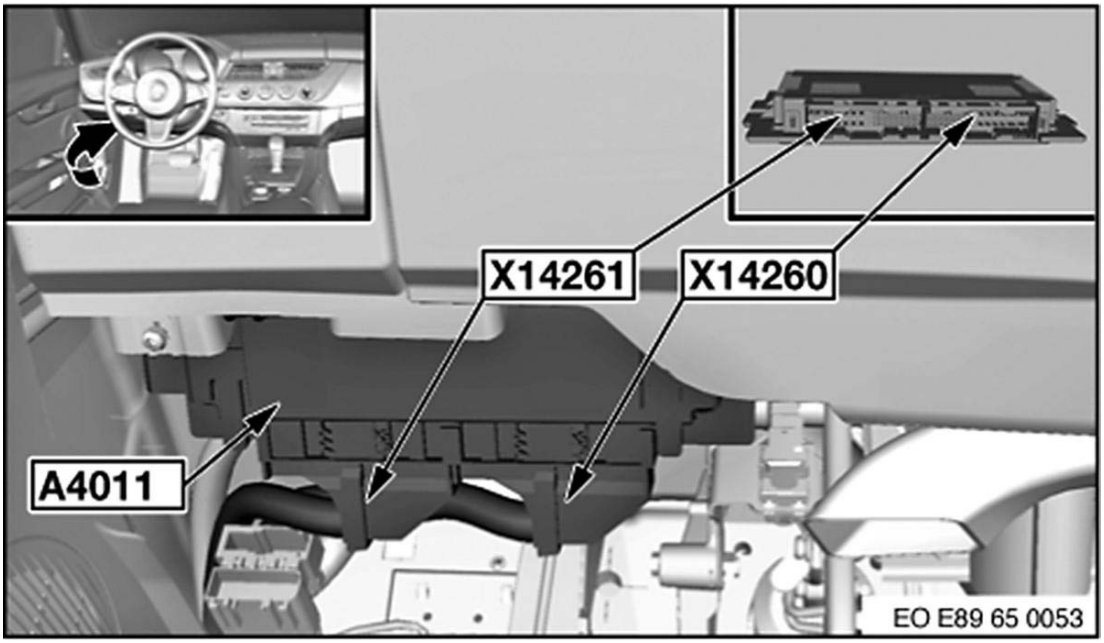

Fig. 29: Left Side Of Dash
Courtesy of BMW OF NORTH AMERICA, INC.

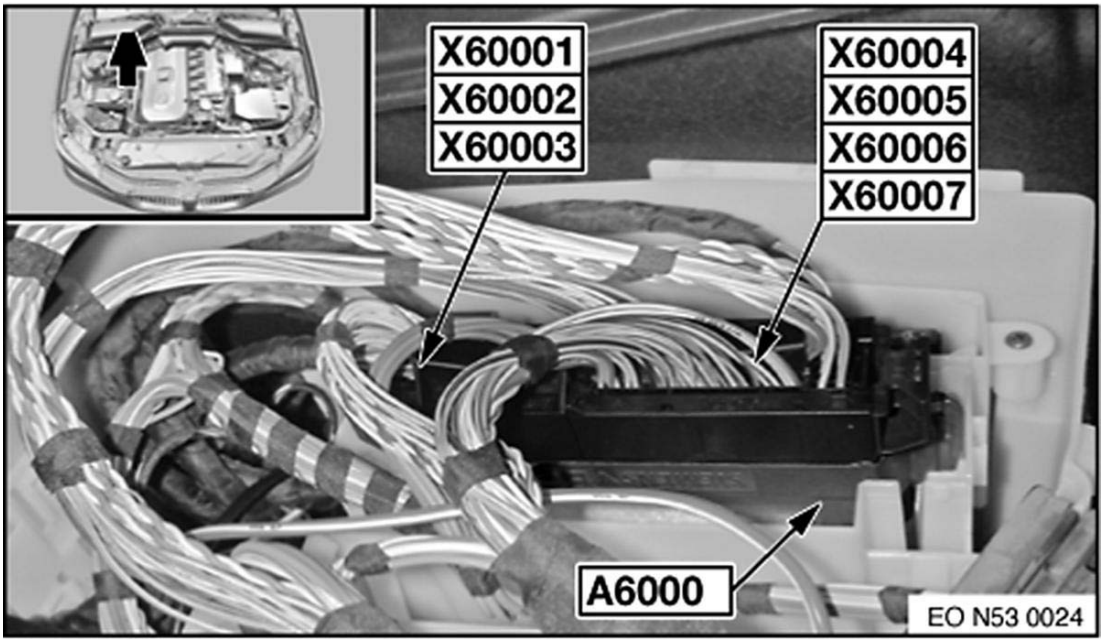

Fig. 30: Engine Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

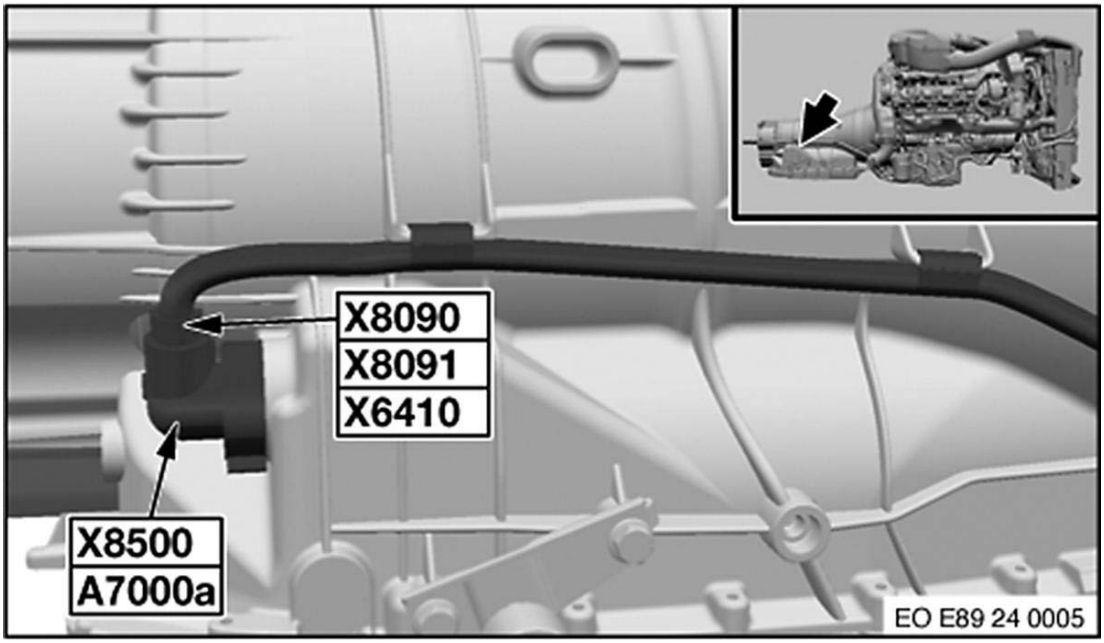

Fig. 31: Transmission Assembly
Courtesy of BMW OF NORTH AMERICA, INC.

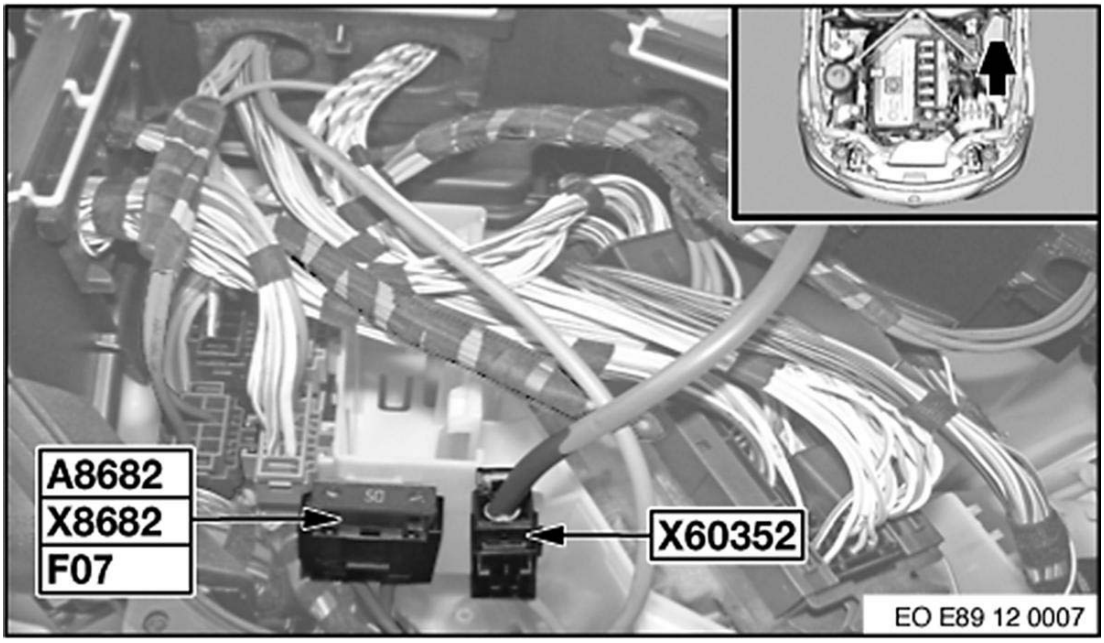

Fig. 32: Engine Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

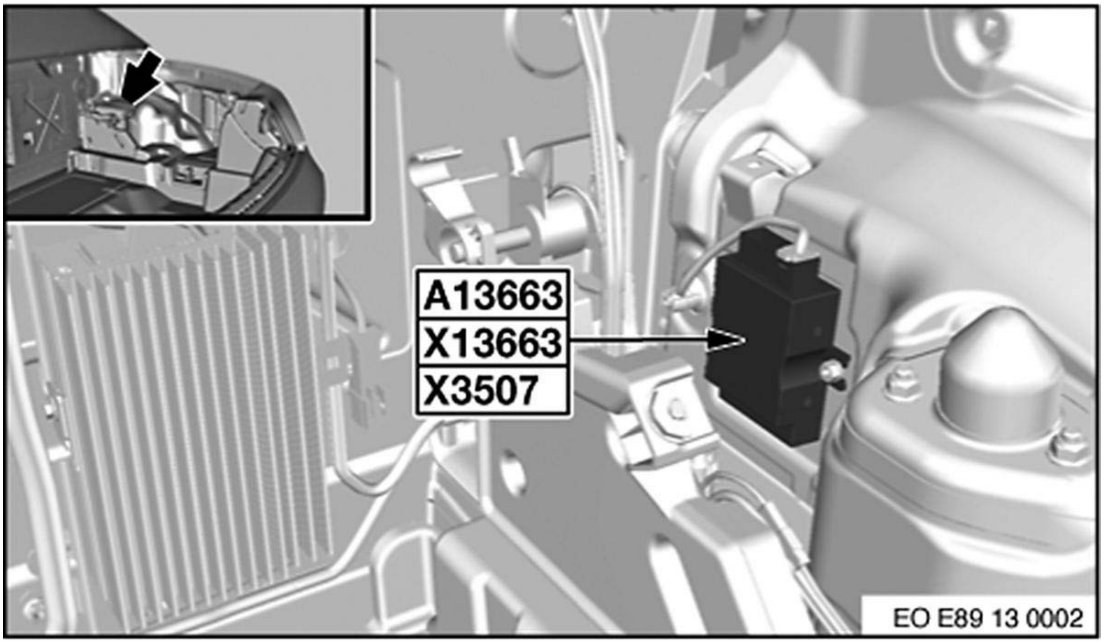

Fig. 33: Luggage Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

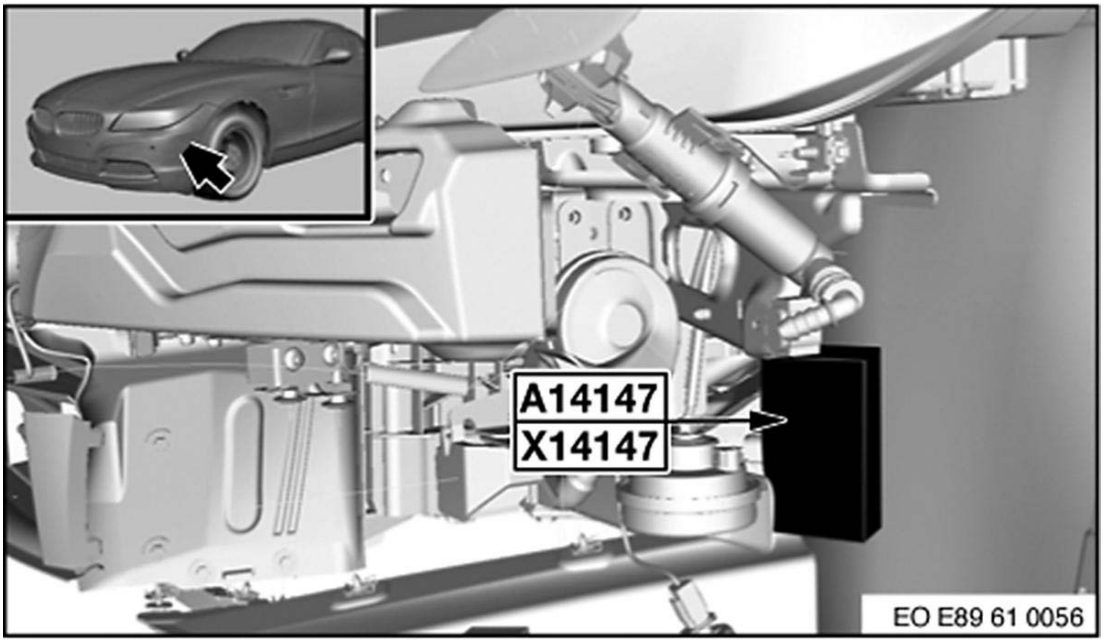

Fig. 34: Left Front Corner Of Vehicle
Courtesy of BMW OF NORTH AMERICA, INC.

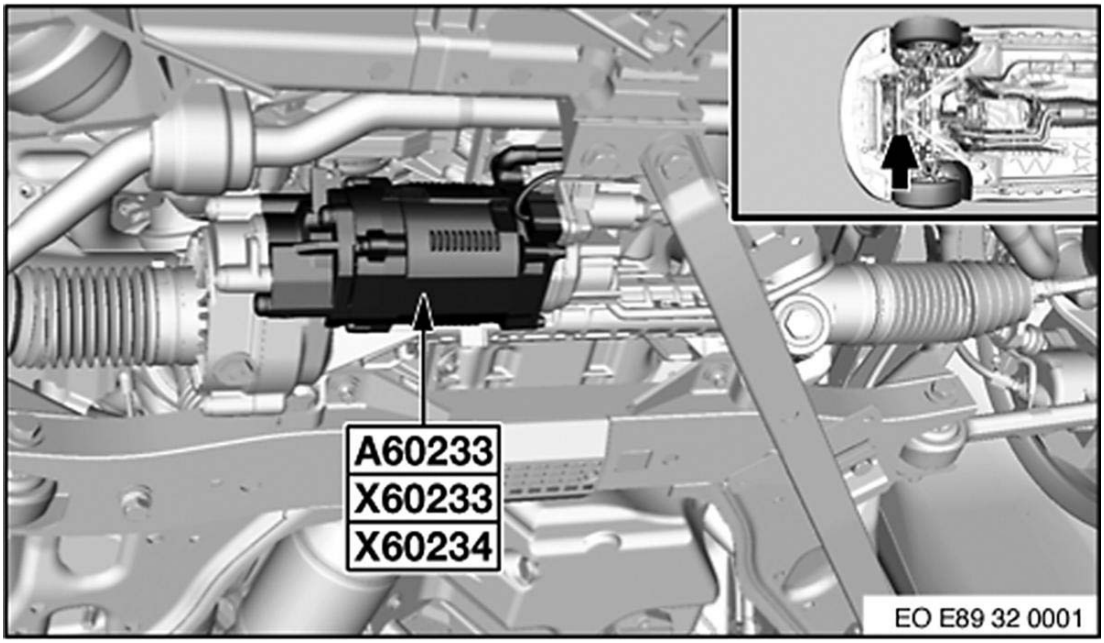

Fig. 35: Steering Rack Assembly
Courtesy of BMW OF NORTH AMERICA, INC.

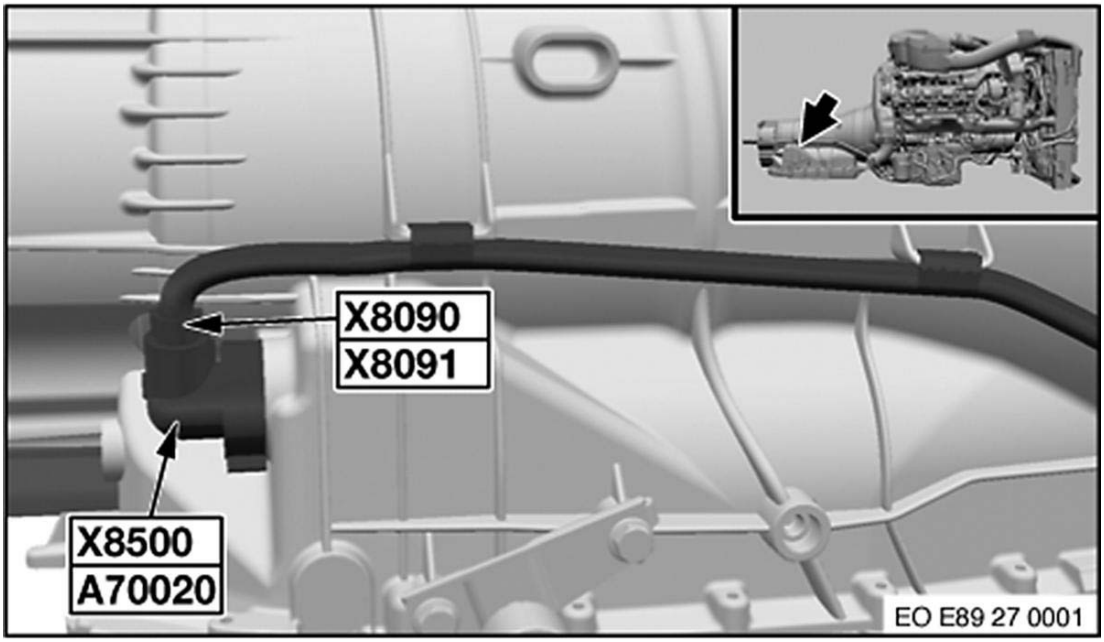

Fig. 36: Transmission Assembly
Courtesy of BMW OF NORTH AMERICA, INC.

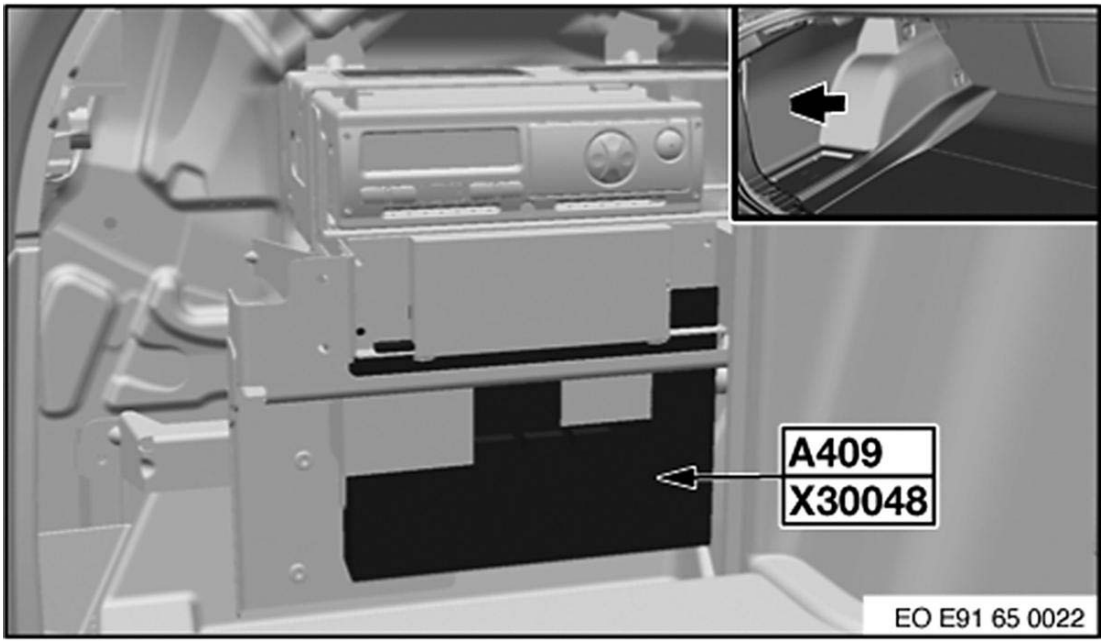

Fig. 37: Luggage Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

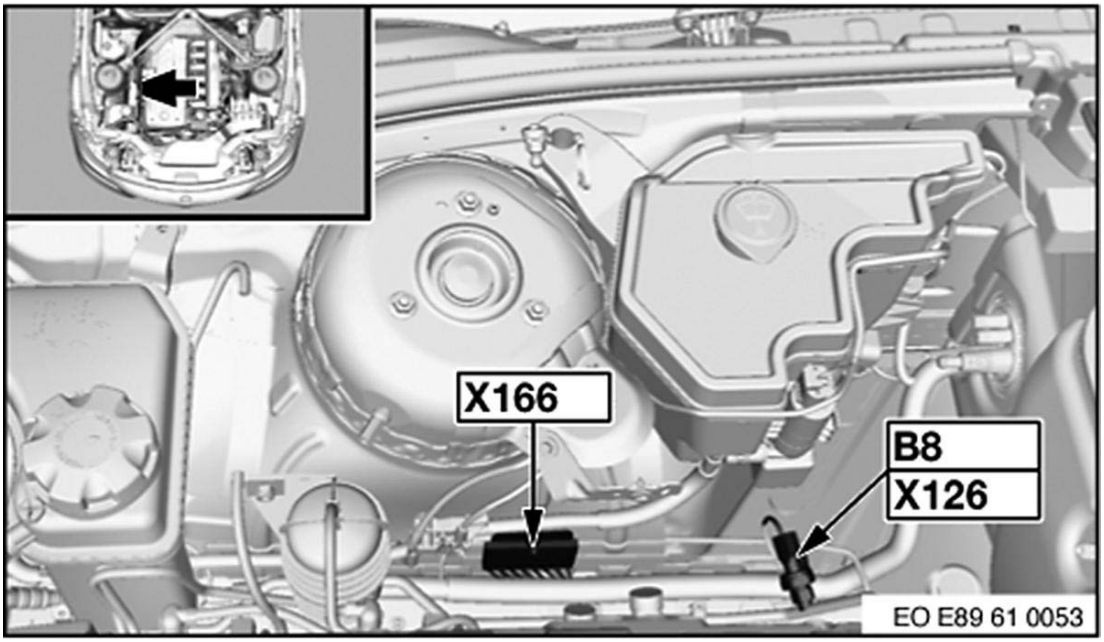

Fig. 38: Right Side Of Engine Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

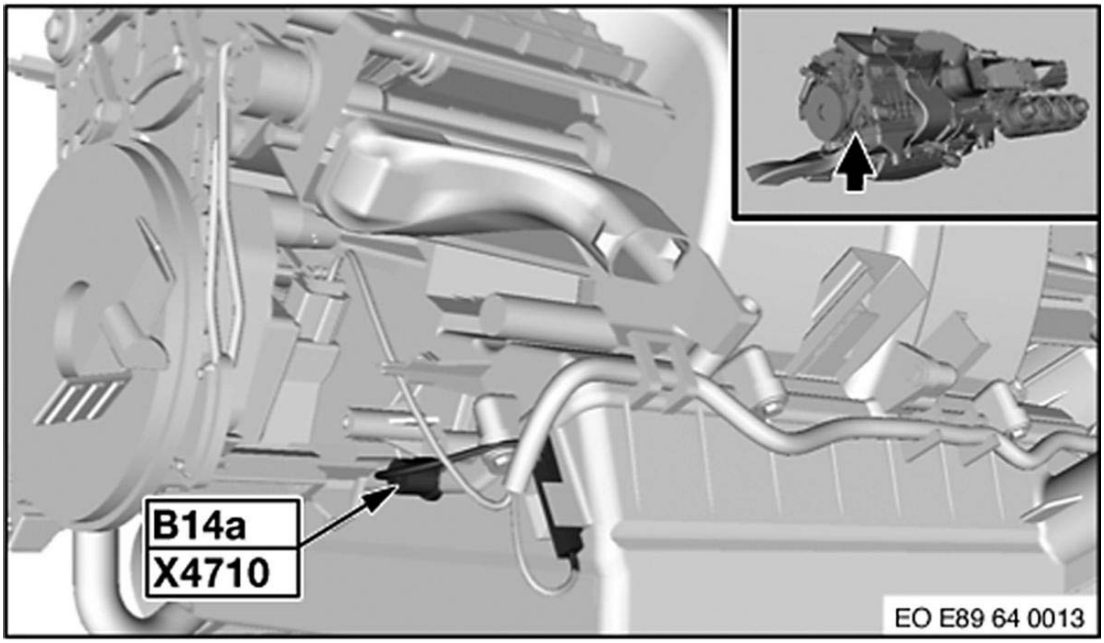

Fig. 39: HVAC Assembly
Courtesy of BMW OF NORTH AMERICA, INC.

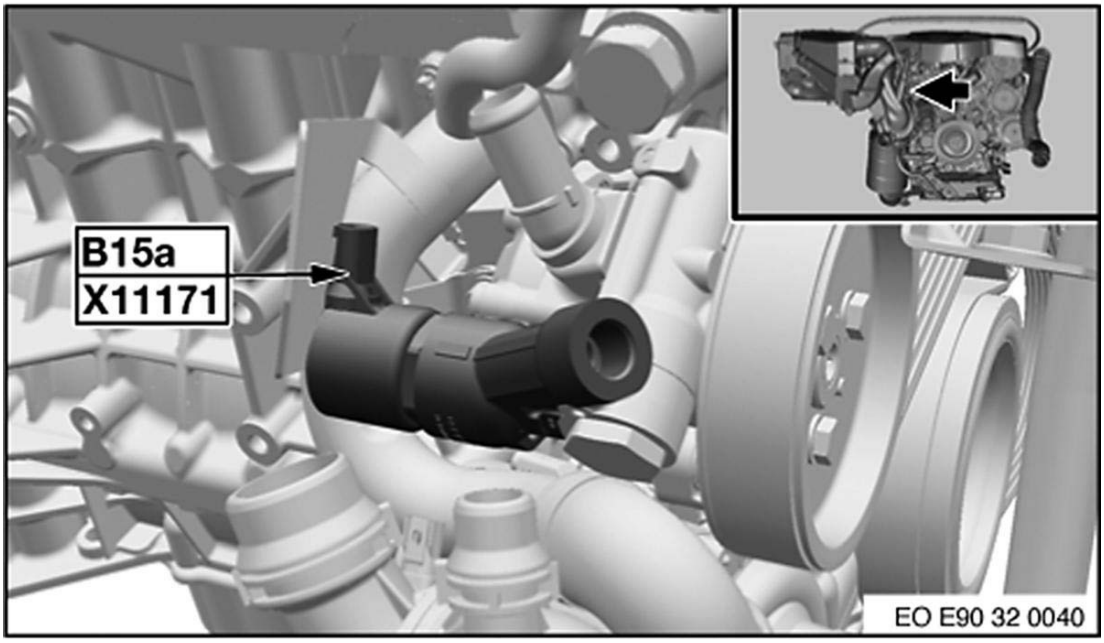

Fig. 40: Front Of Engine
Courtesy of BMW OF NORTH AMERICA, INC.

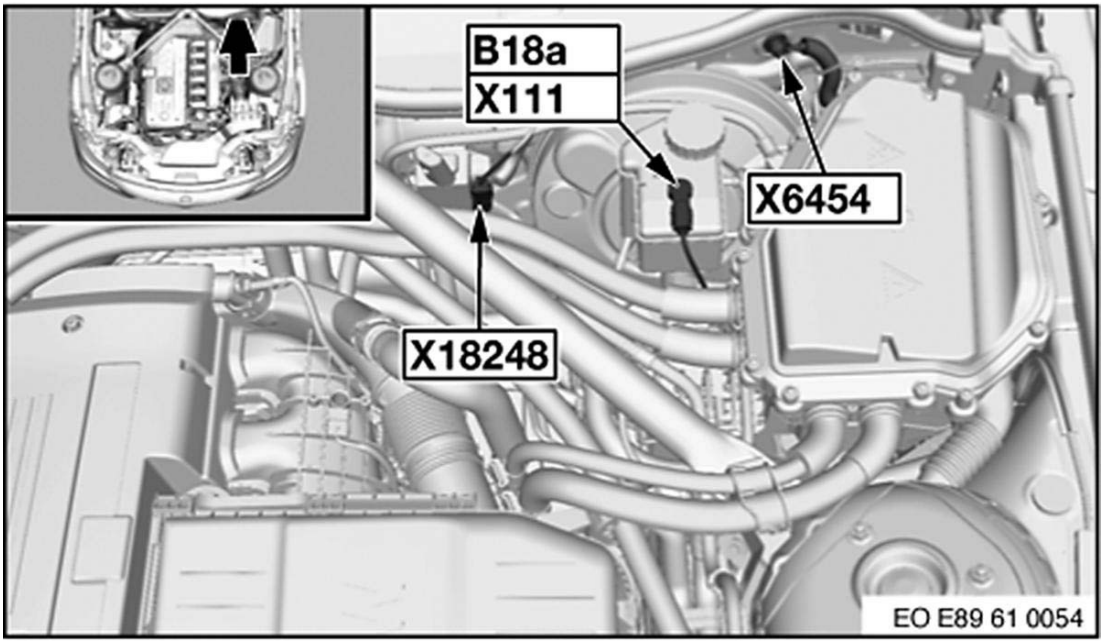

Fig. 41: Left Rear Of Engine Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

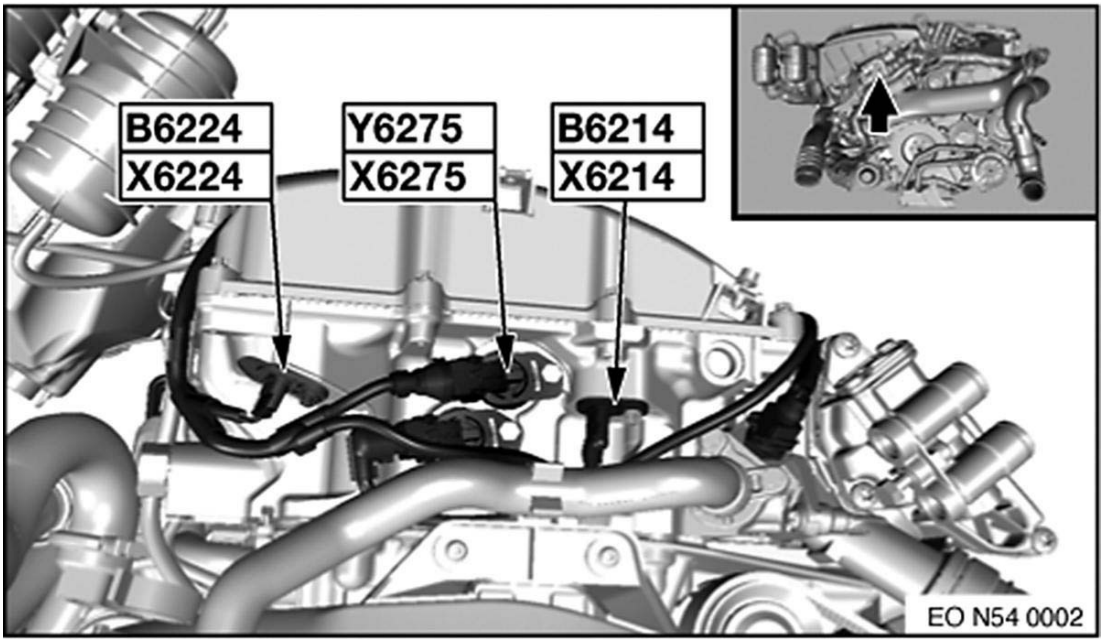

Fig. 42: Front Of Engine
Courtesy of BMW OF NORTH AMERICA, INC.

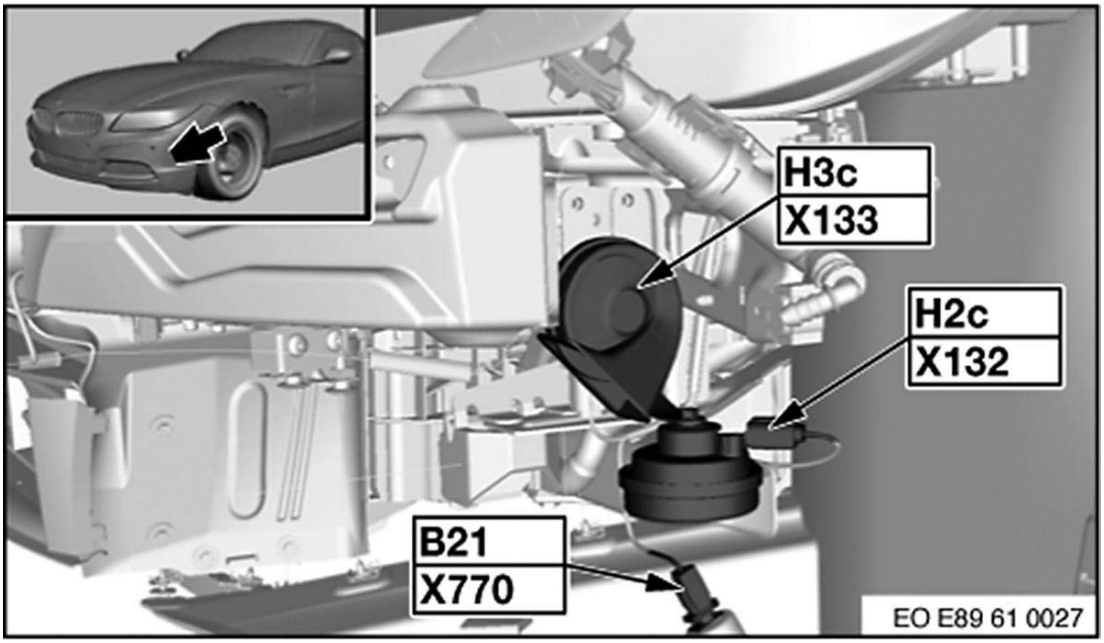

Fig. 43: Left Front Corner Of Vehicle
Courtesy of BMW OF NORTH AMERICA, INC.

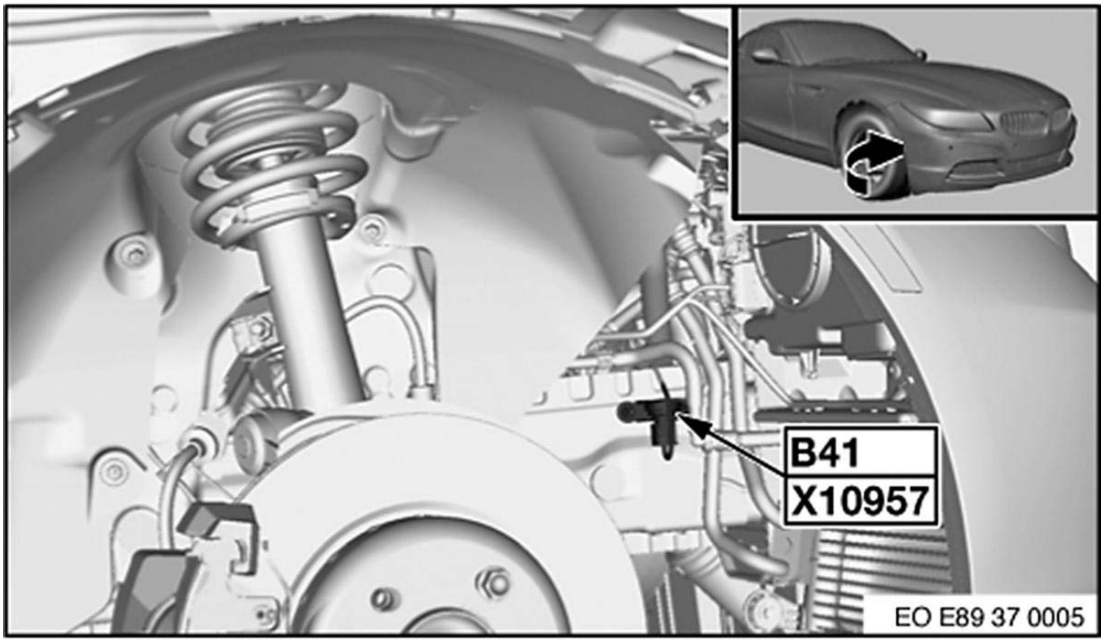

Fig. 44: Right Front Wheelwell
Courtesy of BMW OF NORTH AMERICA, INC.

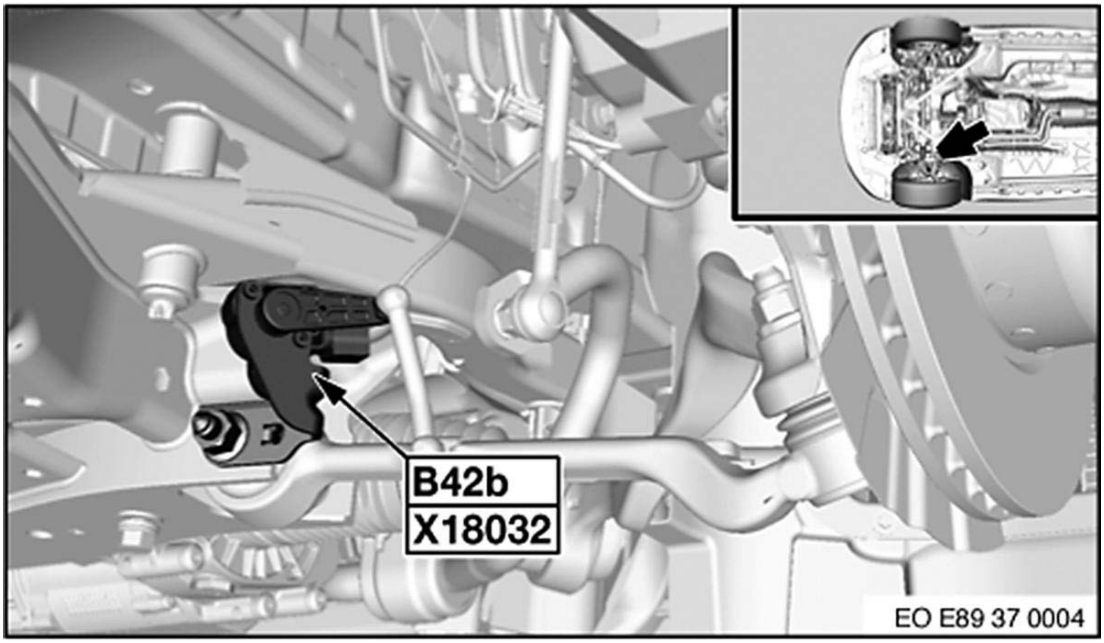

Fig. 45: Lower Right Front Of Vehicle
Courtesy of BMW OF NORTH AMERICA, INC.

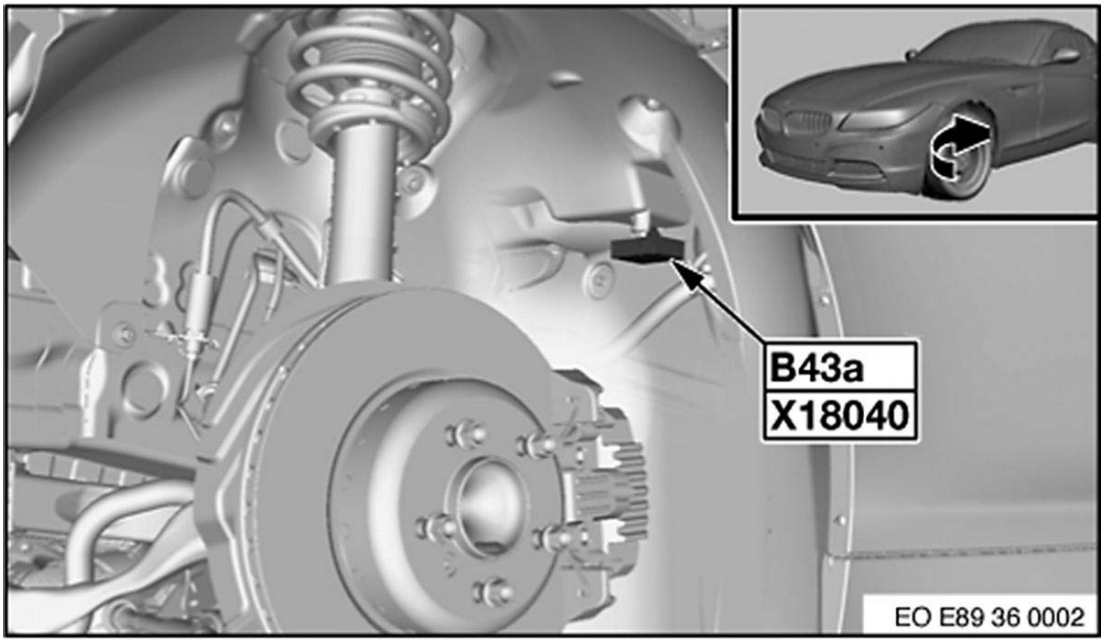

Fig. 46: Left Front Wheelwell
Courtesy of BMW OF NORTH AMERICA, INC.

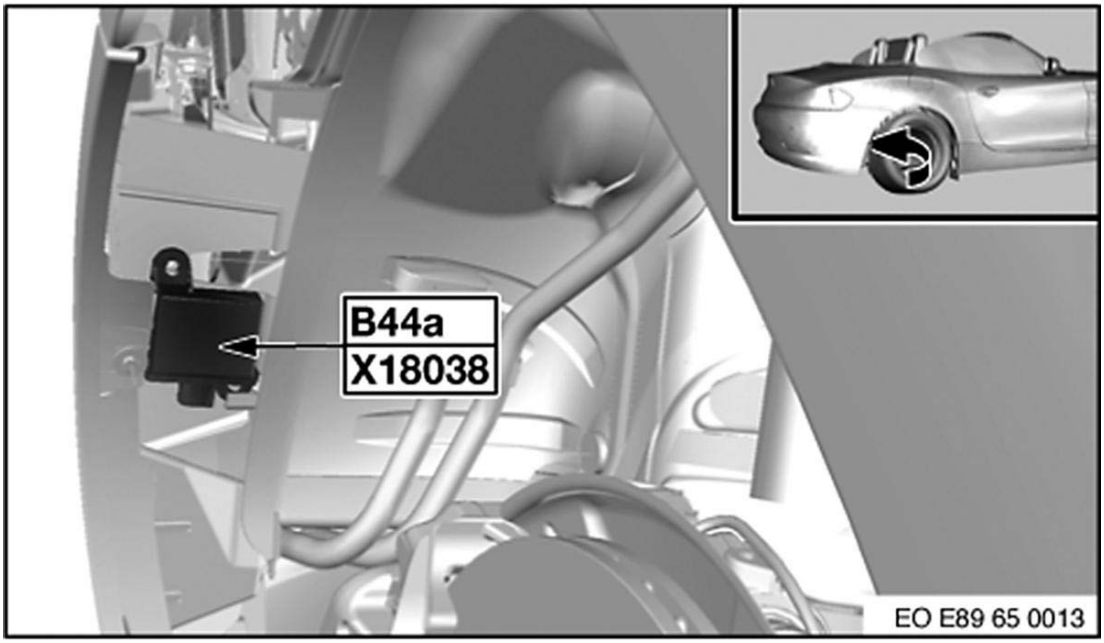

Fig. 47: Right Rear Wheelwell
Courtesy of BMW OF NORTH AMERICA, INC.

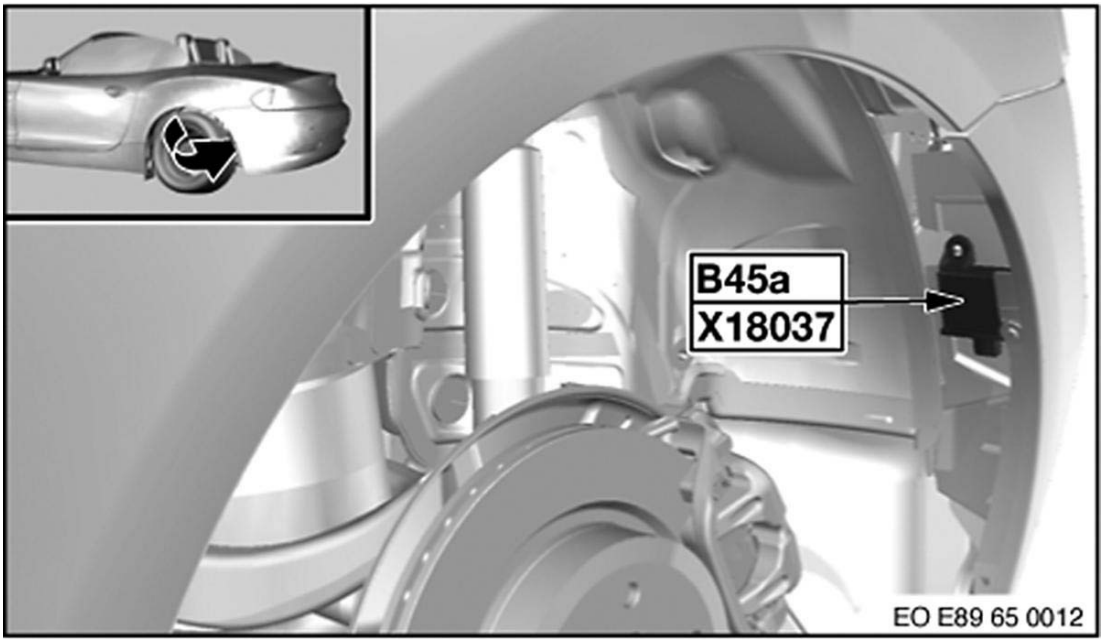

Fig. 48: Left Rear Wheelwell
Courtesy of BMW OF NORTH AMERICA, INC.

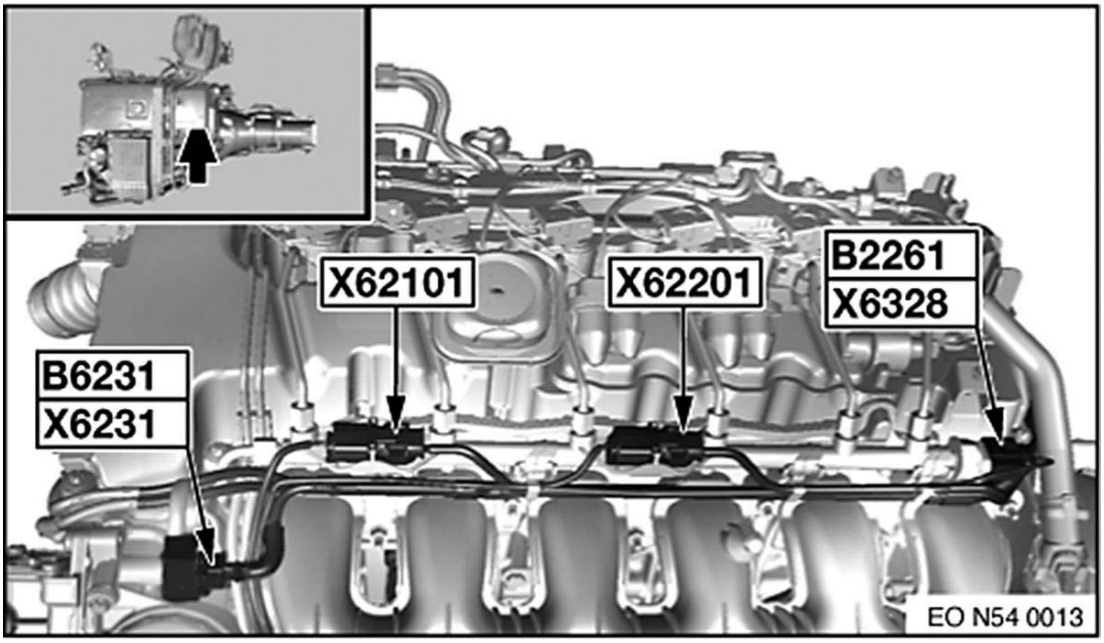

Fig. 49: Rear Of Engine
Courtesy of BMW OF NORTH AMERICA, INC.

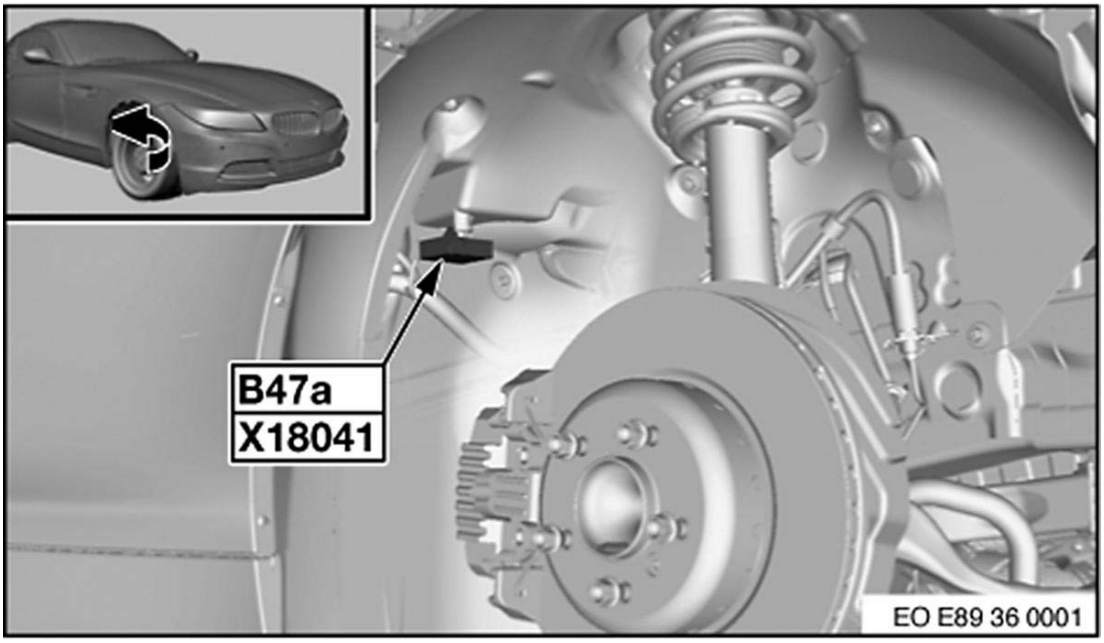

Fig. 50: Right Front Wheelwell
Courtesy of BMW OF NORTH AMERICA, INC.

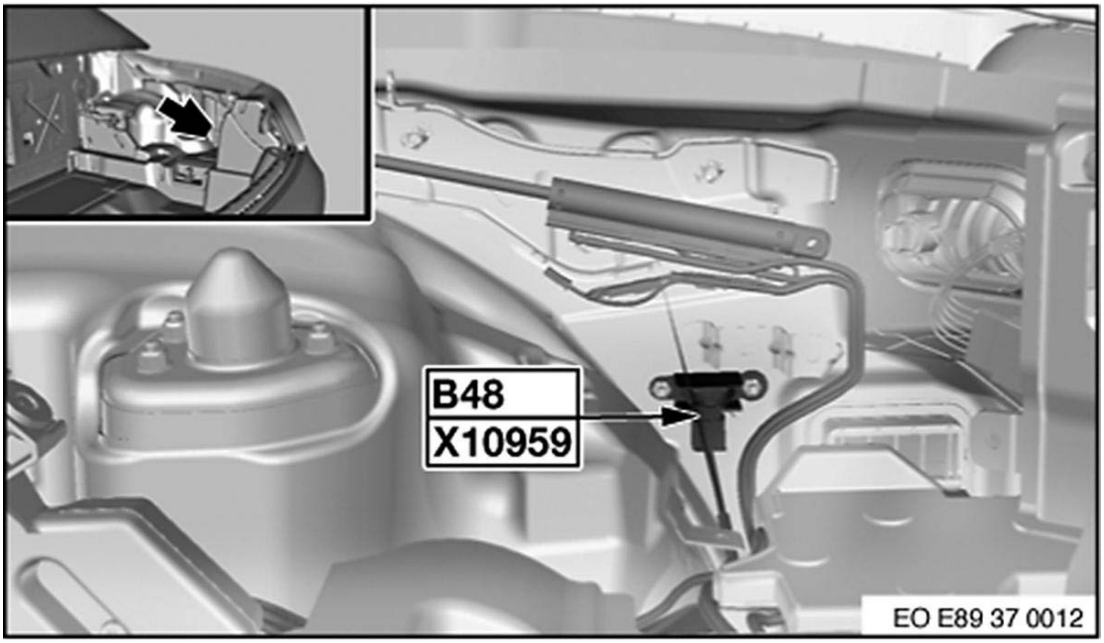

Fig. 51: Right Rear Luggage Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

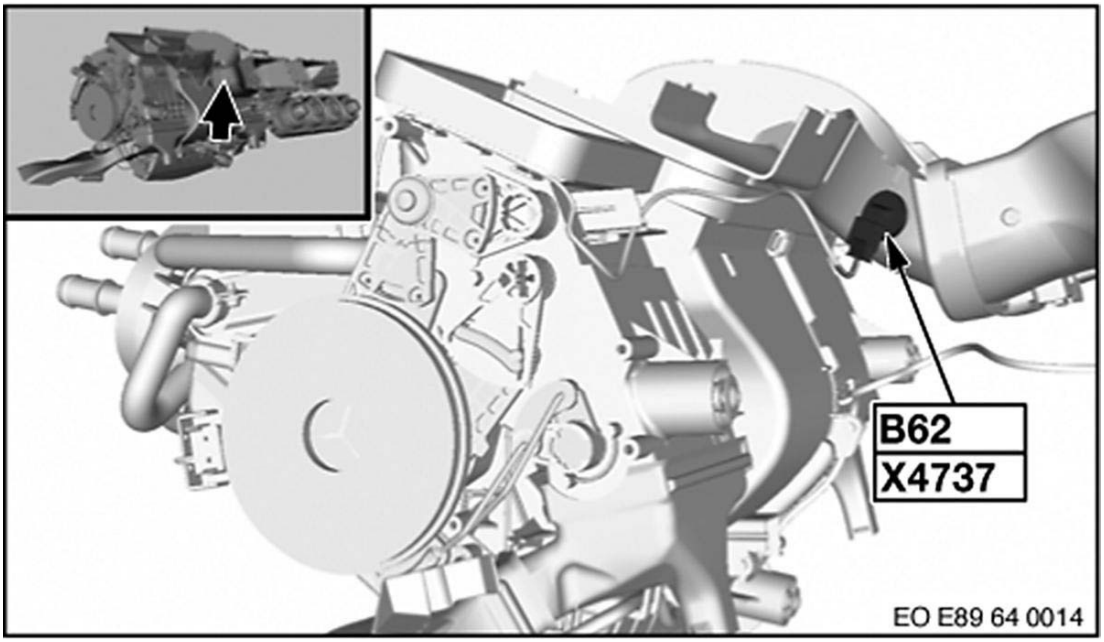

Fig. 52: HVAC Assembly
Courtesy of BMW OF NORTH AMERICA, INC.

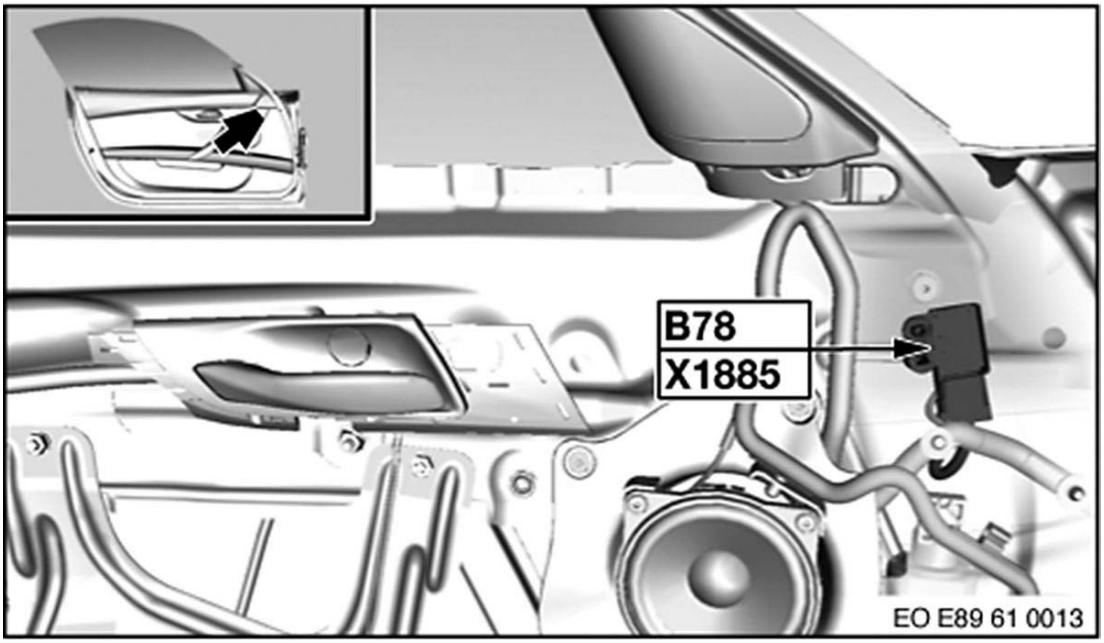

Fig. 53: Left Door
Courtesy of BMW OF NORTH AMERICA, INC.

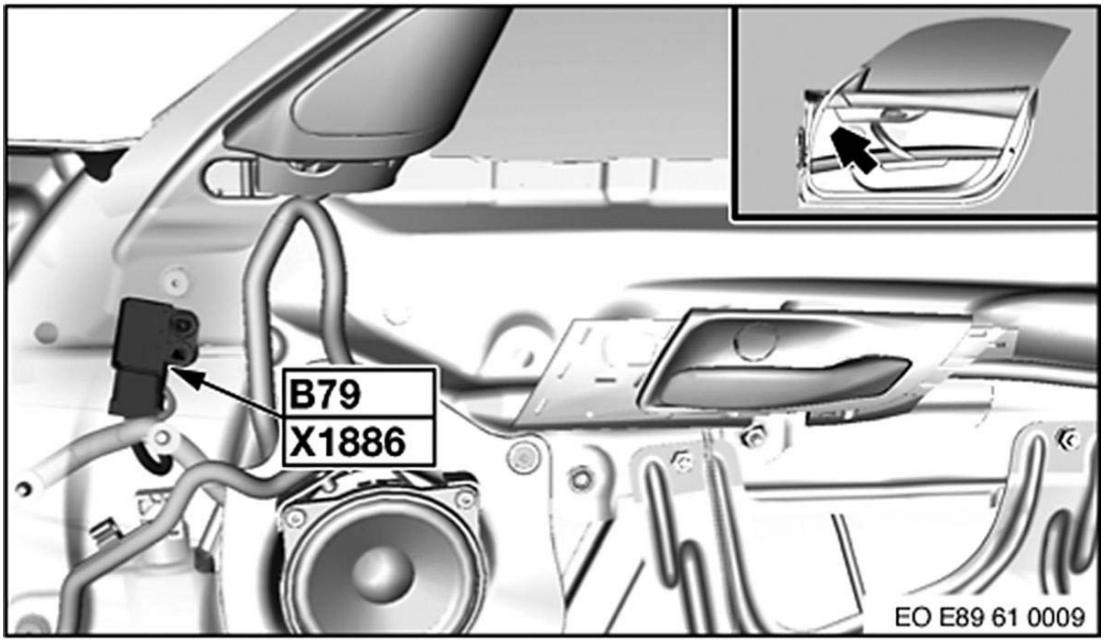

Fig. 54: Right Door
Courtesy of BMW OF NORTH AMERICA, INC.

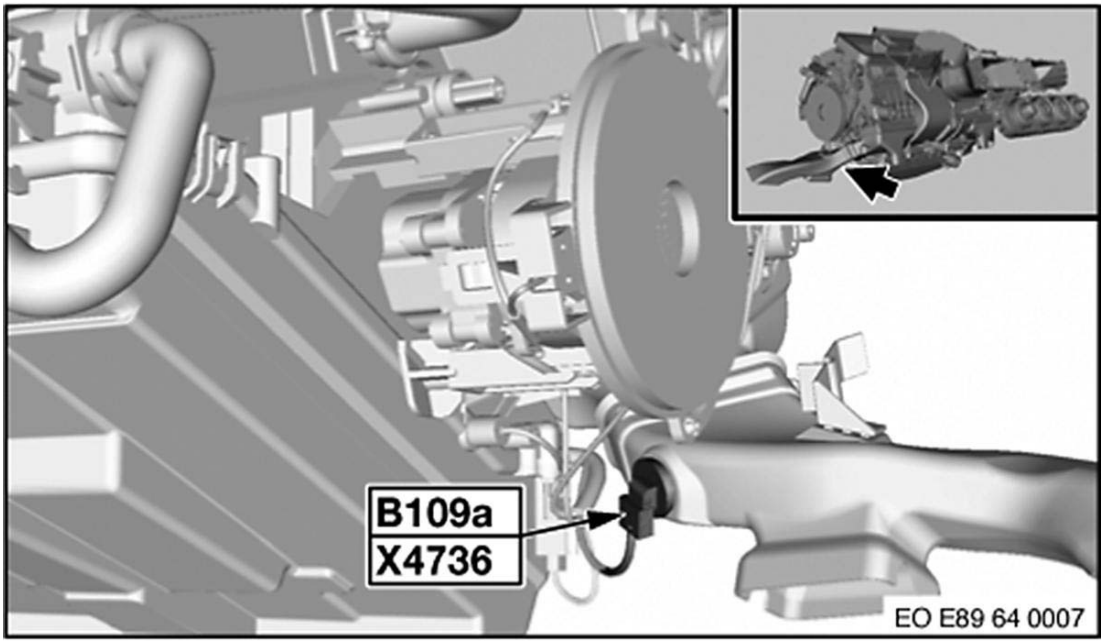

Fig. 55: HVAC Assembly
Courtesy of BMW OF NORTH AMERICA, INC.

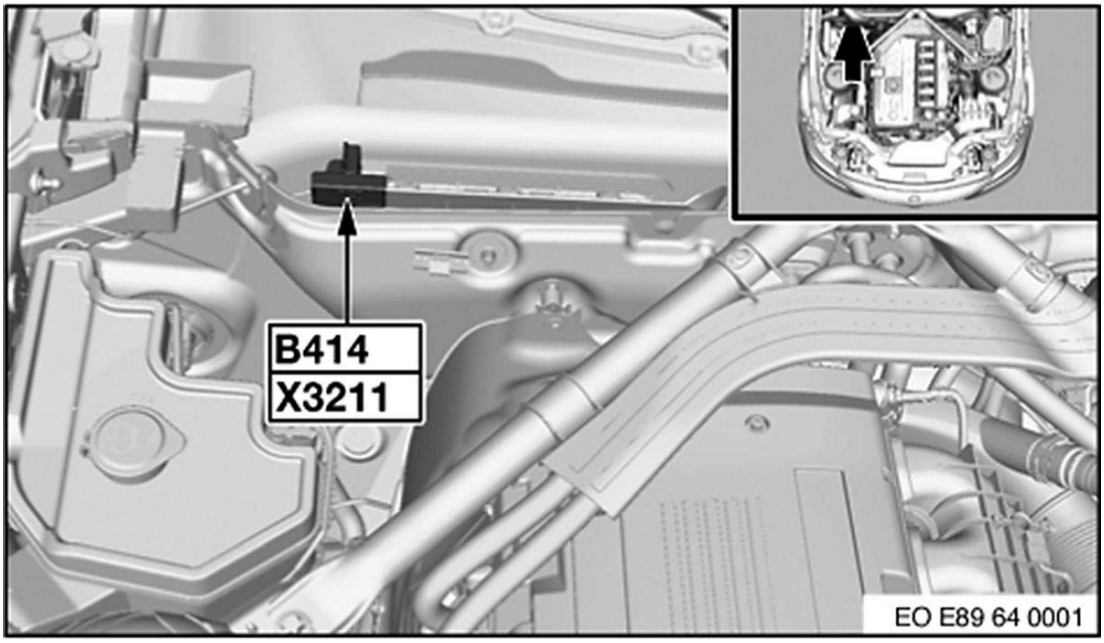

Fig. 56: Right Rear Of Engine Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

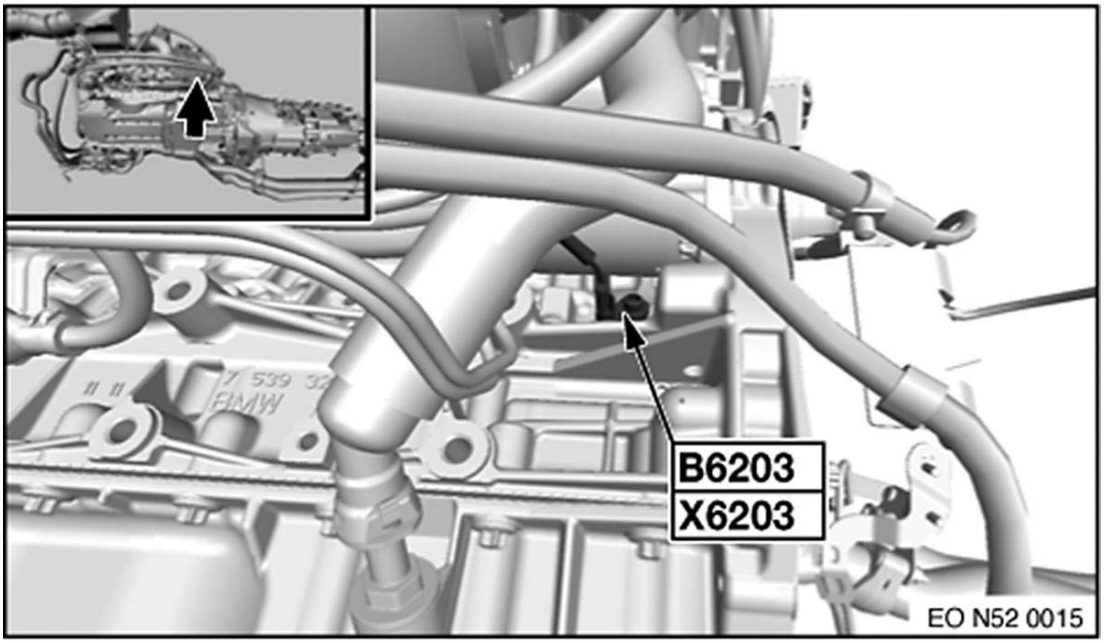

Fig. 57: Left Side Of Engine
Courtesy of BMW OF NORTH AMERICA, INC.

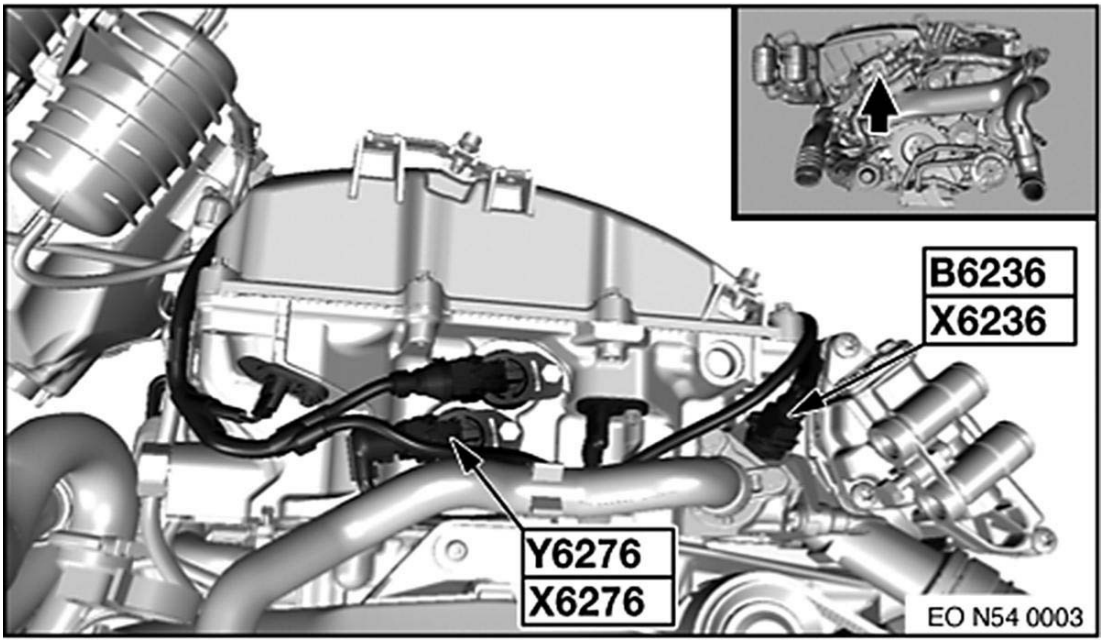

Fig. 58: Front Of Engine
Courtesy of BMW OF NORTH AMERICA, INC.

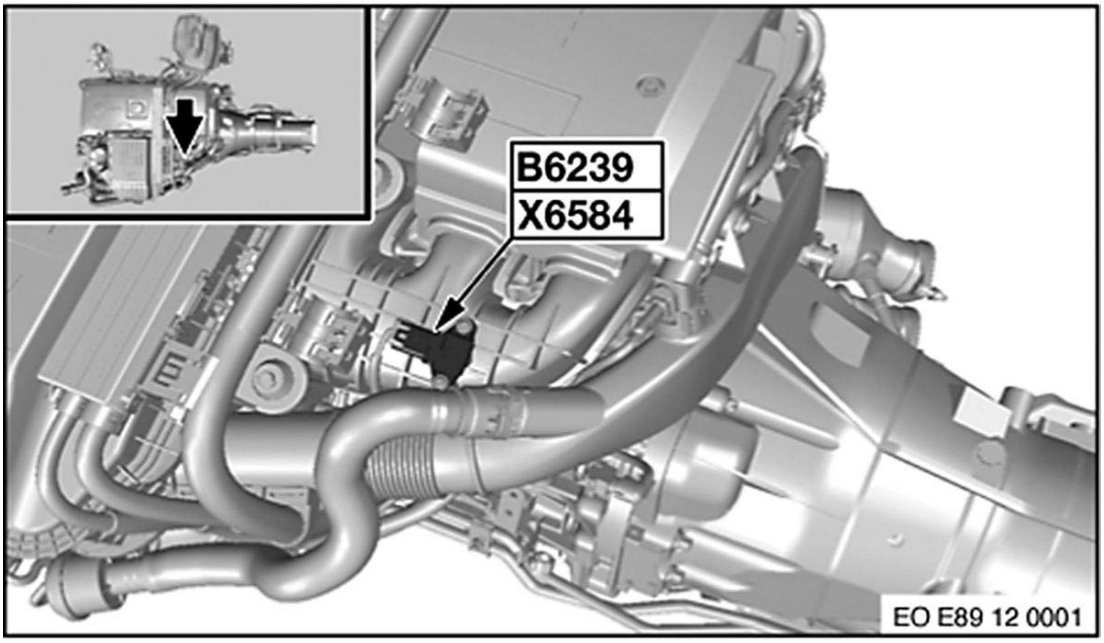

Fig. 59: Left Side Of Engine
Courtesy of BMW OF NORTH AMERICA, INC.

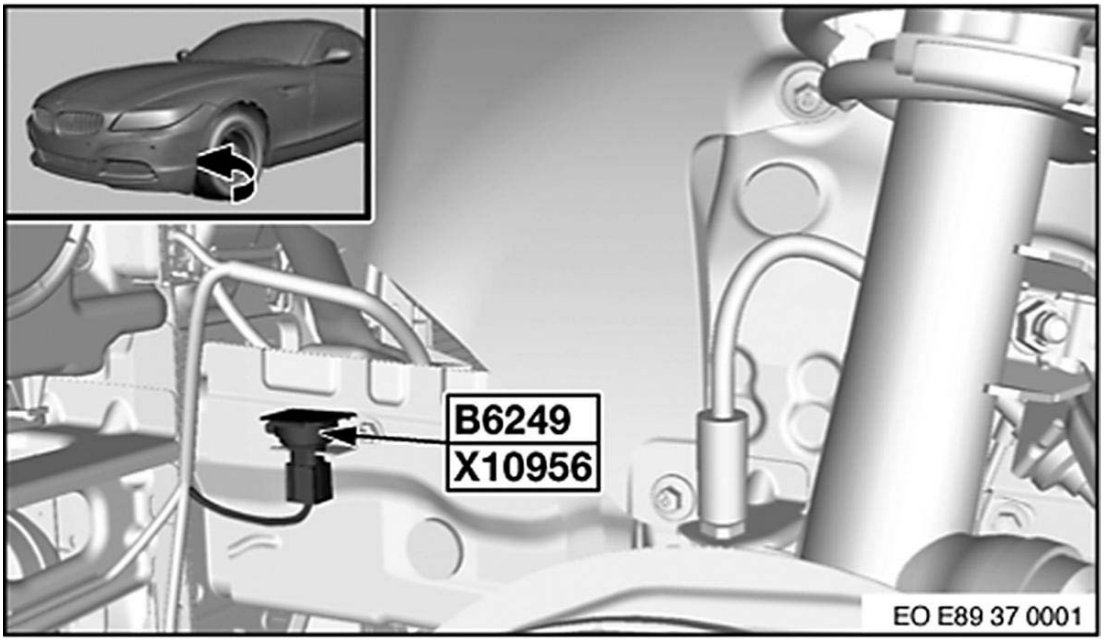

Fig. 60: Left Front Of Vehicle
Courtesy of BMW OF NORTH AMERICA, INC.

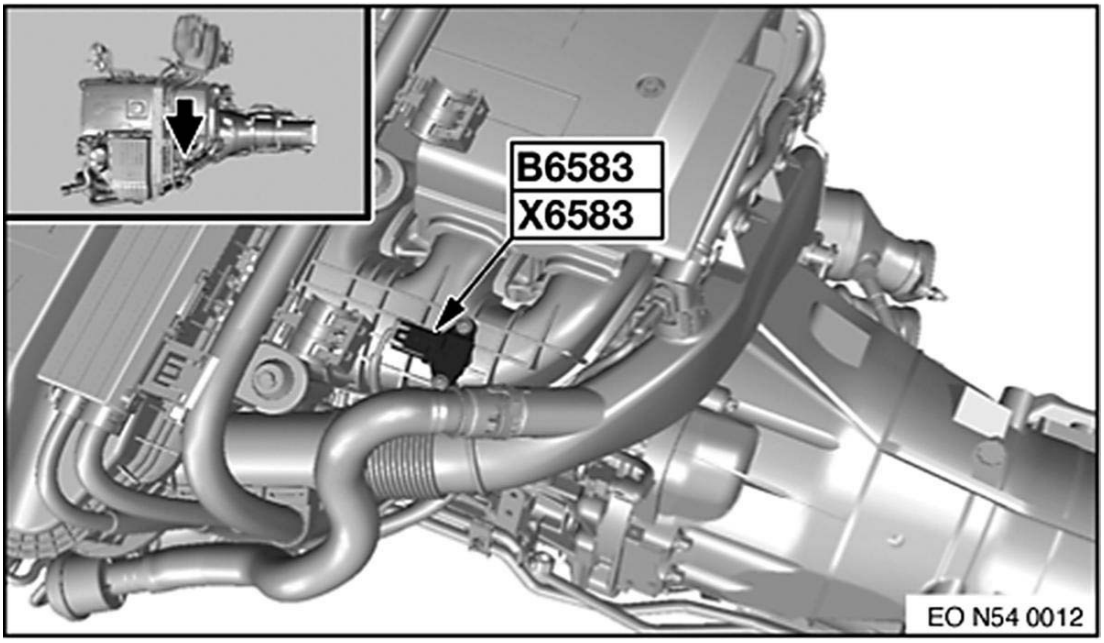

Fig. 61: Left Side Of Engine
Courtesy of BMW OF NORTH AMERICA, INC.

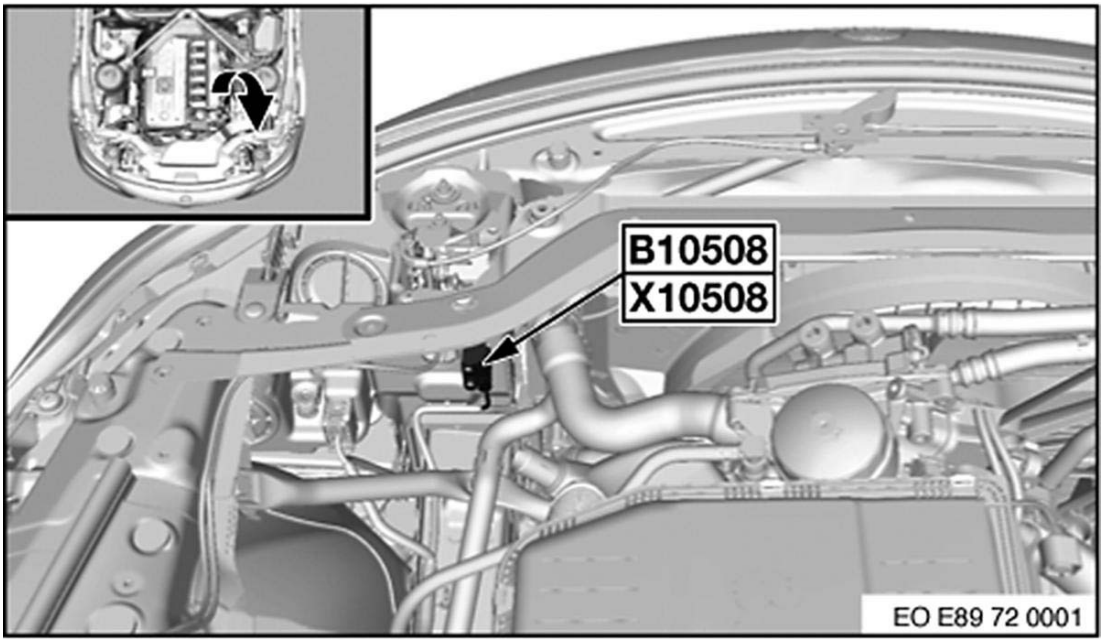

Fig. 62: Left Front Of Engine Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

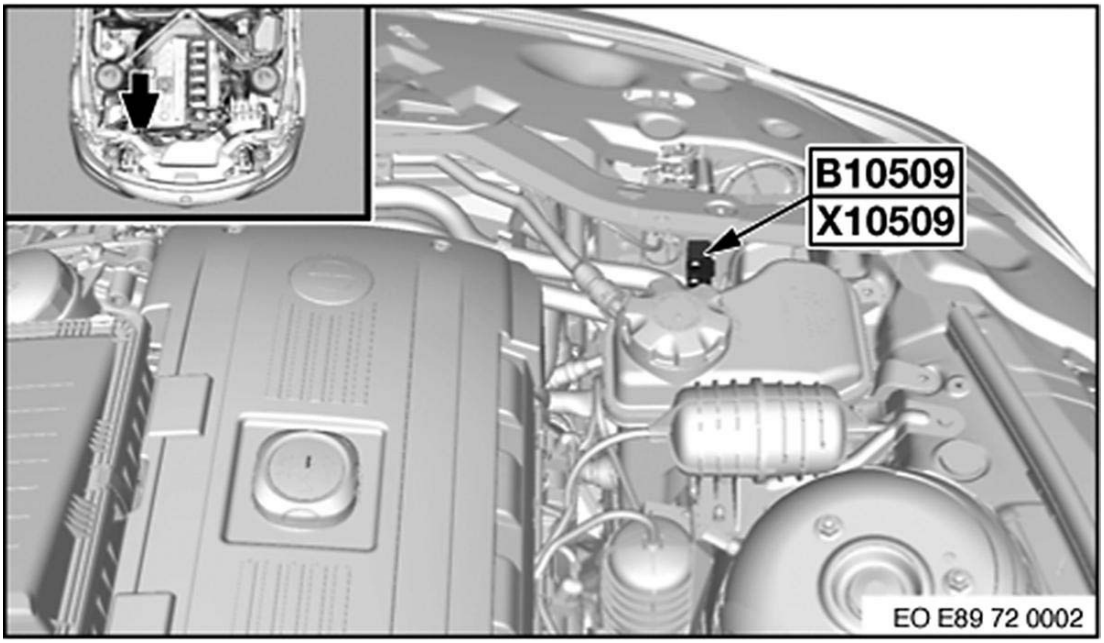

Fig. 63: Right Front Of Engine Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

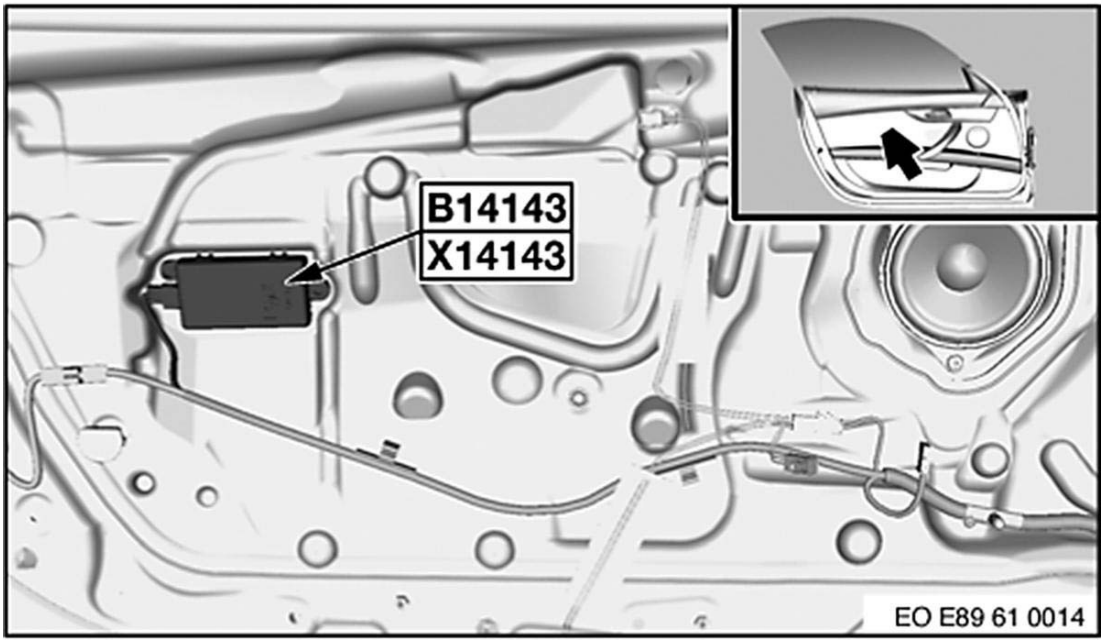

Fig. 64: Driver's Door (Passenger's Similar)
Courtesy of BMW OF NORTH AMERICA, INC.

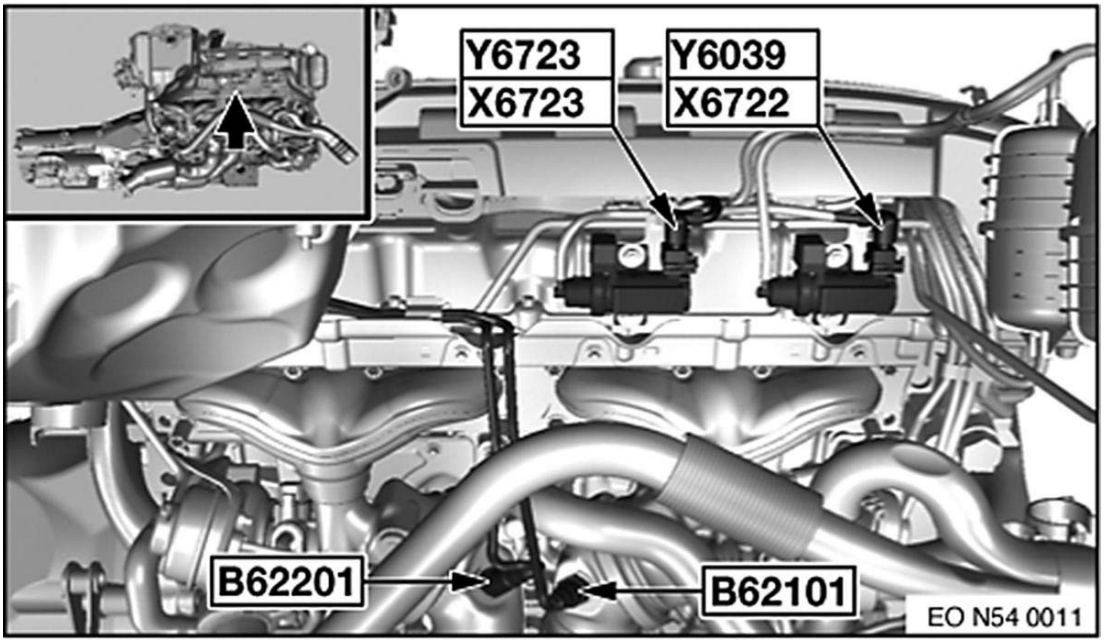

Fig. 65: Right Side Of Engine
Courtesy of BMW OF NORTH AMERICA, INC.

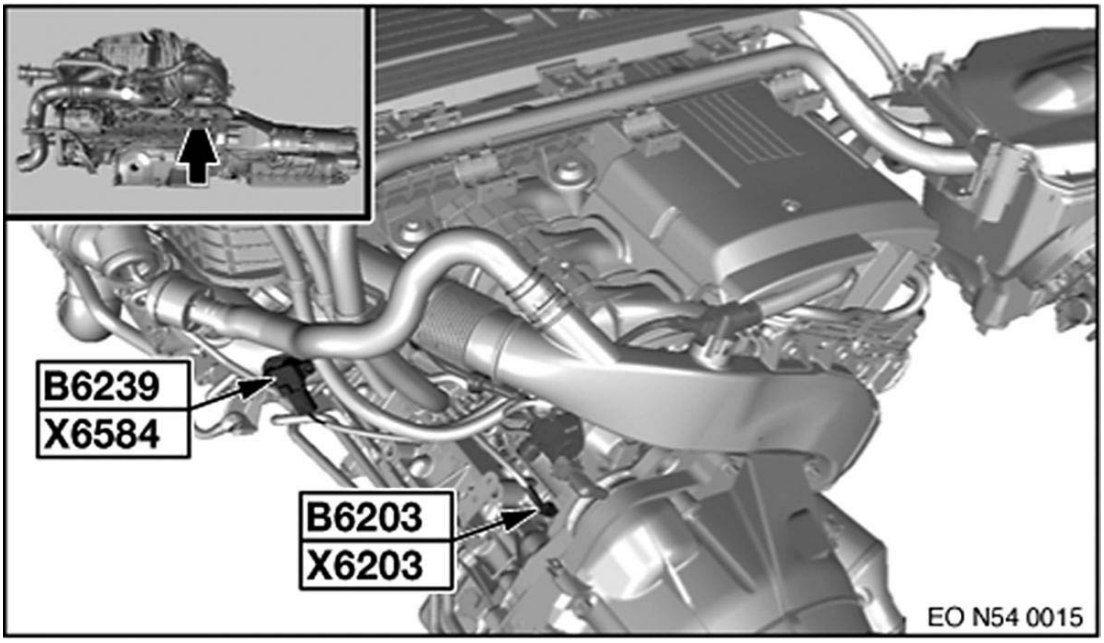

Fig. 66: Left Rear Of Engine
Courtesy of BMW OF NORTH AMERICA, INC.

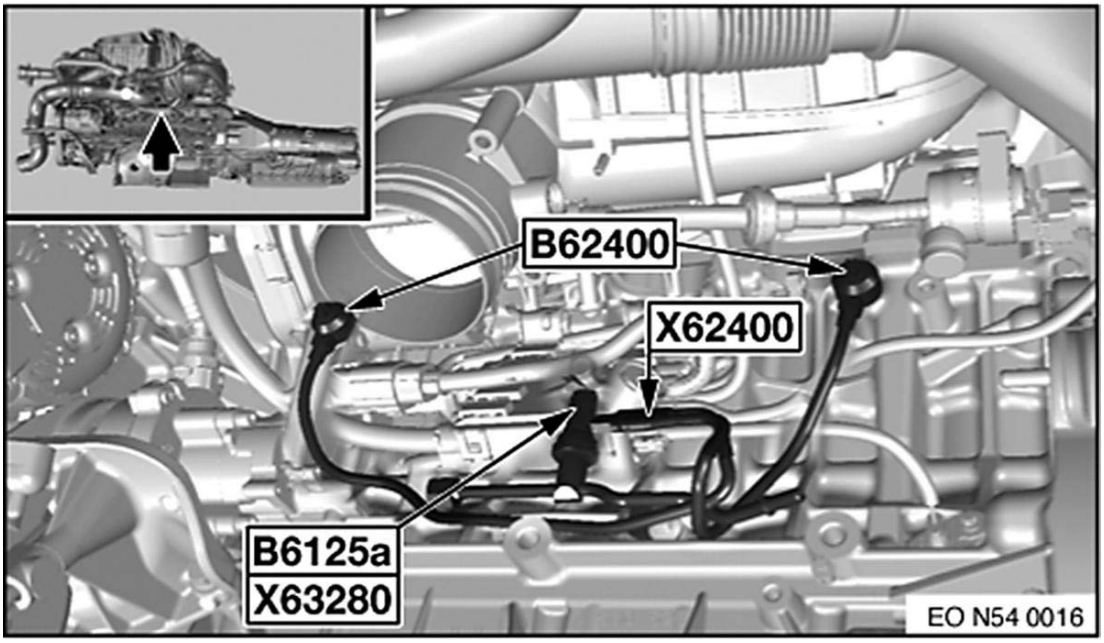

Fig. 67: Left Side Of Engine
Courtesy of BMW OF NORTH AMERICA, INC.

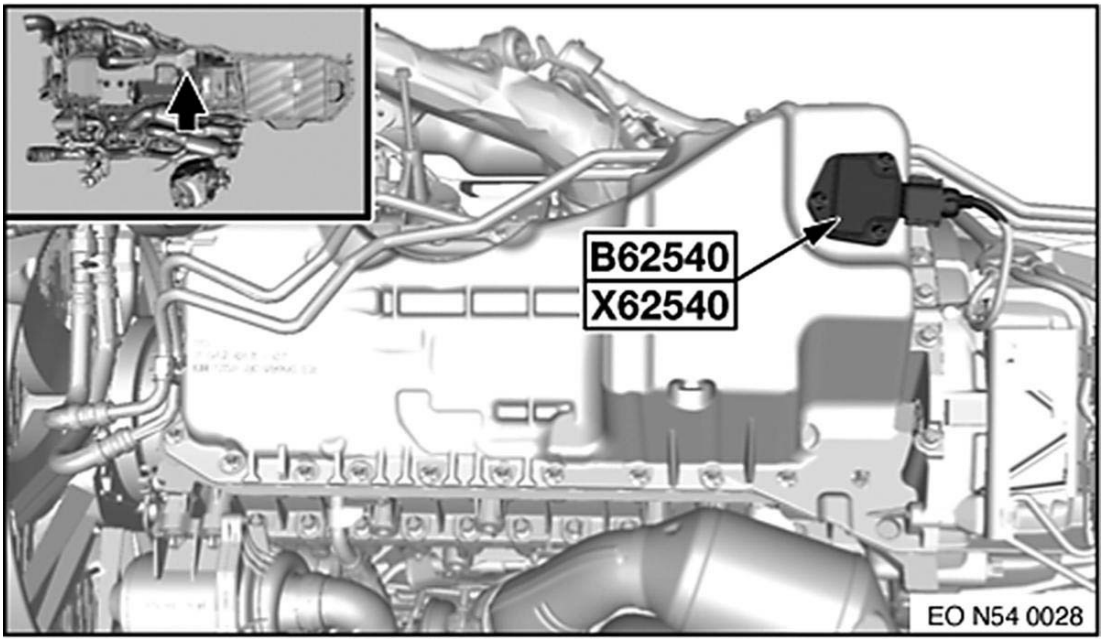

Fig. 68: Bottom Of Oil Pan
Courtesy of BMW OF NORTH AMERICA, INC.

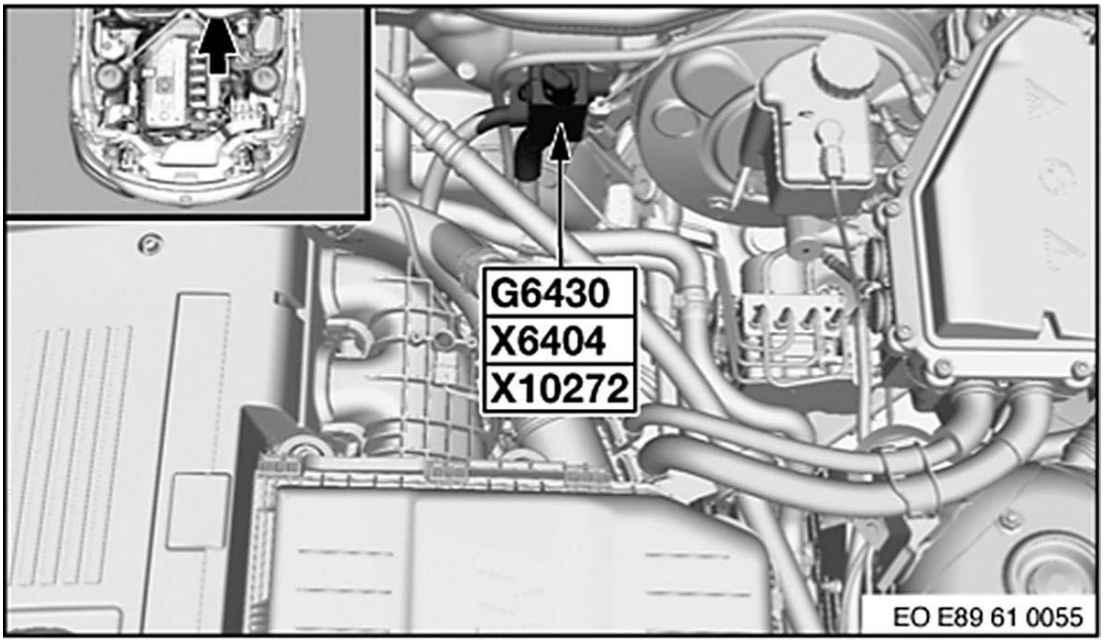

Fig. 69: Left Rear Of Engine Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

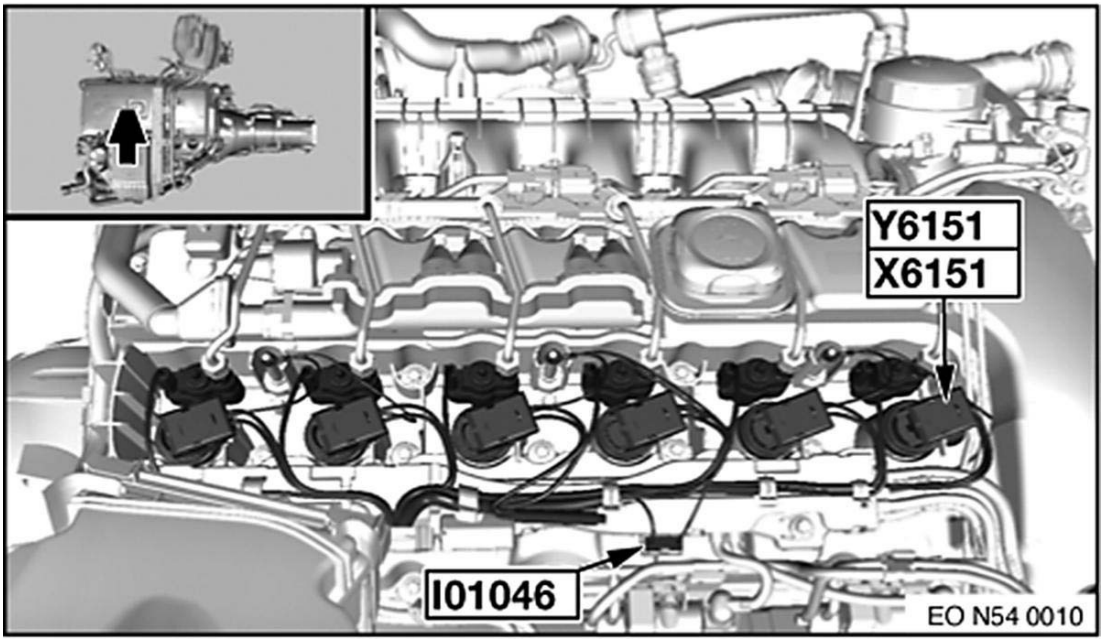

Fig. 70: Top Left Of Engine
Courtesy of BMW OF NORTH AMERICA, INC.

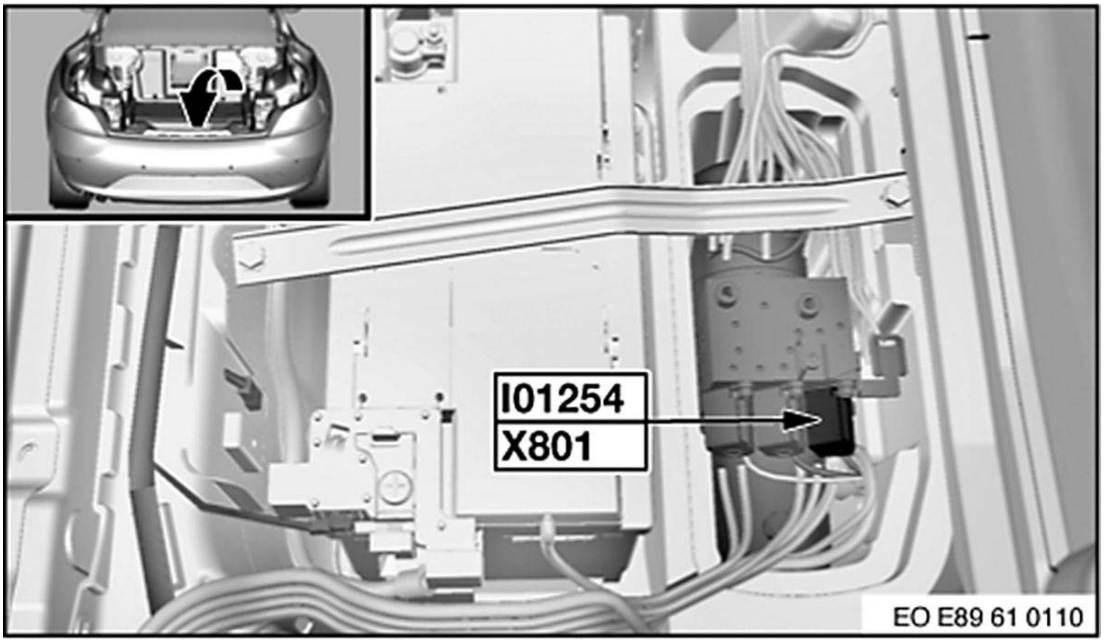

Fig. 71: Luggage Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

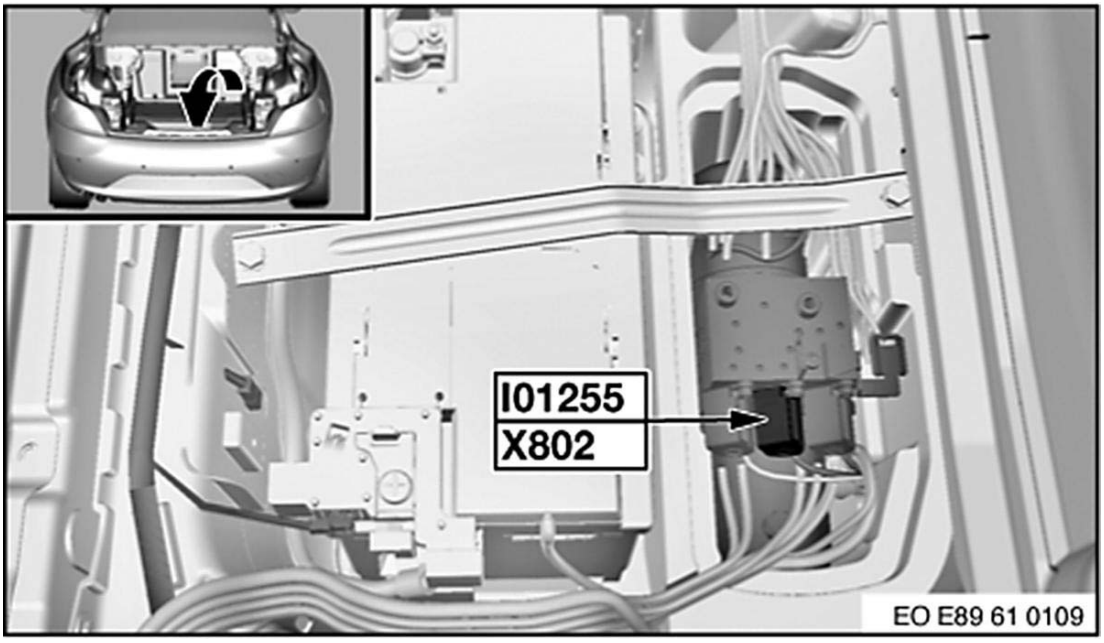

Fig. 72: Luggage Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

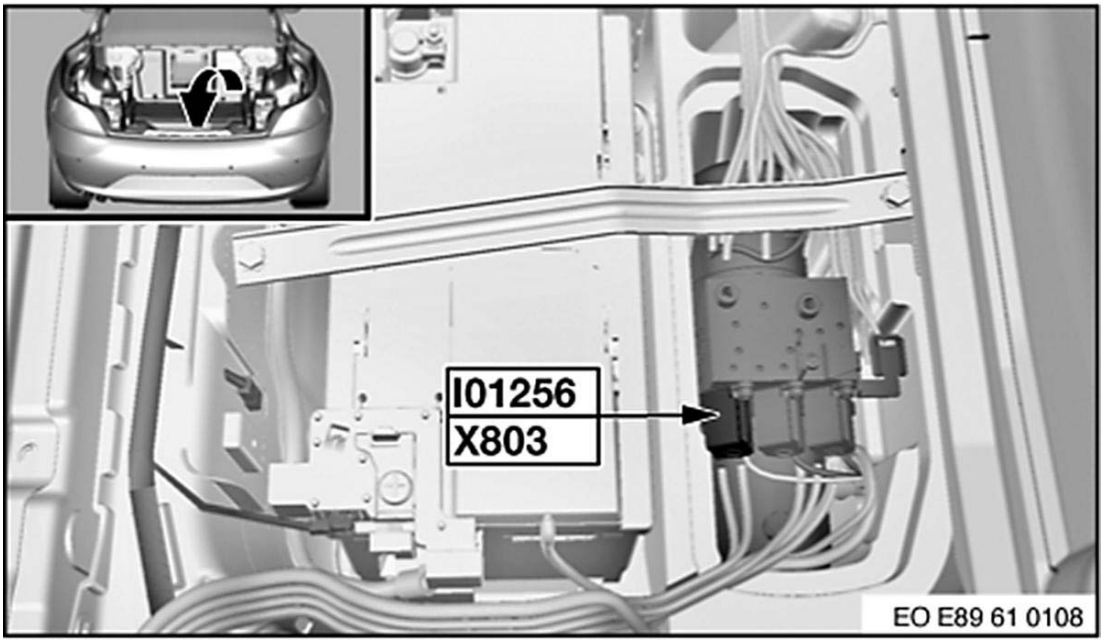

Fig. 73: Luggage Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

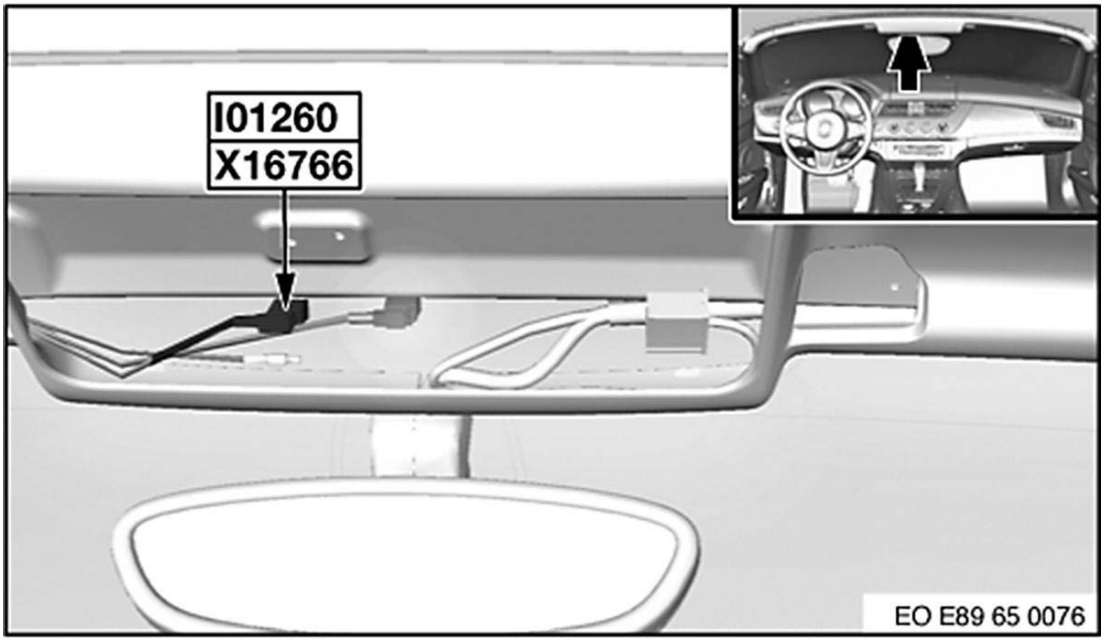

Fig. 74: Center Front Of Roof
Courtesy of BMW OF NORTH AMERICA, INC.

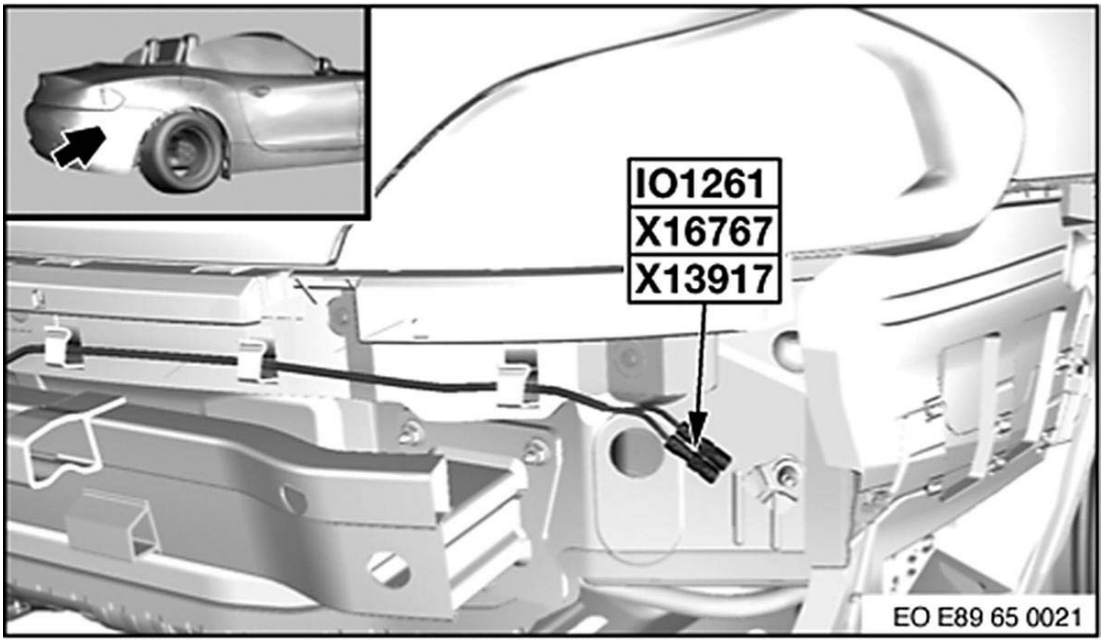

Fig. 75: Right End Of Rear Bumper
Courtesy of BMW OF NORTH AMERICA, INC.

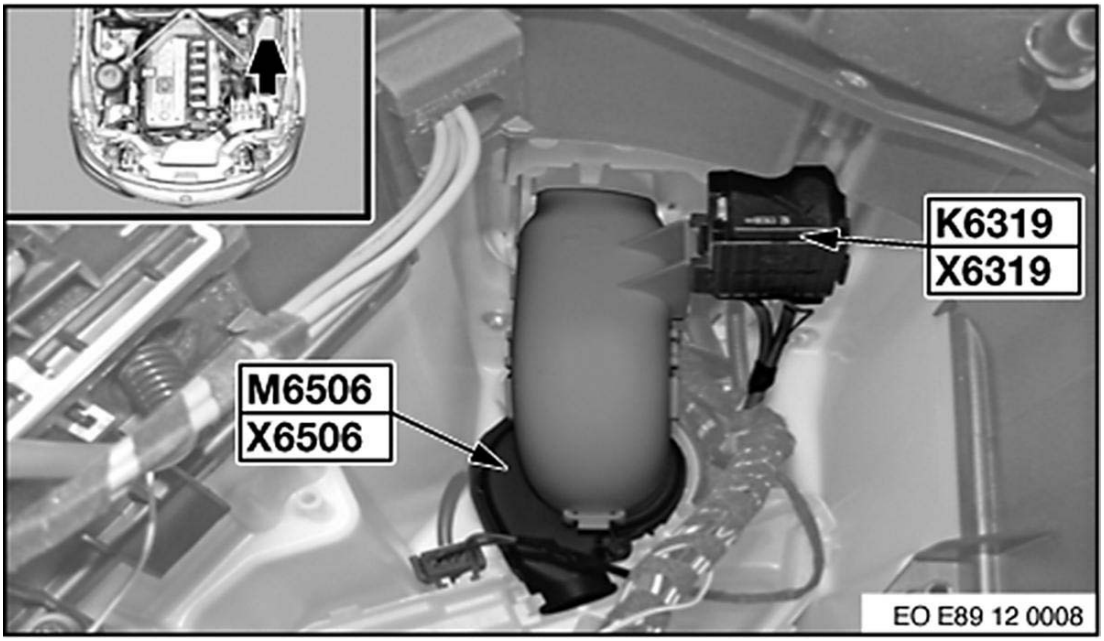

Fig. 76: Left Rear Of Engine Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

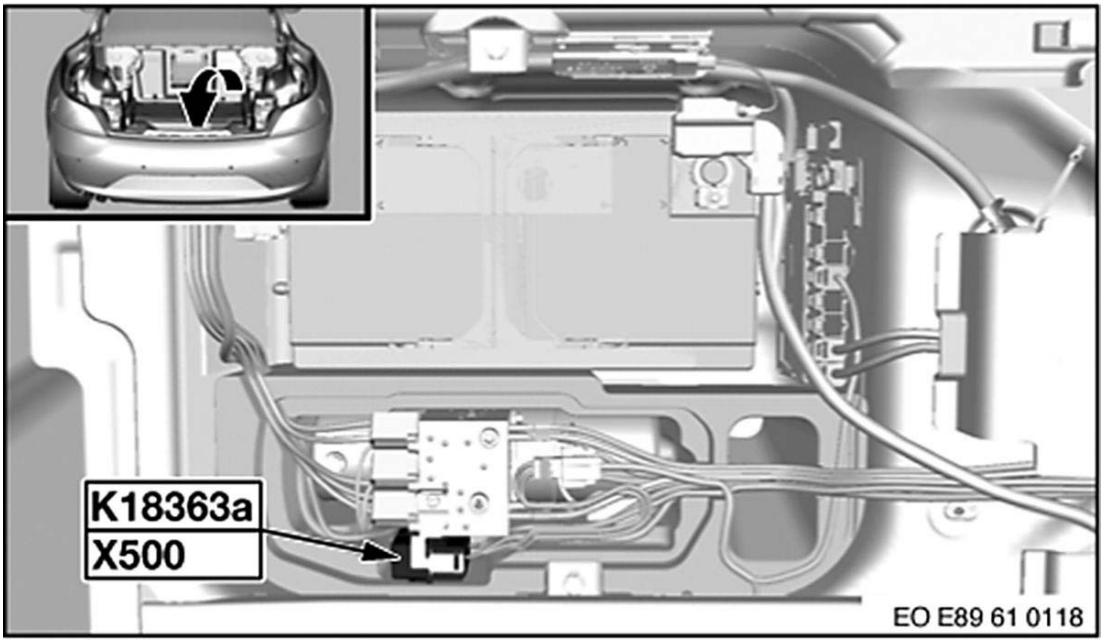

Fig. 77: Luggage Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

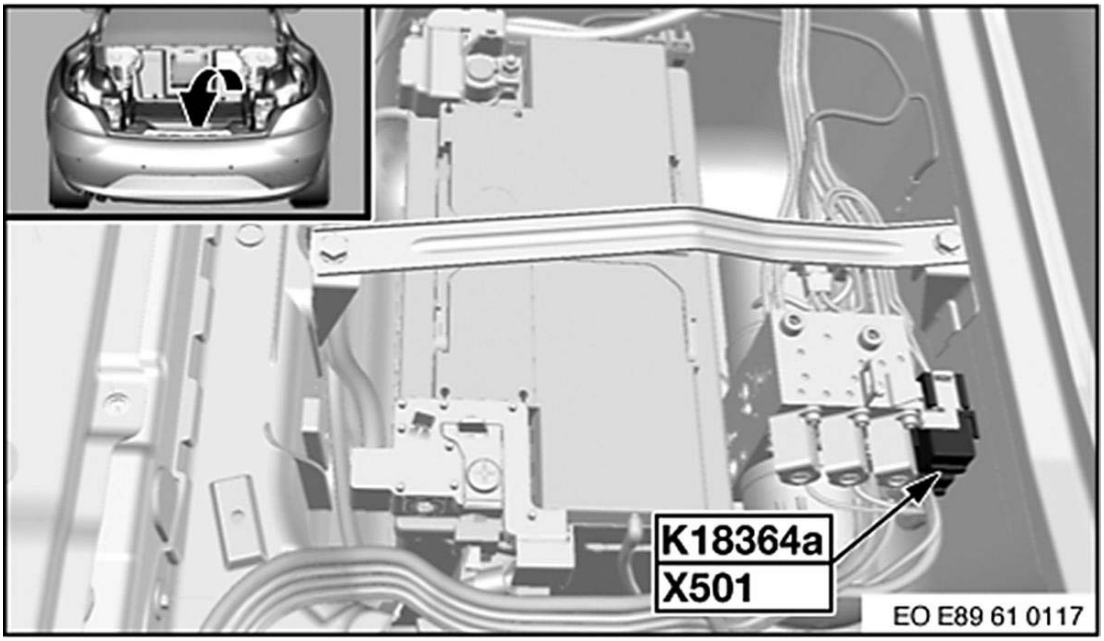

Fig. 78: Luggage Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

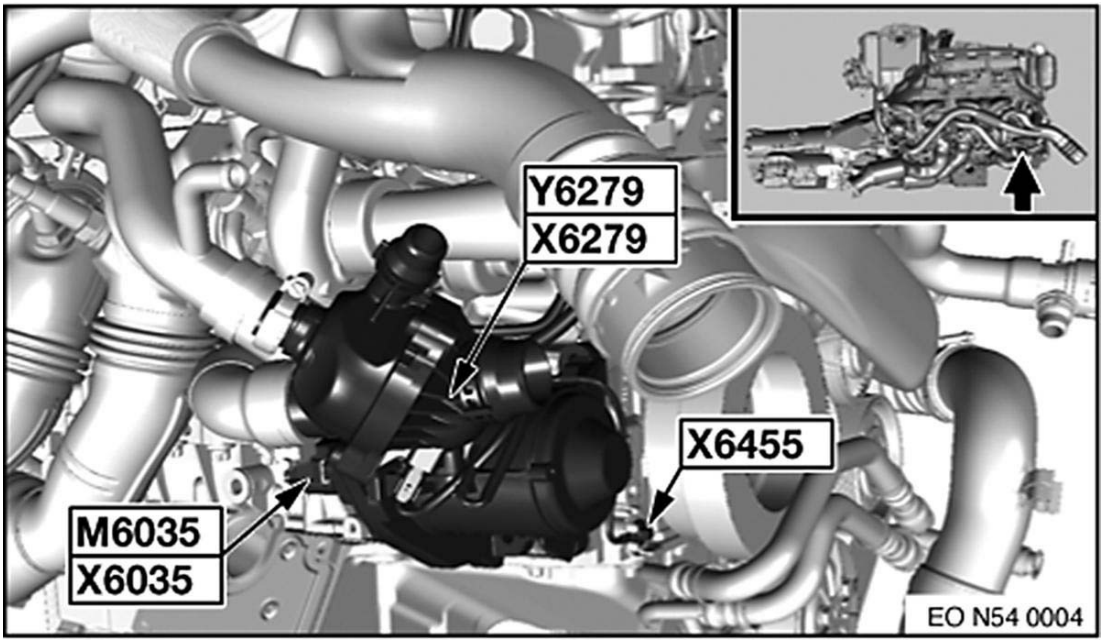

Fig. 79: Right Side Of Engine
Courtesy of BMW OF NORTH AMERICA, INC.

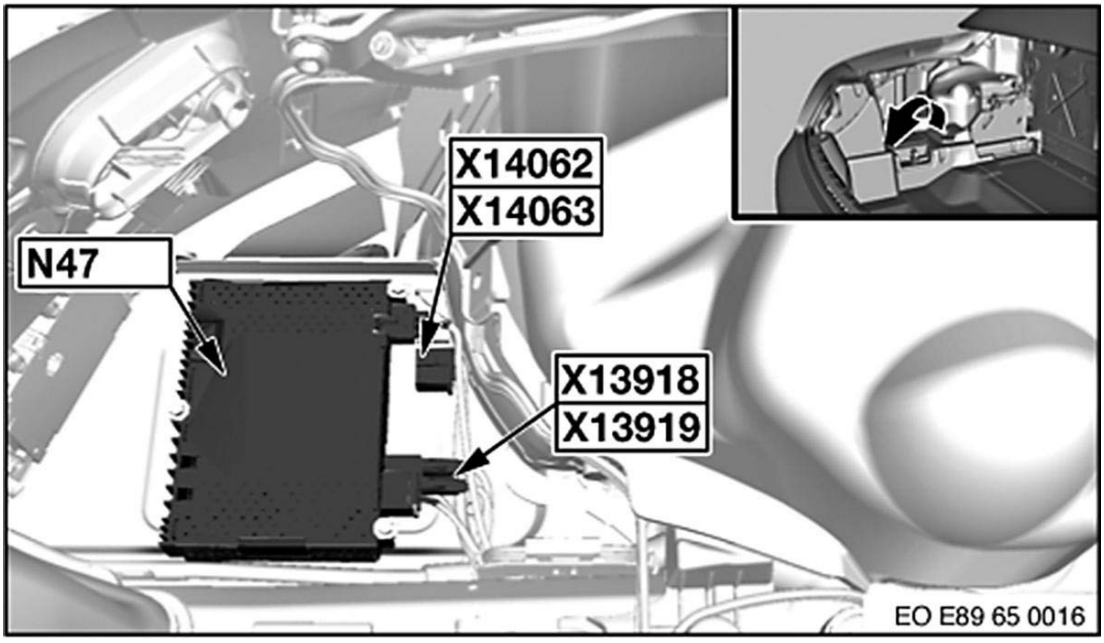

Fig. 80: Left Rear Of Luggage Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

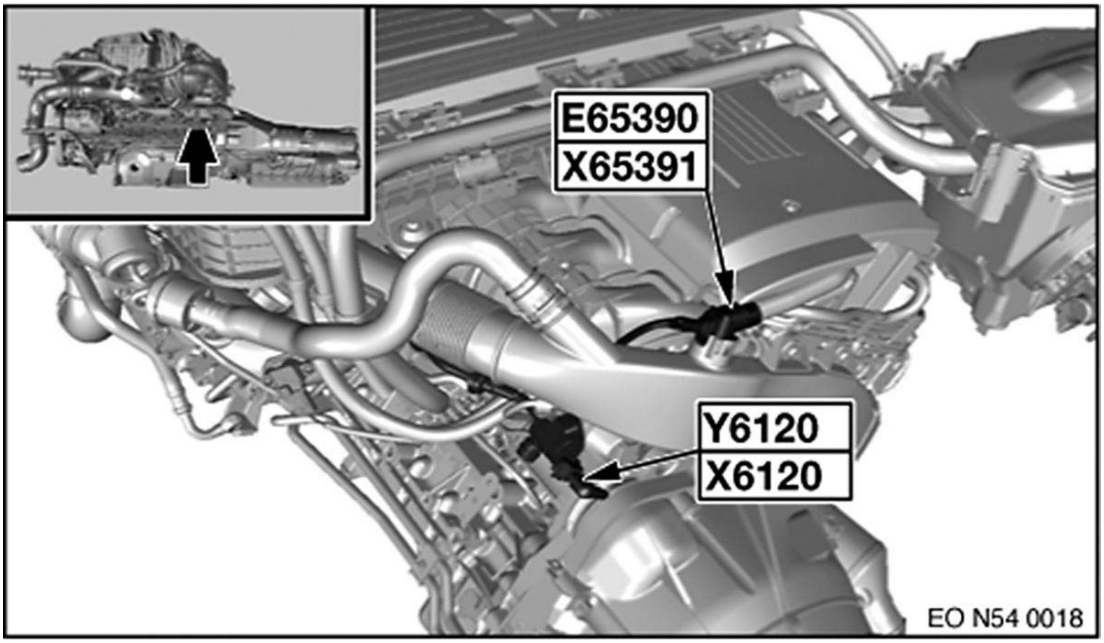

Fig. 81: Left Rear Of Engine
Courtesy of BMW OF NORTH AMERICA, INC.

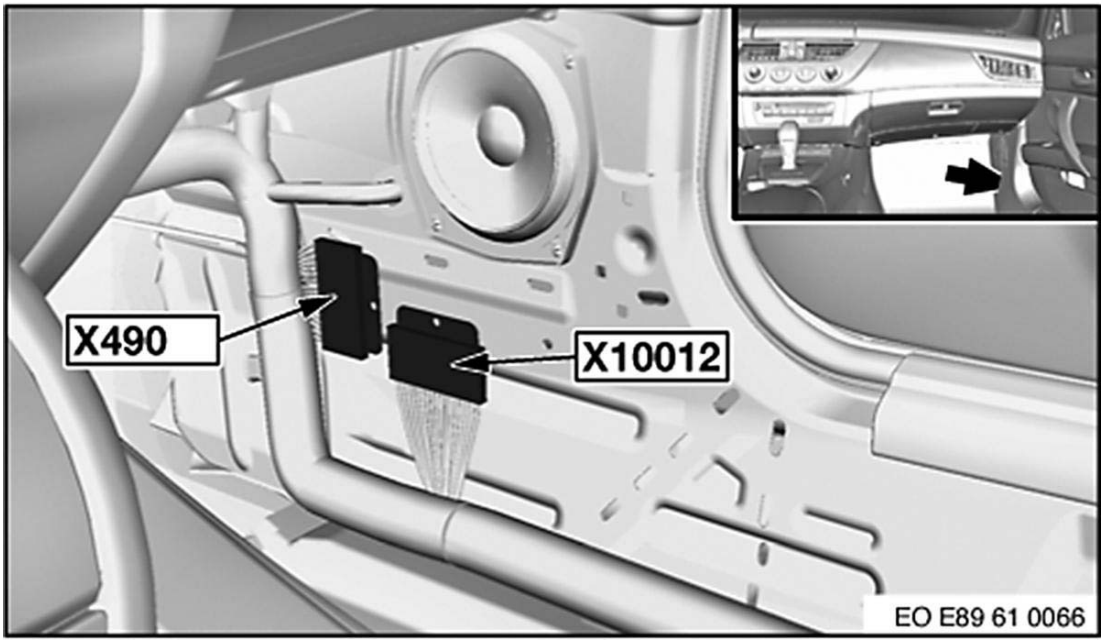

Fig. 82: Right Kick Panel
Courtesy of BMW OF NORTH AMERICA, INC.

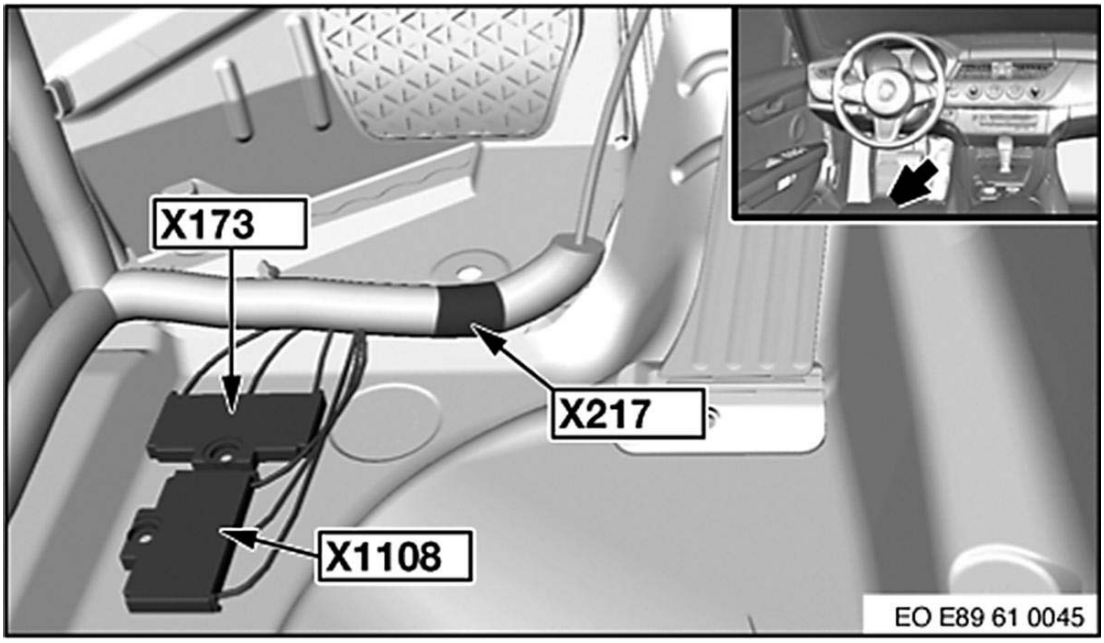

Fig. 83: Left Footwell
Courtesy of BMW OF NORTH AMERICA, INC.

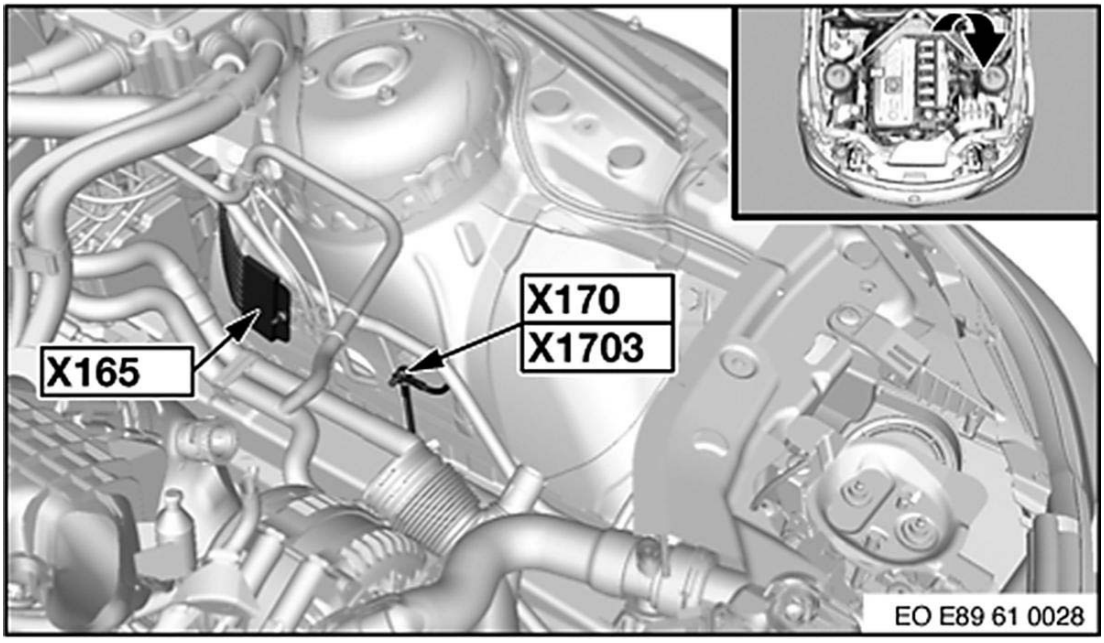

Fig. 84: Left Side Of Engine Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

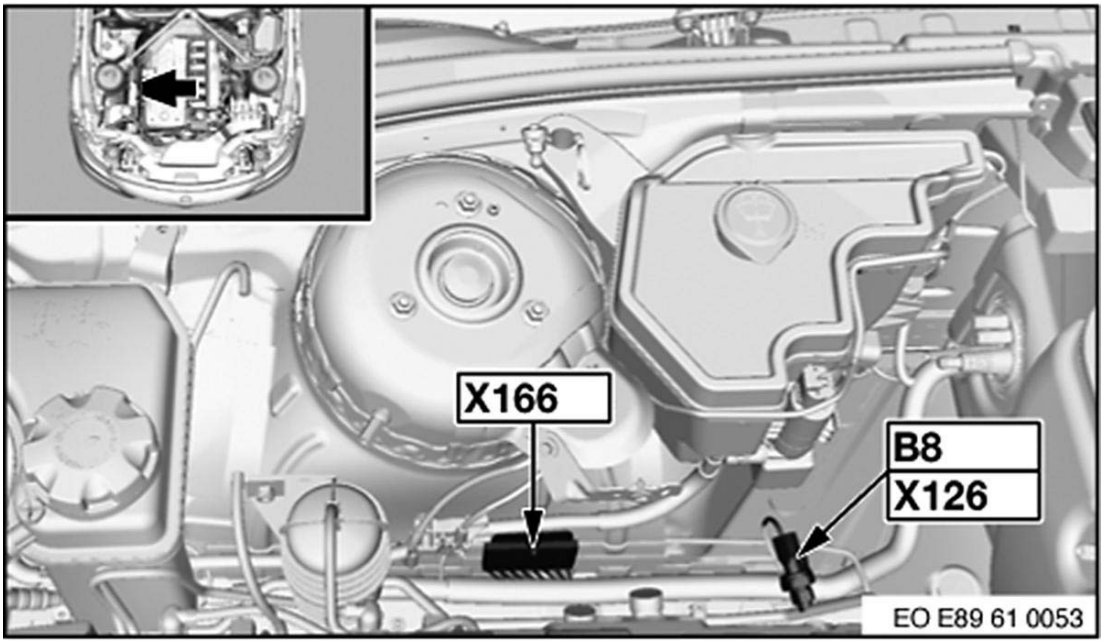

Fig. 85: Right Side Of Engine Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

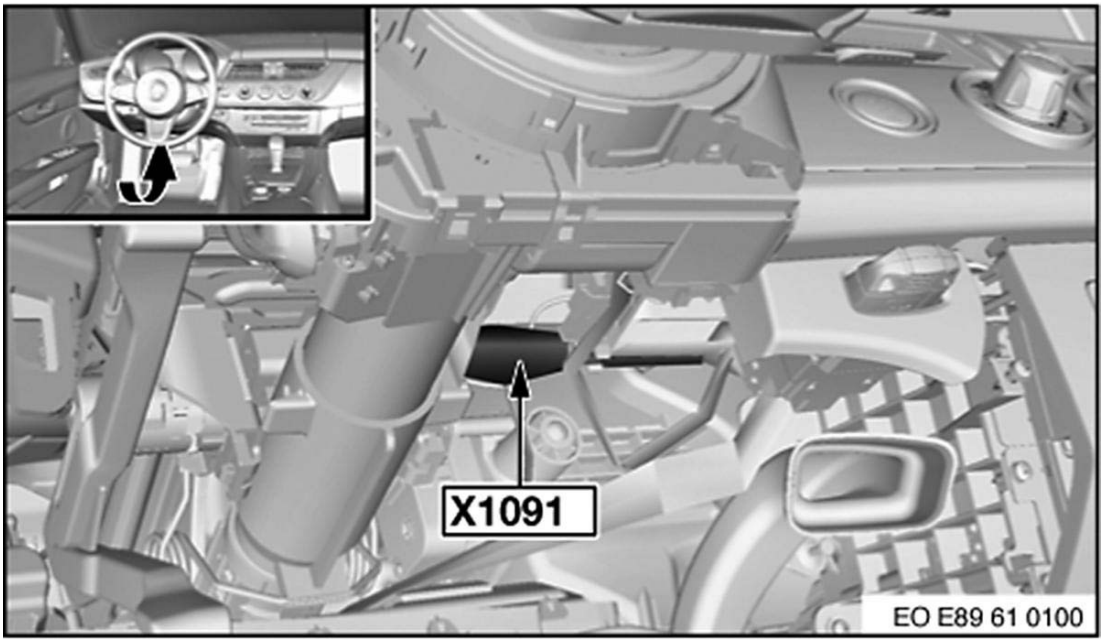

Fig. 86: Below Steering Column
Courtesy of BMW OF NORTH AMERICA, INC.

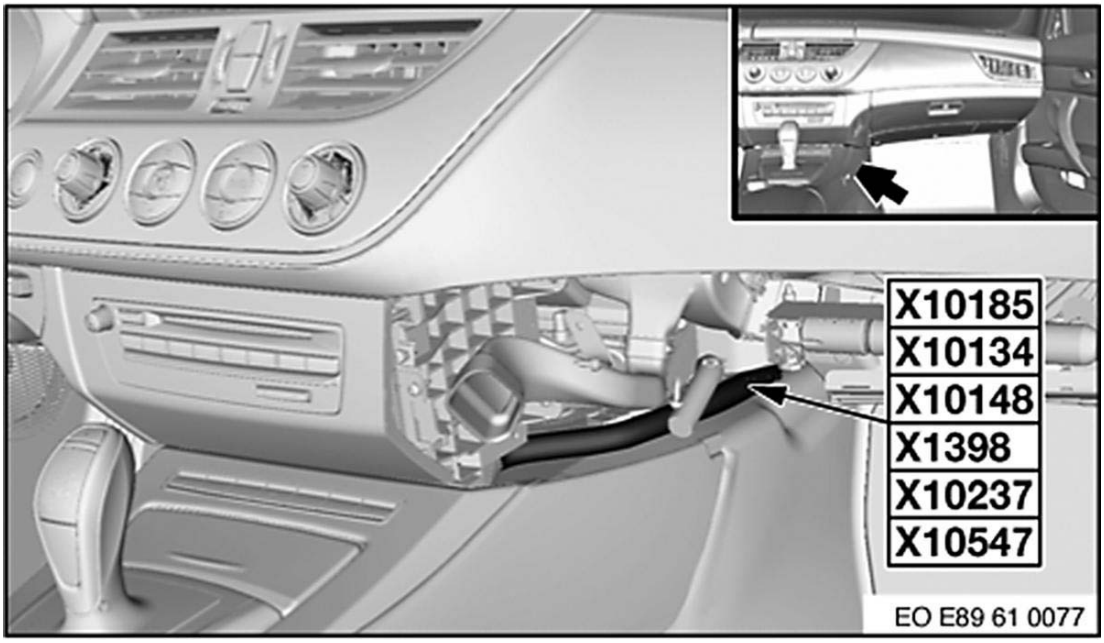

Fig. 87: Center Right Of Dash
Courtesy of BMW OF NORTH AMERICA, INC.

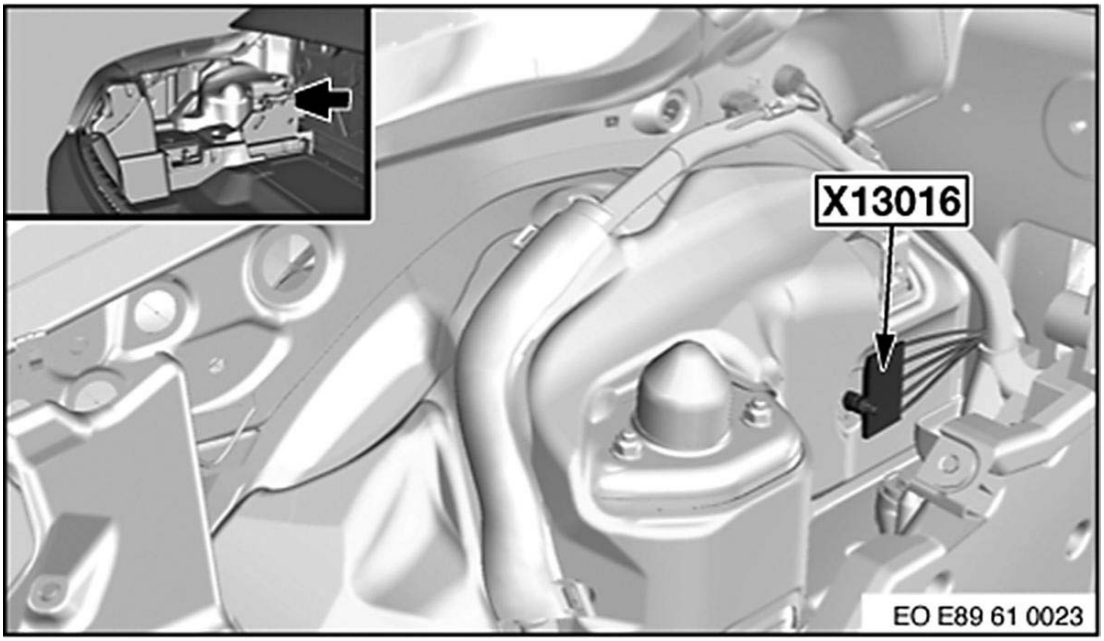

Fig. 88: Left Front Of Luggage Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

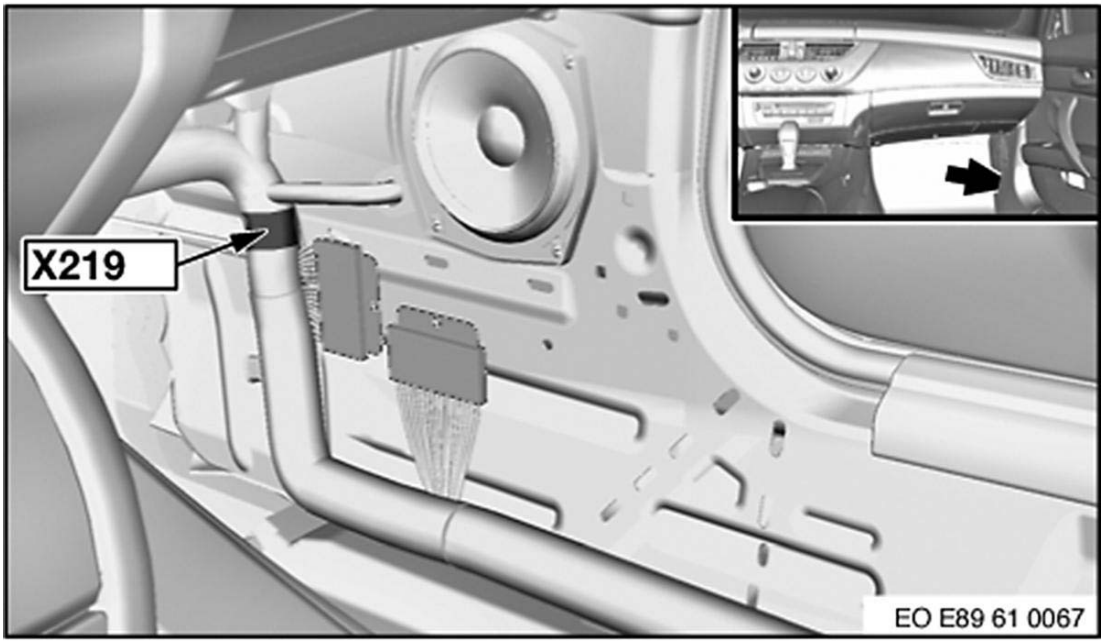

Fig. 89: Right Kick Panel
Courtesy of BMW OF NORTH AMERICA, INC.

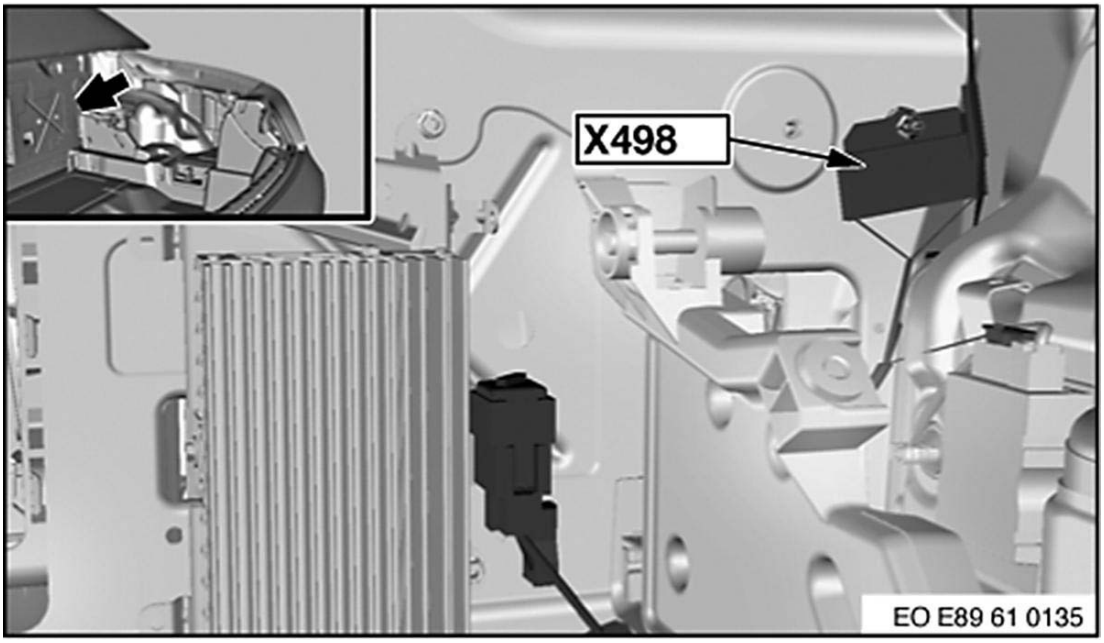

Fig. 90: Right Front Of Luggage Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

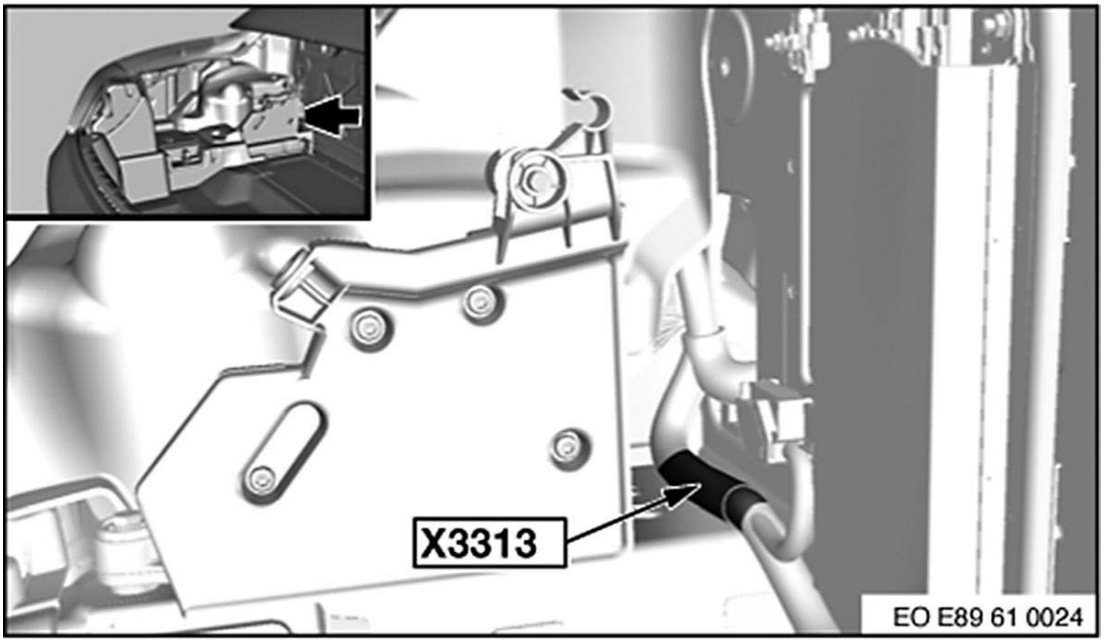

Fig. 91: Left Front Of Luggage Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

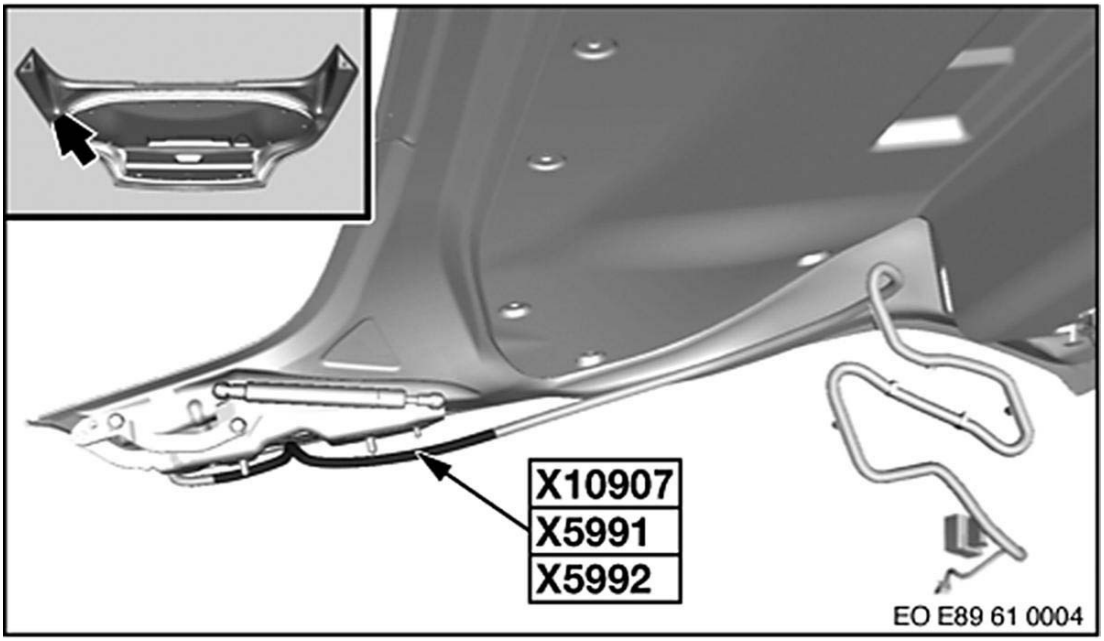

Fig. 92: Right Front Of Luggage Lid
Courtesy of BMW OF NORTH AMERICA, INC.

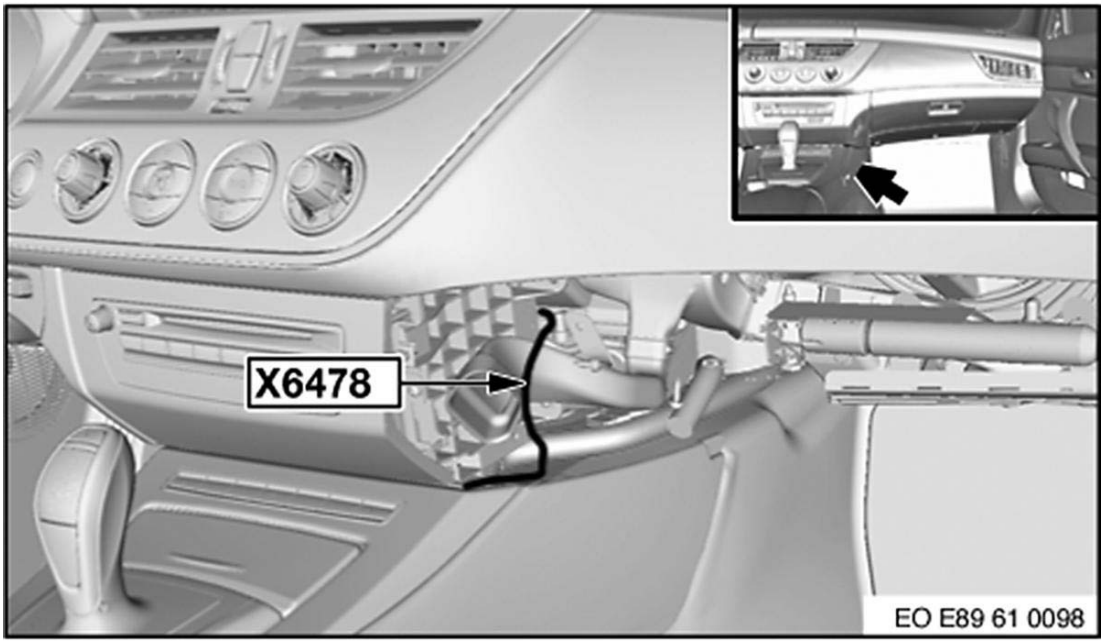

Fig. 93: Center Right Of Dash
Courtesy of BMW OF NORTH AMERICA, INC.

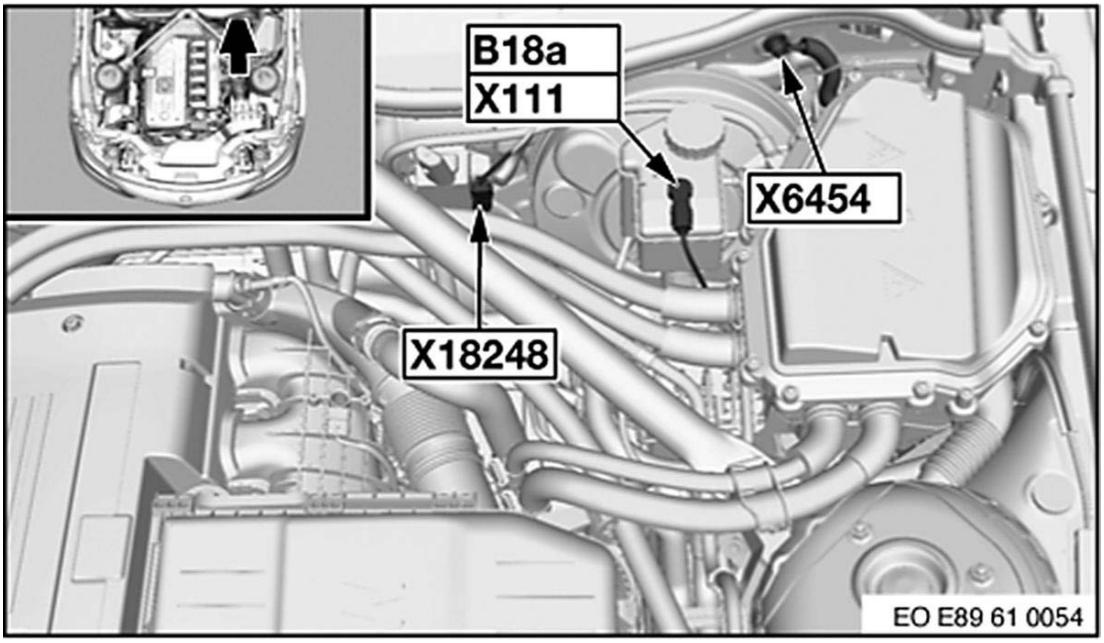

Fig. 94: Left Rear Of Engine Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

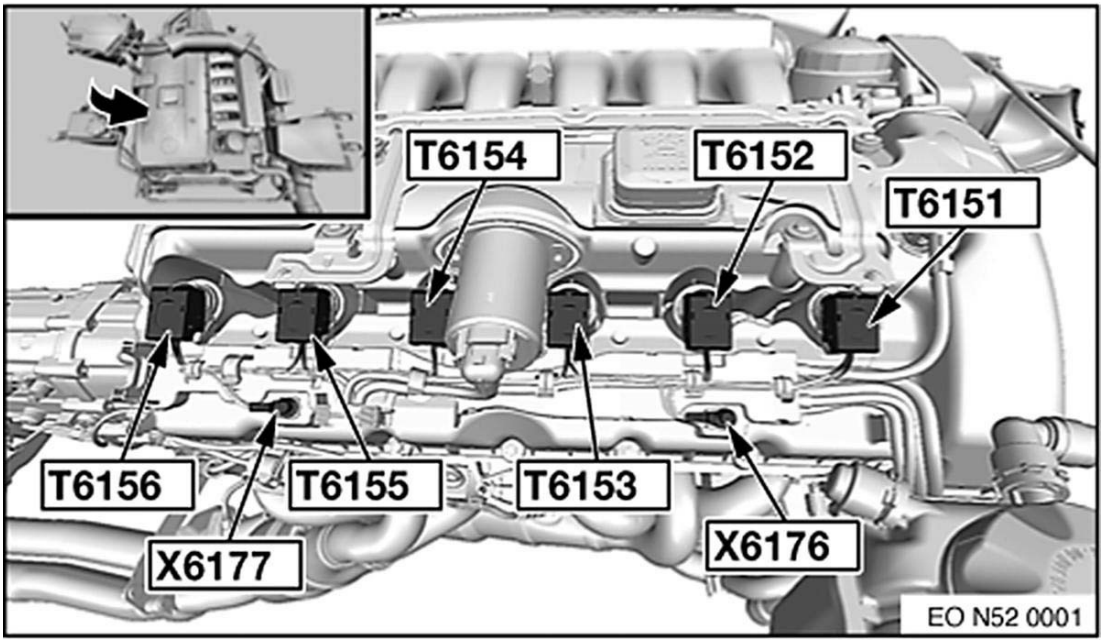

Fig. 95: Top Of Engine
Courtesy of BMW OF NORTH AMERICA, INC.

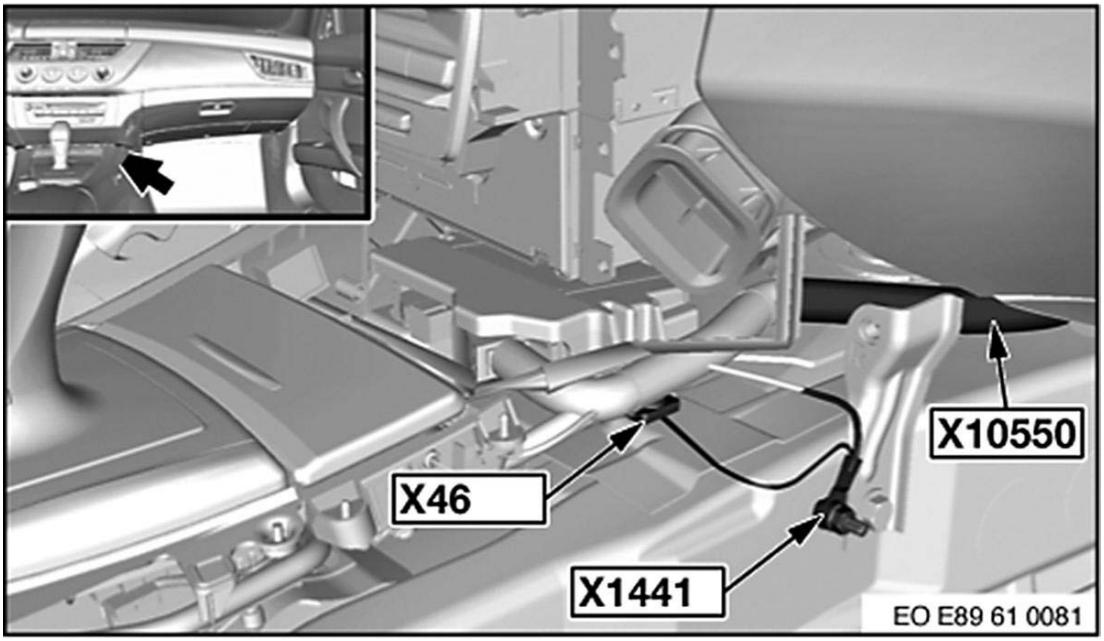

Fig. 96: Right Front Of Center Console
Courtesy of BMW OF NORTH AMERICA, INC.

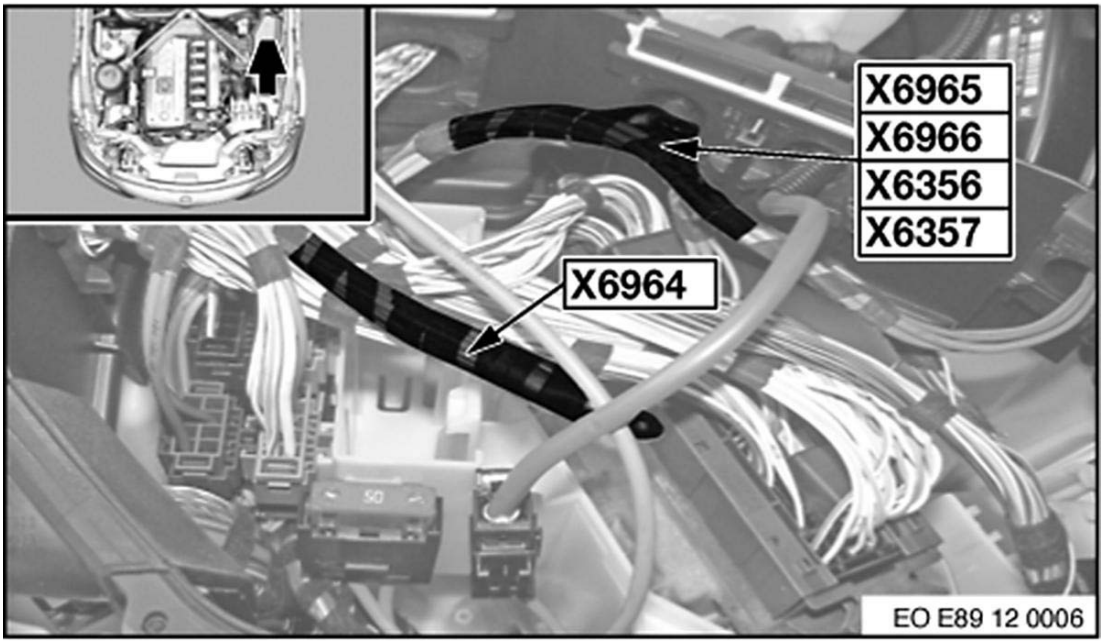

Fig. 97: Left Rear Of Engine Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

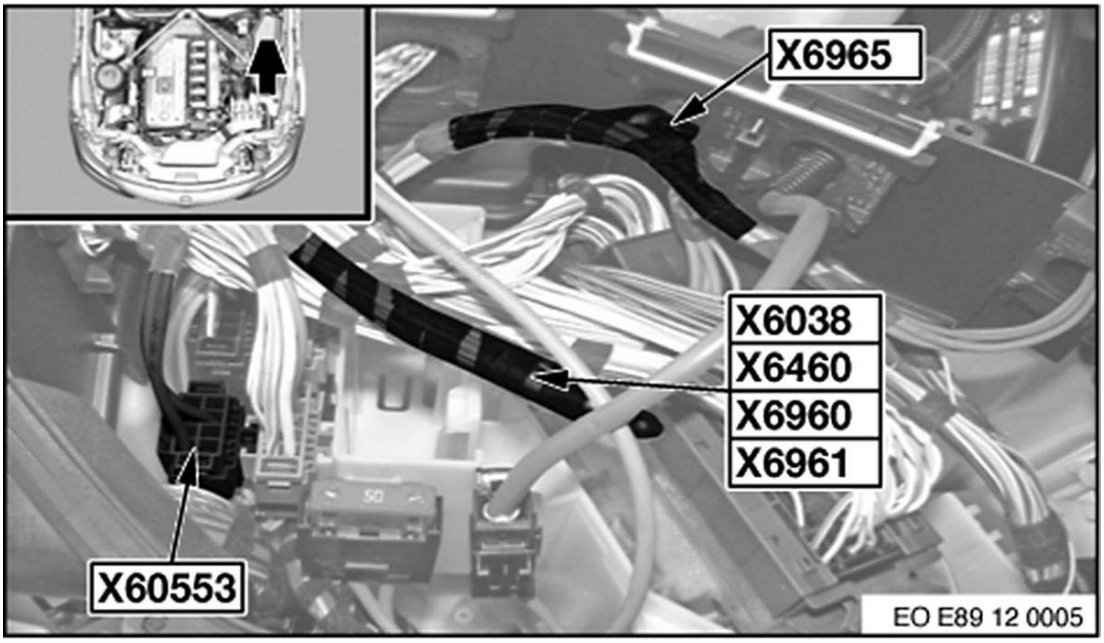

Fig. 98: Left Rear Of Engine Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

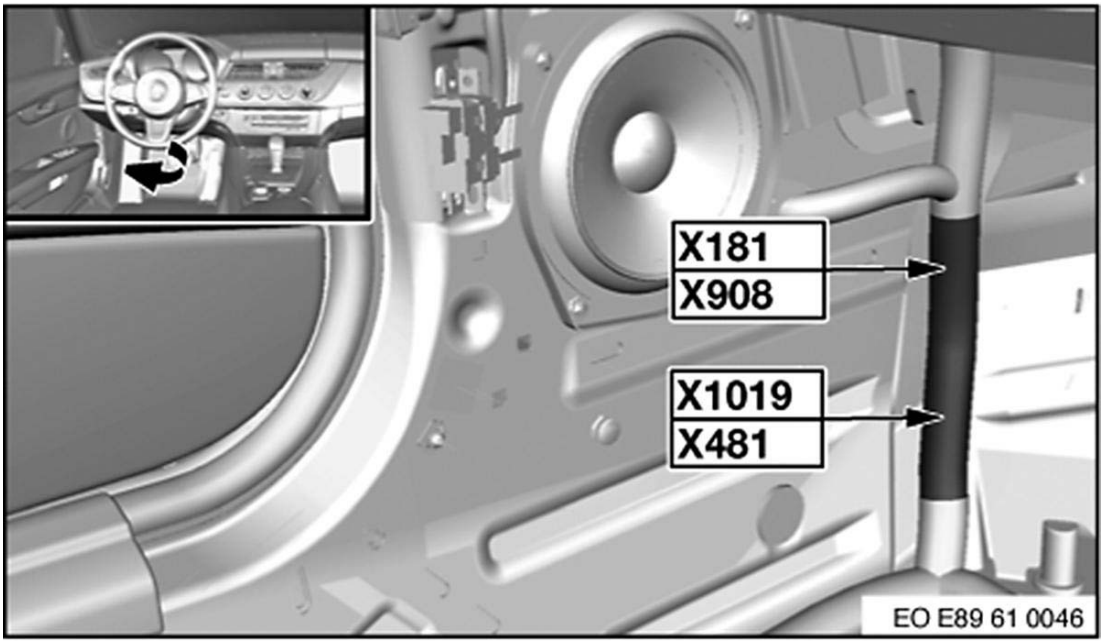

Fig. 99: Left Kick Panel
Courtesy of BMW OF NORTH AMERICA, INC.

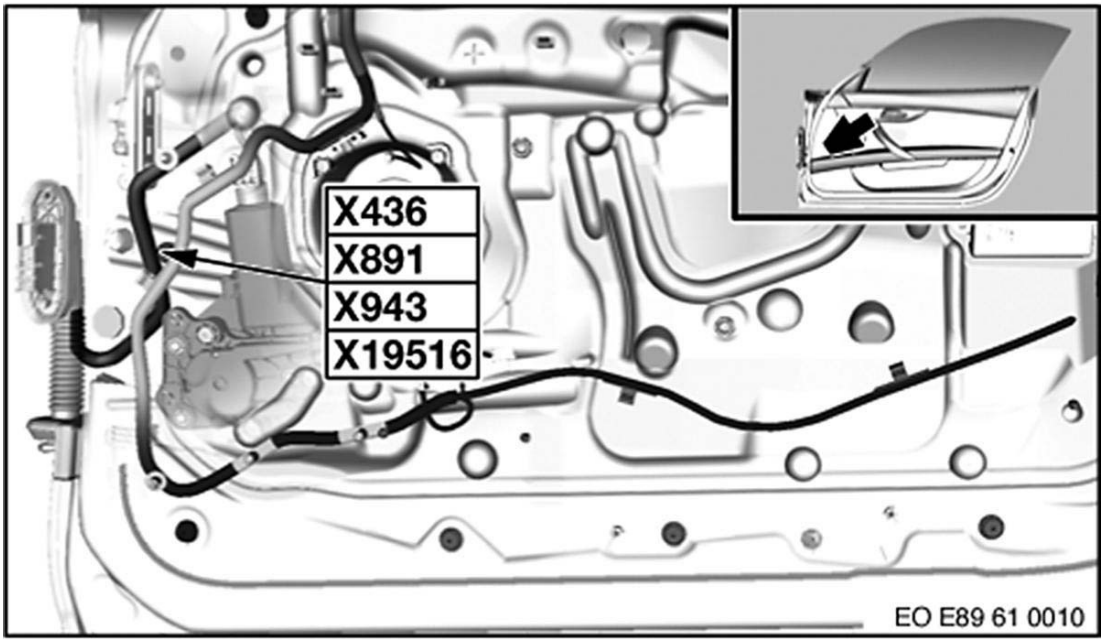

Fig. 100: Passenger's Door
Courtesy of BMW OF NORTH AMERICA, INC.

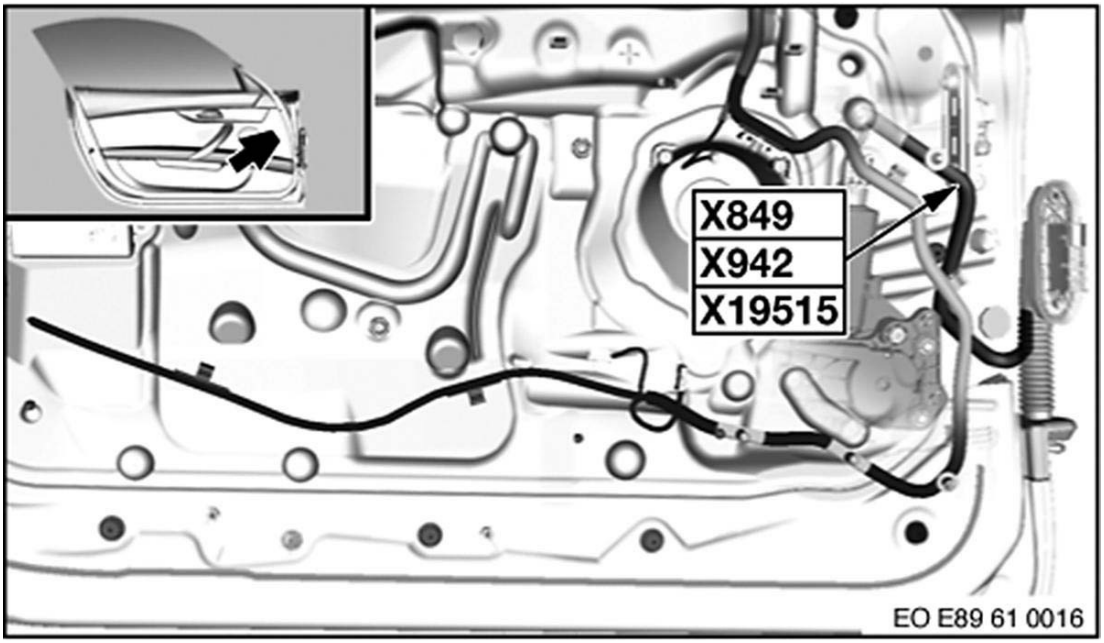

Fig. 101: Driver's Door
Courtesy of BMW OF NORTH AMERICA, INC.

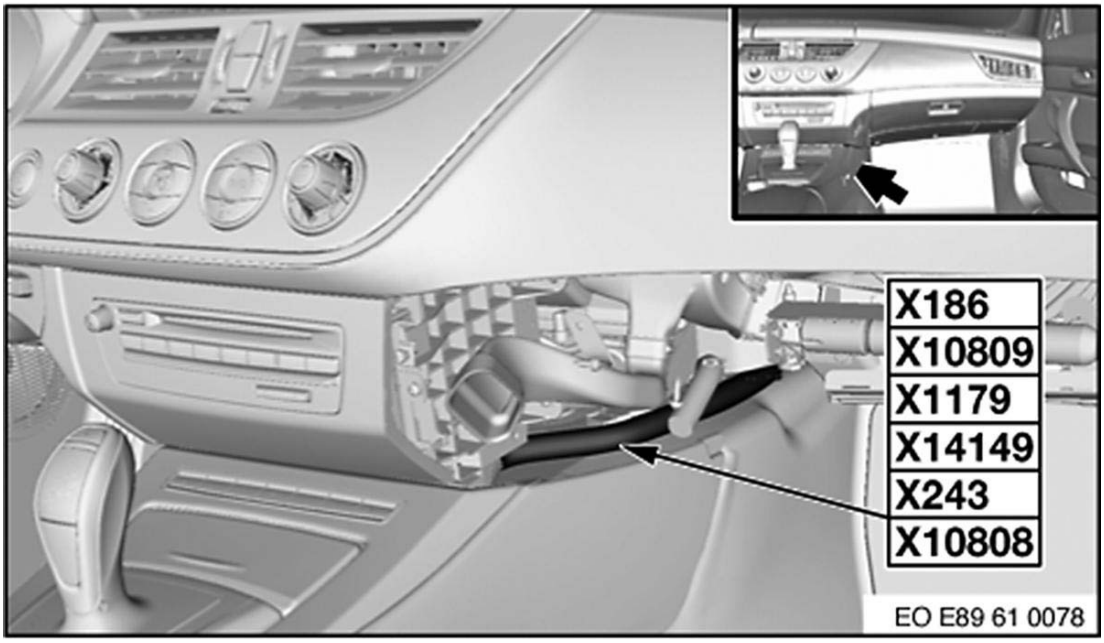

Fig. 102: Center Of Dash
Courtesy of BMW OF NORTH AMERICA, INC.

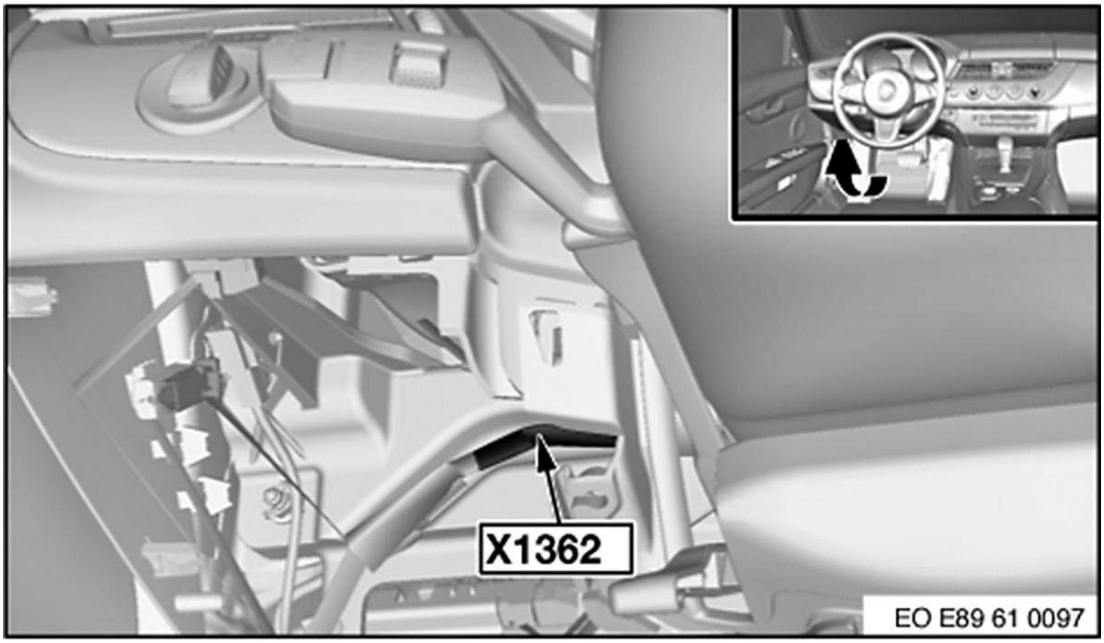

Fig. 103: Left End Of Dash
Courtesy of BMW OF NORTH AMERICA, INC.

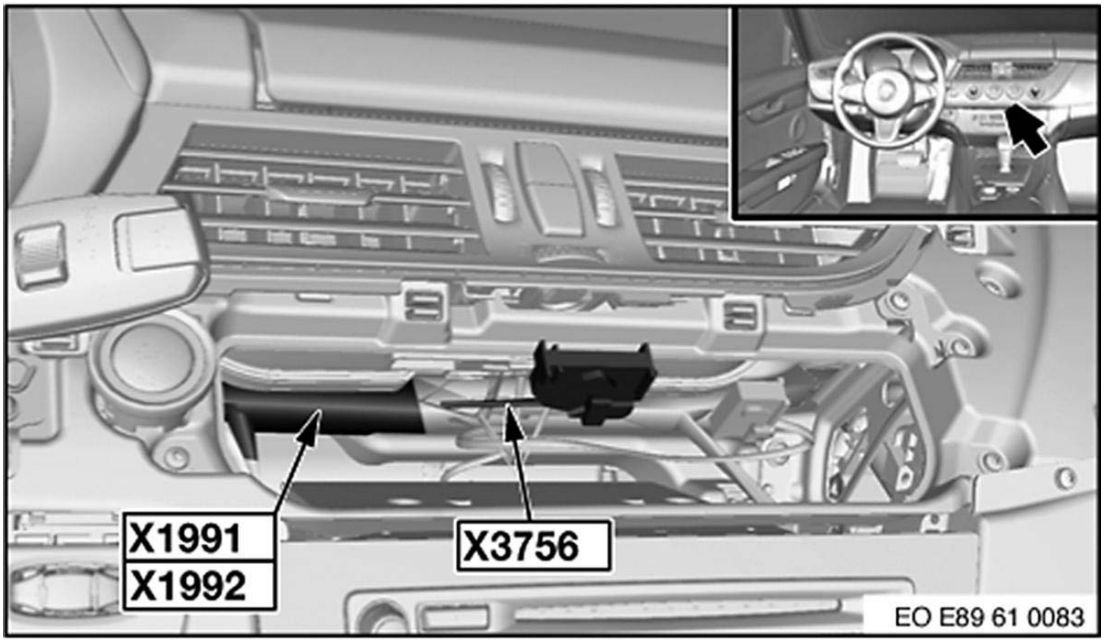

Fig. 104: Center Of Dash
Courtesy of BMW OF NORTH AMERICA, INC.

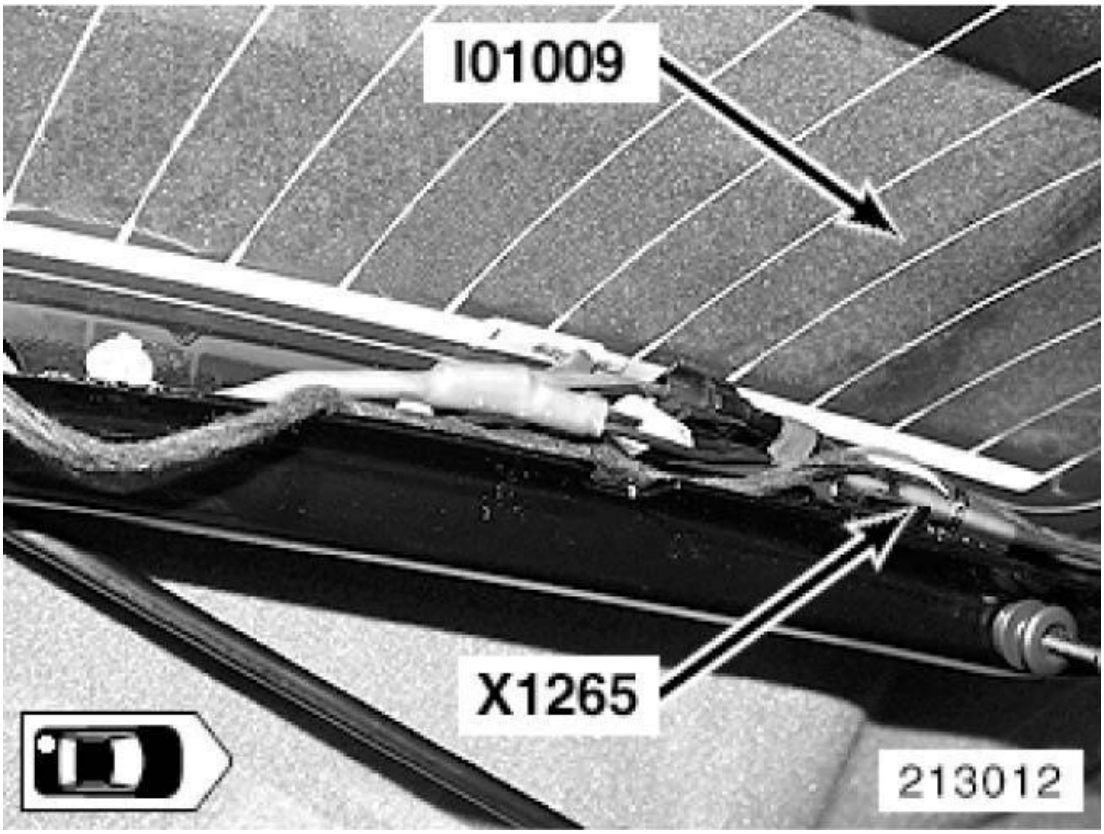

Fig. 105: Rear Window
Courtesy of BMW OF NORTH AMERICA, INC.

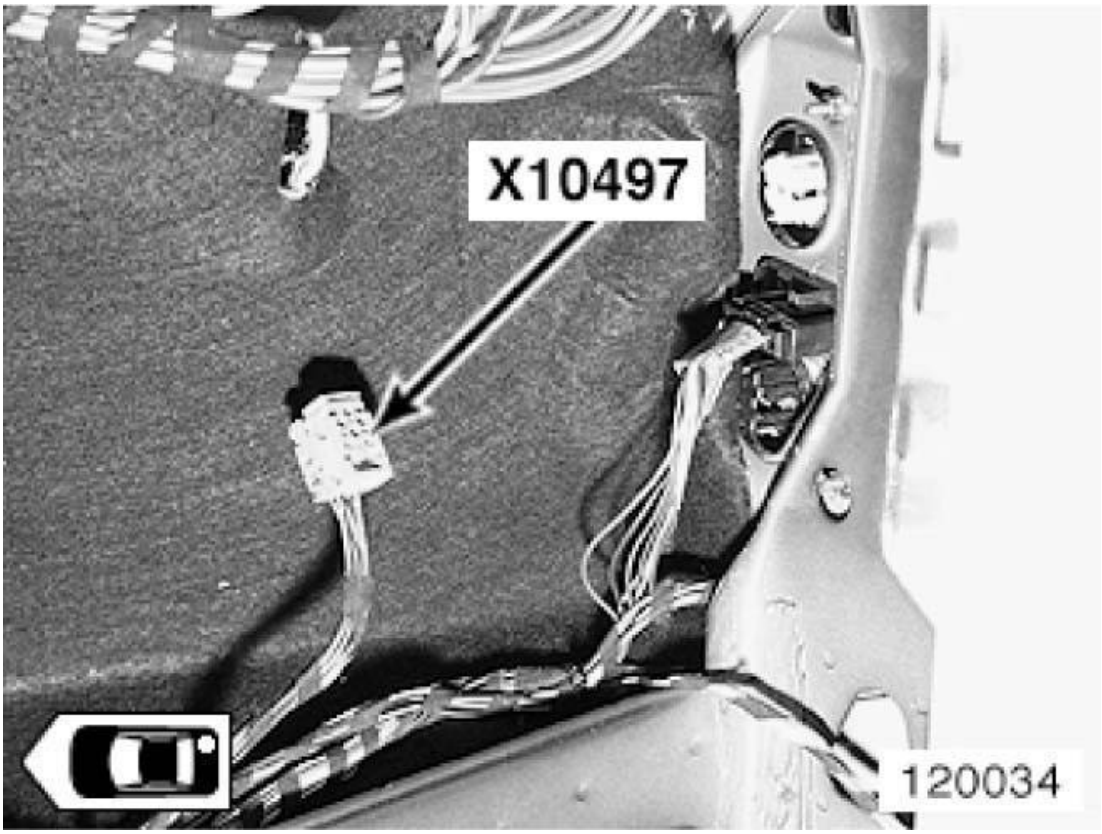

Fig. 106: Right Side Of Luggage Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

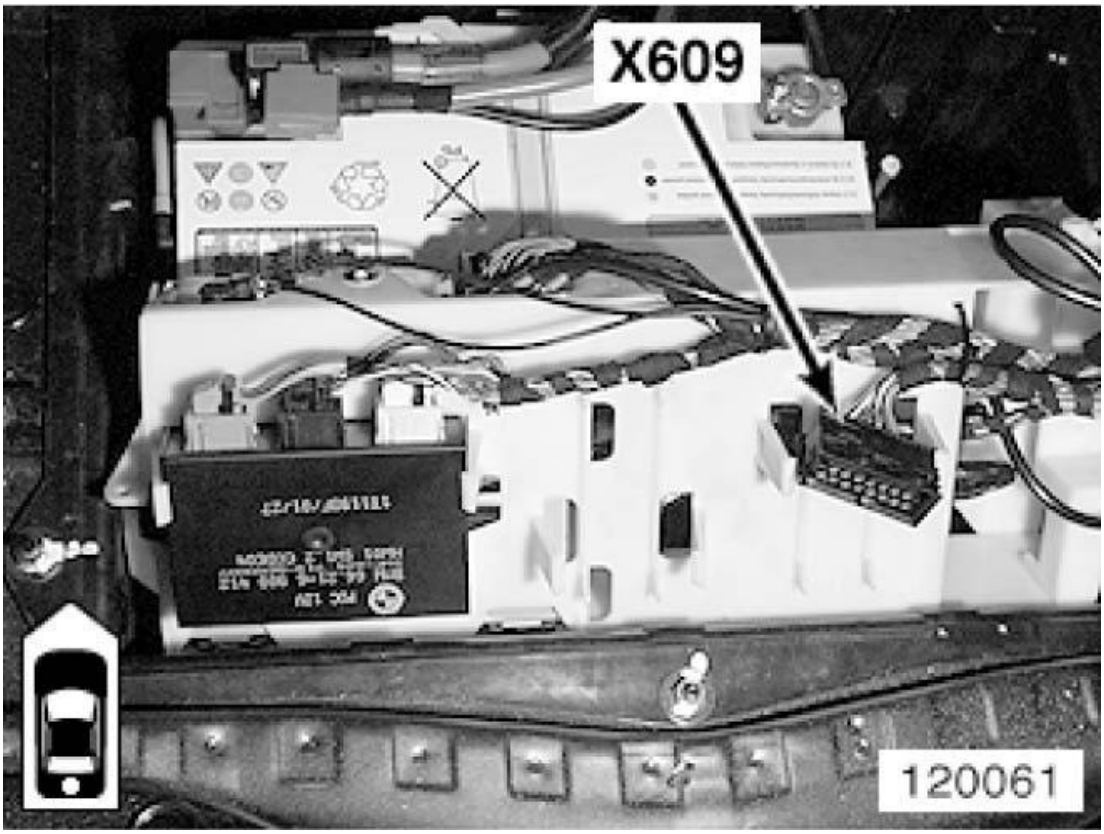

Fig. 107: Luggage Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

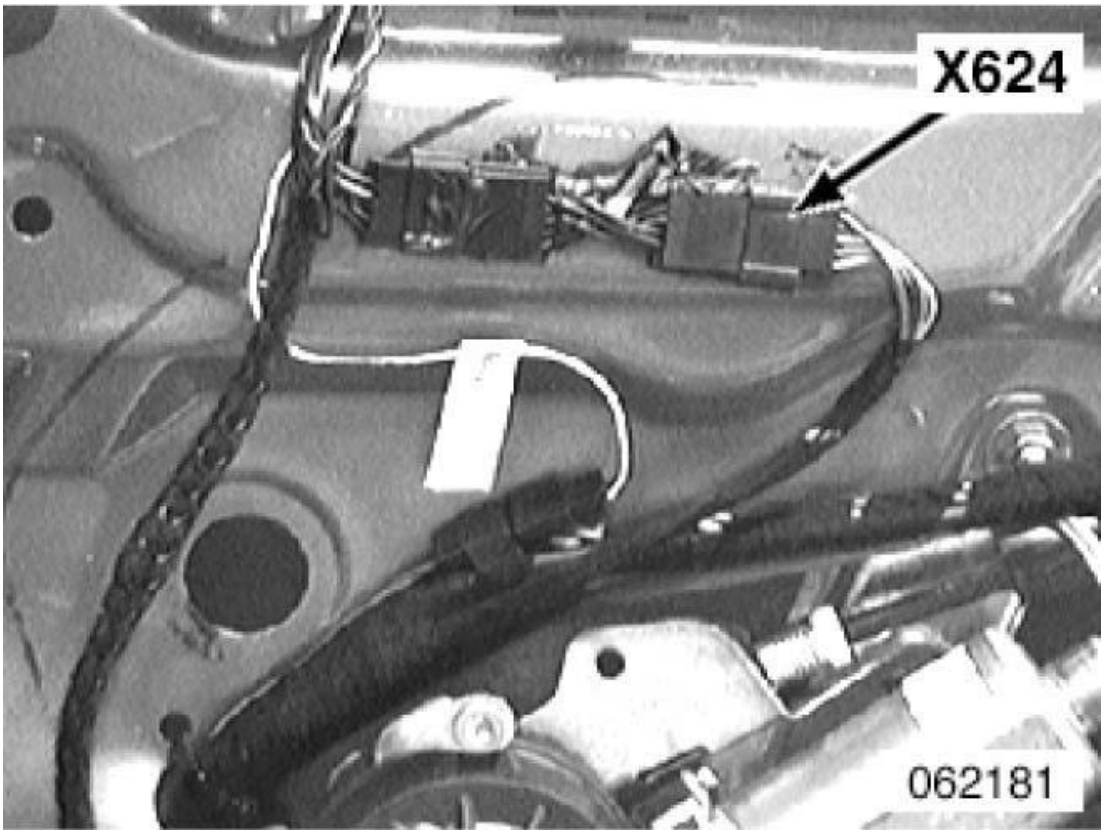

Fig. 108: Passenger's Door
Courtesy of BMW OF NORTH AMERICA, INC.

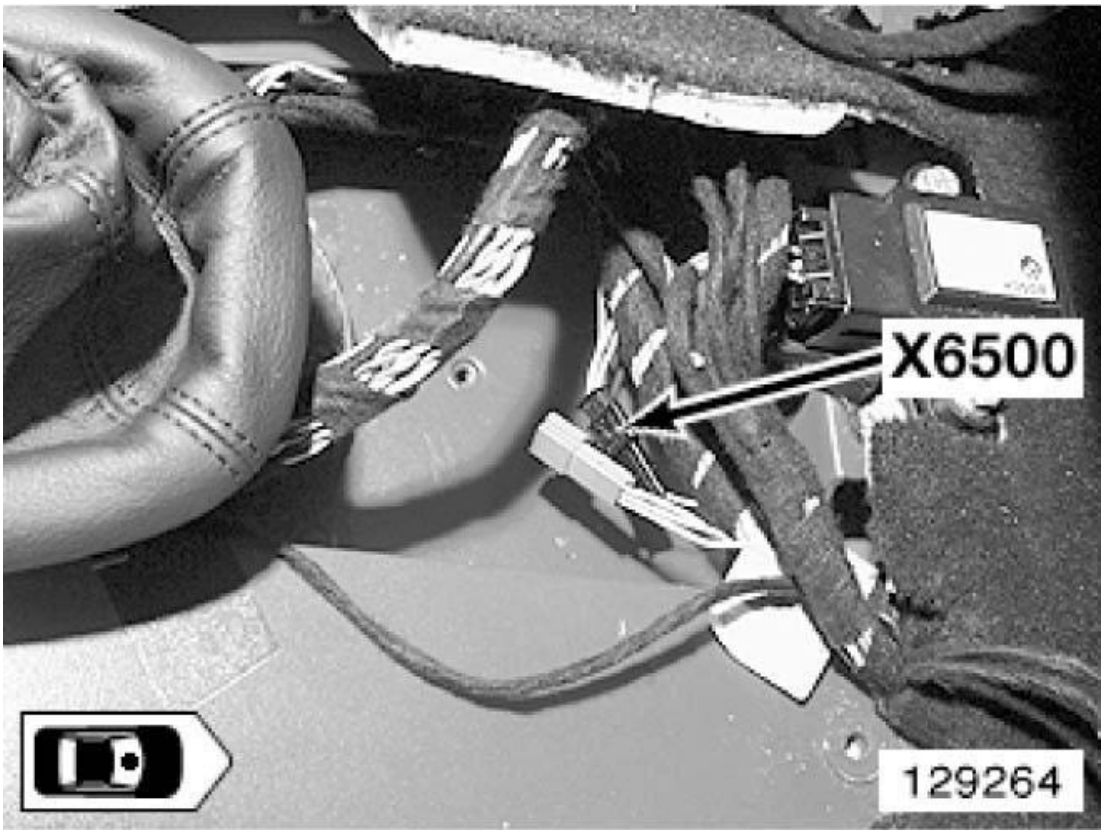

Fig. 109: Center Console
Courtesy of BMW OF NORTH AMERICA, INC.

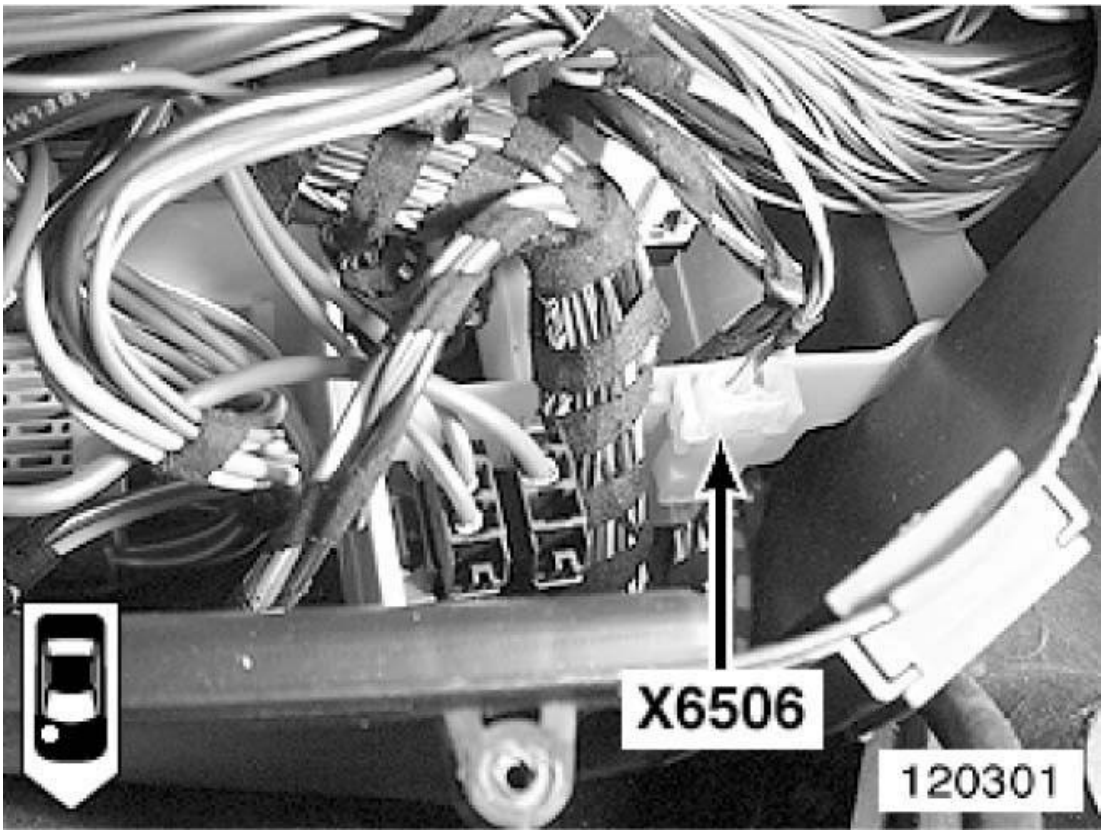

Fig. 110: Right Side Of Engine Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

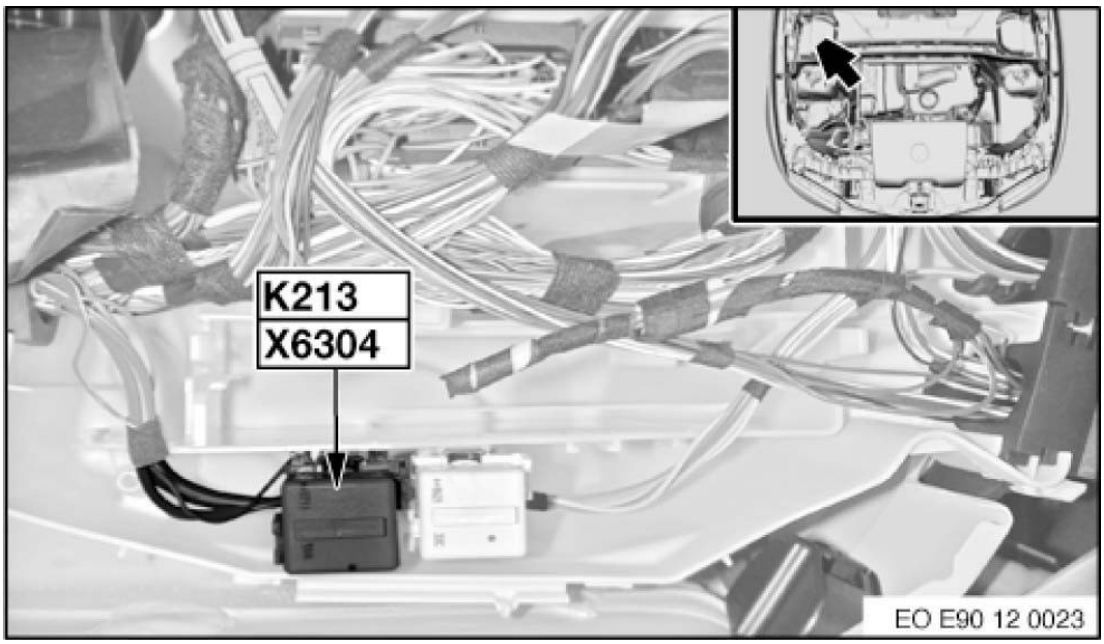

Fig. 111: Engine Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

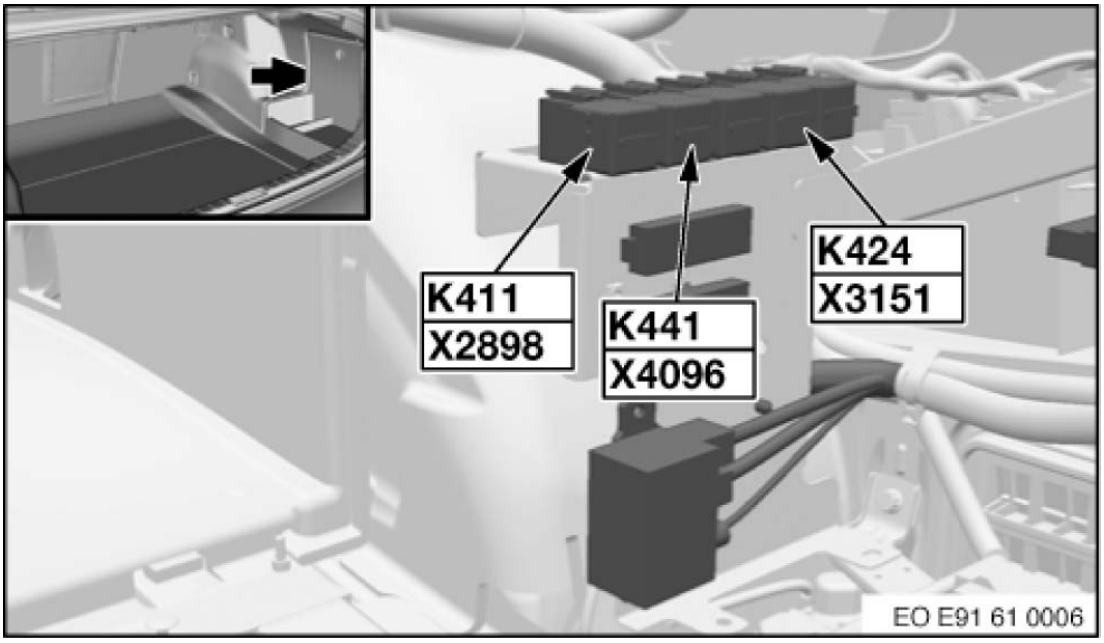

Fig. 112: Luggage Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

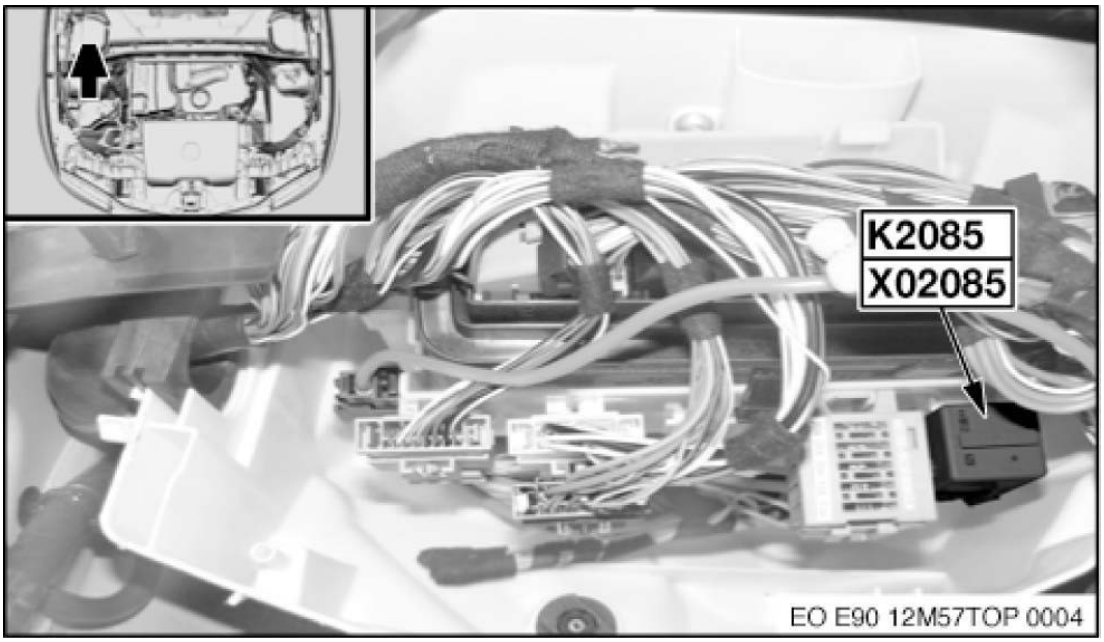

Fig. 113: Engine Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

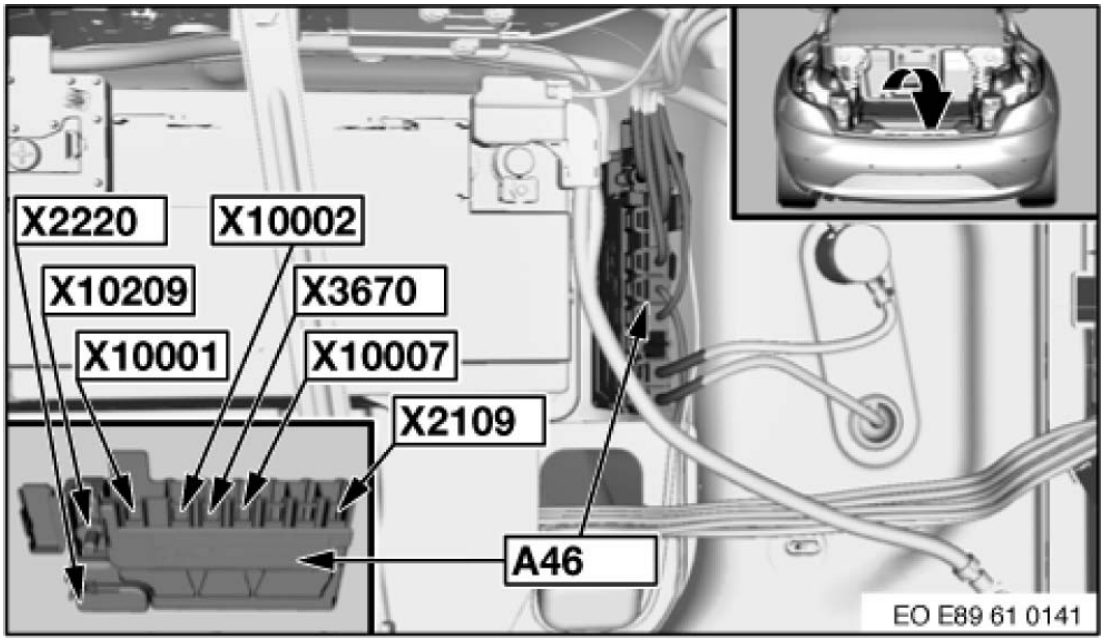

Fig. 114: Luggage Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

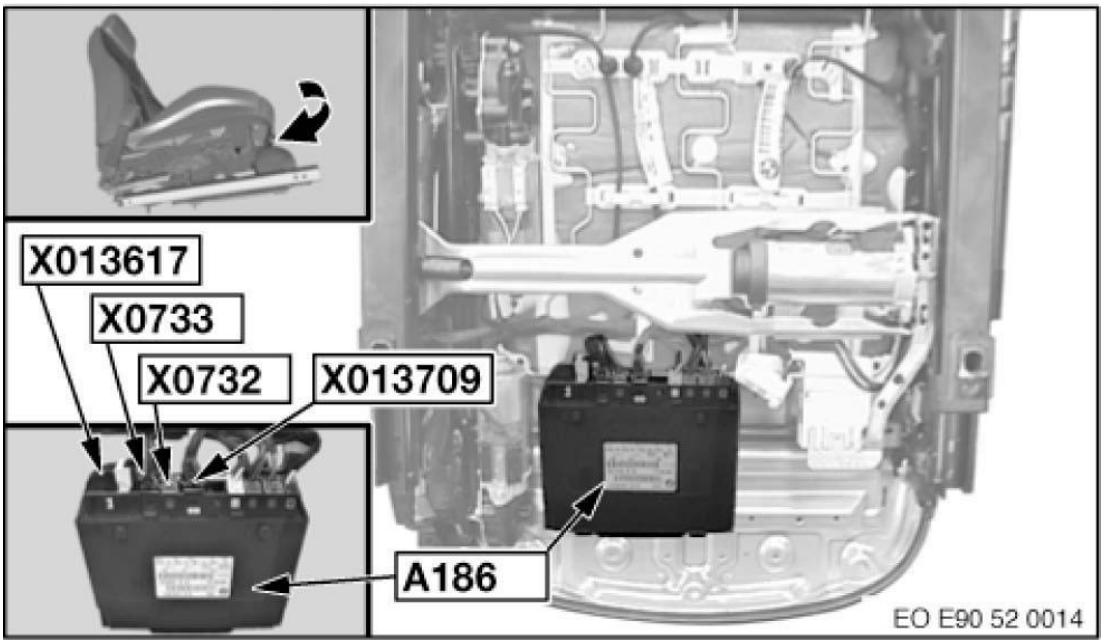

Fig. 115: Passenger's Seat
Courtesy of BMW OF NORTH AMERICA, INC.

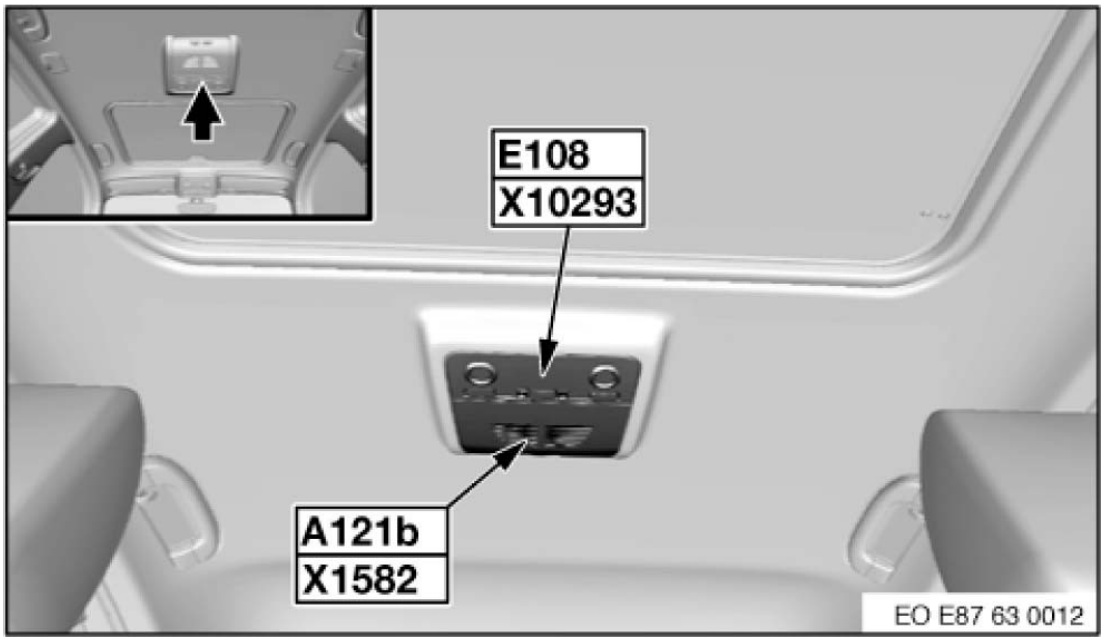

Fig. 116: Roof
Courtesy of BMW OF NORTH AMERICA, INC.

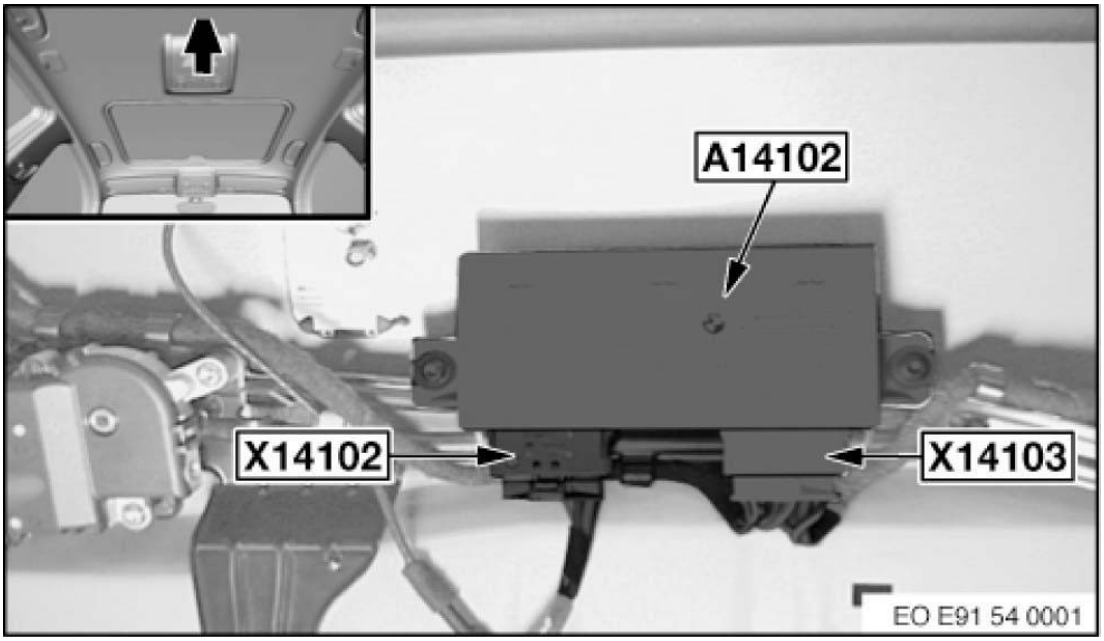

Fig. 117: Roof
Courtesy of BMW OF NORTH AMERICA, INC.

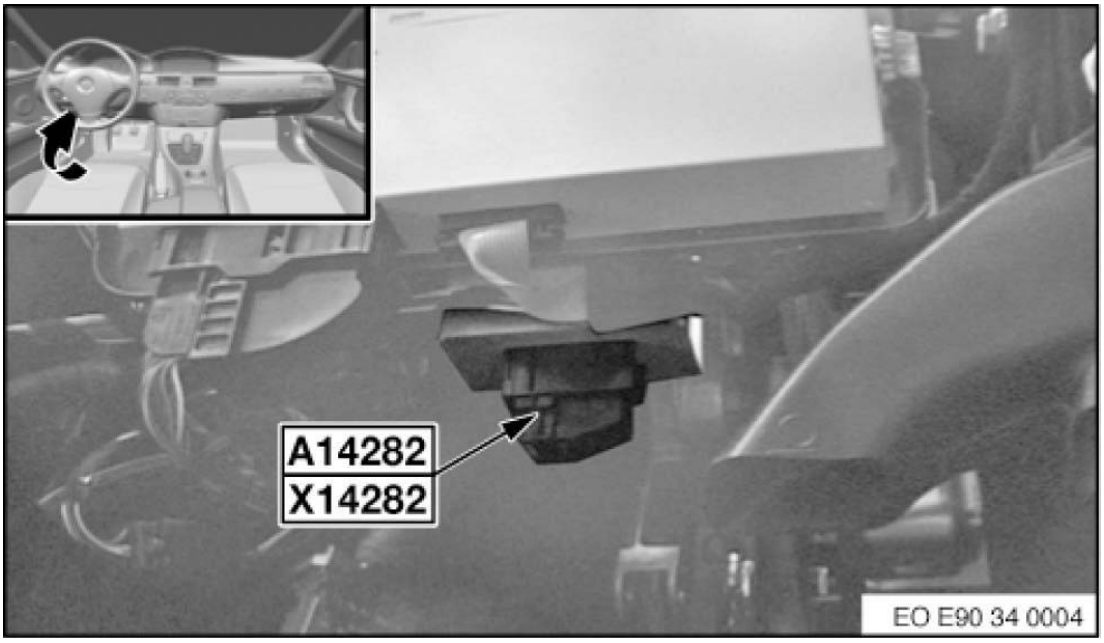

Fig. 118: Dash
Courtesy of BMW OF NORTH AMERICA, INC.

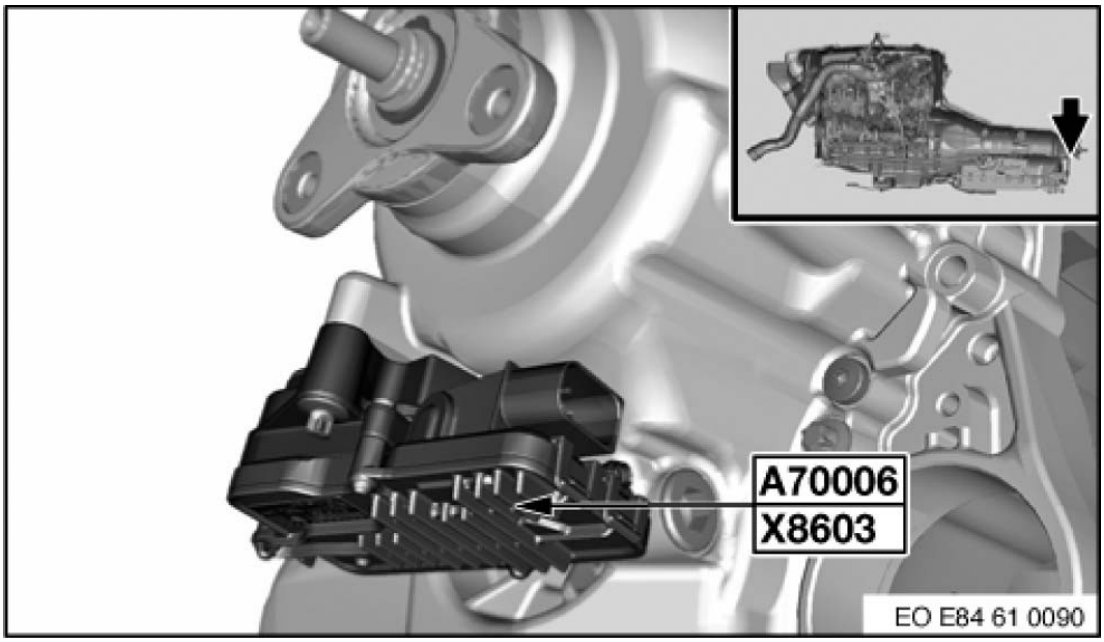

Fig. 119: Transmission
Courtesy of BMW OF NORTH AMERICA, INC.

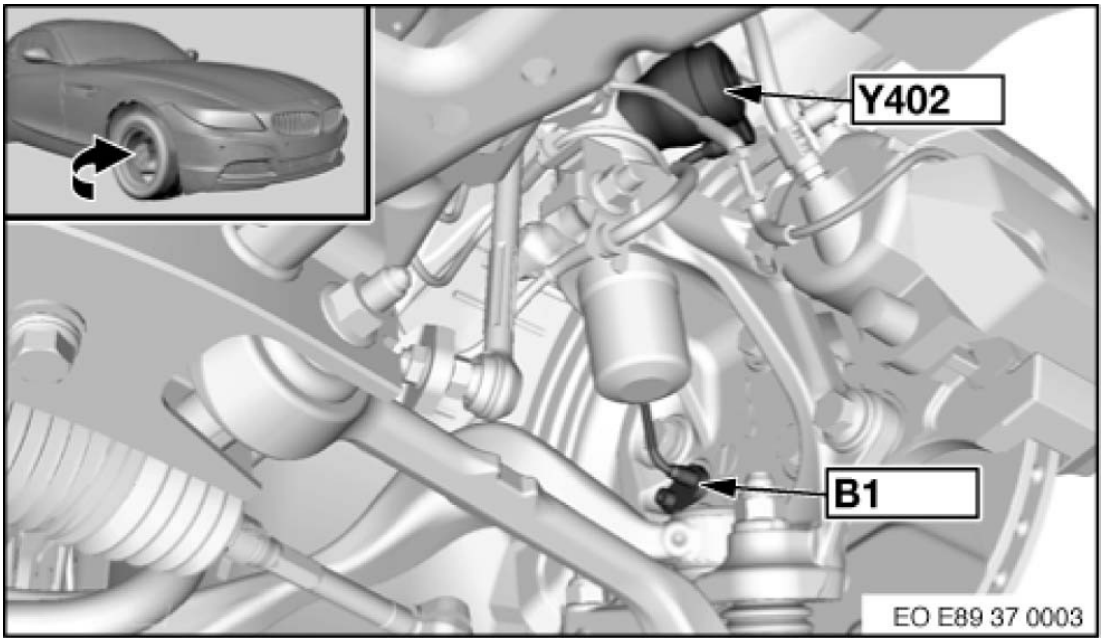

Fig. 120: Right Front Wheel Hub Assembly (Left Similar)
Courtesy of BMW OF NORTH AMERICA, INC.

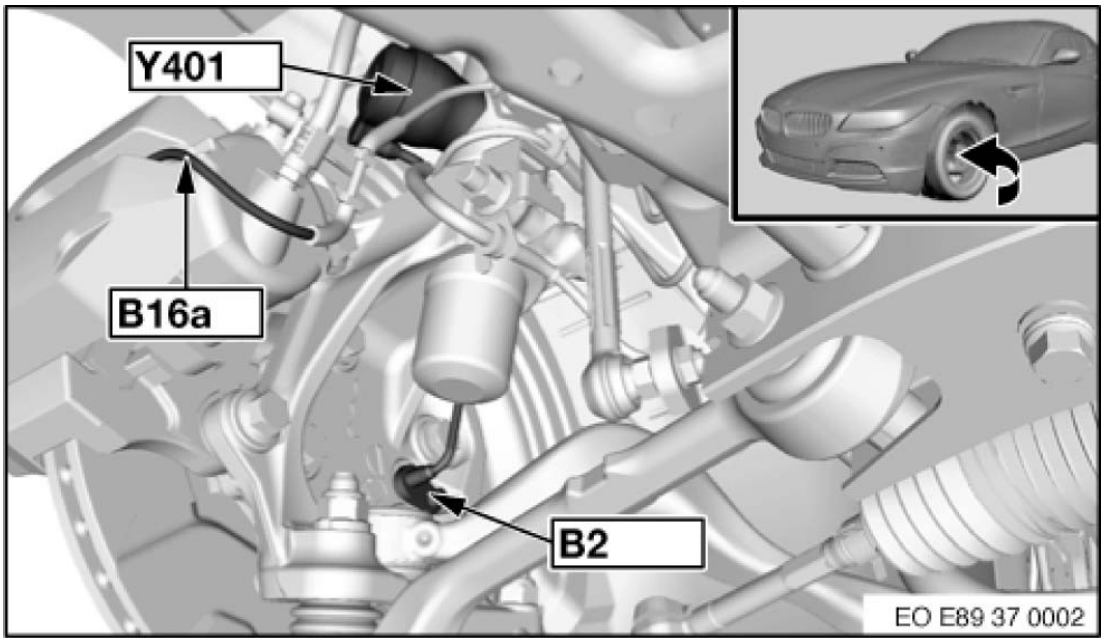

Fig. 121: Left Front Wheel Hub Assembly
Courtesy of BMW OF NORTH AMERICA, INC.

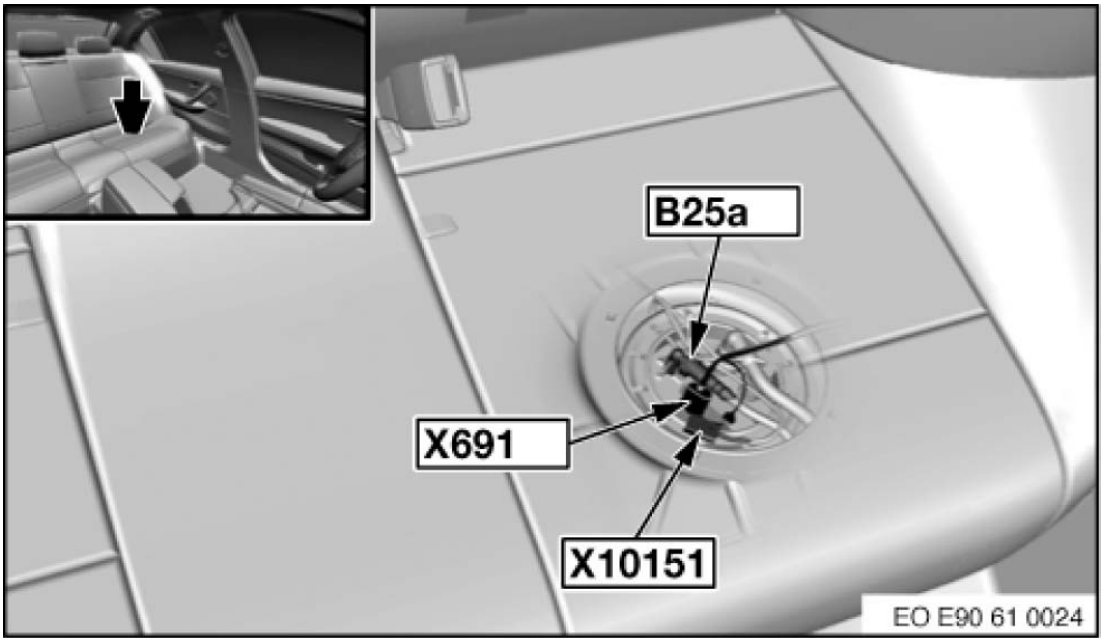

Fig. 122: Fuel Tank
Courtesy of BMW OF NORTH AMERICA, INC.

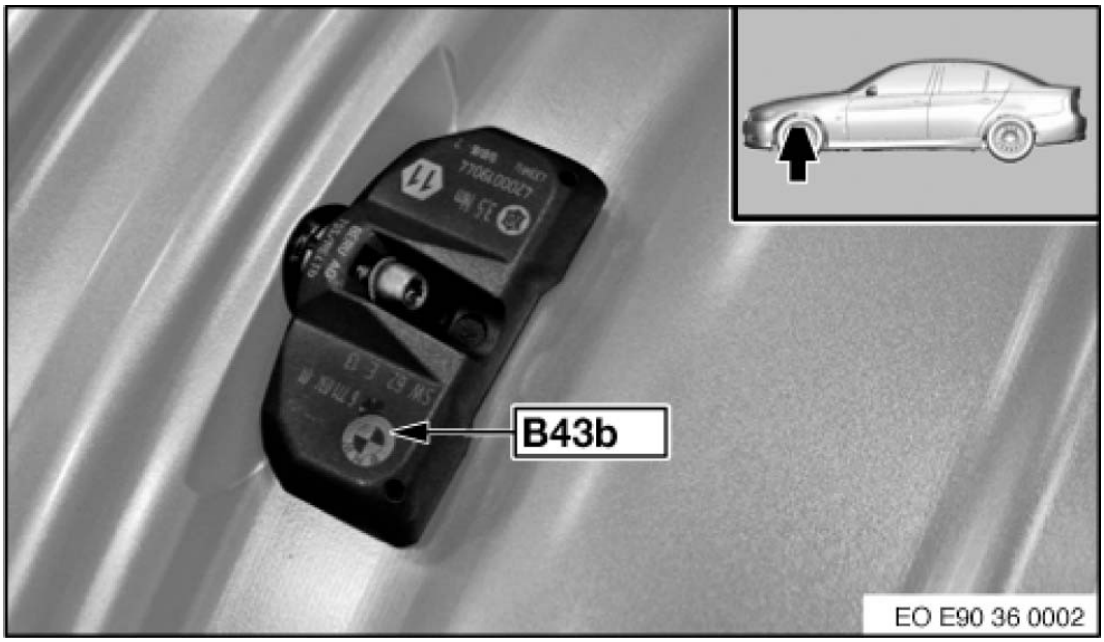

Fig. 123: Left Front Wheel Assembly (Typical)
Courtesy of BMW OF NORTH AMERICA, INC.

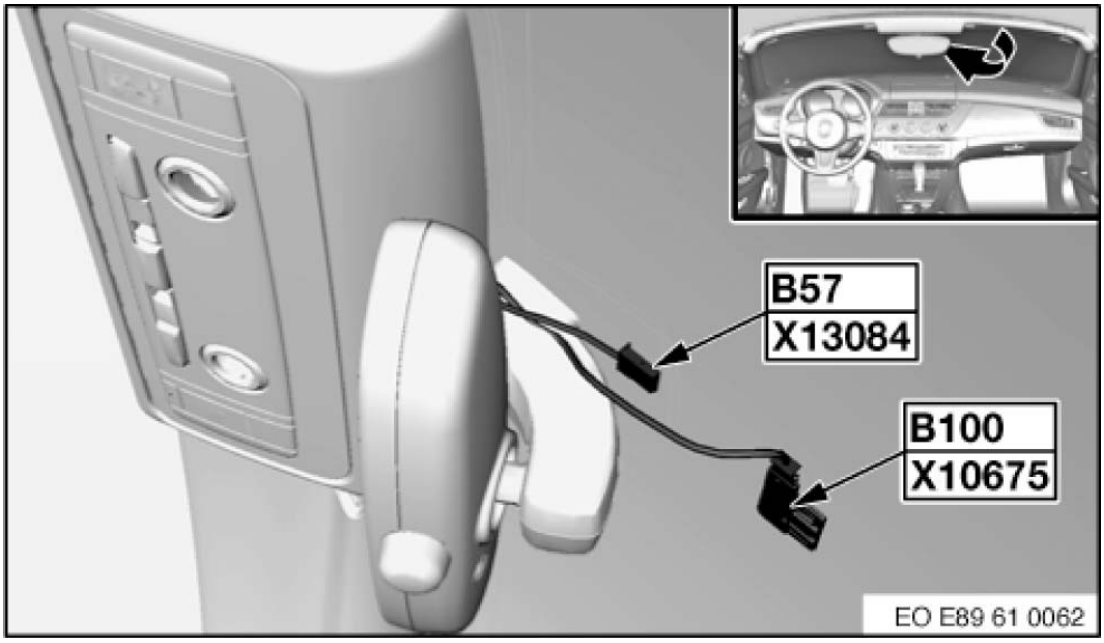

Fig. 124: Windshield
Courtesy of BMW OF NORTH AMERICA, INC.

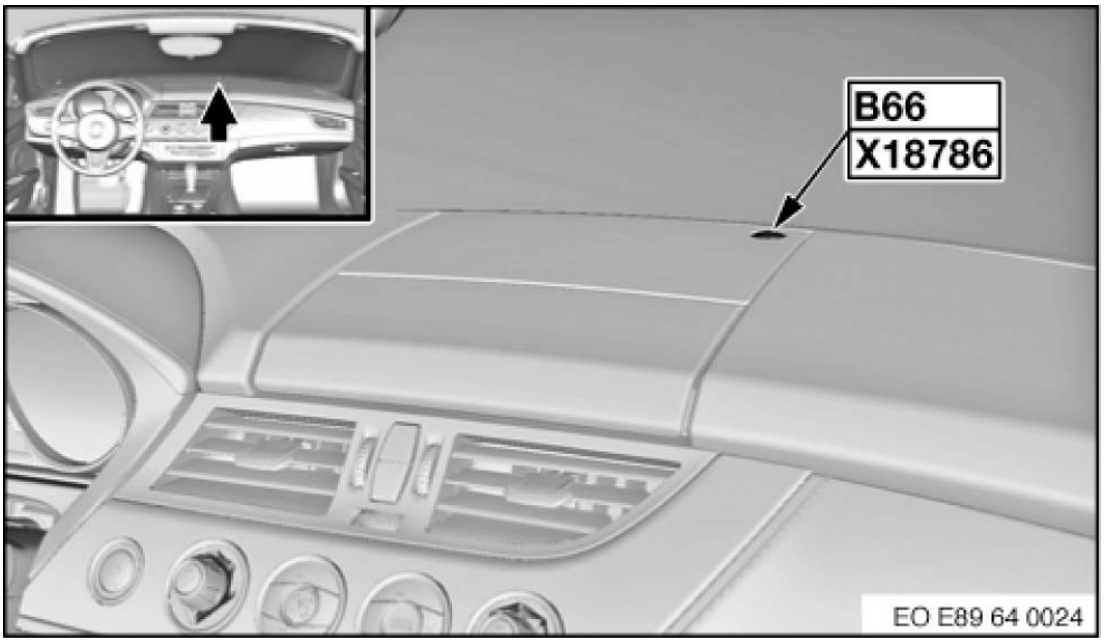

Fig. 125: Dash
Courtesy of BMW OF NORTH AMERICA, INC.

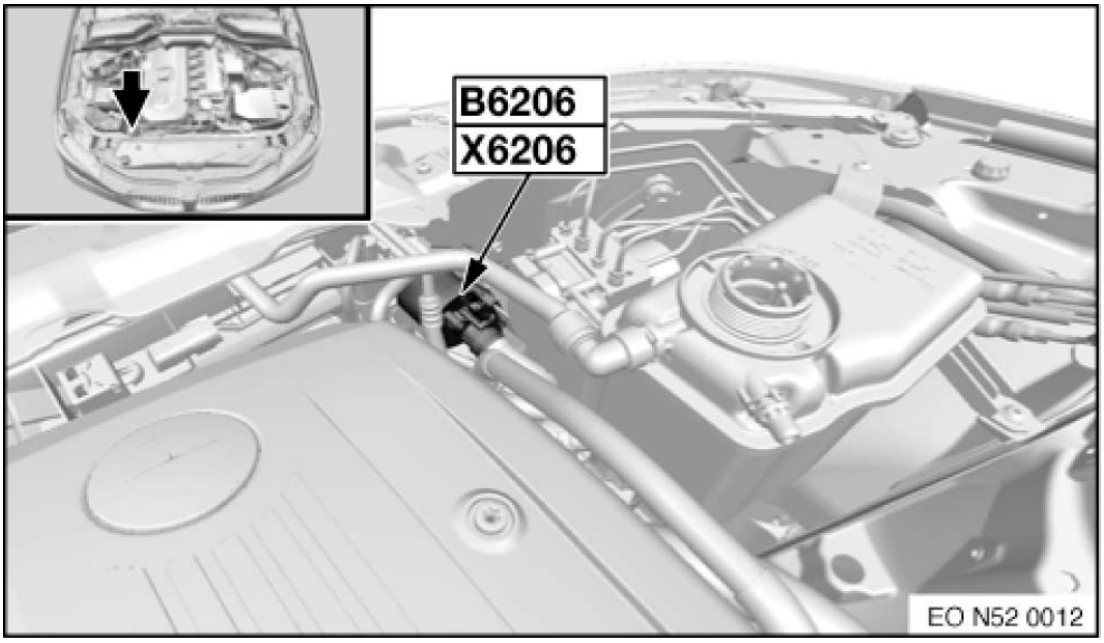

Fig. 126: Engine Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

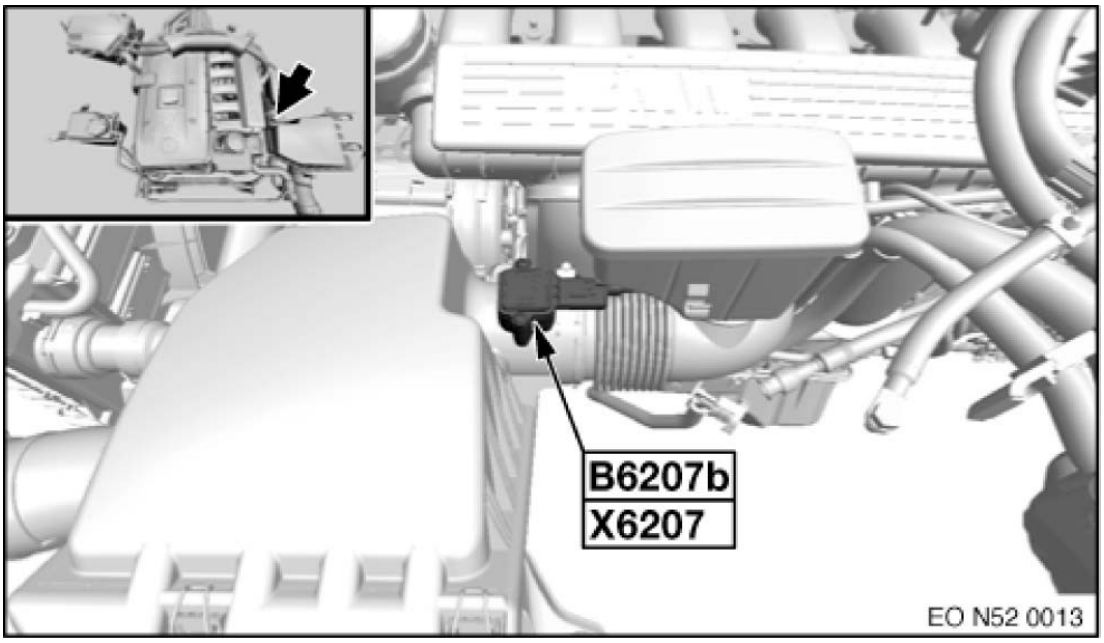

Fig. 127: Left Side Of Engine
Courtesy of BMW OF NORTH AMERICA, INC.

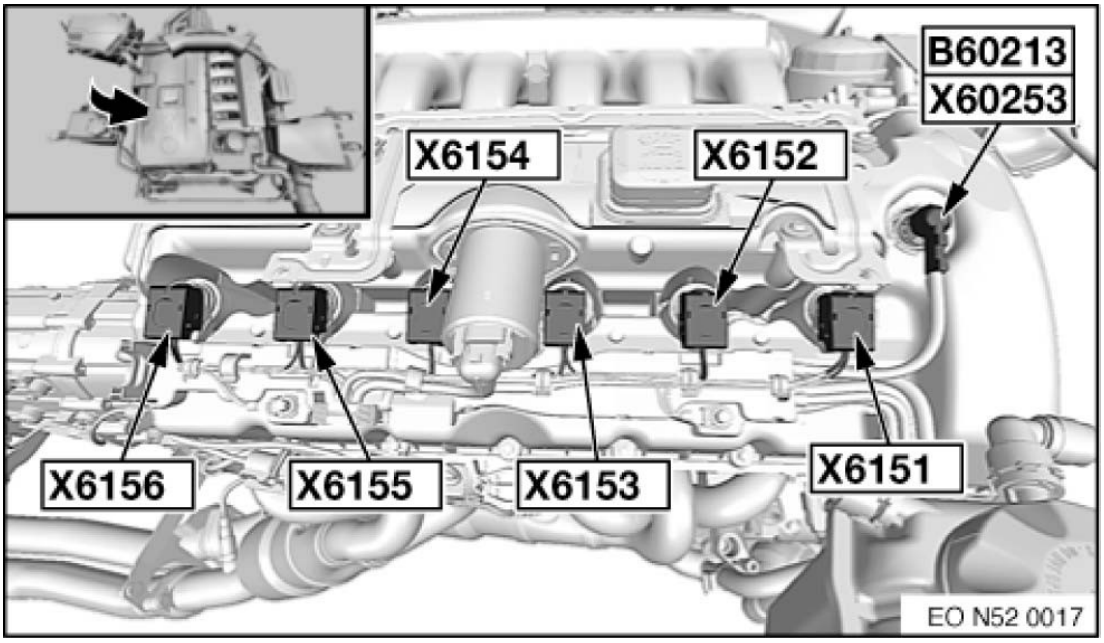

Fig. 128: Right Side Of Engine
Courtesy of BMW OF NORTH AMERICA, INC.

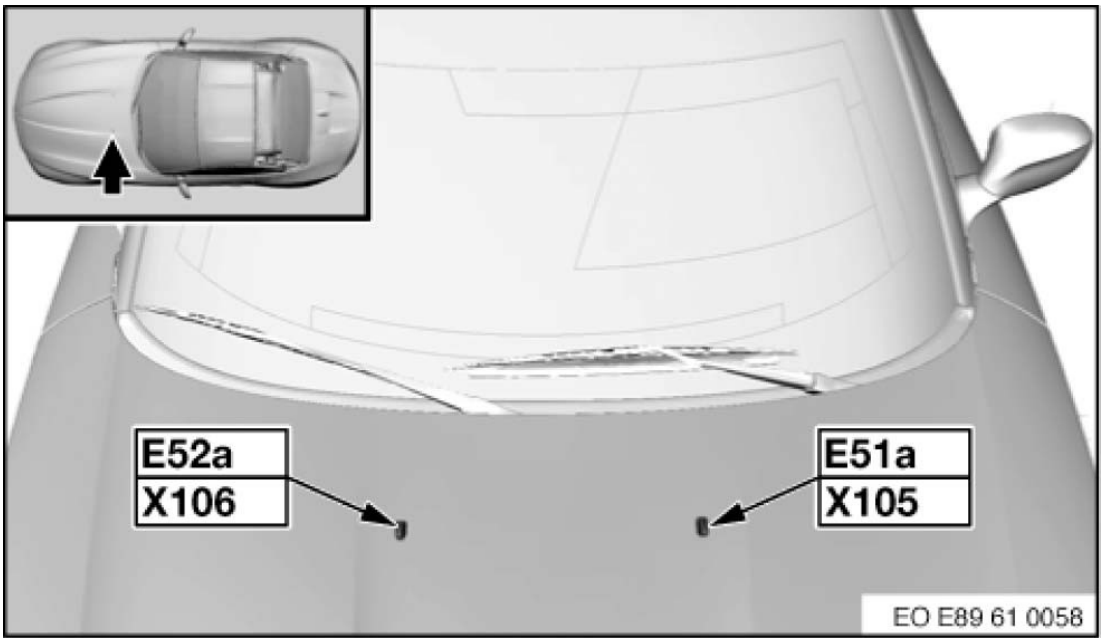

Fig. 129: Engine Compartment Lid
Courtesy of BMW OF NORTH AMERICA, INC.

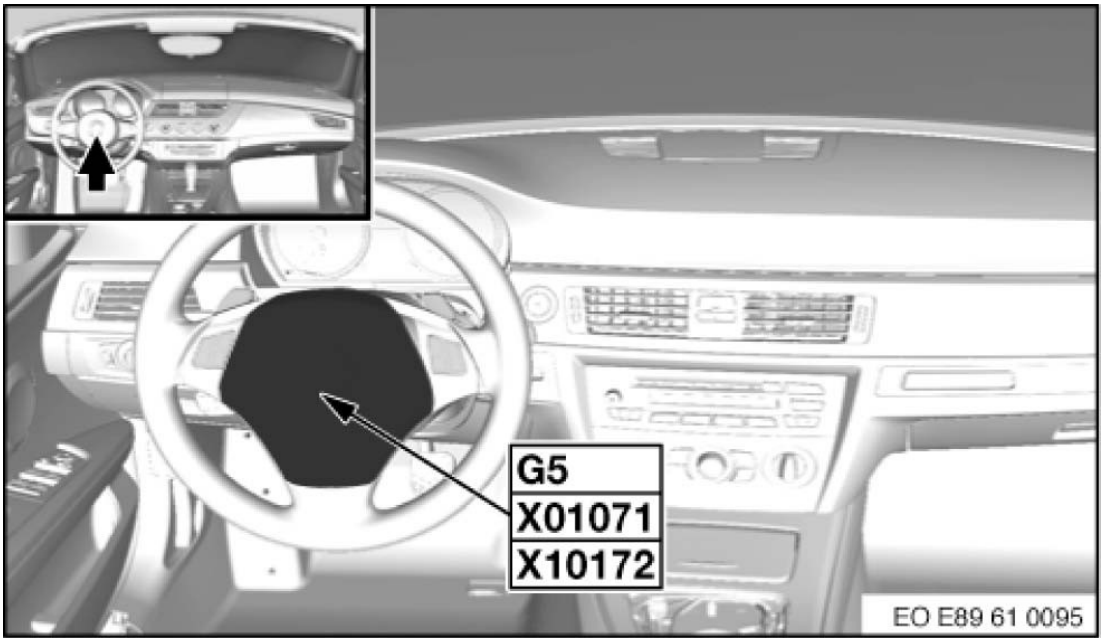

Fig. 130: Steering Wheel
Courtesy of BMW OF NORTH AMERICA, INC.

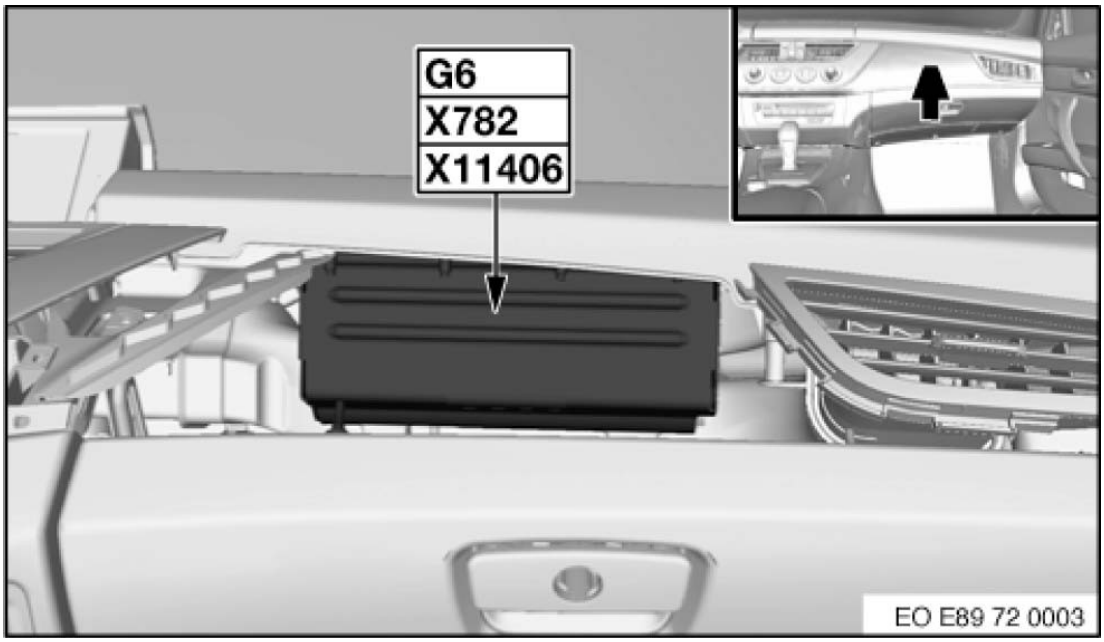

Fig. 131: Dash
Courtesy of BMW OF NORTH AMERICA, INC.

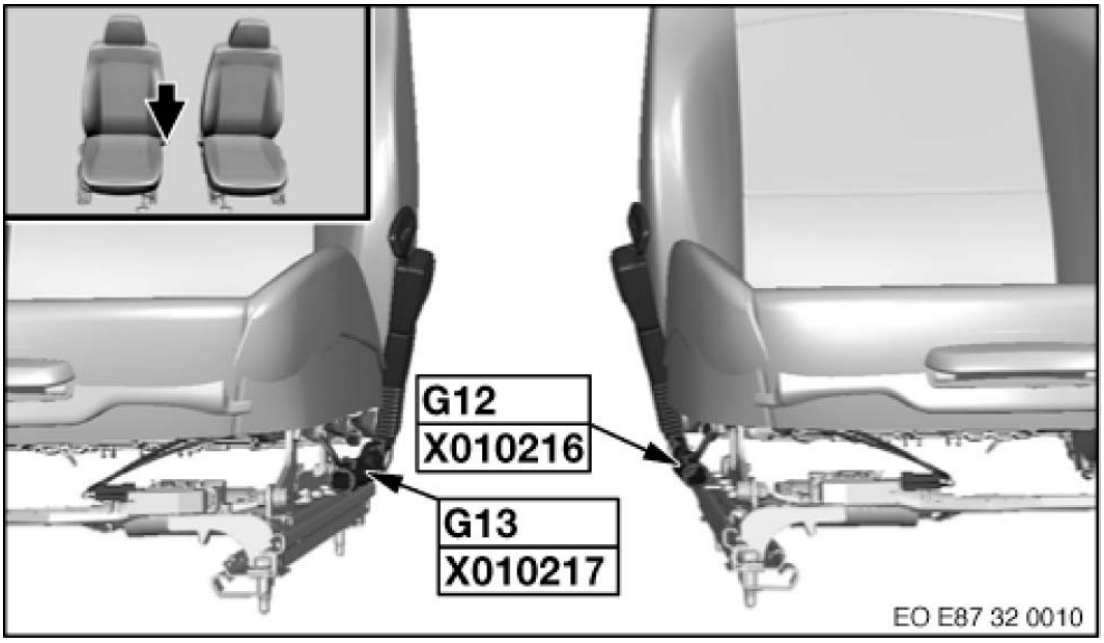

Fig. 132: Front Seats
Courtesy of BMW OF NORTH AMERICA, INC.

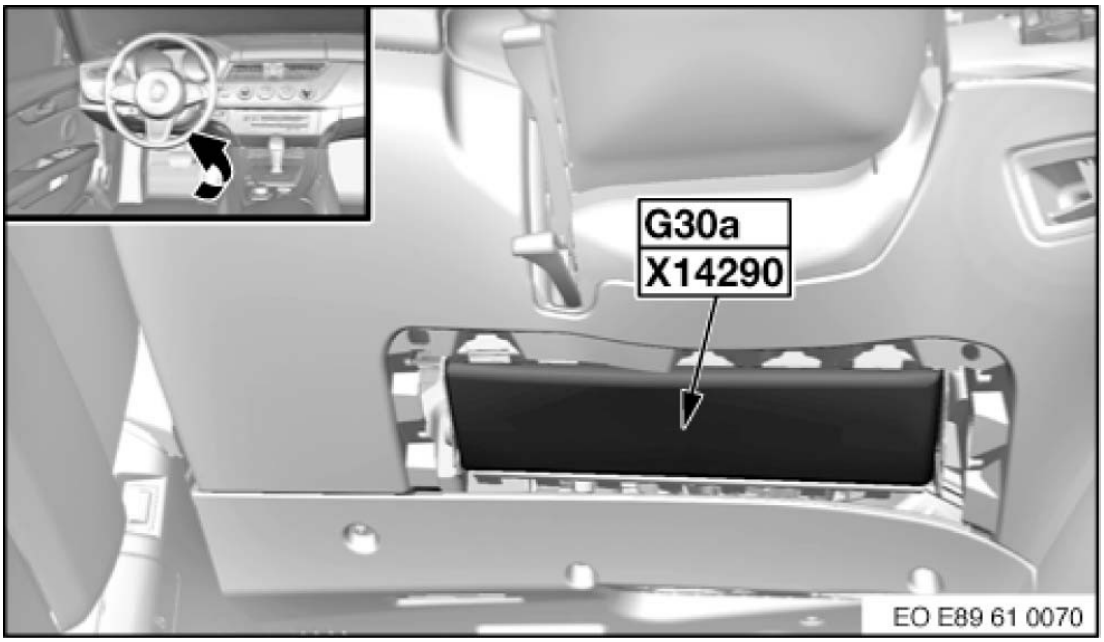

Fig. 133: Left Side Of Dash
Courtesy of BMW OF NORTH AMERICA, INC.

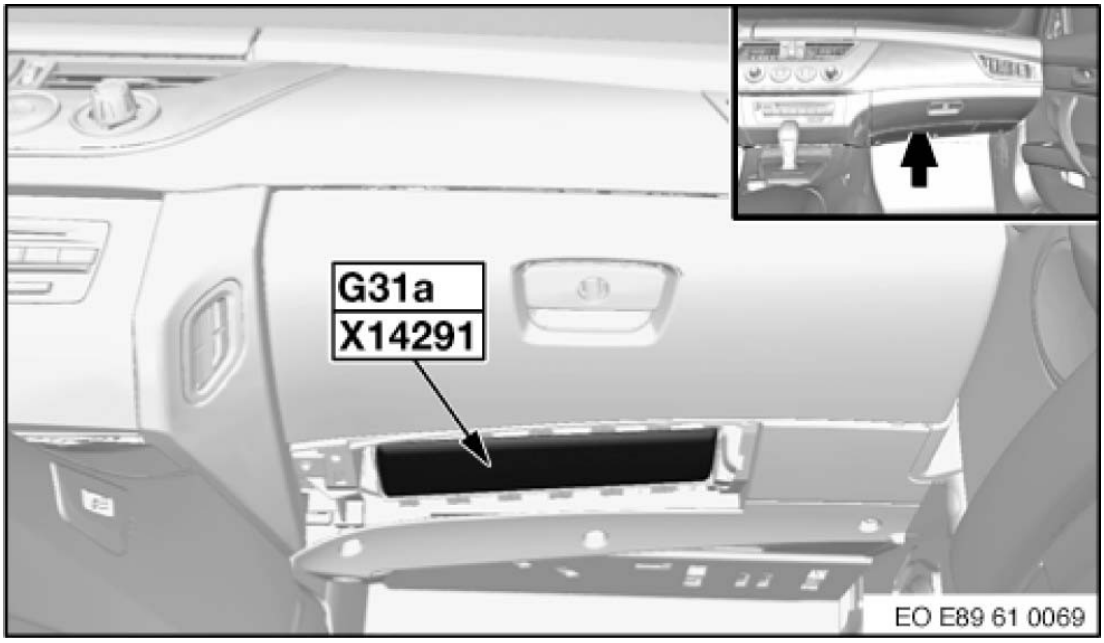

Fig. 134: Right Side Of Dash
Courtesy of BMW OF NORTH AMERICA, INC.

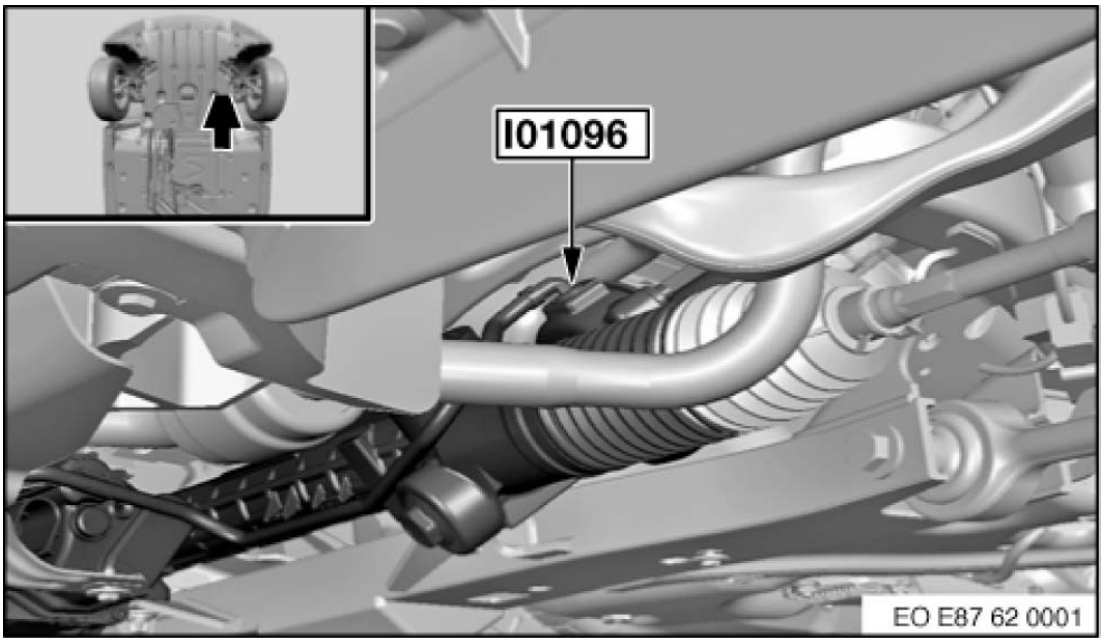

Fig. 135: Under Front Of Vehicle
Courtesy of BMW OF NORTH AMERICA, INC.

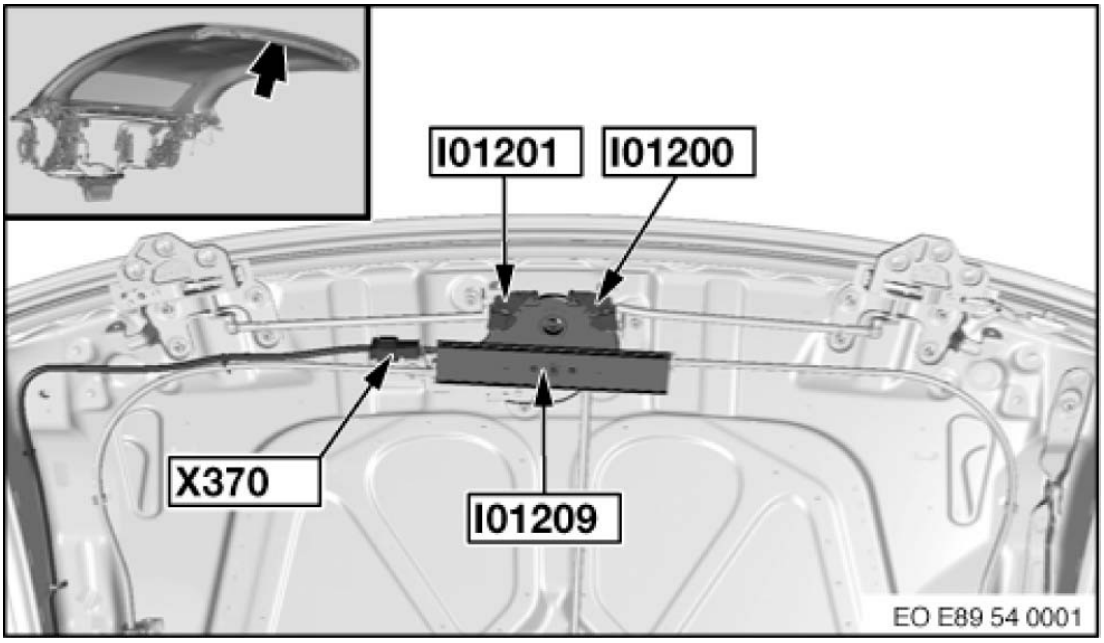

Fig. 136: Convertible Top
Courtesy of BMW OF NORTH AMERICA, INC.

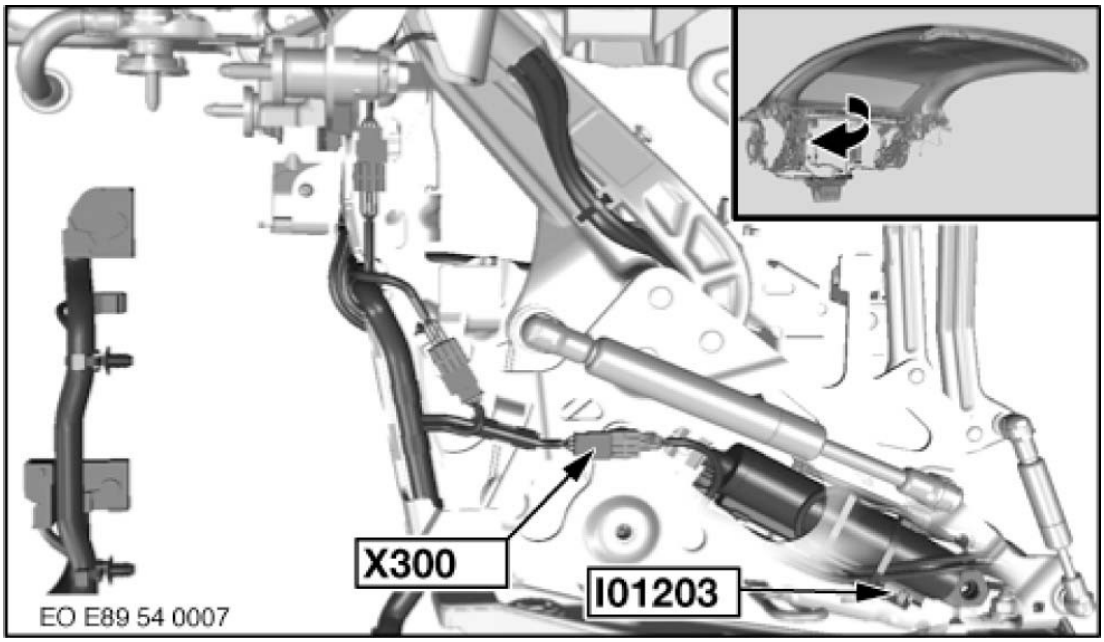

Fig. 137: Convertible Top
Courtesy of BMW OF NORTH AMERICA, INC.

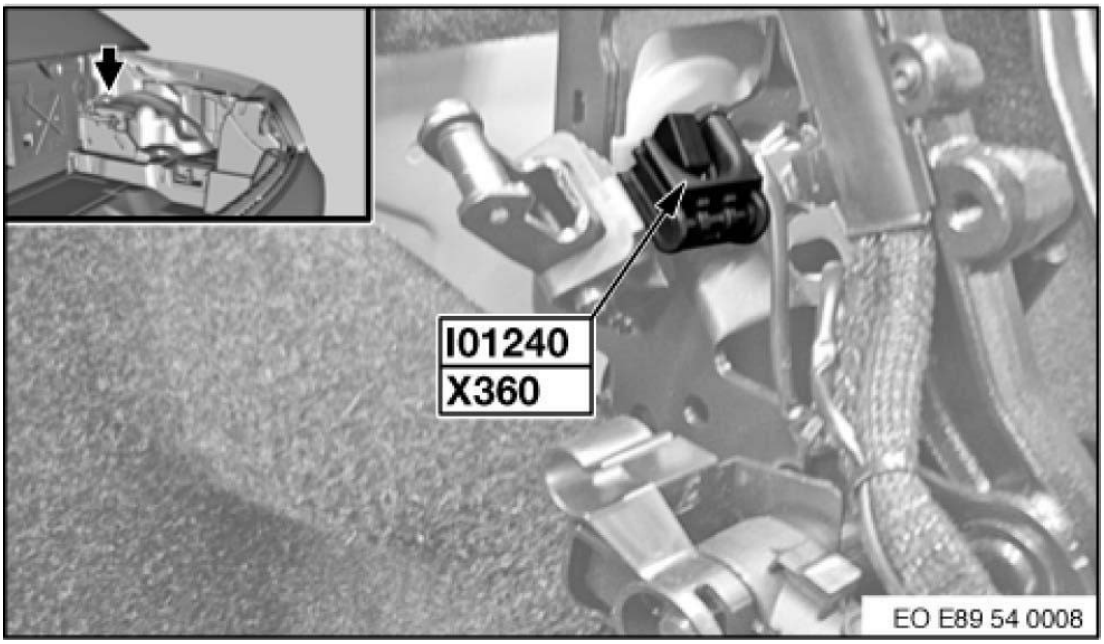

Fig. 138: Convertible Roof Stowage Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

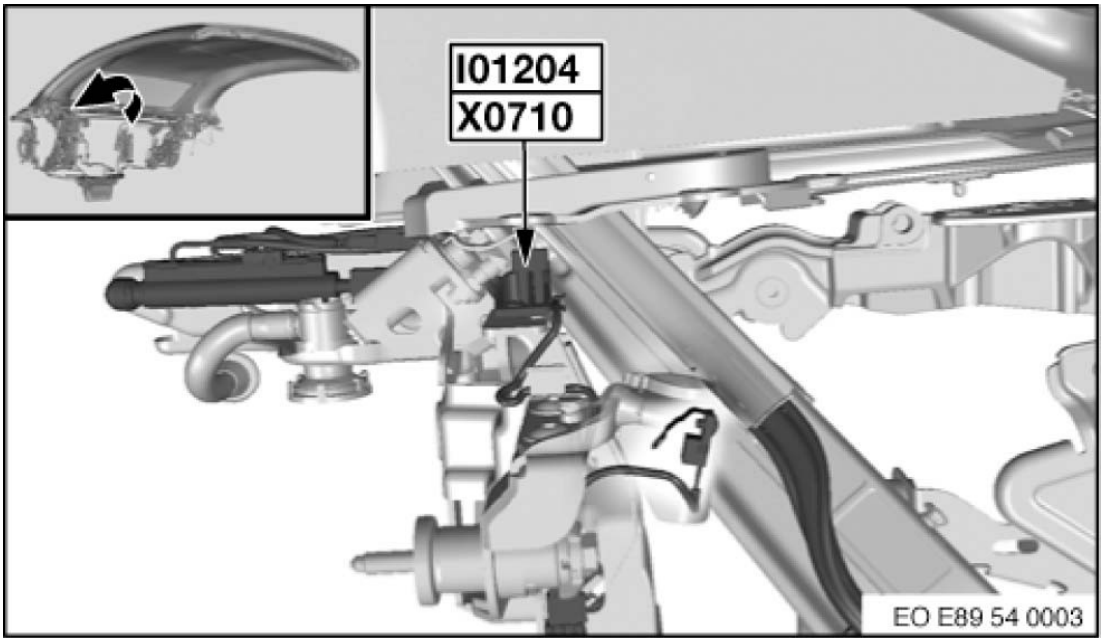

Fig. 139: Convertible Top
Courtesy of BMW OF NORTH AMERICA, INC.

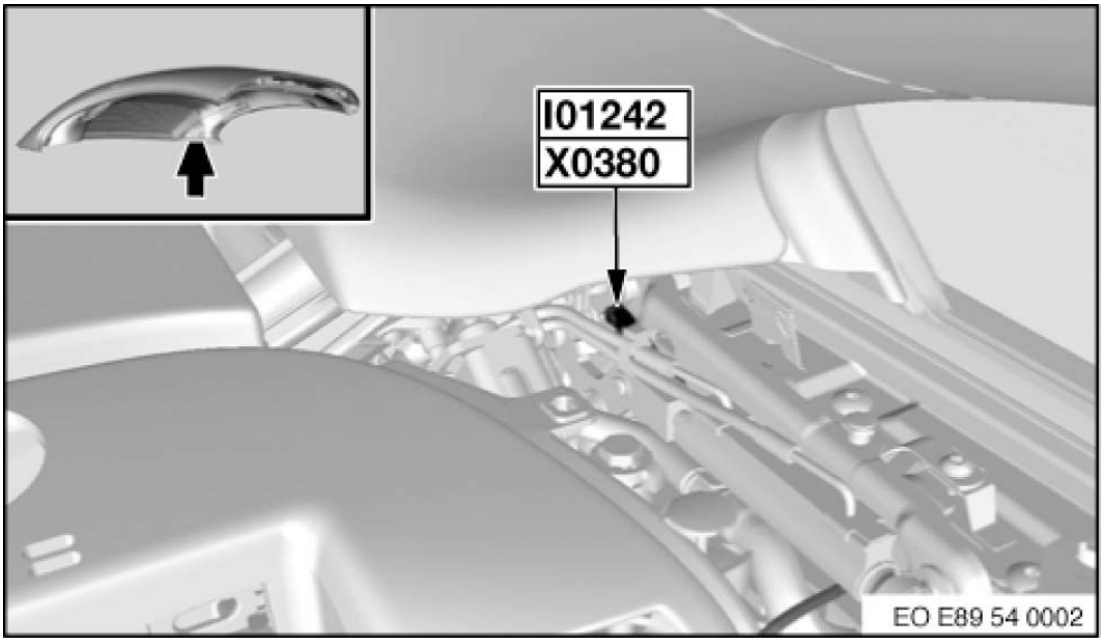

Fig. 140: Convertible Top
Courtesy of BMW OF NORTH AMERICA, INC.

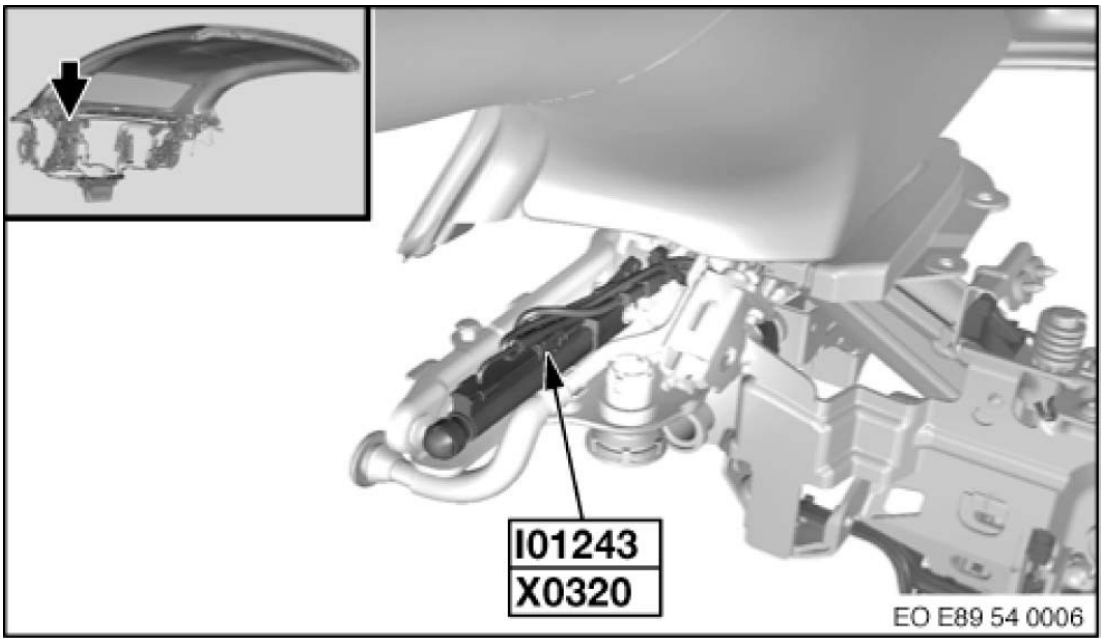

Fig. 141: Convertible Top
Courtesy of BMW OF NORTH AMERICA, INC.

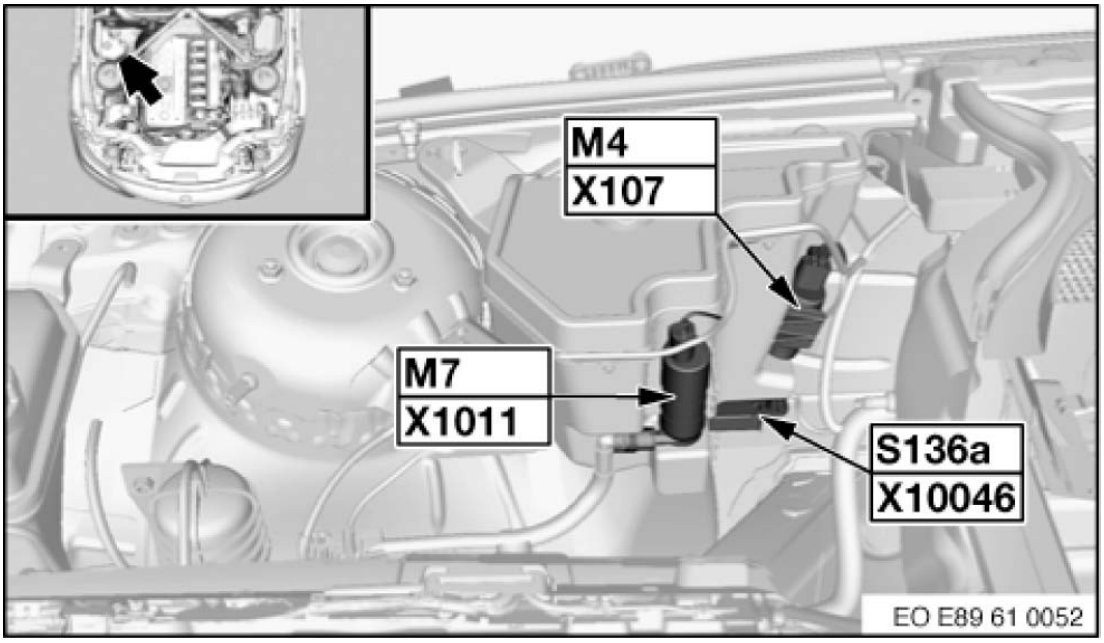

Fig. 142: Engine Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

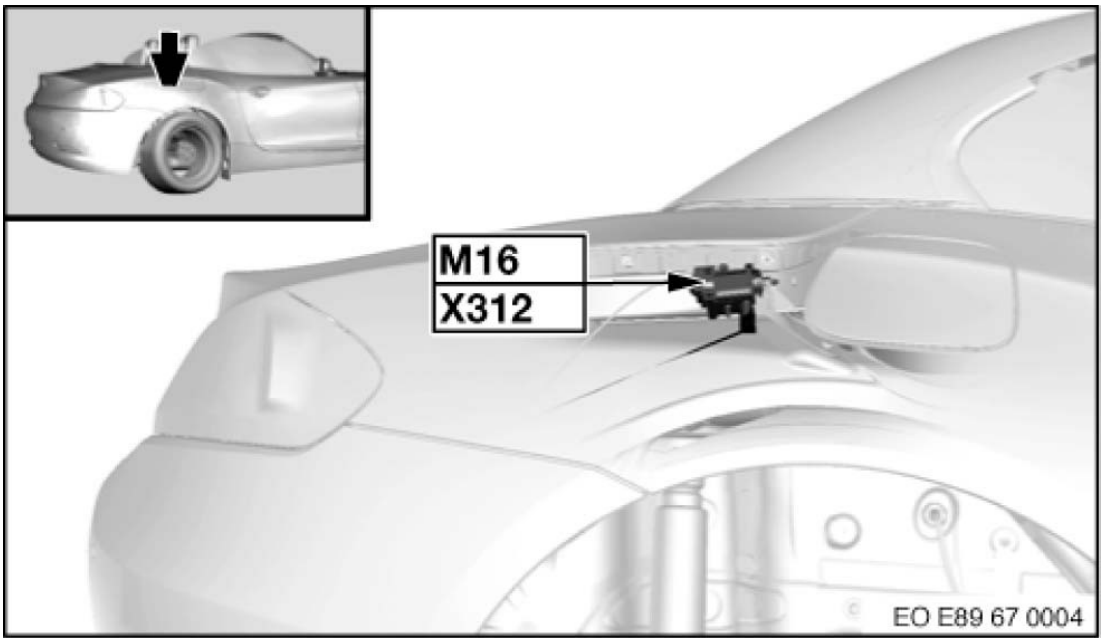

Fig. 143: Right Rear Quarterpanel
Courtesy of BMW OF NORTH AMERICA, INC.

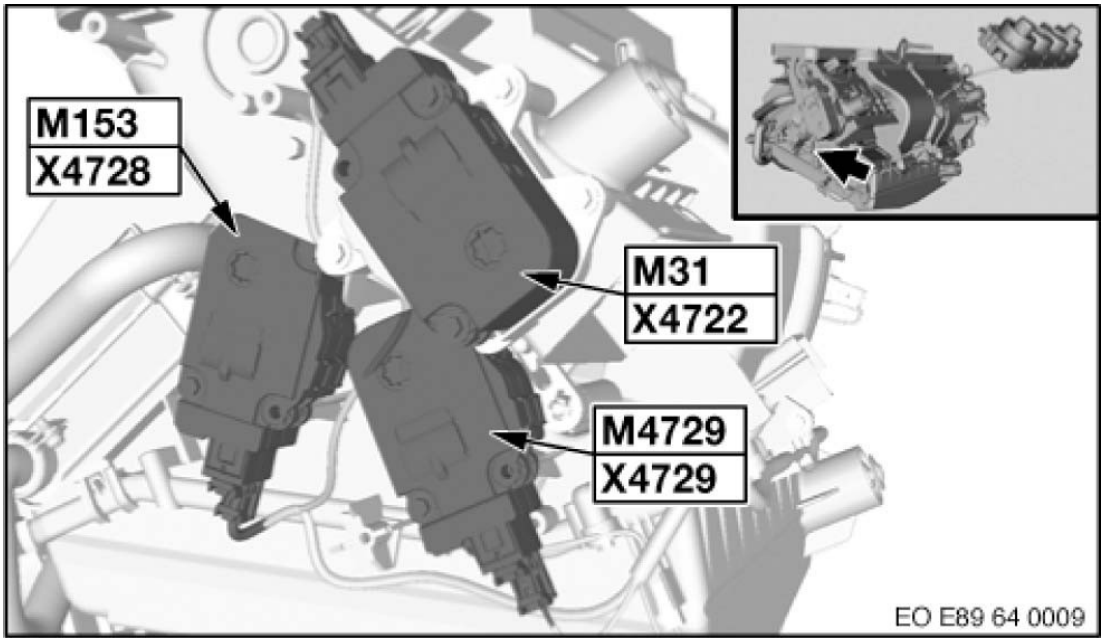

Fig. 144: HVAC Unit
Courtesy of BMW OF NORTH AMERICA, INC.

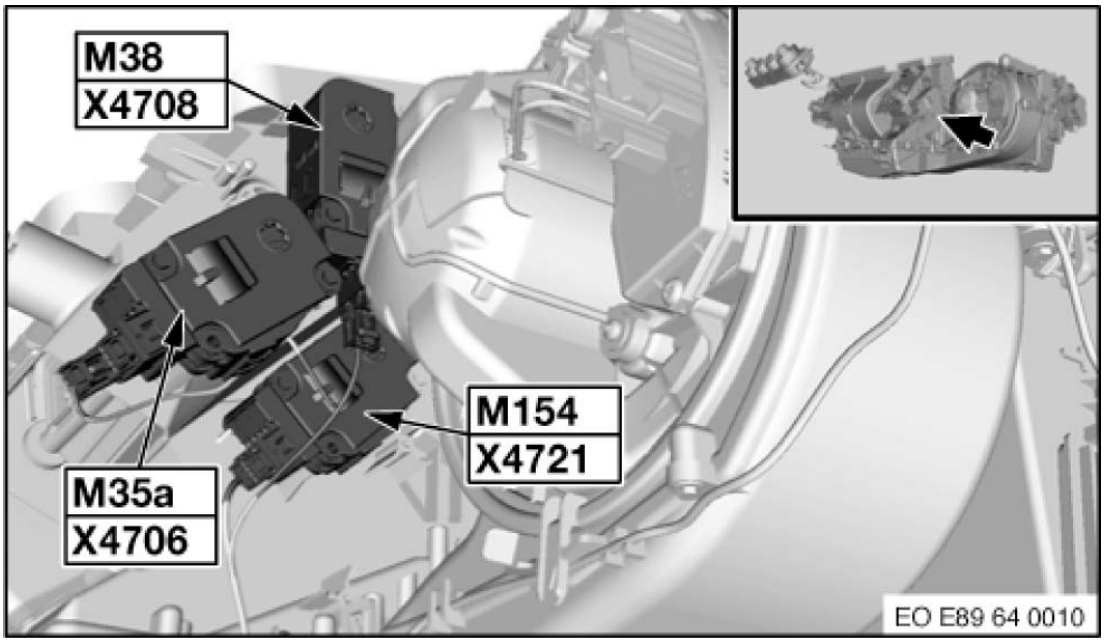

Fig. 145: HVAC Unit
Courtesy of BMW OF NORTH AMERICA, INC.

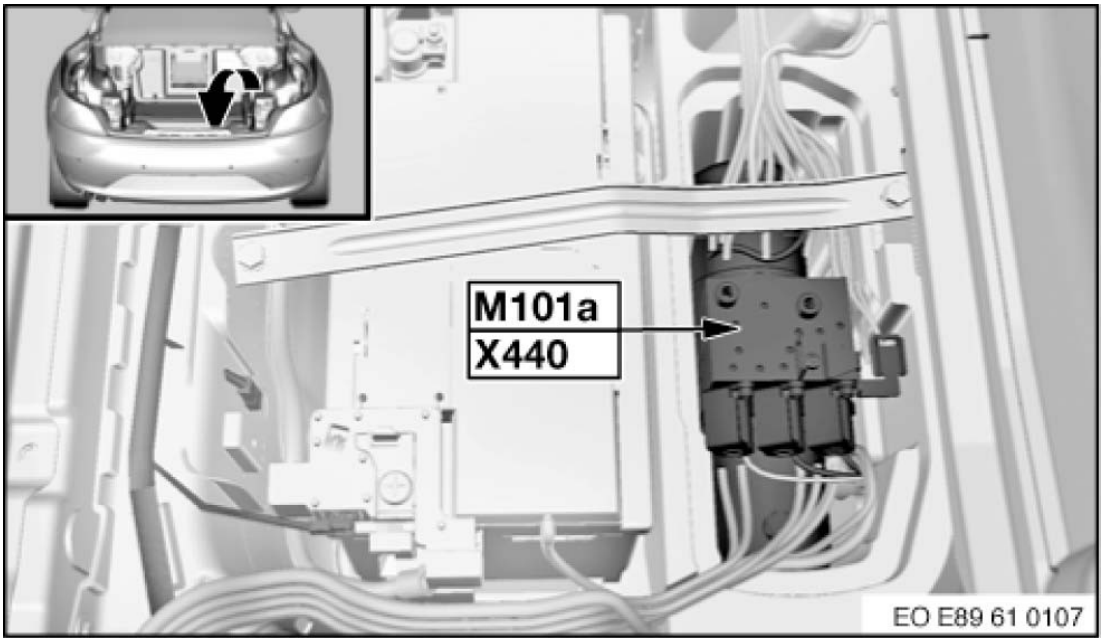

Fig. 146: Rear Compartment
Courtesy of BMW OF NORTH AMERICA, INC.

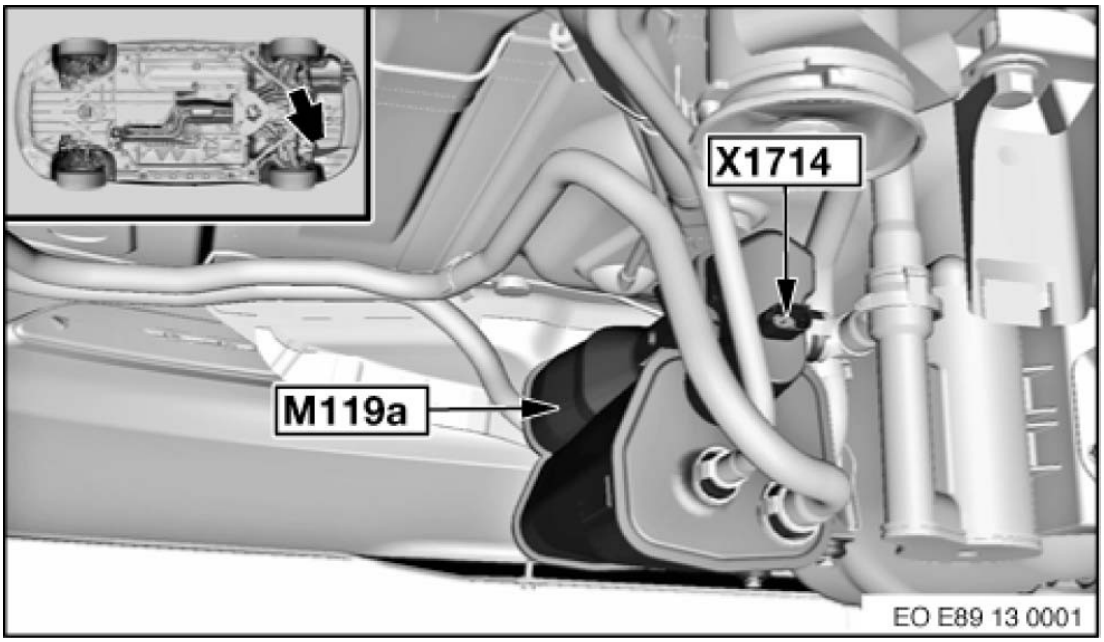

Fig. 147: Under Rear Of Vehicle
Courtesy of BMW OF NORTH AMERICA, INC.

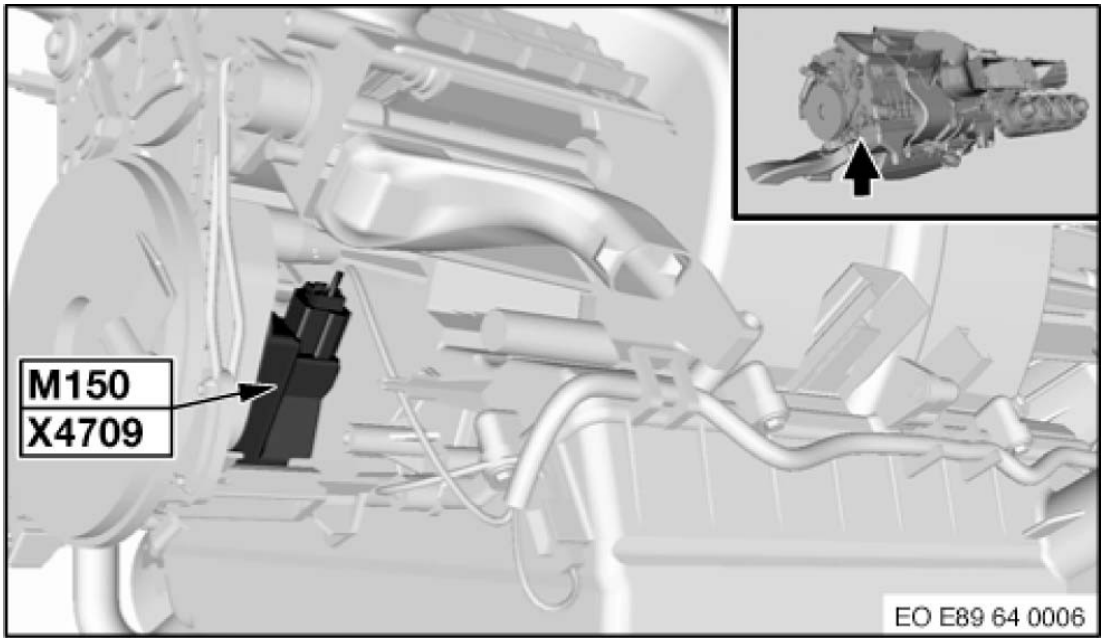

Fig. 148: HVAC Unit
Courtesy of BMW OF NORTH AMERICA, INC.

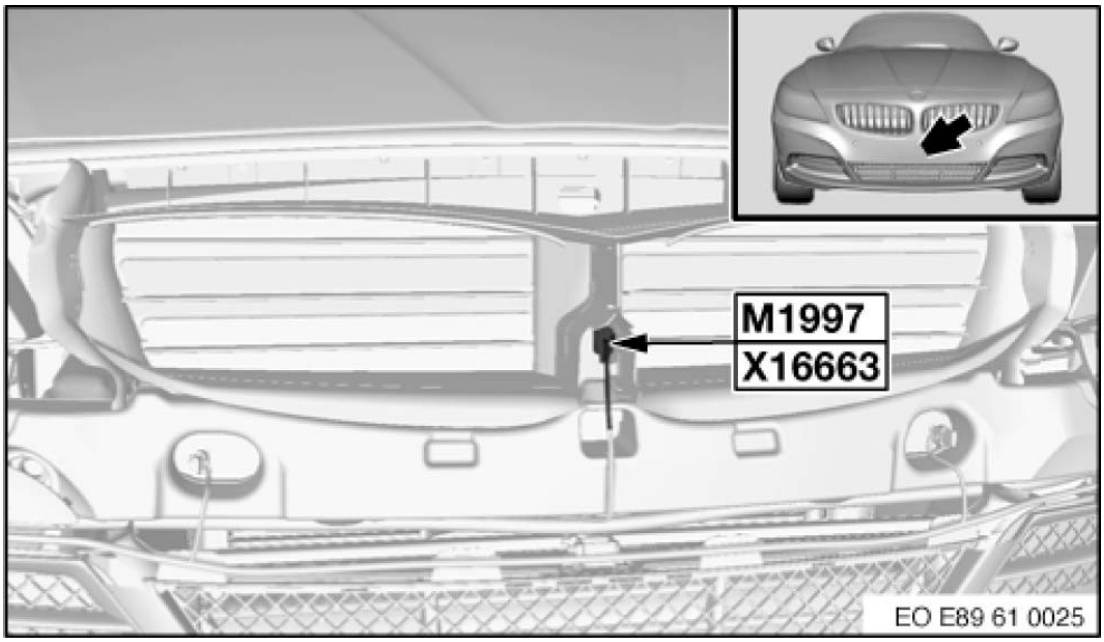

Fig. 149: Front Fascia
Courtesy of BMW OF NORTH AMERICA, INC.