


Toyota IQ 2008 – 2015 fuse box diagrams

Year of production: 2008, 2009, 2010, 2011, 2012, 2013, 2014, 2015


Fuse box in engine compartment (type A)

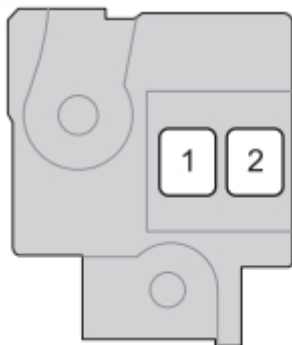

Toyota IQ – fuse box – engine compartment (type A)

Fuse	Ampere	Circuit
1 ALT	120	Charging system, RDI, ABS NO.1, HTR-B, ACC, CIG, GAUGE, ECU-IG NO.1, HTR-IG, WIPER WASHER, AM1, DOOR NO.1, STOP, DOOR NO.2, OBD, RR FOG, FR FOG, DEF, TAIL NO.2, EPS, PTC NO.1, PTC NO.2, PTC NO.3, DEICER, D/L NO.1, D/L NO.2, PANEL
2 MAIN	80	EFI MAIN, EFI NO.1, HORN, AM2 NO.1, AM2 NO.2, DOME, ECU-B NO.2, TURN&HAZ, H-LP LO, H-LP LH LO, ECU-B NO.1, D/C CUT, ETCS, H-LP HI, IG2, IGN

Fuse box in engine compartment (type B)

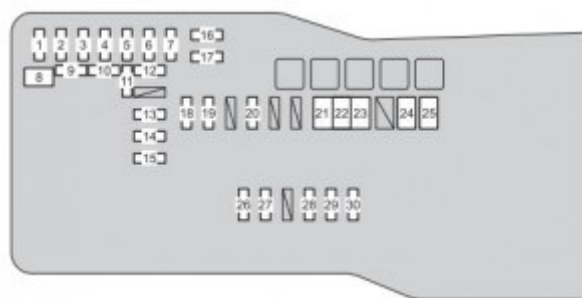

Toyota IQ – fuse box – engine compartment (type

B)


Fuse	Ampere	Circuit
1 D/C CUT	30	ECU-B NO.1, DOME
2 IMMOBI	7,5	Smart entry & start system
3 TURN & HAZ	10	Turn signal lights, emergency flashers
4 ETCS	10	Electronic throttle control system
5 ECU-B NO.2	5	Meter, power windows, air conditioning system
6 AM2 NO.2	7,5	Power management ECU
7 H-LP LH*1	10	Left-hand headlight

	H-LP LO* ²	20	Headlight (low beam)
8	(BBC)	40	No circuit
9	SPARE	30	Spare fuse
10	SPARE	20	Spare fuse
11	SPARE	5	Spare fuse
12	AM2 NO.1	30	Starting system
13	H-LP HI* ²	7,5	Headlight (high beam)
14	(STRG LOCK)	20	Steering lock system
15	H-LP RH* ¹	10	Right-hand headlight
16	DOME	15	Interior light, audio system
17	ECU-B NO.1	7,5	Main body ECU, power door lock system, smart entry & start system
18	(MIR HTR)	7,5	Outside rear view mirror defoggers
19	WIP-S	7,5	Power management ECU
20	DEFOGGER	30	Rear window defogger
21	EPS	50	Electric power steering
22	RDI	30	RDI FAN
23	ABS NO.1	50	Vehicle stability control system
24	HTR-B	40	HTR, BLR
25	ABS NO.2	30	Vehicle stability control system
26	HORN	10	Horn
27	EFI-MAIN	20	Multiport fuel injection system/ sequential multiport fuel injection system, EFI NO.1, Fuel pump
28	IGN	15	Injection, igniter
29	IG2	10	Smart entry & start system, SRS airbag system, meter
30	EFI NO.1	10	Multiport fuel injection system/ sequential multiport fuel injection system

*1: Vehicles without daytime running light system and automatic light off system

*2: Vehicles with daytime running light system or automatic light off system

Fuse box in engine compartment (type C: if equipped)

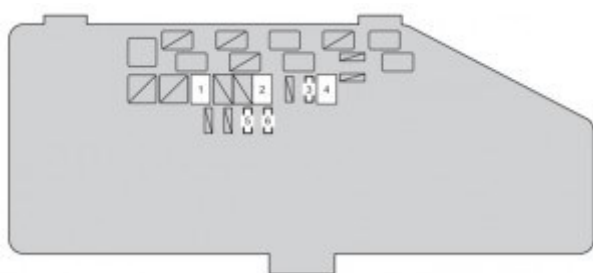


Toyota IQ – fuse box – engine compartment (type

C)

Fuse	Ampere	Circuit
1 (PTC NO.1)	30*	PTC heater
	50*	PTC heater
2 (PTC NO.3)		PTC heater
3 (DEICER)	20	No circuit
(PWR HTR)	25	No circuit
4 (PTC NO.2)	30	PTC heater
5 (H-LP RH LO)	10	Right-hand headlight (low beam)
6 (H-LP LH LO)	10	Left-hand headlight (low beam)

*: Replace the fuse with one of the same ampere rating as the original.

Fuse box under the instrument panel

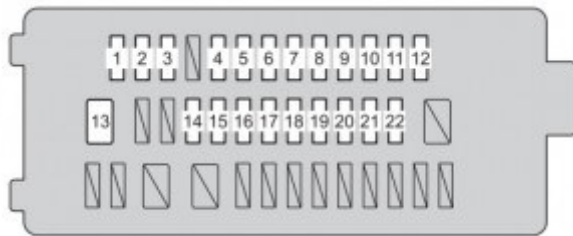

Toyota IQ – fuse box – instrument panel

	Fuse	Ampere	Circuit
1	ECU-IG NO.1	7,5	Vehicle stability control system, shift lock control system, electric power steering, automatic headlight, main body ECU
2	GAUGE	10	Electric cooling fan(s), charging system, emergency flashers, front passenger's seat belt reminder light, back-up lights, multiport fuel injection system/sequential multiport fuel injection system, windshield wiper ECU, auto anti-glare inside rear view mirror
3	HTR-IG	10	Air conditioning system, wiper deicer, rear window defogger
4	WASHER RR	10	Windshield washer
5	WIPER RR	10	Rear window wiper
6	WIPER FR	25	Windshield wipers
7	WASHER FR	10	Windshield washer
8	OBD	7,5	On-board diagnosis system
9	(FOG RR)	7,5	Rear fog light
10	TAIL NO.1*1	10	Manual headlight leveling dial, front position lights, tail lights, license plate lights
	(PANEL NO.2)*2	5	Daytime running light system
11	DOOR NO.2	20	Power windows
12	D/L NO.1	15	Power door lock system, main body ECU

13	DOOR NO.1	30	Power windows
14	CIG	15	Power outlet
15	ACC	5	Outside rear view mirrors, audio system, shift lock control system, main body ECU
16	PANEL* ¹	5	Meter, power management ECU
	(PANEL NO.1)* ²		Meter
17	TAIL NO.2* ¹	10	Front position lights, tail lights, license plate lights, rear fog light, front fog lights, manual headlight leveling dial, multiport fuel injection system/sequential multiport fuel injection system, instrument cluster, windshield wiper ECU
	TAIL* ²		
18	(FOG FR)	15	Front fog lights
19	AM1	7,5	ACC, starting system
20	STOP	10	Vehicle stability control system, power management ECU, shift lock control system, stop lights, multiport fuel injection system/sequential multiport fuel injection system
21	(D/L NO.2)	10	Power door lock system
22	(SEAT- HTR)	15	Seat heaters

*1: Vehicles without daytime running light system and automatic light off system

*2: Vehicles with daytime running light system or automatic light off system