

64 11 377

Removing and installing control panel of heater/air conditioning system



Important!

Read and comply with notes on protection against electrostatic discharge ([ESD protection](#)).



Important!

Carry out installation in a dust-free workshop area only.
To avoid damage, do not touch or dirty the display field.




Necessary preliminary tasks:

Remove [centre fresh-air grille](#)



Release screws (1).

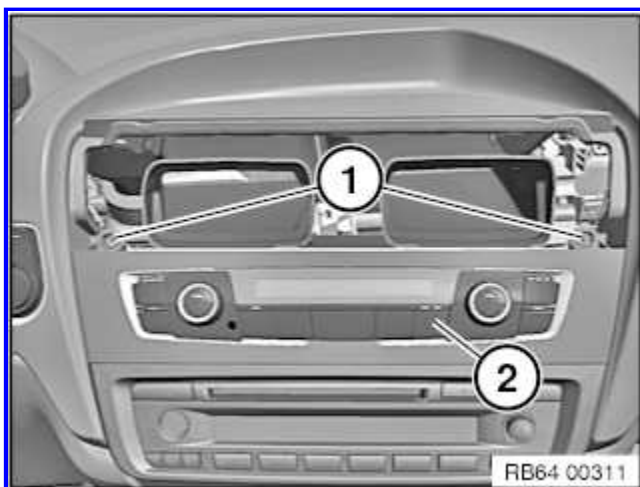

Unlock locking wedges (1) with a suitable tool (e.g. screwdriver - 3 mm blade) in upward direction.


Installation note:

Locking wedges (1) must be felt to engage.

Make sure locking wedges (1) are securely seated.

Unlock associated plug connection and disconnect.

Remove control panel for heater - air conditioning system (2).

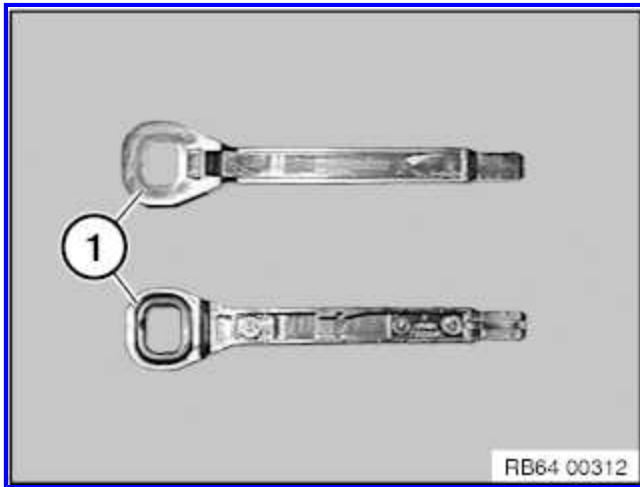

Installation note:

Locking wedges (1) must not be damaged.