

51 44 011

Removing and installing/replacing headlining (version with slide/tilt sunroof)




Necessary preliminary work:

- Remove [both trim panels for roof pillar at front](#) (A-pillar)
- Remove [both trim panels for door post at top](#) (B-pillar)
- Remove [both trim panels for rear roof pillar](#) (C-pillar)
- Remove [rear interior roof light](#)
- Remove [both sun visors and counter supports](#)
- Remove [all grab handles](#)
- Remove [trim panel for storage shelf](#)
- Detach edge protection from all doors and tailgate in headlining area.

Depending on version:

- Remove [mirror lights](#)
- Remove [roof switch cluster](#)
- [Remove](#) front ceiling light
- Remove [microphones](#)

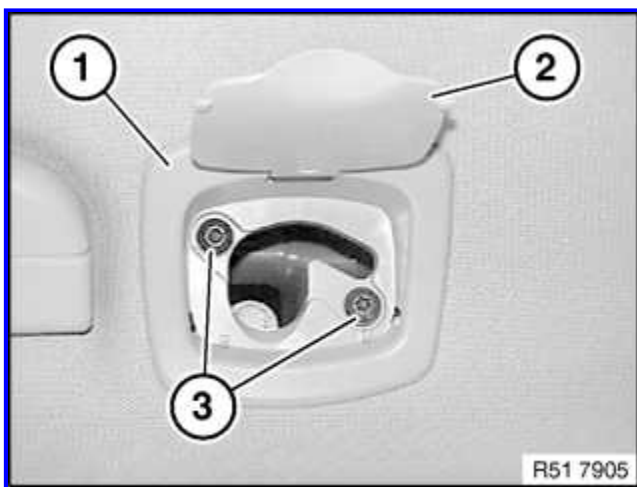

Version with load area net mounts:

Remove all load area net mounts (1):

- Open protective cap (2)
- Release screw (3).
- Remove load area net mounts (1)


Installation note:

Observe location data on rear side of load area net mount (1).

Fold down rear seat backrest.

Adjust backrest of driver's and front passenger seat all the way back.

Detach edge protection (1) toward the inside.

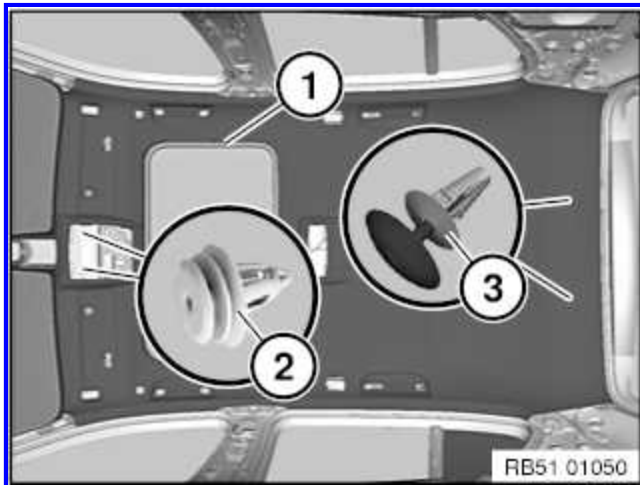


Important!

The following tasks must be carried out with a second person assisting:

Release headliner at clips (2) and expanding rivet (3).

Remove the headlining through the rear lid opening.

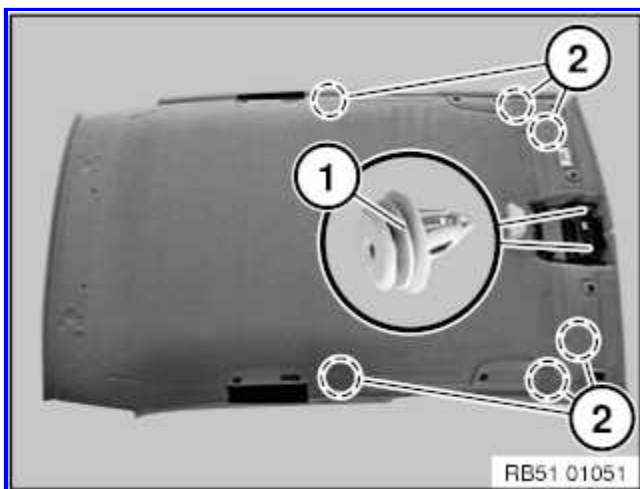

Installation note:

If necessary, replace faulty clips (1).

Replacement (depending on version):

Cut out pre-stamped aperture (2) with scalpel.

Important!

Ensure a clean cut so that the headliner material is not damaged on the inside.