


51 21 126

## Removing and installing/replacing support for left or right outer door handle without lock barrel



### Necessary preliminary work:

- Close side window if necessary
- Remove [outer door handle on front door](#)
- Release [sound insulation on front door](#) in rear part

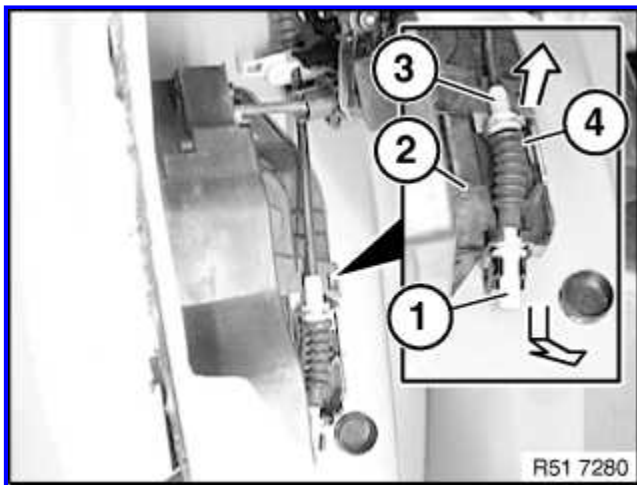

Disconnect Bowden cable at bottom (1) and top (3) from door lock (2).

### Important!

Door cannot be opened if Bowden cable is incorrectly laid.


### Installation note:

Bowden cable must be correctly engaged in locators in door lock (2).

Bowden cable must be laid without kinks in bend to door lock (2).


Seal (4) must be correctly fitted on Bowden cable.

Carry out function check with door open.

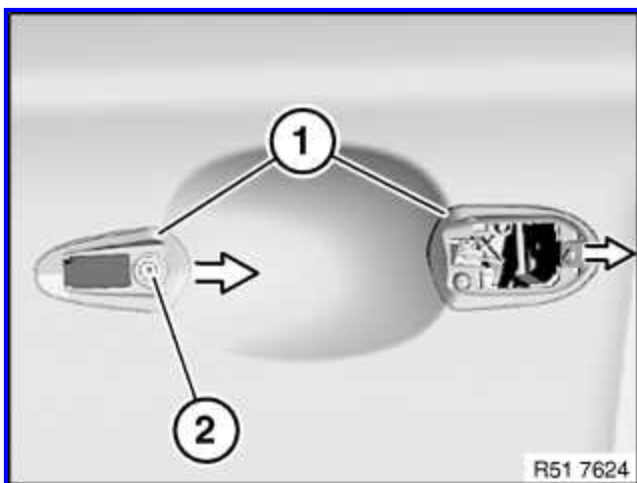


Remove seals (1) in direction of arrow.

Release screw (2).

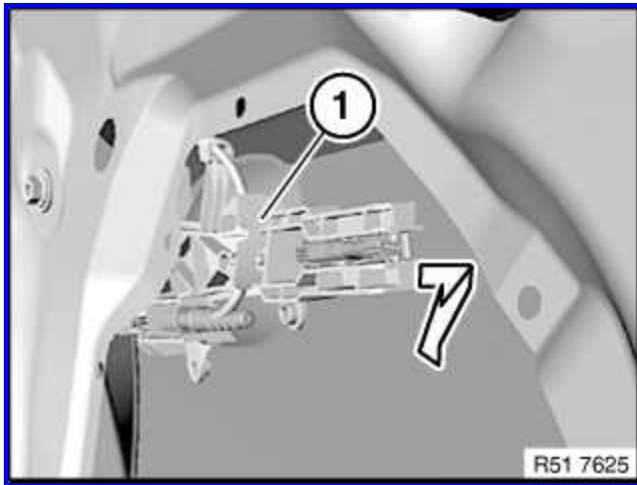

If necessary, release cable clip from support (1).


Remove inner support (1) in direction of arrow and feed out of door.

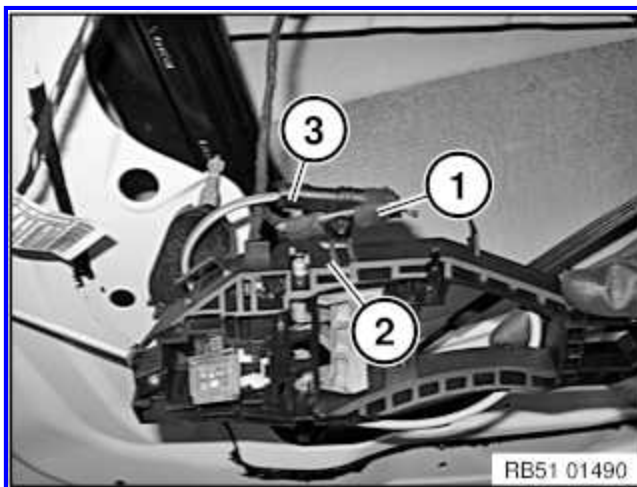

**For version with Comfort Access/light package:**

Release cable clip (1) from support (2).

Disconnect plug connection (3).

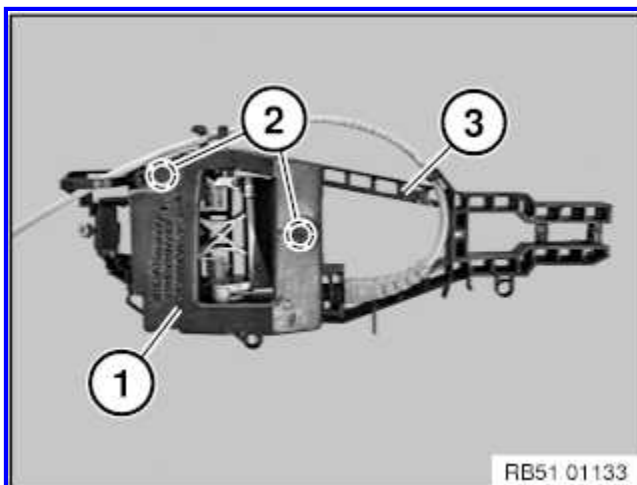

**Replacement:**


Release sound cover (1) at clips (2) and manoeuvre out of support (3).

**Replacement:**

Unclip Bowden cable (1) in area (A) and manoeuvre out of support (2).

*Installation note:*

Ensure that the Bowden cable (1) is correctly routed at support (2).

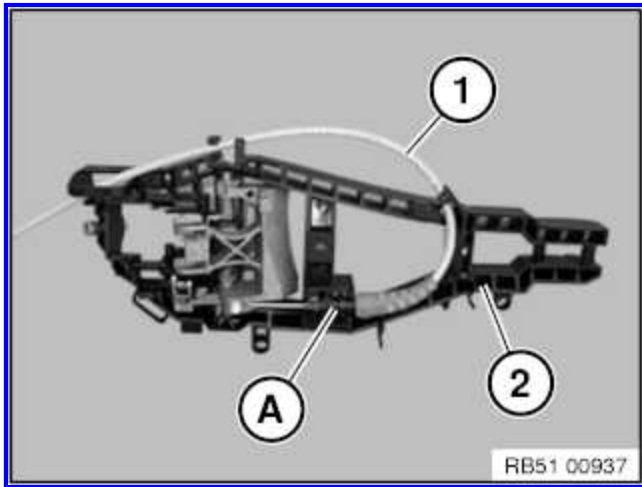

For version with Comfort Access/light package:  
Modify [outside door handle light on front door](#).