


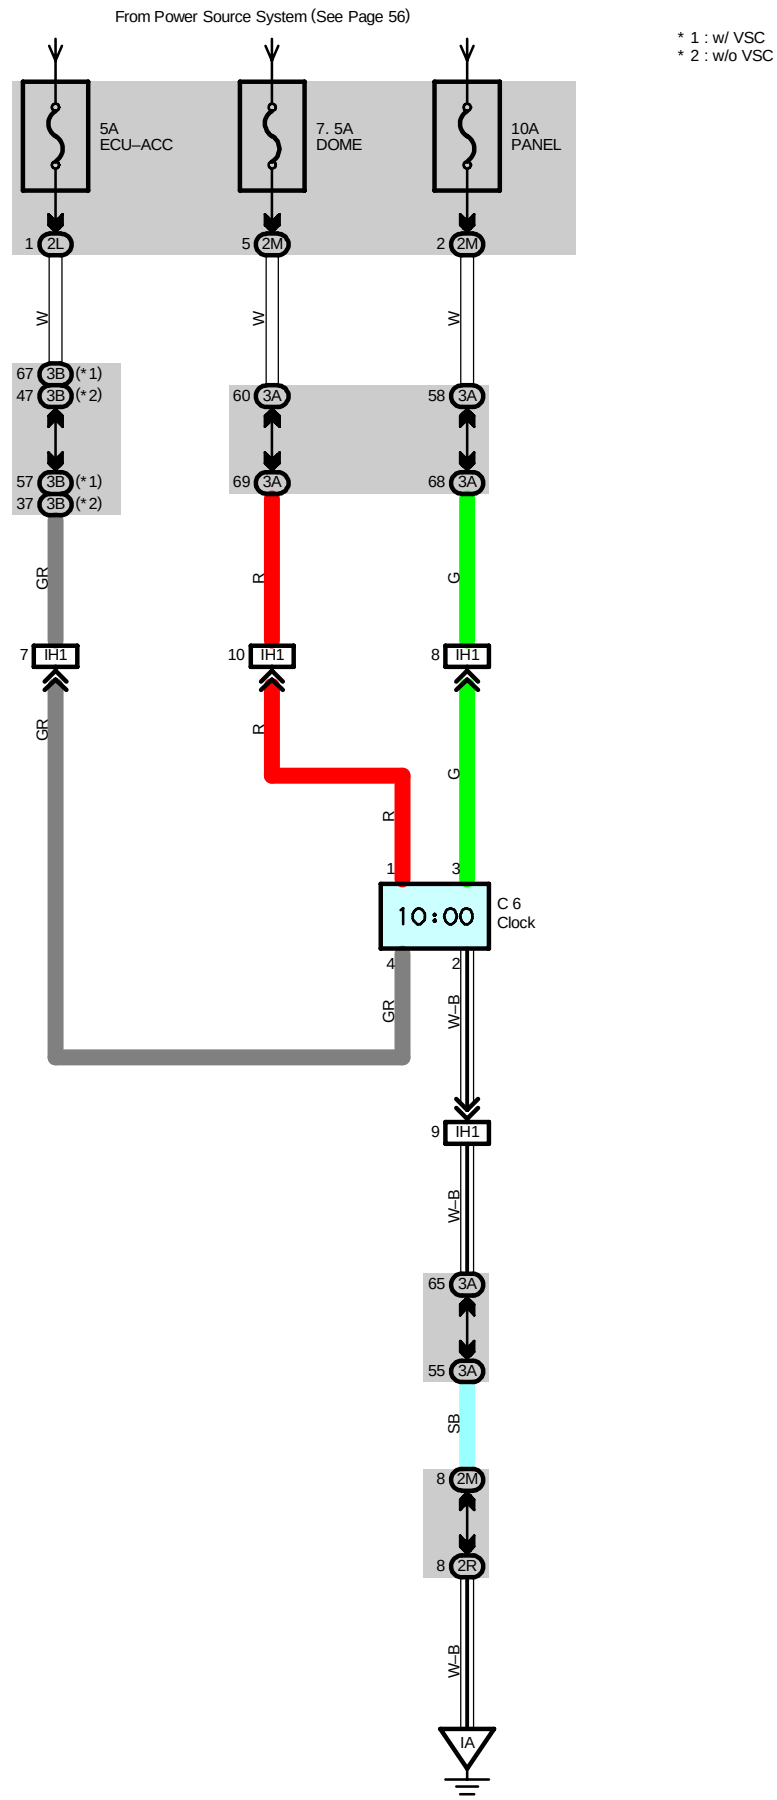

Service Hints

C6 Clock

- 1-Ground : Always approx. 12 volts (Power for clock)
- 4-Ground : Approx. 12 volts with ignition SW at ACC or ON position (Power for indication)
- 2-Ground : Always continuity

: Parts Location

Code	See Page	Code	See Page	Code	See Page
C6	38				

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2L	29	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2M		
2R		
3A	34 (w/ VSC) 35 (w/o VSC)	Instrument Panel Wire and Passenger Side J/B (Instrument Panel Brace RH)
3B	34 (w/ VSC)	
	35 (w/o VSC)	

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IH1	48	Instrument Panel Wire and Instrument Panel No.4 Wire (Behind the A/C Control Assembly)

: Ground Points

Code	See Page	Ground Points Location
IA	46	Instrument Panel Reinforcement LH