


Rear Sunshade

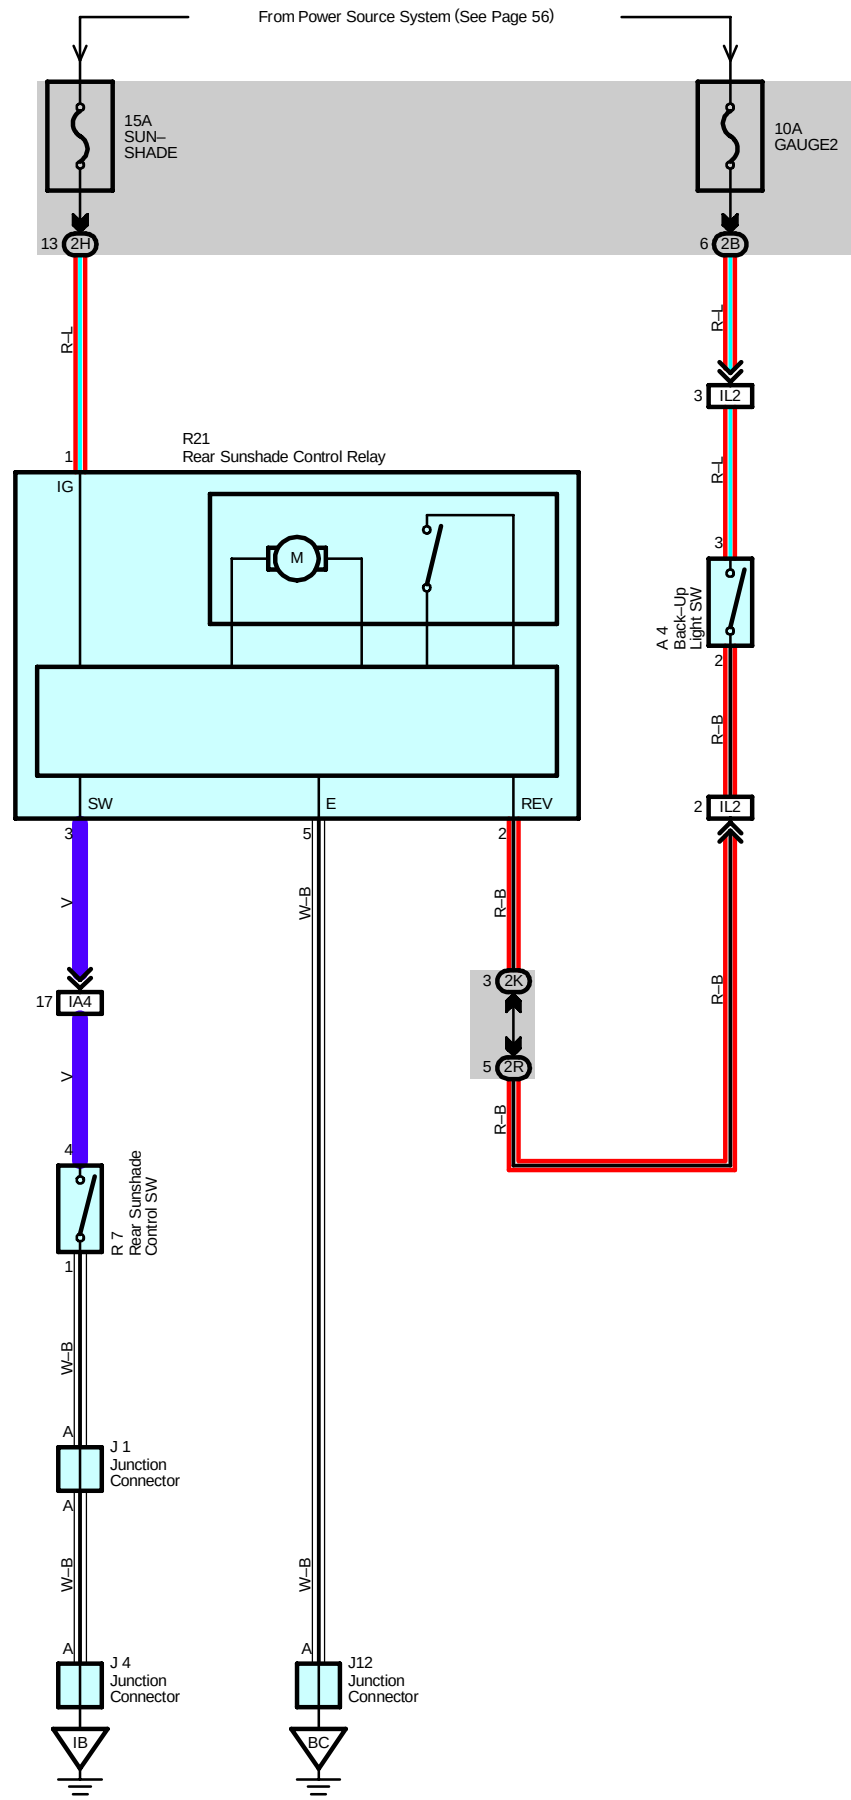

Service Hints

R21 Rear Sunshade Control Relay

- 1-Ground : Approx. 12 volts with ignition SW at ON or ST position
- 5-Ground : Always continuity

: Parts Location

Code	See Page	Code	See Page	Code	See Page
A4	36	J4	39	R7	39
J1	39	J12	40	R21	41

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2B	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2H	28	Floor No.1 Wire and Driver Side J/B (Lower Finish Panel)
2K		
2R	29	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA4	46	Instrument Panel Wire and Floor No.1 Wire (Left Kick Panel)
IL2	48	Engine Wire and Instrument Panel Wire (Behind the Glove Box)

: Ground Points

Code	See Page	Ground Points Location
IB	46	Instrument Panel Brace LH
BC	50	Front Side of Rear Quarter Wheel House LH