


Rear Window Defogger and Mirror Heater

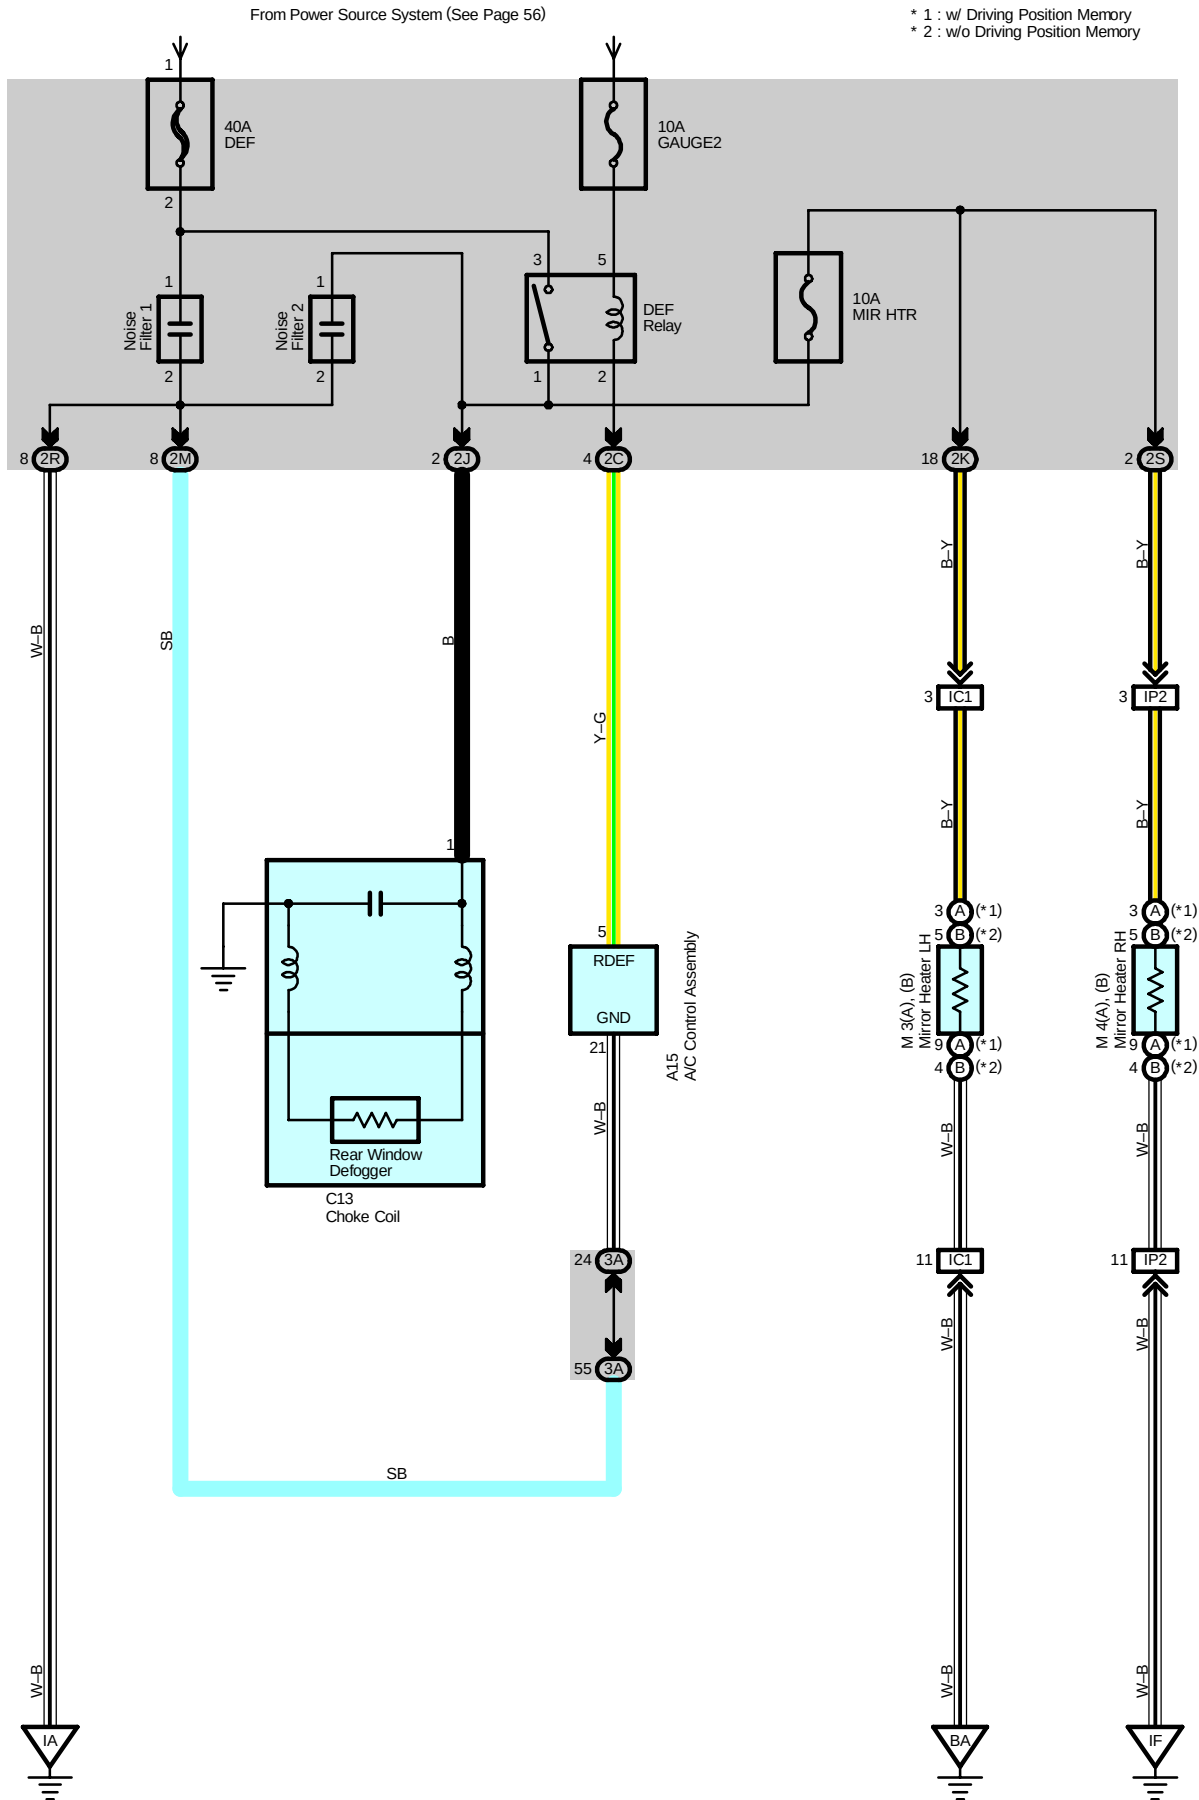

Service Hints

DEF Relay

3-1 : Closed with the ignition SW at on and rear window defogger SW (A/C control assembly) on

M3 (A), (B) Mirror Heater LH

M4 (A), (B) Mirror Heater RH

(A) 3, (B) 5-Ground : Approx. 12 volts with the rear window defogger SW (A/C control assembly) on

(A) 9, (B) 4-Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A15	38	M3	A 41	M4	A 41
C13	40		B 41		B 41

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2C	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2J	28	Floor No.1 Wire and Driver Side J/B (Lower Finish Panel)
2K		
2M	29	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2R		
2S		
3A	34 (w/ VSC)	Instrument Panel Wire and Passenger Side J/B (Instrument Panel Brace RH)
	35 (w/o VSC)	

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC1	46	Front Door LH Wire and Floor No.1 Wire (Left Kick Panel)
IP2	48	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)

▽ : Ground Points

Code	See Page	Ground Points Location
IA	46	Instrument Panel Reinforcement LH
IF	46	Instrument Panel Reinforcement RH
BA	50	Under the Driver's Seat