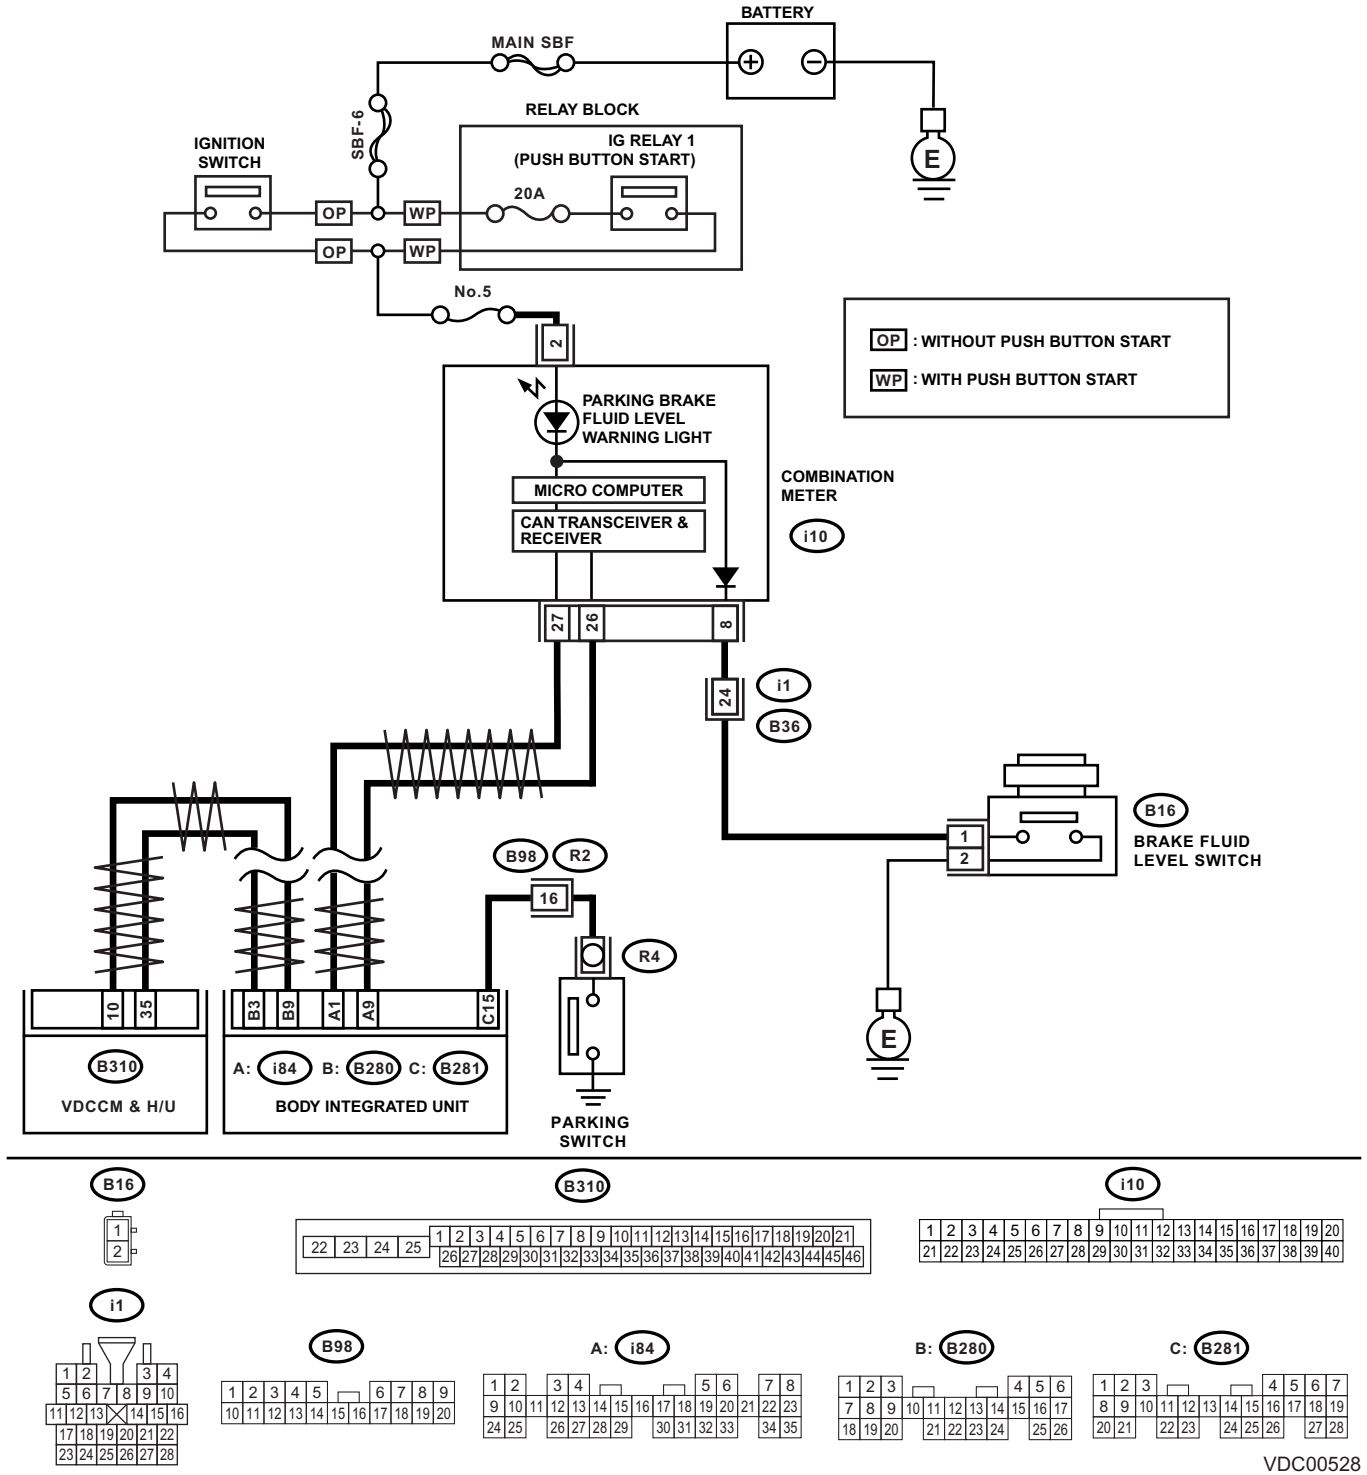

BATTERY
MAIN SBF
RELAY BLOCK
SBF-6
IGNITION SWITCH
IG RELAY 1 (PUSH BUTTON START)
20A
OP
WP
OP
WP
E
No.5
2
OP : WITHOUT PUSH BUTTON START
WP : WITH PUSH BUTTON START
PARKING BRAKE FLUID LEVEL WARNING LIGHT
MICRO COMPUTER
CAN TRANSCEIVER & RECEIVER
COMBINATION METER
i10
27
26
8
24
i1
B36
B16
BRAKE FLUID LEVEL SWITCH
1
2
B98
R2
16
R4
E
10
35
B3
B9
A1
A9
C15
B310
VDCCM & H/U
A: i84 B: B280 C: B281
BODY INTEGRATED UNIT
PARKING SWITCH


B16
1
2
B310
22 23 24 25
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21
26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46
i10
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20
21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40
i1
1 2 3 4
5 6 7 8 9 10
11 12 13 14 15 16
17 18 19 20 21 22
23 24 25 26 27 28
B98
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18 19 20
A: i84
1 2 3 4 5 6 7 8
9 10 11 12 13 14 15 16 17 18 19 20 21 22 23
24 25 26 27 28 29 30 31 32 33 34 35
B: B280
1 2 3 4 5 6
7 8 9 10 11 12 13 14 15 16 17
18 19 20 21 22 23 24 25 26
C: B281
1 2 3 4 5 6 7
8 9 10 11 12 13 14 15 16 17 18 19
20 21 22 23 24 25 26 27 28

VDC00528