


Mercury Grand Marquis Second Generation 1998 – 2002 fuse box diagram

Fuse box in instrument panel

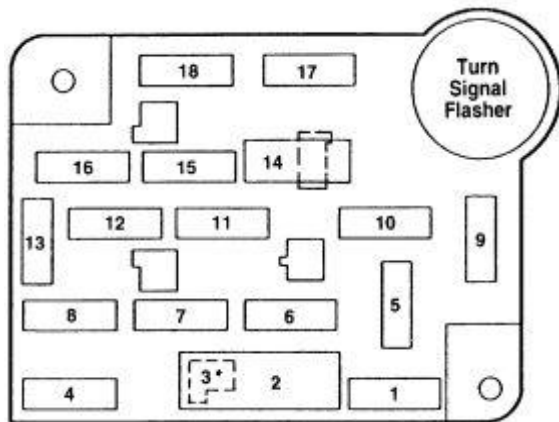


Mercury Grand Marquis Second Generation – fuse box – instrument panel

Fuse	Ampere rating [A]	Circuits protected
1	15	Hazard flasher, speed control, stop lamps
2	30	Wiper control module, windshield wiper motor

3	—	Not used
4	15	Lighting control module, headlamp dimmer switch
5	15	Backup lamps, variable assist power steering (VAPS), turn signal, air suspension, daytime running lamps, trailer battery charging, electronic day/night mirror, shift lock, EATC
6	15	Speed control, main light switch, headlamp dimmer switch, lighting control module, heated back lights and mirrors, clock
7	25	Powertrain control module (PCM) power diode, ignition coils
8	15	Lighting control module, power mirrors, remote keyless entry, clock memory, radio memory, electronic automatic temperature control (EATC), power door locks, power seats, power windows
9	30	Blower motor, A/C – heater mode switch
10	10	Air bag module

11	15	Radio
12	20 CB	Lighting control module, flash-to-pass, main light switch
13	15	Air bag module, warning lamps, analog, cluster gauges and indicators, electronic automatic transmission, lighting control module, front control unit
14	—	Window/door lock control, driver's door module, one touch down
15	10	Analog instrument cluster, anti-lock brakes, charge indicator
16	20	Cigar lighter, emergency flasher relays
17	10	Power mirrors, rear defrost
18	15	Air bag module, digital instrument cluster

The high current fuses and relays

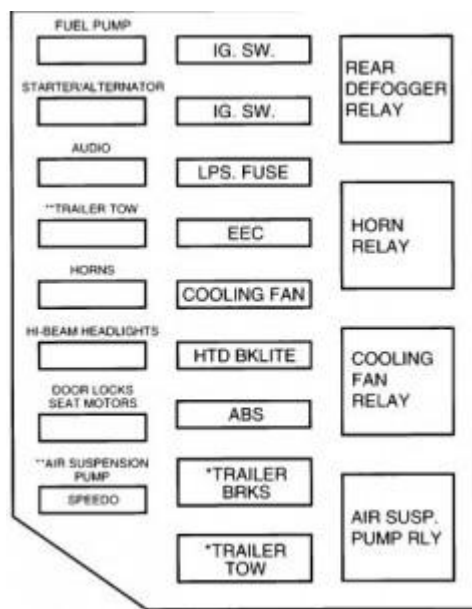

Mercury Grand Marquis Second Generation – fuse box – high current fuse panel

MAXI – fuse	Ampere rating [A]	Circuits protected
IGN. SW.	50	See fuses 1, 2, 6, 7,10, 11, 13 and circuit breaker 14
IGN. SW.	50	Starter Relay, also see fuses 5, 9

LAMPS FUSE PANEL	40	Headlamps, daytime running lamps, also see fuses 4, 8, 16 and Circuit Breaker 12
EEC	30	PCM Power Relay, PCM
COOLING FAN	50	Cooling Fan Relay
HTD BACKLITE	40	Rear window defrost relay, also see Fuse 17
ABS CONTROLLER	30	Anti-Lock Brake Module
* TRAILER BRAKES	30	Electric Brake Controller
* TRAILER TOW	40	Trailer Turn, battery charging relay
** AIR SUSP. PUMP/SPEEDO	30	Air suspension compressor relay, air spring solenoids

Fuse	Ampere rating [A]	Circuits protected
FUEL PUMP	20	Electric fuel pump relay
STARTER/ALTERNATOR	30	Starter Relay, Generator, Fuses 15, 18
AUDIO	25	Radio amplifier, subwoofer amplifier
* TRAILER TOW	20	Trailer exterior lamp relays
HORNS	15	Horn relay, horns
HI-BEAM HEADLIGHTS	20	Lighting Control Module, DRL
DOOR LOCKS/ SEAT MOTORS	20 CB	Power door locks, power seats, trunk lid release, fuel filler door release

* with trailer tow only

** with air suspension only

