


Mercury Monterey 2004 – 2007 fuse box diagram

Engine Compartment Fuse Box

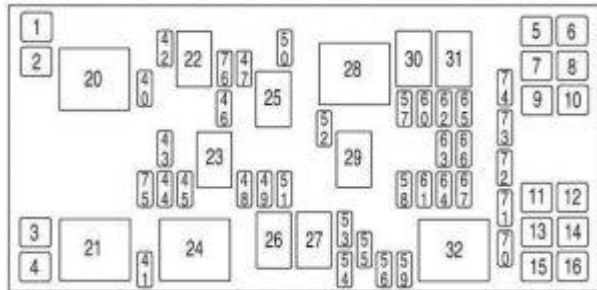

Mercury Monterey – fuse box diagram – engine compartment

No.	A	Protected components
1	—	Not used
2	30	Right cooling fan
3	30	Left cooling fan
4	30	Starter solenoid

5	30	Right-hand power sliding door
6	30	SJB accessory #2 (driver power window)
7	30	Auxiliary blower motor
8	40	Anti-lock Brake System (ABS) #2 (coil power)
9	30	Power liftgate
10	30	SJB accessory #1 (passenger window, radio, vent windows)
11	30	Left power seat/heated seat
12	40	ABS #1 (pump motor)
13	40	Rear defroster

14	30	Front climate control system blower motor
15	30	Right power seat/heated seat
16	30	Left-hand power sliding door
40	15	Engine #1 (A/C relay coil, IMRC, HEGO sensors, Canister purge, Transmission module, Canister vent ('04-'05))
41	25	Horn
42	10	A/C clutch
43	15	Engine #2 (Cooling fan relays, Injectors, PCM, MAF sensor, IAC, Ignition coil, ESM)
44	10	Heated PCV
45	15	High beams

46	20	Trailer stop/turn lamps
47	15	Fuel pump, Fuel pump shut-off switch
48	15	Fog lamps
49	10	PCM KAP, Canister vent ('06-'07)
50	10	Alternator
51	10	Adjustable pedals (non-memory) or memory module
52	20	Trailer tow park lamps
53	10	Heated mirrors
54	30	Front wiper motor

55	25	Rear wiper motor
56	30	Premium sound radio
57	20	'04: Cigar lighter
58	30	SJB #1 – Center High-Mounted Stop Lamp (CHMSL), License plate lamps, OBD II, Dome lamp, Auxiliary blend doors, Switch illumination (feeds F-8, F-9, F-10nd F-II)
59	20	Radio (non-premium)
60	30	SJB #4 – Back-up lamps, Theft sounder ('04), Door locks
61	20	'04: 3rd row power point


62	30	SJB #3 – Right cornering/auxiliary lamps, Right low beam, Left front park/turn lamps, Left rear park/stop/turn lamps, Instrument panel courtesy lamps, Step well lamps, Left signal mirror, Clock, Cluster, Message center (SJB F-15), Switch illumination for: overhead console, DVD/Rear climate control system, Headlamp switch illumination, Climate control illumination
63	20	Instrument panel power point, Cigar lighter ('05-'07)
64	20	Ignition switch #1 feed
65	30	SJB #2 – Left cornering/auxiliary lamps, Left low beam, Right front park/turn lamps, Right rear park/stop/turn lamps, Puddle lamps, Mirror signals, Visors, 2nd and 3rd row lamps, Cargo lamp, Defroster indicator
66	20	2nd row seat power point, 3rd row power point ('05-'07)
67	20	Ignition switch #2 feed

70	—	Not used
71	—	Not used
72	—	Not used
73	—	Not used
74	—	Not used
Relay		
20	Powertrain Control Module (PCM) power	
21	Horn	
22	A/C clutch	

23	High beams
24	Starter
25	Fuel pump
26	Fog lamps
27	Not used
28	Auxiliary blower
29	Trailer park lamps
30	Left trailer stop/turn lamps
31	Right trailer stop/turn lamps

32	Rear defroster
Diode	
75	PCM
76	A/C clutch

Passenger Compartment Fuse Box

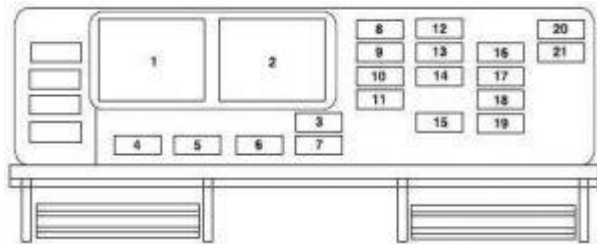

Mercury Monterey – fuse box diagram – passenger compartment


No.	A	Protected components
3	10	Front wiper motor Run feed

4	5	B+ feed to outside mirrors
5	20	Vent window power feed/Radio feed
6	5	Driver door switch illumination/Passenger door switch illumination
7	10	Rear wiper Run feed
8	10	Cluster/Electronic Automatic Temperature Control (EATC) B+ feed, DVD
9	10	Passive Anti-theft System (PATS) LED feed
10	5	Auxiliary radio
11	5	Auxiliary climate control system/Power Liftgate Module/Left and right power sliding door module/Data Link Connector (DLC)/Clock B+ feeds

12	5	Brake-Shift Interlock (BSI) Run feed, Climate control system Run feed
13	5	Compass/Driver heated seat/Passenger heated seats/Reverse sensing system/Power Liftgate Module/Power sliding door Run feeds
14	5	Underhood fuse box Run feed, Front blower Run feed
15	10	Brake On-Off (BOO) switch B+
16	5	Steering angle/Cluster/Power sliding door and power liftgate inhibit LED/Electrochromatic mirror Run/Start/Tire Pressure Monitoring System (TPMS)
17	10	Restraint Control Module (RCM)/Passenger Air bag Disable Indicator (PADI)/Passenger Occupant Detection System (PODS) Run/Start
18	10	Anti-lock Brake System (ABS) module/Brake pressure switch/Speed control Run/Start

19	5	PATS/Cluster/Air bag LED/Powertrain Control Module (PCM) relay Run/Start
20	10	Liftgate Start feed, Radio Start feed
21	10	Starter relay power START
Relay		
1	Accessory delay relay 1	
2	Accessory delay relay 2	

Auxiliary Relay Box (Cooling Fans)

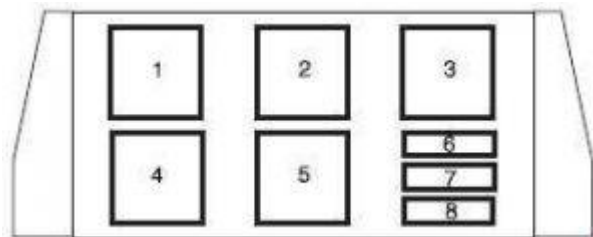

Mercury Monterey – fuse box diagram – auxiliary relay box (cooling fans)

No.	A	Protected components
6	40	Right-hand cooling fan motor (Vehicles with trailer tow package only)
7	15	Low-speed cooling fan circuit breaker (Vehicles with trailer tow package only)
8	40	Left-hand cooling fan motor (Vehicles with trailer tow package)
	10	Low-speed cooling fan circuit breaker (Vehicles without trailer tow package)
Relay		
1	Cooling fan relay #1 or #4	
2	Cooling fan relay #2 or #5	

3	Cooling fan relay #3
4	Cooling fan relay #4 or #1
5	Cooling fan relay #5 or #2