


Harness Components Location

WIRING SYSTEM

62. Harness Components Location

A: LOCATION

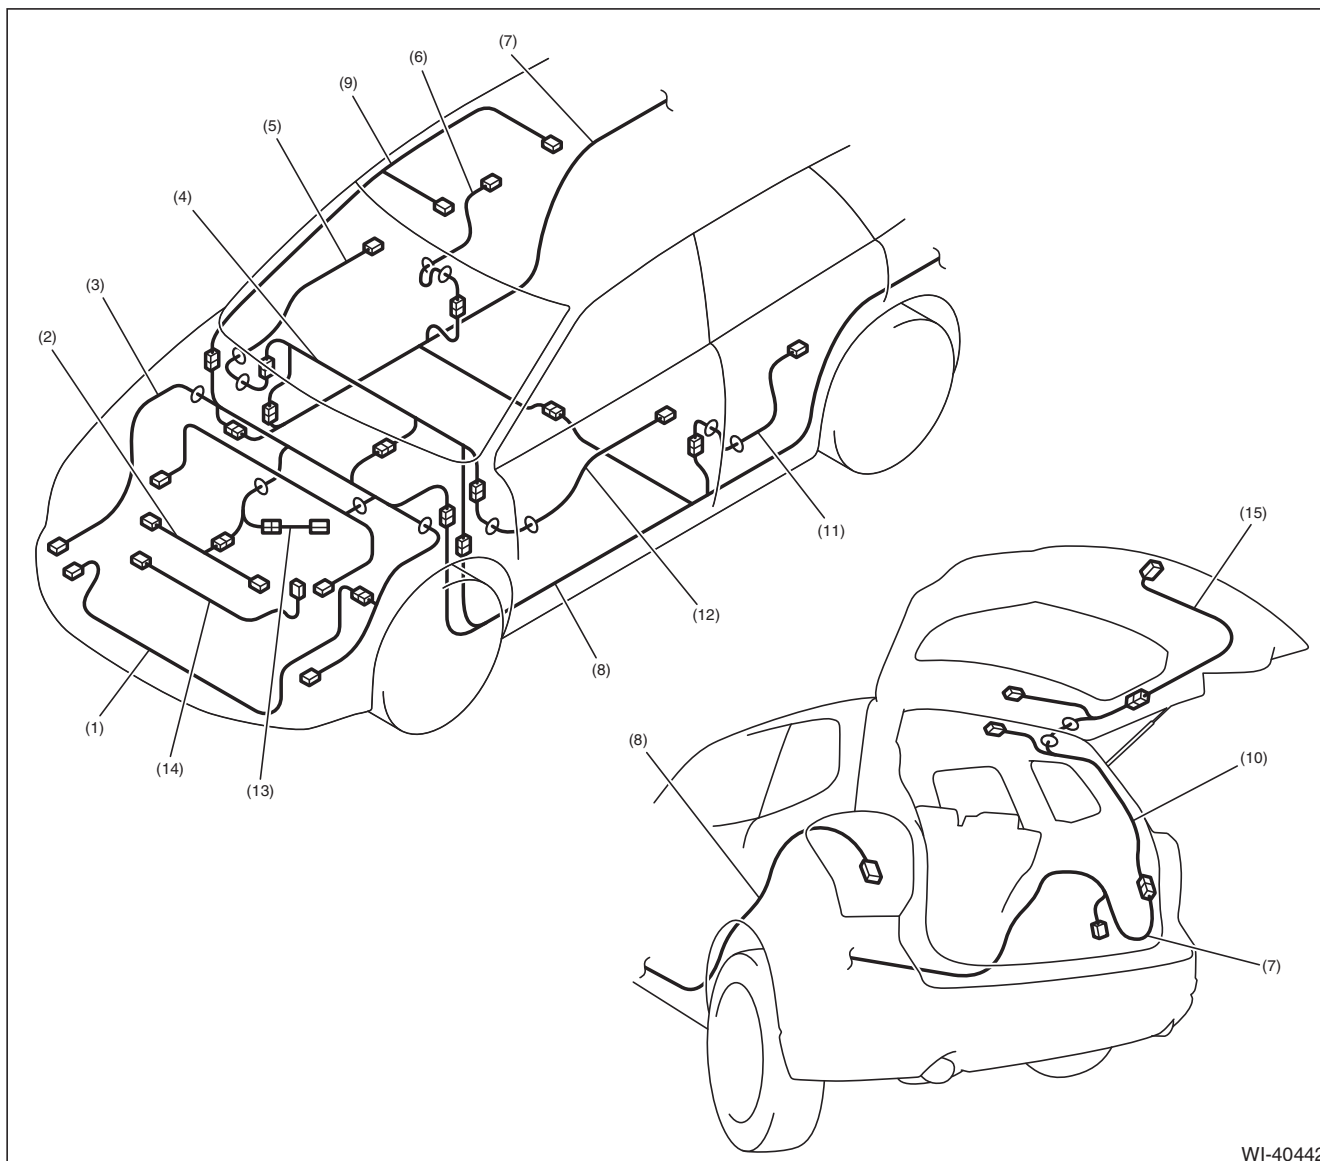

- | | | |
|-------------------------------------|----------------------------|---------------------------|
| (1) Front wiring harness | (6) Rear door cord RH | (11) Rear door cord LH |
| (2) Engine wiring harness | (7) Rear wiring harness RH | (12) Front door cord LH |
| (3) Bulkhead wiring harness | (8) Rear wiring harness LH | (13) Transmission cord |
| (4) Instrument panel wiring harness | (9) Roof cord | (14) Generator cord |
| (5) Front door cord RH | (10) Rear gate cord (UPR) | (15) Rear gate cord (LWR) |

Front Wiring Harness

WIRING SYSTEM

63.Front Wiring Harness


A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
F5	1	B	C-1		Horn
F6	2	★	C-1		Front fog light RH
F12	2	B	C-1		Daytime running light resistor
F16	2	★	C-1		Sub fan motor
F17	2	★	D-2		Main fan motor
F21	2	★	D-3		Front fog light LH
F24	1	★	C-2		Magnet clutch
F25	1	★	C-2		Generator terminal B
F26	3	★	C-2		Generator
F27	26	★	C-4		Relay holder
F35	12	L	C-4		M/B
F36	7	★	C-4		
F37	20	★	B-4		
F47	1	B	C-2		Horn
F62	2	★	C-1		J/C
F63	2	★	C-2		
F78	2	B	D-2		Ambient sensor
F108	18	GR	C-4	B361	Through joint connector
F109	24	★	C-4	B360	
F125	8	GR	C-3		Front combination light LH
F126	8	GR	C-1		Front combination light RH
F134	2	GR	C-3		Vacuum pump
F148	2	★	C-3		High beam LH
F149	2	★	B-1		High beam RH

★ : White or natural color

Front Wiring Harness

WIRING SYSTEM

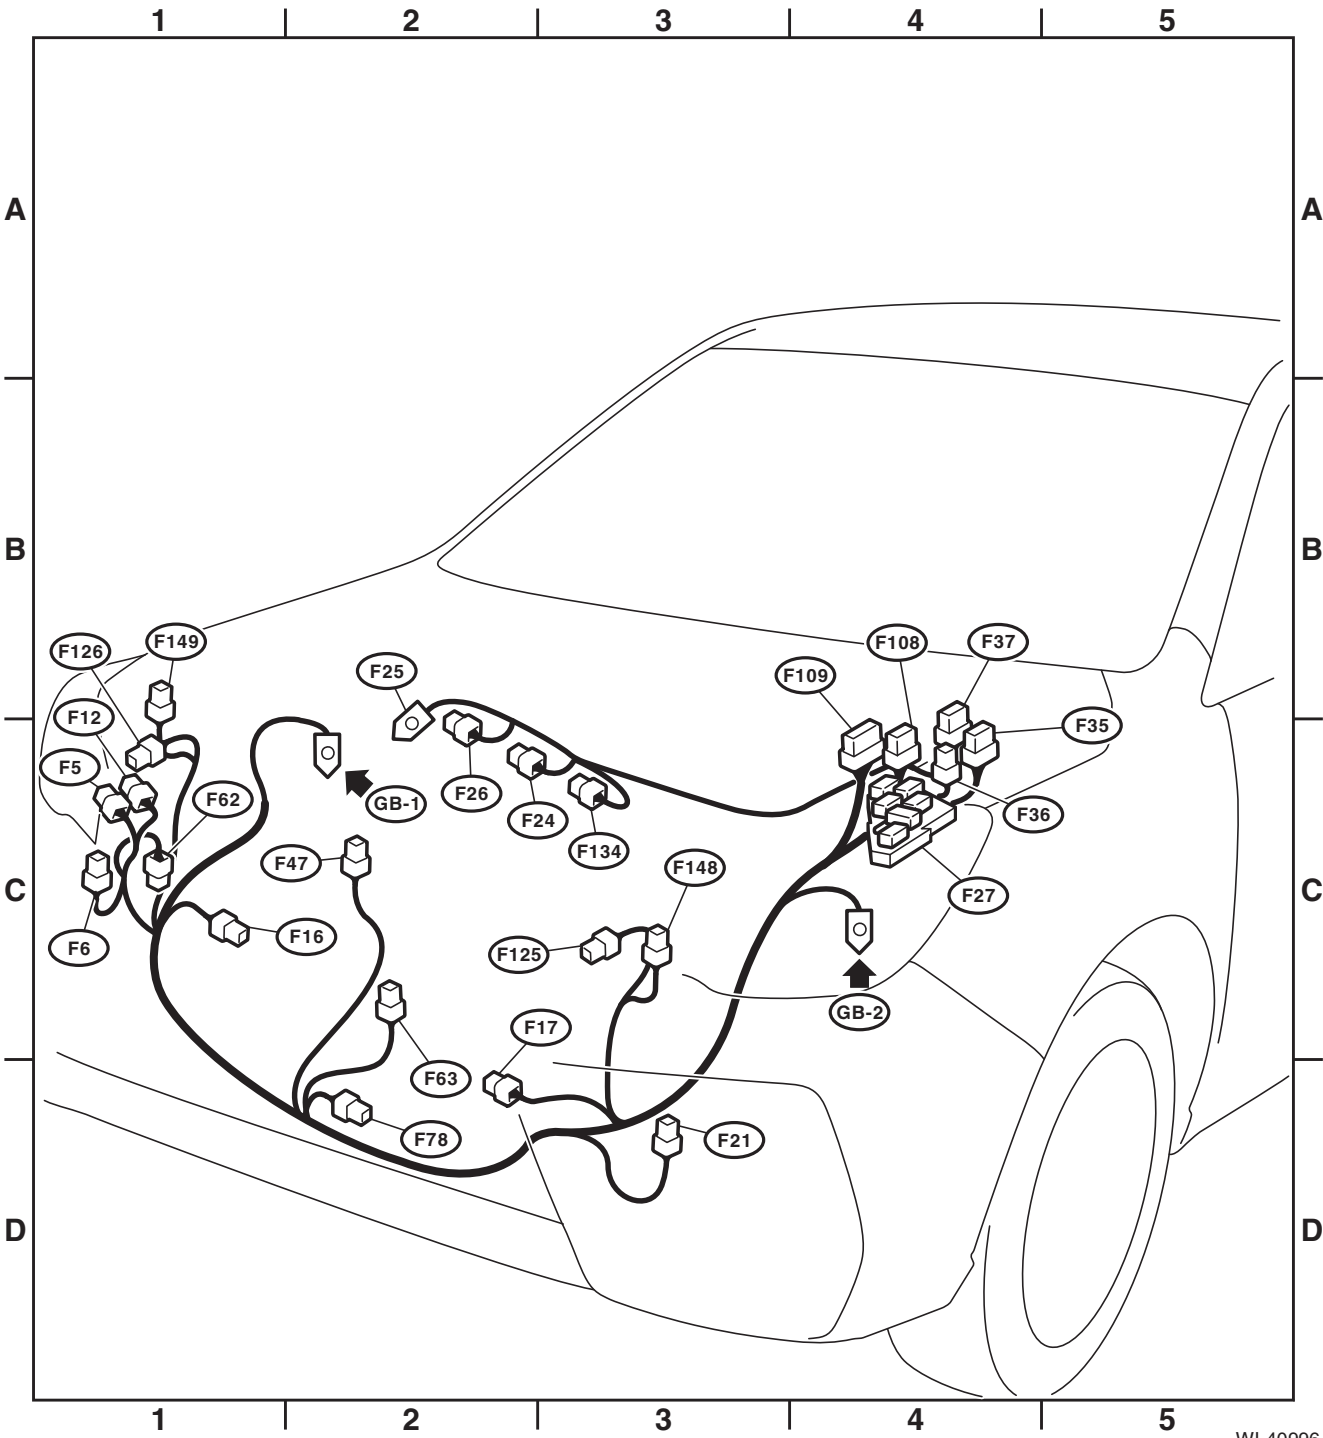

WI-40996