BD7
(영어 | 미국) 표준5

GENESIS G80

CAR MULTIMEDIA SYSTEM | USER'S MANUAL



GENESIS

Thank you for purchasing this multimedia system.

This user's manual explains how to use the GENESIS multimedia system.
Before using the product, read the contents of this user's manual carefully and use this product safely.

- The screens shown in this manual may differ with the actual screens of the product.
- The design and specification of this product may change without prior notification for product improvement.
- When transferring the vehicle to another individual, include this user's manual so that the next driver can continue its use.

Precautions for safe usage

- Driving while distracted can result in a loss of vehicle control, that may lead to an accident, severe personal injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.
- Do not operate the multimedia system while driving.
- Do not disassemble, assemble, or modify the multimedia system.
- Do not watch the screen for prolonged periods of time while driving.
- Set the volume to a level which allows the driver to be aware of external conditions.
- Do not operate the multimedia system for prolonged periods of time with the vehicle ignition in ACC. Such operations may lead to battery discharge.
- Be cautious not to spill water or introduce foreign objects into the device.
- Do not cause severe shock to the device. Direct pressure onto the front side of the monitor may cause damage to the LCD or touch panel.
- In case of product malfunction, please contact your place of purchase or service center.
- When cleaning the touch screen, make sure to turn off the device and use a dry and smooth cloth. Never use tough materials, chemical cloths, or solvents (alcohol, ammonia, benzene, thinners, etc.) as such materials may damage the device panel or cause color and quality deterioration.

- SiriusXM service requires a subscription, sold separately, after 3-month trial included with vehicle purchase. If you decide to continue your SiriusXM service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call Sirius XM at 1-866-635-2349 to cancel. See our Customer Agreement for complete terms at www.siriusxm.com. Programming subject to change. Sirius satellite service is available only to those at least 18 and older in the 48 contiguous USA, D.C., and PR (with coverage limitations). Traffic information not available in all markets. See siriusxm.com/traffic for details. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc.

⚠ WARNING

- Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

here

All Map Database cannot be copied without permission.
Important Notice: This is protected by U.S. copyright laws. All rights not expressly granted are reserved.
You may not otherwise reproduce, modify and distribute the content without HYUNDAI MnSoft, Inc's prior written consent.

Read the following safety precautions for your safety

Before using the product, read the contents of this user's manual carefully and use this product safely.

※ The design and specifications of this product may change without prior notification for product and service improvement.
The actual images in the vehicle may differ from the illustrations.
For more accurate information about the vehicle, please refer to the catalogue.

※ This Multimedia system contains open source software, including without limitation, software distributed and/or modified under the GNU General Public license, Version 2, June 1991, and the GNU lesser General Public License, Version 2.1, February 1999.
For additional information and to obtain related materials including without limitation, the previous referred to licenses and software, please contact us at MOBIS_OSSrequest@mobis.co.kr

Notations used within this User's Manual

WARNING

- A WARNING indicates that a condition may result in harm, serious bodily injury or death if the warning is ignored.

CAUTION

- A CAUTION indicates that a condition may result in damage to your vehicle if the caution is ignored.

Information

- Information and tips that provide additional user convenience in using the product.

NOTICE

- Information on specific features that facilitate proper product use and functional understanding.
- Information on terminology used within this manual.

GENESIS Brand VEHICLE OWNER PRIVACY POLICY

Your GENESIS Brand vehicle may be equipped with technologies and services that use information collected, generated, recorded or stored by the vehicle. GENESIS Brand has created a Vehicle Owner Privacy Policy to explain how these technologies and services collect use and share this information.

You may read our Vehicle Owner Privacy Policy on the https://www.genesis.com website at:
https://www.genesis.com/us/en/owners-privacy-policy.html
If you would like to receive a hard copy of our Vehicle Owner Privacy Policy, please contact our Customer Connect Center at:

Genesis Customer Care
P.O. Box 20850
Fountain Valley, CA 92728-0850
customercare@genesismotorsusa.com
(844) 340-9741

GENESIS Brand's Customer Connect Center representatives are available Monday through Friday, between the hours of 5:00 AM and 7:00 PM PST and Saturday and Sunday between 6:30 AM and 3:00 PM PST (English).
For Customer Connect Center assistance in Spanish or Korean, representatives are available Monday through Friday between 6:30 AM and 3:00 PM PST.

Table of Contents

1. Basic

Warnings and Cautions 1-2

Component Names and Functions 1-4

- Head Unit 1-4
- Steering Wheel Controls 1-6

Starting the System for the First Time 1-8

- Turning the System On/Off 1-8
- System Reset 1-8
- Battery Warning Message 1-9
- Restrictions on Features for Safety Measures 1-9
- Home Screen 1-10
- On-Screen Touch Controls 1-12

2. Radio/Media

FM/AM 2-2

HD Radio™ Technology 2-4

- HD Radio™ 2-5

SiriusXM™ 2-6

- Selecting through Channel/ Category List 2-8
- Direct Tune 2-8
- Viewing Menu 2-8

USB 2-11

- Before Playing a USB MP3 2-11
- Supported USB music specifications 2-13
- USB Music 2-14

iPod 2-17

- Using iPod Devices 2-17
- iPod 2-21

Bluetooth® Audio 2-24

- Bluetooth Connection 2-25

3. Bluetooth

Before Using the Bluetooth® Handsfree 3-2

- What is *Bluetooth*® Wireless Technology? 3-2
- Precautions for Safe Driving 3-2
- CAUTIONS upon Connecting Bluetooth® Phone 3-3

Bluetooth Connection 3-4

- Pairing a New Device 3-4
- Connecting Bluetooth Devices 3-4
- Disconnecting Bluetooth Devices 3-5
- Deleting Bluetooth Devices 3-5

Bluetooth Phone 3-6

- Phone Status Icons 3-6
- Dial 3-7
- Accept/Reject Call 3-7
- Using the Menu During a Phone Call 3-8
- Call History 3-9
- Contacts 3-10

00

Favorites 3-11
Viewing a new message 3-11
Viewing messages from the messages list 3-12

4. Genesis Connected Services

Rear View Mirror Switch 4-2
Genesis Connected Services Voice Local Search 4-3
What is Genesis Connected Services Voice Local Search? 4-3
Starting Genesis Connected Services Voice Local Search 4-3
Auto Crash Notification 4-4
SOS 4-4
Stolen Vehicle Recovery 4-5
Vehicle Slowdown 4-5
Vehicle Immobilization 4-5
Before Use 4-6
What Is Genesis Connected Services? 4-6
What Is Telematics? 4-6
About Transmission and Reception of Radio Waves 4-6
Getting Started with Genesis Connected Services 4-7
Connecting with the Genesis Connected Services Center ... 4-7
Driving Info 4-8
Send to Car with Google 4-8
Vehicle Diagnostics 4-9
Connected Settings 4-9

5. Navigation

Basic Features 5-2
Operating Navigation Screen 5-2
Places 5-3
Changing Map View 5-3
Navigation Volume 5-3
Zoom In/Zoom Out 5-4
Map Scale 5-4
Quick Menu 5-5
Route 5-5
Edit Route 5-6
Map Display 5-6
Nearby POIs 5-6
Traffic 5-9
Save 5-12
Settings 5-13

Destination Search.....5-14
Places 5-14
Address 5-15
Previous Destinations 5-16
Online Search 5-17
POI Categories 5-18
Gas Stations 5-19
Restaurants 5-19
Emergency 5-20
Address Book 5-20
Coordinates 5-21
Favorite places.....5-22
Route Setting 5-23
Route Guidance 5-25
Route.....5-27
Canceling Route 5-27
Route Options 5-27
Editing Route 5-28
Display Route Information 5-29
Route Overview 5-29
Avoid Street 5-30
Navigation Settings.....5-30
Display 5-30
Traffic/Guidance 5-31
Default 5-32
Troubleshooting.....5-33

6. Voice Recognition

What is Voice Recognition? 6-2
Precautions Required for Successful Voice Recognition 6-2
Starting/Ending and Setting Voice Recognition.....6-3
Starting Voice Recognition 6-3
Ending Voice Recognition 6-3
Combining Voice Recognition with On-Screen Commands 6-3
Extending the Listening Time 6-4
Skipping Prompt Messages 6-5
Adjusting Voice Recognition Volume ... 6-5
Voice Recognition Screen Overview 6-6
Help Display..... 6-6
Instructions for Using Voice Recognition 6-7
Voice Commands 6-8
Types of Commands 6-8
Call Commands 6-8
Navigation Commands 6-9
Radio Commands 6-12
Other Commands List (Commands used in List/Help) 6-12
“Find <POI>” List 6-13
Siri Eyes Free.....6-19
How to start Siri 6-19
How to use Siri.....6-19

7. Data Services

HD Radio™ Data 7-2
- About HD Radio™ Data Services 7-2
- Accessing HD Radio™ Data 7-2
- HD Radio Weather Information Mode 7-2
- HD Radio™ Doppler Radar 7-3

SiriusXM™ Data 7-4
- About SiriusXM™ Data Service 7-4
- Accessing SiriusXM™ Data 7-4
- SiriusXM™ Weather Announcement ... 7-4
- SiriusXM™ Fuel Price Information 7-5
- SiriusXM™ Stock Information 7-7
- SiriusXM™ Sports Information 7-8
- SiriusXM™ Movie Information 7-9

8. Other Features

Climate 8-2

Camera 8-4
- Steering-linked camera 8-5

Using Voice Memo 8-6

9. Setup

Navigation Settings 9-2

Sound Settings 9-2

Display Settings 9-3

Bluetooth Settings 9-3
- Bluetooth Connection 9-4
- Auto Connection Priority 9-5
- Message Settings 9-5
- Bluetooth Voice Prompts 9-5
- Privacy Mode 9-5
- Bluetooth System Info 9-6
- Default Factory Settings 9-6

Connected Settings 9-6
- Service Activation 9-6
- Modem Information 9-6

Phone Projection Settings 9-7

Voice Recognition Settings 9-7

Date/Time Settings 9-7

Language Settings 9-8

Keyboard Settings 9-8

Screen Saver Settings 9-9

Advanced Settings 9-9

System Info 9-10
- System Update 9-10

10. Appendix

Product Specification 10-2

Troubleshooting 10-4

FAQ 10-7
- About Pairing Mobile Phones 10-7
- About Making/ Answering Phone Calls 10-8
- About *Bluetooth*® Wireless Technology/Multimedia System Use Environment 10-8

Using SD Cards

• Ejecting and Inserting SD Cards

- Ejecting and inserting SD cards while the multimedia system is operating may result in SD Card or System errors. To eject or insert the SD card, first turn off the multimedia system and the vehicle ignition.
- Eject/insert SD cards only to update the multimedia system with a new version.

• Usage of SD Cards

- The SD Card is formatted to include only Map and new system update files.
- The SD Card cannot be used to save and play Music.
- Do not add, delete, or format files within the SD Card.

iPod®

iPod® is a registered trademark of Apple Inc.

Bluetooth® Wireless Technology

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by GENESIS Brand is under license. Other trademarks and trade names are those of their respective owners.

A *Bluetooth*® Wireless Technology enabled cell phone is required to use *Bluetooth*® Wireless Technology. *Bluetooth*® Wireless Technology phone compatibility can be checked by visiting owners.genesis.com.

HD Radio™ Technology

HD Radio™ Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents.

For patents see http://patents.dts.com/. HD Radio™ and the HD, HD Radio™, and “ARC” logos are registered trademarks or trademarks of iBiquity Digital Corporation in the United States and/or other countries.



part.1 Basic

Warnings and Cautions
Component Names and Functions
Starting the System for the First Time

Warnings

Do not operate the Multimedia system while driving, such as entering POIs or conducting route searches. Such acts could lead to accidents. Park the vehicle before operating the device.

- Even when receiving route guidance from the Navigation system, please abide by actual traffic and road regulations. Following only the Navigation route guidance may lead to violations of actual traffic and road regulations and lead to traffic accidents.
- Do not disassemble, assemble, or modify the Multimedia system. Such acts could result in accidents, fire, or electric shock.
- Heed caution not to spill water or introduce foreign objects into the device. Such acts could lead to smoke, fire, or product malfunction.
- If you use phone related functions while driving, you will find it difficult to concentrate on operating the vehicle and the current traffic conditions, so the possibility of an accident may increase. Please use phone related functions only when parked.
- Do not stop or park in parking-restricted areas to operate the product. Such acts could lead to traffic accidents.
- For most Audio and multimedia modes, the display will not operate when the vehicle is in motion. For your safety, first park the vehicle to watch or view the screen.(The screen will only operate when the parking brake is ON for manual transmission vehicles and when the parking brake is ON or the gearshift is in the P (PARK) position for automatic.)
- Some functions other than the one mentioned above cannot be used while driving. These functions operate only when the vehicle is parked.

Cautions


Turn on the car ignition before using this device. Do not operate the Multimedia system for long periods of time with the ignition turned off as such operations may lead to battery discharge.

Pay attention to traffic conditions while driving.

- In some instances, the navigation may provide guidance through restricted areas.
- Upon using the Multimedia system for more than 10 minutes with the car engine turned off, the following warning will be displayed. After 10 minutes, the warning will be displayed for 5 seconds every 1 minute.
- Do not subject the device to severe shock or impact. Direct pressure onto the front side of the monitor may cause damage to the LCD or touch screen.
- When cleaning the device, make sure to turn off the device and use a dry and smooth cloth. Never use tough materials, chemical cloths, or solvents(alcohol, benzene, thinners, etc.) as such materials may damage the device panel or cause color/quality deterioration. When experiencing product concerns, inquire with your place of purchase or service maintenance center.
- Prevent caustic solutions such as perfume and cosmetic oil from contacting the dashboard because they may cause damage or discoloration.

Component Names and Functions

Head Unit

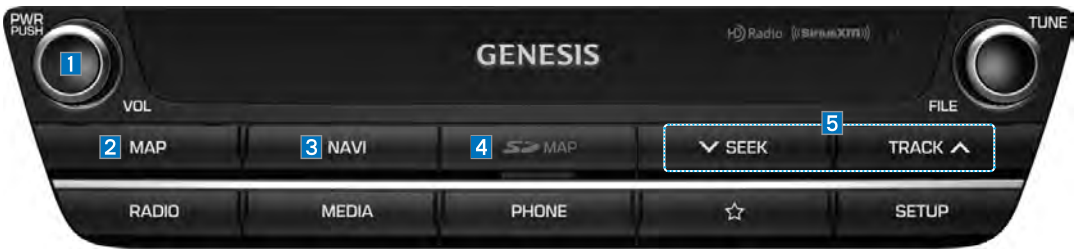

	Name	Description
1	PWR/ VOL	• When power is off, press to turn power on. • When power is on, press and hold (over 0.8 seconds) to turn the power off. • When power is on, press quickly (less than 0.8 seconds) to turn Audio off. • Turn left/right to adjust the volume.
2	MAP	Displays the map for the current position.
3	NAVI	Takes you to the menu screen where you can find your destination and set the route.
4	SD MAP	SD card insert slot.

	Name	Description
5	SEEK TRACK	When the key is pressed quickly (less than 0.8 seconds), • FM/AM mode: Plays the previous/next frequency. • SiriusXM™ mode: Changes the channel. • MEDIA mode: Changes the track, file or title. When the key is pressed and held (over 0.8 seconds), • FM/AM mode: Moves quickly through all of the frequencies. The moment that you release the button, the system seeks the next available frequency. • MEDIA mode: Rewinds or fast forwards the track or file (except for Bluetooth Audio).




Name		Description
6	RADIO	Selects FM/AM/SiriusXM™ mode. • Each time this is pressed, the mode is changed in the following order: FM → AM → SiriusXM™ → FM.
7	MEDIA	Selects MEDIA mode. • If the media is not connected, MEDIA mode will not be activated.
8	PHONE	Takes user to phone screen.
9	☆	• Press to use a custom function. • Press and hold to access the settings screen for the custom button.
10	SETUP	Moves to the Setup screen.

Name		Description
11	TUNE	• FM/AM mode: Changes the frequency. • SiriusXM™ mode: Changes the channel. • MEDIA mode: Changes the track, file or title (except for Bluetooth Audio).
12	RESET	Resets the system settings. (Preset radio channels and other data will not be deleted)

※ The actual image in the vehicle may differ from the illustration.

Steering Wheel Controls

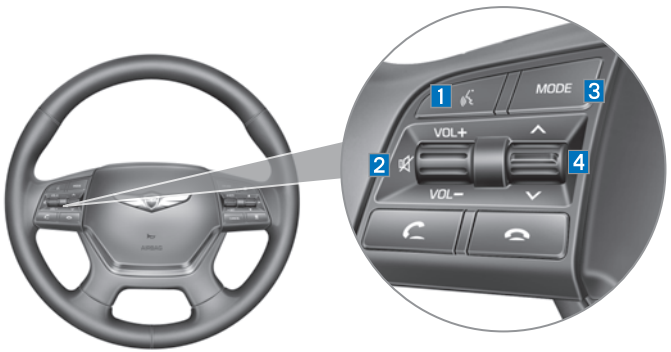

	Name	Description
1		When the key is pressed quickly (less than 0.8 seconds), • Activates voice recognition When the key is pressed and held (over 0.8 seconds), • Ends voice recognition • If iOS device is connected through Bluetooth, activates or ends Siri Eyes Free
2	VOL + VOL -	Use to adjust the volume of audio or call.
		• Mutes the audio. (Media will be paused in some media modes.) • Mutes the microphone during a call.
3	MODE	• Each time this is pressed, the mode is changed in the following order: FM → AM → SiriusXM™ → USB or iPod → Bluetooth Audio → FM *i* You can select which mode to use in Advanced Settings. • If the media is not connected, the corresponding modes will be disabled • Press and hold (over 0.8 seconds) to turn the Multimedia system on/off. • When power is off, press button to turn power back on
4		When the key is pressed quickly (less than 0.8 seconds), • FM/AM/SiriusXM™ mode: searches broadcast frequencies or channels saved to Presets • Media mode: changes the track, file or title When the key is pressed and held (over 0.8 seconds), • FM/AM mode: automatically searches broadcast frequencies • SiriusXM™ mode: automatically searches broadcast channels • Media mode: quickly looks up songs (except for Bluetooth Audio)



	Name	Description
5		When the key is pressed quickly (less than 0.8 seconds), • When pressed in the dial screen, makes a call • When pressed in the incoming call screen, answers the call • When pressed during call waiting, switches to waiting call (Call Waiting) When the key is pressed and held (over 0.8 seconds), • When pressed in Bluetooth® Hands-free, redials the last dialed call • When pressed during a Bluetooth® Hands-free call, switches call back to mobile phone (Private) • When pressed while calling on the mobile phone, switches call back to Bluetooth® Hands-free (operates only when Bluetooth® Hands-free is connected)
6		• When pressed during a call, ends the phone call • When pressed in the incoming call screen, rejects the call

※ The actual image in the vehicle may differ from the illustration.

Starting the System for the First Time

Turning the System On/Off

Press the engine start button or set the ignition key to On or ACC. Each time you turn on the system, a boot logo and safety warning will appear.



Pressing the power key on the head unit will display the safety guide.

NOTICE

- You cannot operate the system while it is booting up. It may take some time for all of features of the system, particularly the voice recognition system, to be ready for use.

Pressing and holding the power key on the head unit will turn off the system.

Information

- If you turn off the system during a phone call using the Hands-free feature, then the call will automatically switch to your mobile phone.

NOTICE

- Check the volume when turning on the system. Before turning on the system, adjust the volume to a reasonable level.

System Reset



The System Reset function restores the system when it is not operating correctly. Press and hold the RESET key for a second or longer. (It is recommended that you press the RESET key using a tool, such as a pin or a clip.)

Battery Warning Message

Always use the system while the car engine is running. If you turn on the system while the engine is off, a battery warning message will appear. When the engine starts, the message will disappear.



NOTICE

- If you use the system for a long time with the engine off, the battery may become completely discharged.

Restrictions on Features for Safety Measures

Several features are limited while driving. The restriction screen will disappear when shifting gears into P or putting the parking brake on.

WARNING

- Blank Screen

- Refrain from use if the screen is blank or no sound can be heard as these signs may indicate product malfunction. Continued use in such conditions could lead to accidents (fires, electric shock).

WARNING


- Touching the Antenna During A Thunder Storm

- Do not touch the antenna during thunder or lightning as such acts may lead to lightning induced electric shock.

Home Screen

Controls Menu Configuration for the Home Screen

Tap the icon on any screen to display the Home Screen below.

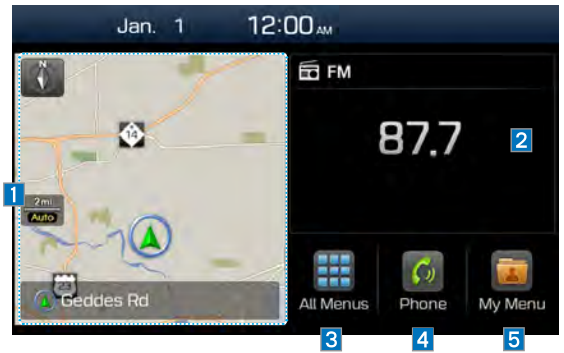

Features	Description
1 Navigation Widget	• Provides a brief view of the navigation map and the route screen. • Touch any area on the screen to move to the navigation screen.
2 AV Widget	• Shows brief information on the radio media current playing. • Touch the area to move to the mode for what you are listening to.
3 All Menus	Shows all of the items in the system menu.
4 Phone	Displays user to phone screen.
5 My Menu	Add your favorite menu items to have quick and easy access to them.

Information Display on the Status Bar

Displays the date and time, along with the system status shown by the various icons to the right of the clock.

The icons in the following table indicate the various types of system status details and events.

Icon	Description
	Displayed when the audio is muted.
	Displayed when the navigation sound is muted.
	Displays the remaining battery of the Bluetooth phone.
	Displayed when connected to Bluetooth for handsfree.
	Displayed when connected to Bluetooth for streaming audio.
	Displayed when connected to Bluetooth for streaming audio and handsfree.
	Displayed when downloading contacts or recent calls from the Bluetooth phone.
	Displayed while on a call with the Bluetooth phone.
	Displayed when the microphone of the Bluetooth phone is muted.
	Displays the signal strength of the Bluetooth phone.
	Displayed when the microphone of the Genesis Connected Services phone is muted.
	Displays the signal strength of the Genesis Connected Services.
	Displays when using LTE data.
	Voice memo recording.

Information

- Received signal strength indicator of Genesis Connected Services and LTE information are displayed only in the devices that support the telematics system.

Adding a Feature to My Menu

Select My Menu on the Home Screen to add the most frequently used menus, change the menu order, or delete menus.



Information

- Up to 24 items can be added to My Menu.

On-Screen Touch Controls

Learn how to touch the screen to operate the system.

Select


Tap lightly on a menu or an item to select it.

NOTICE

- The system will not recognize your touch if you wear a glove or other non-conductive material. Touch the screen using your finger, an electrostatic touch-screen glove, or a stylus pen.


Drag & Drop

Select a menu or item you want, then drag and drop it to where you want to place it.

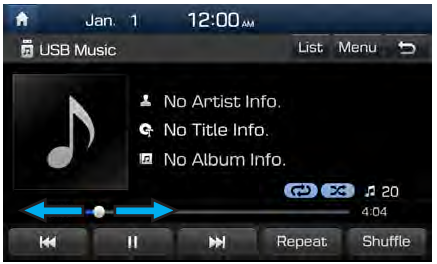

Drag or touch the slider along the play bar in the music screens to jump to the point that you want to play from.

Flick (Quick Scrolling)

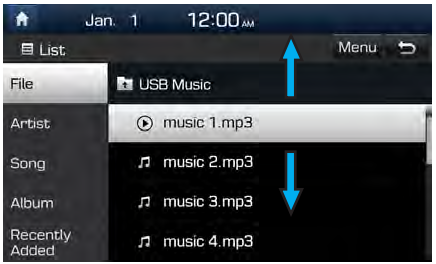

Quickly moves up and down in the list.

NOTICE

- Moving the list when there are many items will display a handler on the right of the display. You can easily move many items at a time with the handler.

Select and Hold

Selecting and holding the ⏮ or ⏭ button in the music player will rewind or fast forward the music.



MEMO

part.2 Radio/Media

FM/AM
HD Radio™ Technology
SiriusXM™
USB
iPod
Bluetooth® Audio

FM/AM


You can access the radio player either by pressing the RADIO key or by selecting the Radio menu from All Menus on the Home Screen.



Information

- If you press the RADIO key when power is off, the power will turn on and a radio broadcast will be tuned from the current mode.

Features	Description
1 Menu	• Station List: Moves to the Station List. • Delete Presets: Delete saved radio stations from the preset list. • Info: Turns the Radio text information transmitted from the broadcasting station on and off. • Sound Settings: Moves to the Sound Settings.
2 Preset Frequencies	• The stored preset frequencies are displayed for user selection. • After selecting frequency, press and hold the preset button for more than 0.8 seconds. A beep sound will be heard and the frequency is to be stored in the selected preset button. • Flick the preset frequencies up/down to scroll quickly through presets.
3 Frequency	Displays the current frequency.
4 Band	Changes to the desired band from among FM, AM, and SiriusXM™.
5 HD Radio	Used to set whether to turn HD Radio™ reception On or Off.
6 Scan	Shortly plays the broadcasts for the frequencies with superior reception for 5 seconds per item.

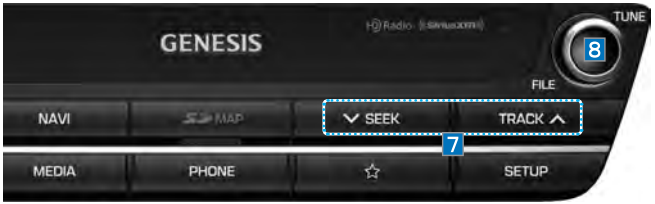

Features	Description
7 SEEK/TRACK	• When the key is pressed quickly (less than 0.8 seconds): Seeks the previous/next frequency. • When the key is pressed and held (over 0.8 seconds): Moves quickly through all of the frequencies. The moment that you release the button, the system seeks the next available frequency.
8 TUNE	Turn the ● TUNE knob to manually seek available frequencies.

HD Radio™ Technology



Program Info	Program Info: Presents song name, artist, station IDs, and other relevant data streams.
Digital Sound	Digital, CD-quality sound. HD Radio™ Technology enables local radio stations to broadcast a clean digital signal. AM sounds like today's FM and FM sounds like a CD.
HD2/HD3	FM stations can provide additional digital-only audio programming on HD2/HD3 Channels.
Traffic	Real-Time Traffic reports, alerts, and flow data displayed on screen via interactive traffic maps and/or data.

If an HD Radio™ broadcast is received, the radio mode will switch from analog broadcast to HD Radio™ broadcast.

Information

- The HD Radio™ screen is displayed only when a HD Radio™ broadcast is being received
- HD Radio is only available in Metro areas.

HD Radio™



Features	Description
1 HD Radio™ Reception & Channel buttons	Displays main HD Radio™ channels and used to directly select the current available channels. ⓘ The HD Radio™ related icon display becomes active within regions where an HD Radio™ signal can be received.
2 HD Channel Number	Analog station and corresponding HD Radio™ channel number saved in the pre-set list.
3 HD Radio Broadcast Info	Displays detailed information about the current broadcast (the details of the information shown are different depending on whether the Info button is selected)
4 HD Radio	When the HD Radio soft button is ON (the blue indicator on the HD Radio button is illuminated), HD Radio signals will be received.

SiriusXM™

You can access the radio player either by pressing the RADIO key or by selecting the Radio menu option from All Menus on the Home Screen. Select the SiriusXM™ band from the radio player.




Information

- If you press the RADIO key when the power is off, the power will turn on and a radio broadcast will be tuned from the current mode.
- If you are in the SiriusXM™ mode, select the SiriusXM™ radio widget from the Home Screen to access the radio player.
- When the power is off, pressing the RADIO key will turn the power on and play a SiriusXM™ Radio broadcast.

Features	Description
1 Channel List	Moves to the channel list.
2 Menu	• Delete Presets: Delete saved radio stations from the preset list. • What is on My Presets? The program schedule saved in my preset. (For more details, see Section 2-9 Viewing Menu.) • Featured Favorites Theme channels recommended by SiriusXM™. (For more details, see Section 2-10 Viewing Menu.) • Sound Settings: Moves to the Sound Settings.
3 Preset Frequencies	• Shows the stored presets for user selection. • After selecting frequency, press and hold the preset button for more than 0.8 seconds. A beep sound will be heard and the frequency is to be stored in the selected preset button.
4 Channel Logo	Displays the current channel logo.
5 Play Live	Switches to the live broadcast mode.
6 Channel Info	Displays the current channel number and name.
7 Content Info	Displays the artist, title and other information about the current playing song.
8 Category Info	Displays the category of the currently playing song.
9 Weak Signal	Displays the weak radio reception.



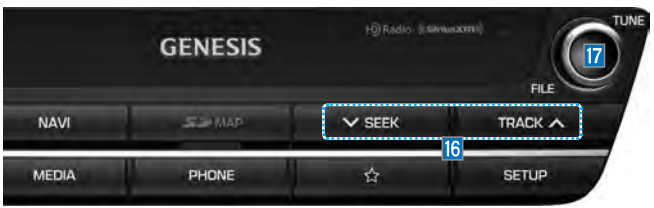


Features	Description
10 Skip Backward	Repeats the previously broadcasted program. • Holding for less than 0.8 seconds: Moves to the previous segment. • Holding for more than 0.8 seconds: Moves to the previous 5 seconds.
11 Play/Pause	Pauses/plays the current broadcasting program.
12 Skip Forward	Moves to the next segment.
13 Band	Changes to the desired band from among FM, AM, and SiriusXM™.
14 Direct Tune	Used to search for the desired channel by entering the channel number.
15 Scan	Plays all receivable channels for 5 seconds per item.
16 SEEK/TRACK	• When the key is pressed quickly (less than 0.8 seconds): Plays the previous/next channel. • When the key is pressed and held (over 0.8 seconds): Continuously changes the channel until the key is released and plays the current channel.
17 TUNE	Changes the channel.


Information

- REC icon is shown next to the first 10 SXM presets saved.
- With presets saved, each time the vehicle is started that preset station will be automatically buffered for your convenience.

Selecting through Channel/Category List

Select the Channel List ▶ Select the desired category and channel.

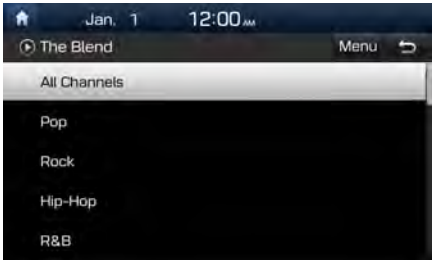

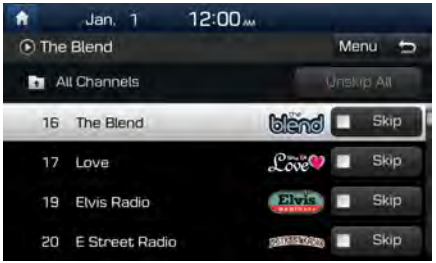

Select the desired category and the channel. Once selected, the previous screen will be restored and the selected channel will begin playing.

If you select the Skip button, you can scan channels using the ∨SEEK TRACK∧ key or the TUNE knob by skipping the channels that you chose to skip.


Direct Tune




Enter the number of the channel you want to receive.

Viewing Menu

Using the Menu button on the right, you can view the program schedule and information about the Featured Favorites provided by SiriusXM™.

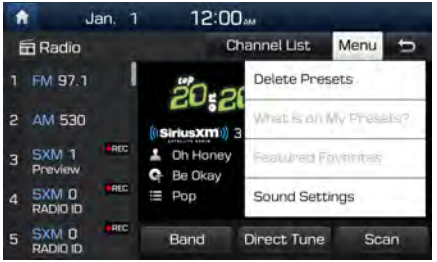


What is on My Presets? (Program Schedule)

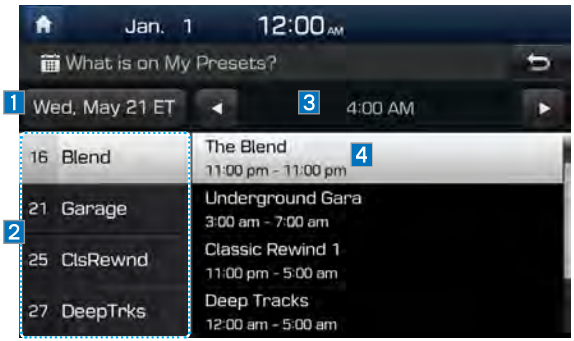

You can select Menu to see program information and the schedules of broadcast channels listed in the presets.

Name	Description
1 Change Broadcast Date	By selecting this option, you can select a broadcasting date and time zone. Broadcast information will be provided for one week from the current date. 
2 Preset	Shows saved presets for user selection ⓘ A total of 40 frequencies for SiriusXM™ modes can be displayed.
3 Broadcasting Time	You can select the time that you want.
4 Program Information	Shows you the program titles to be broadcast at the time that you have chosen. Select a program to see more details. ⓘ If there is more information on the program you selected, an arrow button will be displayed on the right of the list. You can see more program information by selecting the arrow button.

Featured Favorites

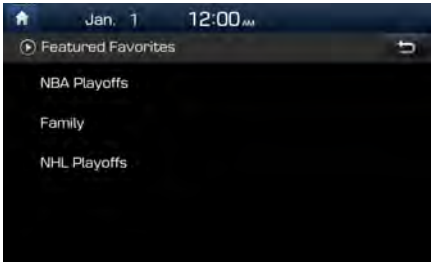

Featured Favorites feature allows SiriusXM™ to broadcast additional pre-sets.

- Example 1: “Martha’s Favorites” may represent Martha Stuart’s favorites pre-sets on her radio.
- Example 2: During holidays, “Holiday Music” may represent all the SiriusXM™ channels that are playing the holiday music for easy access by users.

Multiple sets Featured Favorites data can be broadcast by SiriusXM™ and can change from time to time.

USB

Before Playing a USB MP3

Connect the USB device after turning on the engine. The USB device may become damaged if it is already connected when the ignition is turned on.

- Files that are not standard format music files will not be played.
- For MP3/WMA/OGG files, only music files with compression rates between 8 kbps to 320 kbps can be played.
- Heed caution to static electricity when connecting/disconnecting external USB devices.
- Encoded MP3 Players will not be recognized when connected as an external device.
- When connecting an external USB device, the device may not properly recognize the USB is in some states.
- Only products formatted with byte/sectors under 64 kbyte will be recognized.
- USB devices, formatted to the FAT12, FAT16, or FAT32 file system are recommended. File systems other than FAT12, FAT16, FAT32, exFAT, and NTFS are not supported.
- Some USB devices may not be supported due to compatibility issues.
- Take caution so that the USB connector does not come in contact with body parts or objects.
- Repeated connecting/disconnecting of USB devices within short periods of time may result in product malfunction.
- Make sure to connect/disconnect external USB devices with the audio power turned off.
- The amount of time required to recognize the external USB device may differ depending on the type, size, or file formats stored on the USB.
- The use of USB devices for purposes other than playing music files is prohibited.
- Do not use the USB I/F to charge batteries or USB accessories that generate heat. Such acts may lead to worsened performance or damage to the device.
- The device may not recognize the USB device if separately purchased USB hubs and extension cables are being used. Connect the USB directly with the multimedia terminal of the vehicle.
- When using mass storage USB devices with separate logical drives, only files saved to the root drive can be played.
- When application programs are installed to specific USBs, files may not properly play.

- The device may not operate normally if MP3 Players, cellular phones, digital cameras, or other electronic devices (USB devices not recognized as portable disk drives) are connected with the device.
- Charging through the USB may not work for some mobile devices.
- The device may not support normal operation when using a USB memory type besides Metal Cover Type USB Memory.
- The device may not support normal operation when using formats such as HDD Type, CF, or SD Memory.
- When playing iPods, please use a dedicated iPod car cable.
- Normal operation cannot be guaranteed when other cables are being used.
- The device will not support files locked by DRM. (Digital Rights Management)
- USB memory sticks used by connecting an Adaptor (SD Type or CF Type) may not be properly recognized.
- Only use Plug type connector products, as shown in the figure below.
- To play USB MP3, the USB device must be connected to the USB port in the front multibox. The USB port in the center console storage (if equipped) is for charging only.



Plug Type Connector

Product Name	Manufacturer
XTICK	LG
BMK	BMK Technology
SKY-DRV	Sky Digital
TRANSCEND JetFlash	Transcend
Sandisk Cruzer	SanDisk
Micro ZyRUS	ZyRUS
NEXTIK	Digiworks

Information

- Problems that occur through use of USB devices not listed within the above table are not covered by the product warranty.


Supported USB music specifications

Name	Description
Audio File Specification	MPEG-1/2 layer3 ,OGG (Vorbis), FLAC, WAV, WMA (Standard/Professional)
Recommended Bit Rates and Sampling Frequency	MPEG-1/2 layer 3 • 8 kbps to 320 kbps (CBR or VBR), to 48 kHz • ID3 Tag: Suppor ts ID3v1.0 and ID3v1.1, ID3v2.3, ID3v2.4 ID3 tags
	OGG (Vorbis): From Q1 to Q10, to 48 kHz
	FLAC: 8/16/24 bit, to 48 kHz WAV: 8/16 bit, to 48 kHz
	WMA • Standard (0x161): to support L3 Profile: to 385 kbps, to 48 kHz • Professional (0x162): to support M0b: to 192 kbps, to 48 kHz
Detailed Specifications	Maximum directory layers : 20 layers Maximum length of folder name/file name : 255 bytes Supported characters for folder name/file name : Alphanumeric characters, Korean standard character set 2,350 characters, Simplified Chinese 4888 characters Maximum number of folders which can be stored onto one USB : 2000 folders (including ROOT) Maximum number of files which can be stored onto one USB : 8000

Information

- The sound quality of audio files that use bitrates exceeding 192 kbps cannot be guaranteed. When using files without fixed bit rates, some features (FF/REW features) may not operate properly.


USB Music

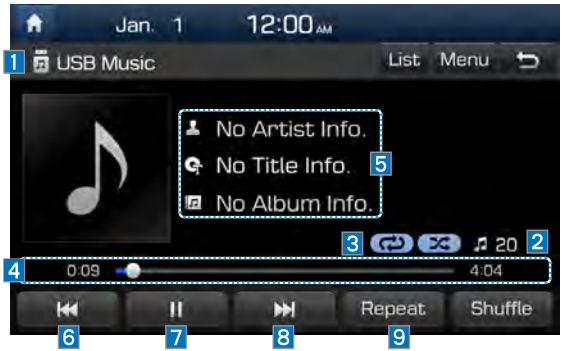


Features	Description
1 Mode	Displays the current operating mode.
2 Number of files	Number of files on the current playlist.
3 Repeat/Shuffle	From Repeat/Shuffle, displays the current operating function.
4 Play Time	Displays the current play time/total play time.
5 Song Info	Displays the artist/title/album info.


Features	Description
6 Previous File	• If the button is selected (less than 0.8 seconds): Moves to the previous file or play the current file from the beginning (depends on the play time). - If play time is less than 3 seconds, moves to previous file. - If play time is over 3 seconds, play the current file from the beginning. • If the button is selected (over 0.8 seconds): It rewinds the track.
7 Play/Pause	Plays/pauses the current file.
8 Next File	• If the button is selected (less than 0.8 seconds): Moves to the next file. • If the button is selected (over 0.8 seconds): It fast-forwards the track.
9 Repeat	Repeats the current file. • If select the file in the file tab on the list screen: select this button to switch between repeating the current file, repeating folder, and repeating all files. • If select the song in the other tabs on the list screen: select this button to switch between repeating the current song and repeating all songs.



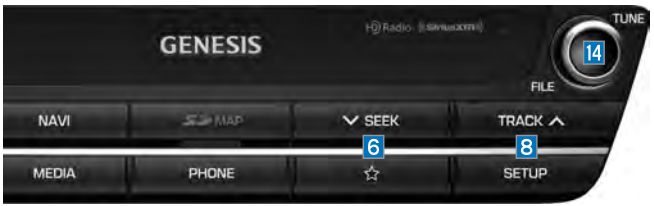

Features	Description
10 Shuffle	Plays files in random order. • Select this button to switch between shuffle and turning shuffle off.
11 List	Moves to the list screen.
12 Menu	• Hide Current File: a selected file can be deleted. Deleted file can be found in the 'Hidden_' folder. *i* This function is only supported when USB format is compatible with FAT16 or FAT32. • Sound Settings: Moves to the Sound Settings.
13 Back Button	Move to the previous screen.
14 TUNE	Turn the TUNE knob to search a desired track. If the desired track is displayed, select the TUNE knob to play the track. *i* If you do not anything with the TUNE knob for 5 seconds of searching tracks, the track info for the current track is restored.

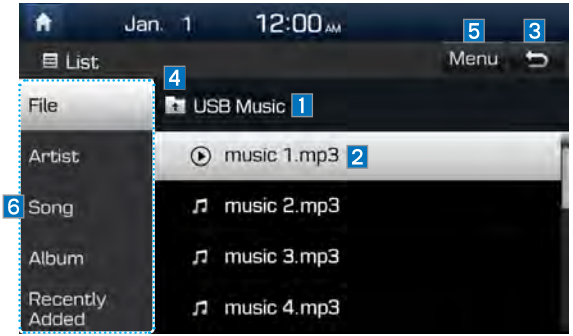

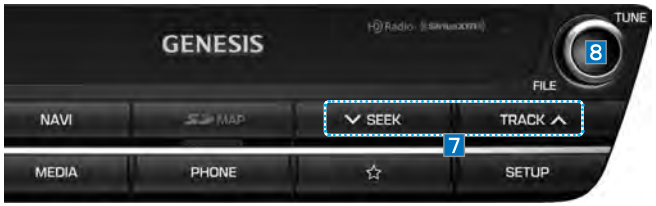

Features	Description
1 Folder/ Category Name	Displays folder/category name in the list.
2 Current Song	Displays the current playing file name.
3 Back Button	Move to the previous screen.
4 Upper Folder/ Category	Moves to Upper Folder/Category.
5 Menu	Now Playing: When moving to a different list screen, moves to the list page where the current file is located (becomes disabled when the current list includes the current file)
6 Search Menu	Search songs by the list type.
7 SEEK/TRACK	• When the key is pressed quickly (less than 0.8 seconds): Plays previous/next track. • When the key is pressed and held (over 0.8 seconds): Moves to play screen, and then it will rewind or fast-forward the track.
8 TUNE	Turn the ● TUNE knob to move the focus to the previous/next list. If the desired track is displayed, press ● TUNE knob to play the track.

iPod

Using iPod Devices

- iPod is a registered trademark of Apple Inc.
- iPod mode will not operate if the connected iPod cannot be recognized due to operation of unsupported versions that do not support related protocols, iPod abnormalities, or iPod device defects. Some iPods with unsupported communication protocols may not properly operate with the Multimedia system.
- For fifth generation iPod Nano devices, the iPod may not be recognized when the battery level is low. Please charge the iPod for use.
- Search/play orders shown within the iPod device may differ with the orders shown within the Multimedia system.
- If the iPod malfunctions due to an iPod device defect, reset the iPod and try again. (To learn more, refer to your iPod manual)
- If repeatedly connect and disconnect iPod/iPhone to the Multimedia system with USB cable in a short time, it may cause abnormal operation.
- The time for recognition of iPod/iPhone may vary depending on device type, firmware version and iOS version.
- For some iPod Touch and iPhone devices, connecting Bluetooth® while the iPod is operating may result in discontinued iPod sound. When such devices with Bluetooth® support are connected, this problem occurs as the sound source is changed from the Dock Connector (USB connector cable) to Bluetooth.
- To prevent this symptom, Bluetooth Audio function in the Multimedia system is limited if iPod/iPhone is connected to the system through both cable and Bluetooth. To listen to the iPod sound, use either iPod menu with USB connection or Bluetooth Audio with Bluetooth connection.
- To listen to the iPod sound, reconnect the USB cable or change the audio output settings in iPod/iPhone to Dock.
- In order to use the iPod while operating the keys, you must use a dedicated iPod cable. (the cable that is supplied when purchasing iPod/iPhone products)

※ During ACC ON state, connecting the iPod through the iPod cable (The cable that is supplied when purchasing iPod/iPhone product.) will charge the iPod through the head unit.

※ The use of genuine iPod cables supplied by Apple is recommended. (The use of other products may result in noise or abnormal operation.)

※ To play iPod music through cable connection, the iPod/USB cable must be connected to the USB port in the front multibox. The USB port in the center console storage (if equipped) is for charging only.

- When connecting with the iPod cable, make sure to fully insert the jack to prevent communication interference. If the iPod is connected to the vehicle while it is playing, a high pitch tone may sound for about 1 to 2 seconds immediately after connection. If possible, connect the iPod to the vehicle with the iPod stopped/paused.
- Within iPhones, streaming audio and iPod control may occasionally conflict. If problems persist, remove the iPhone and connect again.
- When connecting to iPod Nano/Classic, the GENESIS Brand logo appears on the Apple device. For the iPod Nano 6 generation, however, the logo image does not appear since it is not supported. Also, all iPhone and iPod Touch products do not support this function.
- In Apple's iOS 6.0 version or later, Podcast and Audiobook media files are designed to be played with the Podcasts and iBooks applications specifically designed for Apple products. If the Apple device does not provide the Podcast and Audiobook lists, the playlist may not be displayed and played in the iPod mode.
- If the Apple Podcasts and iBooks apps are not installed on the Apple device, but the Apple device provides the Podcast and Audiobook lists, you can play files in other categories in iPod mode.
- The screen of multimedia system can be different when you run other music players (e.g. iHeartRadio) on your connected device.


- While using a connected iPhone/iPod Touch device, it may not operate normally if the user changed some functions in the device.
- When calling with an iPhone connection, song may stop playing due to an Apple device feature. If sound does not resume after the call is terminated, check the device status.
- If lots of songs have the same information, skipping may occur when previous/next song is executed due to an Apple device feature. Also problems may occur depending on device type or iOS version.
- If lots of songs have the same information, it may occur difference of playing songs between the Multimeia system and Apple device. Reset the device or delete the same songs in the Apple device using iTunes.
- If you control pause, repeat, shuffle, or seek songs when the play time is less than 3s before the song is finished playing, it may occur difference of playing song between the Multimedia system and Apple device. Access to iPod music from another mode or pause a song and then play a song again in Apple device.
- If the iPhone/iPod Touch supports Bluetooth, the Apple device will not be able to use the Bluetooth function if the device is connected through both the USB port and via Bluetooth. Disconnect the USB connection then use Bluetooth Audio.
- If connect to the Multimedia system while podcast or iTunes music downloading to iPod/iPhone, it may occur some problems when you select song in the list. Reconnect iPod/iPhone to the Multimedia system when downloading is finished or the file deleted.
- If connect to the Multimedia system while sync, it may occur some problems. Try to use iPod/iPhone connection after sync complete. (To learn more, refer to your iPod manual)

- iPhone and iPod Touch devices are guaranteed to work normally on iOS 9.3.2 or below. However, they may not work normally on future iOS versions as their operations have not yet been tested.
- We recommend that your Apple device uses the latest firmware since some problems may occur due to an outdated firmware or other software related issues.

Type	1G	2G	3G	4G	5G	6G	6.5G	7G
iPod Mini	Not Supported							
iPod Shuffle								
iPod Nano	○	○	○	○	○	○	Not released	○
iPod Touch	○ (iOS 1.1 not supported)	○	○	○	○	○	Not released	
iPad	○ (Unable to charge, Not verified, Normal operation not guaranteed)							
iPad Mini								
iPod Classic	Not Supported				○ (iPod with Video)	○ (iPod Classic)	○ (iPod Classic)	Not released


Type	3G	3GS	4	4S	5	5C	5S	6	6+	6S	6S+	SE	7	7+
iPhone	Not verified, Normal operation not guaranteed	○	○	○	○	○	○	○	○	○	○	○	○	○


iPod

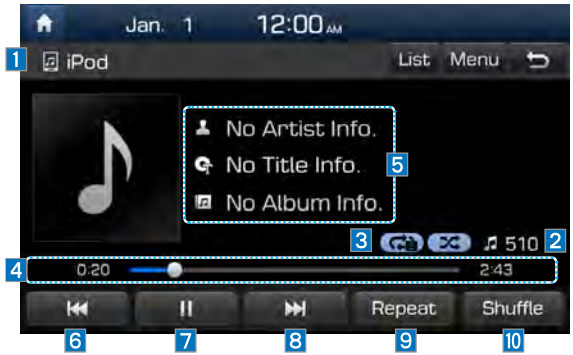


Features	Description
1 Mode	Displays the current operating mode.
2 Number of songs	Number of songs on the current playlist.
3 Repeat/Shuffle	From Repeat/Shuffle, displays the current operating function.
4 Play Time	Displays the current play time/total play time.
5 Song Info	Displays the artist/title/album info.


Features	Description
6 Previous File	• If the button is selected (less than 0.8 seconds): Moves to the previous file or play the current file from the beginning (depends on the play time). - If play time is less than 3 seconds, moves to previous file. - If play time is over 3 seconds, play the current file from the beginning. • If the button is selected (over 0.8 seconds): It rewinds the track.
7 Play/Pause	Plays/pauses the current file.
8 Next File	• If the button is selected (less than 0.8 seconds): Moves to the next file. • If the button is selected (over 0.8 seconds): It fast-forwards the track.
9 Repeat	Repeats the current song. • Select this button to switch between repeating the current song and repeating category all songs. (It all depends on the specification of your Apple device.)
10 Shuffle	Plays songs in random order. • Select this button to switch between shuffle category and turning shuffle off. (It all depends on the specification of your Apple device.)

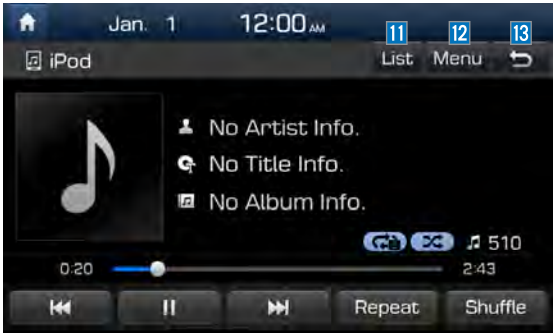

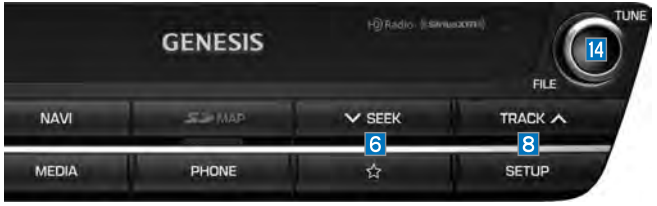

Features	Description
11 List	Moves to the list screen.
12 Menu	Sound Settings: Moves to the Sound Settings.
13 Back Button	Move to the previous screen.
14 TUNE	Turn the TUNE knob to search a desired track. If the desired track is displayed, press the TUNE knob to play the track. If you do not anything with the TUNE knob for 5 seconds of searching tracks, the track info for the current track is restored.

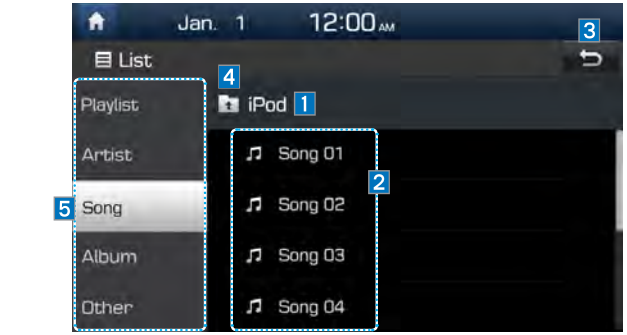


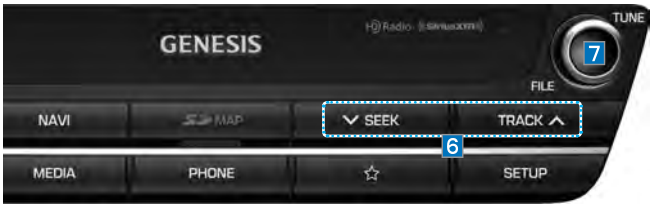

Features	Description
1 Category Name	Displays the category name.
2 Category List	Displays the contents of selected category. i If there are many items in the list, items are added in order and the scroll bar on the right is adjusted accordingly.
3 Back Button	Move to the previous screen.
4 Upper Category	Moves to Upper Category.
5 Search Menu	Search songs by the list type.
6 SEEK/TRACK	• When the key is pressed quickly (less than 0.8 seconds): Plays previous/next track. • When the key is pressed and held (over 0.8 seconds): Moves to play screen, and then it will rewind or fast-forward the track.
7 TUNE	Turn the TUNE knob to search a desired track. If the desired track is displayed, press the TUNE knob to play the track. i If you do not anything with the knob for 5 seconds, the TUNE knob search will be terminated.

Bluetooth® Audio



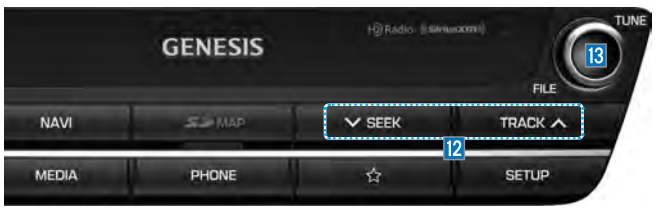


Information

- Artist info and Title may not be supported by mobile phone.
- While in use of other functions after connecting your mobile phone through a USB cable, the Bluetooth audio is disabled.
- Depending on the connected Bluetooth device, mobile phone, or the music player you are using, playback controls may differ.
- Depending on the music player you are using, streaming may not be supported.

Features	Description
1 Mode	Displays the current operating mode.
2 Phone Name	Displays name of connected phone.
3 Artist Info	Name of current artist.
4 Title	Name of current song.
5 Previous File	• If play time is less than 3 seconds, moves to the previous file. • If play time is over 3 seconds, plays the current file from the beginning. i This function may differ depending on the model of mobile phone.
6 Play/Pause	Plays/Pauses Bluetooth Audio.
7 Next File	Moves to the next file.
8 Repeat	Repeats the current file. i This function may differ depending on the model of mobile phone.
9 Shuffle	Plays files in random order. i This function may differ depending on the model of mobile phone.
10 Change Device	Search for and connect another Bluetooth device.
11 Menu	• Change Device: Search for and connect another Bluetooth device. • Sound Settings: Moves to the Sound Settings
12 SEEK/TRACK	Plays the previous/next file.
13 TUNE	TUNE is not supported.

Bluetooth Connection

Settings for pairing, connection and disconnection of a Bluetooth device.

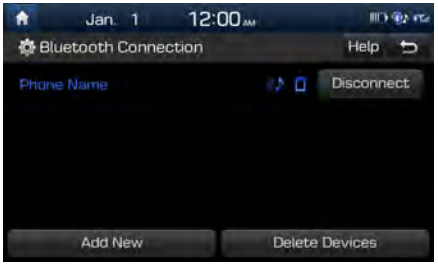

- In Bluetooth Audio play screen, select Menu and then Connections.

Information

- If the music in the mobile phone is not played after changing to audio streaming mode, press the play button. Thus check if the music is playing in the Bluetooth device after changing to audio streaming mode. Audio streaming may not be supported for some mobile phones.
- Please check the Bluetooth compatibility in below website: Genesis Brand Customer Care owners.genesis.com

MEMO

part.3 Bluetooth

Before Using the Bluetooth® Handsfree

Bluetooth Connection

Bluetooth Phone

Before Using the Bluetooth® Handsfree

What is *Bluetooth*® Wireless Technology?

- *Bluetooth*® Wireless Technology refers to a short-distance wireless networking technology which uses a 2.45 GHz frequency to connect various devices within a certain distance.
- Supported within PCs, external devices, Bluetooth® phones, PDAs, various electronic devices, and automotive environments, *Bluetooth*® Wireless Technology to be transmitted at high speeds without having to use a connector cable.
- Bluetooth® Handsfree refers to a device which allows the user to conveniently make phone calls with Bluetooth® mobile phones through the Multimedia system.
- The Bluetooth® Handsfree feature may not be supported in some mobile phones. For more information on mobile phone compatibility, visit the website.
  - Genesis Brand Customer Care: owners.genesis.com

WARNING

- Distracted Driving

- Focus on the road while driving. The driver's primary responsibility is in the safe and legal operation of the vehicle. Drivers should not use any hand held devices or other equipment or vehicle systems that distract the driver during vehicle operation.
- Do not stare at the multimedia screen for long periods of time while driving. Staring at the screen for prolonged periods of time can lead to traffic accidents and can result in personal injuries.

Precautions for Safe Driving

- Bluetooth® is a feature that enables drivers to make handsfree calls. Connecting the head unit with a Bluetooth® phone allows the user to conveniently make calls, receive calls, and manage the phonebook. Before using *Bluetooth*® Wireless Technology, carefully read the contents of this user's manual.
- Excessive use or operations while driving may lead to negligent driving practices and be the cause of accidents. Do not operate the device excessively while driving.
- Viewing the screen for prolonged periods of time is dangerous and may lead to accidents. When driving, view the screen only for short periods of time.

CAUTIONS upon Connecting Bluetooth® Phone

- Before connecting the head unit with the mobile phone, check to see that the mobile phone supports Bluetooth® features
- Even if the phone supports *Bluetooth®* Wireless Technology, the phone will not be found during device searches if the phone has been set to hidden state or the Bluetooth® power is turned off. Disable the hidden state or turn on the Bluetooth® power prior to searching/ connecting with the head unit.
- If Auto Connection is used, the Bluetooth® phone is automatically connected when the ignition is turned on, making it unnecessary to have to connect the phone with the head unit every time.
- If you do not want automatic connection with your Bluetooth® device, turn the Bluetooth® feature off of the Bluetooth® device.
- Park the vehicle when connecting the head unit with the mobile phone.
- Bluetooth® connection may become intermittently disconnected in some mobile phones. Follow these steps to try again.
  1. Turn the Bluetooth® function within the mobile phone OFF/ON and try again.
  2. Turn the mobile phone power OFF/ ON and try again.
  3. Completely remove the mobile phone battery, reboot, and then again.
  4. Reboot the Multimedia System and try again.
  5. Delete all paired devices from both of Phone and Head Unit sides and then try again
- The Handsfree call volume and quality may differ depending on the mobile phone.
- Pairing Bluetooth® devices and use of other Bluetooth® features are not supported when the vehicle is in motion. For safety, please first park your vehicle.
- If you continue having issue downloading your contacts to your vehicle, contact your mobile phone provider.

Bluetooth Connection

Pairing a New Device

Before you can use the Bluetooth feature, you must first pair/connect your mobile phone to your car.

Up to 5 Bluetooth devices can be paired.

Only one Bluetooth device can be connected at a time.

Pairing a New Device by Selecting Phone/Call

Press the key on the steering wheel control. ▶ Pair your car after your mobile phone detects the Bluetooth device. ▶ Enter the passkey or accept the authorization popup. ▶ Connect Bluetooth.

Pairing a New Device Through the Phone Settings

Press the SETUP key. ▶ Select Bluetooth. ▶ Select Bluetooth Connection. ▶ Select Add New. ▶ Pair your car after your mobile phone detects the Bluetooth device. ▶ Enter the passkey or accept the authorization popup. ▶ Connect Bluetooth.



The default passkey is 0000.


The vehicle name above is an example. Check the actual information on the product.

Connecting Bluetooth Devices

Connects the Bluetooth devices that you add.


Connecting Devices by Selecting Phone/Call

Press the key on the steering wheel control. ▶ Select the name of the device to connect. ▶ Connect Bluetooth.

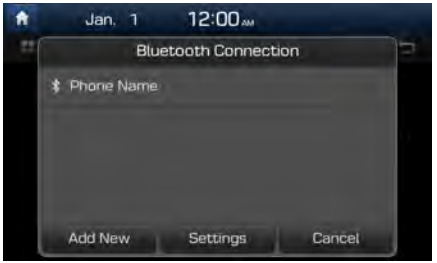

Connecting Devices Through the Phone Settings


Press the SETUP key. ▶ Select Bluetooth. ▶ Select Bluetooth Connection. ▶ Select the name of the device to connect. ▶ Connect Bluetooth.

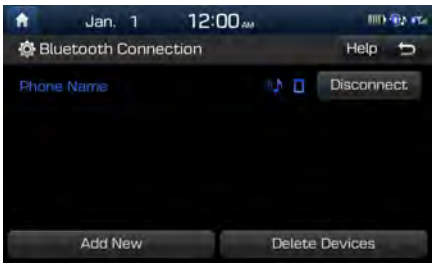

Disconnecting Bluetooth Devices

Disconnects Bluetooth devices that are connected.

Press the SETUP key. ▶ Select Bluetooth. ▶ Select Bluetooth Connection. ▶ Select the name of the device to disconnect.

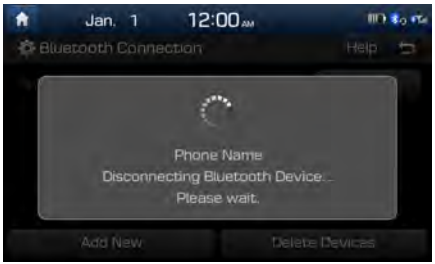

Deleting Bluetooth Devices

Deletes the Bluetooth devices that you added. Note that deleting a Bluetooth device will delete all Call History and Contact Info downloaded along with it.

Press the SETUP key. ▶ Select Bluetooth. ▶ Select Bluetooth Connection. ▶ Select Delete Devices. ▶ Select the device name to delete. ▶ Select Delete.



Bluetooth Phone

Phone Status Icons

Shows the current phone status in the right top of the display.



Icons	Description
	You can use Bluetooth phones when a Bluetooth Hands-free connection is established.
	You can use Bluetooth audio features when a Bluetooth audio connection is established.
	You can use Bluetooth phones and audio features when both Bluetooth Hands-free and audio connections are established.
	Call signal strength indicator.
	Battery level of the Bluetooth devices connected.
	Downloading Call History list.
	Downloading Contacts.
	In a Bluetooth phone call.
	Microphone muted.

Information

- The battery level icon and the call signal strength indicator may not be supported in some Bluetooth devices.
- The battery level may differ from the actual level remaining.

Dial

Select All Menus ▶ Phone ▶ .




Name	Description
1 Keypad	Use the keypad to enter the phone number that you want to call. Select and hold the last number of a speed dial to dial a number that you added to the Speed Dial list in the phone.
2 Call	Makes a call after you dial a number and select . If the number is listed in Dialed Calls, you can select the number and select to automatically dial that number again.
3 Settings	Moves to a screen of Bluetooth Connection.
4 Delete	Deletes the numbers that you entered.
5 Privacy Mode	Activate the privacy mode to protect your personal information. In the privacy mode, personal data will not be displayed.
6 Change Device	Search for and connect another Bluetooth device.

Information

- Some types of mobile phones may not support the Speed Dial function.

Accept/Reject Call

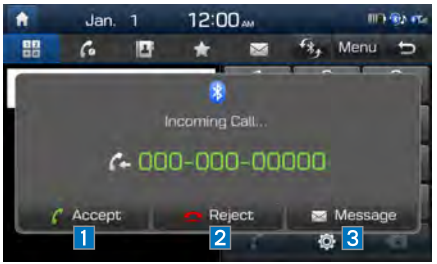


If there is an incoming call after you made a Bluetooth connection, a popup message will appear.


Name	Description
1 Accept	Answers the call.
2 Reject	Ignores the call.
3 Message	Reject the call with a text message.

Information

- In some mobile phones, the caller's number may not be displayed, and the Reject feature may not be supported.

Using the Menu During a Phone Call

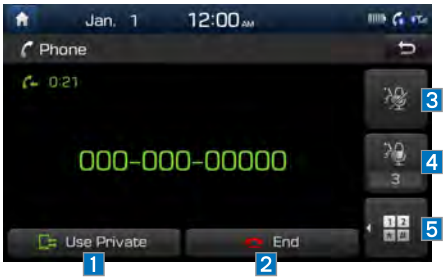

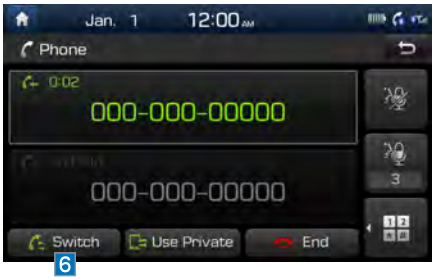

When making a call, you can use the following menu items.

Name	Description
1 Use Private	Switches a voice call from the car Hands-free to the mobile phone.
2 End	Ends a call.
3 Mute	Mutes the microphone during a call.
4 Outgoing Volume	Displays the Mic Volume settings. You can adjust the in-call volume that the other party hears (level 1 to 5).
5 Keypad	Moves to a screen for entering ARS numbers.
6 Switch	Switches to a call on hold, if any. You can also switch calls by selecting the number in the Information Display. The Switch function switches the current call to a waiting call in order to answer a new incoming call.

Information

- If the caller's number is listed in Contacts, the caller's name will be displayed. Otherwise, only the number will be displayed. In some mobile phones, the phone number may not be displayed.
- In some Bluetooth devices, the Use Private feature may not be supported.
- In some Bluetooth devices, the Switch feature may not be supported.
- During a phone call on a Bluetooth Hands-free, you cannot access other modes, such as Radio and Settings.
- Depending on handset types, the in-call volume the other party hears may differ. If the other party hears your voice too low or too loud, adjust the mic volume.

Call History

Select All Menus ▶ Phone ▶ .




Name	Description
1 All	Lists the all call history.
2 Dialed	Lists the calls that you made.
3 Received	Lists the calls that you have received.
4 Missed	Lists the calls you missed.
5 Call History	Displays all of your call history. Select from the list to dial the number.
6 Download	Downloads the call history information from your mobile phone.
7 Privacy Mode	Activate the privacy mode to protect your personal information. In the privacy mode, personal data will not be displayed.
8 Change Device	Search for and connect another Bluetooth device.

Information

- In some mobile phones, call records may not be added to your Call History.
- Calls from restricted ID's are not added to your Call History Information.
- Up to 50 calls can be added in each Dialed Calls/Received Calls/Missed Calls list.
- The durations of each dialed/received call are not displayed in your car's Call History list.
- While the call history download is in progress, the status bar displays an icon ( ).
- If the call history download is turned off on the Bluetooth device, the call history download will fail.
- Some devices require a device authentication for downloading your call history. If download fails, check if the Bluetooth Settings or display status are normal.
- Some devices do not support call history download. Check if your Bluetooth device supports download feature. For details regarding Bluetooth-supported devices and their functional compatibility, visit owners.genesis.com

Contacts

Select All Menus ▶ Phone ▶ .

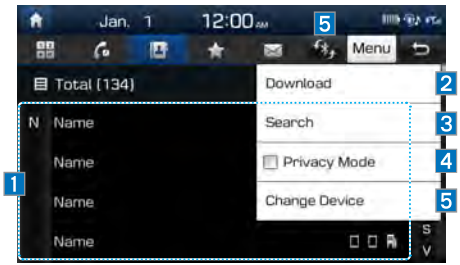


Name	Description
1 Contacts List	The list of Contacts. Select from the list to dial the number.
2 Download	Downloads contacts from your mobile phone.
3 Search	Searches Contacts.
4 Privacy Mode	Activate the privacy mode to protect your personal information. In the privacy mode, personal data will not be displayed.
5 Change Device	Search for and connect another Bluetooth device.

Information

- Up to 5000 phone numbers can be downloaded from a single, paired Bluetooth device.
- You cannot edit or delete downloaded phone numbers from your car.
- Contacts can be viewed only when the Bluetooth device is connected.
- Even if the Bluetooth device is disconnected, the downloaded data will remain.
  (Note that deleting a paired phone will also delete all downloaded Contacts and Call History data)
- Downloaded phone numbers may be lost depending on the condition of the Multimedia system. Keep your important data in a safe place.
- Contacts from both the SIM card and your mobile phone are downloaded at the same time by default.
- Only supported contacts format can be downloaded and displayed from the Bluetooth device, contacts from some applications will not be included.
- The status bar displays a ( ) while downloading contacts.
- The download will not be available if the contacts download function is turned off on your Bluetooth device.
- Some devices require a device authentication for downloading your contacts. If download fails,check your phone screen and confirm the download if necessary.
- Some devices do not support contacts download feature. Check if your Bluetooth device supports contacts download. For Bluetooth supporting devices details and compatibility, visit owners.genesis.com

Favorites


Select All Menus ▶ Phone ▶ ★.

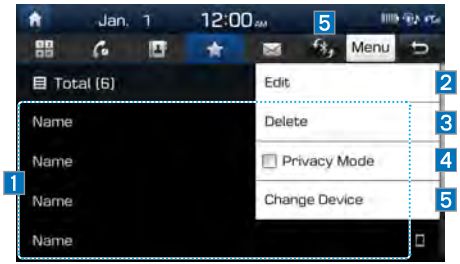


Name	Description
1 Favorites	Lists the phone numbers saved as Favorites. Select from the list to dial the number.
2 Edit	Add numbers or delete numbers to Favorites.
3 Delete	Deletes all of the numbers from Favorites.
4 Privacy Mode	Activate the privacy mode to protect your personal information. In the privacy mode, personal data will not be displayed.
5 Change Device	Search for and connect another Bluetooth device.

Viewing a new message

When you receive a message, a new message notification appears.

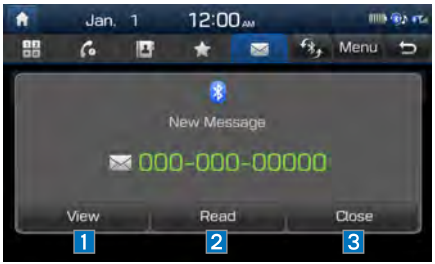

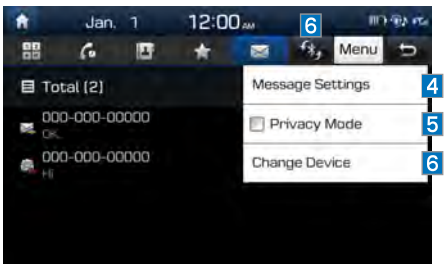


Name	Description
1 View	View the message details.
2 Read	Convert the message to voice and listen to it through the vehicle's speakers.
3 Close	Close the notification pop-up window.
4 Message Settings	Customize the settings for receiving messages.
5 Privacy Mode	Activate the privacy mode to protect your personal information. In the privacy mode, personal data will not be displayed.
6 Change Device	Search for and connect another Bluetooth device.

Viewing messages from the messages list

Select All Menus ▶ Phone ▶ ✉ ▶

Select a message from the list.

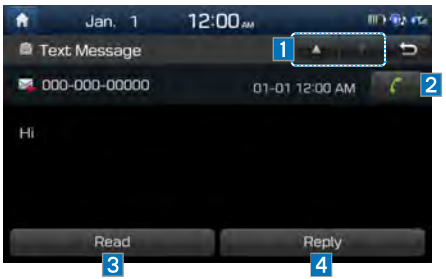

Name	Description
1 ▲/▼	Move to the previous or next message.
2 Call	Call the sender back.
3 Read	Convert the message to voice and listen to it through the vehicle's speakers.
4 Reply	Send a simple reply using one of the message templates.

Information

- To receive notifications every time you receive a message, access the message list, touch Menu ▶ Message Settings and touch Message Notification to select it.
- To edit the reply message templates, access the messages list, touch Menu ▶ Message Settings ▶ Predefined Messages and select the template you want to edit.
- To edit or delete templates, park your vehicle in a safe location first and use your mobile phone's messaging function. You cannot edit or delete your messages on your system.
- When you connect an iPhone, you may have some restrictions on receiving messages.
  - If the caller information is saved in your contacts list, only the caller's name will be displayed.
  - If the caller information is not saved in your contacts list, only the caller's phone number will be displayed.
  - Replying to received messages is not available.
  - If the message notification setting is disabled or the option for viewing content on the lock screen is disabled, message will not be received by your system.

part.4 Genesis Connected Services

Rear View Mirror Switch
Genesis Connected Services Voice Local Search
Auto Crash Notification
SOS
Stolen Vehicle Recovery
Before Use
Getting Started with Genesis Connected Services

Rear View Mirror Switch

Selecting the Rear View mirror switch will allow you to make service required inquiries, place search, and emergency Service by connecting to the Genesis Connected Services Center. Such features can be used only after subscribing to the Genesis Connected Services.



※ The actual image in the vehicle may differ from the illustration.

Instructions Display		Contents
1	∞	Genesis Connected Services • Starts or ends the Genesis Connected Services call.
2		Genesis Connected Services Voice Local Search • Request information about places via Genesis Connected Services Voice Local Search
3	SOS	SOS • Starts or ends the SOS call.

※ Refer to Genesis Connected Services manual for more Genesis Connected Services features.

Genesis Connected Services Voice Local Search

What is Genesis Connected Services Voice Local Search?

With Genesis Connected Services, you can search for a place names with your voice.

This feature operates separately from the voice recognition feature that activates from the button on the steering wheel.


Genesis Connected Services Voice Local Search is activated by pressing the button on the rear view mirror.

The search is done through network services; it is only available when connected to a communication network.

You must have a Genesis Connected Services subscription to activate this feature.

Starting Genesis Connected Services Voice Local Search

Press the key in the rear-view mirror (less than 0.8 seconds) to start Genesis Connected Services Voice Local Search.

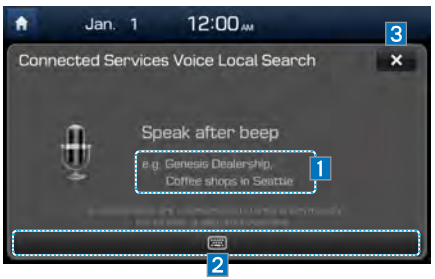


Name	Description
1 Example command	Shows an example to ask for a place search.
2 Manual search switch button	Switches the Genesis Connected Services Voice Local Search screen to manual search.
3 End button	Ends Genesis Connected Services Voice Local Search. *i* With Genesis Connected Services Voice Local Search, press the key in the rear-view mirror again to end the service.

NOTICE

- Depending on the system language, voice recognition may not be supported.

Auto Crash Notification

Provides immediate assistance when an accident occurs and an airbag is deployed. In this event, an ACN signal, containing customer and location information, will automatically be transmitted to the response center. Upon receipt of the signal, a response specialist will attempt to establish voice communications with the vehicle occupants and forward any pertinent information to Genesis Connected Services emergency services.

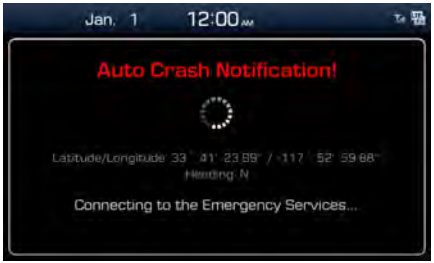


The Automatic Collision Notification feature is subject to adequate cellular coverage, signal strength and battery power, and only available in the 50 United States. You must be an active Genesis Connected Services subscriber or within the initial free trial period to receive Genesis Connected Services, including Automatic Collision Notification services.

SOS

Customers request emergency Genesis Connected Services emergency services by pressing the dedicated SOS key in the vehicle. This action transmits vehicle information and location to specially trained response specialists, who assist in coordinating the dispatch of appropriate emergency assistance to the customer.

The response specialist remains on the line with the customer until emergency first responder assistance has arrived.

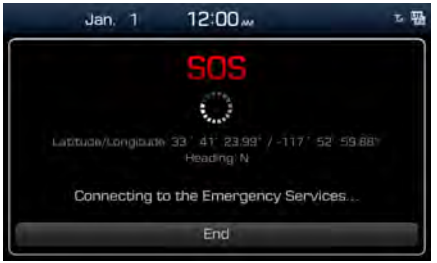

Stolen Vehicle Recovery

In the event a customer's vehicle is reported stolen (and a stolen vehicle report has been filed with the appropriate police department), the response center can provide assistance to the police in an attempt to recover the vehicle.

Vehicle Slowdown

Used with Stolen Vehicle Recovery, this enables law enforcement to gradually reduce the engine power of the vehicle, thus slowing it down to safe levels. A warning shall be transmitted to the driver prior to the slowdown procedure.

Vehicle Immobilization

Used with Stolen Vehicle Recovery, this enables law enforcement to send a signal to the vehicle which immobilizes the engine management system, thus preventing startup. This capability is only valid when the ignition is off, but can be saved for later immobilization if the vehicle is on or in motion at the time of signal transmission.

Before Use

What Is Genesis Connected Services?

This is a telematics service based on our cutting-edge IT system that makes your driving experience more convenient and fun and features safety, security, vehicle diagnostics, remote control and even smartphone synchronization functions.
Enjoy a smarter driving style with Genesis Connected Services.

What Is Telematics?

The word “Telematics” stems from the combination of telecommunications and infomatics, and refers to an information system that provides a variety of driving information through the built-in terminal by analyzing each symptom and driving state.

About Transmission and Reception of Radio Waves

For radio wave transmission/reception status, refer to the status displayed on the Genesis Connected Services screen.

Connection to the Genesis Connected Services Center or wireless data transmission may be disrupted in the following places.

- Inside tunnels
- Mountainous areas or dense forest
- Roads close to cliff edges
- Densely built-up areas
- On highways or roads underneath higher interchange roads
- Inside buildings


Getting Started with Genesis Connected Services

Use Genesis Connected Services features such as Driving Info and Vehicle Diagnostics. Genesis Connected Services features can be used after activating the service.

Information

- A separate fee may be charged for using Genesis Connected Services, and features may differ according to your service plan.

Select All Menus from Home Screen display. ▶ Select Connected Services icon.

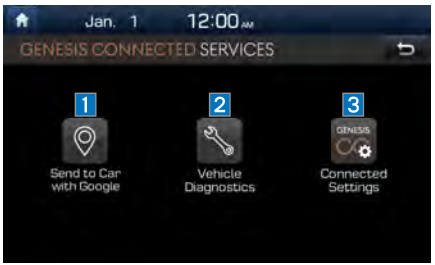

Name	Description
1 Send to Car with Google	Displays information about places received via Genesis Connected Services app or webpage.
2 Vehicle Diagnostics	Inspects vehicle malfunctions and provides diagnostics.
3 Connected Settings	Activates the service or displays modem information.

Connecting with the Genesis Connected Services Center

Press the ∞ key in the rear-view mirror to connect with the Genesis Connected Services Center.



Driving Info

Displays information such as Driving Time/Idle Time, Deceleration/Acceleration Distribution, Driving Speed and Driving Distance.


Select All Menus from Home Screen display. ▶ Select Driving Info icon.




Select the Update button to receive up-to-date driving information.

Send to Car with Google

Select All Menus from Home Screen display. ▶ Select Connected Services ▶ Send to Car with Google icon.

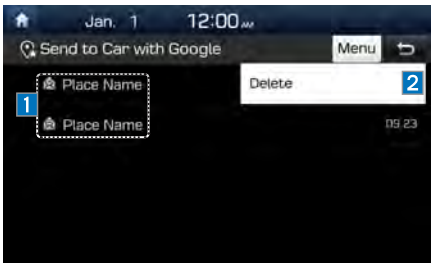

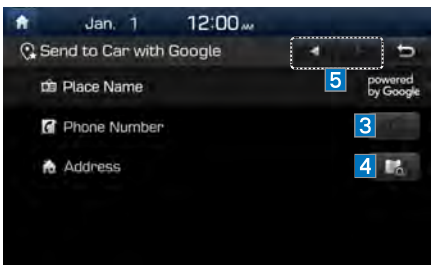

Name	Description
1 Place list	Displays the list of received places
2 Delete	Deletes selected items from the place list.
3 Dial	Displays the phone number of a selected place. If you want to make a call, select this button.
4 View Map	Displays the address of a selected place. If you want to view the address on the map, select this button.
5 Previous/ Next	Displays the previous or next place information.

You can check information about places received via Genesis Connected Services app or webpage.

To use Send to Car with Google, first you need to sign up to the Genesis Connected Services.

Vehicle Diagnostics

Select All Menus from Home Screen display ▶ Select Connected Services. ▶ Vehicle Diagnostics icon.



You can have your vehicle inspected only after stopping the vehicle because some control units can't be diagnosed while driving.

Vehicle Diagnostics will be canceled if you switch to another screen while diagnosis is in progress.

To receive result details, you need to first sign up to the Genesis Connected Services.

Connected Settings

For more details, refer to part 9. Setup > Connected Settings.

MEMO


part.5 Navigation


Basic Features
Quick Menu
Destination Search
Route
Navigation Settings
Troubleshooting

Basic Features

Operating Navigation Screen


Basic features on the map screen.

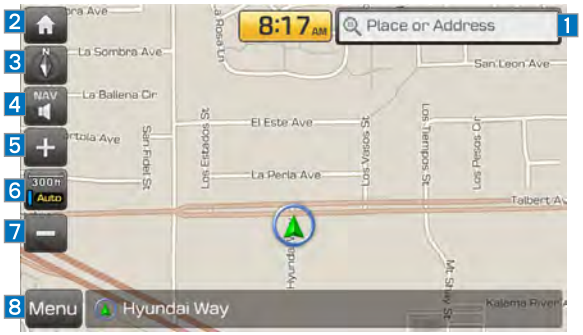

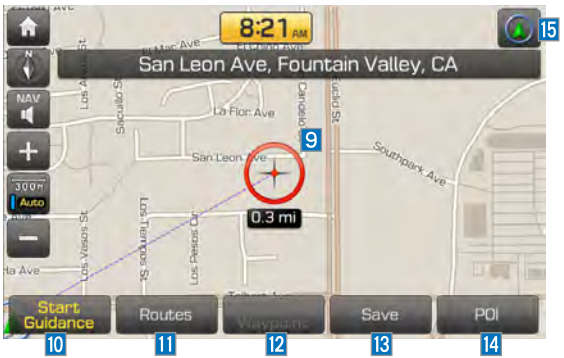

Name	Description
1	Move to the Place menu.
2	Go to the Home Screen
3	Change the map view mode.
4	Adjusts the volume.
5	Zoom in the map.
6	Set the zoom level automatically according to the guidance.
7	Zoom out the map.
8	Quick Menu for destination selection and options.
9	Touch to scroll the map.
10	Start the preferred navigation route to selected location.
11	Choose the preferred navigation route to selected location.
12	Set a waypoint to the current route.
13	Save frequently used address to address book.
14	Find a POI(Point Of Interest) around the current position.
15	View the vehicle's current position on the map screen.

Places

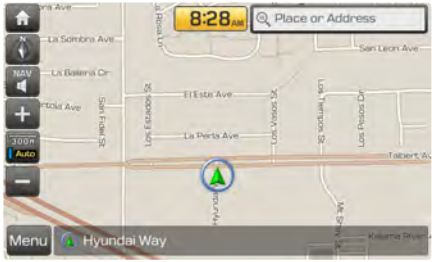

You can use this menu when the vehicle shift lever is in P (Park) and there is no destination set.

Select the Place or Address button to move to “Places”.




Please refer to “Places” in “Destination Search” for more details.

Changing Map View



Touch the compass arrow icon to toggle between a map oriented to the North, oriented parallel to the vehicle’s heading and 3D View.

Navigation Volume

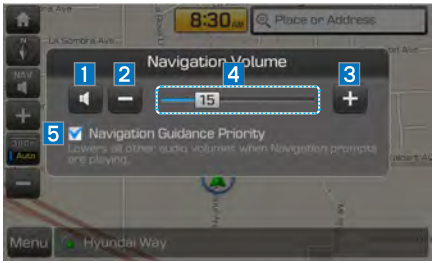


Select the NAV button to adjust the navigation volume.

Name	Description
1	Set the volume to mute.
2	Turn the volume down.
3	Turn the volume up.
4	Slide to set the volume.
5	Lowers all other audio volumes when Navigation prompts are playing.

Zoom In/Zoom Out


Zoom the map view screen in and out.

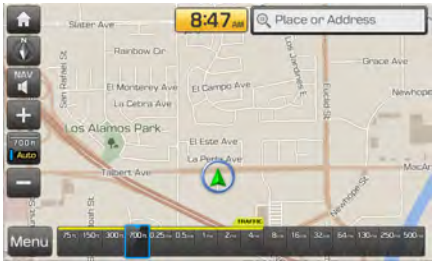

Select the + or − button to set the zoom level.

Map Scale

Sets the zoom level automatically according to the type of road.

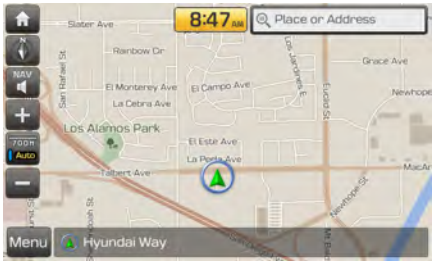

Name	Description
Scale Fix	Manually adjust the map scale.
Auto Scale	Change the map scale automatically depending on the type of road.


Information

- If the HD Radio or SiriusXM service is available for traffic information, the corresponding icon will appear at the top of the navigation screen. HD Radio is only available in metropolitan areas.
- HD Radio ( ) : Vehicle uses HD data services if the vehicle is a Metropolitan area with strong signal strength.
- SiriusXM ( ) : Vehicle uses SXM data services if subscribed when HD broadcast is not available.

Quick Menu

Route

Select the Menu button on the bottom left of the screen ▶ Select the Route button.

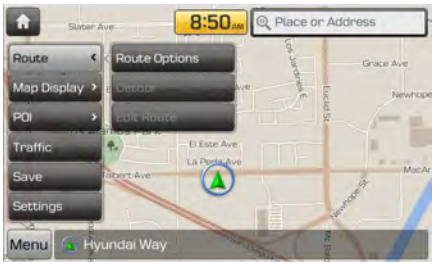


Select the Route button to set Route Options, Detour or Edit Route.

Route Options



Select your preferred route and avoid options. Then select the Save button to save your selection. These options will become default for future routes.

Detour

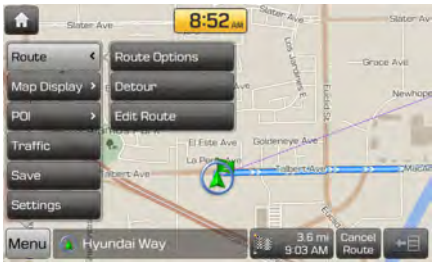


The Detour button is active only when there is an active route.



Selected distance is detoured from the current location.

Edit Route

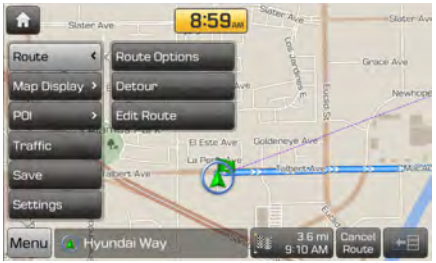



Select the Edit Route button to change the route. Refer to the Route > Editing Route section in the manual for more information. (page 5-28).

Map Display

Displays the direction of the map.

Select the , or button.



Name	Description
1 Heading Up (2D)	Displays always shows the vehicle's direction as proceeding towards the top of the screen.
2 North Up (2D)	Displays always has north at the top of screen.
3 3D Map	Shows the map in 3 dimentions.
4 3D Buildings	Shows or hides buildings on the map.

Nearby POIs

Display nearby POIs on the map.

View Nearby POIs


Select the Menu button on the bottom of the left screen ▶ Select the POI button.




Select the button to set whether to show nearby POIs or not.

When categories are selected, they will appear on the map. (ex. Gas Stations)

The lists of nearby gas station are displayed.

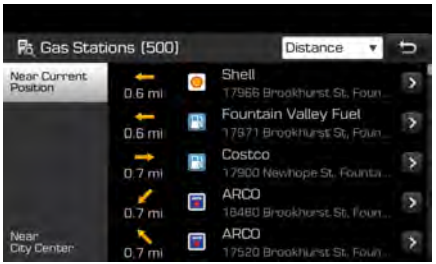


The list can be sorted to display in order of distance or name.

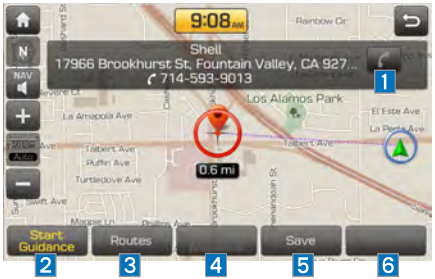


Name	Description
1 	Call to the selected location. (Phone needs to be connected via Bluetooth)
2 Start Guidance	Start the preferred navigation route to selected location.
3 Routes	Choose the preferred navigation route to selected location.
4 Add Waypoint	Set the location as a waypoint.
5 Save	Save the location.
6 POI	Search nearby POIs.

• **Editing**

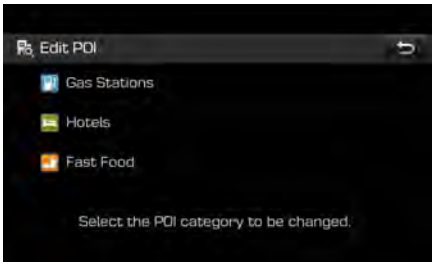

Change the shortcut POIs to display for your shortcuts. (ex. Gas Stations)

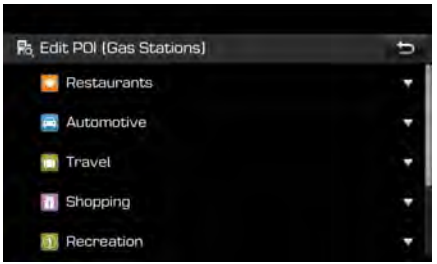

Select the desired category to change. (ex. Restaurants)



Select new category to display. (ex. American)



Gas Stations button is changed to American.

• Searching POI categories

Select the Menu button on the bottom left of the screen. ▶ POI button. ▶ POI Categories button. ▶ Select the desired item.





Select the item to search.

Select the History button to check the previous search result.



Select the Search button to search the POI category by name.

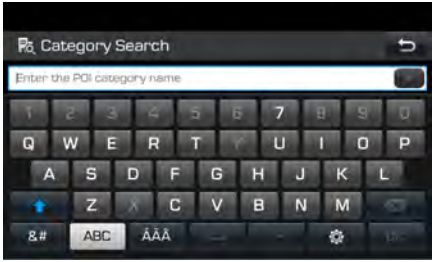

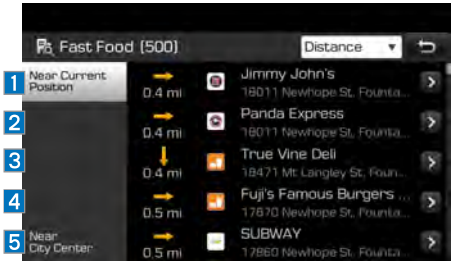


Select the desired POI to check the location and for detailed information.


Name	Description
1	Search POI around the current position.
2	Search POI around the destination. ⓘ Active only when a route's planned.
3	Search POI along route. ⓘ Active only when a route's planned.
4	Search POI around the current cursor when the map scrolled. ⓘ Active only when the cursor position is different from the vehicle position.
5	Search POI around the city selected.

Traffic

Select the Menu button on the bottom left of the screen ▶ Traffic button.

Traffic List

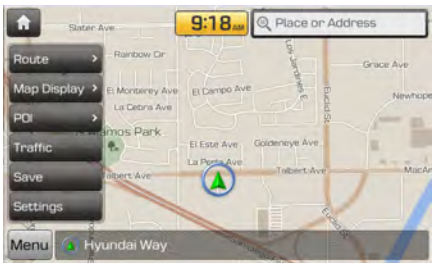

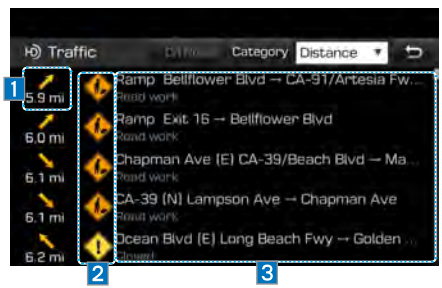

On the traffic list, the current traffic/road event information is displayed in order of distance.

Name	Description
1	Direction from the current location. Distance from the current location (mi or km).
2	Displays traffic info symbol based on the type of event.
3	Description of traffic event.


Additional traffic information may be displayed upon clicking on the Category button.






Name	Description
1	Display ‘Road Construction’ information.
2	Display ‘Accident’ information.
3	Display ‘Slow Traffic’ information.
4	Display ‘Incident’ information.
5	Display ‘Hazardous Road Conditions’ information.
6	Display ‘Travel Information’ .

When On Route is activated, only traffic information on your route is displayed.

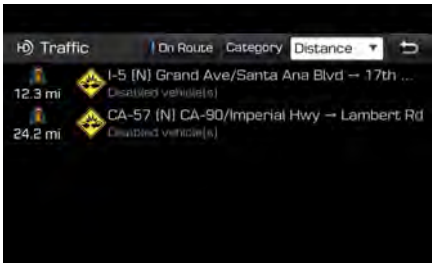

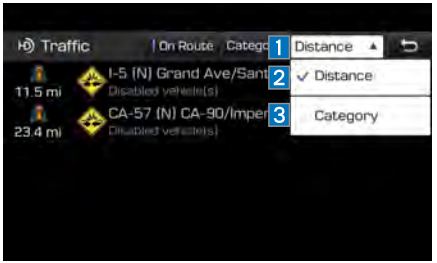


On the traffic list, the current basic traffic/road event information is displayed in order of distance.

Select the combo box to change the arrangement in order of distance/category.

Name	Description
1	Select the combo box to arrange.
2	Arrangement by distance: Display the traffic information in order of distance closer to the current location.
3	Arrangement by category: Display traffic information arranged in order of traffic information event type.

Traffic detail

Select the Menu button on the bottom left of the screen. ▶ Traffic button.

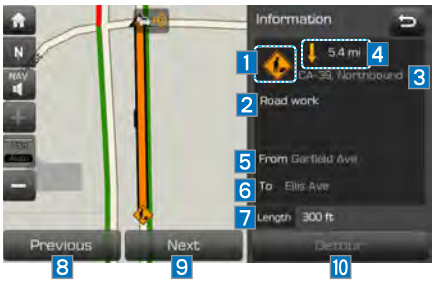

Select the traffic information on the traffic list to display the detailed screen as shown in the screen.


Display the symbol of traffic event and arrow which indicates the road from start to end of the traffic event. Detailed information is available on the right screen.

Name	Description
1	Symbol of traffic event
2	Event name of traffic information
3	Road name / road number including direction
4	Direction and distance from the current location
5	Intersection where traffic event starts
6	Intersection where traffic event ends
7	Total distance of traffic event
8	Check the previous traffic information (Enabled only when there are two or more events on the On Route)
9	Check the next traffic information (Enabled only when there are two or more events on the On Route)
10	Detour the route based on the traffic information

Traffic detour

Select the Menu button on the bottom left of the screen. ▶ Traffic button.

If there is traffic information on the route, it is possible to detour the route using traffic information and search other routes.
When the Detour button is enabled in the View Traffic Detail, select the Detour button to detour.

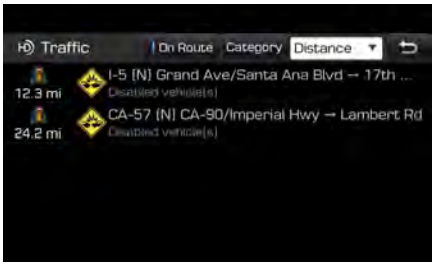


Select the desired section.



Check the information and select the Detour button.



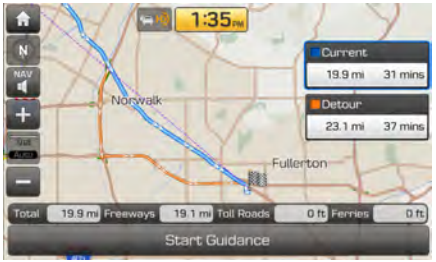


Select the Start Guidance button to apply the detoured sections and search other routes.

Save

Select the Menu button on the left bottom of the screen. ▶ Save button.




To store the location on the current map to the address book.

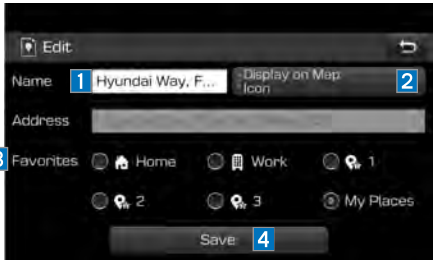


Name	Description
1	Change the name.
2	Select the Display on Map Icon, Display on Map Icon & Name or Display on Map None button to display on the map screen.
3	Designate to the Favorites item. When the favorite is designated, select the button on the bottom of the Destination menu and request the route guide immediately.
4	Save the setting.

Settings

Select the Menu button on the left bottom of the screen. ▶ Settings button.

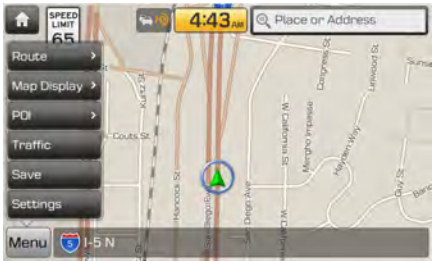

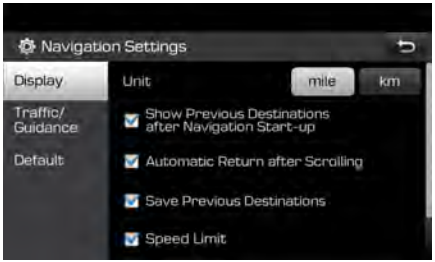

Change navigation settings. For more details, refer to “Navigation Settings” on page 5-30.

Destination Search

Places

You can enter POI Name, Address, or Coordinates that you wish to search by.

Press the NAV key. ▶ Select the Destination tab. ▶ Place or Address search bar.






Enter the POI Name, Address and Coordinates of the location you want in the input window above, and select the OK button.




Items that incude the keyword from the Previous Destination list will be recommended.

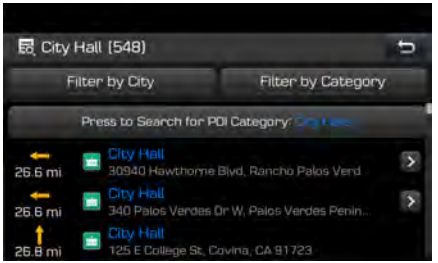


If you select a location from the search result list, it will bring you to the point.



If you select the Filter by City button on the search result screen, it will bring you to the City search screen where you can filter the search results by city names.

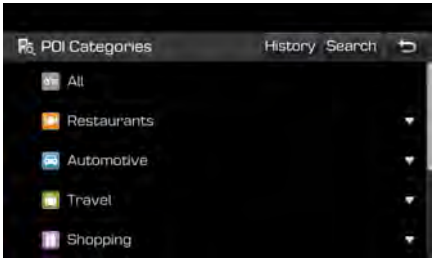

If you select the Filter by Category button from the search result screen, it will bring you to the POI Categories screen where you can filter the search results by POI Categories.

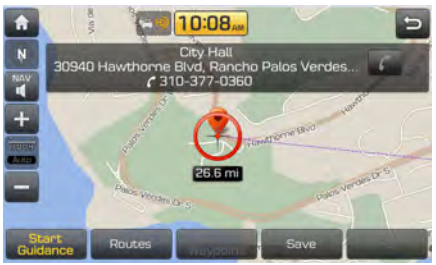

Once the destination has been identified either by POI name, address, or coordinates, the map screen will be displayed. From this screen you can set the destination or add a waypoint, or add the displayed destination to your address book.

Address

Set destination by address search.

Press the NAV key. ▶ Select the Destination tab. ▶ Address icon.




How to Search Address



Search criteria can be entered in any order. Example: State then City then Street then House No.

Name	Description
1	Select state to search.
2	Select a city before entering the street name. Addresses are searched only from the selected city.
3	Enter house number. If you don't know the house number, select Skip button.
4	Enter a street name. If same street names exist in other cities, the list of cities will be displayed.

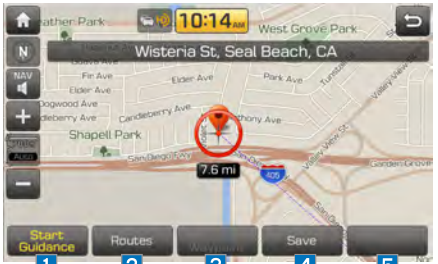

Enter the address to check the location information on the map.


Name	Description
1 Start Guidance	Start the preferred navigation route to selected location.
2 Routes	Choose the preferred navigation route to selected location.
3 Add Waypoint	Set the location as a waypoint.
4 Save	Save the location.
5 POI	Search nearby POIs.

Previous Destinations

Select from previously inputted addresses and POI's.

Press the NAV key. ▶ Select the Destination tab. ▶ Previous Destinations icon.



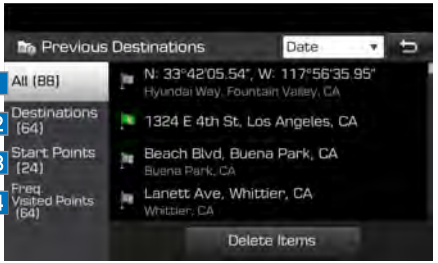

Arrange by all, latest destinations, latest searched places and latest departing places.

Arrange in order of date and name.

Name	Description
1	Display all destinations, departing places, and searched places.
2	Display previous destination places for route guidance.
3	Display previous departing places for route guidance.
4	Display Freq. Visited Points places for route guidance.



Select the Delete button to delete the information.


Name	Description
1 Mark All	Select all.
2 Unmark All	Deselect all.
3 Delete	Delete the selected item(s).

Online Search

Press the NAV key. ▶ Select the Destination tab. ▶ Online Search icon.



Runs Online Search.

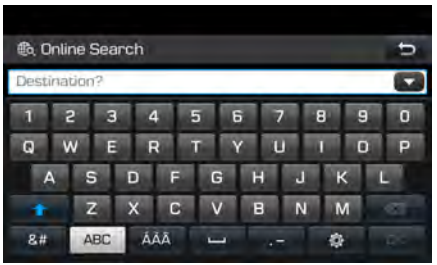


Enter the desired keywords and select the OK button.



Searching is in progress.



If search successes, search results are displayed. Select one of the search result.

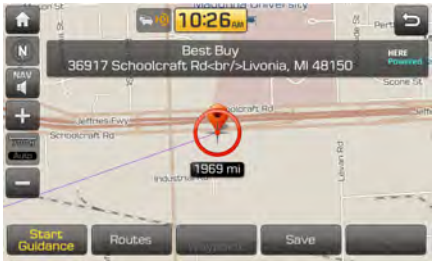

Select the Start Guidance button to start guidance.

If search or guidance fails, the connection error message is displayed as above. Please try again.

POI Categories

Press the NAV key. ▶ Select the Destination tab. ▶ POI Categories icon.






Select the desired item.



Select the desired item in the sub-categories.



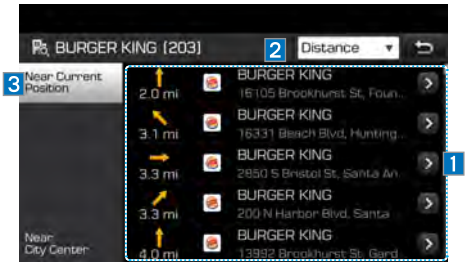


Name	Description
1	Select the desired destination among the searched items and add it as a way point.
2	Arrange in order of Distance and Name.
3	Arrange in order of Near Current Position, Near Destination, Along Route, Near Scroll Mark and Near City Center.

Gas Stations

Search for gas stations.

Press the NAV key. ▶ Select the Destination tab. ▶ Gas Stations icon.



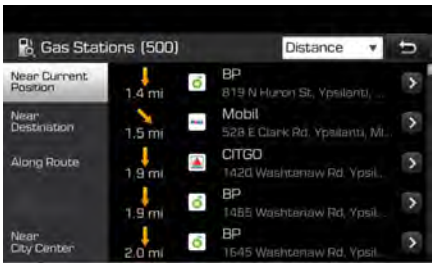


Select the desired destination among the searched items.

Restaurants

Search restaurants.

Press the NAV key. ▶ Select the Destination tab. ▶ Restaurants icon.



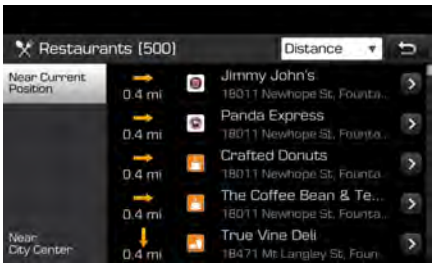

Select the desired destination among the searched items.

Emergency


Search emergency facilities.

Press the NAV key. ▶ Select the Destination tab. ▶ Emergency icon.





Check the current location information and select the desired item in the sub-menu (ex. Police Stations).

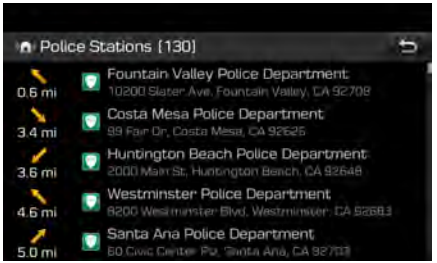

Select the desired destination among the searched items.

Address Book

Search the destination with the address book.


Press the NAV key. ▶ Select the Destination tab. ▶ Address Book icon.






Select the desired group.

If you save addresses in the Favorites tab, you can set destinations easily by selecting the icons such as Go Home and Work at the bottom of the Destination menu.

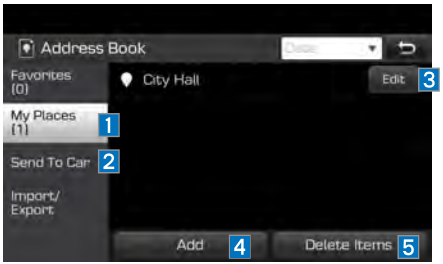

Name	Description
1	Select the desired destination from the searched items.
2	Select Send To Car in the Address Book menu.
3	Edit the destination.
4	Register a new destination.
5	Delete the desired item.

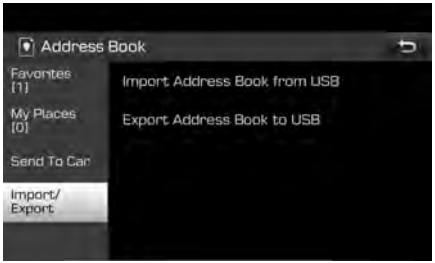



Information

- You can import or export your address book data by using a USB storage device. From the address book screen, touch Import/Export and select an option you want.


Coordinates

Press the NAV key. ▶ Select the Destination tab. ▶ Select the Coordinates to search by coordinates.

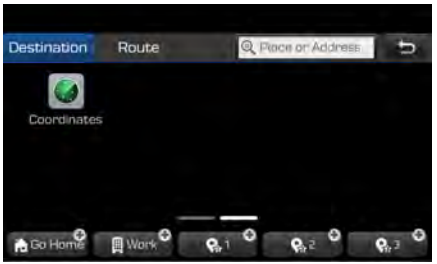

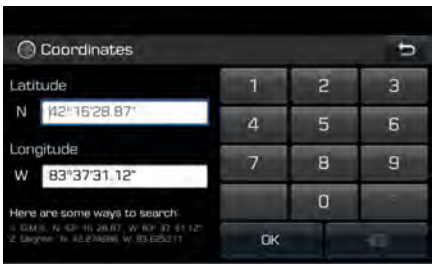

There are two ways to search by coordinates (D.M.S or Decimal degrees). After typing coordinates, select the OK button to search.

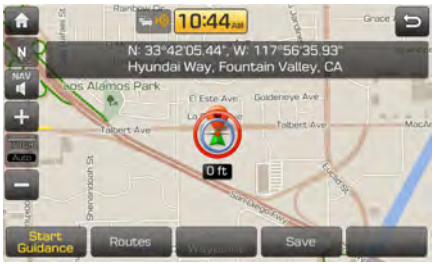


Select the Start Guidance button to start guidance.

Favorite places

Set the route using your favorite places. Press the NAV key. ▶ Select the Destination tab. ▶ Select from favorite places.




On the button where locations are not registered, the ⊕ icon is displayed. When a location is registered, the ⊕ icon disappears and the buttons 1 to 3 are displayed as your favorite places.

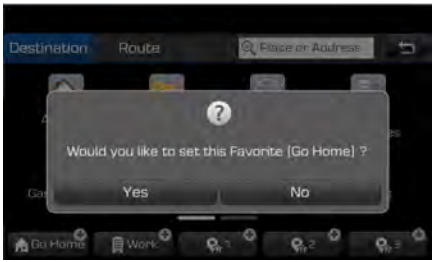

Select the Go Home button then select the Yes button to set the Favorite 'Go Home'.




Work, Special 1, Special 2, and Special 3 can also be set as a Favorite using the same steps.

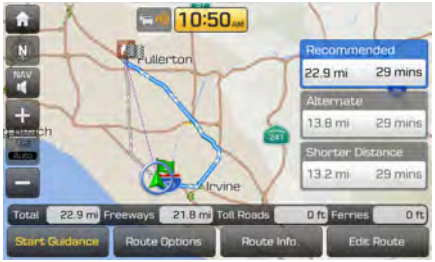

Pressing any of the Favorite Place buttons will start the route guidance to the saved Favorite address.


Route Setting

The route can be set after searching for a destination.

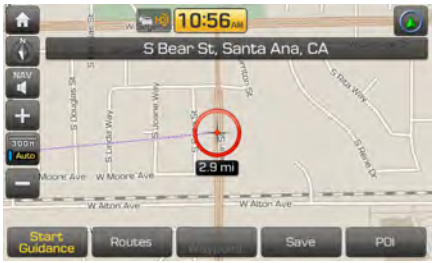


While the destination is set, the buttons Start Guidance, Routes, and Add Waypoint appear. Select the desired button to change a destination or add a waypoint.

Destination Setting

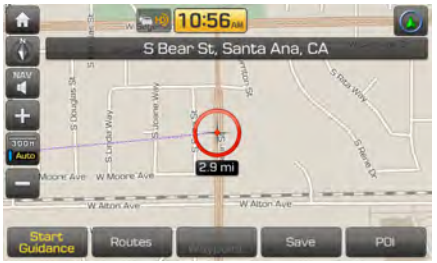


After searching the destination, select the Start Guidance button to set the location as a destination.

All Routes

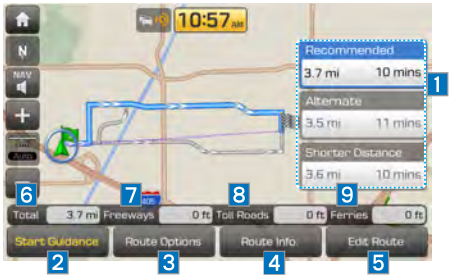


Three routing options are displayed based on real time traffic information and traffic pattern information and shorter distance.

- Recommended: Select the best route based on combine real-time traffic information and traffic pattern data on the map.
- Alternate: Search roads other than the Recommended route.
- Shorter Distance: Select short distance, regardless of how fast or slow progress will be calculated.

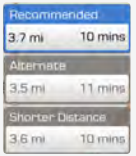Name	Description
1 	Display total distance, travel time. Select the desired route.
2 Start Guidance	Start the guidance with the route.
3 Route Options	Change the route option.
4 Route Info.	You can check route information.
5 Edit Route	Edit the route.
6 Total	Display total distance of the route.
7 Freeways	Display length of freeway on the route.
8 Toll Roads	Display length of toll road on the route.
9 Ferries	Display length of Ferry route on the route.

Adding Waypoint

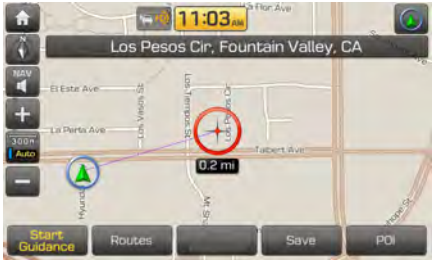

Select the Add Waypoint button to set the position as a waypoint and search the route.



Name	Description
1	Display the selected point on the map screen.
2	Move the selected item up.
3	Move the selected item down.
4	Delete the selected item.
5 Done	Select the button to finish editing.
6 Add Waypoint	Select the button to add waypoint.

Registering Location



Select the Save button at the desired location to register the location.




Enter the detailed information of the location to save.

Route Guidance

Show route guidance detailed information.

Route Guidance Screen

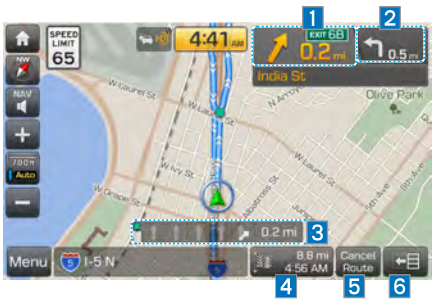

Name	Description
1 EXIT 68 0.2 mi	Displays the distance and direction to the first turn point.
2 0.5 mi	Displays the distance and direction to the second turn point.
3	Displays the lane information at the current location. Display the recommended direction in white, travelable direction in white, and the non-travelable direction in grey.


Name	Description
4 8.8 mi 4:56 AM	Displays the distance to the destination and the estimated time of arrival. Select the button to check the detailed information. If no way-point is set, you will see the remaining distance or estimated time of arrival in turn each time you click the button.
5 Cancel Route	Cancel the route.
6	Displays the turn list.

Split Screen during Route Guidance



Approaching the turning point, the detailed road and travel information is automatically displayed on the right side of the screen.

Name	Description
1	• Turn Point: Display direction and shape to turn shortly • Distance to turn: Display distance to next turn point
2	Road name to maneuver
3	Detail Distance Bar: Display distance to next turn point.

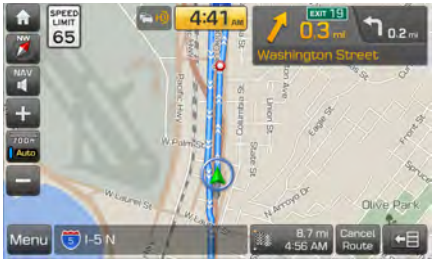



Select the button to change display view mode as below.


Name	Description
	Display the full map screen.
	Junction View, Split screen. (Active only when images are available)
	Display Turn-by-turn information

Details additional info can be displayed on Freeway.



Additional info of Freeway exit or Rest area can be displayed by selecting the Details button.

Detailed information for POIs around freeway exit is listed by selecting POI symbols.

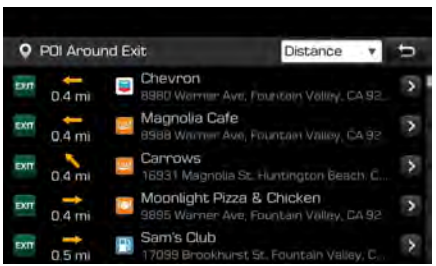

Route


Canceling Route

Cancel the route.

Press the NAV key. ▶ Select the Route tab. ▶ Cancel Route icon.



Select the Cancel Route icon.

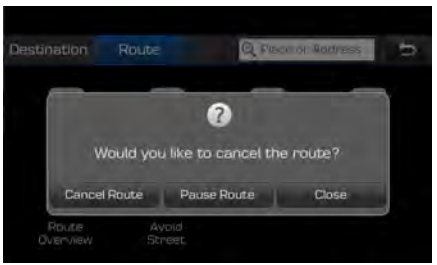


Select the Cancel Route button to cancel the route.

Route Options

Press the NAV key. ▶ Select the Route tab. ▶ Route Options icon.



Select the Route Options icon.

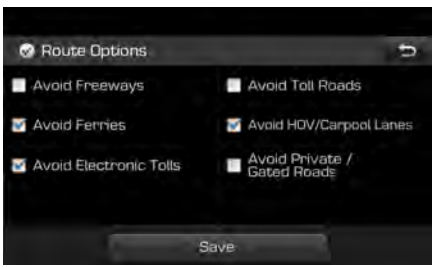

Determine the route options to guide the route.


Editing Route

Edit the current route.

Press the NAV key. ▶ Select the Route tab. ▶ Edit Route icon.



Select the Edit Route icon.

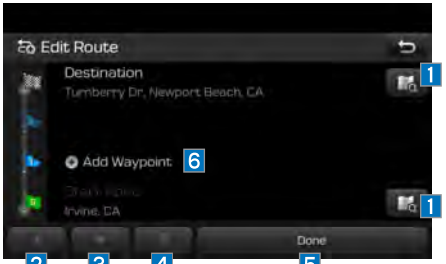

Name	Description
1	Display the selected point on the map screen.
2	Move the selected item up.
3	Move the selected item down.
4	Delete the selected item.
5	Select the button to finish editing.
6	Select the button to add an waypoint.



Add a waypoint through various searching methods.

Display Route Information

Press the NAV key. ▶ Select the Route tab. ▶ Route Info. icon.



Select the Route info. icon.



Check the information on the map. Select the desired item to see the map information.

Avoiding road

Select the Avoid Street button to avoid the street or road.



Check the desired item and select the Done button to finish.


Route Overview

Check the information on route including the distance, estimated time, toll fees, etc.

Press the NAV key. ▶ Select the Route tab. ▶ Route Overview icon.



Select the Route Overview icon.

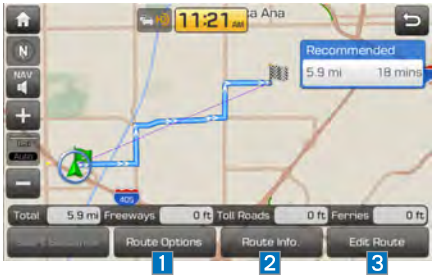

Name	Description
1	Change the search option.
2	You can check route information.
3	Edit the current route.

Avoid Street

Search new route by avoiding the selected street(s).

Press the NAV key. ▶ Route tab. ▶ Avoid Street icon.




Select the Avoid Street icon.




Select the Done button to plan new route after selecting the street(s) that you want to avoid.


Navigation Settings

Display

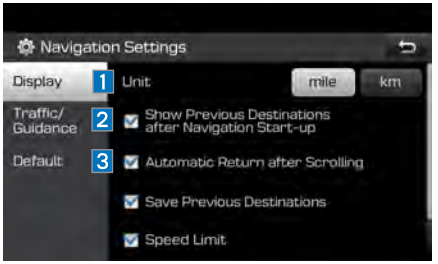

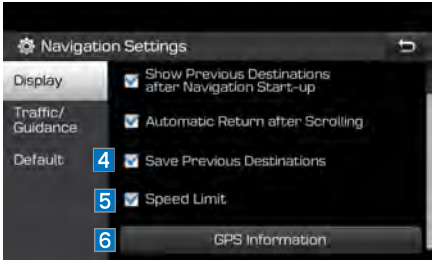

Name	Description
1	Unit: Select a unit of measure for the distance display on the map.
2	Show Previous Destinations after Navigation Start-up: Set whether to view previous destinations when the navigation starts up.
3	Automatic Return after Scrolling: Set whether to return to your current location automatically 10 seconds after you move to another location by swiping on the map.
4	Save Previous Destinations: Set whether to save your previous destinations, frequently visited points, and starting points automatically. If you activate this option, the list of your previous destinations will appear when you access the map for the first time after your system is turned on.
5	Speed Limit: Set whether to display the speed limit.
6	GPS Information: View GPS satellite status and the coordinates of your current location.

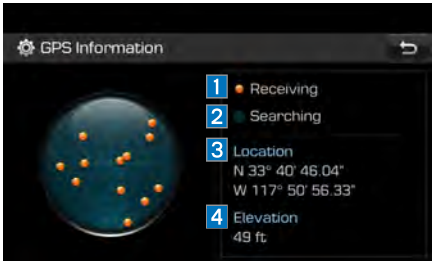


Select the GPS Information to display the detail GPS satellites information.

Name	Description
1 Receiving	Active when current position is being calculated.
2 Searching	Active when searching for satellite signal.
3 Location	Display current position of the vehicle.
4 Elevation	Display current elevation of the vehicle.

Traffic/Guidance



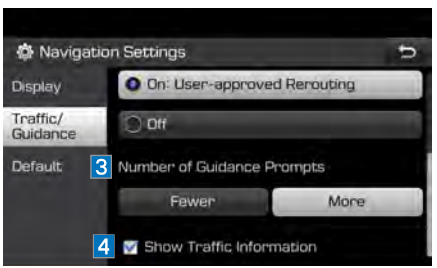

Name	Description
1	Source of Traffic Info: Select a source to receive traffic infomation from.
2	Traffic-based Rerouting: Set to search the route on a regular basis and to accept guidance reflecting the latest traffic conditions.
3	Number of Guidance Prompts: Set whether to hear more or fewer voice guidance prompts before each maneuver.
4	Show Traffic Information: Set whether to view traffic information on the map.

Default

Reset the Navigation Settings to factory default.



Troubleshooting

The current position as shown on the navigation may differ from the actual position under the following conditions.

The following occurrences are not malfunctions :	
• When driving on Y-shaped roads with narrow angles the current position may be displayed in the opposite direction • Within city streets, the current position may be displayed on the opposite side or on an off-road position • When changing the zoom level from maximum to a different level, the current position may become displayed on a different road • If the vehicle is loaded onto a ferry or a car transport vehicle, the current position may become stalled on the last position prior to loading • When driving on a spiral-shaped road • When driving in mountain regions with sharp turns or sudden brakes • When entering a road after passing an underground parking structure, building parking structure, or roads with many rotations • When driving in heavy traffic with frequent starts and stops	• When driving under slippery conditions, such as heavy sand, snow, etc. • When driving on spiral-shaped roads • When the tires have recently been replaced (Especially upon use of spare or studless tires). • When using tires of improper size • When the tire pressure for the 4 tires are different • When the replacement tire is worn or used (Especially studless tires having passed a second season). • When driving near high-rise buildings • When a roof carrier has been installed • When a long distance route is calculated while driving on an expressway In such cases, continued driving will automatically enable the system to conduct map matching or use updated GPS information to provide the current position (In such cases, up to several minutes may be required)

Correct route guidance may not occur due to search conditions or driving position.

The following occurrences are not malfunctions :	
• Guidance to go straight may be given while driving on a straight road • Guidance may not be given even when having turned at an intersection • There are certain intersections in which guidance may not occur • A route guidance signaling for a u-turn may occur in some No u-turn intersections	• Route guidance signaling entrance into a No-entry zone may occur (No-entry zone, road under construction, etc.) • Guidance may be given to a position that is not the actual destination if roads to reach the actual destination do not exist or are too narrow • Faulty voice guidance may be given if the vehicle breaks away from the designated route. (e.g. if a turn is made at an intersection while the navigation provided guidance to go straight.)

These situations may occur after conducting route calculation.

The following occurrences are not malfunctions :	
• Guidance may be given to a position differing from the current position when turning at an intersection • When driving in high speeds, route recalculation may take a longer period of time • Route guidance signaling for a u-turn may occur in some No u-turn intersections	• Route guidance signaling entrance into No-entry zone may occur. (No-entry zone, road under construction, etc.) • Guidance may be given to a position removed from the actual destination if roads to reach the actual destination do not exist or are too narrow • Faulty voice guidance may be given if the vehicle breaks away from the designated route (e.g. If a turn is made at an intersection while the navigation provided guidance to go straight.)

END USER LICENSE AGREEMENT

PLEASE READ THIS END USER LICENSE AGREEMENT (“EULA”) CAREFULLY BEFORE USING THE NAVIGATION SYSTEM.

This is a license agreement between you and Hyundai MnSoft, INC. including its affiliates (“COMPANY”) regarding a copy of the COMPANY navigable map database together with associated software, media and explanatory printed documentation published by COMPANY(jointly the “Product”). The Product is provided for your personal, internal use only and not for resale. It is protected by copyright and is subject to the following terms which are agreed to by you, on the one hand, and COMPANY and its licensors (and their licensors and suppliers) (collectively, “Licensors”) on the other hand.

By using the Product, you accept and agree to all terms and conditions in this End User License Agreement (“EULA”). IF YOU DO NOT AGREE TO THE TERMS OF THIS EULA, YOU MUST PROMPTLY EXIT THE PRODUCT OPERATION PROGRAM AND DO NOT USE OR ACCESS TO THE PRODUCT. YOU AGREE THAT YOUR RIGHTS UNDER THIS EULA MAY BE TERMINATED AUTOMATICALLY WITHOUT NOTICE IF YOU FAIL TO COMPLY WITH ANY TERM(S) OF THIS EULA.

Terms and Conditions

Personal Use Only. You agree to use this Product together with COMPANY's authorized application for the solely personal, non-commercial purposes for which you were licensed, and not for service bureau, time-sharing or other similar purposes. Accordingly, but subject to the restrictions set forth in the following paragraphs, you agree not to otherwise reproduce, copy, modify, decompile, disassemble, create any derivative works of, or reverse engineer any portion of this Data, and may not transfer or distribute it in any form, for any purpose, except to the extent permitted by mandatory laws. You may not assign this EULA or any of the rights or licenses granted under this EULA, except when installed in the system for which it was created.

Restrictions. Except where you have been specifically licensed to do so by COMPANY, and without limiting the preceding paragraph, you may not use the Product (i) with any products, systems, or applications installed or otherwise connected to or in communication with vehicles, capable of vehicle navigation, positioning, dispatch, real time route guidance, fleet management or similar applications; or (ii) with or in communication with any positioning devices or any mobile or wireless-connected electronic or computer devices, including without limitation cellular phones, palmtop and handheld computers, pagers, and personal digital assistants or PDAs.

COPYING OR USE OF THE PRODUCT EXCEPT AS PERMITTED BY THIS EULA IS UNAUTHORIZED AND IS COPYRIGHT INFRINGEMENT UNDER THE LAWS OF YOUR COUNTRY. IF YOU COPY OR USE THE PRODUCT WITHOUT COMPANY'S PERMISSION, EXCEPT AS PERMITTED BY THIS EULA, YOU ARE VIOLATING THE LAW AND LIABLE TO COMPANY AND ITS LICENSORS FOR DAMAGES, AND YOU MAY BE SUBJECT TO CRIMINAL PENALTIES.

THE PRODUCT MAY INCLUDE ENFORCEMENT TECHNOLOGY DESIGNED TO PREVENT (i) UNAUTHORIZED COPYING OF THE PRODUCT ONTO PHYSICAL STORAGE MEDIA OR VIA TRANSFER OVER THE INTERNET OR OTHER ELECTRONIC COMMUNICATION MEANS AND/OR (ii) ILLEGAL USAGE OF THE PRODUCT OTHER THAN BY A SPECIFICALLY AHTORIZED DEVICE. YOU AGREE THAT COMPANY MAY USE THESE MEASURES TO PROTECT COMPANY AND THE LICENSORS AGAINST COPYRIGHT INFRINGEMENT.

Uploads. The Product may provide functionality through which you are able to upload certain information about your use of the Product (collectively, "Uploads") to COMPANY's servers or receive other services from COMPANY (collectively, the "Services"). If you use such functionality, you authorize COMPANY to retain your Uploads on its servers. COMPANY will have no obligation to provide any Services, may change the form and nature of any Services at any time with or without notice to you, will have no liability whatsoever to you for any failure of the Product or Services to transmit your Uploads to or from COMPANY's servers, may cease providing any Services at any time with or without notice to you, and will have no obligation to retain your Uploads (or any other materials you may provide to COMPANY) on its servers or return your Uploads (or any other materials you may provide to COMPANY) to you before deleting them from its servers.

Storage. The Product may provide functionality through which you are able to store information (such as images) on the device on which you are using the Product. COMPANY will have no liability whatsoever to you or any third party for any failure of the Product to store any such information on such device.

Personal Information. By using the Product, you agree to the collection, retention and processing of your personal data (including the location of your mobile device) by COMPANY and to the storage and processing of such personal information on computers located outside of the country in which you reside. Even though COMPANY has taken steps intended to protect your personal information from being intercepted, accessed, used, or disclosed by unauthorized persons, COMPANY cannot fully eliminate security risks associated with your personal information and cannot guarantee that its systems will not be breached. See [*] for additional information regarding COMPANY's use of your personal information.

WARNING. THE PRODUCT REFLECTS REALITY AS EXISTING BEFORE YOU RECEIVED THE PRODUCT AND IT COMPRISES DATA AND INFORMATION FROM GOVERNMENT OTHER SOURCES. ACCORDINGLY, THE PRODUCT MAY CONTAIN INACCURATE OR INCOMPLETE INFORMATION DUE TO THE PASSAGE OF TIME, CHANGING CIRCUMSTANCES, SOURCES USED AND THE NATURE OF COLLECTING COMPREHENSIVE GEOGRAPHIC PRODUCT, ANY OF WHICH MAY LEAD TO INCORRECT RESULTS. THE PRODUCT AND SERVICES MAY NOT TO BE USED FOR SAFETY OF LIFE APPLICATIONS, OR FOR ANY OTHER APPLICATION IN WHICH THE ACCURACY OR RELIABILITY OF THE PRODUCT OR SERVICES COULD CREATE A SITUATION WHERE PERSONAL INJURY OR DEATH MAY OCCUR. **DO NOT ATTEMPT TO CONFIGURE THE PRODUCT OR INPUT INFORMATION WHILE DRIVING. FAILURE TO PAY FULL ATTENTION TO THE OPERATION OF YOUR VEHICLE COULD RESULT IN DEATH, SERIOUS INJURY, OR PROPERTY DAMAGE. BY USING THE PRODUCT, YOU ASSUME ALL RESPONSIBILITY AND RISK.**

Disclaimer of Warranty. The Product is provided to you "as is," and you agree to use it at your own risk. SUBJECT TO THE APPLICABLE LAWS, COMPANY AND THE LICENSORS MAKE NO GUARANTEES, REPRESENTATIONS OR WARRANTIES OF ANY KIND, EXPRESS OR IMPLIED, ARISING BY LAW OR OTHERWISE, INCLUDING BUT NOT LIMITED TO, CONTENT, QUALITY, ACCURACY, COMPLETENESS, EFFECTIVENESS, RELIABILITY, PERFORMANCE, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, NON-INFRINGEMENT, USEFULNESS, USE OR RESULTS TO BE OBTAINED FROM THE PRODUCT, OR THAT THE PRODUCT OR SERVER WILL BE UNINTERRUPTED OR ERROR-FREE, OR THAT ERRORS IN THE PRODUCT OR NONCONFORMITY TO ITS DOCUMENTATION CAN OR WILL BE CORRECTED. YOU ACKNOWLEDGE THAT THE PROVISIONS OF THIS SECTION ARE A MATERIAL INDUCEMENT AND CONSIDERATION TO COMPANY AND THE LICENSORS TO GRANT THE LICENSE CONTAINED IN THIS EULA AND TO PROVIDE YOU WITH ACCESS TO THE SERVICES.

Limitation of Liability: TO THE MAXIMUM EXTENT PERMITTED UNDER THE APPLICABLE LAWS, COMPANY AND THE LICENSORS SHALL NOT BE LIABLE TO YOU: IN RESPECT OF ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF THE NATURE OF THE CAUSE OF THE CLAIM, DEMAND OR ACTION ALLEGING ANY LOSS, INJURY OR DAMAGES, DIRECT OR INDIRECT, INCURRED BY YOU OR ANY THIRD PARTY WHICH MAY ARISE IN CONNECTION WITH OR RESULT FROM THE USE OR POSSESSION OF THE PRODUCT; OR FOR ANY LOSS OF DATA, PROFIT, REVENUE, CONTRACTS OR SAVINGS, OR OTHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF YOUR USE OF OR INABILITY TO USE THE PRODUCT, ANY DEFECT IN THE PRODUCT, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF COMPANY OR THE LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES AND NOTWITHSTANDING THE FAILURE OF ANY LIMITED REMEDY PROVIDED HEREIN.

Exclusions. Some jurisdictions do not allow certain warranty exclusions or the limitation or exclusion of liability, so to that extent the above exclusion may not apply to you. To the extent that COMPANY may not, as a matter of applicable law, disclaim any implied warranty or limit its liabilities, the scope and duration of such warranty and the extent of COMPANY's liability shall be the minimum permitted under such applicable law. The disclaimer of warranty and limitation of liability set forth in this EULA does not affect or prejudice your statutory rights where you have acquired the Product otherwise than in the course of business.

Third-Party Copyright Notices. The third-party sourced data has been incorporated into or made a part of the Product and is being sublicensed to you subject to the terms and conditions of this EULA. In this regard, you shall not remove or tamper with any intellectual property rights notice attached or used in relation to data supplied by the Licensors.

Entire Agreement. This EULA is the entire agreement between COMPANY (and the Licensors) and you pertaining to the subject matter hereof, and supersedes in their entirety any and all previous written or oral communications or documents (including, if you are obtaining an update, any agreement that may have been included with an earlier version of the Product) with respect to such subject matter.

Governing Law. This EULA shall be governed by the laws of the jurisdiction in which you reside at the date of acquisition of the Product. Should you at that moment reside outside the European Union or Switzerland, the law of the jurisdiction within the European Union or Switzerland where you acquired the Product shall apply. In all other cases, or if the jurisdiction where you acquired the Product cannot be defined, the laws of the Republic of Korea shall apply. This EULA will not be governed by the U.N. Convention on Contracts for the International Sale of Goods. The courts competent at your place of residence at the time you acquired the Product shall have jurisdiction over any dispute arising out of, or relating to this EULA, without prejudice to COMPANY's right to bring claims at your then current place of residence.

Export Control. You agree not to export or re-export from anywhere any part of the Product in any form except in compliance with applicable export laws, rules and regulations, including but not limited to the laws, rules and regulations administered by the Office of Foreign Assets Control of the U.S. Department of Commerce and the Bureau of Industry and Security of the U.S. Department of Commerce.

Miscellaneous. If any provision of this EULA is found to be invalid or unenforceable, it will be enforced to the extent permissible and the remainder of this EULA will remain in full force and effect. Failure by COMPANY to prosecute any right with respect to a default hereunder will not constitute a waiver by COMPANY of the right to enforce rights with respect to the same or any other breach. No refunds or replacements will be permitted on damaged Product.

U.S. Government End Users. If the Product is being acquired by or on behalf of the United States Government or any other entity seeking or applying rights similar to those customarily claimed by the United States Government, this Product and related documentation are "Commercial Items" as that term is defined at 48 C.F.R. ("FAR") 2.101. This Product and related documentation are licensed to the United States Government end users (a) only as "Commercial Items" and (b) with only those rights as are granted to all other end users in accordance with this EULA, and each copy of Product delivered or otherwise furnished shall be marked and embedded as appropriate with the following "Notice of Use," and shall be treated in accordance with such Notice:

NOTICE OF USE

CONTRACTOR (MANUFACTURER/ SUPPLIER) NAME: Hyundai MnSoft, Inc.
CONTRACTOR (MANUFACTURER/SUPPLIER) ADDRESS: 74 Wonhyo-ro, Yongsan-gu, Seoul 140-711, Republic of Korea
This Product and related documentation are commercial items as defined in FAR 2.101 and is subject to this EULA under which this Product is provided.
© 2013 Hyundai MnSoft. All rights reserved

If the Contracting Officer, federal government agency, or any federal official refuses to use the legend provided herein, the Contracting Officer, federal government agency, or any federal official must notify COMPANY prior to seeking additional or alternative rights in the Product.

End-User Terms Required by HERE. The Product utilizes map data that COMPANY licenses from HERE and the following copyright notices apply to such map data (the "HERE Data"): © 2013 HERE. All rights reserved.

The HERE Data for areas of Canada includes information taken with permission from Canadian authorities, including: © Her Majesty the Queen in Right of Canada, © Queen's Printer for Ontario, © Canada Post Corporation, GeoBase ®, © Department of Natural Resources Canada. All rights reserved.

HERE holds a non-exclusive license from the United States Postal Service® to publish and sell ZIP+4® information.

©United States Postal Service® 2010. Prices are not established, controlled or approved by the United States Postal Service®. The following trademarks and registrations are owned by the USPS: United States Postal Service, USPS, and ZIP+4.

The HERE Data for Mexico includes certain data from Instituto Nacional de Estadística y Geografía.

Austria: © Bundesamt für Eich- und Vermessungswesen

Croatia, Cyprus, Estonia, Latvia, Lithuania, Moldova, Poland, Slovenia and/or Ukraine: © EuroGeographics

France: source: © IGN 2009 – BD TOPO ®

Germany: Die Grundlagendaten wurden mit Genehmigung der zustaendigen Behoerden entnommen

Great Britain: Contains Ordinance Survey data © Crown copyright and database right 2010, and Royal Mail data © Royal Mail copyright and database right 2010.

Greece: Copyright Geomatics Ltd.

Italy: La Banca Dati Italiana è stata prodotta usando quale riferimento anche cartografia numerica ed al tratto prodotta e fornita dalla Regione Toscana.

Norway: Copyright © 2000; Norwegian Mapping Authority

Portugal: Source: IgeoE – Portugal

Spain: Información geográfica propiedad del CNIG

Sweden: Based upon electronic data Ó National Land Survey Sweden

Switzerland: Topografische Grundlage: Ó Bundesamt für Landestopographie

United Kingdom: Contains public sector information licensed under the Open Government Licence v1.0 (see for the license http://www.nationalarchives.gov.uk/doc/open-government-licence/) and is adapted from data from the office for National Statistics licensed under the Open Government Licence v.1.0.

Israel: © Survey of Israel data source

Jordan: © Royal Jordanian Geographic Centre. The foregoing notice requirement for Jordan Data is a material term of the Agreement. If Client or any of its permitted sublicensees (if any) fail to meet such requirement, HERE shall have the right to terminate Client's license with respect to the Jordan Data.

Mozambique: Certain Data for Mozambique provided by Cenacarta © 20XX by Cenacarta

Réunion: source: © IGN 2009 - BD TOPO ®

End-User Terms Required by ZENRIN. The Product utilizes map data that COMPANY licenses from ZENRIN and the following copyright notices apply to such map data (the "ZENRIN Data"):

Europe: Junction View Data provided by ZENRIN CO., LTD. Copyright © 20XX, All Rights Reserved.

Europe: Junction View Data and Exit View Data provided by ZENRIN CO., LTD. Copyright © 20XX, All Rights Reserved.

North America: Junction View Data provided by ZENRIN USA, INC. Copyright © 20XX, All Rights Reserved; Junction View Data fourni par ZENRIN USA, INC. Copyright © 20XX. Tous droits réservés; Las imágenes de las rutas alternas son proveídas por ZENRIN USA, INC. Copyright © 20XX. Todos los derechos reservados.

© 2013 Hyundai MnSoft. All rights reserved.

Copyright for Brand Icon

The marks of companies displayed by this product to indicate business locations are the marks of their respective owners. The use of such marks in this product does not imply any sponsorship, approval, or endorsement by such companies of this product.

Copyright for Junction View

Junction View Data provided by ZENRIN USA, INC. Copyright(C) 20XX, All rights Reserved.

About Map Updates

Your vehicle comes with three years of complimentary map updates to your navigation system. To find out if a new update is available, please refer to the following options:

- Visit your Genesis owners website: http://www.mygenesisusa.com
- Call or visit your local Genesis dealership

part.6 Voice Recognition

What is Voice Recognition?
Precautions Required for Successful Voice Recognition
Starting/Ending and Setting Voice Recognition
Voice Recognition Screen Overview
Voice Commands
Siri Eyes Free

Voice Recognition

What is Voice Recognition?

The voice recognition feature operates the multimedia system by recognizing voice commands and enables hands-free operation of the system while you are driving your car.

Not all possible voice commands are recognized by the system due to technological limitations. To make up for these limitations, the system displays the voice commands that are available for you to use.

There are errors in communication between people. Likewise, voice recognition sometimes misunderstands your voice command in some circumstances. If this happens, either check the screen for the available options and say the command again, or manually select and select the button for the corresponding command on the screen.

Precautions Required for Successful Voice Recognition

1. Voice recognition supports only the commands that are displayed on the screen and written in the User's Guide.
2. To ensure the correct recognition and execution of your command, say your command when you hear the beep after a voice prompt.
3. Voice recognition automatically ends if:
   1) A call is incoming or outgoing
   2) A media device (USB or iPod, etc.) is connected or disconnected
   3) The front or rear view camera is operated (optional)
   4) The car engine starts or stops
   5) A system key, such as RADIO key or MEDIA key is selected
4. The microphone used for the voice recognition system is located in the headliner directly above the driver's head. To make your commands better understood, keep your body straight in the driver's seat when speaking the command.
5. Speaking naturally and clearly will ensure better recognition of your voice commands.
6. In the following cases voice recognition will be affected by ambient noise.
   1) The sound of the wind if any window or the sun roof is open.
   2) High speed blower from the air vents. Set climate control to blow lower than level 3.
   3) Vibrations from passing through a tunnel.
   4) Vibrations from driving on an uneven road.
   5) Storms and heavy rain.

Starting/Ending and Setting Voice Recognition

Starting Voice Recognition

Press the key briefly (less than 0.8 seconds) on the steering wheel control to activate voice recognition.



Ending Voice Recognition

1. Select “Exit” to the left of the bottom to end voice recognition.
2. Press and hold (more than 0.8 seconds) the key on the steering wheel control to end voice recognition.



Combining Voice Recognition with On-Screen Commands

After pressing the key, say a command after the beep. The voice recognition system will execute the desired operation after understanding the command. Alternatively, you may touch any of the corresponding Commands on the screen while the Voice Recognition system is in operation.

Combining voice recognition with available on-screen commands is useful when the system is taking longer than expected or the voice command did not execute as desired.



Extending the Listening Time

When the system is waiting for your command, after the voice prompt and beep have been heard, if you press the key (less than 0.8 seconds), then the beep will sound again and standby mode will restart.

When activated, voice recognition waits for your command for 5 seconds. If you say nothing for 5 seconds, a voice prompt will ask for your command again.

Information

- Due to the sensitivity of the MIC, if too much time has passed since the MIC has opened and waiting for a command, small noises can sometimes be interpreted as a command.



Skipping Prompt Messages

When you hear the prompt message, press the key on the steering wheel control to skip the message and go directly to listening mode to say your command.

This results in faster operation when you feel the message is too long or you already know the command to use.

Information

- Refer to Part 9 for instructions on how to change the Voice Recognition Settings.



Adjusting Voice Recognition Volume

During voice recognition, rotate the volume knob to adjust the message volume.




Voice Recognition Screen Overview



Name	Description
1 Representative Commands	Displays frequently used commands.
2 Not available command	Unavailable voice commands are grey, a precondition was not met so the command is grey and unavailable. The conditions required for using the unavailable commands will be described under each command.


Name	Description
3 Voice recognition status icons	Standby Voice guidance Voice command process
4 Recognized results	Displays the voice recognition result.
5 User's speaking volume being recognized	Displays the voice command level real time as it is being spoken.
6 Help	Displays all available help commands in a tree format.
7 Exit	Ends the voice recognition.

Help Display

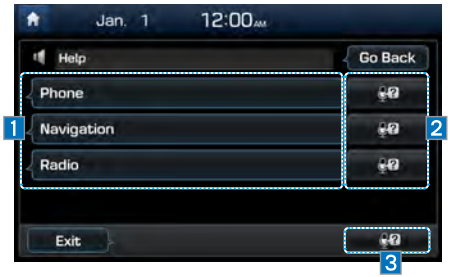

Name	Description
1 Command list	• Shows the available commands. • Select or say a command to display additional commands in detail.
2 How to use for selected item	This section shows how to use voice recognition for the selected item.
3 How to use in general	This section displays how to use voice recognition in general.

Instructions for Using Voice Recognition

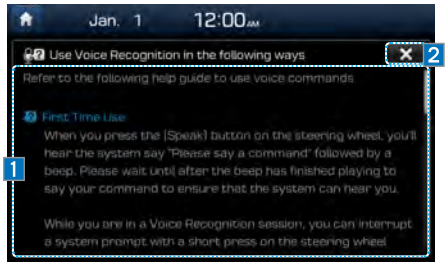

Name	Description
1 Detail instruction	This section describes how to use voice recognition in detail.
2 Close button	Closes the screen and restarts voice recognition.

Information

- In the instructions screen, no voice is recognized, so you must manually issue commands. Because the instructions screen displays a lot of content, you cannot view it while driving for safety precautions.

Voice Commands

Types of Commands

Voice recognition commands are classified as “Global Commands” and “Local Commands”.

1. Global Commands (●): Commands that can be used immediately after activating voice recognition.
2. Local Commands (○): Commands that can be used when a multimedia or Bluetooth function is running, or displayed on the screen, after activating voice recognition.

Call Commands

* Check the following before using call commands:

1. Voice commands related to phone calls can be used after connecting a Bluetooth device.
2. To call a person, for example “Call <John Smith>” whose name is listed in Contacts, you must first download the Contacts list. For details on downloading contacts, see “Part 3. Bluetooth > Chapter 3. Bluetooth Phone > 3-10 Contacts”.
3. After downloading the Bluetooth contacts, it will take some time to convert the Contacts into voice data during which time you cannot make a call by name yet. The time it takes to convert voice data may vary depending on the number of Contacts downloaded on the phone.

Command		Operation
●	Call	Displays downloaded Contacts, after this you can make a call by saying the name.
●	Call <Name>	You can directly call a person by <Name> in the downloaded Contacts.
●	Call <Name> on Mobile	You can call a person <name> directly to the number that is saved as “Mobile” in the downloaded Contacts. e.g.) Call “John Smith” on Mobile
●	Call <Name> at Work	You can call a person <name> directly to the number that is saved as “Work” in the downloaded Contacts. e.g.) Call “John Smith” at Work
●	Call <Name> at Home	You can call a person <name> directly to the number that is saved as “Home” in the downloaded Contacts. e.g.) Call “John Smith” at Home
●	Call <Name> on Other	You can call a person <name> directly to the number that is saved as “Other” than “Mobile, Home, or Work” in the downloaded Contacts. e.g.) Call “John Smith” on Other
●	Dial Number	Displays a screen where you can say a phone number to dial.
●	Dial <Phone #>	You can directly say the number to call. e.g.) Dial 111 555 1234

Command		Operation
●	Send Message	• You can send a text message to one of your mobile phone's contacts. Say a contact's name and then enter the message content by following the guidance. • This command is available only if Genesis Connected Services is activated.
●	Send Message to <Name>	• You can send a text message to that specific contact. Enter the message content by following the guidance. • This command is available only if Genesis Connected Services is activated.
●	Send Message to <Name> <Message>	• You can send a text message to that contact more directly. • This command is available only if Genesis Connected Services is activated.
●	Change Bluetooth Device	You can switch your Bluetooth connection to another paired device.

Navigation Commands

* Check the following before you use navigation commands:

1. Search for and find addresses located in the state or province your car is currently in.
   If you want to search in another state, say the name of state/province and then look it up.
   Find Address is classified by states/provinces to provide you with faster service.
2. Some commands such as "Cancel Route" are available only when the destination is fixed.

Information

- This system has the capability to use the telematics units network connection for voice recognition to provide and execute Destination entry for POIs and Addresses.
- To use the network enhanced location entry feature, an active Subscription to Genesis Connected Service is required. (For more details, see Section 9-9 Voice Recognition Settings)

Command		Operation
●	Find <POI or Address>	• You can search for a designated POI name or address via the network service. e.g.) Find “Starbucks”, Find “Starbucks” in Seattle • If ‘Use Network’ is selected in the Voice recognition menu, a Genesis Connected Services subscription is required to use the POI search feature. • If ‘Use Network’ is not checked the Navigation system will use the on-board map database on the SD MAP Card.
●	Find Address in <State>	• Finds the address in <State> and sets it as the destination. e.g.) Find Address in California • To find an address, you should say “House Number → Street → City” e.g.) 300 (Three Zero Zero) Main Street, Almond

Information

- Should promote the server based system better, by informing the user there is improved speech recognition, larger database content.

Command		Operation
●	Find <POI>	Immediately finds <POI>. For detail of <POI>, see “Find <POI>” List. e.g.) Find “Banks”
●	Frequently Visited Points	You can select a location from the list of your frequently visited points. Say the number of the location you want.
●	Address Book	Access the address book screen.
●	Previous Points	Displays a list combining Previous Destinations, Frequently Visited Points, and Previous Starting Points all together. You can then set a destination by saying the list number.
●	Previous Destinations	Displays a list of recent destinations that you can return to by saying the number in the list.
●	Previous Starting Points	Displays a list of recent starting points that you can return to by saying the number in the list.
●	Traffic Information	Moves to the Traffic Information menu screen.
●	Go Home	Set the destination to your home. Your home must first be set in the Navigation system.

Command		Operation
●	Go to Work	Set the destination to your work/office. Your work/office must first be set in the Navigation system.
●	Change Home	You can change the location saved as your home.
●	Change Work	You can change the location saved as your work.
●	Pause Route	Pause the navigation guidance.
●	Resume Route	Resume the navigation guidance.
●	Turn Guidance On	Turns on the voice guidance system.
●	Turn Guidance Off	Turns off the voice guidance system.
●	Zoom In	Zooms in on the navigation map.
●	Zoom Out	Zooms out from the navigation map.
●	Cancel Route	Cancels the route to the fixed destination and exits guidance.

Command		Operation
●	Destination Information	Tells you the remaining distance and time to your destination.
●	Route Options	Moves to the Route Options menu screen.
●	Emergency Services	Displays a list of nearest Police Station, Hospital, Dealership, or Road Assistance. You can then set a destination by saying the list number.
●	Police Stations	Displays a list of the nearest police stations. You can then set a destination by saying the list number.
●	Hospitals	Displays a list of the nearest hospitals. You can then set a destination by saying the list number.
●	Dealerships	Displays a list of the nearest car dealerships. You can then set a destination by saying the list number.
●	Roadside Assistance	Displays a list of the nearest road assistance locations. You can then set a destination by saying the list number.
●	Show Route	Displays a map overview of the entire route to your destination.

Radio Commands

	Command	Operation
●	FM <87.5 to 107.9>	Tunes to FM <Frequency> according to what you say. e.g.) FM 87.5: FM eighty seven point five
●	SiriusXM <0 to 999>	Tunes to SiriusXM™ Channel <Channel Number> according to what you say. e.g.) SiriusXM 23: SiriusXM Twenty three
●	AM <530 to 1710>	Tunes to AM <Frequency> according to what you say. e.g.) AM 530: AM Five thirty

Other Commands List (Commands used in List/Help)

	Command	Operation
●	Help	Moves to the voice recognition help screen. All available commands can then be identified and used.
○	Line 1 to 4 (One to Four)	When you cannot select a certain name, you can select it using numbers. Simple numbers can be recognized, such as “One” or “Two”.
○	Yes/No	When voice recognition is activated, this command is used when an answer is requested for a confirmation question.
○	Previous/Next	When four or more searched items are listed, you can move to the previous or next page using a voice command.
○	Manual Input	When Dial entry results are displayed, this command is used to search manually, rather than to search with a voice command. Voice recognition stops after this command is used.
○	Go Back	Moves to the previous screen.
●	Exit	Ends the voice recognition.

“Find <POI>” List

Navigation location names can be changed after an update.

1. Restaurants

Restaurants
Fast Food Restaurants
Arby's
Boston Market
BURGER KING
Carl's Jr
Chick-fil-A
Chipotle
Church's Chicken
Dairy Queen
Firehouse Subs
Fleming's
Hardee's
In-N-Out Burger
IHOP
Jack in the Box
Jimmy John's
KFC
Little Caesars
Long John Silver's
McAlister's Deli
McDonald's
Panda Express
Panera Bread
Popeyes
Quiznos Sub
Schlotzsky's
SONIC
SUBWAY
Taco Bell
Taco John's
Waffle House
Wendy's
White Castle
American Restaurants
Applebee's
Bahama Breeze
Boston's Restaurant & Sports Bar
Cheeseburger in Paradise
Chili's Grill & Bar
Cool River
Denny's
Frisch's Big Boy
Good Eats
III Forks
Lee Roy Selmon's
Lone Star Steakhouse & Saloon
Longhorn Steakhouse
Luckys Cafe
Outback Steakhouse
Ponderosa
Publix
Seasons 52
Sheetz
Silver Fox
Texas Roadhouse
TGI Friday's
The Capital Grille
French Restaurants
Italian Restaurants
Bonefish Grill
Carrabba's Italian Grill
Chuck E Cheese's
Domino's
Olive Garden
Papa John's
Papa Murphy's
Pizza 73
Pizza Hut
pizza pizza
Continental Restaurants
Mexican Restaurants
Cantina Laredo
Chevys
El Chico
Japanese Restaurants
Chinese Restaurants
PF Chang's China Bistro
Korean Restaurants
Vegetarian Restaurants
Seafood Restaurants
Red Lobster
Latin American Restaurants

2. Automotive

Restaurants
Asian Restaurants
African Restaurants
Coffee Shops
Starbucks
Dunkin' Donuts
Tim Hortons
Other Restaurants
Auntie Anne's
Baskin-Robbins
Haagen-Dazs
Hooters
Roy's
TCBY
VAN DER VALK

Automotive
Hyundai Dealerships
Gas Stations
76
ampm
ARCO
BP
Canadian Tire
Casey's General Store
Cenex
Chevron
CITGO
Conoco
Esso
Exxon
Fleetfuels
GetGo
Giant Gasoline
GTO
Gulf
Husky
Ingles Gas Express
Marathon
Martin's Gasoline
Meijer
Mobil
Murphy Express
Murphy USA
Petro Stopping Centers
PETRO-CANADA
Phillips 66
Pioneer
QuikTrip
Rutter's
Sheetz
Shell
Sinclair
Speedway
Sunoco
Sunoco Canada
TEXACO
TravelCenters of America
Ultramar
Valero
Wawa
Parking

Auto Services
AAA
Advance Auto Parts
America's Tire
AutoZone
BOSCH Car Service
Certigard
Discount Tire
Firestone
GOODYEAR
Kal Tire
Midas
Napa
O'Reilly Auto Parts
Sears Auto Center
Road Assistance
Automobile Dealerships
Auto Parts
Car Washes
Motorcycle Dealerships

3. Travel

Travel
Airports
Hotels
Americas Best Value Inn
AmericInn
Andaz
Ascend Collection
Baymont Inn & Suites
Best Western
Cambria Suites
Canadas Best Value Inn
Candlewood Suites
Clarion Hotel
Comfort INN
Comfort Suites
CONRAD
Country Inn & Suites by Carlson
COURTYARD by Marriott
Crowne Plaza
Days Inn
DELTA
Doubletree
Econo Lodge
Embassy Suites
Grand Residences by Marriott
Hampton Inn
Hampton Inn & Suites
Hawthorn Suites
Hilton
Hilton Garden Inn
Hilton Grand Vacations
Holiday Inn
Holiday Inn Express
Homewood Suites
Hotel Indigo
Howard Johnson
Hyatt Place
Hyatt
Hyatt Summerfield Suites
Intercontinental
JW Marriott
LA QUINTA INN
Lexington
Mainstay Suites
Marriott
Marriott VACATION CLUB
Microtel Inns & Suites
Motel 6
NOVOTEL
Omni Hotels
Park Inn
Park Plaza
QUALITY INN
Radisson
Radisson SAS
RAMADA
Red Roof Inn
Regent Hotels & Resorts
Renaissance
Residence Inn
Ritz-Carlton Club
Rodeway Inn
Sheraton
Sleep Inn
SOFITEL
Staybridge Suites
Studio 6
Suburban Extended Stay
Super 8
Thriftlodge Canada
Travelodge
Travelodge Canada
VAN DER VALK
WALDORF ASTORIA COLLECTION
Wingate by Wyndham
Wyndham
Rest Areas
Tourist Information
Tourist Attractions
Travel Agents
City Centers
Rental Car Agencies
Alamo
AVIS
Budget
Dollar Rent A Car
Enterprise
Hertz
National
Thrifty
Campgrounds

4. Shopping

Travel
Ferry Terminals
Bus Stations
Local Transit
Train Stations

Shopping
Department Stores
Canadian Tire
Dollar General
Dollar Tree
Family Dollar
JCPenney
Kmart
Kohl's
Nordstrom
Sears
Sears Hometown Store
Target
T.J. Maxx
Walmart
Convenience Stores
7-Eleven
ampm
BP
Circle K
Fleetfuels
GetGo
GTO
Kangaroo Express
Murphy Express
Murphy USA
Petro Stopping Centers
QuikTrip
Rutter's
Sunoco Canada
TravelCenters of America
Wawa
Shopping Centers
Office Depot
Grocery Stores
Giant Eagle
Giant Food Stores
IGA
Ingles Markets
Food Lion
Kroger
Martin's Food Markets
Meijer
Publix
Sav-Mor Foods
Save-A-Lot
SuperValu
Music Stores
Bookstores
Barnes & Noble
Electronics Stores
AT&T
Best Buy
Future Shop
GameStop
Radioshack
Sprint
Staples
T-Mobile
OfficeMax
US Cellular
Verizon
Gift Shops
Sporting Goods Stores
Dick's Sporting Goods
Sports Authority
Home Specialty Stores
ABC Fine Wine & Spirits
Ace Hardware

Shopping
Claire's
Costco
Home Depot
Lowe's
Merle Norman
PETCO
PETSMART
Sally Beauty Supply
SHERWIN-WILLIAMS
True Value
Clothing Shops
Mark's
Shoe Stores
Pharmacies
CVS/pharmacy
Giant Drugstore
Ingles Pharmacy
Kmart Pharmacy
Kroger Pharmacy
Martin's Drugstore
Meijer Pharmacy
Rite Aid
Shoppers Drug Mart
Target Pharmacy
Walgreens
General Merchandise

5. Recreation

Recreation
Amusement Parks
Museums
Cinemas
Golf Courses
Sports Complexes
Sports Activities
Wineries
Video & Game Rental
Ski Resorts
Recreation Areas
Other Recreation Areas

6. Financial Services

Financial Services
Banks
Bank of America
BB&T
Chase
Citibank
Citizens Bank
Fifth Third Bank
Key Bank
PNC Bank
RBC Bank
Regions
SunTrust
TD Bank
TD Canada Trust
US Bank
Wells Fargo
ATMs
Check Cashing Services
Money Transfer

7. Community

Community
Police Stations
Post Offices
Libraries
Schools
Fire Departments
Churches
Synagogues
Convention Centers
City Halls
Civic Centers
Court Houses
Government Offices
Waste & Sanitary Services
Utilities
Business Facilities

8. Services

Services
Hospitals
Medical Services
Physicians
Tax Services
Attorneys
Funeral Homes
Hair & Beauty Services
Cleaning & Laundry Services
Social Services
Communication
Dentists
Photography Services
Tailors & Alterations
Movers
Nursing Home
Optical Services
Personal Services
Repair Service
Veterinary Hospital

Siri Eyes Free

How to start Siri

If you want to use Siri, you have to connect your iOS device to the Multimedia system through Bluetooth.

(Please check whether your iOS device supports Siri and turning Siri On)

Then you can use Siri while pressing and holding key on the steering wheel control.

How to use Siri

When you access the Siri screen while pressing and holding key on the steering wheel control, you can select the Speak button and then you can speak what you want. Note that the Multimedia system only supports “Phone” related functions. Other functions will be performed in your iOS device. If you press voice key quickly, Siri would re-start. If you hold down voice key, Siri would be terminated and the screen would go back to the previous screen. Eyes-Free mode would be activated automatically while you are driving. When shifting gears into P or putting the Parking brake on, Eyes-Free mode would be deactivated automatically.



Information

- Functions and feedbacks from voice commands via Siri are executed in the iOS device. If the iOS version is changed, the functions and response may be different according to the iOS device and the latest version.

MEMO

part.7 Data Services

HD Radio™ Data
SiriusXM™ Data

HD Radio™ Data

About HD Radio™ Data Services

The HD Radio™ Data Service provides users with information such as Weather, Doppler Radar and Traffic by using HD Radio™ technology.

Accessing HD Radio™ Data

Select the Data Services icon after selecting All Menus to enter Data Services Mode.



HD Radio Weather Information Mode

At the “Data Services” screen, select the HD Radio Weather icon to enter the Weather Information mode.

Weather Forecast


This service provides current weather information and weather forecasts for the next five days in your city.



Other City Option

This service provides access to weather information from other cities.

To change the city, select the Other City button and select the desired city. From this screen, there is also an option to change the state by selecting the Change State button.

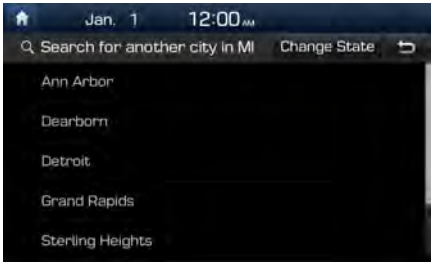


HD Radio™ Doppler Radar

At the “Data Services” screen, select the HD Radio Doppler Rader icon to enter the Doppler Radar mode.

Doppler Radar

This service provides Doppler Radar views of the current *HD Radio™ coverage market. This screen will change automatically based on the *HD Radio™ coverage market.

* The HD Radio™ coverage market is the area with the strongest signal at that time.

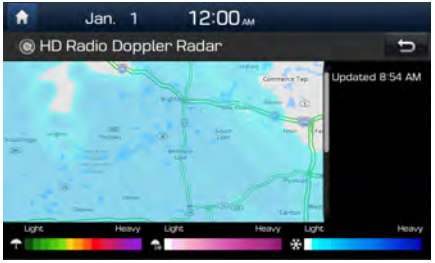

SiriusXM™ Data

About SiriusXM™ Data Service

The SiriusXM™ Data Service is a paid membership satellite radio service that provides users with information such as Weather, Fuel Prices, Stocks, Sports and Movies.

Accessing SiriusXM™ Data

Select the Data Services icon after selecting All Menus to enter the Data Services mode.



SiriusXM™ Weather Announcement

At the “Data Services” screen, select the SiriusXM Weather icon to enter the Weather Announcement mode.

Weather Forecast


This service provides current weather information and weather forecasts for five days in your region. To change the region, select the Other City button and select the desired region.





Warnings and Advisories


This service provides weather warnings and advisories, such as tornado, storm, flood, etc.

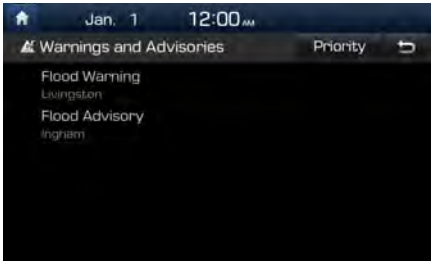



SiriusXM™ Fuel Price Information

At the “Data Services” screen, select the SiriusXM Fuel Prices icon to enter the Fuel Prices Information mode.

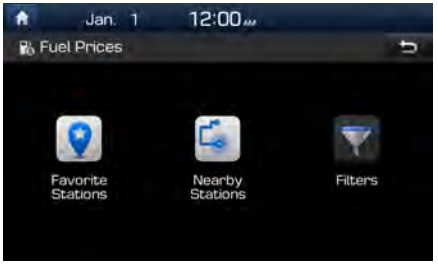


Search for Nearby Stations, and Register Key Locations as Favorite Stations.

Search for nearby stations with the “Nearby Stations” menu.

It shows station locations, starting from the nearest one, and select “Nearest” menu on the top right side to further sort them by price or brand name.




Select the ★ button to the right of the list to register key locations as a Favorite Station so that you can go there again with the “Favorite Stations” menu.

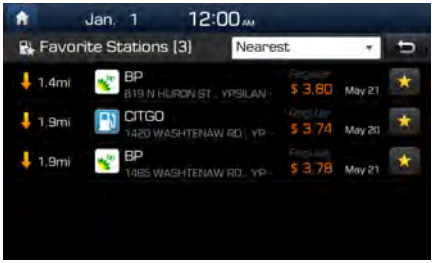


My Fuel Type Settings

With the “Filters” menu, you can select fuel types and favorite brands.

When searching for Nearby Stations, the results will reflect selected fuel types and brand information.

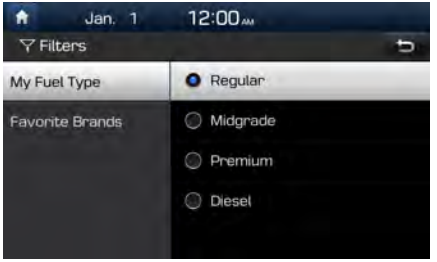

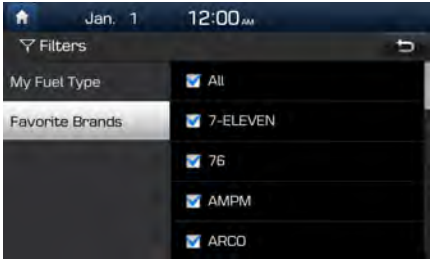

SiriusXM™ Stock Information

In the “Data Services” screen, select the SiriusXM Stocks icon to enter the Stocks mode.

Stocks is a feature that shows the current value and change of stocks.
For symbols which you are interested in, select the icon to save the symbol as a part of the “Saved” symbols which can be viewed from the “My Favorites” button on the Stocks Main screen.


My Favorites

My Favorites shows a list of stocks added by the user. When entering the Stocks menu for the first time, a screen is displayed for you to add your favorite stock information. Select the Add button to move to the stock search screen.



Stock Search

Use the Stock Search menu to search for specific stocks.
Select the ★ button after searching for your favorite stocks to save them in “My Favorites”.

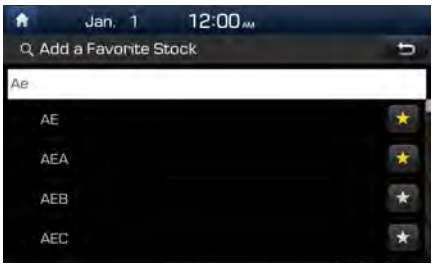

In the My Favorites screen, you can find the selected stock information that you registered.



SiriusXM™ Sports Information

Select the SiriusXM Sports icon to enter the Sports mode.

This service provides real-time updated information on scores and schedules for major sports, such as NFL, NBA, NCAA football, NCAA basketball, NHL, MLB, NASCAR and more.





My Teams

You can save teams which you are interested in as part of My teams to easily view related scores and schedules.


Select the My Teams menu and then select the Add button to search for and register your favorite teams.

Search for your favorite teams and select the ★ button on the right to add it to the "My Teams" list.

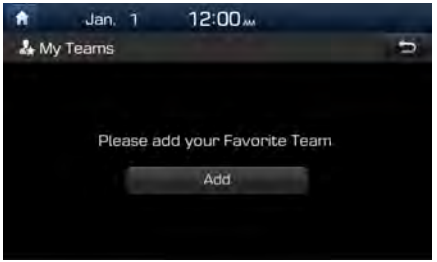


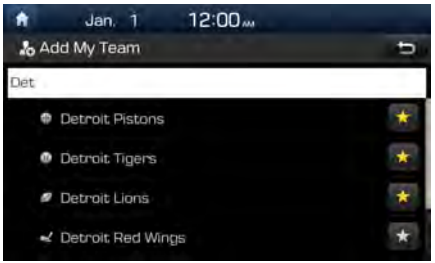


You can always check the list of teams that you added in the "My Teams" menu. Select the ★ button on the right side of the team name to delete the team from "My Teams" or select the Add button to add other teams.

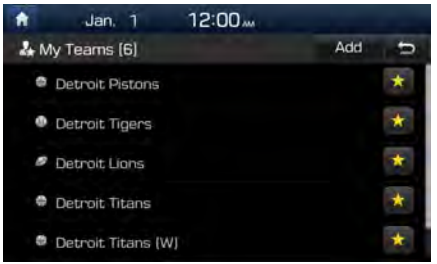

Select the team name to check daily results and recent schedules for that team.

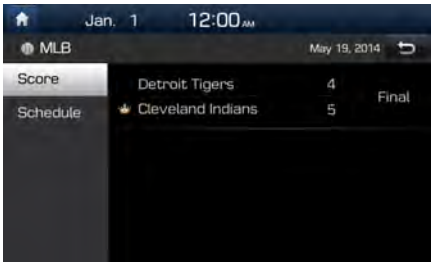

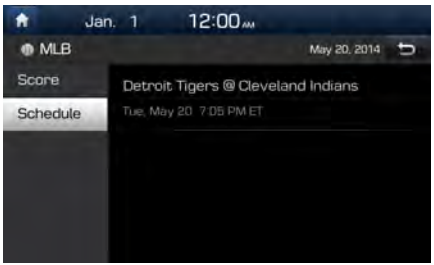

SiriusXM™ Movie Information

Select the SiriusXM Movies icon to enter the Movie mode.


You can check recent movies and nearby theaters, and also register your favorite theater locations.




Search for Nearby Theaters, and Register Any Key Locations as Favorite Theaters.


In the “Nearby Theaters” menu, you can search for any nearby theaters.

It shows theaters, starting from the nearest one, and selecting the “Nearest” menu at the top right side will sort them by name.

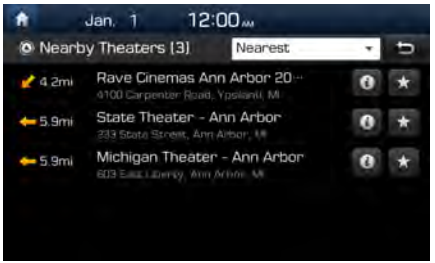

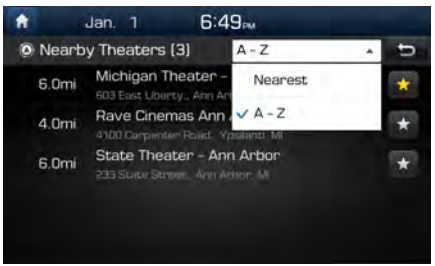

Select the ★ button to the right of the list to register your favorite theater so that you can always check it again using the “Favorite Theaters” menu and selecting the ⓘ button to view the current movie information for that theater.

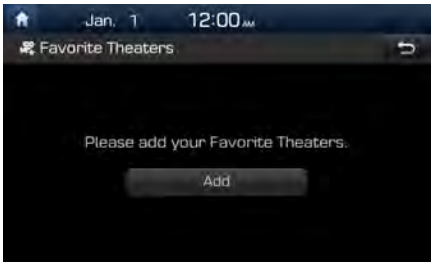



In the “Top Movies” menu, you can check for any movies that are currently popular. Select the ⓘ button to the right of a movie title to view the plot summary and any other detailed information.




part.8 Other Features


Climate
Camera
Using Voice Memo

Climate

Press the CLIMATE key for the climate system to see status information in the full screen display.
When multimedia is in use, the climate system information will be displayed over the top when you control the temperature (TEMP) or turn on the air conditioning (A/C).

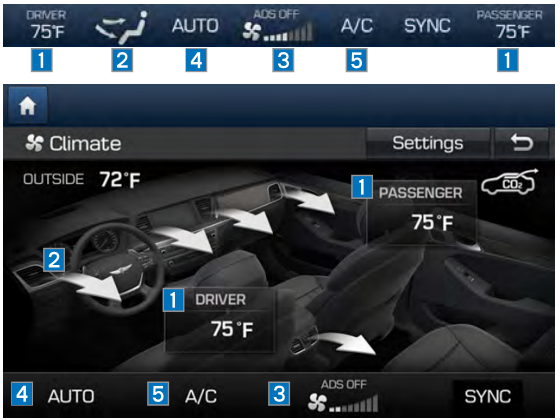

Name	Description
1 Set the temperature of the driver's seat and passenger seats	Displays the configured temperature settings for the driver's seat and the passenger seats. Cooling or heating will continue until the temperature matches the configured temperature settings. i The interior temperature is isplayed in units of 1 °F.
2 Air direction	Displays the configured air direction settings.
3 Air volume	Displays the configured air volume settings.
4 Cooling/ heating control status (AUTO)	Displayed when the AUTO key is pressed and cooling/heating operates automatically according to the configured temperature settings. i AUTO will be turned off when you try to do the following with AUTO on: - Control the air volume - Control the air direction - Turn the air conditioning (A/C) on/off - Turn on the moisture removal function for the windscreen
5 Air conditioning control status	Displayed when the A/C key is pressed and the air conditioning starts cooling/heating.

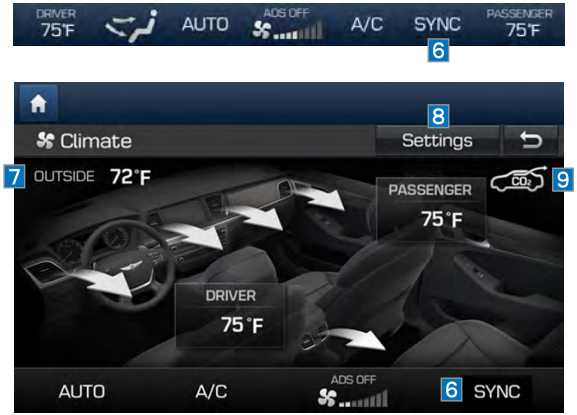

Name	Description
6 Simultaneous temperature settings for the driver's seat and the passenger seats (SYNC)	Displayed when the SYNC key is pressed and the temperatures of the driver's seat and the passenger seats can be configured at the same time.
7 Outside Temperature	Displays the current temperature outside the vehicle.
8 Settings	Goes to the Climate Settings screen.Smart Ventilation, Auto-Defog System and Rear Climate Control can be turned on and off.
9 Alert for excessive amount of internal CO_2	Displayed when a high level of internal CO_2 is detected as this could cause a feeling of driver fatigue. Ventilate the internal air.

Camera

WARNING

When backing up, make sure to follow the guidelines below:

- Before entering your vehicle, always check the area behind your vehicle.
- Do not solely rely on the rear view camera when backing up. Always ensure that it is safe to back up by checking behind you and looking in the rearview mirrors.
- Always back up slowly and stop immediately if you suspect that a person, especially a child, might be behind you.

CAUTION

- The distance shown in the rear view screen may differ from the actual distance. For safety, be sure to visually check the rear, left, and right sides of your vehicle.
- The color of the parking guidelines displayed in the picture may differ from the actual screen.
- When booted up, blinking may occur when you switch to a UI screen.

NOTICE

- The rear view screen remains active while you are backing up. When you move the transmission shift lever to any position other than the "R" (Reverse) position after backing up, the rear view screen will be deactivated and the system will display the previous screen automatically.
- As you steer your vehicle, the parking guides change accordingly to indicate your vehicle's path.



- Depending on vehicle models, the steering-interactive parking guides may not be supported.
- If an object comes too close to your vehicle as you are parking the vehicle, a warning beep will sound. To prevent an accident that might result if you do not hear the beep, you can set the system to decrease the volume level of any media playing automatically when you are parking the vehicle. On the Home screen, touch All Menus ▶ Setup ▶ Sound ▶ Priority ▶ Proximity Warning.

Steering-linked camera

When you put the transmission shift lever in the "R" (Reverse) position while the engine is running, the system screen will automatically display what is behind you.



Driving direction lines (yellow) 1 2
These lines show the directions of the vehicle according to the steering angle.


Neutral direction lines (blue) 3
These lines indicate your vehicle's expected path with the steering wheel in the neutral position. It can help you determine whether the vehicle is in the correct position in a parking space and prevent you from parking too close to the next vehicle.

Crash warning lines (red) 4
These lines are to prevent a collision.

Using Voice Memo

You can record voice memos using the microphone installed in your vehicle and play voice memos on your system.

On the Home screen, touch All Menus ▶ Voice Memo.

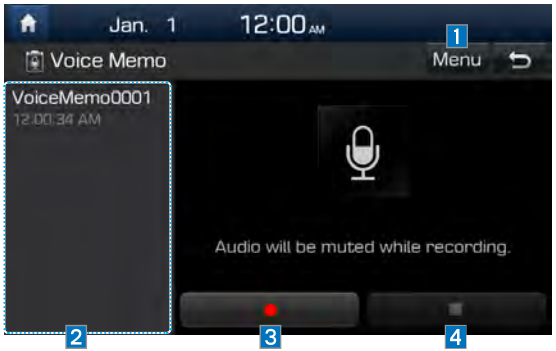

Features	Description
1 Menu	• Delete: Delete voice memos. • Save to USB Device: Save voice memos to a USB storage device. *i* This option is available only for USB storage devices formatted in FAT16/32 formats. • Storage Info: View information on the storage space used for your voice memos.
2 List	List of your voice memos. Touch a voice memo to play it.
3 Record/Pause button	• Touch ● to start recording. • Touch ❚❚ to pause recording.
4 Stop button	• Touch ■ to stop recording. The recorded memo is added to the voice memos list on the left of the screen. *i* You can also press the ☎ button on the steering wheel.

i Information

- Voice memo recording mutes the function in operation or pauses media playback.
- If you make or answer a call while recording a voice memo, the recording pauses. If an emergency call is connected, the recording will stop and the recorded voice memo will be saved automatically.

part.9 Setup

Navigation Settings
Sound Settings
Display Settings
Bluetooth Settings
Connected Settings
Phone Projection Settings
Voice Recognition Settings
Date/Time Settings
Language Settings
Keyboard Settings
Screen Saver Settings
Advanced Settings
System Info

Setup


Setup is the screen to control Multimedia system settings.
To enter the screen, press the SETUP key or the Setup icon in All Menus.

Navigation Settings

For more details, refer to part 5. Navigation Settings.

Sound Settings

Adjusts the sound effects for the whole system.

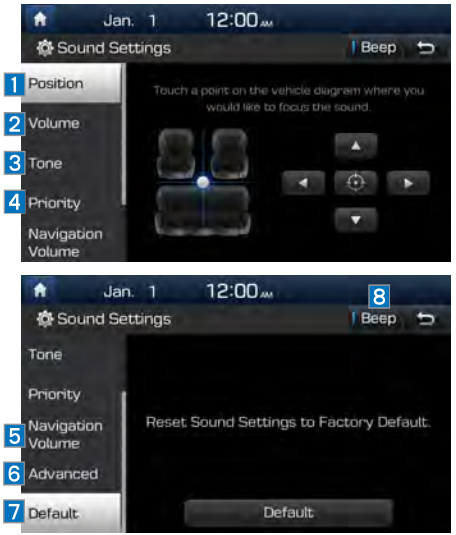

Features	Description
1 Position	Select the Up/Down/Left/Right button to control sound positioning. Select ⊕ to concentrate the sound on the center of vehicle.
2 Volume	Adjust the volume levels for various system features, including phone projection.
3 Tone	Drag the slide bar to control Bass/Midrange/Treble settings. Select Center to initialize the settings.
4 Priority	Sets the volume ratio when parking the vehicle, turning on the vehicle's ignition, etc.
5 Navigation Volume	Sets the method of navigation guidance volume adjustment.


Features	Description
6 Advanced	Select additional audio options such as “Speed Dependent Volume Control” that automatically controls Audio volume according to vehicle speed.
7 Default	Resets the sound to factory default settings.
8 Beep	Select to activate a beep when selecting buttons.

Information

- Advanced sound settings may differ according to selected AMP option.
- The seat shape may differ according to vehicle model.

Display Settings

Adjusts the level of illumination for the entire system.

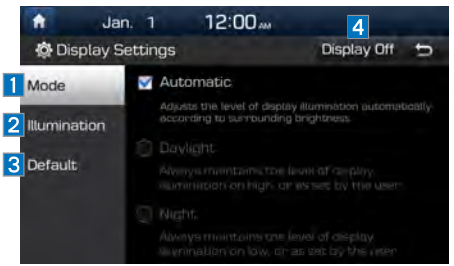

Features	Description
1 Mode	Select any of LCD illumination change modes: Automatic (changes the level automatically), Daylight, and Night.
2 Illumination	Set the levels of illumination for day and night. Select Default to initialize the settings.
3 Default	Resets the display to factory default settings.
4 Display Off	Provides the Display Off (touch activation) function.

Bluetooth Settings

Changes Bluetooth phone settings.
Press the SETUP key ▶ Select Bluetooth.





Bluetooth Connection

Press the SETUP key ▶ Select Bluetooth ▶ Bluetooth Connection.



Features	Description
1 Paired Device List	Displays the paired Bluetooth device list. When selecting from the list, the device is connected or disconnected.
2 Bluetooth Audio Connection Status	An icon appears when you make a Bluetooth Audio connection.
3 Bluetooth Hands-Free Connection Status	An icon appears when you make a Bluetooth Hands-free connection.
4 Add New	Register a new Bluetooth device.
5 Delete Devices	Select and delete a paired device.
6 Help	Switches to the Bluetooth Connection Help screen.

Information

- Some options will be displayed only when a mobile phone is connected to the system.
- Up to 5 Bluetooth devices can be paired.
- Only one Bluetooth device can be connected at a time.
- During a Bluetooth device connection, another device cannot be paired.
- When you delete a paired device, the Call History and Contacts stored in the head unit are also deleted.
- Bluetooth Hands-free and Bluetooth Audio functions are supported.
- Hands-free and audio-supported devices, such as a Bluetooth smartphone or audio, will function normally.
- When a Bluetooth device is connected, if the Bluetooth connection is unexpectedly disconnected, due to being out of communication range, the device powering off, or a Bluetooth communication error, the Bluetooth device automatically searches for and connects to nearby Bluetooth devices.
- If the system is not stable, due to a vehicle-Bluetooth device communication error, restore the Default Factory Settings.

Auto Connection Priority

Press the SETUP key ▶ Select Bluetooth ▶ Auto Connection Priority.




When the engine is running, the selected Bluetooth device is automatically connected. If you fail to connect the selected device, the previously-connected device is automatically connected, and if it also fails, then it tries to connect all paired devices sequentially.

Depending on auto connection priority, connection to a device may take time.

Message Settings

Press the SETUP key ▶ Select Bluetooth ▶ Message Settings.

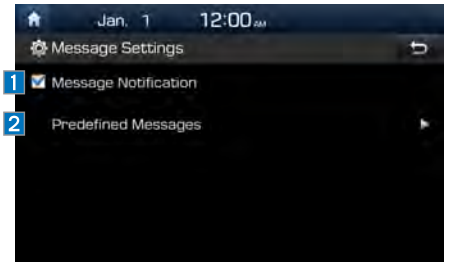

Features	Description
1 Message Notification	Set to receive message notifications.
2 Predefined Messages	Edit message templates for replies.

Bluetooth Voice Prompts

Press the SETUP key ▶ Select Bluetooth ▶ Bluetooth Voice Prompts.

Set whether to hear voice prompts for events related to Bluetooth connections.

Privacy Mode

Press the SETUP key ▶ Select Bluetooth ▶ Privacy Mode.

Activate the privacy mode to protect your personal information. In the privacy mode, personal data will not be displayed.

Bluetooth System Info

Press the SETUP key ▶ Select Bluetooth ▶ Bluetooth System Info.

View or edit your system's Bluetooth information.

Default Factory Settings

Press the SETUP key ▶ Select Bluetooth ▶ Default Factory Settings.

Delete all paired Bluetooth devices and reset your Bluetooth settings to default values. All data related to Bluetooth devices will also be deleted.

Connected Settings

Service Activation


Press the SETUP key ▶ Select Connected Services ▶ Service Activation.



Activation may take up to five minutes.
Do not turn the engine off while activation is in progress.
If activation fails, contact the Genesis Connected Services Center at 1-844-340-9741.
During service activation, the keys in the head unit do not function.

Modem Information

Press the SETUP key ▶ Select Connected Services ▶ Modem Information

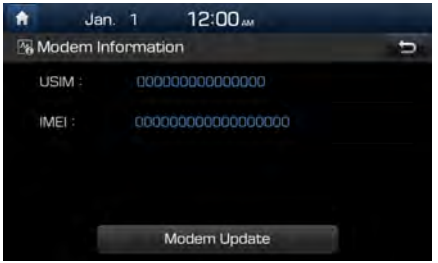


Phone Projection Settings

For more details, refer to the Phone projection guide.

Voice Recognition Settings


Configure how to make a call with Voice Recognition Guidance and Voice Recognition.

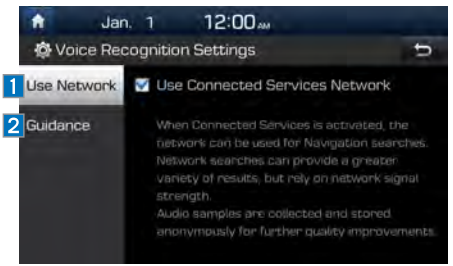

Features	Description
1 Use Network	If you are subscribed to the Connected Services, set to use the server-based voice recognition.
2 Guidance	Set to hear brief guidance or detailed guidance.

Date/Time Settings


Configure the settings for time and date. Using the arrow buttons, you can change the values. Date/Time settings do not automatically change when crossing into different time zones. The time must be changed manually on this screen.

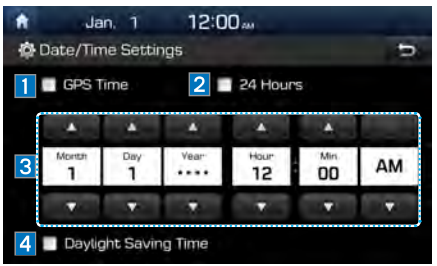

Features	Description
1 GPS Time	The time display is set in GPS Time.
2 24 Hours	The time display is set in 24-hour format.
3 Direct entry	If you tap any value, you can directly enter the number in the following screen.
4 Daylight Saving Time	The daylight saving time (DST) is applied.

Language Settings

You can configure the displayed system language.

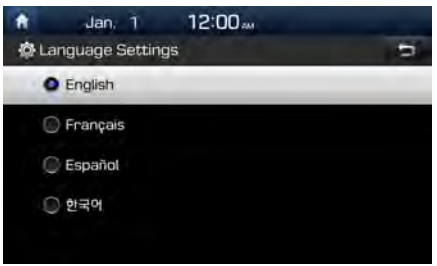

When the language is changed, the system language is automatically changed.

Information

- This setting will not affect user data, such as MP3 file names.
- Depending on the system language, converting the message to voice may not be supported when using Bluetooth.
- Depending on the system language, voice recognition may not be supported.

Keyboard Settings

You can configure the keyboard layout for each language.



Information

- Configured keyboard layouts are applied to all input modes.

Screen Saver Settings


You can select any of the following screen formats to be displayed when the screen or power is turned off (press and hold the Power button).

- Digital clock and date
- Analog clock and date
- None



Advanced Settings

Sets alerts per function if desired by the user.

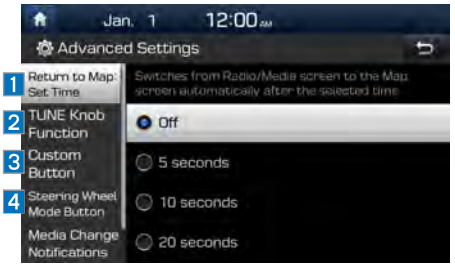



Features	Description
1 Return to Map: Set Time	Sets the time after which the screen will return to the map screen from the broadcast/music playback screen.
2 TUNE Knob Function	When the map is displayed, the TUNE knob will behave as selected.
3 Custom Button	You can choose the feature to be accessed when the ☆ key is pressed.
4 Steering Wheel Mode Button	Sets the media to be played when the steering wheel or rear seat (if provided) MODE button is pressed.
5 Media Change Notifications	Sets whether to display media information at the top of the screen as the next item is played when not on the media screen.
6 My Data	• Import Address Book from USB: Import address book data from a USB storage device. • Export Address Book to USB: Export your address book data to a USB storage device.

System Info

System version information and update details are available.



Features	Description
1 SW Info	Select the Update button to update the system.
2 Storage	View storage information of your system's memory.
3 Default	When Default is selected, the settings are changed to factory defaults.

System Update

At the System Info screen, insert the updated memory (USB or SD card) with the latest file downloaded, and then select the Update button to begin updating. The system will then reboot automatically.

Information

- This product needs supplemental software updates and additional functions, which collectively may take some time to complete, depending on the amount of data.

NOTICE

- Do not turn off the system or remove the storage device while the update is in progress. If the power supply is cut off or the storage device is removed from the system, it may damage the data or cause a system malfunction.
- When Default is selected, it may delete all of the data and settings so be cautious of your action.

part.10 Appendix

Product Specification
Troubleshooting
FAQ

Appendix

Product Specification

TFT-LCD

Screen Size	8 inch (176.4 x 99.36 mm)
Resolution	384,000 pixels (Resolution: 800 x 480)
Operating Method	TFT(Thin Film Transistor) Active Matrix
Viewing Angle	Left/Right, Top/Bottom: ALL 89°
Internal Lighting	LED

Radio

Channels	A2	FM: 87.5 MHz to 107.9 MHz(Step: 200 kHz)
		AM: 530 kHz to 1710 kHz(Step: 10 kHz)
	A6	FM: 87.5 MHz to 107.9 MHz(Step: 200 kHz)
		AM: 531 kHz to 1701 kHz(Step: 9 kHz)
Sensitivity	FM: Under 10 dBuV / AM: Under 35 dBu EMF	
Distortion Factor	Within 2%	

Common

Power Supply	DC 14.4 V	Operating Power	DC 9 V to DC 16 V
Sleep Current	• Average current within 96 hours of ACC off: 10 mA or less • Average current after 96 hours of ACC off: 1 mA or less		
Operating Temperature	-20 to +70 °C (-4 to +158 °F)	Storage Temperature	-30 to +80 °C (-22 to +176 °F)
Dimensions	277 X 114 X 250 mm		
Current Consumption	2.5 A	Weight	1.546 kg

MODEM RF SPEC

LTE	RX	Frequency	2110 MHz to 2155 MHz(B4), 746 MHz to 756 MHz(B13)
		Sensitivity	-96.3 dBm under@10M(B4), -93.3 dBm under@10M(B13) (Throughput ≥95%)
	TX	Frequency	1710 MHz to 1755 MHz(B4), 777 MHz to 787 MHz(B13)
		Max RF Output Power	Power Class3(B4, B13), 20.3 dBm to 25.7 dBm (conducted)
CDMA	RX	Frequency	869 MHz to 894 MHz(BC0), 1930 MHz to 1990 MHz(BC1)
		Sensitivity	-104 dBm under(FER = 0.5% under)
	TX	Frequency	824 MHz to 849 MHz(BC0), 1850 MHz to 1910 MHz(BC1)
		Max RF Output Power	Power Class3(BC0), Power Class2(BC1), 23.01 dBm to 30 dBm(conducted)

Bluetooth® Wireless Technology

Frequency Range	2400 to 2483.5 MHz	Supported Bluetooth® Specification	3.0
Supported Profile	Handsfree(1.6), A2DP(1.2), AVRCP(1.5), PBAP(1.1)		
Bluetooth Power Class 2	-6 to 4 dBm		
Antenna power	3 mW (maximum)		
Number of Channels	79		

Troubleshooting

1. Errors which occur during the operation or installation of the device may be mistaken as a malfunction of the actual device.
2. If you are having problems with the device, try the suggestions listed below.
3. If the problems persist, contact your dealer.

Problem	Possible Cause
There are small red, blue, or green dots on the screen	• Because the LCD is manufactured with technology requiring high point density, a pixel or lighting deficiency may occur within 0.01% of total pixels
The sound or image is not working	• Has the Switch for the vehicle been turned to [ACC] or [ON]? • Has the SYSTEM been turned OFF?
The screen is being displayed but sound is not working	• Has the volume been set to a low level? • Has the volume been muted?
When the power is turned on, the corners of the screen are dark	• The display appearing somewhat dark after prolonged periods of use is normal with LCD panels. It is not a malfunction • If the screen is very dark, contact your nearest dealer for assistance
Sound is working from only one speaker	• Are the positions of Fader or Balance sound controls adjusted to only one side?
The external device is not working	• Is the external device connected with a standard connector cable?
Upon turning power on, the most recent mode screen is not displayed	Within modes that play files by reading external sources, such as USB, iPod, or Bluetooth® streaming mode, the most recently played mode screen prior to turning off power may not properly load • If the corresponding device is not connected, the mode operated prior to the most recent mode will operate • If the previous mode still cannot be properly played, the mode operated prior to that will operate

Problem	Possible Cause	Countermeasure
The power does not turn on	• The fuse is disconnected	• Replace with a suitable fuse • If the fuse is disconnected again, please contact your point of purchase or dealer
	• Device is not properly connected	• Check to see that the device has been properly connected
The system does not play	• The vehicle battery is low	• Charge the battery. If the problem persists, contact your point of purchase or dealer

Problem	Possible Cause	Countermeasure
The image color/tone quality is low	• The brightness, saturation, hue, and contrast levels are not set properly	• Properly adjust the brightness, saturation, hue, and contrast levels through Display Setup
Sound does not work	• The volume level is set to the lowest level	• Adjust the volume level
	• The connection is not proper	• Check to see that the device has been properly connected
	• The device is currently fast-forwarding, rewinding, scanning, or playing in slow mode	• The sound will not work when the device is fast-forwarding, rewinding, scanning, or playing in slow mode
The sound or image quality is low	• Vibration is occurring from where the conversion switch has been installed	• The sound may be short-circuited and the image distorted if the device vibrates
	• Image color/tone quality is low	• The device will return to normal once vibrations stop

Problem	Possible Cause	Countermeasure
The USB does not work	• USB memory is damaged	• Please use the USB after formatting it.
	• USB memory has been contaminated	• Remove any foreign substances on the contact surface of the USB memory and multimedia terminal
	• A separately purchased USB HUB is being used	• Directly connect the USB memory with the multimedia terminal on the vehicle
	• A USB extension cable is being used	• Directly connect the USB memory with the multimedia terminal on the vehicle
	• A USB which is not a Metal Cover Type USB Memory is being used	• Use standard USB Memory
	• An HDD type, CF, SD Memory is being used	• Use standard USB Memory
	• There are no music files which can be played	• Only MP3, WMA file formats are supported. Please use only the supported music file formats

Problem	Possible Cause	Countermeasure
The iPod is not recognized even though it has been connected	• There are no titles which can be played	• Use iTunes to download and save MP3 files into the iPod
	• The iPod firmware version has not been properly updated	• Use iTunes to update the firmware version and reconnect the iPod with the device
	• The iPod device does not recognize downloads	• Reset the iPod and reconnect with the device
Bluetooth does not work or its limited functions are available	• Bluetooth on your mobile phone is set to OFF	• Set it to ON
	• The Bluetooth connection is not made	• Make the connection active

Information

- While operating the device, if an abnormality occurs that cannot be corrected with the above described measures, press the RESET key to reset the system.
- Press and hold the RESET key (more than 1 second). The device power will turn off and the system will reset.

FAQ

About Pairing Mobile Phones

Q I cannot pair my mobile phone. What is the cause?

A Check to see that the mobile phone supports Bluetooth® function. Verify if Bluetooth on the cell phone is set to OFF. If so, set it to ON. If the cell phone still can't be registered, try again after turning Bluetooth off and on, or delete the device registration on the multimedia system and cell phone and then register the cell phone again.

Q What is the difference between pairing a mobile phone and connecting a mobile phone?

A Pairing occurs through authenticating the head unit and mobile phone. Mobile phones paired to the head unit can be connected and disconnected until the paired mobile phone is deleted from the system. Bluetooth® Handsfree features, such as making/answering calls or managing contacts, are supported only in mobile phones connected with the head unit.

Q What is a Passkey?

A A passkey is the password used to authenticate the connection between the head unit and mobile phone. The passkey only needs to be entered once when pairing the mobile phone for the first time.

The initial passkey is 0000. You can change it with SETUP ▶ Bluetooth ▶ Bluetooth System Info ▶ Passkey menu options.

About Making/Answering Phone Calls

Q How can I answer a call?

A When there is an incoming call, a notification pop-up will become displayed. To answer the incoming call, select the Accept button on the screen or press the key on the steering wheel control.

To reject the call, select the Reject button on the screen or press the key on the steering wheel control.

Q What should I do if I am talking on the Handsfree but want to switch the call to the mobile phone?

A While on a call, press and hold (more than 0.8 seconds) the key on the steering wheel control or select the Use Private button at the bottom of the Phone screen to switch the call to your mobile phone.

About *Bluetooth*® Wireless Technology/ Multimedia System Use Environment

Q What is the range of my wireless connection?

A The wireless connection can be used within 15 yards.

Q How many mobile phones can be paired?

A It is possible to pair up to five mobile phones.

Q Why is call quality sometimes poor?

A Check the reception sensitivity of the mobile phone when call quality becomes worsened. The call quality may deteriorate when the signal strength is low. Call quality may also worsen if metal objects, such as beverage cans, are placed near the mobile phone. Check to see if there are metal objects in the vicinity of the mobile phone. The call sound and quality may differ depending on the type of mobile phone.

Index

A

About *Bluetooth*® Wireless Technology/Multimedia System Use Environment..... 10-8
About HD Radio™ Data Services 7-2
About Making/ Answering Phone Calls 10-8
About Pairing Mobile Phones 10-7
About SiriusXM™ Data Service 7-4
About Transmission and Reception of Radio Waves 4-6
Accept/Reject Call 3-7
Accessing HD Radio™ Data 7-2
Accessing SiriusXM™ Data 7-4
Address 5-15
Address Book 5-20
Adjusting Voice Recognition Volume ... 6-5
Advanced Settings 9-9
Auto Connection Priority 9-5
Auto Crash Notification 4-4
Avoid Street 5-30

B

Basic Features..... 5-2
Battery Warning Message 1-9
Before Playing a USB MP3..... 2-11
Before Use 4-6
Before Using the Bluetooth® Handsfree 3-2
Bluetooth® Audio 2-24
Bluetooth Connection 2-25, 3-4, 9-4
Bluetooth Phone 3-6
Bluetooth Settings 9-3
Bluetooth System Info 9-6
Bluetooth Voice Prompts..... 9-5

C

Call Commands 6-8
Call History 3-9
Camera 8-4
Canceling Route 5-27
CAUTIONS upon Connecting Bluetooth® Phone 3-3
Changing Map View 5-3
Climate..... 8-2
Combining Voice Recognition with On-Screen Commands 6-3
Component Names and Functions ... 1-4
Connected Settings..... 4-9, 9-6
Connecting Bluetooth Devices 3-4
Connecting with the Genesis Connected Services Center 4-7
Contacts 3-10
Coordinates 5-21

D

Date/Time Settings 9-7
Default 5-32
Default Factory Settings 9-6
Deleting Bluetooth Devices..... 3-5
Destination Search 5-14
Dial 3-7
Direct Tune 2-8
Disconnecting Bluetooth Devices 3-5
Display 5-30
Display Route Information 5-29
Display Settings 9-3
Driving Info 4-8

E

Editing Route 5-28
Edit Route 5-6
Emergency 5-20
Ending Voice Recognition 6-3
Extending the Listening Time 6-4

F

FAQ 10-7
Favorite places..... 5-22
Favorites 3-11
“Find <POI>” List 6-13
FM/AM 2-2

G

Gas Stations 5-19
Genesis Connected Services Voice Local Search 4-3
Getting Started with Genesis Connected Services 4-7

H

HD Radio™ 2-5
HD Radio™ Data 7-2
HD Radio™ Doppler Radar 7-3
HD Radio™ Technology 2-4
HD Radio Weather Information Mode 7-2
Head Unit..... 1-4
Help Display..... 6-6
Home Screen 1-10
How to start Siri 6-19
How to use Siri..... 6-19

I

Instructions for Using Voice Recognition 6-7
iPod 2-17, 2-21

K

Keyboard Settings 9-8

L

Language Settings 9-8

M

Map Display 5-6
Map Scale 5-4
Message Settings 9-5
Modem Information 9-6

N

Navigation Commands 6-9
Navigation Settings 5-30, 9-2
Navigation Volume 5-3
Nearby POIs 5-6

O

Online Search 5-17
On-Screen Touch Controls 1-12
Operating Navigation Screen 5-2
Other Commands List (Commands used in List/Help) 6-12

P

Pairing a New Device 3-4
Phone Projection Settings 9-7
Phone Status Icons 3-6
Places 5-3, 5-14
POI Categories 5-18
Precautions for Safe Driving 3-2
Precautions Required for Successful Voice Recognition 6-2
Previous Destinations 5-16
Privacy Mode 9-5
Product Specification 10-2

Q

Quick Menu 5-5

R

Radio Commands 6-12
Rear View Mirror Switch 4-2
Restaurants 5-19
Restrictions on Features for Safety Measures 1-9
Route 5-5, 5-27
Route Guidance 5-25
Route Options 5-27
Route Overview 5-29
Route Setting 5-23

S

Save 5-12
Screen Saver Settings 9-9
Selecting through Channel/ Category List 2-8
Send to Car with Google 4-8
Service Activation 9-6
Settings 5-13
Siri Eyes Free 6-19
SiriusXM™ 2-6
SiriusXM™ Data 7-4
SiriusXM™ Fuel Price Information 7-5
SiriusXM™ Movie Information 7-9
SiriusXM™ Sports Information 7-8
SiriusXM™ Stock Information 7-7
SiriusXM™ Weather Announcement ... 7-4
Skipping Prompt Messages 6-5
SOS 4-4
Sound Settings 9-2
Starting/Ending and Setting Voice Recognition 6-3
Starting Genesis Connected Services Voice Local Search 4-3
Starting the System for the First Time 1-8
Starting Voice Recognition 6-3
Steering-linked camera 8-5
Steering Wheel Controls 1-6
Stolen Vehicle Recovery 4-5
Supported USB music specifications 2-13
System Info 9-10
System Reset 1-8
System Update 9-10

T

Traffic 5-9
Traffic/Guidance 5-31
Troubleshooting 5-33, 10-4
Turning the System On/Off 1-8
Types of Commands 6-8

U

USB 2-11
USB Music 2-14
Using iPod Devices 2-17
Using the Menu During a Phone Call... 3-8
Using Voice Memo 8-6

V

Vehicle Diagnostics 4-9
Vehicle Immobilization 4-5
Vehicle Slowdown 4-5
Viewing a new message 3-11
Viewing Menu 2-8
Viewing messages from the messages list 3-12
Voice Commands 6-8
Voice Recognition Screen Overview ... 6-6
Voice Recognition Settings 9-7

W

Warnings and Cautions 1-2
What is *Bluetooth*® Wireless Technology? 3-2
What Is Genesis Connected Services? 4-6
What is Genesis Connected Services Voice Local Search? 4-3
What Is Telematics? 4-6
What is Voice Recognition? 6-2

Z

Zoom In/Zoom Out 5-4

Important Information

Before using your Multimedia system, read and follow all instructions and safety information provided in this end user manual (“User’s Guide”). Not following precautions found in this User’s Guide can lead to an accident or other serious consequences.

Keep User’s Guide in Vehicle

When kept in the vehicle, the User’s Guide will be a ready reference for you and other users unfamiliar with the Multimedia system. Please make certain that before using the system for the first time, all persons have access to the User’s Guide and read its instructions and safety information carefully.

Warning

Operating certain parts of this system while driving can distract your attention away from the road, and possibly cause an accident or other serious consequences. Do not change system settings or enter data non-verbally (using your hands) while driving. Stop the vehicle in a safe and legal manner before attempting these operations. This is important since while setting up or changing some functions as you may to distract your attention away from the road and remove your hands from the wheel.

General Operation

Voice Command Control

Functions within the Multimedia system may be accomplished using only voice commands. Using voice commands while driving allows you to operate the system without removing your hands from the wheel.

Prolonged Views of Screen

Do not access any function requiring a prolonged view of the screen while you are driving. Pull over in a safe and legal manner before attempting to access a function of the system requiring prolonged attention. Even occasional short scans to the screen may be hazardous if your attention has been diverted away from your driving task at a critical time.

Volume Setting

Do not raise the volume excessively. Keep the volume at a level where you can still hear outside traffic and emergency signals while driving. Driving while unable to hear these sounds could cause an accident.

Navigation Features

Any navigation features included in the system are intended to provide turn by turn instructions to get you to a desired destination. Please make certain all persons using this system carefully read and follow all instructions on safety information.

Distraction Hazard

Some navigation features may require manual (non-verbal) setup. Attempting to perform such set-up or insert data while driving can seriously distract your attention and could cause an accident or other serious consequences. Stop the vehicle in a safe and legal manner before attempting these operations.

Let Your Judgment Prevail

Any navigation features are provided only as an aid. Make your driving decisions based on your observations of local conditions and existing traffic regulations. Any such feature is not a substitute for your personal judgment. Any route suggestions made by this system should never replace any local traffic regulations or your personal judgment or knowledge of safe driving practices.

Route Safety

Do not follow the route suggestions if doing so would result in an unsafe or illegal maneuver, if you would be placed in an unsafe situation, or if you would be directed into an area that you consider unsafe. The driver is ultimately responsible for the safe operation of the vehicle and therefore, must evaluate whether it is safe to follow the suggested directions.

Potential Map Inaccuracy

Maps used by this system may be inaccurate because of changes in roads, traffic controls or driving conditions. Always use good judgment and common sense when following the suggested routes.

Emergency Services

Do not rely on any navigation features included in the system to route you to emergency services. Ask local authorities or an emergency services operator for these locations. Not all emergency services such as police, fire stations, hospitals and clinics are contained in the map database for navigation features.

Use of Speech Recognition Functions

Speech recognition software is inherently a statistical process which is subject to errors. It is your responsibility to monitor any speech recognition functions included in the system and address any errors.

FCC Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Any changes or modifications to this device not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum 20 cm between the radiator and your body. This transmitter must not be collocated or operating in conjunction with any other antenna or transmitter unless authorized to do so by the FCC.

MEMO

MEMO

MEMO

MEMO

MEMO

MEMO

BD7
(영어 | 미국) 표준5

GENESIS G80

QUICK REFERENCE GUIDE

B1MS7-BD001

GENESIS

Thank you for purchasing this multimedia system.

This user's manual explains how to use the GENESIS multimedia system.
Before using the product, read the contents of this user's manual carefully and use this product safely.

- The screens shown in this manual may differ with the actual screens of the product.
- The design and specification of this product may change without prior notification for product improvement.
- When transferring the vehicle to another individual, include this user's manual so that the next driver can continue its use.

Precautions for safe usage

- Driving while distracted can result in a loss of vehicle control, that may lead to an accident, severe personal injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.
- Do not operate the multimedia system while driving.
- Do not disassemble, assemble, or modify the multimedia system.
- Do not watch the screen for prolonged periods of time while driving.
- Set the volume to a level which allows the driver to be aware of external conditions.
- Do not operate the multimedia system for prolonged periods of time with the vehicle ignition in ACC. Such operations may lead to battery discharge.
- Be cautious not to spill water or introduce foreign objects into the device.
- Do not cause severe shock to the device. Direct pressure onto the front side of the monitor may cause damage to the LCD or touch panel.
- In case of product malfunction, please contact your place of purchase or service center.

here

All Map Database cannot be copied without permission.
Important Notice: This is protected by U.S. copyright laws. All rights not expressly granted are reserved.
You may not otherwise reproduce, modify and distribute the content without HYUNDAI MnSoft, Inc's prior written consent.

- When cleaning the touch screen, make sure to turn off the device and use a dry and smooth cloth. Never use tough materials, chemical cloths, or solvents (alcohol, ammonia, benzene, thinners, etc.) as such materials may damage the device panel or cause color and quality deterioration.
- SiriusXM service requires a subscription, sold separately, after 3-month trial included with vehicle purchase. If you decide to continue your SiriusXM service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call Sirius XM at 1-866-635-2349 to cancel. See our Customer Agreement for complete terms at www.siriusxm.com. Programming subject to change. Sirius satellite service is available only to those at least 18 and older in the 48 contiguous USA, D.C., and PR (with coverage limitations). Traffic information not available in all markets. See siriusxm.com/traffic for details. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc.

⚠ WARNING

- Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

GENESIS Brand VEHICLE OWNER PRIVACY POLICY

Your GENESIS Brand vehicle may be equipped with technologies and services that use information collected, generated, recorded or stored by the vehicle. GENESIS Brand has created a Vehicle Owner Privacy Policy to explain how these technologies and services collect use and share this information.

You may read our Vehicle Owner Privacy Policy on the https://www.genesis.com website at:
https://www.genesis.com/us/en/owners-privacy-policy.html
If you would like to receive a hard copy of our Vehicle Owner Privacy Policy, please contact our Customer Connect Center at:

Genesis Customer Care
P.O. Box 20850
Fountain Valley, CA 92728-0850
customercare@genesismotorsusa.com
(844) 340-9741

GENESIS Brand's Customer Connect Center representatives are available Monday through Friday,
between the hours of 5:00 AM and 7:00 PM PST and Saturday and Sunday between 6:30 AM and 3:00 PM PST (English).
For Customer Connect Center assistance in Spanish or Korean, representatives are available Monday through Friday between 6:30 AM and 3:00 PM PST.

Table of Contents

Component Names and Functions..... 3
On-Screen Touch Controls..... 7
FM/AM 8
HD Radio™ Technology..... 10
SiriusXM™ 11
USB Music 14
Bluetooth 16
Voice Recognition..... 23
FAQ..... 39
Data Services..... 42
Navigation 49

Head Unit



	Name	Description
1	PWR/ VOL	• When power is off, press to turn power on. • When power is on, press and hold (over 0.8 seconds) to turn the power off. • When power is on, press quickly (less than 0.8 seconds) to turn Audio off. • Turn left/right to adjust the volume.
2	MAP	Displays the map for the current position.
3	NAVI	Takes you to the menu screen where you can find your destination and set the route.
4	MAP	SD card insert slot.
5	SEEK TRACK	When the key is pressed quickly (less than 0.8 seconds), • FM/AM mode: Plays the previous/next frequency. • SiriusXM™ mode: Changes the channel. • MEDIA mode: Changes the track, file or title. When the key is pressed and held (over 0.8 seconds), • FM/AM mode: Moves quickly through all of the frequencies. The moment that you release the button, the system seeks the next available frequency. • MEDIA mode: Rewinds or fast forwards the track or file (except for Bluetooth Audio).


Component Names and Functions



	Name	Description
6	RADIO	Selects FM/AM/SiriusXM™ mode. • Each time this is pressed, the mode is changed in the following order: FM → AM → SiriusXM™ → FM.
7	MEDIA	Selects MEDIA mode. • If the media is not connected, MEDIA mode will not be activated.
8	PHONE	Takes user to phone screen.
9	☆	• Press to use a custom function. • Press and hold to access the settings screen for the custom button.
10	SETUP	Moves to the Setup screen.
11	TUNE	• FM/AM mode: Changes the frequency. • SiriusXM™ mode: Changes the channel. • MEDIA mode: Changes the track, file or title (except for Bluetooth Audio).
12	RESET	Resets the system settings. (Preset radio channels and other data will not be deleted)

※ The actual image in the vehicle may differ from the illustration.

Steering Wheel Controls

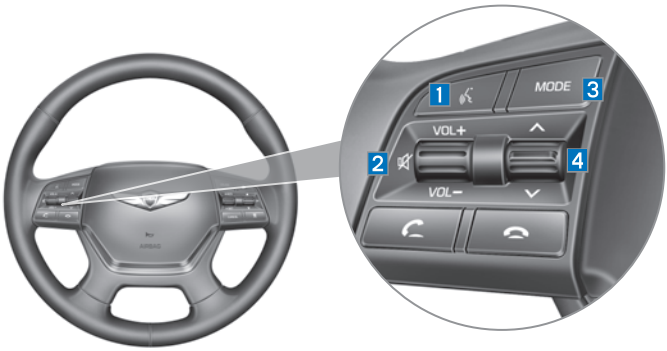

	Name	Description
1		When the key is pressed quickly (less than 0.8 seconds), • Activates voice recognition When the key is pressed and held (over 0.8 seconds), • Ends voice recognition • If iOS device is connected through Bluetooth, activates or ends Siri Eyes Free
2	VOL + VOL -	Use to adjust the volume of audio or call.
		• Mutes the audio. (Media will be paused in some media modes.) • Mutes the microphone during a call.
3	MODE	• Each time this is pressed, the mode is changed in the following order: FM → AM → SiriusXM™ → USB or iPod → Bluetooth Audio → FM You can select which mode to use in Advanced Settings. • If the media is not connected, the corresponding modes will be disabled • Press and hold (over 0.8 seconds) to turn the Multimedia system on/off. • When power is off, press button to turn power back on
4		When the key is pressed quickly (less than 0.8 seconds), • FM/AM/SiriusXM™ mode: searches broadcast frequencies or channels saved to Presets • Media mode: changes the track, file or title When the key is pressed and held (over 0.8 seconds), • FM/AM mode: automatically searches broadcast frequencies • SiriusXM™ mode: automatically searches broadcast channels • Media mode: quickly looks up songs (except for Bluetooth Audio)



Name		Description
5		When the key is pressed quickly (less than 0.8 seconds), • When pressed in the dial screen, makes a call • When pressed in the incoming call screen, answers the call • When pressed during call waiting, switches to waiting call (Call Waiting) When the key is pressed and held (over 0.8 seconds), • When pressed in Bluetooth® Hands-free, redials the last dialed call • When pressed during a Bluetooth® Hands-free call, switches call back to mobile phone (Private) • When pressed while calling on the mobile phone, switches call back to Bluetooth® Hands-free (operates only when Bluetooth® Hands-free is connected)
6		• When pressed during a call, ends the phone call • When pressed in the incoming call screen, rejects the call

※ The actual image in the vehicle may differ from the illustration.

Learn how to touch the screen to operate the system.

Select


Tap lightly on a menu or an item to select it.

NOTICE

- The system will not recognize your touch if you wear a glove or other non-conductive material. Touch the screen using your finger, an electrostatic touch-screen glove, or a stylus pen.


Drag & Drop

Select a menu or item you want, then drag and drop it to where you want to place it.

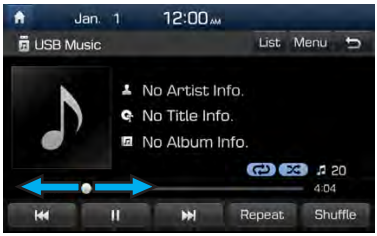

Drag or touch the slider along the play bar in the music screens to jump to the point that you want to play from.

Flick (Quick Scrolling)

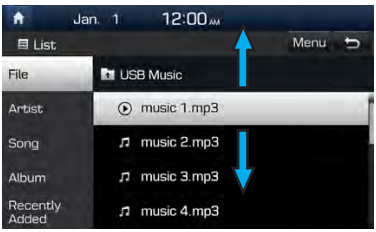

Quickly moves up and down in the list.

NOTICE

- Moving the list when there are many items will display a handler on the right of the display. You can easily move many items at a time with the handler.

Select and Hold

Selecting and holding the ⏮ or ⏭ button in the music player will rewind or fast forward the music.



You can access the radio player either by pressing the RADIO key or by selecting the Radio menu from All Menus on the Home Screen.




Information

- If you press the RADIO key when power is off, the power will turn on and a radio broadcast will be tuned from the current mode.

Features	Description
1 Menu	• Station List: Moves to the Station List. • Delete Presets: Delete saved radio stations from the preset list. • Info: Turns the Radio text information transmitted from the broadcasting station on and off. • Sound Settings: Moves to the Sound Settings.
2 Preset Frequencies	• The stored preset frequencies are displayed for user selection. • After selecting frequency, press and hold the preset button for more than 0.8 seconds. A beep sound will be heard and the frequency is to be stored in the selected preset button. • Flick the preset frequencies up/down to scroll quickly through presets.
3 Frequency	Displays the current frequency.



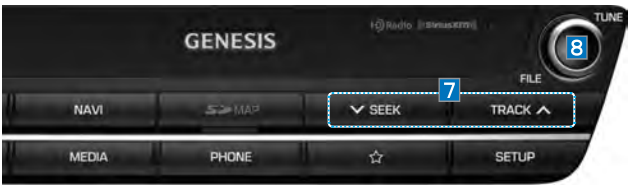

Features	Description
4 Band	Changes to the desired band from among FM, AM, and SiriusXM™.
5 HD Radio	Used to set whether to turn HD Radio™ reception On or Off.
6 Scan	Shortly plays the broadcasts for the frequencies with superior reception for 5 seconds per item.
7 SEEK/TRACK	• When the key is pressed quickly (less than 0.8 seconds): Seeks the previous/next frequency. • When the key is pressed and held (over 0.8 seconds): Moves quickly through all of the frequencies. The moment that you release the button, the system seeks the next available frequency.
8 TUNE	Turn the TUNE knob to manually seek available frequencies.

HD Radio™



Name	Description
1 HD Radio™ Reception & Channel buttons	Displays main HD Radio™ channels and used to directly select the current available channels. ⓘ The HD Radio™ related icon display becomes active within regions where an HD Radio™ signal can be received.
2 HD Channel Number	Analog station and corresponding HD Radio™ channel number saved in the preset list.
3 HD Radio Broadcast Info	Displays detailed information about the current broadcast (the details of the information shown are different depending on whether the Info button is selected)
4 HD Radio	When the HD Radio soft button is ON (the blue indicator on the HD Radio button is illuminated), HD Radio signals will be received.

You can access the radio player either by pressing the RADIO key or by selecting the Radio menu option from All Menus on the Home Screen. Select the SiriusXM™ band from the radio player.



Information


- If you press the RADIO key when the power is off, the power will turn on and a radio broadcast will be tuned from the current mode.
- If you are in the SiriusXM™ mode, select the SiriusXM™ radio widget from the Home Screen to access the radio player.
- When the power is off, pressing the RADIO key will turn the power on and play a SiriusXM™ Radio broadcast.

Features	Description
1 Channel List	Moves to the channel list.
2 Menu	• Delete Presets: Delete saved radio stations from the preset list. • What is on My Presets? The program schedule saved in my preset. (For more details, see Section 2-9 Viewing Menu.) • Featured Favorites Theme channels recommended by SiriusXM™. (For more details, see Section 2-10 Viewing Menu.) • Sound Settings: Moves to the Sound Settings.



Features	Description
3 Preset Frequencies	• Shows the stored presets for user selection. • After selecting frequency, press and hold the preset button for more than 0.8 seconds. A beep sound will be heard and the frequency is to be stored in the selected preset button.
4 Channel Logo	Displays the current channel logo.
5 Play Live	Switches to the live broadcast mode.
6 Channel Info	Displays the current channel number and name.
7 Content Info	Displays the artist, title and other information about the current playing song.
8 Category Info	Displays the category of the currently playing song.
9 Skip Backward	Repeats the previously broadcasted program. • Holding for less than 0.8 seconds: Moves to the previous segment. • Holding for more than 0.8 seconds: Moves to the previous 5 seconds.
10 Play/Pause	Pauses/plays the current broadcasting program.
11 Skip Forward	Moves to the next segment.
12 Weak Signal	Displays the weak radio reception.




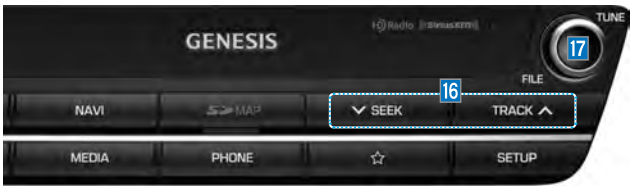


Features	Description
13 Band	Changes to the desired band from among FM, AM, and SiriusXM™.
14 Direct Tune	Used to search for the desired channel by entering the channel number.
15 Scan	Plays all receivable channels for 5 seconds per item.
16 SEEK/TRACK	• When the key is pressed quickly (less than 0.8 seconds): Plays the previous/next channel. • When the key is pressed and held (over 0.8 seconds): Continuously changes the channel until the key is released and plays the current channel.
17 TUNE	Changes the channel.


Information

- REC icon is shown next to the first 10 SXM presets saved.
- With presets saved, each time the vehicle is started that preset station will be automatically buffered for your convenience.

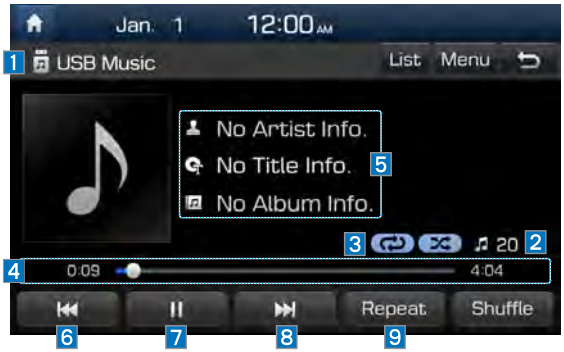

Features	Description
1 Mode	Displays the current operating mode.
2 Number of files	Number of files on the current playlist.
3 Repeat/ Shuffle	From Repeat/Shuffle, displays the current operating function.
4 Play Time	Displays the current play time/total play time.
5 Song Info	Displays the artist/title/album info.
6 Previous File	• If the button is selected (less than 0.8 seconds): Moves to the previous file or play the current file from the beginning (depends on the play time). - If play time is less than 3 seconds, moves to previous file. - If play time is over 3 seconds, play the current file from the beginning. • If the button is selected (over 0.8 seconds): It rewinds the track.
7 Play/Pause	Plays/pauses the current file.
8 Next File	• If the button is selected (less than 0.8 seconds): Moves to the next file. • If the button is selected (over 0.8 seconds): It fast-forwards the track.
9 Repeat	Repeats the current file. • If select the file in the file tab on the list screen: select this button to switch between repeating the current file, repeating folder, and repeating all files. • If select the song in the other tabs on the list screen: select this button to switch between repeating the current song and repeating all songs.

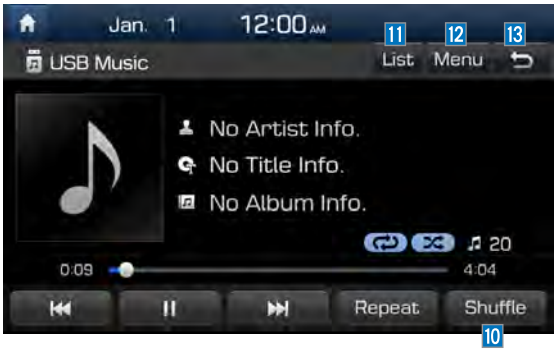

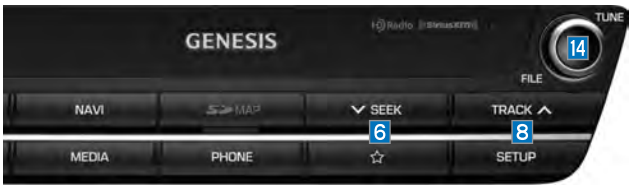

Features	Description
10 Shuffle	Plays files in random order. • Select this button to switch between shuffle and turning shuffle off.
11 List	Moves to the list screen.
12 Menu	• Hide Current File: a selected file can be deleted. Deleted file can be found in the 'Hidden_' folder. *i* This function is only supported when USB format is compatible with FAT16 or FAT32. • Sound Settings: Moves to the Sound Settings.
13 Back Button	Move to the previous screen.
14 TUNE	Turn the ● TUNE knob to search a desired track. If the desired track is displayed, select the ● TUNE knob to play the track. *i* If you do not anything with the ● TUNE knob for 5 seconds of searching tracks, the track info for the current track is restored.

Bluetooth Connection

Pairing a New Device

Before you can use the Bluetooth feature, you must first pair/connect your mobile phone to your car.

Up to 5 Bluetooth devices can be paired.

Only one Bluetooth device can be connected at a time.

Pairing a New Device by Selecting Phone/Call

Press the key on the steering wheel control. ▶ Pair your car after your mobile phone detects the Bluetooth device. ▶ Enter the passkey or accept the authorization popup. ▶ Connect Bluetooth.

Pairing a New Device Through the Phone Settings

Press the SETUP key. ▶ Select Bluetooth. ▶ Select Bluetooth Connection. ▶ Select Add New. ▶ Pair your car after your mobile phone detects the Bluetooth device. ▶ Enter the passkey or accept the authorization popup. ▶ Connect Bluetooth.



The default passkey is 0000.


The vehicle name above is an example. Check the actual information on the product.

Connecting Bluetooth Devices

Connects the Bluetooth devices that you add.


Connecting Devices by Selecting Phone/Call

Press the key on the steering wheel control. ▶ Select the name of the device to connect. ▶ Connect Bluetooth.

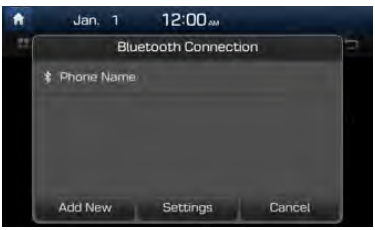

Connecting Devices Through the Phone Settings

Press the SETUP key. ▶ Select Bluetooth. ▶ Select Bluetooth Connection. ▶ Select the name of the device to connect. ▶ Connect Bluetooth.

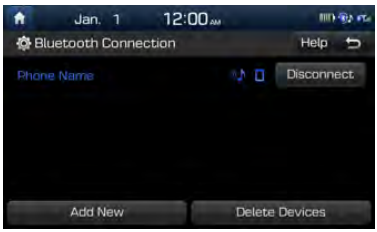

Dial

Select All Menus ▶ Phone ▶ .




Name	Description
1 Keypad	Use the keypad to enter the phone number that you want to call. Select and hold the last number of a speed dial to dial a number that you added to the Speed Dial list in the phone.
2 Call	Makes a call after you dial a number and select . If the number is listed in Dialed Calls, you can select the number and select to automatically dial that number again.
3 Settings	Moves to a screen of Bluetooth Connection.

Name	Description
4 Delete	Deletes the numbers that you entered.
5 Privacy Mode	Activate the privacy mode to protect your personal information. In the privacy mode, personal data will not be displayed.
6 Change Device	Search for and connect another Bluetooth device.

Information

- Some types of mobile phones may not support the Speed Dial function.

Using the Menu During a Phone Call

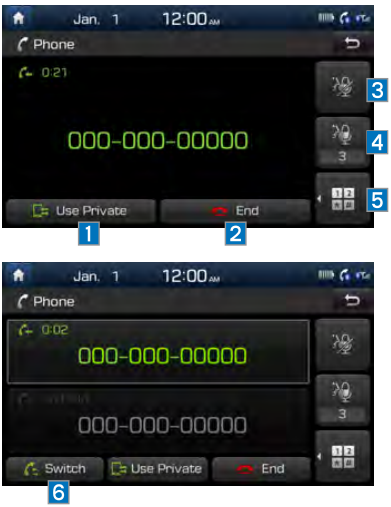


When making a call, you can use the following menu items.

Name	Description
1 Use Private	Switches a voice call from the car Hands-free to the mobile phone.
2 End	Ends a call.
3 Mute	Mutes the micro-phone during a call.
4 Outgoing Volume	Displays the Mic Volume settings. You can adjust the in-call volume that the other party hears (level 1 to 5).
5 Keypad	Moves to a screen for entering ARS numbers.
6 Switch	Switches to a call on hold, if any. You can also switch calls by selecting the number in the Information Display. The Switch function switches the current call to a waiting call in order to answer a new incoming call.

Call History


Select All Menus ▶ Phone ▶ .

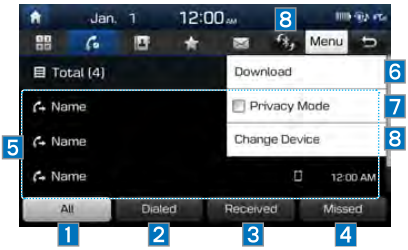

Name	Description
1 All	Lists the all call history.
2 Dialed	Lists the calls that you made.
3 Received	Lists the calls that you have received.
4 Missed	Lists the calls you missed.
5 Call History	Displays all of your call history. Select from the list to dial the number.
6 Download	Downloads the call history information from your mobile phone.
7 Privacy Mode	Activate the privacy mode to protect your personal information. In the privacy mode, personal data will not be displayed.
8 Change Device	Search for and connect another Bluetooth device.

Contacts


Select All Menus ▶ Phone ▶ .

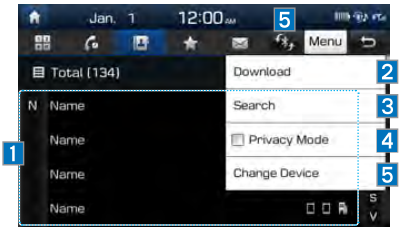

Name	Description
1 Contacts List	The list of Contacts. Select from the list to dial the number.
2 Download	Downloads contacts from your mobile phone.
3 Search	Searches Contacts.
4 Privacy Mode	Activate the privacy mode to protect your personal information. In the privacy mode, personal data will not be displayed.
5 Change Device	Search for and connect another Bluetooth device.

Favorites


Select All Menus ▶ Phone ▶ ★.

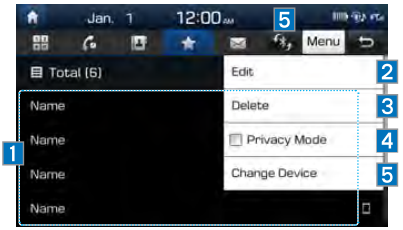

Name	Description
1 Favorites	Lists the phone numbers saved as Favorites. Select from the list to dial the number.
2 Edit	Add numbers or delete numbers to Favorites.
3 Delete	Deletes all of the numbers from Favorites.
4 Privacy Mode	Activate the privacy mode to protect your personal information. In the privacy mode, personal data will not be displayed.
5 Change Device	Search for and connect another Bluetooth device.

Viewing a new message

When you receive a message, a new message notification appears.

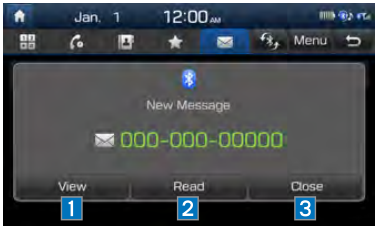




Name	Description
1 View	View the message details.
2 Read	Convert the message to voice and listen to it through the vehicle's speakers.
3 Close	Close the notification pop-up window.
4 Message Settings	Customize the settings for receiving messages.
5 Privacy Mode	Activate the privacy mode to protect your personal information. In the privacy mode, personal data will not be displayed.
6 Change Device	Search for and connect another Bluetooth device.

Viewing messages from the messages list

Select All Menus ▶ Phone ▶ ✉ ▶ Select a message from the list.

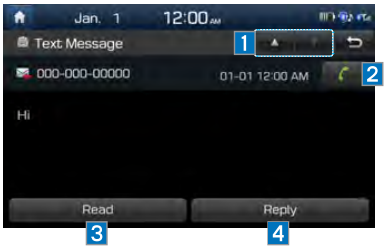

Name	Description
1 ▲/▼	Move to the previous or next message.
2 Call	Call the sender back.
3 Read	Convert the message to voice and listen to it through the vehicle's speakers.
4 Reply	Send a simple reply using one of the message templates.

Information

- To receive notifications every time you receive a message, access the message list, touch Menu ▶ Message Settings and touch Message Notification to select it.
- To edit the reply message templates, access the messages list, touch Menu ▶ Message Settings ▶ Predefined Messages and select the template you want to edit.
- To edit or delete templates, park your vehicle in a safe location first and use your mobile phone's messaging function. You cannot edit or delete your messages on your system.
- When you connect an iPhone, you may have some restrictions on receiving messages.
  - If the caller information is saved in your contacts list, only the caller's name will be displayed.
  - If the caller information is not saved in your contacts list, only the caller's phone number will be displayed.
  - Replying to received messages is not available.
  - If the message notification setting is disabled or the option for viewing content on the lock screen is disabled, message will not be received by your system.

Precautions Required for Successful Voice Recognition

1. Voice recognition supports only the commands that are displayed on the screen and written in the User's Guide.
2. To ensure the correct recognition and execution of your command, say your command when you hear the beep after a voice prompt.
3. Voice recognition automatically ends if:
   1) A call is incoming or outgoing
   2) A media device (USB or iPod, etc.) is connected or disconnected
   3) The front or rear view camera is operated (optional)
   4) The car engine starts or stops
   5) A system key, such as RADIO key or MEDIA key is selected
4. The microphone used for the voice recognition system is located in the headliner directly above the driver's head. To make your commands better understood, keep your body straight in the driver's seat when speaking the command.
5. Speaking naturally and clearly will ensure better recognition of your voice commands.
6. In the following cases voice recognition will be affected by ambient noise.
   1) The sound of the wind if any window or the sun roof is open.
   2) High speed blower from the air vents. Set climate control to blow lower than level 3.
   3) Vibrations from passing through a tunnel.
   4) Vibrations from driving on an uneven road.
   5) Storms and heavy rain.

Starting/Ending and Setting Voice Recognition

Starting Voice Recognition

Press the key briefly (less than 0.8 seconds) on the steering wheel control to activate voice recognition.



Ending Voice Recognition

1. Select “Exit” to the left of the bottom to end voice recognition.
2. Press and hold (more than 0.8 seconds) the key on the steering wheel control to end voice recognition.



Combining Voice Recognition with On-Screen Commands

After pressing the key, say a command after the beep. The voice recognition system will execute the desired operation after understanding the command.
Alternatively, you may touch any of the corresponding Commands on the screen while the Voice Recognition system is in operation.

Combining voice recognition with available on-screen commands is useful when the system is taking longer than expected or the voice command did not execute as desired.



Skipping Prompt Messages

When you hear the prompt message, press the key on the steering wheel control to skip the message and go directly to listening mode to say your command.

This results in faster operation when you feel the message is too long or you already know the command to use.

Information

- Refer to Part 9 for instructions on how to change the Voice Recognition Settings.



Voice Recognition Screen Overview



Name	Description
1 Representative Commands	Displays frequently used commands.
2 Not available command	Unavailable voice commands are grey, a precondition was not met so the command is grey and unavailable. The conditions required for using the unavailable commands will be described under each command.
3 Voice recognition status icons	Standby Voice guidance Voice command process
4 Recognized results	Displays the voice recognition result.
5 User's speaking volume being recognized	Displays the voice command level real time as it is being spoken.
6 Help	Displays all available help commands in a tree format.
7 Exit	Ends the voice recognition.

Voice Commands

Types of Commands

Voice recognition commands are classified as “Global Commands” and “Local Commands”.

1. Global Commands (●): Commands that can be used immediately after activating voice recognition.
2. Local Commands (○): Commands that can be used when a multimedia or Bluetooth function is running, or displayed on the screen, after activating voice recognition.

Call Commands

* Check the following before using call commands:

1. Voice commands related to phone calls can be used after connecting a Bluetooth device.
2. To call a person, for example “Call <John Smith>” whose name is listed in Contacts, you must first download the Contacts list. For details on downloading contacts, see “Part 3. Bluetooth > Chapter 3. Bluetooth Phone > 3-10 Contacts”.
3. After downloading the Bluetooth contacts, it will take some time to convert the Contacts into voice data during which time you cannot make a call by name yet. The time it takes to convert voice data may vary depending on the number of Contacts downloaded on the phone.

Command		Operation
●	Call	Displays downloaded Contacts, after this you can make a call by saying the name.
●	Call <Name>	You can directly call a person by <Name> in the downloaded Contacts.
●	Call <Name> on Mobile	You can call a person <name> directly to the number that is saved as “Mobile” in the downloaded Contacts. e.g.) Call “John Smith” on Mobile
●	Call <Name> at Work	You can call a person <name> directly to the number that is saved as “Work” in the downloaded Contacts. e.g.) Call “John Smith” at Work
●	Call <Name> at Home	You can call a person <name> directly to the number that is saved as “Home” in the downloaded Contacts. e.g.) Call “John Smith” at Home
●	Call <Name> on Other	You can call a person <name> directly to the number that is saved as “Other” than “Mobile, Home, or Work” in the downloaded Contacts. e.g.) Call “John Smith” on Other
●	Dial Number	Displays a screen where you can say a phone number to dial.
●	Dial <Phone #>	You can directly say the number to call. e.g.) Dial 111 555 1234
●	Send Message	• You can send a text message to one of your mobile phone’s contacts. Say a contact’s name and then enter the message content by following the guidance. • This command is available only if Genesis Connected Services is activated.
●	Send Message to <Name>	• You can send a text message to that specific contact. Enter the message content by following the guidance. • This command is available only if Genesis Connected Services is activated.
●	Send Message to <Name> <Message>	• You can send a text message to that contact more directly. • This command is available only if Genesis Connected Services is activated.
●	Change Bluetooth Device	You can switch your Bluetooth connection to another paired device.

Navigation Commands

* Check the following before you use navigation commands:

1. Search for and find addresses located in the state or province your car is currently in.
   If you want to search in another state, say the name of state/province and then look it up.
   Find Address is classified by states/provinces to provide you with faster service.
2. Some commands such as “Cancel Route” are available only when the destination is fixed.

Information

- This system has the capability to use the telematics units network connection for voice recognition to provide and execute Destination entry for POIs and Addresses.
- To use the network enhanced location entry feature, an active Subscription to Genesis Connected Service is required. (For more details, see Section 9-9 Voice Recognition Settings)

Command		Operation
●	Find <POI or Address>	• You can search for a designated POI name or address via the network service. e.g.) Find “Starbucks”, Find “Starbucks” in Seattle • If ‘Use Network’ is selected in the Voice recognition menu, a Genesis Connected Services subscription is required to use the POI search feature. • If ‘Use Network’ is not checked the Navigation system will use the on-board map database on the SD MAP Card.
●	Find Address in <State>	• Finds the address in <State> and sets it as the destination. e.g.) Find Address in California • To find an address, you should say “House Number → Street → City” e.g.) 300 (Three Zero Zero) Main Street, Almond

Information

- Should promote the server based system better, by informing the user there is improved speech recognition, larger database content.

Command		Operation
●	Find <POI>	Immediately finds <POI>. For detail of <POI>, see “Find <POI>” List. e.g.) Find “Banks”
●	Frequently Visited Points	You can select a location from the list of your frequently visited points. Say the number of the location you want.
●	Address Book	Access the address book screen.
●	Previous Points	Displays a list combining Previous Destinations, Frequently Visited Points, and Previous Starting Points all together. You can then set a destination by saying the list number.
●	Previous Destinations	Displays a list of recent destinations that you can return to by saying the number in the list.
●	Previous Starting Points	Displays a list of recent starting points that you can return to by saying the number in the list.
●	Traffic Information	Moves to the Traffic Information menu screen.
●	Go Home	Set the destination to your home. Your home must first be set in the Navigation system.
●	Go to Work	Set the destination to your work/office. Your work/office must first be set in the Navigation system.
●	Change Home	You can change the location saved as your home.
●	Change Work	You can change the location saved as your work.
●	Pause Route	Pause the navigation guidance.
●	Resume Route	Resume the navigation guidance.

Command		Operation
●	Turn Guidance On	Turns on the voice guidance system.
●	Turn Guidance Off	Turns off the voice guidance system.
●	Zoom In	Zooms in on the navigation map.
●	Zoom Out	Zooms out from the navigation map.
●	Cancel Route	Cancels the route to the fixed destination and exits guidance.
●	Destination Information	Tells you the remaining distance and time to your destination.
●	Route Options	Moves to the Route Options menu screen.
●	Emergency Services	Displays a list of nearest Police Station, Hospital, Dealership, or Road Assistance. You can then set a destination by saying the list number.
●	Police Stations	Displays a list of the nearest police stations. You can then set a destination by saying the list number.
●	Hospitals	Displays a list of the nearest hospitals. You can then set a destination by saying the list number.
●	Dealerships	Displays a list of the nearest car dealerships. You can then set a destination by saying the list number.
●	Roadside Assistance	Displays a list of the nearest road assistance locations. You can then set a destination by saying the list number.
●	Show Route	Displays a map overview of the entire route to your destination.

Radio Commands

Command		Operation
●	FM <87.5 to 107.9>	Tunes to FM <Frequency> according to what you say. e.g.) FM 87.5: FM eighty seven point five
●	SiriusXM <0 to 999>	Tunes to SiriusXM™ Channel <Channel Number> according to what you say. e.g.) SiriusXM 23: SiriusXM Twenty three
●	AM <530 to 1710>	Tunes to AM <Frequency> according to what you say. e.g.) AM 530: AM Five thirty

Other Commands List (Commands used in List/Help)

Command		Operation
●	Help	Moves to the voice recognition help screen. All available commands can then be identified and used.
○	Line 1 to 4 (One to Four)	When you cannot select a certain name, you can select it using numbers. Simple numbers can be recognized, such as “One” or “Two”.
○	Yes/No	When voice recognition is activated, this command is used when an answer is requested for a confirmation question.
○	Previous/Next	When four or more searched items are listed, you can move to the previous or next page using a voice command.
○	Manual Input	When Dial entry results are displayed, this command is used to search manually, rather than to search with a voice command. Voice recognition stops after this command is used.
○	Go Back	Moves to the previous screen.
●	Exit	Ends the voice recognition.

"Find <POI>" List

Navigation location names can be changed after an update.

1. Restaurants

- Restaurants
- Fast Food Restaurants
  - Arby's
  - Boston Market
  - BURGER KING
  - Carl's Jr
  - Chick-fil-A
  - Chipotle
  - Church's Chicken
  - Dairy Queen
  - Firehouse Subs
  - Fleming's
  - Hardee's
  - In-N-Out Burger
  - IHOP
  - Jack in the Box
  - Jimmy John's
  - KFC
  - Little Caesars
  - Long John Silver's
  - McAlister's Deli
  - McDonald's
  - Panda Express
  - Panera Bread
  - Popeyes
  - Quiznos Sub
  - Schlotzsky's
  - SONIC
  - SUBWAY
  - Taco Bell
  - Taco John's
  - Waffle House
  - Wendy's
  - White Castle
- American Restaurants
  - Applebee's
  - Bahama Breeze
  - Boston's Restaurant & Sports Bar
  - Cheeseburger in Paradise
  - Chili's Grill & Bar
  - Cool River
  - Denny's
  - Frisch's Big Boy
  - Good Eats
  - III Forks
  - Lee Roy Selmon's
  - Lone Star Steakhouse & Saloon
  - Longhorn Steakhouse
  - Luckys Cafe
  - Outback Steakhouse
  - Ponderosa
  - Publix
  - Seasons 52
  - Sheetz
  - Silver Fox
  - Texas Roadhouse
  - TGI Friday's
  - The Capital Grille
- French Restaurants
- Italian Restaurants
  - Bonefish Grill
  - Carrabba's Italian Grill
  - Chuck E Cheese's
  - Domino's
  - Olive Garden
  - Papa John's
  - Papa Murphy's
  - Pizza 73
  - Pizza Hut
  - pizza pizza
- Continental Restaurants
- Mexican Restaurants
  - Cantina Laredo
  - Chevys
  - El Chico
- Japanese Restaurants
- Chinese Restaurants
  - PF Chang's China Bistro
- Korean Restaurants
- Vegetarian Restaurants
- Seafood Restaurants
  - Red Lobster
- Latin American Restaurants

2. Automotive

Automotive
Hyundai Dealerships
Gas Stations
76
ampm
ARCO
BP
Canadian Tire
Casey's General Store
Cenex
Chevron
CITGO
Conoco
Esso
Exxon
Fleetfuels
GetGo
Giant Gasoline
GTO
Gulf
Husky
Ingles Gas Express
Marathon
Martin's Gasoline
Meijer
Mobil
Murphy Express
Murphy USA
Petro Stopping Centers
PETRO-CANADA
Phillips 66
Pioneer
QuikTrip
Rutter's
Sheetz
Shell
Sinclair
Speedway
Sunoco
Sunoco Canada
TEXACO
TravelCenters of America
Ultramar
Valero
Wawa
Parking
Auto Services
AAA
Advance Auto Parts
America's Tire
AutoZone
BOSCH Car Service
Certigard
Discount Tire
Firestone
GOODYEAR
Kal Tire
Midas
Napa
O'Reilly Auto Parts
Sears Auto Center
Road Assistance
Automobile Dealerships
Auto Parts
Car Washes
Motorcycle Dealerships

3. Travel

Travel
Airports
Hotels
Americas Best Value Inn
AmericInn
Andaz
Ascend Collection
Baymont Inn & Suites
Best Western
Cambria Suites
Canadas Best Value Inn
Candlewood Suites
Clarion Hotel
Comfort INN
Comfort Suites
CONRAD
Country Inn & Suites by Carlson
COURTYARD by Marriott
Crowne Plaza
Days Inn
DELTA
Doubletree
Econo Lodge
Embassy Suites
Grand Residences by Marriott
Hampton Inn
Hampton Inn & Suites
Hawthorn Suites
Hilton
Hilton Garden Inn
Hilton Grand Vacations
Holiday Inn
Holiday Inn Express
Homewood Suites
Hotel Indigo
Howard Johnson
Hyatt Place
Hyatt
Hyatt Summerfield Suites
Intercontinental
JW Marriott
LA QUINTA INN
Lexington
Mainstay Suites
Marriott
Marriott VACATION CLUB
Microtel Inns & Suites
Motel 6
NOVOTEL
Omni Hotels
Park Inn
Park Plaza
QUALITY INN
Radisson
Radisson SAS
RAMADA
Red Roof Inn
Regent Hotels & Resorts
Renaissance
Residence Inn
Ritz-Carlton Club
Rodeway Inn
Sheraton
Sleep Inn
SOFITEL
Staybridge Suites
Studio 6
Suburban Extended Stay
Super 8
Thriftlodge Canada
Travelodge
Travelodge Canada
VAN DER VALK
WALDORF ASTORIA COLLEUTION
Wingate by Wyndham
Wyndham
Rest Areas
Tourist Information
Tourist Attractions
Travel Agents
City Centers
Rental Car Agencies
Alamo
AVIS
Budget
Dollar Rent A Car
Enterprise
Hertz
National
Thrifty
Campgrounds
Ferry Terminals
Bus Stations
Local Transit
Train Stations

4. Shopping

- Shopping
  - Department Stores
    - Canadian Tire
    - Dollar General
    - Dollar Tree
    - Family Dollar
    - JCPenney
    - Kmart
    - Kohl's
    - Nordstrom
    - Sears
    - Sears Hometown Store
    - Target
    - T.J. Maxx
    - Walmart
  - Convenience Stores
    - 7-Eleven
    - ampm
    - BP
    - Circle K
    - Fleetfuels
    - GetGo
    - GTO
    - Kangaroo Express
    - Murphy Express
    - Murphy USA
    - Petro Stopping Centers
    - QuikTrip
    - Rutter's
    - Sunoco Canada
    - TravelCenters of America
    - Wawa
  - Shopping Centers
    - Office Depot
  - Grocery Stores
    - Giant Eagle
    - Giant Food Stores
    - IGA
    - Ingles Markets
    - Food Lion
    - Kroger
    - Martin's Food Markets
    - Meijer
    - Publix
    - Sav-Mor Foods
    - Save-A-Lot
    - SuperValu
  - Music Stores
  - Bookstores
    - Barnes & Noble
  - Electronics Stores
    - AT&T
    - Best Buy
    - Future Shop
    - GameStop
    - Radioshack
    - Sprint
    - Staples
    - T-Mobile
    - OfficeMax
    - US Cellular
    - Verizon
  - Gift Shops
  - Sporting Goods Stores
    - Dick's Sporting Goods
    - Sports Authority
  - Home Specialty Stores
    - ABC Fine Wine & Spirits
    - Ace Hardware
    - Claire's
    - Costco
    - Home Depot
    - Lowe's
    - Merle Norman
    - PETCO
    - PETSMART
    - Sally Beauty Supply
    - SHERWIN-WILLIAMS
    - True Value
  - Clothing Shops
    - Mark's
  - Shoe Stores
  - Pharmacies
    - CVS/pharmacy
    - Giant Drugstore
    - Ingles Pharmacy
    - Kmart Pharmacy
    - Kroger Pharmacy
    - Martin's Drugstore
    - Meijer Pharmacy
    - Shoppers Drug Mart
    - Target Pharmacy
    - Walgreens
  - General Merchandise

5. Recreation

Recreation
Amusement Parks
Museums
Cinemas
Golf Courses
Sports Complexes
Sports Activities
Wineries
Video & Game Rental
Ski Resorts
Recreation Areas
Other Recreation Areas

6. Financial Services

Financial Services
Banks
Bank of America
BB&T
Chase
Citibank
Citizens Bank
Fifth Third Bank
Key Bank
PNC Bank
RBC Bank
Regions
SunTrust
TD Bank
TD Canada Trust
US Bank
Wells Fargo
ATMs
Check Cashing Services
Money Transfer

7. Community

Community
Police Stations
Post Offices
Libraries
Schools
Fire Departments
Churches
Synagogues
Convention Centers
City Halls
Civic Centers
Court Houses
Government Offices
Waste & Sanitary Services
Utilities
Business Facilities

8. Services

Services
Hospitals
Medical Services
Physicians
Tax Services
Attorneys
Funeral Homes
Hair & Beauty Services
Cleaning & Laundry Services
Social Services
Communication
Dentists
Photography Services
Tailors & Alterations
Movers
Nursing Home
Optical Services
Personal Services
Repair Service
Veterinary Hospital

Siri Eyes Free

How to start Siri


If you want to use Siri, you have to connect your iOS device to the Multimedia system through Bluetooth.

(Please check whether your iOS device supports Siri and turning Siri On)

Then you can use Siri while pressing and holding  key on the steering wheel control.

How to use Siri

When you access the Siri screen while pressing and holding  key on the steering wheel control, you can select the Speak button and then you can speak what you want. Note that the Multimedia system only supports “Phone” related functions. Other functions will be performed in your iOS device. If you press voice key quickly, Siri would re-start. If you hold down voice key, Siri would be terminated and the screen would go back to the previous screen. Eyes-Free mode would be activated automatically while you are driving. When shifting gears into P or putting the Parking brake on, Eyes-Free mode would be deactivated automatically.

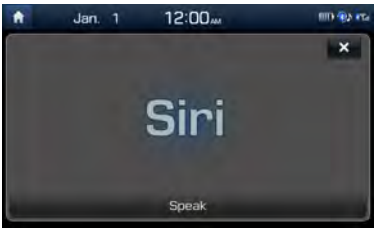

Information

- Functions and feedbacks from voice commands via Siri are executed in the iOS device. If the iOS version is changed, the functions and response may be different according to the iOS device and the latest version.

About Pairing Mobile Phones

Q I cannot pair my mobile phone. What is the cause?

A Check to see that the mobile phone supports Bluetooth® function. Verify if Bluetooth on the cell phone is set to OFF. If so, set it to ON. If the cell phone still can't be registered, try again after turning Bluetooth off and on, or delete the device registration on the multimedia system and cell phone and then register the cell phone again.

Q What is the difference between pairing a mobile phone and connecting a mobile phone?

A Pairing occurs through authenticating the head unit and mobile phone. Mobile phones paired to the head unit can be connected and disconnected until the paired mobile phone is deleted from the system. Bluetooth® Handsfree features, such as making/answering calls or managing contacts, are supported only in mobile phones connected with the head unit.

Q What is a Passkey?

A A passkey is the password used to authenticate the connection between the head unit and mobile phone. The passkey only needs to be entered once when pairing the mobile phone for the first time.
The initial passkey is 0000. You can change it with
SETUP ▶ Bluetooth ▶ Bluetooth System Info ▶ Passkey menu options.

About Making/Answering Phone Calls

Q How can I answer a call?

A When there is an incoming call, a notification pop-up will become displayed. To answer the incoming call, select the Accept button on the screen or press the key on the steering wheel control.
To reject the call, select the Reject button on the screen or press the key on the steering wheel control.

Q What should I do if I am talking on the Handsfree but want to switch the call to the mobile phone?

A While on a call, press and hold (more than 0.8 seconds) the key on the steering wheel control or select the Use Private button at the bottom of the Phone screen to switch the call to your mobile phone.

About *Bluetooth*® Wireless Technology/ Multimedia System Use Environment

Q What is the range of my wireless connection?

A The wireless connection can be used within 15 yards.

Q How many mobile phones can be paired?

A It is possible to pair up to five mobile phones.

Q Why is call quality sometimes poor?

A Check the reception sensitivity of the mobile phone when call quality becomes worsened. The call quality may deteriorate when the signal strength is low. Call quality may also worsen if metal objects, such as beverage cans, are placed near the mobile phone. Check to see if there are metal objects in the vicinity of the mobile phone. The call sound and quality may differ depending on the type of mobile phone.

HD Radio™ Data

About HD Radio™ Data Services

The HD Radio™ Data Service provides users with information such as Weather, Doppler Radar and Traffic by using HD Radio™ technology.

Accessing HD Radio™ Data

Select the Data Services icon after selecting All Menus to enter Data Services Mode.



HD Radio Weather Information Mode

At the “Data Services” screen, select the HD Radio Weather icon to enter the Weather Information mode.


Weather Forecast

This service provides current weather information and weather forecasts for the next five days in your city.



Other City Option

This service provides access to weather information from other cities. To change the city, select the Other City button and select the desired city. From this screen, there is also an option to change the state by selecting the Change State button.

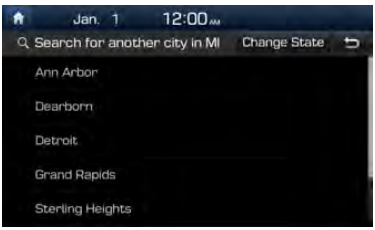


HD Radio™ Doppler Radar

At the “Data Services” screen, select the HD Radio Doppler Rader icon to enter the Doppler Radar mode.

Doppler Radar

This service provides Doppler Radar views of the current *HD Radio™ coverage market. This screen will change automatically based on the *HD Radio™ coverage market.

* The HD Radio™ coverage market is the area with the strongest signal at that time.

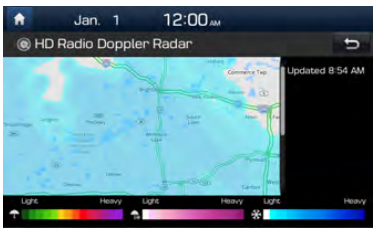

SiriusXM™ Data

About SiriusXM™ Data Service

The SiriusXM™ Data Service is a paid membership satellite radio service that provides users with information such as Weather, Fuel Prices, Stocks, Sports and Movies.

Accessing SiriusXM™ Data

Select the Data Services icon after selecting All Menus to enter the Data Services mode.



SiriusXM™ Weather Announcement

At the “Data Services” screen, select the SiriusXM Weather icon to enter the Weather Announcement mode.

Weather Forecast


This service provides current weather information and weather forecasts for five days in your region. To change the region, select the Other City button and select the desired region.





Warnings and Advisories


This service provides weather warnings and advisories, such as tornado, storm, flood, etc.

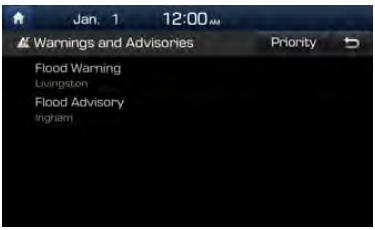



SiriusXM™ Fuel Price Information

At the “Data Services” screen, select the SiriusXM Fuel Prices icon to enter the Fuel Prices Information mode.

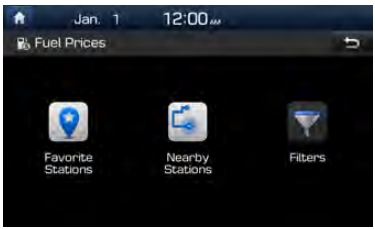


Search for Nearby Stations, and Register Key Locations as Favorite Stations.

Search for nearby stations with the “Nearby Stations” menu.

It shows station locations, starting from the nearest one, and select “Nearest” menu on the top right side to further sort them by price or brand name.





Select the ★ button to the right of the list to register key locations as a Favorite Station so that you can go there again with the “Favorite Stations” menu.

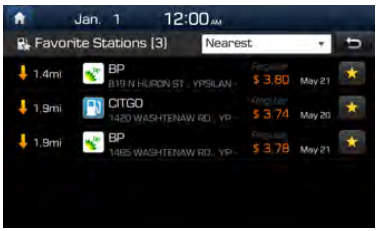

My Fuel Type Settings

With the “Filters” menu, you can select fuel types and favorite brands. When searching for Nearby Stations, the results will reflect selected fuel types and brand information.

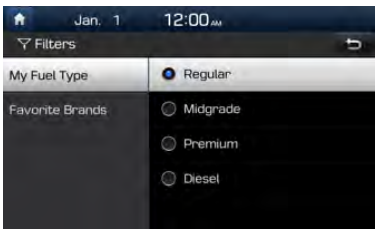

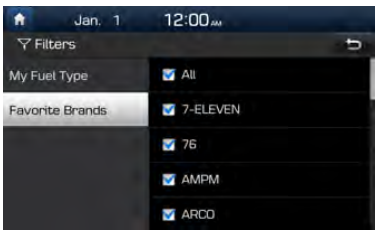

SiriusXM™ Stock Information

In the “Data Services” screen, select the SiriusXM Stocks icon to enter the Stocks mode.

Stocks is a feature that shows the current value and change of stocks. For symbols which you are interested in, select the icon to save the symbol as a part of the “Saved” symbols which can be viewed from the “My Favorites” button on the Stocks Main screen.


My Favorites

My Favorites shows a list of stocks added by the user. When entering the Stocks menu for the first time, a screen is displayed for you to add your favorite stock information. Select the Add button to move to the stock search screen.




Stock Search

Use the Stock Search menu to search for specific stocks.
Select the ★ button after searching for your favorite stocks to save them in “My Favorites”.

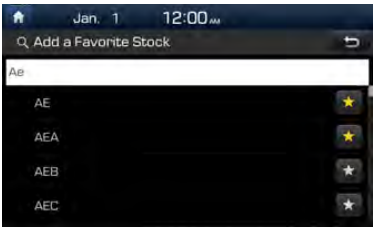


In the My Favorites screen, you can find the selected stock information that you registered.

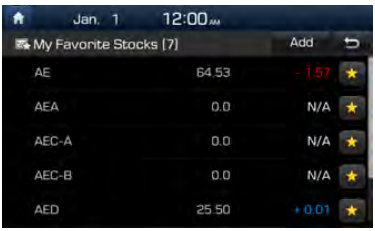

SiriusXM™ Sports Information

Select the SiriusXM Sports icon to enter the Sports mode.

This service provides real-time updated information on scores and schedules for major sports, such as NFL, NBA, NCAA football, NCAA basketball, NHL, MLB, NASCAR and more.

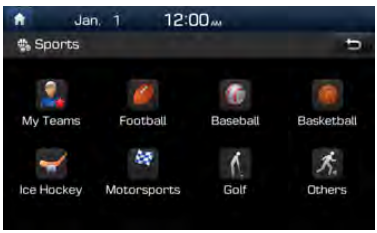



My Teams

You can save teams which you are interested in as part of My teams to easily view related scores and schedules.


Select the My Teams menu and then select the Add button to search for and register your favorite teams.

Search for your favorite teams and select the ★ button on the right to add it to the “My Teams” list.

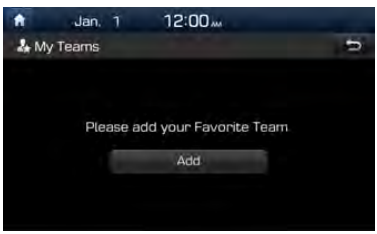


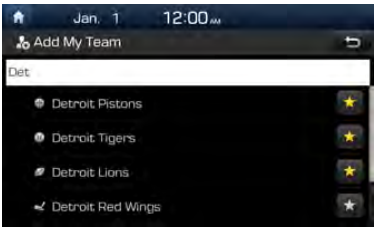


You can always check the list of teams that you added in the “My Teams” menu. Select the ★ button on the right side of the team name to delete the team from “My Teams” or select the Add button to add other teams.

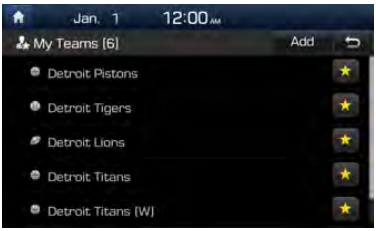

Select the team name to check daily results and recent schedules for that team.

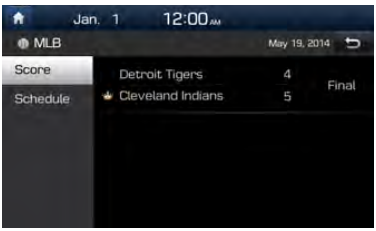

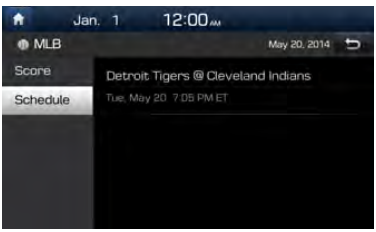

SiriusXM™ Movie Information


Select the SiriusXM Movies icon to enter the Movie mode.


You can check recent movies and nearby theaters, and also register your favorite theater locations.




Search for Nearby Theaters, and Register Any Key Locations as Favorite Theaters.

In the “Nearby Theaters” menu, you can search for any nearby theaters. It shows theaters, starting from the nearest one, and selecting the “Nearest” menu at the top right side will sort them by name.

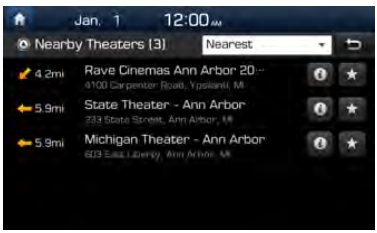

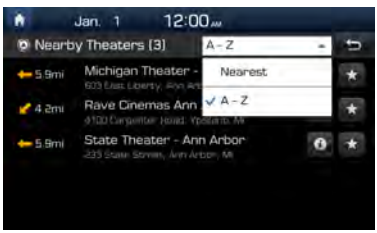

Select the ★ button to the right of the list to register your favorite theater so that you can always check it again using the “Favorite Theaters” menu and selecting the ⓘ button to view the current movie information for that theater.

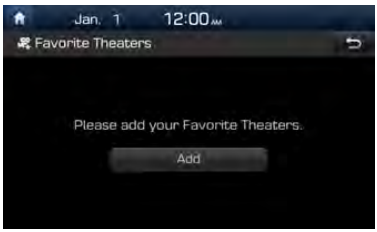




In the “Top Movies” menu, you can check for any movies that are currently popular. Select the ⓘ button to the right of a movie title to view the plot summary and any other detailed information.



Basic Features

Operating Navigation Screen


Basic features on the map screen.

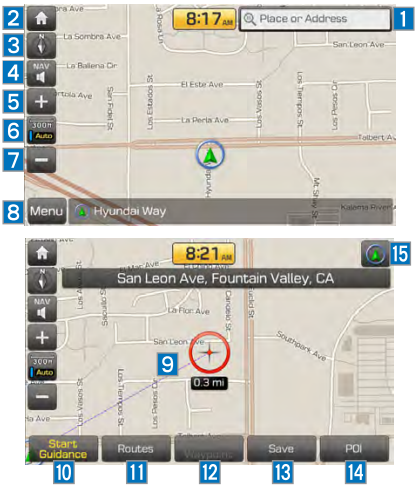

Name	Description
1	Move to the Place menu.
2	Go to the Home Screen
3	Change the map view mode.
4	Adjusts the volume.
5	Zoom in the map.
6	Set the zoom level automatically according to the guidance.
7	Zoom out the map.
8	Quick Menu for destination selection and options.
9	Touch to scroll the map.
10	Start the preferred navigation route to selected location.

Name	Description
11	Choose the preferred navigation route to selected location.
12	Set a waypoint to the current route.
13	Save frequently used address to address book.
14	Find a POI(Point Of Interest) around the current position.
15	View the vehicle's current position on the map screen.

Places

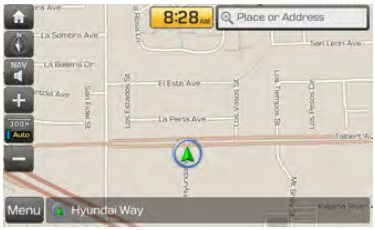

You can use this menu when the vehicle shift lever is in P (Park) and there is no destination set.
Select the Place or Address button to move to “Places”.




Please refer to “Places” in “Destination Search” for more details.

Changing Map View



Touch the compass arrow icon to toggle between a map oriented to the North, oriented parallel to the vehicle’s heading and 3D View.

Navigation Volume

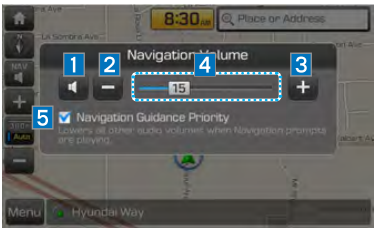


Select the NAV button to adjust the navigation volume.

Name	Description
1	Set the volume to mute.
2	Turn the volume down.
3	Turn the volume up.
4	Slide to set the volume.
5	Lowers all other audio volumes when Navigation prompts are playing.

Zoom In/Zoom Out


Zoom the map view screen in and out.

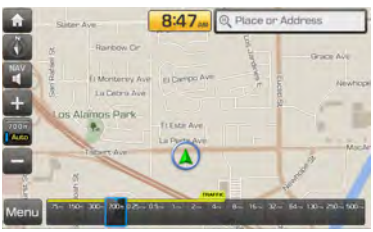

Select the + or − button to set the zoom level.

Map Scale

Sets the zoom level automatically according to the type of road.

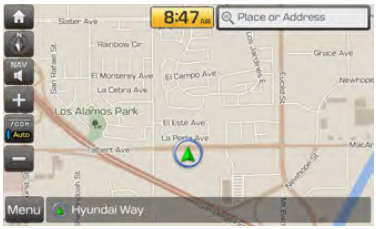

Name	Description
Scale Fix	Manually adjust the map scale.
Auto Scale	Change the map scale automatically depending on the type of road.


Information

- If the HD Radio or SiriusXM service is available for traffic information, the corresponding icon will appear at the top of the navigation screen. HD Radio is only available in metropolitan areas.
- HD Radio ( ) : Vehicle uses HD data services if the vehicle is a Metropolitan area with strong signal strength.
- SiriusXM ( ) : Vehicle uses SXM data services if subscribed when HD broadcast is not available.

Quick Menu


Route

Select the Menu button on the bottom left of the screen ▶ Route button.

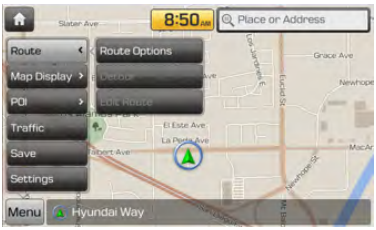

Select the Route button to set Route Options, Detour or Edit Route.

Route Options

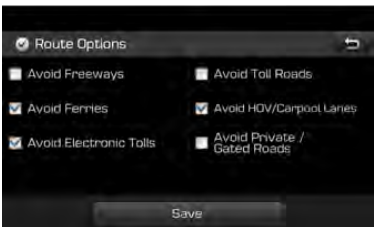

Select your preferred route and avoid options. Then select the Save button to save your selection. These options will become default for future routes.

Detour





The Detour button is active only when there is an active route.



Selected distance is detoured from the current location.

Edit Route

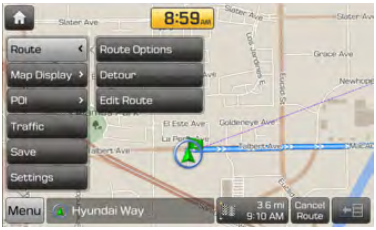

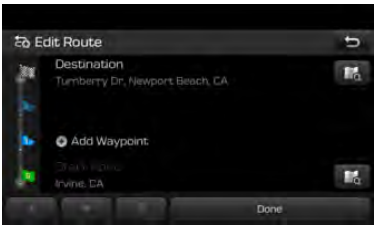

Select the Edit Route button to change the route. Refer to the Route > Editing Route section in the manual for more information. (page 5-28).

Map Display

Displays the direction of the map.
Select the N, or button.



Name	Description
1	Displays always shows the vehicle's direction as proceeding towards the top of the screen.
2	Displays always has north at the top of screen.
3	Shows the map in 3 dimentions.
4	Shows or hides buildings on the map.

Nearby POIs

Display nearby POIs on the map.


View Nearby POIs

Select the Menu button on the bottom of the left screen ▶ Select the POI button.




Select the button to set whether to show nearby POIs or not.
When categories are selected, they will appear on the map. (ex. Gas Stations)

The lists of nearby gas station are displayed.

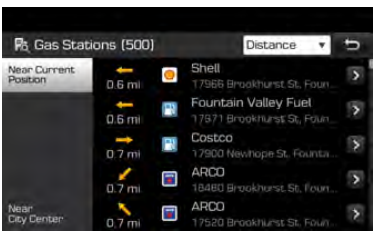

The list can be sorted to display in order of distance or name.

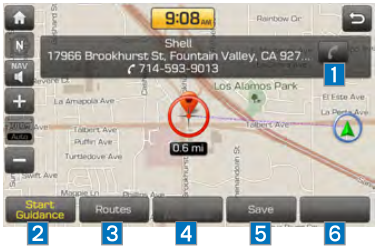

Name	Description
1	Call to the selected location. (Phone needs to be connected via Bluetooth)
2	Start the preferred navigation route to selected location.
3	Choose the preferred navigation route to selected location.
4	Set the location as a waypoint.
5	Save the location.
6	Search nearby POIs.

Destination Search

Places

You can enter POI Name, Address, or Coordinates that you wish to search by.

Press the NAV key. ▶ Select the Destination tab. ▶ Place or Address search bar.






Enter the POI Name, Address and Coordinates of the location you want in the input window above, and select the OK button.



Items that incude the keyword from the Previous Destination list will be recommended.

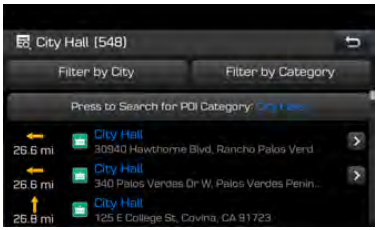


If you select a location from the search result list, it will bring you to the point.



If you select the Filter by City button on the search result screen, it will bring you to the City search screen where you can filter the search results by city names.



If you select the Filter by Category button from the search result screen, it will bring you to the POI Categories screen where you can filter the search results by POI Categories.

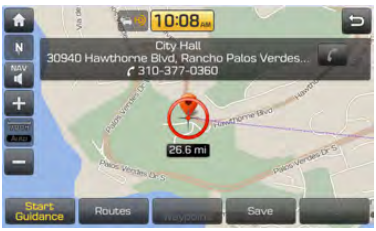

Once the destination has been identified either by POI name, address, or coordinates, the map screen will be displayed. From this screen you can set the destination or add a waypoint, or add the displayed destination to your address book.

Address

Set destination by address search.

Press the NAV key. ▶ Select the Destination tab. ▶ Address icon.




How to Search Address



Search criteria can be entered in any order. Example: State then City then Street then House No.

Name	Description
1	Select state to search.
2	Select a city before entering the street name. Addresses are searched only from the selected city.
3	Enter house number. If you don't know the house number, select Skip button.
4	Enter a street name. If same street names exist in other cities, the list of cities will be displayed.

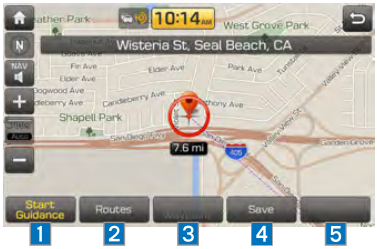

Enter the address to check the location information on the map.


Name	Description
1	Start the preferred navigation route to selected location.
2	Choose the preferred navigation route to selected location.
3	Set the location as a waypoint.
4	Save the location.
5	Search nearby POIs.

Previous Destinations

Select from previously inputted addresses and POI's.

Press the NAV key. ▶ Select the Destination tab. ▶ Previous Destinations icon.



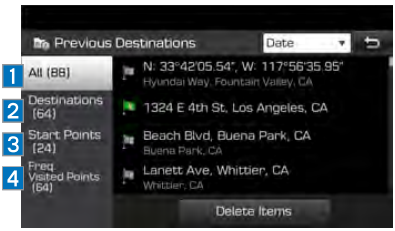

Arrange by all, latest destinations, latest searched places and latest departing places.

Arrange in order of date and name.


Name	Description
1	Display all destinations, departing places, and searched places.
2	Display previous destination places for route guidance.
3	Display previous departing places for route guidance.
4	Display previously searched places for route guidance. *i* But, not displayed when the searched places are set as destination.

Online Search


Press the NAV key. ▶ Select the Destination tab. ▶ Online Search icon.



Runs Online Search.

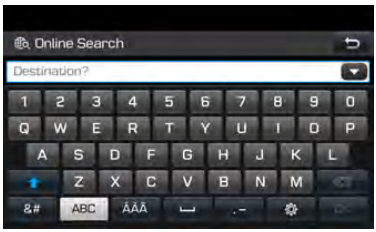


Enter the desired keywords and select the OK button.

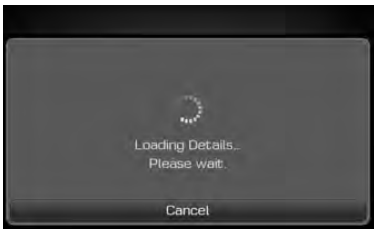

Searching is in progress.



If search successes, search results are displayed. Select one of the search result.

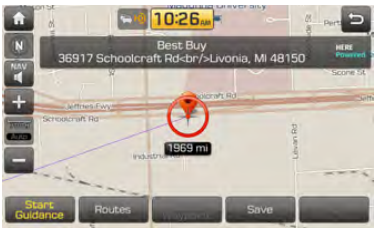

Select the Start Guidance button to start guidance.

If search or guidance fails, the connection error message is displayed as above. Please try again.

POI Categories

Press the NAV key. ▶ Select the Destination tab. ▶ POI Categories icon.






Select the desired item.



Select the desired item in the sub-categories.



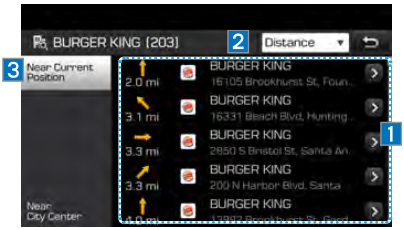


Name	Description
1	Select the desired destination among the searched items and add it as a way point.
2	Arrange in order of Distance and Name.
3	Arrange in order of Near Current Position, Near Destination, Along Route, Near Scroll Mark and Near City Center.

Gas Stations

Search for gas stations.

Press the NAV key. ▶ Select the Destination tab. ▶ Gas Stations icon.



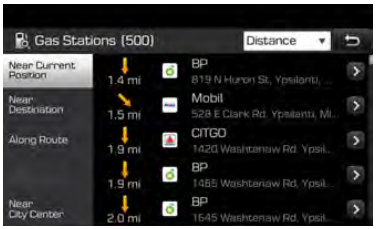


Select the desired destination among the searched items.

Restaurants

Search restaurants.

Press the NAV key. ▶ Select the Destination tab. ▶ Restaurants icon.



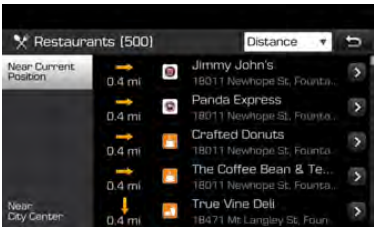

Select the desired destination among the searched items.

Emergency


Search emergency facilities.

Press the NAV key. ▶ Select the Destination tab. ▶ Emergency icon.





Check the current location information and select the desired item in the sub-menu(ex. Police Stations).

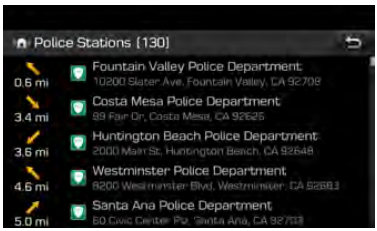


Select the desired destination among the searched items.

Address Book

Search the destination with the address book.


Press the NAV key. ▶ Select the Destination tab. ▶ Address Book icon.



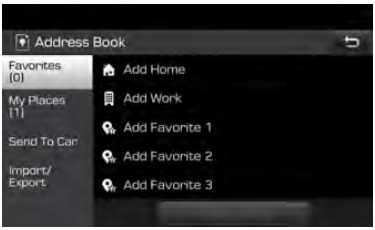


Select the desired group.

If you save addresses in the Favorites tab, you can set destinations easily by pressing the icons such as Go Home and Work at the bottom of the Destination menu.

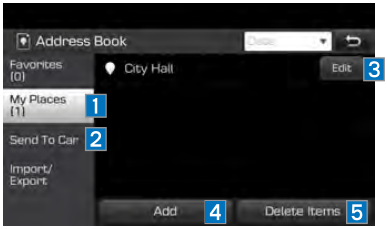

Name	Description
1	Select the desired destination from the searched items.
2	Select Send To Car in the Address Book menu.
3	Edit the destination.
4	Register a new destination.
5	Delete the desired item.

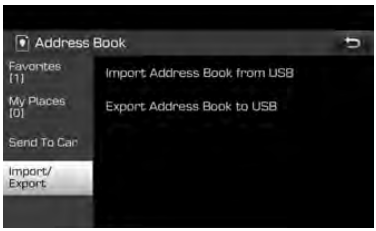



Information

- You can import or export your address book data by using a USB storage device. From the address book screen, touch Import/Export and select an option you want.


Coordinates

Press the NAV key. ▶ Select the Destination tab. ▶ Select the Coordinates to search by coordinates.

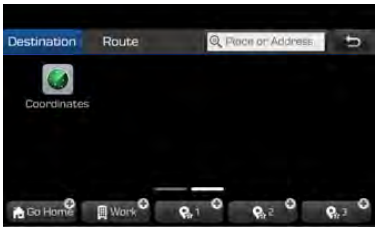

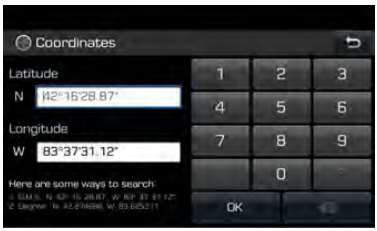

There are two ways to search by coordinates (D.M.S or Decimal degrees). After typing coordinates, select the OK button to search.

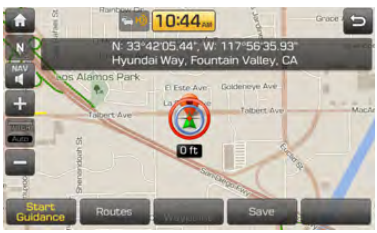

Select the Start Guidance button to start guidance.


Favorite places

Set the route using your favorite places.


Press the NAV key. ▶ Select the Destination tab. ▶ Select from favorite places.




On the button where locations are not registered, the ⊕ icon is displayed. When a location is registered, the ⊕ icon disappears and the buttons 1 to 3 are displayed as your favorite places.

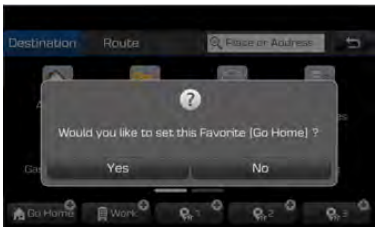

Select the Go Home button then select the Yes button to set the Favorite 'Go Home'.

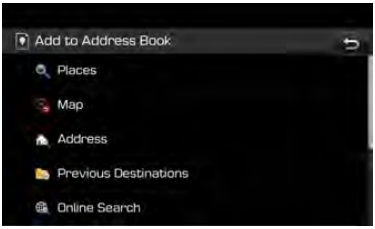


Work, Special 1, Special 2, and Special 3 can also be set as a Favorite using the same steps.

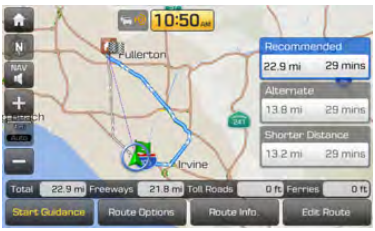

Pressing any of the Favorite Place buttons will start the route guidance to the saved Favorite address.


Route Setting

The route can be set after searching for a destination.

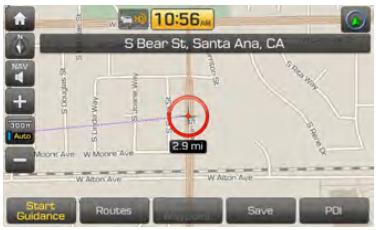

While the destination is set, the buttons Start Guidance, Routes, and Add Waypoint appear. Select the desired button to change a destination or add a waypoint.

Destination Setting

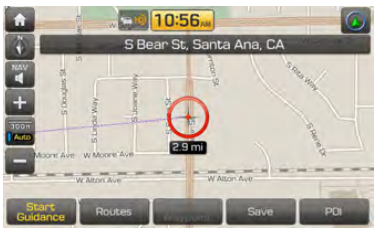

After searching the destination, select the Start Guidance button to set the location as a destination.

All Routes



Three routing options are displayed based on real time traffic information and traffic pattern information and shorter distance.


- Recommended: Select the best route based on combine real-time traffic information and traffic pattern data on the map.
- Alternate: Search roads other than the Recommended route.
- Shorter Distance: Select short distance, regardless of how fast or slow progress will be calculated.

Name	Description
1	Display total distance, travel time. Select the desired route.
2	Start the guidance with the route.
3	Change the route option.
4	You can check route information.
5	Edit the route.
6	Display total distance of the route.
7	Display length of freeway on the route.
8	Display length of toll road on the route.
9	Display length of Ferry route on the route.

Route Guidance

Show route guidance detailed information.

Route Guidance Screen

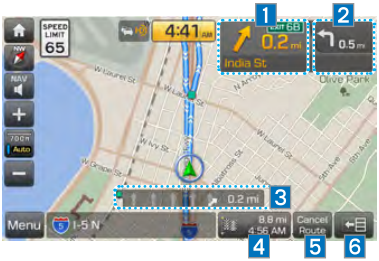

Name	Description
1	Displays the distance and direction to the first turn point.
2	Displays the distance and direction to the second turn point.
3	Displays the lane information at the current location. Display the recommended direction in white, travelable direction in white, and the non-travelable direction in grey.
4	Displays the distance to the destination and the estimated time of arrival. Press the button to check the detailed information. If no waypoint is set, you will see the remaining distance or estimated time of arrival in turn each time you click the button.
5	Cancel the route.
6	Displays the turn list.

Route


Canceling Route

Cancel the route.

Press the NAV key. ▶ Select the Route tab. ▶ Cancel Route icon.



Select the Cancel Route icon.

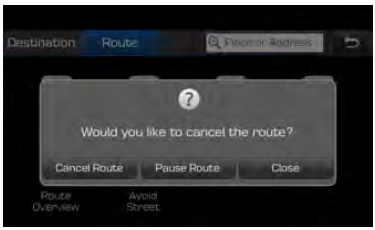

Select the Cancel Route button to cancel the route.

Route Options

Press the NAV key. ▶ Select the Route tab. ▶ Route Options icon.



Select the Route Options icon.



Determine the route options to guide the route.


Editing Route

Edit the current route.

Press the NAV key. ▶ Select the Route tab. ▶ Edit Route icon.



Select the Edit Route icon.

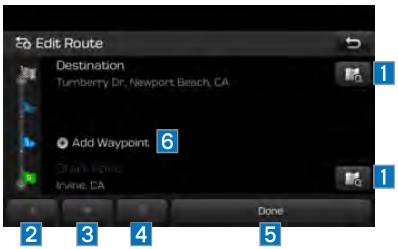

Name	Description
1	Display the selected point on the map screen.
2	Move the selected item up.
3	Move the selected item down.
4	Delete the selected item.
5	Select the button to finish editing.
6	Select the button to add an waypoint.



Add a waypoint through various searching methods.

Display Route Information

Press the NAV key. ▶ Select the Route tab. ▶ Route Info. icon.



Select the Route info. icon.



Check the information on the map. Select the desired item to see the map information.

Avoiding road

Select the Avoid Street button to avoid the street or road.



Check the desired item and select the Done button to finish.


Route Overview

Check the information on route including the distance, estimated time, toll fees, etc.

Press the NAV key. ▶ Select the Route tab. ▶ Route Overview icon.



Select the Route Overview icon.

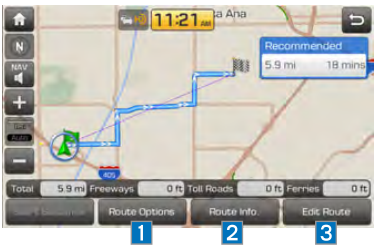

Name	Description
1	Change the search option.
2	You can check route information.
3	Edit the current route.

Avoid Street

Search new route by avoiding the selected street(s).

Press the NAV key. ▶ Select the Route tab. ▶ Avoid Street icon.



Select the Avoid Street icon.



Select the Done button to plan new route after selecting the street(s) that you want to avoid.

BD7
(미국·캐나다) 표준5



GENESIS G80

PHONE PROJECTION GUIDE



GENESIS

This manual applies to all GENESIS models and includes descriptions and explanations of optional as well as standard equipment. As a result, you may find material in this manual that does not apply to your specific vehicle.

What is Phone Projection?

You can securely access your smartphone while driving by using this feature. Various functions on your smartphone are displayed on the multimedia system so you can easily use them (finding directions, making a call, listening to music etc.).

With Phone Projection supported device connected, Phone Projection menu appears on the display. Available functions and operations may differ depending on the model.

For more information, visit the Phone Projection website.

- Android Auto: http://support.google.com/androidauto/
- Apple CarPlay: http://www.apple.com/ios/carplay/

Precautions

- Android Auto is a registered trademark of Google Inc.
- Apple CarPlay is a registered trademark of Apple Inc.
- Phone Projection will be unavailable if the phone OS is not the latest version or your phone is unable to be recognized due to a shutdown caused by a failure or defect in the device itself.
- Your phone may not be recognized if its battery is low. Charge your phone then try again.
- If your phone is shut down due to a defect in the device itself, reset your phone and try again.
- If you repeatedly connect and disconnect the USB cable on the device in a short period of time, your phone may malfunction. This can also cause a device failure.
- The device recognition time may differ depending on the device type and firmware/OS version.
- Using the USB cable that came with the phone is recommended. (Using a non-genuine product may cause noise or malfunction.)
- Normal operation is not guaranteed when you arbitrarily manipulate your phone while Phone Projection is active.
- Phone Projection may not operate normally due to mobile phone issues.
- Network charges may apply when using Phone Projection.
- You cannot run Apple CarPlay while making a call using Bluetooth.
- If the network signal strength is weak, some Phone Projection features may not work properly.

- The following problems may occur due to issues with your phone.

  [Android Auto]
  - Intermittent black screens appear when entering Android Auto.
  - Unable to differentiate between phones that support Android Auto and those do not.
  - Black screens appear in some areas of the screen due to phone or app errors.

  [Apple CarPlay]
  - Intermittent black screens appear when entering Apple CarPlay.
  - Black screens appear in some areas of the screen due to app errors when navigating between screens in Apple CarPlay.
  - Audio volume may not be adjusted depending on the status of the connected phone.

NOTICE


- If services do not work properly due to problems similar to the specified above, check your phone and if necessary, reconnect your phone after restarting.

CAUTION

- Use only applications that are compatible with phone projection. Using incompatible applications may cause problems for your system or smartphone.
- Only compatible applications will be displayed on the phone projection screen. You can also check compatible applications by visiting the following websites:
  - Apple CarPlay: https://www.apple.com/ios/carplay
  - Android Auto: https://www.android.com/auto

Using Phone Projection Features

1. With Android Auto, connect the USB cable provided by the mobile manufacturer. With Apple CarPlay, connect the USB cable provided by Apple.
2. On the Home or All Menus screen, select the Android Auto or Apple CarPlay icon.

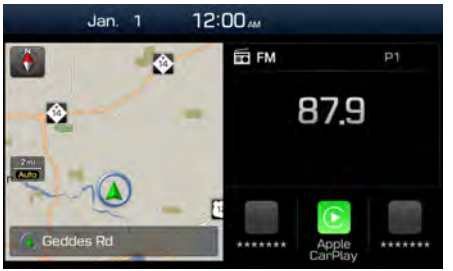

※ The actual Home screen in the vehicle may differ from the screen above.

3. You can use Phone Projection features, such as navigation, music and phone.

NOTICE

- Before connecting your mobile phone, check whether Phone Projection is set to ON in the Phone Projection Settings menu.
- After connecting the mobile phone, you must unlock your phone and accept the Disclaimers on your phone in order for Phone Projection to launch.
- The screens and features displayed on the multimedia system are subject to change depending on the policies of each company.

Android Auto

- Refer to the website below to view the list of countries that support Android Auto.
  https://www.android.com/auto/
- Bluetooth media features will be disabled when Android Auto is activated. You cannot use Bluetooth Media features such as Bluetooth Audio. If you want to use such features, remove the USB cable before use.
- Android Auto mode does not support the feature that enables you to search for music files by controlling the TUNE knob.
- If Android Auto is not activated even after a successful connection, check the following:
  - Phone Application status (Check if an error has occurred).
  - Check if Android Auto has been locked on your phone.
  - Check whether Android Auto is set to ON in the Phone Projection Settings menu.
- If Android Auto does not work normally even after a reconnection has been made, visit the Google website http://support.google.com/androidauto
- The screens and features displayed on the multimedia system are the same as what Google originally provide. The screens and features are subject to change according to the policy of Google Inc.

Apple CarPlay

- To view the available features, such as Apple CarPlay, Siri, and Maps, or countries that support the features, please go to: http://www.apple.com/ios/feature-availability/
- When Apple CarPlay is activated, you cannot use Bluetooth. If you want to use Bluetooth Phone/Audio, remove the USB cable and connect to Bluetooth before using them.
- Apple CarPlay mode does not support the feature that enables you to search for music files by controlling the TUNE knob.
- If Apple CarPlay is not activated even after a successful connection, check the following:
  - Check if Apple CarPlay is disabled in your iPhone's application settings.
  - Check whether Apple CarPlay is set to ON in the Phone Projection Settings menu.
- If Apple CarPlay does not work normally even after a reconnection has been made, visit the Apple website http://www.apple.com/ios/carplay/
- The screens and features displayed on the multimedia system are the same as what Apple originally provide. The screens and features are subject to change according to the policy of Apple Inc.

Using Steering Wheel Controls

Starting/Ending Voice Recognition

[]

- When the key is pressed quickly (less than 0.8 seconds),
  - When Apple CarPlay or Android Auto is not connected: Start multimedia system voice recognition (if equipped).
  - If Android Auto is connected, activates or ends Google voice recognition.
  - If Apple CarPlay is connected, activates or ends Apple CarPlay Siri recognition.
- When the key is pressed and held (over 0.8 seconds),
  - Multimedia system voice recognition operation status: End voice recognition (if equipped).
  - If Android Auto is connected, activates or ends Google voice recognition.
  - If Apple CarPlay is connected, activates Apple CarPlay Siri recognition.

Select mode [MODE]

Each time this is pressed, the mode is changed. Mode order is subject to change depending on the state of the Phone Projection connection and enabled features.

※ If the corresponding mode is disabled, the next mode will be enabled.

※ While running Phone Projection, you cannot operate features such as: USB, iPod, Bluetooth Audio.

Phone Projection Settings


On the Settings screen, select Phone Projection icon.



※ The actual Settings screen in the vehicle may differ from the screen above.

Information

- This setting is disabled when a device is connected to the vehicle's USB port.

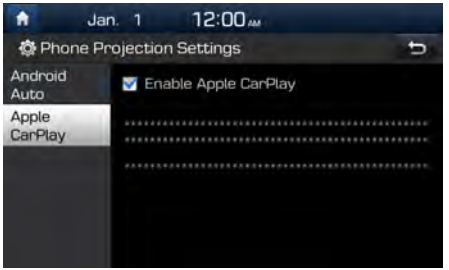

You can enable any Phone Projection feature that you would like to connect to or disable them in the Phone Projection Settings menu.

It is recommended you use a device installed with the latest OS version. Some multimedia system features may not be available while Phone Projection is active.

English

GENESIS G80

GUIDE DE PROJECTION DU TÉLÉPHONE

GENESIS

Ce guide s’applique àtous les modèes GENESIS et comprend des descriptions et des explications des éuipements en option et de séie. Il est par conséuent possible que vous trouviez dans ce guide des renseignements qui ne s’appliquent pas àvotre véicule spéifique.

Qu'est-ce que la Projection téléphonique ?

En utilisant cette fonction, vous pouvez accéder à votre smartphone tout en conduisant. Diverses fonctions de votre smartphone s'affichent sur le système multimédia pour faciliter leur utilisation (rechercher une direction, passer un appel, écouter de la musique, etc.).

Lorsqu'un appareil pris en charge par la Projection téléphonique est connecté, le menu Projection téléphonique s'affiche à l'écran. Les fonctions et opérations disponibles peuvent varier suivant le modèle utilisé.

Pour plus d'informations, visitez le site Web relatif à la Projection téléphonique.

- Android Auto: http://support.google.com/androidauto/
- Apple CarPlay: http://www.apple.com/ios/carplay/

Precautions

- Android Auto est une marque déposée de Google Inc.
- Apple CarPlay est une marque déposée d'Apple Inc.
- La Projection téléphonique n'est pas disponible si le système d'exploitation du téléphone n'est pas la dernière version en date ou si votre téléphone n'est pas reconnu en raison d'un arrêt causé par une défaillance ou un défaut de l'appareil.
- Il est possible que votre téléphone ne soit pas reconnu si sa batterie est faible. Rechargez votre téléphone et réessayez.
- Si votre téléphone est éteint en raison d'un défaut de l'appareil, réinitialisez-le et réessayez.
- Si vous branchez et débranchez à maintes reprises le câble USB de l'appareil dans un laps de temps réduit, votre téléphone peut présenter des dysfonctionnements. Cela peut également entraîner une défaillance de l'appareil.
- Le temps de reconnaissance de l'appareil peut varier selon le type d'appareil et la version du micrologiciel/système d'exploitation.
- Il est recommandé d'utiliser le câble USB fourni avec le téléphone. (L'utilisation d'un produit qui n'est pas d'origine peut entraîner un bruit anormal ou un dysfonctionnement.)
- Le fonctionnement normal n'est pas garanti lorsque vous manipulez arbitrairement votre téléphone alors que la Projection téléphonique est active.
- La Projection téléphonique peut présenter des dysfonctionnements dus aux problèmes du téléphone mobile.
- Des frais de réseau peuvent s'appliquer lors de l'utilisation de la Projection téléphonique.
- Vous ne pouvez pas utiliser Apple CarPlay lors d'un appel passé en Bluetooth.
- Si la réception du signal du réseau n'est pas bonne, certaines fonctions de la Projection téléphonique peuvent ne pas fonctionner correctement.

- Les dysfonctionnements suivants peuvent survenir en raison de problèmes avec votre téléphone.

[Android Auto]

- Apparition d'écrans noirs par intermittence lors de l'activation d'Android Auto ou de.
- Impossible de faire la différence entre les téléphones compatibles avec Android Auto et les téléphones non compatibles.
- Des écrans noirs s'affichent dans certaines zones de l'affichage en raison d'erreurs d'application ou du téléphone.

[Apple CarPlay]

- Apparition d'écrans noirs par intermittence lors de l'activation d'Apple CarPlay.
- Des écrans noirs s'affichent dans certaines zones de l'écran en raison d'erreurs d'application lors de la navigation entre les écrans dans Apple CarPlay.
- Le volume audio peut ne pas être réglé en fonction de l'état du téléphone connecté.

REMARQUE


- Si les services ne fonctionnent pas correctement en raison de problèmes similaires à ceux mentionnés ci-dessus, vérifiez votre téléphone et, si nécessaire, reconnectez-le après l'avoir redémarré.

MISE EN GARDE

- Utilisez seulement des applications compatibles avec la projection du téléphone. L'utilisation d'applications non compatibles peut occasionner des problèmes pour le système ou votre téléphone intelligent.
- Seules les applications compatibles s'affichent sur l'écran de projection du téléphone. Pour vérifier les applications compatibles, vous pouvez aussi consulter les sites Web suivants :
  - Apple CarPlay: https://www.apple.com/ios/carplay
  - Android Auto: https://www.android.com/auto

Utilisation des fonctions de la Projection téléphonique

1. Pour Android Auto, connectez le câble USB fourni par le fabricant du téléphone mobile. Pour Apple CarPlay, connectez le câble USB fourni par Apple.
2. Dans l'écran d'accueil ou l'écran Tous les menus, sélectionnez l'icône Android Auto ou Apple CarPlay.

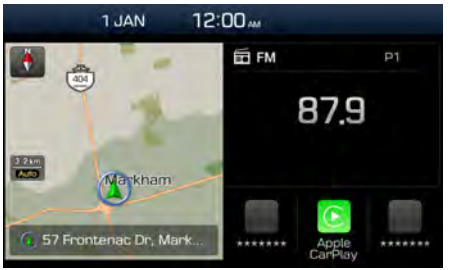

※ L'écran d'accueil réel du véhicule peut différer de l'écran présenté ci-dessus.

3. Vous pouvez utiliser les fonctions de la Projection téléphonique, comme la navigation, la musique et le téléphone.

REMARQUE

- Avant de connecter votre téléphone mobile, vérifiez que la Projection téléphonique est activée dans le menu Paramètres de la Projection téléphonique.
- Une fois le téléphone mobile connecté, vous devez le déverrouiller et accepter les avis de non-responsabilité sur l'appareil pour pouvoir lancer la Projection téléphonique.
- Les écrans et fonctions affi chés sur le système multimédia sont sujets à modification en fonction de la politique de chaque entreprise.

Android Auto

- Reportez-vous au site Web ci-dessous pour voir la liste des pays qui prennent en charge Android Auto. https://www.android.com/auto/
- Les fonctions Média Bluetooth sont désactivées lors de l'activation d'Android Auto. Vous ne pouvez pas utiliser les fonctions Média Bluetooth, telles que Audio Bluetooth. Si vous souhaitez utiliser ces fonctions, débranchez le câble USB.
- Le mode Android Auto ne prend pas en charge la fonction vous permettant de rechercher des fichiers musicaux à l'aide du bouton TUNE.
- Si Android Auto n'est pas activé, même après une connexion réussie, vérifiez les points suivants :
  - État des applications du téléphone (vérifiez la présence d'une erreur)
  - Vérifiez qu'Android Auto a été verrouillé sur votre téléphone.
  - Vérifiez si Android Auto est activé dans le menu Paramètres de la Projection téléphonique.
- Si Android Auto ne fonctionne pas normalement, même après une reconnexion, visitez le site Web de Google à l'adresse http://support.google.com/androidauto
- Les écrans et fonctions affichés sur le système multimédia sont les mêmes que ceux fournis par Google à l'origine. Les écrans et fonctions sont sujets à modification selon la politique de Google Inc.

Apple CarPlay

- Pour consulter les fonctionnalités disponibles, telles que Apple CarPlay, Siri et Maps, ou les pays qui prennent en charge ces fonctionnalités, rendez-vous sur : http://www.apple.com/ios/feature-availability/
- Quand Apple CarPlay est activé, vous ne pouvez pas utiliser le Bluetooth. Si vous souhaitez utiliser la fonction Téléphone/Audio Bluetooth, débranchez le câble USB et connectez-vous au Bluetooth avant de l'utiliser.
- Le mode Apple CarPlay ne prend pas en charge la fonction vous permettant de rechercher des fichiers musicaux à l'aide du bouton TUNE.
- Si Apple CarPlay n'est pas activé, même après une connexion réussie, vérifiez les points suivants :
  - Vérifiez si Apple CarPlay est désactivé dans les paramètres d'application de votre iPhone.
  - Vérifiez si Apple CarPlay est activé dans le menu Paramètres de la Projection téléphonique.
- Si Apple CarPlay ne fonctionne pas normalement, même après une reconnexion, visitez le site Web d'Apple à l'adresse http://www.apple.com/ios/carplay/
- Les écrans et fonctions affichés sur le système multimédia sont les mêmes que ceux fournis par Apple à l'origine. Les écrans et fonctions sont sujets à modification selon la politique d'Apple Inc.

Utilisation des commandes au volant

Activation/désactivation de la reconnaissance vocale **[**  **]**

- Lorsque la touche est enfoncée brièvement (moins de 0,8 seconde),
  - Si Apple CarPlay ou Android Auto n'est pas connecté, active la reconnaissance vocale du système multimédia (si équipé)
  - Si Android Auto est connecté, active/désactive la reconnaissance vocale Google.
  - Si Apple CarPlay est connecté, active ou désactive la reconnaissance d'Apple CarPlay Siri.
- Lorsque la touche est enfoncée et maintenue (plus de 0,8 seconde),
  - État de fonctionnement de la reconnaissance vocale du système multimédia : désactive la reconnaissance vocale (si équipé)
  - Si Android Auto est connecté, active/désactive la reconnaissance vocale Google.
  - Si Apple CarPlay est connecté, active la reconnaissance d'Apple CarPlay Siri.

Sélection du mode [MODE]

Chaque pression sur ce bouton entraîne un changement du mode.

L'ordre des modes est sujet à modification en fonction de l'état de la connexion de la Projection téléphonique et des fonctions activées.

※ Si le mode correspondant est désactivé, le mode suivant est alors activé.

※ Lorsque la Projection téléphonique fonctionne, les fonctions suivantes ne sont pas disponibles : USB, iPod, Audio Bluetooth

Règlages de projection du téléphone


Dans l'écran Paramètres, sélectionnez l'icône Projection du téléphone.



※ L'écran Paramètres réel du véhicule peut différer de l'écran présenté ci-dessus.

Information

- Ce réglage est désactivé lorsqu'un appareil est connecté au port USB du véhicule.

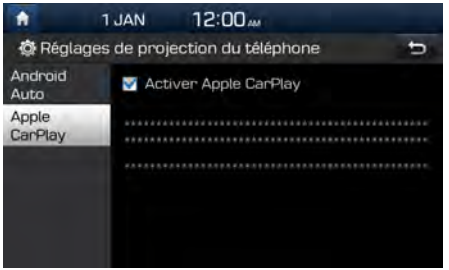

Vous pouvez activer n'importe quelle fonction de la Projection téléphonique à laquelle vous souhaitez vous connecter ou la désactiver dans le menu Paramètres de la Projection téléphonique.

Il est recommandé d'utiliser un appareil disposant de la dernière version en date du système d'exploitation. Certaines fonctions du système multimédia peuvent être indisponibles lorsque la Projection téléphonique est activée.