


Citroen Berlingo (2008 – 2011) – fuse box diagram

Year of production: 2008, 2009, 2010, 2011

Fascia fuse box

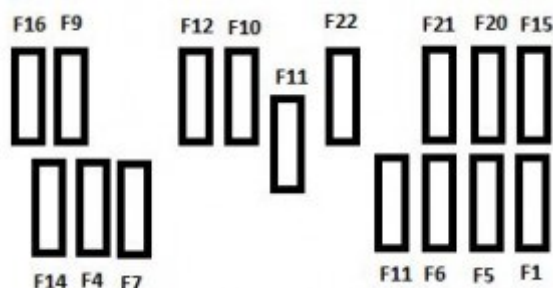


Citroen Berlingo First – fuse box – instrument

panel

Fuse	Ampere rating [A]	Function
1	15	Rear wiper
4	20	Multi-function display – Instrument panel – Audio equipment – Steering wheel controls
5	—	Not used
6	10	Diagnostic socket
7	—	Not used
9	30	Heated seats
10	40	Rear windows and mirrors demisting
11	—	Not used
12	30	Front electric windows
14	10	Engine fuse box – Steering wheel controls
15	15	Instrument panel – Multi-function display – Audio equipment
16	30	Locking/unlocking controls for doors, bonnet and boot
20	10	Right-hand brake light
21	15	Left-hand brake light
22	20	Front courtesy light – Map reading light – Lighter – Electric mirror

Engine compartment fuse box

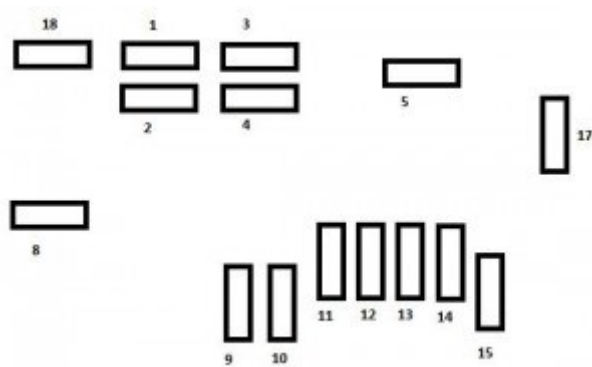

Citroen Berlingo First – fuse box – engine

compartment

To gain access to the box in the engine compartment (next to the battery), unclip the cover. After carrying out work, close the cover very carefully.

Fuse	Ampere rating [A]	Functions
1	10	Pre-heat unit (diesel) – Brake and clutch switches – Reversing lights
2	15	Fuel pump
3	10	ABS control unit
4	10	Engine control unit
5	—	Not used
6	15	Front fog lamps
7	20	Headlamp wash pump
8	20	Fan assembly relay – Engine control unit
9	15	Left-hand dipped beam
10	15	Right-hand dipped beam
11	10	Left-hand main beam
12	10	Right-hand main beam
13	15	Horn.
14	10	Front and rear windscreen wash pumps
15	30	Oxygen sensor – Air flow sensor
16	30	Air pump relay
17	30	Front windscreen wiper
18	40	Air conditioning fan

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market.