


Stop Light

From Power Source System (See Page 54)

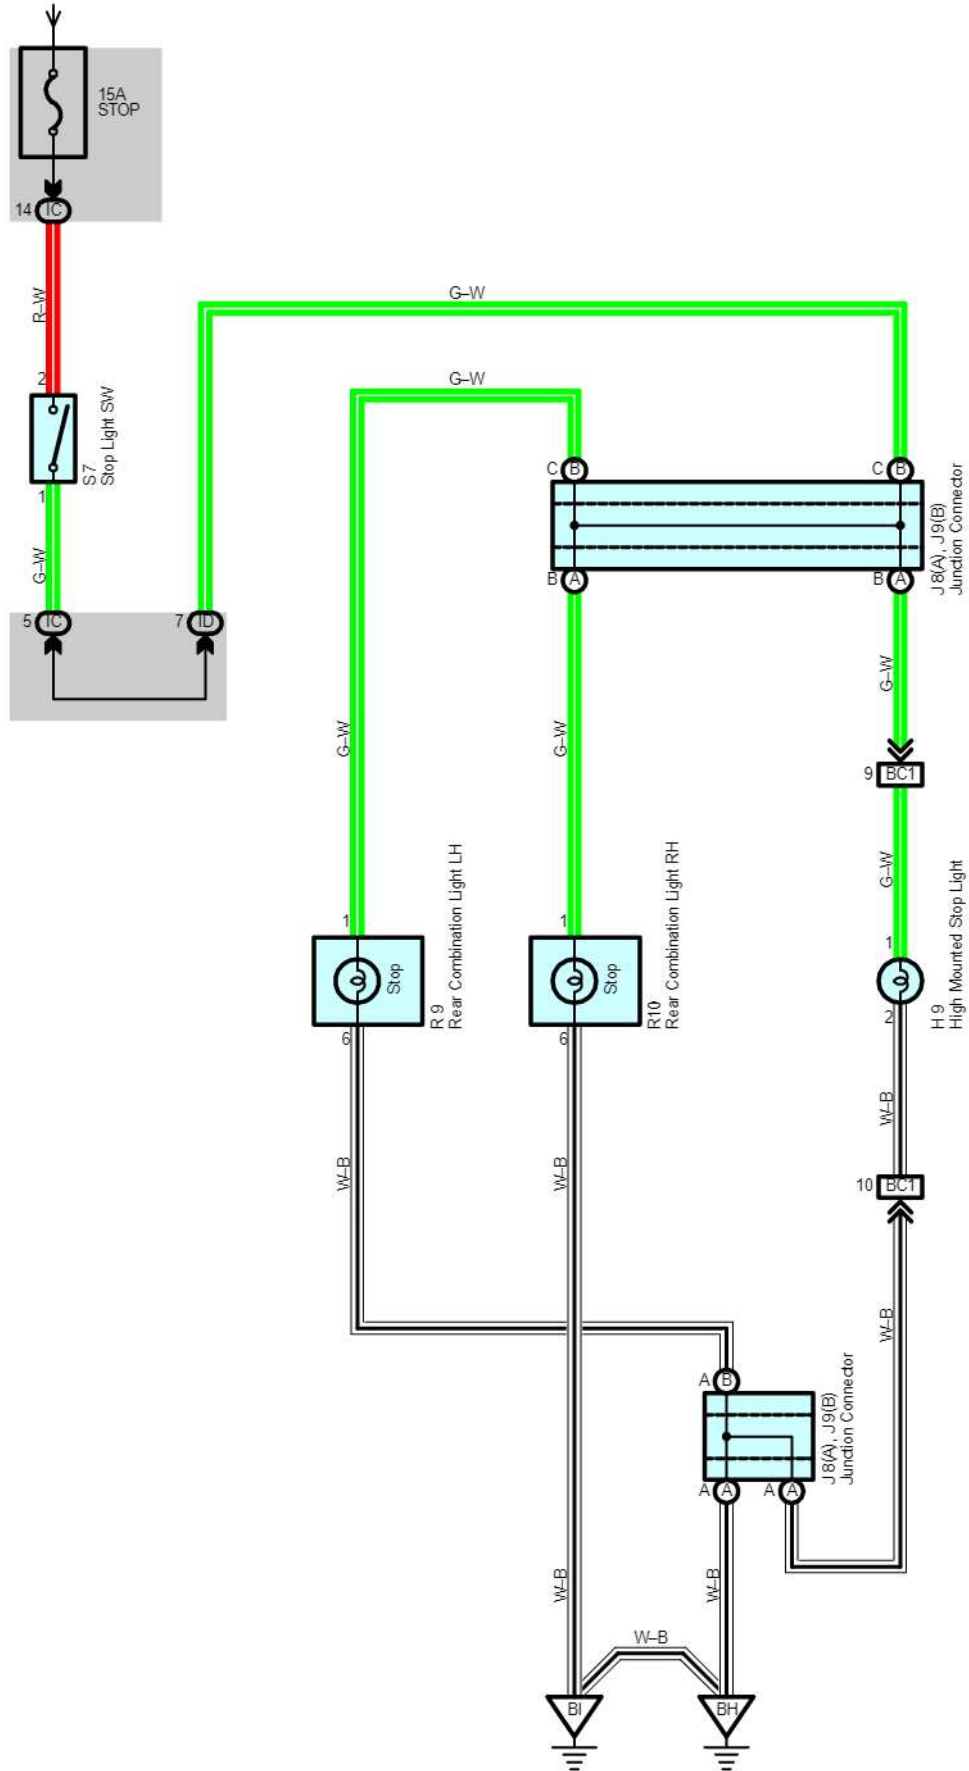

Service Hints

S7 Stop Light SW

2-1 : Closed with the brake pedal depressed

: Parts Location

Code		See Page		Code		See Page		Code		See Page	
H9		40		J9	B	40		R10		41	
J8	A	40		R9		41		S7		39	

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IC	25	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
ID	25	Floor Wire and Instrument Panel J/B (Lower Finish Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BC1	50	Back Door No.1 Wire and Floor Wire (Left Quarter Panel)

: Ground Points

Code	See Page	Ground Points Location
BH	50	Left Quarter Panel
BI	50	Right Quarter Panel