
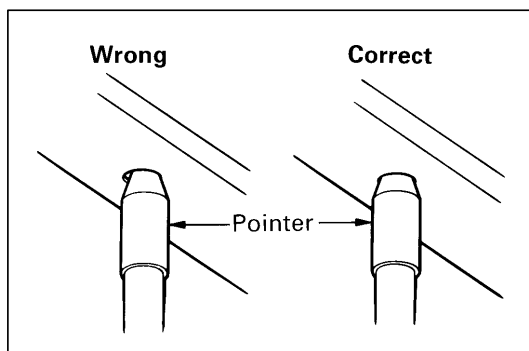
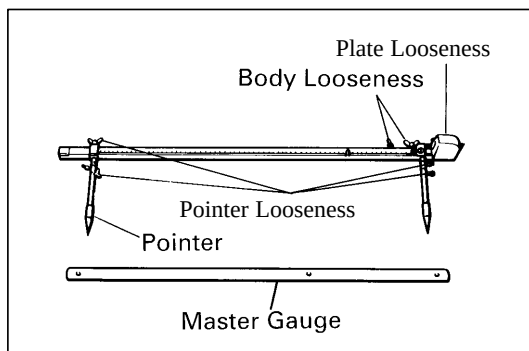
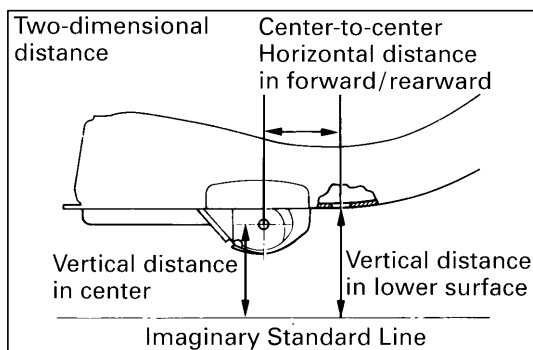


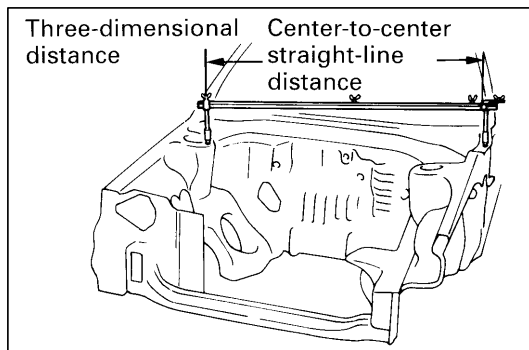

Front Spring Support Inner Hole

GENERAL INFORMATION

1. BASIC DIMENSIONS

- (a) There are two types of dimensions in the diagram.
(Three-dimensional distance)

- Straight-line distance between the centers of two measuring points.

(Two-dimensional distance)

- Horizontal distance in forward/rearward between the centers of two measuring points.
 - The height from an imaginary standard line.
- (b) Incases in which only one dimension is given, left and right are symmetrical.
- (c) The dimensions in the following drawing indicate actual distance. Therefore, please use the dimensions as a reference.

2. MEASURING

- (a) Basically, all measurements are to be done with a tracking gauge. For portions where it is not possible to use a tracking gauge, a tape measure should be used.
- (b) Use only a tracking gauge that has no looseness in the body, measuring plate, or pointers.

HINT:


1. The height of the left and right pointers must be equal.
2. Always calibrate the tracking gauge before measuring or after adjusting the pointer height.
3. Take care not to drop the tracking gauge or otherwise shock it.
4. Confirm that the pointers are securely in the holes.

- (c) When using a tape measure, avoid twists and bends in the tape.
- (d) When tracking a diagonal measurement from the front spring support inner hole to the suspension member upper rear installation hole, measure along the front spring support panel surface.

BODY DIMENSION DRAWINGS

ENGINE COMPARTMENT

(Three-Dimensional Distance)

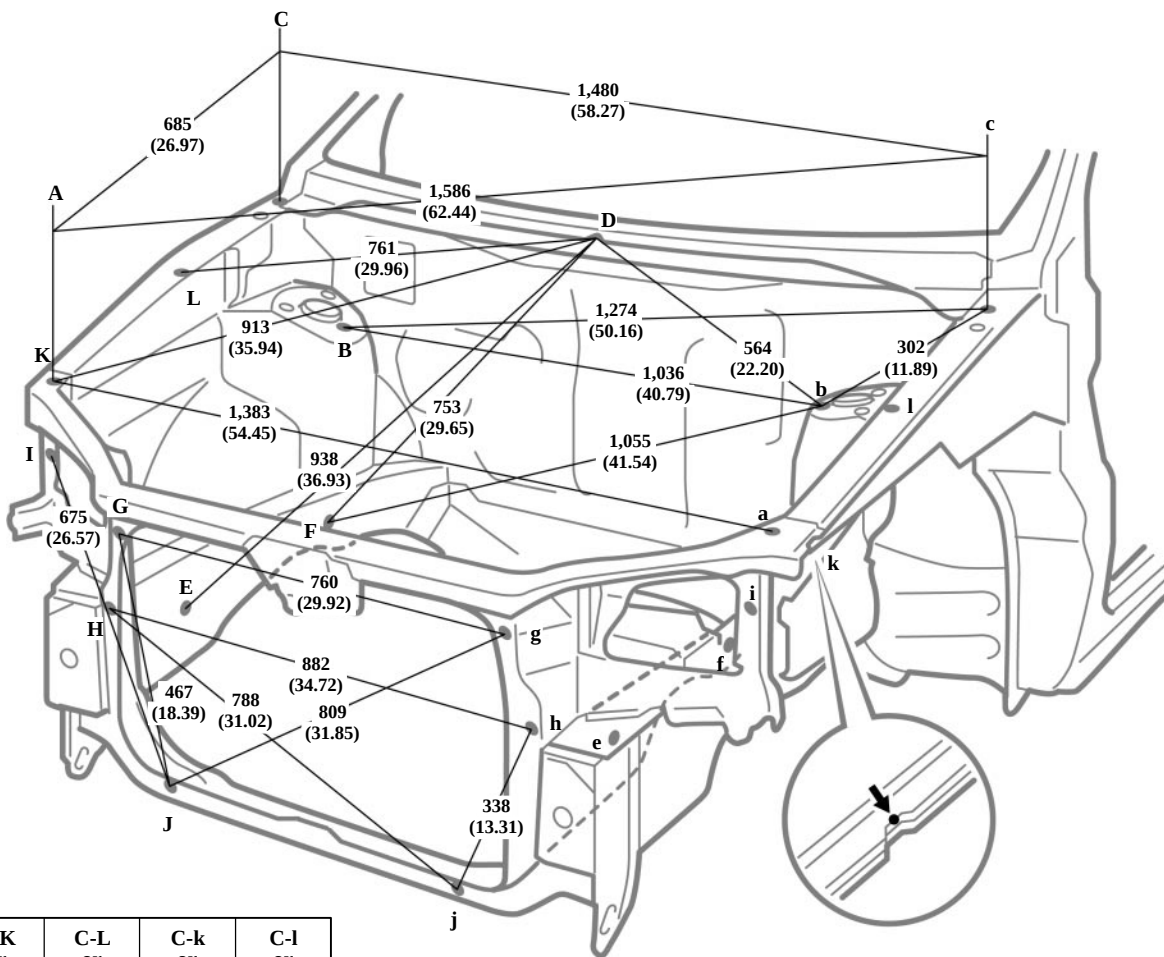

K-k	L-l	C-K or c-k	C-L or c-l	C-k or c-K	C-l or c-L
1,519 (59.80)	1,439 (56.65)	674 (26.54)	335 (13.19)	1,644 (64.72)	1,497 (58.94)


HINT: For symbols, capital letters indicate right side of vehicle, small letters indicate left side of vehicle (Seen from rear).

mm (in.)

Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Front fender installation nut	6 (0.24) nut	G, g	Radiator support standard hole	10 (0.39)
B, b	Front spring support hole-inner	11 (0.43)	H, h	Radiator support standard hole	10 (0.39)
C, c	Hood hinge installation nut-rear	8 (0.31) nut	I, i	Radiator support standard hole	10 (0.39)
D	Cowl top panel vehicle center mark	3 (0.12) R	J, j	Front crossmember standard hole	12 (0.47)
E, e	Front side member standard hole	13 (0.51)	K, k	Front fender apron cut-out portion	—
F, f	Front side member standard hole	17 (0.67)	L, l	Front fender installation nut	6 (0.24) nut

BODY OPENING AREAS (Side View: Rear)

(Three-Dimensional Distance)

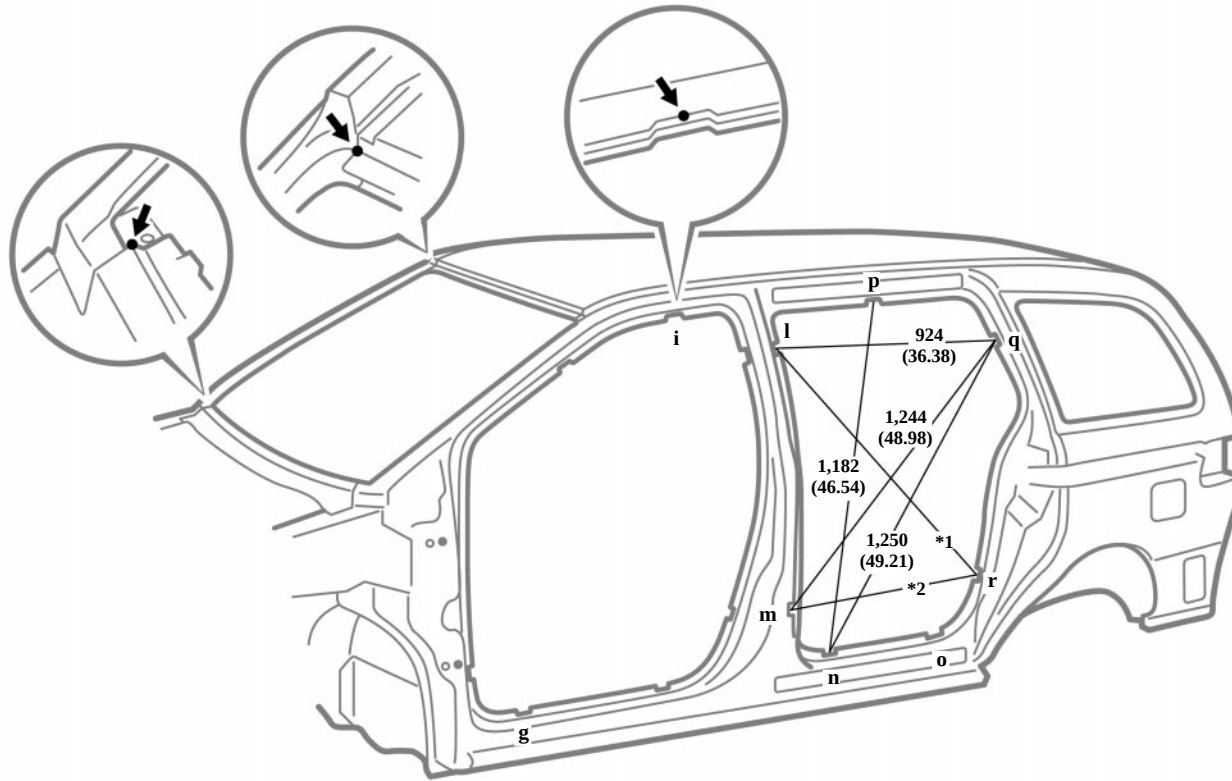

*1	
L-R	l-r
1,138 (44.80)	1,136 (44.72)

*2	
M-R	m-r
757 (29.80)	755 (29.72)

HINT: For symbols, capital letters indicate right side of vehicle, small letters indicate left side of vehicle (Seen from rear).

Vehicle Dimensions Left ↔ Right

L-l	M-m	N-n	O-o	P-p	Q-q	R-r
1,381 (54.37)	1,621 (63.82)	1,610 (63.39)	1,610 (63.39)	1,240 (48.82)	1,392 (54.80)	1,626 (64.02)


G-o or g-O	I-p or i-P	L-q or l-Q	L-r	l-R	M-r	m-R	N-p or n-P	O-q or o-Q
2,192 (86.30)	1,512 (59.53)	1,666 (65.59)	1,881 (74.06)	1,881 (74.06)	1,790 (70.47)	1,791 (70.51)	1,842 (72.52)	1,816 (71.50)

mm (in.)

Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
G, g	Rocker panel assembly mark	—	O, o	Rocker panel assembly mark	—
I, i	Roof side rail assembly mark	—	P, p	Roof side rail assembly mark	—
L, l	Center body pillar assembly mark	—	Q, q	Quarter panel assembly mark	—
M, m	Center body pillar assembly mark	—	R, r	Quarter panel assembly mark	—
N, n	Rocker panel assembly mark	—	—	—	—

BODY OPENING AREAS (Rear View)

(Three-Dimensional Distance)

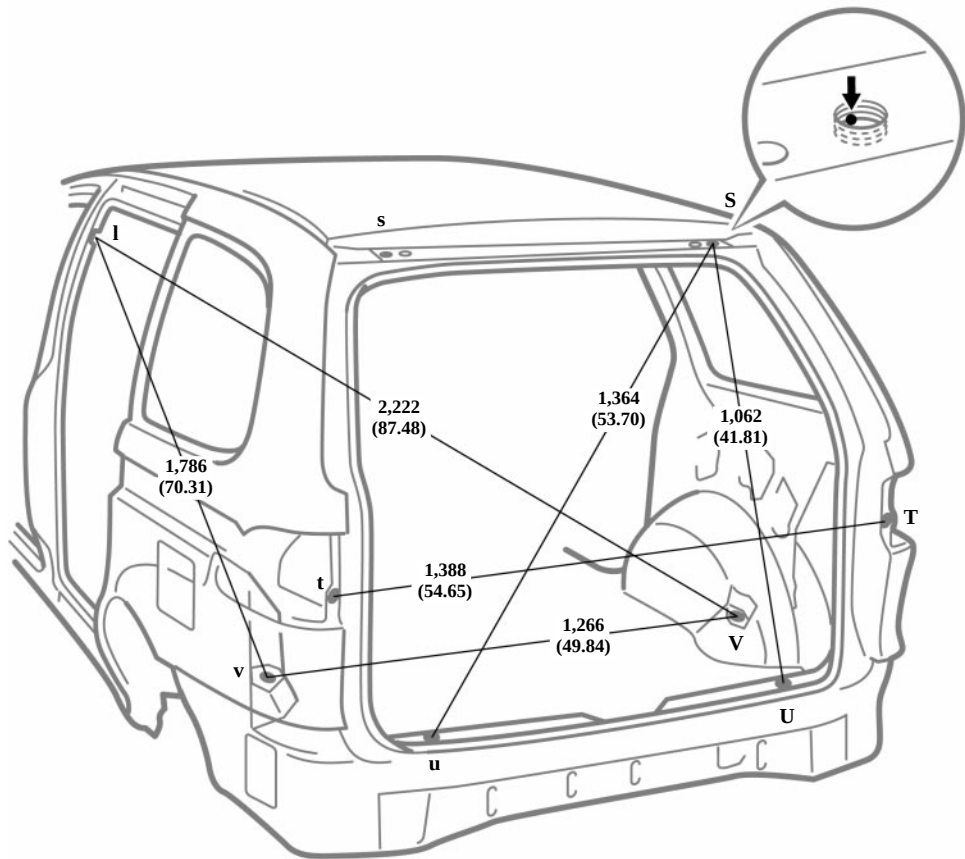


HINT: For symbols, capital letters indicate right side of vehicle, small letters indicate left side of vehicle (Seen from rear).

mm (in.)

Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
L, l	Center body pillar assembly mark	—	U, u	Rear floor finish plate installation hole	8.5 (0.335)
S, s	Back door hinge installation hole-outer	11 (0.43)	V, v	Shock absorber installation hole	16 (0.63)
T, t	Quarter panel standard hole	10 (0.39)	—	—	—

BODY OPENING AREAS (Side View: Front)

(Three-Dimensional Distance)

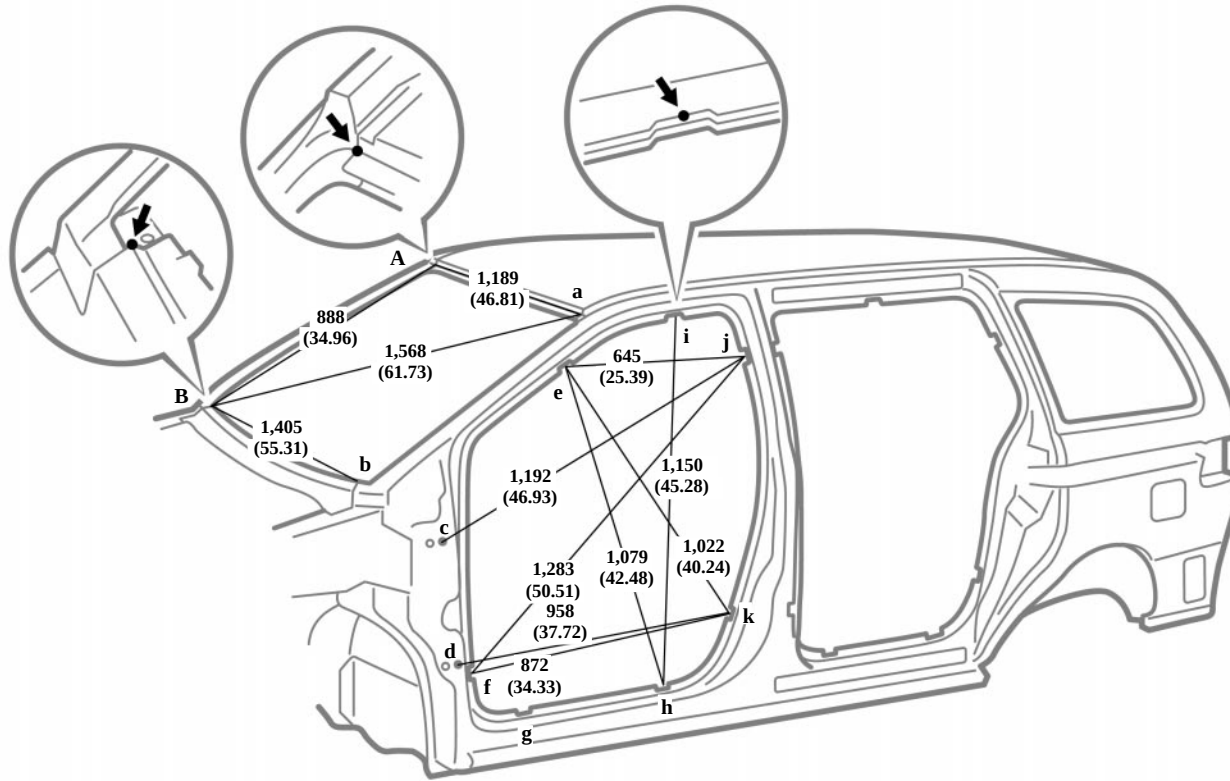

HINT: For symbols, capital letters indicate right side of vehicle, small letters indicate left side of vehicle (Seen from rear).

Vehicle Dimensions Left ↔ Right

E-e	F-f	G-g	H-h	I-i	J-j	K-k
1,359 (53.50)	1,535 (60.43)	1,537 (60.51)	1,546 (60.87)	1,260 (49.61)	1,404 (55.28)	1,559 (61.38)


E-f or e-F	E-h or e-H	E-j or e-J	F-j or f-J	F-k or f-K	H-i or h-I	J-k or j-K
1,708 (67.24)	1,807 (71.14)	1,525 (60.04)	1,950 (76.77)	1,776 (69.92)	1,808 (71.18)	1,710 (67.32)

mm (in.)


Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Roof panel/Front body pillar adjoining portion	—	G, g	Rocker panel assembly mark	—
B, b	Cowl top panel/Front body pillar adjoining portion	—	H, h	Rocker panel assembly mark	—
C, c	Front door hinge installation nut-rear	8 (0.31) nut	I, i	Roof side rail assembly mark	—
D, d	Front door hinge installation nut-rear	8 (0.31) nut	J, j	Center body pillar assembly mark	—
E, e	Front body pillar assembly mark	—	K, k	Cneter body pillar assembly mark	—
F, f	Front body pillar assembly mark	—	—	—	—

FRONT FRAME

(Three-Dimensional Distance)

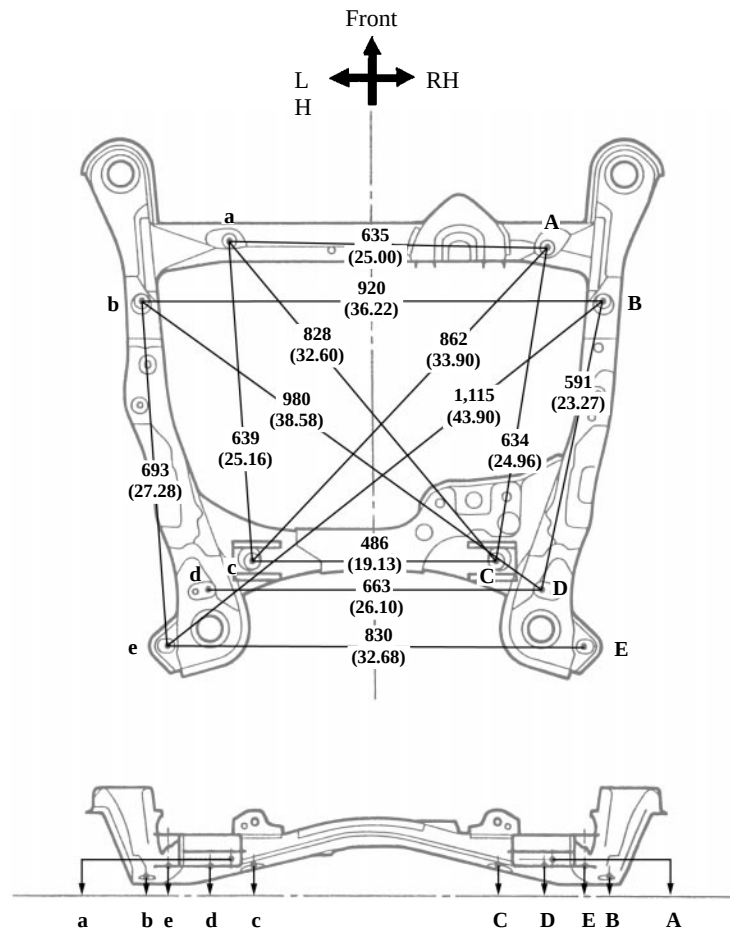

(Two-Dimensional Distance)


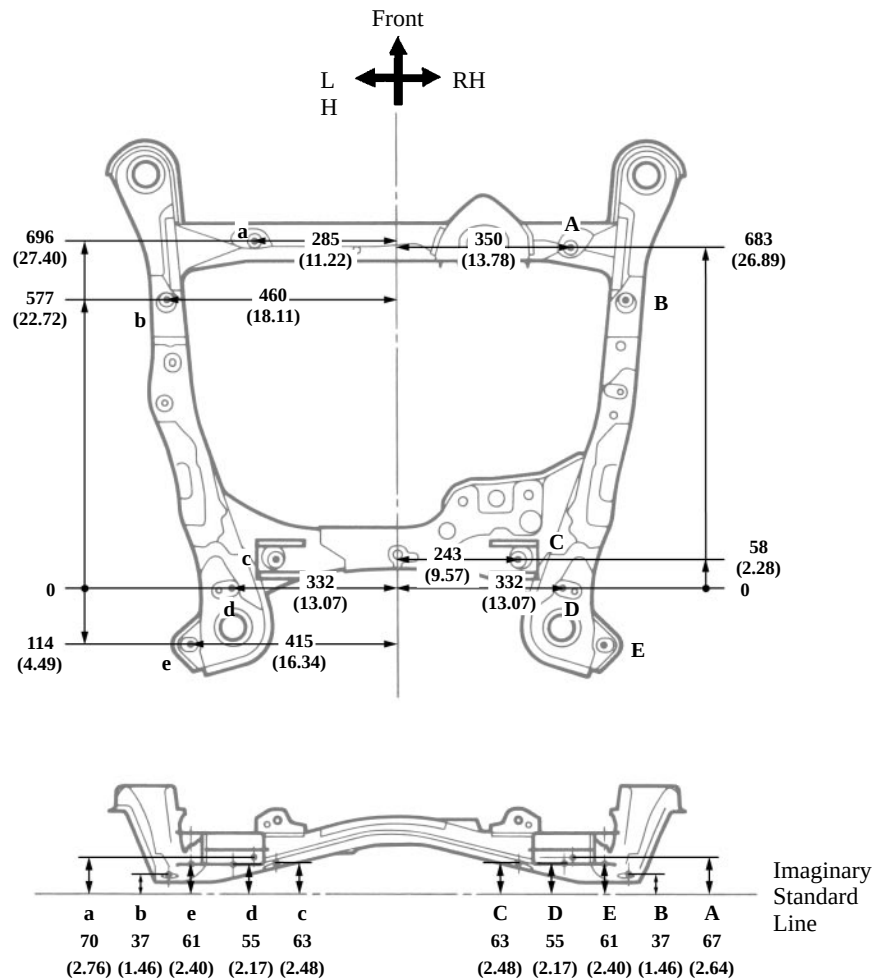


mm (in.)

Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Front frame standard hole	13 (0.51)	D, d	Front frame standard hole	13 (0.51)
B, b	Front frame standard hole	13 (0.51)	E, e	Lower control link installation hole - lower	15 (0.59)
C, c	Front frame standard hole	13 (0.51)	—	—	—

UNDER BODY



(Three-Dimensional Distance)

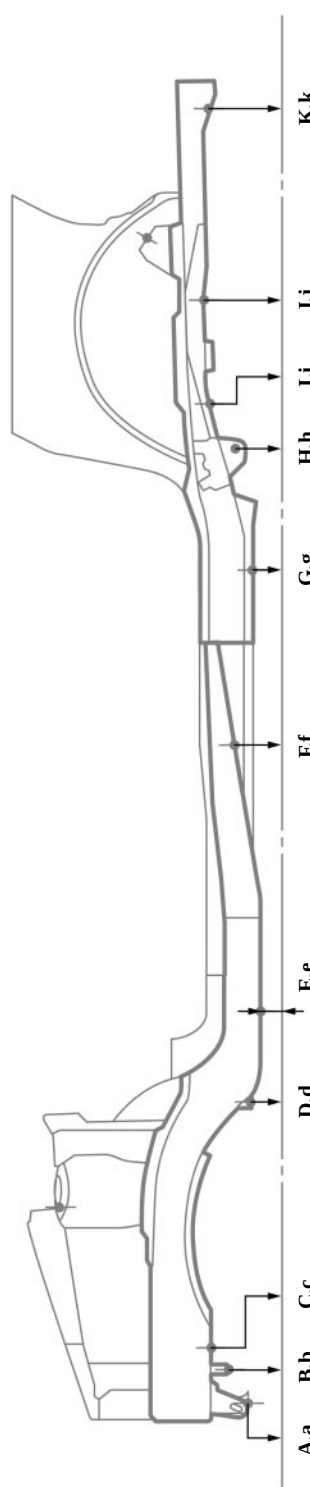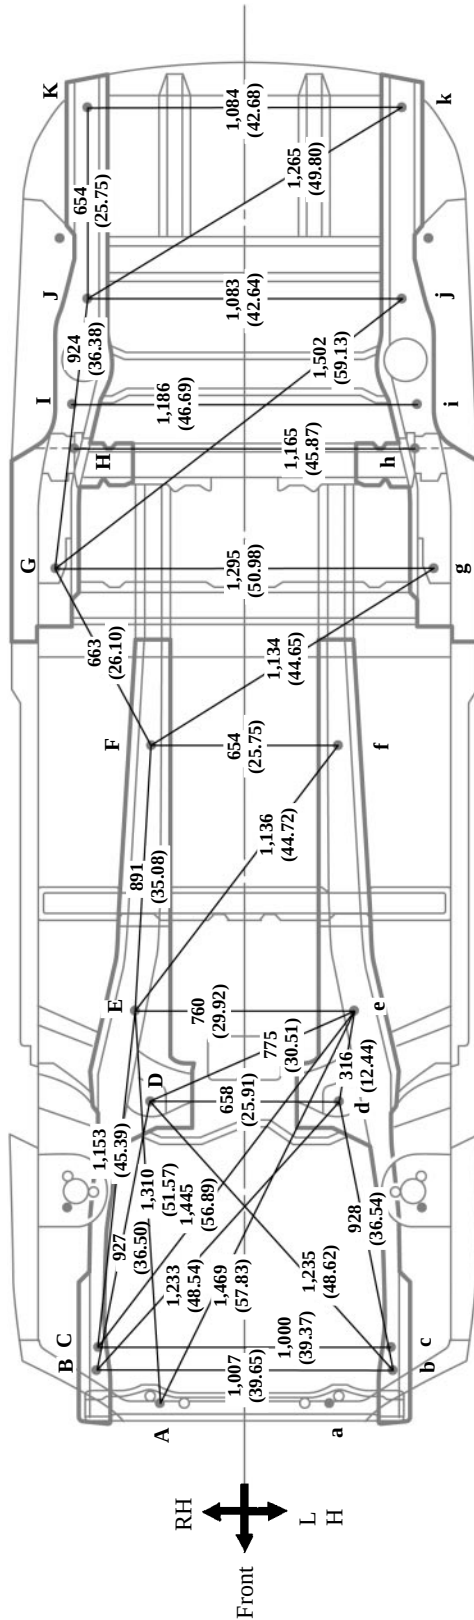

mm (in.)

Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Front crossmember standard hole	10 (0.39)	G, g	Rear floor side member standard hole	18 (0.71)
B, b	Front frame installation nut	14 (0.55) nut	H, h	Rear suspension arm installation hole-inner	13 (0.51)
C, c	Front side member standard hole	18 (0.71)	I, i	Rear floor side member standard hole	18 (0.71)
D, d	Front frame installation nut	14 (0.55) nut	J, j	Rear floor side member standard hole	18 (0.71)
E, e	Front side member standard hole	18 (0.71)	K, k	Rear floor side member standard hole	15 (0.59)
F, f	Front floor under reinforcement standard hole	18 (0.71)	—	—	—

(Two-Dimensional Distance)

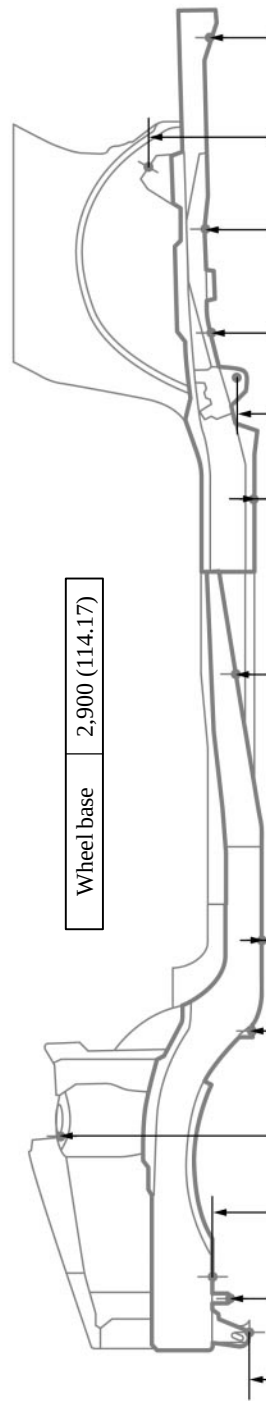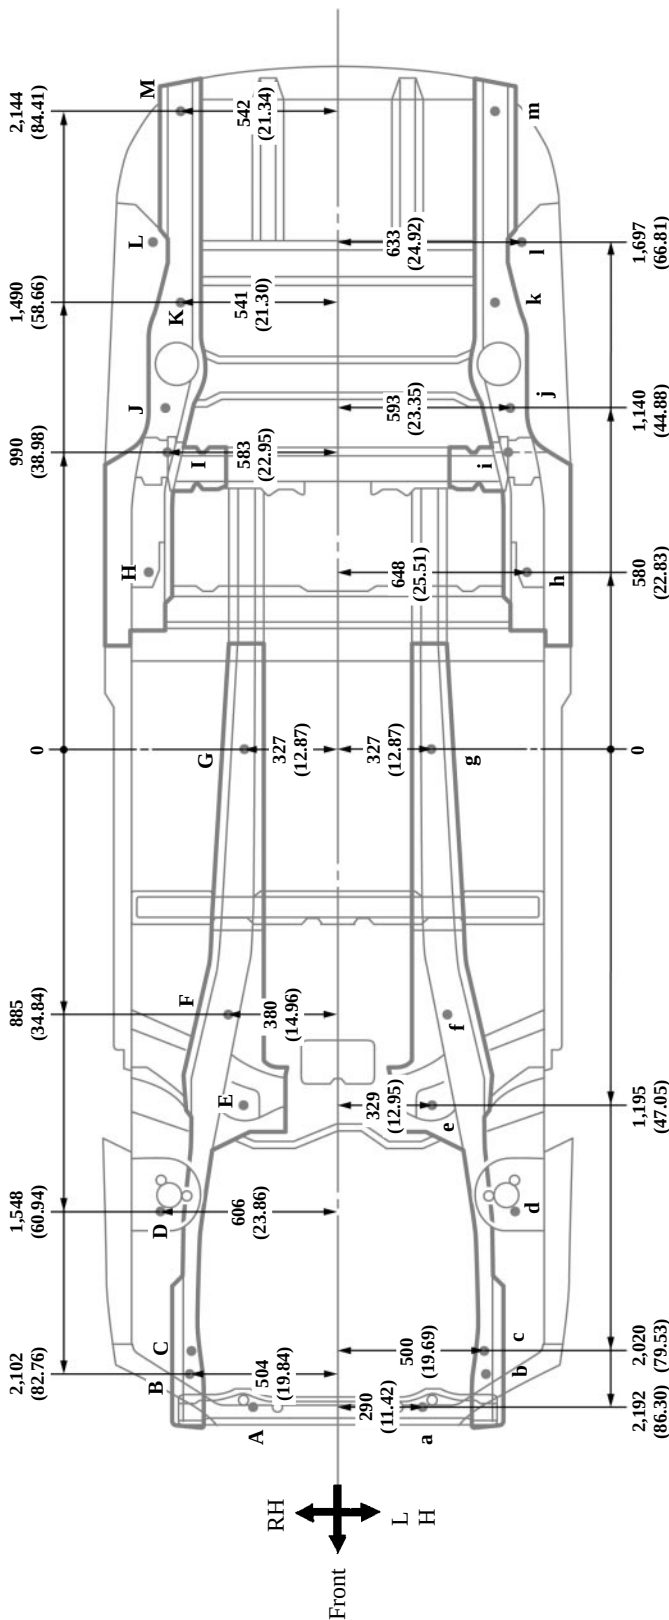

Symbol											Imaginary Standard Line mm (in.)
	Name					Hole dia.		Symbol	Name		
A, a	Front crossmember standard hole					10 (0.39)		H, h	Rear floor side member standard hole		18 (0.71)
B, b	Front frame installation nut					14 (0.55) nut		I, i	Rear suspension arm installation hole-inner		13 (0.51)
C, c	Front side member standard hole					18 (0.71)		J, j	Rear floor side member standard hole		18 (0.71)
D, d	Front spring support hole outer-front					11 (0.43)		K, k	Rear floor side member standard hole		18 (0.71)
E, e	Front frame installation nut					14 (0.55) nut		L, l	Shock absorber installation hole		16 (0.63)
F, f	Front side member standard hole					18 (0.71)		M, m	Rear floor side member standard hole		15 (0.59)
G, g	Front floor under reinforcement standard hole					18 (0.71)		—	—		—