

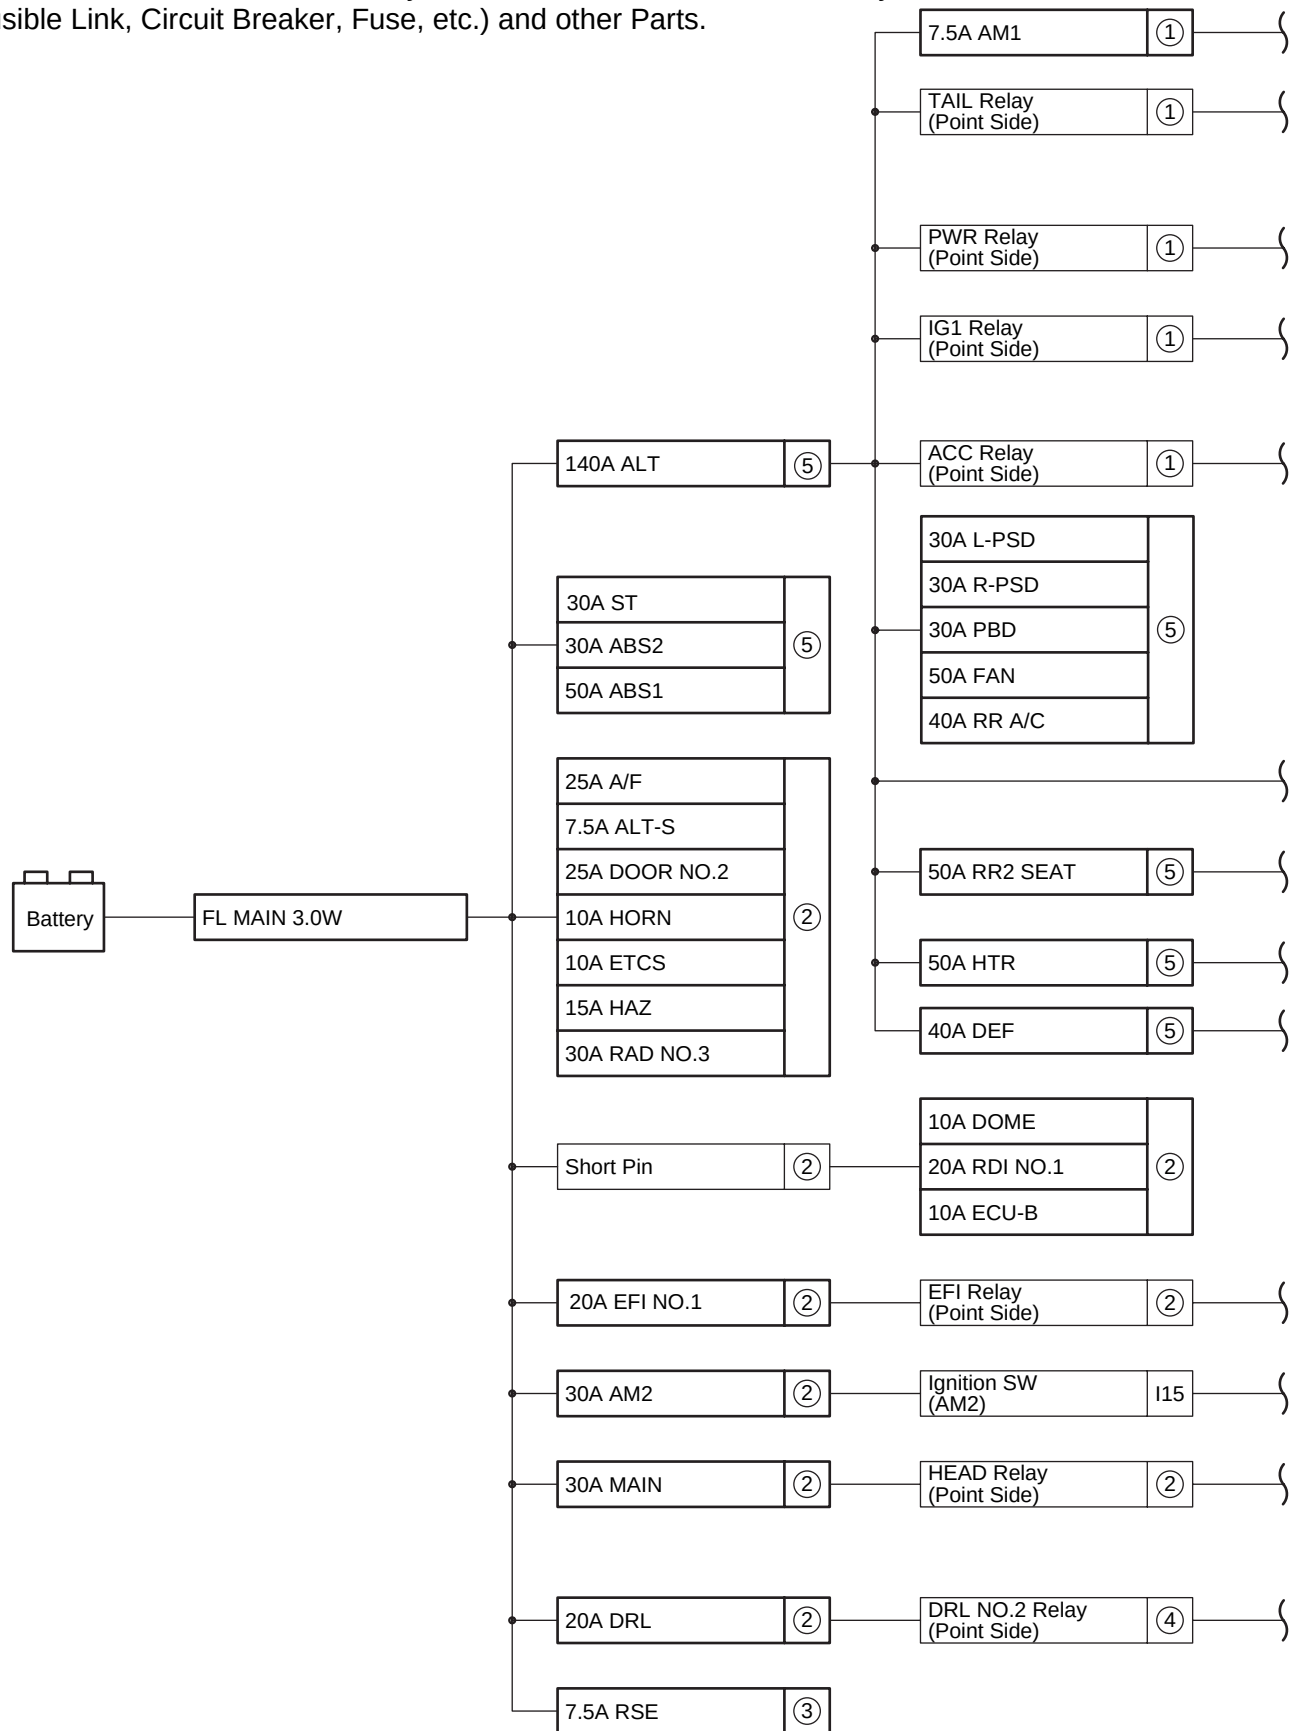
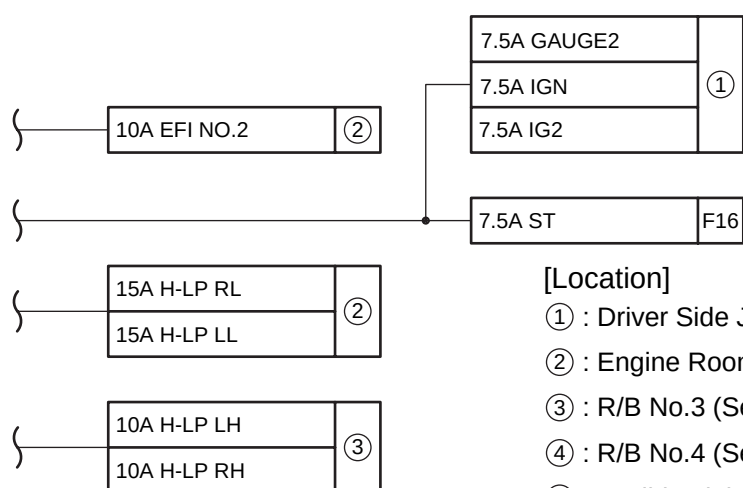


J POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other Parts.

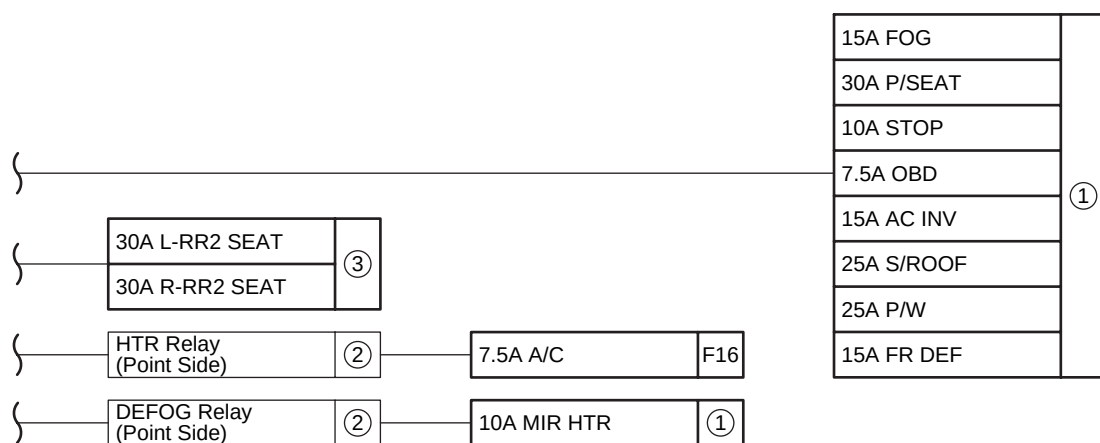

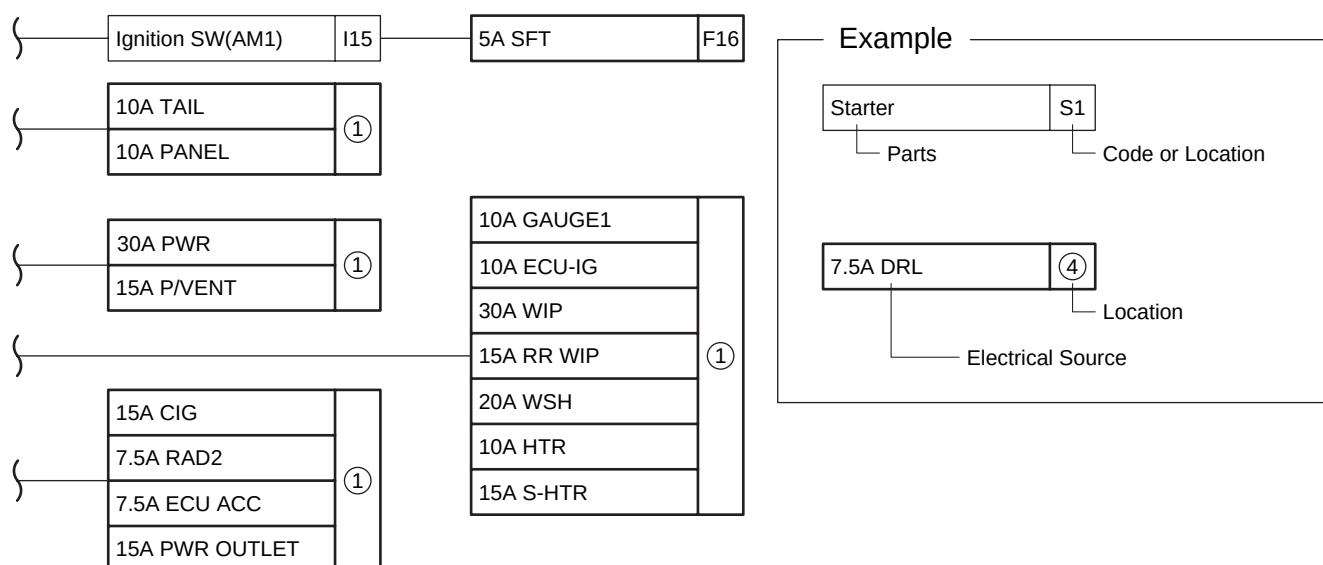

[Location]

- ① : Driver Side J/B (See Page 30)
- ② : Engine Room J/B (See Page 24)
- ③ : R/B No.3 (See Page 26)
- ④ : R/B No.4 (See Page 27)
- ⑤ : Fusible Link Block
(F6, F7, F8, F9, F10, F11, F12, F13, F14, F21, on See Page 36)

J POWER SOURCE (Current Flow Chart)

Driver Side J/B (See Page 30)

Fuse		System	Page
7.5A	ECU ACC	Automatic Air Conditioning (Front)	374
		Automatic Light Control	126
		Back Door Opener (w/o Power Back Door)	206
		Door Lock Control	212
		Fog Light	124
		Headlight	116
		Interior Light	134
		Key Reminder	158
		Light Auto Turn Off System	128
		Manual Air Conditioning (Front)	380
		Moon Roof	288
		Multiplex Communication System (BEAN)	98
		Multiplex Communication System (BEAN Bus)	96
		Multiplex Communication System (CAN)	94
		Power Window (w/ Jam Protection)	172
		Power Window (w/o Jam Protection)	176
		Remote Control Mirror (w/ Driving Position Memory)	294
		Remote Control Mirror (w/o Driving Position Memory)	300
		Theft Deterrent	228
		Wireless Door Lock Control	220
7.5A	GAUGE2	ABS (w/ VSC), TRAC, VSC	262
		ABS (w/o VSC)	270
		Accessory Meter and Garage Door Opener	302
		Audio System (10 Speaker w/o Navigation System)	348
		Audio System (6 Speaker w/ Rear Seat Entertainment System)	354
		Audio System (6 Speaker w/o Rear Seat Entertainment System)	360
		Charging	72
		Combination Meter	364
		Cruise Control	256
		Door Lock Control	212
		Dynamic Laser Cruise Control	244
		Electronically Controlled Transmission and A/T Indicator	236
		Engine Control	76
		Engine Immobiliser System	90
		Headlight	116
		Illumination	148
		Interior Light	134
		Key Reminder	158
		Moon Roof	288
		Multiplex Communication System (BEAN)	98
		Navigation System, Audio System (10 Speaker w/ Navigation System) and Parking Assist (Rear View Monitor)	340

* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
7.5A	GAUGE2	Parking Assist (Intuitive Parking Assist)	336
		Power Rear No.2 Seat with Stowing Function	324
		Seat Belt Warning	162
		SRS	275
		Taillight	144
		Theft Deterrent	228
		Tire Pressure Warning System	284
7.5A	IGN	Cruise Control	256
		Dynamic Laser Cruise Control	244
		Electronically Controlled Transmission and A/T Indicator	236
		Engine Control	76
		Engine Immobiliser System	90
		SRS	275
7.5A	IG2	Ignition	68
7.5A	OBD	Engine Control	76
7.5A	RAD2	Audio System (10 Speaker w/o Navigation System)	348
		Audio System (6 Speaker w/ Rear Seat Entertainment System)	354
		Audio System (6 Speaker w/o Rear Seat Entertainment System)	360
		Navigation System, Audio System (10 Speaker w/ Navigation System) and Parking Assist (Rear View Monitor)	340
10A	ECU-IG	ABS (w/ VSC), TRAC, VSC	262
		ABS (w/o VSC)	270
		Accessory Meter and Garage Door Opener	302
		Automatic Glare-Resistant EC Mirror with Compass	312
		Automatic Light Control	126
		Back Door Closer	200
		Back Door Opener (w/o Power Back Door)	206
		Door Lock Control	212
		Dynamic Laser Cruise Control	244
		Fog Light	124
		Headlight	116
		Interior Light	134
		Key Reminder	158
		Light Auto Turn Off System	128
		Moon Roof	288
		Multiplex Communication System (BEAN)	98
		Multiplex Communication System (BEAN Bus)	96
		Multiplex Communication System (CAN)	94
		Parking Assist (Intuitive Parking Assist)	336
		Power Back Door	194
		Power Outlet (115V)	306
		Power Rear No.2 Seat with Stowing Function	324
		Power Seat (Driver's Seat w/ Driving Position Memory)	316

* These are the page numbers of the first page on which the related system is shown.

J POWER SOURCE (Current Flow Chart)

Fuse		System	Page
10A	ECU-IG	Power Slide Door LH	180
		Power Slide Door RH	186
		Power Window (w/ Jam Protection)	172
		Power Window (w/o Jam Protection)	176
		Remote Control Mirror (w/ Driving Position Memory)	294
		Seat Heater	330
		Shift Lock	292
		Stop Light	154
		Theft Deterrent	228
		Tire Pressure Warning System	284
		Wireless Door Lock Control	220
10A	GAUGE1	ABS (w/o VSC)	270
		Back Door Closer	200
		Back-Up Light	156
		Charging	72
		Cruise Control	256
		Door Lock Control	212
		Dynamic Laser Cruise Control	244
		Electronically Controlled Transmission and A/T Indicator	236
		Navigation System, Audio System (10 Speaker w/ Navigation System) and Parking Assist (Rear View Monitor)	340
		Parking Assist (Intuitive Parking Assist)	336
		Power Back Door	194
		Power Rear No.2 Seat with Stowing Function	324
		Power Seat (Driver's Seat w/ Driving Position Memory)	316
		Power Slide Door LH	180
		Power Slide Door RH	186
		Remote Control Mirror (w/ Driving Position Memory)	294
		Turn Signal and Hazard Warning Light	130
10A	HTR	Automatic Air Conditioning (Front)	374
		Automatic Air Conditioning (Rear)	386
		Cooling Fan	372
		Front Window Deicer and Rear Window Defogger	332
		Manual Air Conditioning (Front)	380
		Manual Air Conditioning (Rear)	390
		Mirror Heater	334
		SRS	275
10A	INJ	Engine Control	76
10A	MIR HTR	Mirror Heater	334
10A	PANEL	Accessory Meter and Garage Door Opener	302
		Illumination	148
10A	STOP	ABS (w/ VSC), TRAC, VSC	262
		ABS (w/o VSC)	270

* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
10A	STOP	Cruise Control	256
		Dynamic Laser Cruise Control	244
		Electronically Controlled Transmission and A/T Indicator	236
		Engine Control	76
		Interior Light	134
		Multiplex Communication System (BEAN)	98
		Shift Lock	292
		Stop Light	154
10A	TAIL	Taillight	144
15A	AC INV	Power Outlet (115V)	306
15A	CIG	Power Outlet (12V Front)	308
15A	FOG	Fog Light	124
		Multiplex Communication System (BEAN)	98
15A	FR DEF	Front Window Deicer and Rear Window Defogger	332
15A	P/VENT	Power Rear Quarter Window	210
15A	PWR OUTLET	Power Outlet (12V Front)	308
		Power Outlet (12V Rear)	310
15A	RR WIP	Rear Wiper and Washer	170
15A	S-HTR	Seat Heater	330
20A	WSH	Front Wiper and Washer	166
		Rear Wiper and Washer	170
25A	P/W	Multiplex Communication System (BEAN)	98
		Power Window (w/ Jam Protection)	172
		Remote Control Mirror (w/ Driving Position Memory)	294
25A	S/ROOF	Moon Roof	288
30A	P/SEAT	Power Seat (Driver's Seat w/ Driving Position Memory)	316
		Power Seat (Driver's Seat w/o Driving Position Memory)	320
		Power Seat (Front Passenger's Seat)	322
30A	PWR	Power Window (w/ Jam Protection)	172
		Power Window (w/o Jam Protection)	176
30A	WIP	Front Wiper and Washer	166

Engine Room J/B (See Page 24)

Fuse		System	Page
7.5A	ALT-S	Charging	72
10A	DOME	Accessory Meter and Garage Door Opener	302
		Back Door Opener (w/o Power Back Door)	206
		Interior Light	134
		Multiplex Communication System (BEAN)	98
		Theft Deterrent	228
		Wireless Door Lock Control	220
10A	ECU-B	ABS (w/ VSC), TRAC, VSC	262
		ABS (w/o VSC)	270

* These are the page numbers of the first page on which the related system is shown.

J POWER SOURCE (Current Flow Chart)

Fuse		System	Page
10A	ECU-B	Accessory Meter and Garage Door Opener	302
		Audio System (10 Speaker w/o Navigation System)	348
		Audio System (6 Speaker w/ Rear Seat Entertainment System)	354
		Audio System (6 Speaker w/o Rear Seat Entertainment System)	360
		Automatic Air Conditioning (Front)	374
		Automatic Air Conditioning (Rear)	386
		Automatic Light Control	126
		Back Door Closer	200
		Back Door Opener (w/o Power Back Door)	206
		Charging	72
		Combination Meter	364
		Cruise Control	256
		Door Lock Control	212
		Dynamic Laser Cruise Control	244
		Electronically Controlled Transmission and A/T Indicator	236
		Engine Control	76
		Engine Immobiliser System	90
		Fog Light	124
		Headlight	116
		Illumination	148
		Interior Light	134
		Key Reminder	158
		Light Auto Turn Off System	128
		Manual Air Conditioning (Front)	380
		Manual Air Conditioning (Rear)	390
		Moon Roof	288
		Multiplex Communication System (BEAN)	98
		Multiplex Communication System (BEAN Bus)	96
		Multiplex Communication System (CAN)	94
		Navigation System, Audio System (10 Speaker w/ Navigation System) and Parking Assist (Rear View Monitor)	340
		Parking Assist (Intuitive Parking Assist)	336
		Power Back Door	194
		Power Seat (Driver's Seat w/ Driving Position Memory)	316
		Power Slide Door LH	180
		Power Slide Door RH	186
		Power Window (w/ Jam Protection)	172
		Power Window (w/o Jam Protection)	176
		Remote Control Mirror (w/ Driving Position Memory)	294
		Seat Belt Warning	162
		SRS	275
		Taillight	144
		Theft Deterrent	228

* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
10A	ECU-B	Tire Pressure Warning System	284
		Wireless Door Lock Control	220
10A	EFI NO.2	Electronically Controlled Transmission and A/T Indicator	236
		Engine Control	76
10A	ETCS	Cruise Control	256
		Dynamic Laser Cruise Control	244
		Electronically Controlled Transmission and A/T Indicator	236
		Engine Control	76
10A	HORN	Horn	314
		Multiplex Communication System (BEAN)	98
		Theft Deterrent	228
		Wireless Door Lock Control	220
15A	HAZ	Turn Signal and Hazard Warning Light	130
15A	H-LP LL	Fog Light	124
		Headlight	116
		Headlight Beam Level Control	122
		Multiplex Communication System (BEAN)	98
15A	H-LP RL	Headlight	116
		Multiplex Communication System (BEAN)	98
20A	DRL	Headlight	116
		Multiplex Communication System (BEAN)	98
20A	EFI NO.1	Cruise Control	256
		Dynamic Laser Cruise Control	244
		Electronically Controlled Transmission and A/T Indicator	236
		Engine Control	76
20A	RAD NO.1	Audio System (10 Speaker w/o Navigation System)	348
		Audio System (6 Speaker w/ Rear Seat Entertainment System)	354
		Audio System (6 Speaker w/o Rear Seat Entertainment System)	360
		Navigation System,	
		Audio System (10 Speaker w/ Navigation System) and Parking Assist (Rear View Monitor)	340
25A	A/F	Engine Control	76
25A	DOOR NO.2	Door Lock Control	212
		Multiplex Communication System (BEAN)	98
		Theft Deterrent	228
		Wireless Door Lock Control	220
30A	AM2	Ignition	68
30A	MAIN	Automatic Light Control	126
		Fog Light	124
		Headlight	116
		Headlight Beam Level Control	122
		Light Auto Turn Off System	128
		Multiplex Communication System (BEAN)	98

* These are the page numbers of the first page on which the related system is shown.

J POWER SOURCE (Current Flow Chart)

Fuse		System	Page
30A	MAIN	Theft Deterrent	228
		Wireless Door Lock Control	220
30A	RAD NO.3	Audio System (10 Speaker w/o Navigation System)	348
		Navigation System, Audio System (10 Speaker w/ Navigation System) and Parking Assist (Rear View Monitor)	340

R/B No.3 (See Page 26)

Fuse		System	Page
7.5A	RSE	Audio System (10 Speaker w/o Navigation System)	348
		Audio System (6 Speaker w/ Rear Seat Entertainment System)	354
		Navigation System, Audio System (10 Speaker w/ Navigation System) and Parking Assist (Rear View Monitor)	340
10A	H-LP LH	Headlight	116
		Multiplex Communication System (BEAN)	98
10A	H-LP RH	Headlight	116
		Multiplex Communication System (BEAN)	98
10A	INJ	Ignition	68
30A	L-RR2 SEAT	Power Rear No.2 Seat with Stowing Function	324
30A	R-RR2 SEAT	Power Rear No.2 Seat with Stowing Function	324

Fusible Link Block

(F6, F7, F8, F9, F10, F11, F12, F13, F14, F21 on See Page 36)

Fuse		System	Page
30A	ABS2	ABS (w/ VSC), TRAC, VSC	262
		ABS (w/o VSC)	270
		Dynamic Laser Cruise Control	244
30A	L-PSD	Power Slide Door LH	180
		Slide Door Closer	192
30A	PBD	Back Door Closer	200
		Power Back Door	194
30A	R-PSD	Power Slide Door RH	186
30A	ST	Starting	66
40A	DEF	Front Window Deicer and Rear Window Defogger	332
		Mirror Heater	334
40A	RR A/C	Automatic Air Conditioning (Rear)	386
		Manual Air Conditioning (Rear)	390
50A	ABS1	ABS (w/ VSC), TRAC, VSC	262
		ABS (w/o VSC)	270
		Dynamic Laser Cruise Control	244
50A	FAN	Cooling Fan	372
50A	HTR	Automatic Air Conditioning (Front)	374
		Manual Air Conditioning (Front)	380

* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
140A	ALT	Accessory Meter and Garage Door Opener	302
		Automatic Air Conditioning (Front)	374
		Automatic Air Conditioning (Rear)	386
		Automatic Light Control	126
		Back Door Closer	200
		Charging	72
		Cooling Fan	372
		Front Window Deicer and Rear Window Defogger	332
		Illumination	148
		Light Auto Turn Off System	128
		Manual Air Conditioning (Front)	380
		Manual Air Conditioning (Rear)	390
		Mirror Heater	334
		Multiplex Communication System (BEAN)	98
		Power Back Door	194
		Power Rear Quarter Window	210
		Power Slide Door LH	180
		Power Slide Door RH	186
		Power Window (w/ Jam Protection)	172
		Power Window (w/o Jam Protection)	176
		Slide Door Closer	192
		Taillight	144
		Theft Deterrent	228
		Wireless Door Lock Control	220

Fuse Box (See Page 28)

Fuse		System	Page
7.5A	A/C	Manual Air Conditioning (Front)	380
7.5A	ST	Electronically Controlled Transmission and A/T Indicator	236
		Engine Control	76
		Starting	66

Fuse Box No.2 (See Page 29)

Fuse		System	Page
5A	SFT	Shift Lock	292

* These are the page numbers of the first page on which the related system is shown.