

Name:
Address:


Tel - Private:
Tel - Business:
Tel - Mobile

Manufacturer: Opel/Vauxhall
Model:
Year: 2005
Registration:
Mileage:
Job number:
Date

Fuse (Amps)	Circuit
F1 (20A)	Anti-lock brake system (ABS)
F2 (30A)	Anti-lock brake system (ABS)
F3 (30A)	Heater/air conditioning (AC)
F4 (30A)	Heater/air conditioning (AC)
F5 (30A/40A)	Engine coolant blower motor 1
F6 (20A/30A/40A)	Engine coolant blower motor 2
F7 (10A)	Windscreen wipers
F8 (15A)	Horn
F9 (25A)	Headlamp washers
F10	-
F11	-
F12 (5A)	Engine coolant pump relay - if fitted
F13 (15A)	Front fog lamps
F14 (30A)	Windscreen wipers - high speed
F15 (30A)	Windscreen wipers - low speed
F16 (5A)	Anti-lock brake system (ABS), stop lamps
F17 (25A)	Fuel filter heater
F18 (25A)	Starter motor
F19 (30A)	Automatic transmission (AT)
F20 (10A)	Air conditioning (AC)
F21 (20A)	Engine management
F22 (7,5)	Engine management
F23 (10A)	Headlamp adjustment
F24 (15A)	Fuel pump (FP)
F25 (15A)	Automatic transmission (AT)
F26 (10A)	Engine management
F27 (5A)	Power steering
F28 (5A)	Automatic transmission (AT)
F29 (7,5A)	Automatic transmission (AT)
F30 (10A)	Engine management
F31 (10A)	Headlamp adjustment
F32 (5A)	Air conditioning (AC), anti-lock brake system (ABS)
F33 (5A)	Headlamp adjustment
F34 (7,5A)	Steering column function control module
F35 (20A)	Audio system, navigation system
F36 (7,5A)	Audio system, telephone
Location	Component
1	Multifunction control module
2	Engine coolant blower motor relay 1
3	Engine coolant blower motor relay 2
4	Headlamp washer pump relay

5	Fog lamp relay - front
6	Windscreen wiper motor relay 1 (low/high wiper speed)
7	Windscreen wiper motor relay 2 (ON/OFF)
8	Heater/AC blower motor
9	Fuel heater relay
10	Starter motor relay
11	Engine coolant blower motor relay 3
12	AC compressor clutch relay
13	Engine control (EC) relay
14	Fuel lift pump relay - Diesel
14	Fuel pump (FP) relay - petrol
15	Ignition main circuits relay 1

Engine bay 1

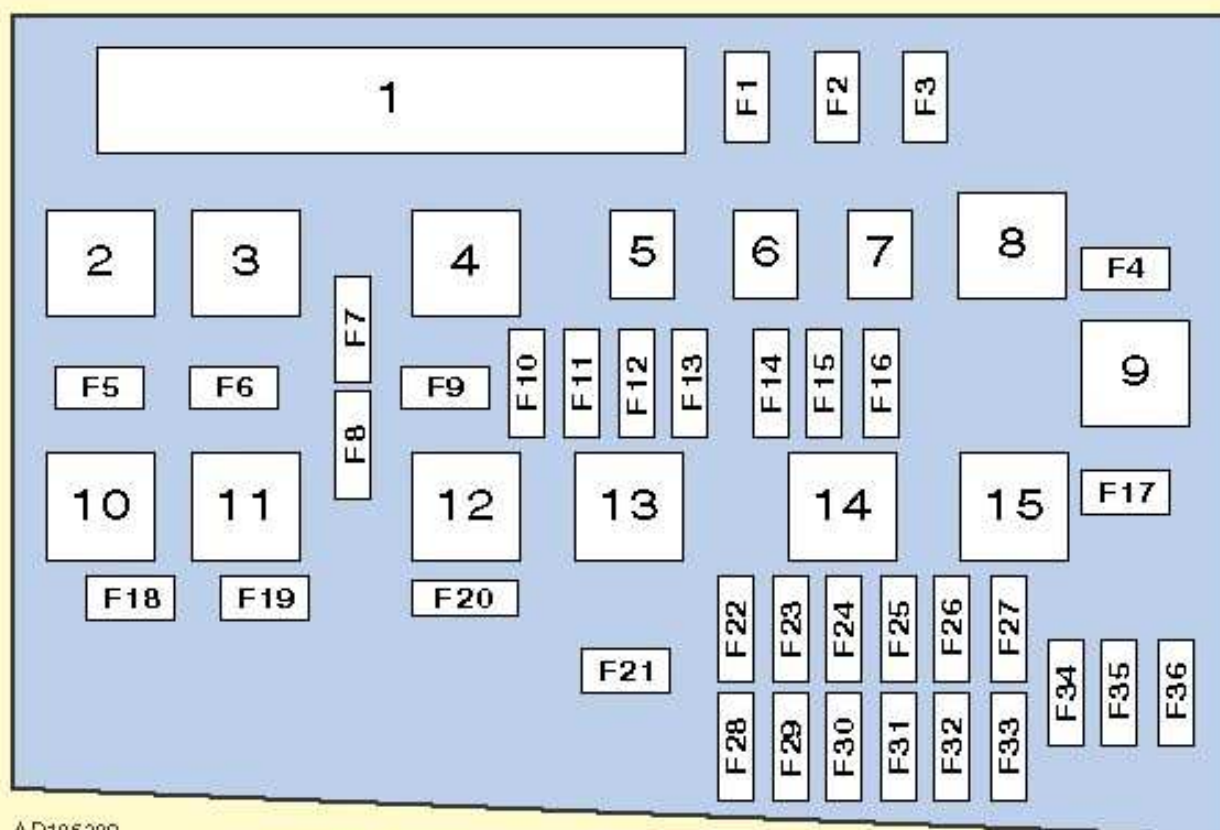

AD105309