60.Rear Wiring Harness and Trunk Lid Cord

A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
R19	2	★	B-2		High-mounted stop light (Sedan)
R20	2	★	B-4		Trunk room light
R22	3	★	B-1		Rear door switch LH
R24	8	★	B-4	R60	Trunk lid cord
R26	6	★	B-5		Rear combination light RH
R28	6	★	C-3		Rear combination light LH
R58	6	Gray	C-3		Fuel gauge main module and fuel pump
R59	2	Gray	C-2		Fuel gauge sub module
R60	8	★	B-4	R24	Rear wiring harness
R65	1	Black	B-2		Rear defogger
R66	2	★	B-4		High-mounted stop light (Rear spoiler)
R76	2	★	C-4		License plate light LH
R77	2	★	C-4		License plate light RH
R79	10	★	B-2		Trailer connector
R97	1	★	B-2		Antenna amplifier
R112	2	★	B-4		TV antenna amplifier RH
R113	2	★	B-3		TV antenna amplifier LH
R117	2	★	B-3		Sub woofer (Model with McIntosh)
R122	10	Black	C-2		Fuel pump control module
R174	1	★	B-4		Rear defogger
R186	3	★	C-4		Trunk lock actuator
R189	2	★	C-3		Rear seat belt switch RH
R190	3	★	C-3		Rear seat belt switch center
R191	2	★	C-2		Rear seat belt switch LH
★: Non-colored					

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB31	2	Yellow	B-2	AB39	Airbag module LH (Curtain)
AB32	4	Yellow	C-1		Curtain airbag sensor LH
AB33	2	Yellow	B-4	AB40	Airbag module RH (Curtain)
★: Non-colored					

Rear Wiring Harness and Trunk Lid Cord

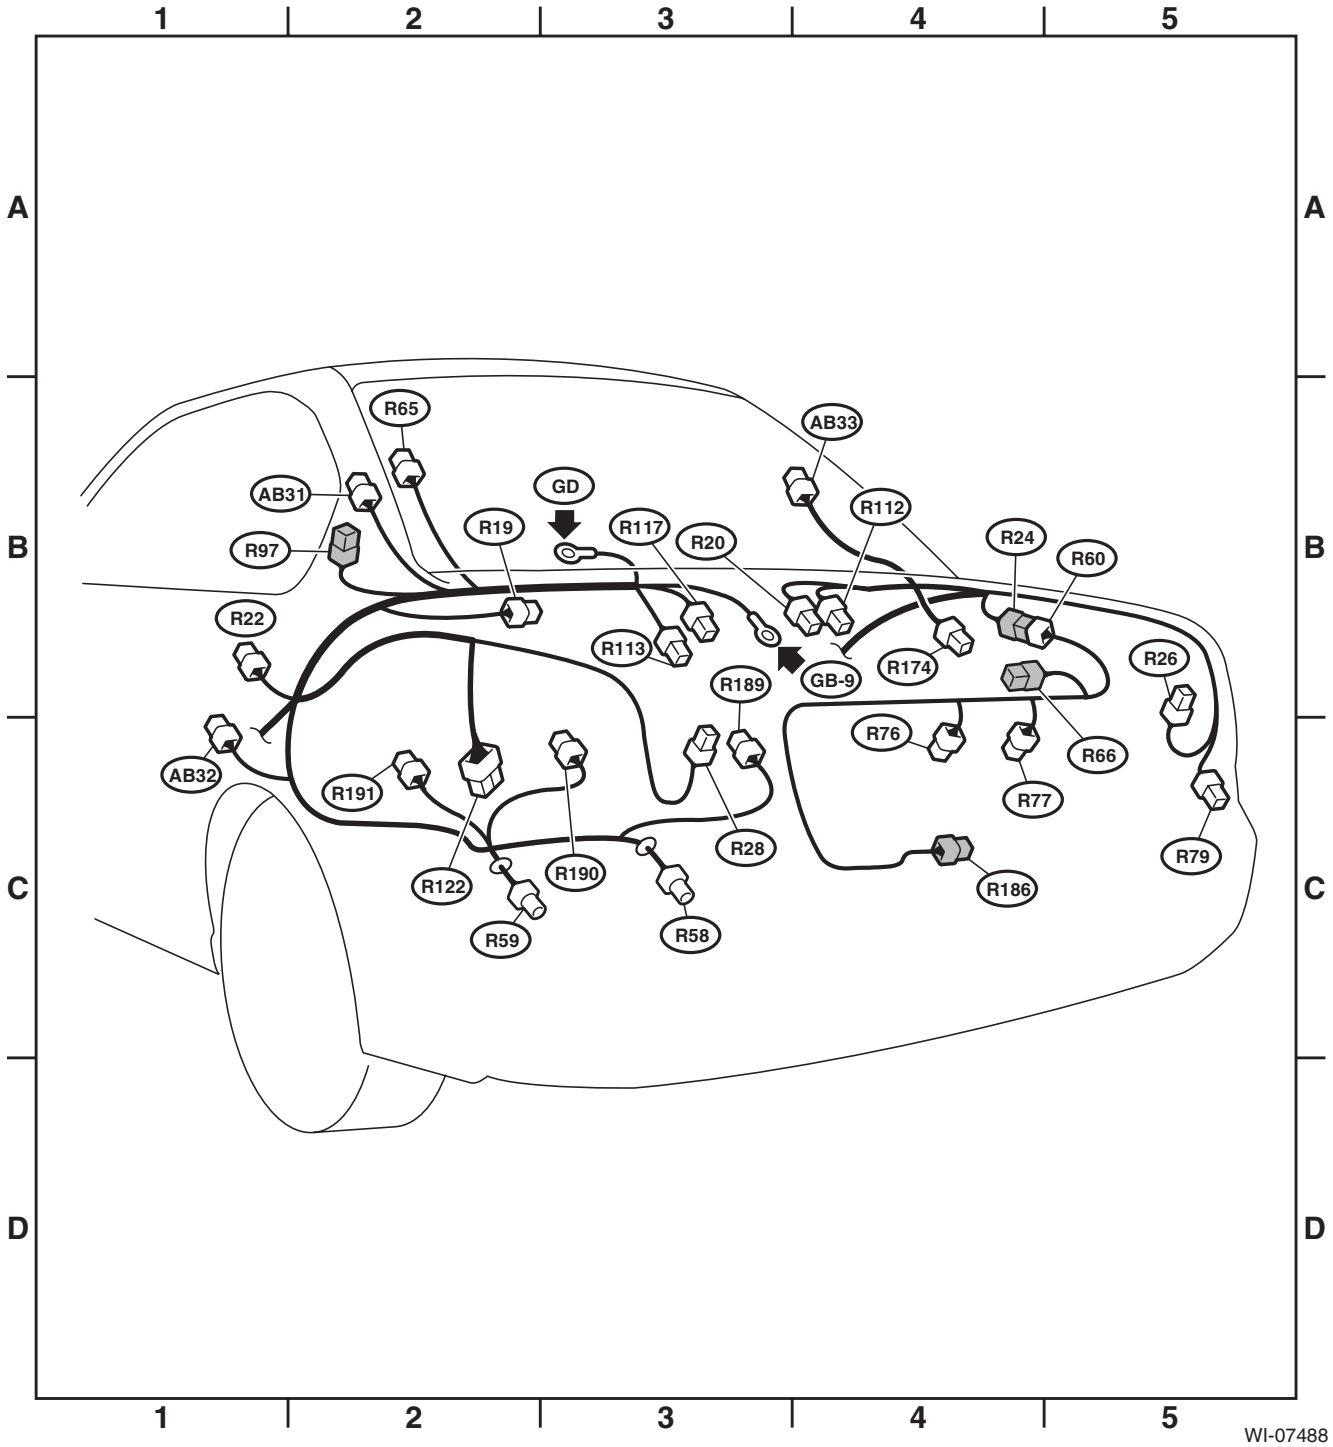

61.Rear Wiring Harness and Rear Gate Cord

A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
R22	3	★	C-1		Rear door switch LH
R26	4	★	C-5		Rear combination light RH
R28	4	★	C-3		Rear combination light LH
R32	2	★	C-2		Luggage room power supply
R37	3	★	C-4	D33	Rear gate cord
R38	8	★	C-4	D34	
R39	10	★	C-4	D35	
R58	6	Gray	D-2		Fuel gauge main module and fuel pump
R59	2	Gray	D-2		Fuel gauge sub module
R79	10	★	C-2		Trailer connector
R97	1	★	C-2		Antenna amplifier
R112	2	★	C-3		TV antenna amplifier RH
R113	2	★	C-2		TV antenna amplifier LH
R117	2	★	C-3		Sub woofer (Model with McIntosh)
R122	10	Black	C-2		Fuel pump control module
R189	2	★	C-2		Rear seat belt switch RH
R190	3	★	C-2		Rear seat belt switch center
R191	2	★	C-2		Rear seat belt switch LH
★: Non-colored					

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
D33	3	★	C-4	R37	Rear wiring harness
D34	8	★	C-4	R38	
D35	10	★	C-4	R39	
D37	3	★	B-3		Luggage room light
D39	2	★	B-3		High-mounted stop light
D43	4	★	B-4		Rear wiper motor
D44	2	★	A-5		License plate light
D46	2	Black	B-4		Rear gate latch switch
D47	2	Gray	A-5		Rear gate lock actuator
D48	1	Black	B-3		Rear defogger
D86	2	★	A-5		Rear fog light RH
D87	2	★	A-5		Back-up light RH
D89	1	★	B-4		Rear defogger
D90	2	★	A-4		Rear fog light LH
D91	2	★	A-4		Back-up light LH
★: Non-colored					

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB31	2	Yellow	C-2	AB39	Airbag module LH (Curtain)
AB32	4	Yellow	C-1		Curtain airbag sensor LH
AB33	2	Yellow	C-3	AB40	Airbag module RH (Curtain)
★: Non-colored					

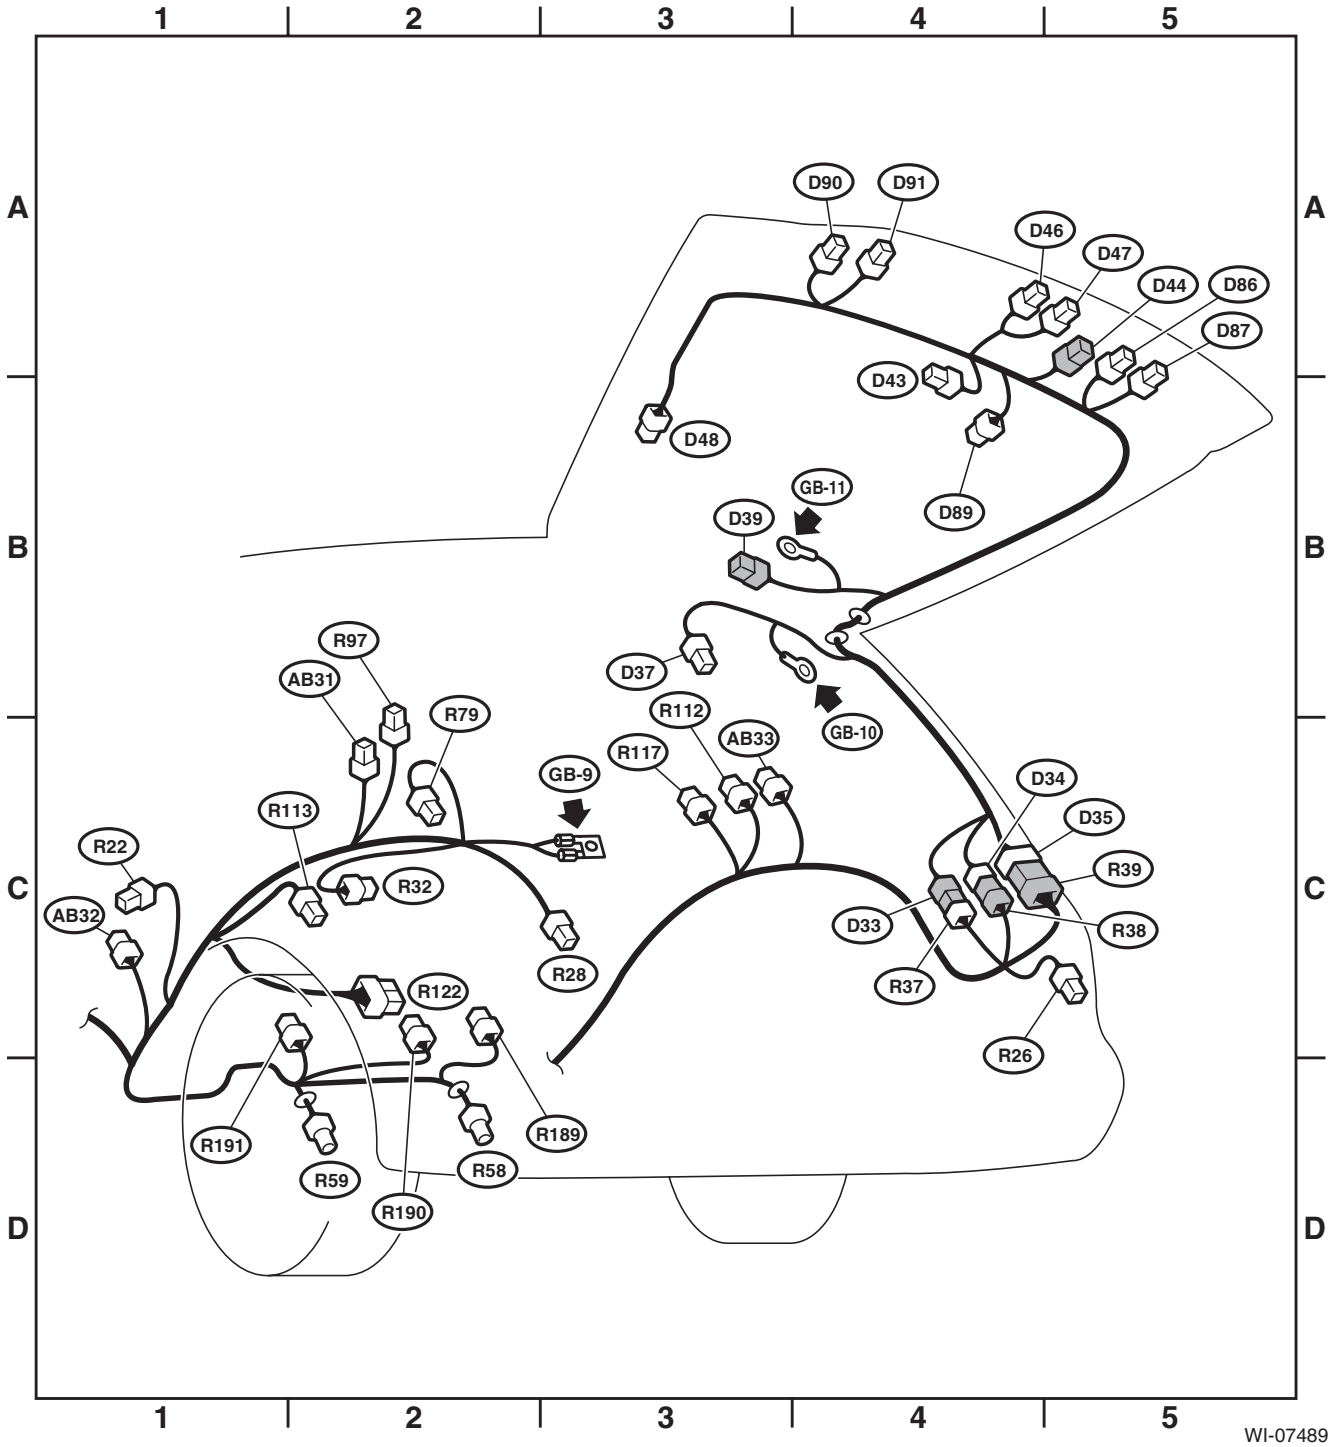
1
2
3
4
5
A
B
C
D
D90
D91
D46
D47
D44
D86
D87
D43
D48
D89
GB-11
D39
R97
AB31
R79
D37
R112
AB33
GB-10
R117
GB-9
D34
D35
R113
R39
R22
R32
AB32
D33
R38
R28
R37
R122
R26
R191
R189
R59
R58
R190
WI-07489