
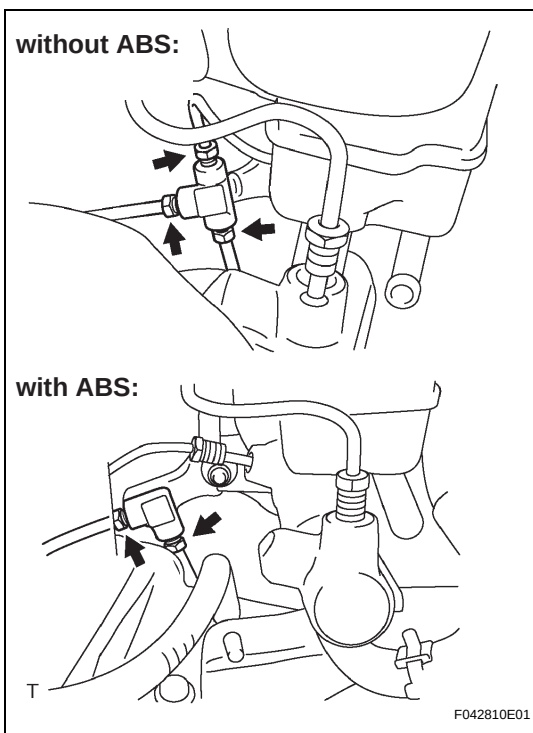


- (b) Apply lithium soap base glycol grease to the 2 grommets and install them to the master cylinder body.
- (c) Install the reservoir sub-assembly with the stopper screw.

## INSTALLATION

### 1. INSTALL BRAKE MASTER CYLINDER SUB-ASSEMBLY


- (a) Install the master cylinder sub-assembly and No. 1 way, and check the valve bracket with the 2 nuts.  
**Torque: 12.5 N\*m (127 kgf\*cm, 9 ft.\*lbf)**

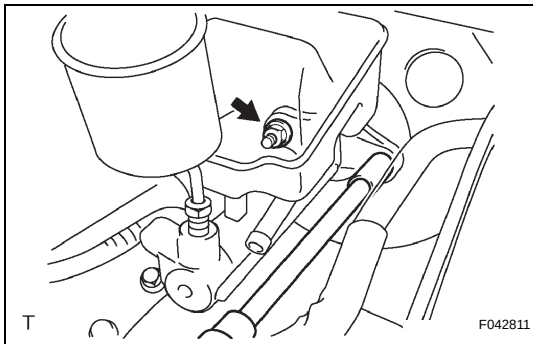

- (b) Using SST, connect the 2 or 3 brake tubes to the No. 1 way.

**SST 09023-00101**

**Torque: 15 N\*m (155 kgf\*cm, 11 ft.\*lbf)**

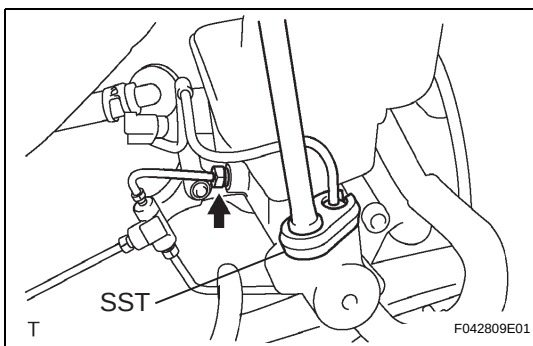

- (c) Using SST, connect the 2 brake tubes to the master cylinder sub-assembly.

**SST 09023-00101**

**Torque: 15 N\*m (155 kgf\*cm, 11 ft.\*lbf)**

- (d) M/T:  
Connect the clutch reservoir tube No. 1 with the clip to the master cylinder reservoir sub-assembly.
- (e) Connect the brake fluid level switch connector to the master cylinder reservoir sub-assembly.

### 2. INSTALL AIR CLEANER CAP SUB-ASSEMBLY

### 3. FILL RESERVOIR WITH BRAKE FLUID

- (a) Fill the reservoir with brake fluid (See page [BR-3](#)).

### 4. BLEED MASTER CYLINDER

- (a) Bleed the master cylinder (See page [BR-3](#)).

**SST 09023-00101**

**5. BLEED BRAKE LINE**

(a) Bleed the brake line (See page [BR-3](#)).

**6. CHECK BRAKE FLUID LEVEL IN RESERVOIR**

(a) Check the brake fluid level in reservoir (See page [BR-3](#)).

**7. INSPECT FOR BRAKE FLUID LEAK**