

DTC	62-10	CD Player Mechanical Error
DTC	62-11	CD Insertion and Ejection Error
DTC	62-12	CD Reading Abnormal
DTC	63-10	CD Changer Mechanical Error
DTC	63-11	CD Insertion and Ejection Error
DTC	63-12	CD Reading Abnormal

DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
62-10	A mechanical error in the CD player is detected while the CD is not being inserted or ejected.	Radio receiver
62-11	CD insertion or ejection is failed.	
62-12	CD read problem occurs.	
63-10	A mechanical error in the CD changer is detected while the CD is not being inserted or ejected.	
63-11	CD insertion or ejection is failed.	
63-12	CD read problem occurs.	

INSPECTION PROCEDURE

HINT:

After the inspection is completed, clear the DTCs.

1	REPLACE RADIO RECEIVER
----------	-------------------------------

NEXT

END

DTC	62-41	Wrong Disc
DTC	62-42	Disc cannot be Read
DTC	63-41	Wrong Disc
DTC	63-42	Disc cannot be Read

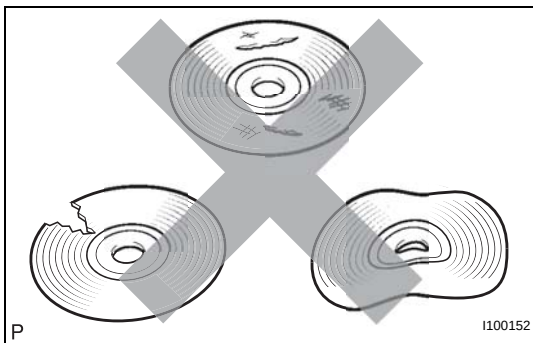
DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
62-41	An unsuitable disc is inserted.	• CD • Radio receiver
62-42	The disc cannot be read.	
63-41	An unsuitable disc is inserted.	
63-42	The disc cannot be read.	

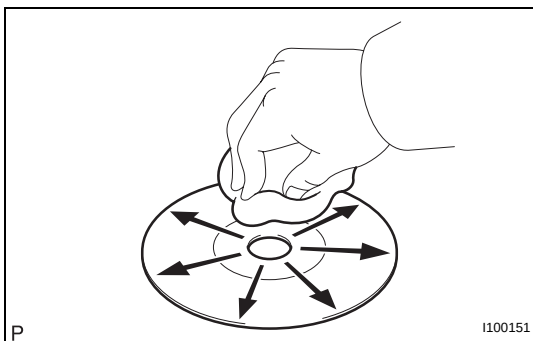
INSPECTION PROCEDURE

HINT:

After the inspection is completed, clear the DTCs.

1 CHECK DISC

(a) Check that the disc is not deformed or cracked.

OK:**No deformation or cracks on the disc.****NG****CHANGE DISC****OK****2 CLEAN DISC**

(a) Disc cleaning

(1) If dirt is on the disc surface, wipe it clean with a soft cloth from the inside to the outside in a radial direction.

NOTICE:**Do not use a conventional record cleaner or anti-static preservative.****NEXT**

3

CLEAR DTC

(a) Clear the DTCs (See page [AV-14](#)).

NEXT

4

RECHECK DTC

(a) Recheck for DTCs and check if the same trouble occurs again.

OK:
Malfunction disappears.

OK

END

NG

5

REPLACE DISC

- (a) Replace the disc with another and recheck.
- (1) Replace the disc with another normal one.
 - (2) Clear the DTCs (See page [AV-14](#)).
 - (3) Recheck for DTCs and check if the same trouble occurs again.

OK:
Malfunction disappears.

NG

REPLACE RADIO RECEIVER

OK

END

AV