


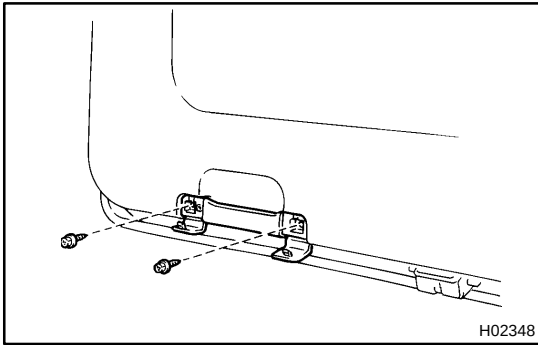

REMOVAL


1. REMOVE BACK DOOR ASSIST GRIP

- (a) Using a screwdriver, open the covers.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 2 screws and assist grip.

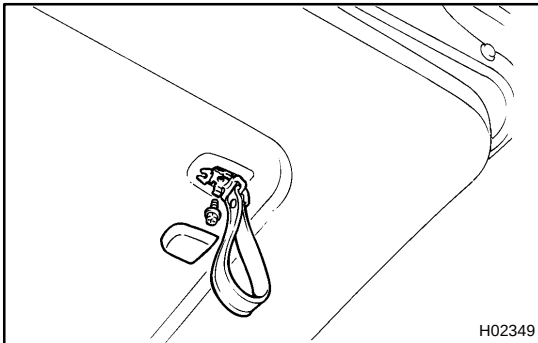


2. REMOVE BACK DOOR PULL STRAP

- (a) Using a screwdriver, remove the strap cover.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the screw and pull strap.

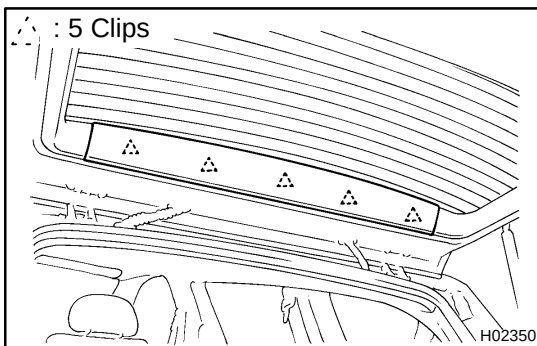


3. REMOVE CENTER GARNISH

Using a screwdriver, remove the center garnish.

HINT:

Tape the screwdriver tip before use.

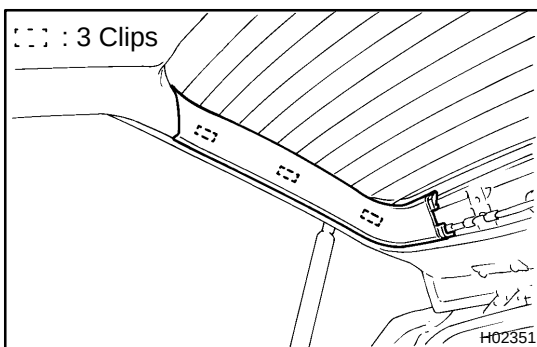


4. REMOVE SIDE GARNISH

- (a) Using a screwdriver, remove the side garnish.

HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

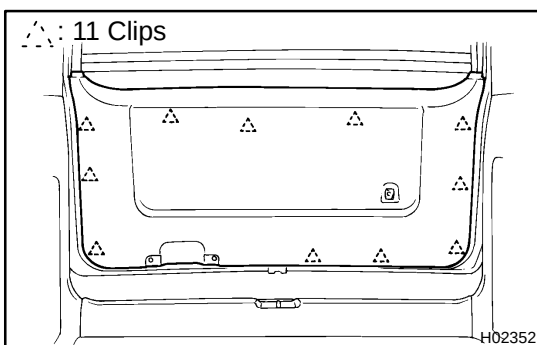

5. REMOVE DOOR TRIM BOARD

- (a) Insert a screwdriver between the door and door trim to pry the trim out.


NOTICE:

Be careful not to damage the door and door trim.


HINT:

Tape the screwdriver tip before use.

- (b) Pull the trim to remove it.

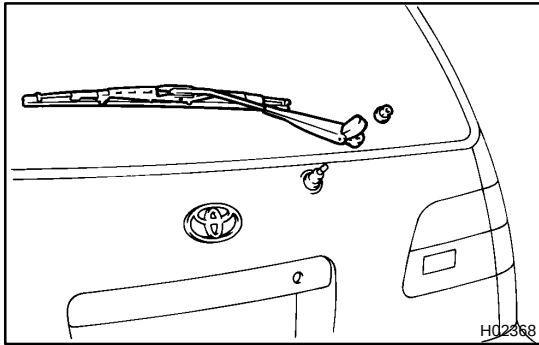**6. REMOVE REAR WIPER ARM**

Remove the nut and wiper arm.

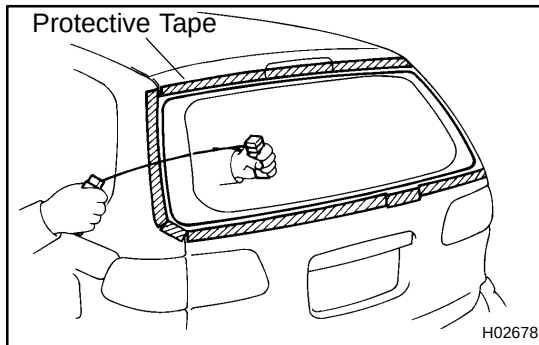**7. REMOVE BACK DOOR GLASS**

(a) Push piano wire through from the interior.


(b) Tie both wire ends to wooden blocks or similar object.

HINT:

Apply protective tape to the outer surface to keep the surface from being scratched.

NOTICE:


When separating the glass, take care not to damage the paint and exterior.

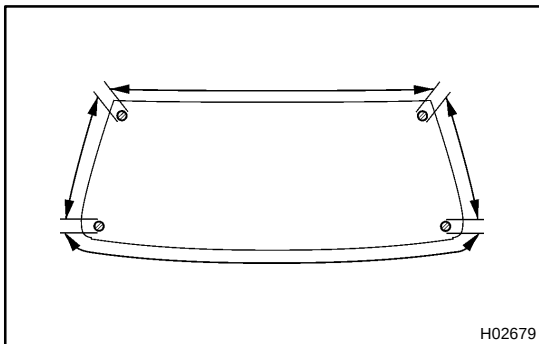

(c) Cut the adhesive by pulling the piano wire around it.

HINT:

Cut the adhesive areas as shown in the illustration, leaving the adhesive where the clips are.

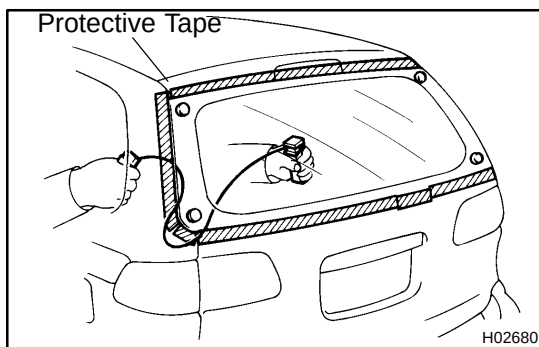

(d) Let the piano wire pass as shown in the illustration, cut off the adhered part to the clips.

NOTICE:

Do not damage the glass retainers.

(e) Remove the glass.

NOTICE:

Leave as much of the adhesive on the body as possible when cutting off the glass.