



## INSTALLATION

### 1. INSTALL WASHER NOZZLE

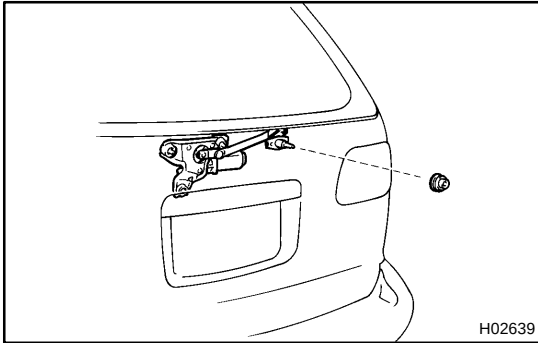


### 2. INSTALL WIPER MOTOR AND LINK ASSEMBLY

- Install the grommet.
- Install the wiper motor and link assembly with 5 bolts.  
**Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)**
- Connect the connector.

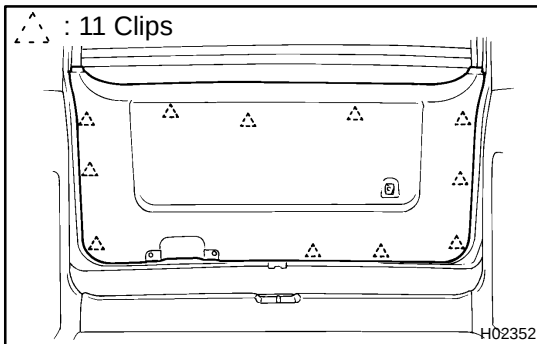


### 3. INSTALL BACK DOOR TRIM BOARD

Install the door trim board to the back door panel.

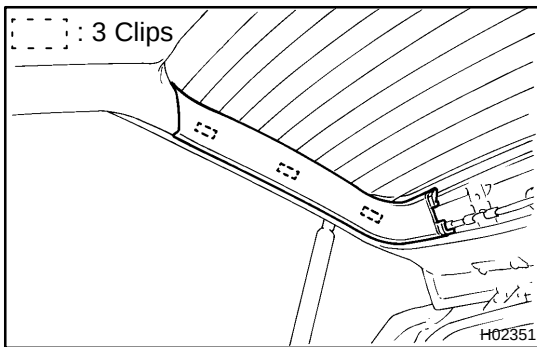


### 4. INSTALL SIDE GARNISH

- Install the side garnish to the back door panel.
- Employ the same manner described above to the other side.

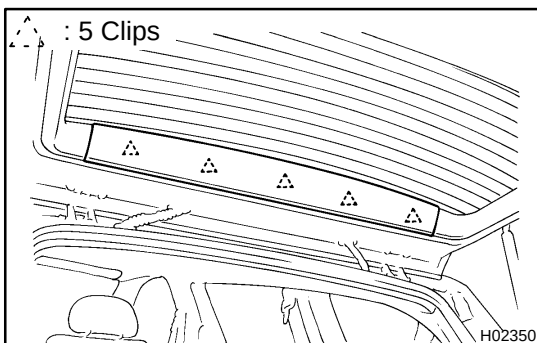


### 5. INSTALL CENTER GARNISH

Install the center garnish to the back door panel.

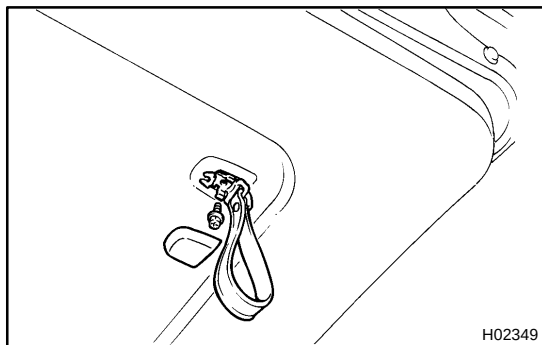**6. INSTALL BACK DOOR PULL STRAP**


- (a) Install the back door pull strap with the screw.
- (b) Install the strap cover.

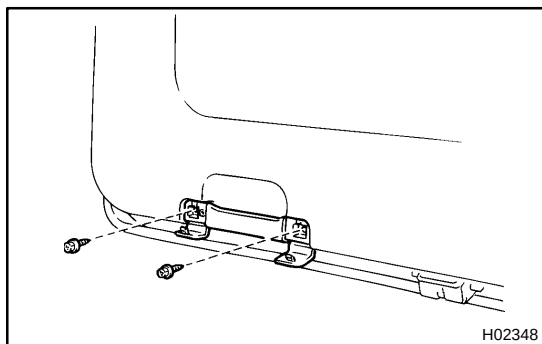**7. INSTALL BACK DOOR ASSIST GRIP**

- (a) Install the back door assist grip with the 2 screws.
- (b) Close the covers.

**8. INSTALL WIPER ARM**

- (a) Operate the wiper once and turn the wiper switch OFF.
- (b) Install the wiper arm and tighten nuts by hand.

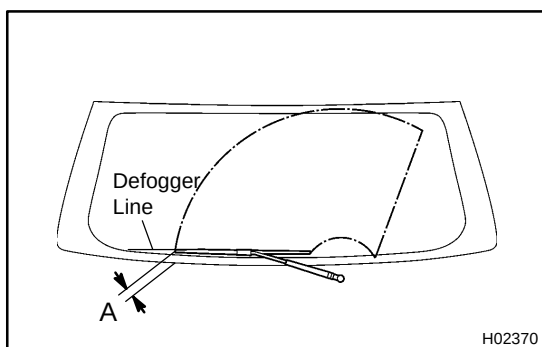

- (c) Adjust the installation position of the wiper arm to the position shown in the illustration.

**A: 38.6 mm (1.520 in.)**

- (d) Torque the nut.

**Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)**