


Last Modified: 09-05-2019	6.9:8.0.49	Doc ID: RM100000001JCIC
Model Year Start: 2020	Model: Supra	Prod Date Range: [03/2019 -]
Title: LIGHTING (INT): DOOR COURTESY LIGHT: COMPONENTS; 2020 MY Supra [03/2019 -]		

COMPONENTS

ILLUSTRATION

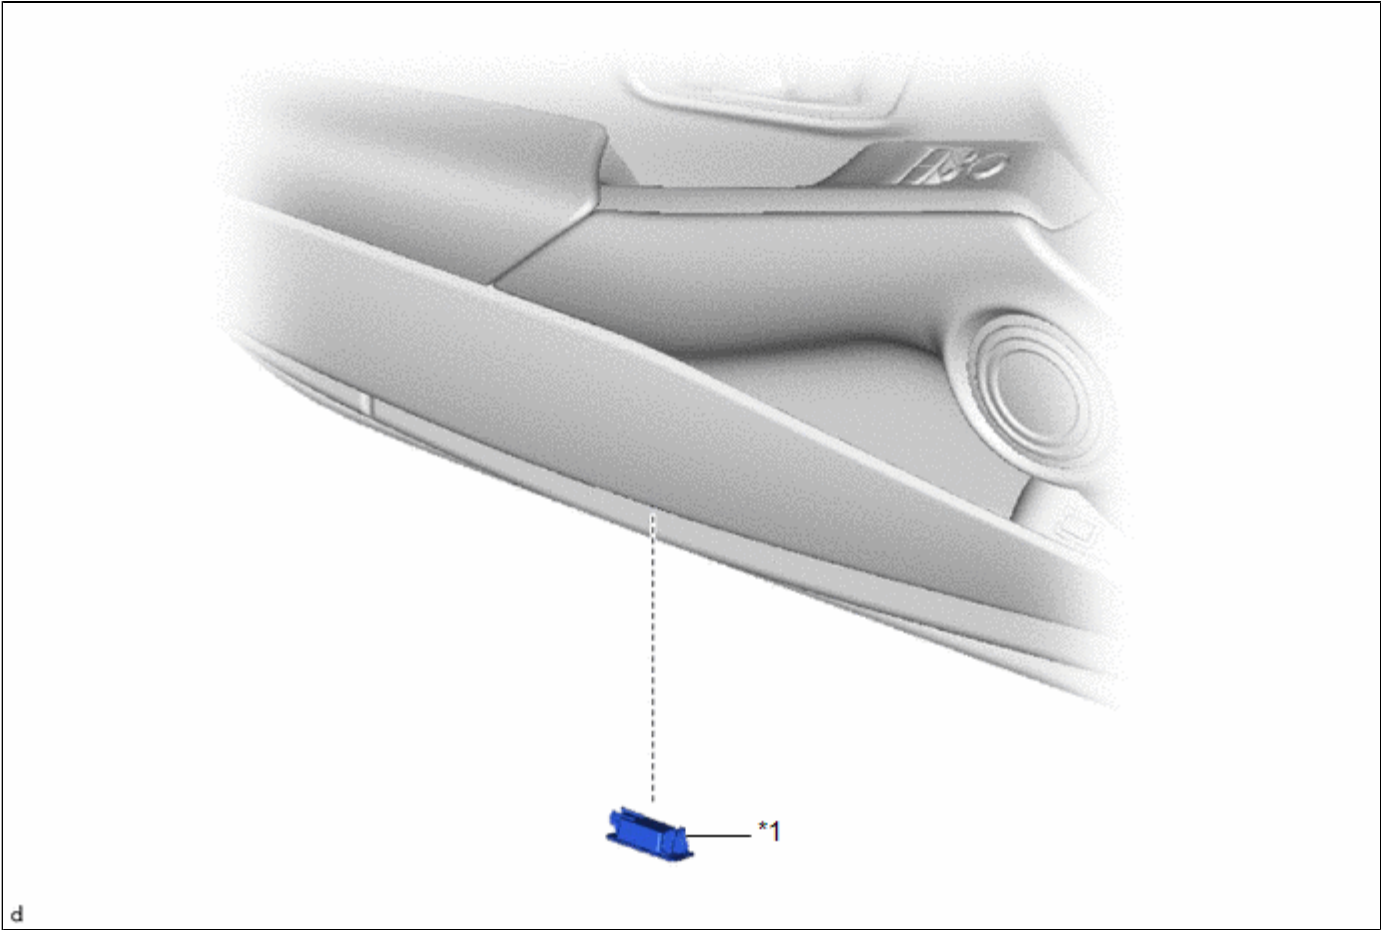

*1	COURTESY LIGHT ASSEMBLY	-	-
----	-------------------------	---	---

Last Modified: 09-05-2019	6.9:8.0.49	Doc ID: RM100000001JCID
Model Year Start: 2020	Model: Supra	Prod Date Range: [03/2019 -]
Title: LIGHTING (INT): DOOR COURTESY LIGHT: REMOVAL; 2020 MY Supra [03/2019 -]		

REMOVAL


CAUTION / NOTICE / HINT

- HINT:
- Use the same procedure for both the LH and RH sides.
 - The procedure described below is for the LH side.

PROCEDURE

1. REMOVE COURTESY LIGHT ASSEMBLY

- (a) Using a molding remover A, detach the claw (2) to remove the courtesy light assembly (1) from the front door trim board sub-assembly.

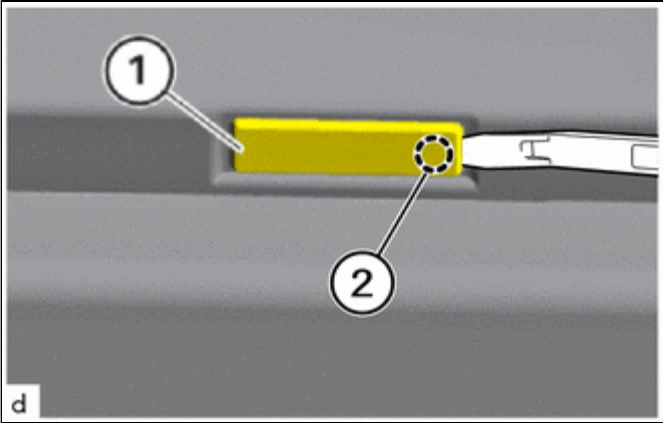

- (b) Unlock plug connection and disconnect.

Last Modified: 09-05-2019	6.9:8.0.49	Doc ID: RM100000001JCIE
Model Year Start: 2020	Model: Supra	Prod Date Range: [03/2019 -]
Title: LIGHTING (INT): DOOR COURTESY LIGHT: INSTALLATION; 2020 MY Supra [03/2019 -]		

INSTALLATION

CAUTION / NOTICE / HINT

HINT:

- Use the same procedure for both the LH and RH sides.
- The procedure described below is for the LH side.

PROCEDURE

1. INSTALL COURTESY LIGHT ASSEMBLY


- Connect and lock the connector.
- Attach the claw to install the courtesy light assembly to the front door trim board sub-assembly.



Last Modified: 09-05-2019	6.9:8.0.49	Doc ID: RM100000001JCII
Model Year Start: 2020	Model: Supra	Prod Date Range: [03/2019 -]
Title: LIGHTING (INT): FOOTWELL LIGHT: COMPONENTS; 2020 MY Supra [03/2019 -]		

COMPONENTS


ILLUSTRATION

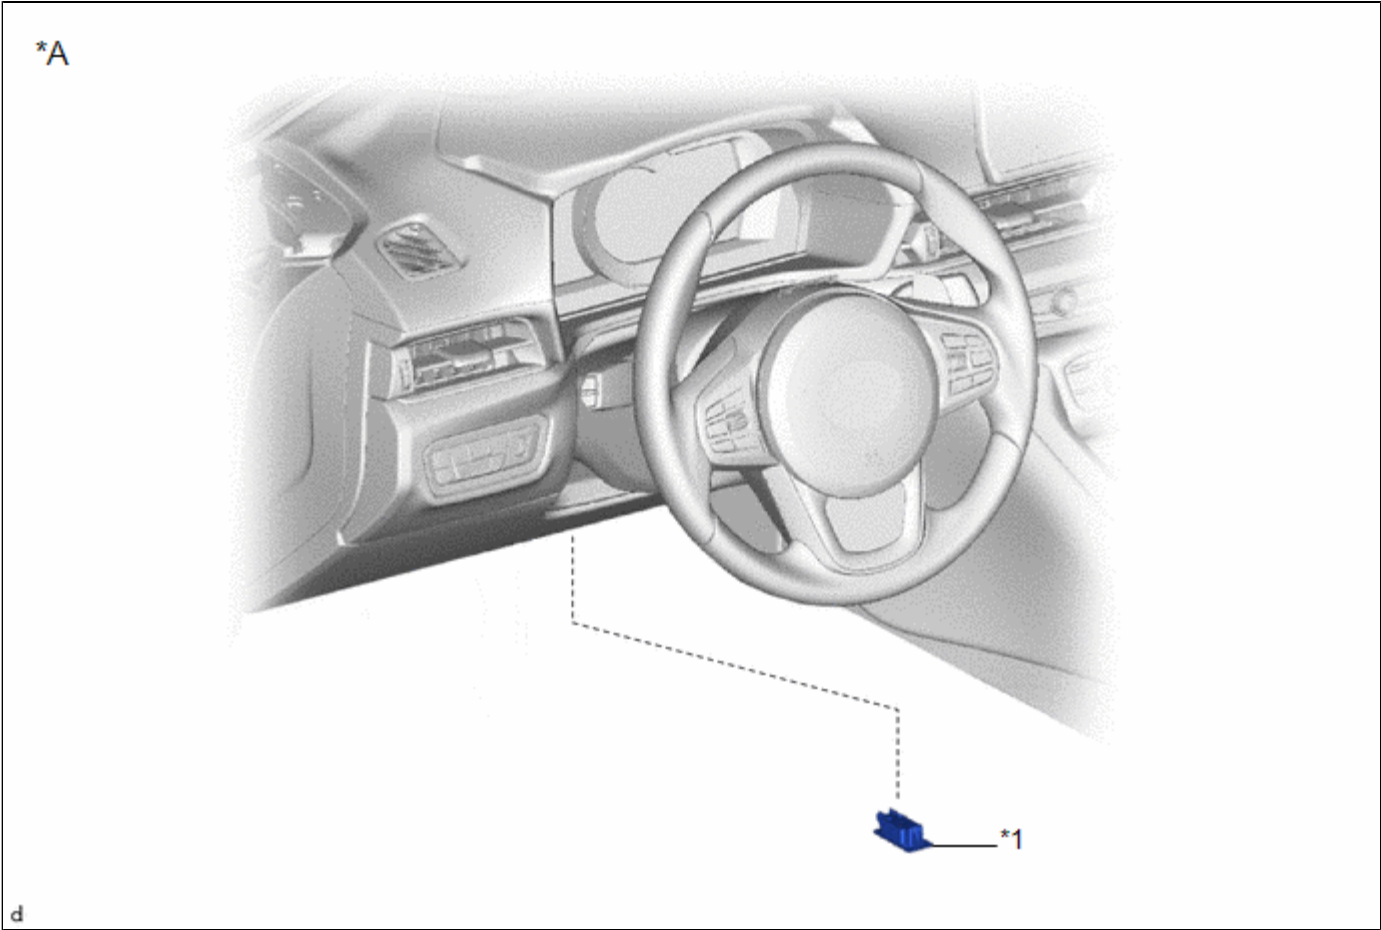

*A	for Driver Side	-	-
*1	NO. 1 INTERIOR ILLUMINATION LIGHT ASSEMBLY	-	-

ILLUSTRATION

*A

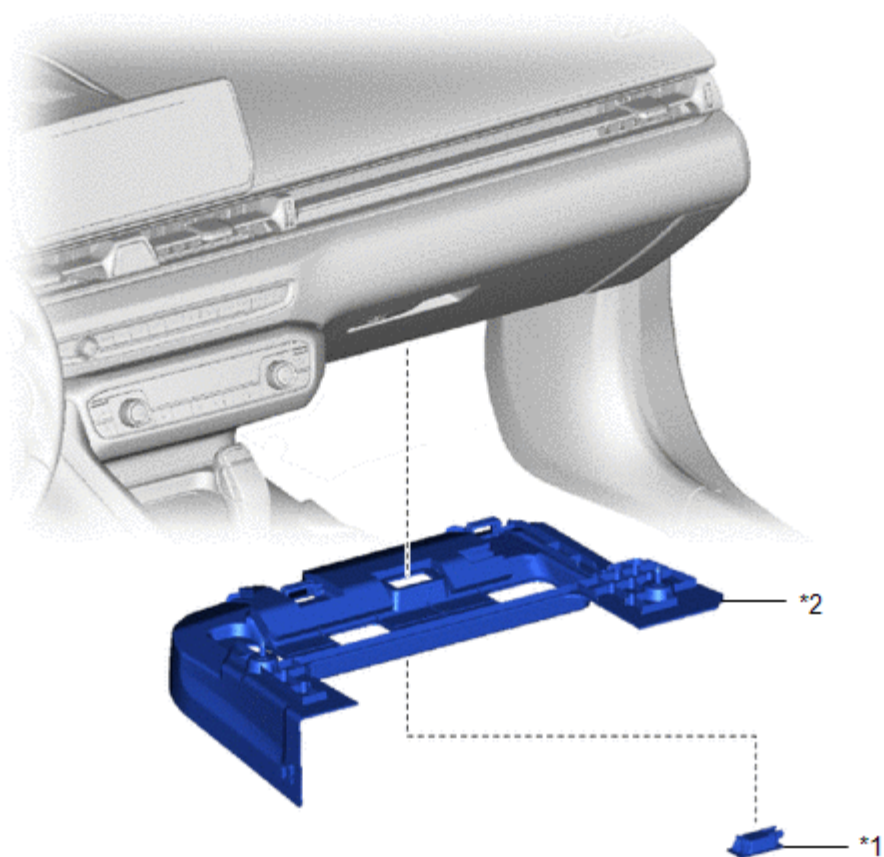

d

*A	for Front Passenger Side	-	-
*1	NO. 1 INTERIOR ILLUMINATION LIGHT ASSEMBLY	*2	NO. 2 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY



TOYOTA


Last Modified: 09-05-2019	6.9:8.0.49	Doc ID: RM100000001JCIJ
Model Year Start: 2020	Model: Supra	Prod Date Range: [03/2019 -]
Title: LIGHTING (INT): FOOTWELL LIGHT: REMOVAL; 2020 MY Supra [03/2019 -]		

REMOVAL


PROCEDURE

1. REMOVE NO. 1 INTERIOR ILLUMINATION LIGHT ASSEMBLY (for Driver Side)

(a) Using a molding remover A, detach the claw (2) to remove the No. 1 interior illumination light assembly (1) from the No. 1 instrument panel under cover sub-assembly.

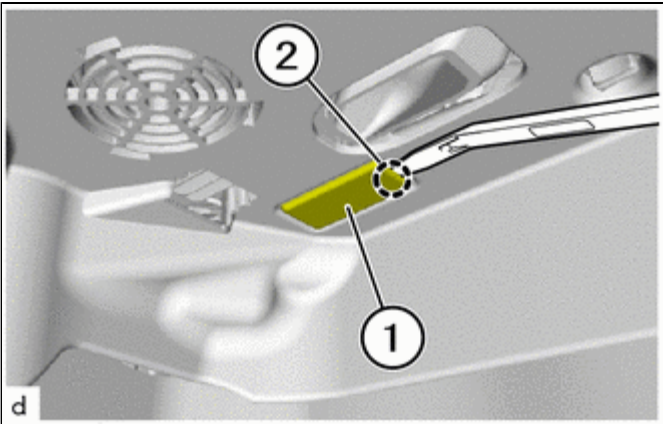

(b) Unlock plug connection (1) and disconnect.

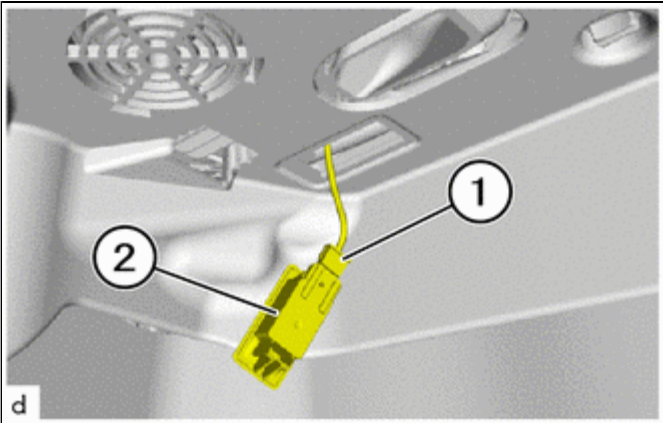


(c) Remove No. 1 interior illumination light assembly (2).

2. REMOVE NO. 2 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (for Front Passenger Side)

Click here [INFO](#)

3. REMOVE NO. 1 INTERIOR ILLUMINATION LIGHT ASSEMBLY (for Front Passenger Side)

(a) Detach the claw (2) to remove the No. 1 interior illumination light assembly (1) from the No. 2 instrument panel under cover sub-assembly.

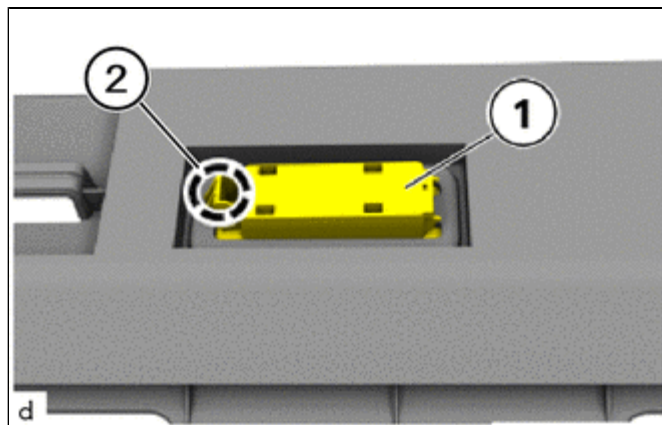

Last Modified: 09-05-2019	6.9:8.0.49	Doc ID: RM100000001JCIK
Model Year Start: 2020	Model: Supra	Prod Date Range: [03/2019 -]
Title: LIGHTING (INT): FOOTWELL LIGHT: INSTALLATION; 2020 MY Supra [03/2019 -]		


INSTALLATION

PROCEDURE

1. INSTALL NO. 1 INTERIOR ILLUMINATION LIGHT ASSEMBLY (for Driver Side)


(a) Connect and lock the connector on the No. 1 interior illumination light assembly.

(b) Attach the claw (2) to install the No. 1 interior illumination light assembly (1) to the No. 1 instrument panel under cover sub-assembly.

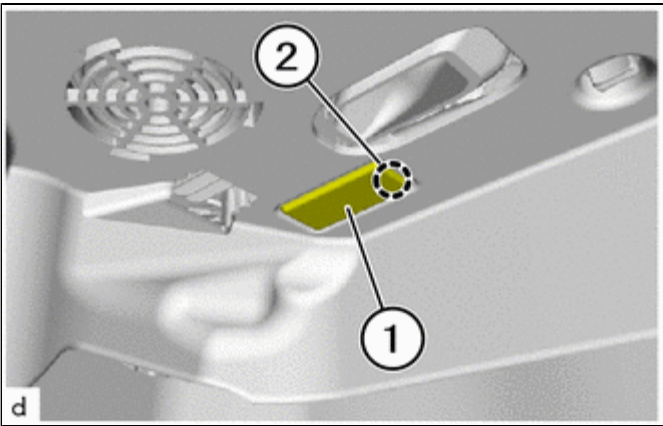

2. INSTALL NO. 1 INTERIOR ILLUMINATION LIGHT ASSEMBLY (for Front Passenger Side)

(a) Attach the claw (2) to install the No. 1 interior illumination light assembly (1) to the No. 2 instrument panel under cover sub-assembly.

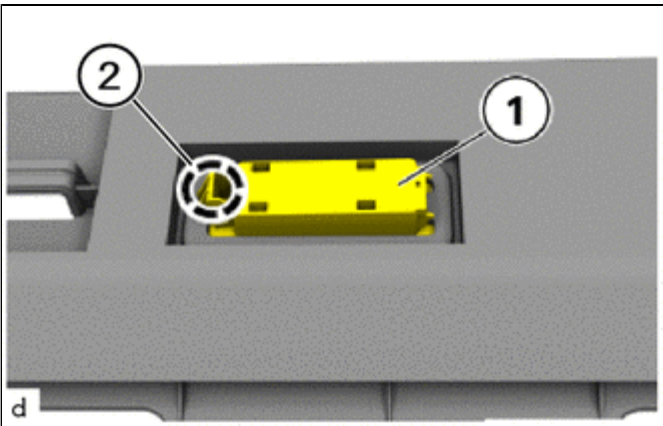


3. INSTALL NO. 2 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (for Front Passenger Side)

Click here [INFO](#)

Last Modified: 09-05-2019	6.9:8.0.49	Doc ID: RM100000001JCIF
Model Year Start: 2020	Model: Supra	Prod Date Range: [03/2019 -]
Title: LIGHTING (INT): GLOVE BOX LIGHT: COMPONENTS; 2020 MY Supra [03/2019 -]		

COMPONENTS

ILLUSTRATION

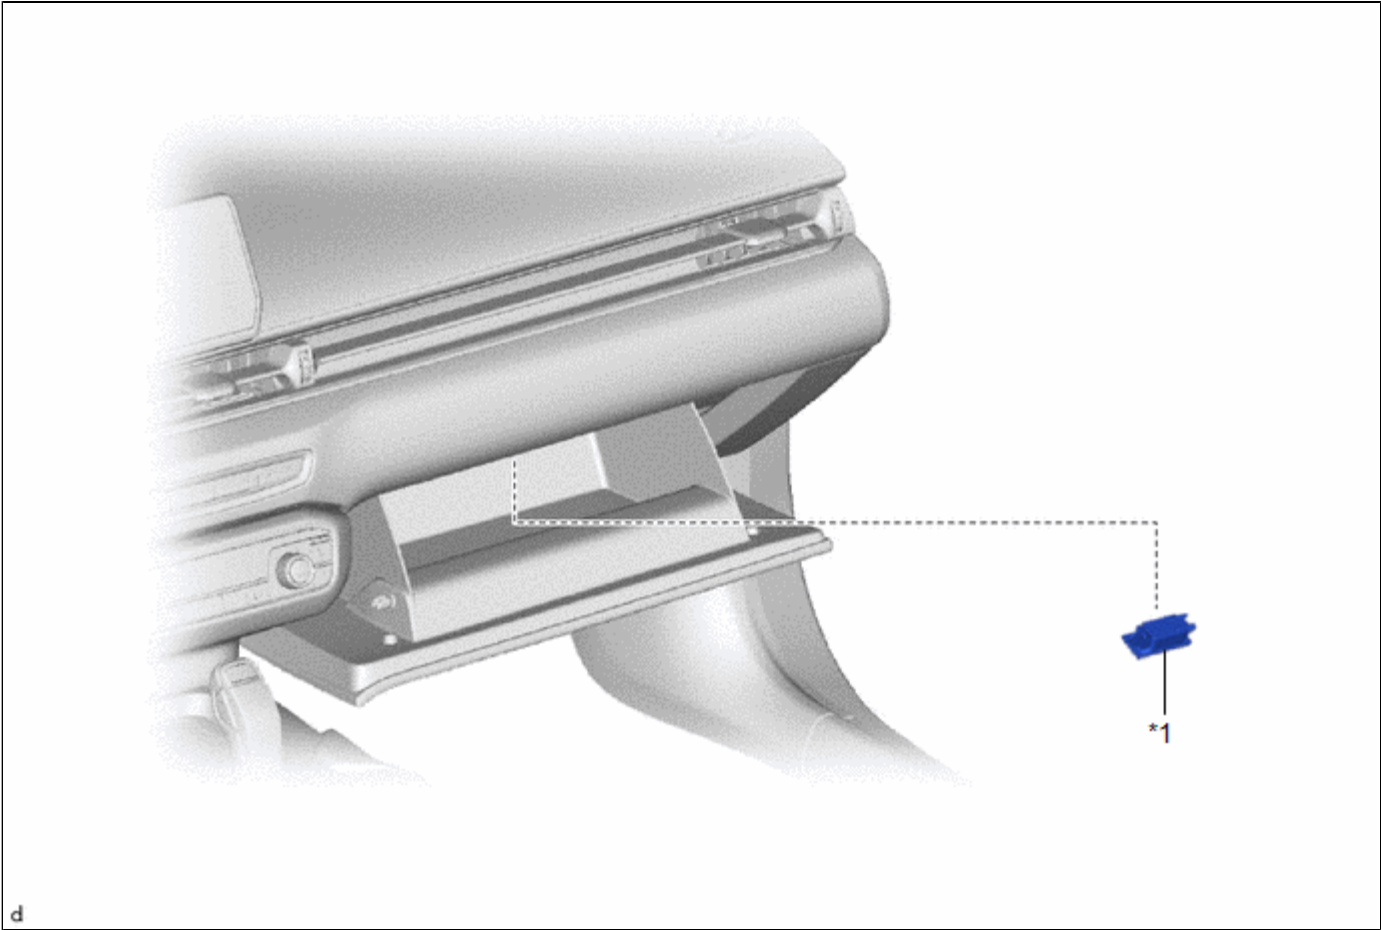


*1	GLOVE BOX LIGHT	-	-
----	-----------------	---	---

Last Modified: 09-05-2019	6.9:8.0.49	Doc ID: RM100000001JCIG
Model Year Start: 2020	Model: Supra	Prod Date Range: [03/2019 -]
Title: LIGHTING (INT): GLOVE BOX LIGHT: REMOVAL; 2020 MY Supra [03/2019 -]		


REMOVAL PROCEDURE

1. REMOVE GLOVE BOX LIGHT

(a) Open glove compartment door assembly (1).

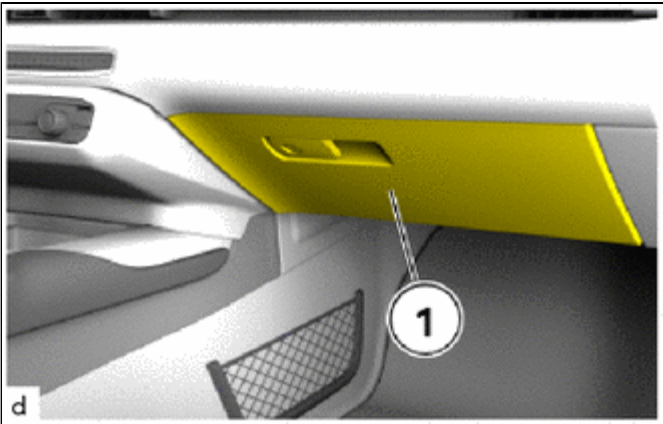


(b) Using a molding remover A, detach the claw (2) and guide (3) to remove the glove box light (1) in the direction of the arrow.

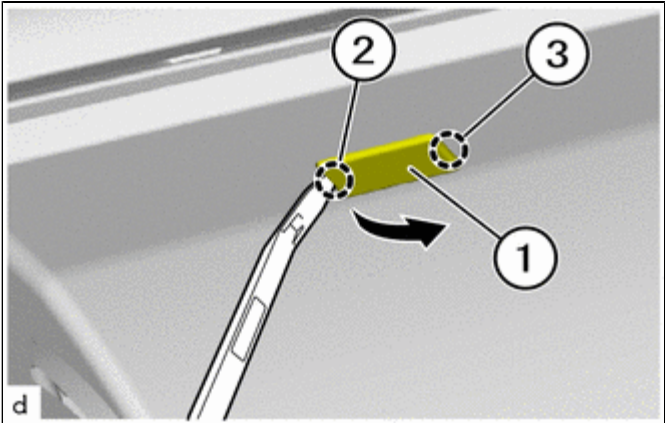

Remove in this Direction

(c) Unlock plug connection (1) and disconnect.

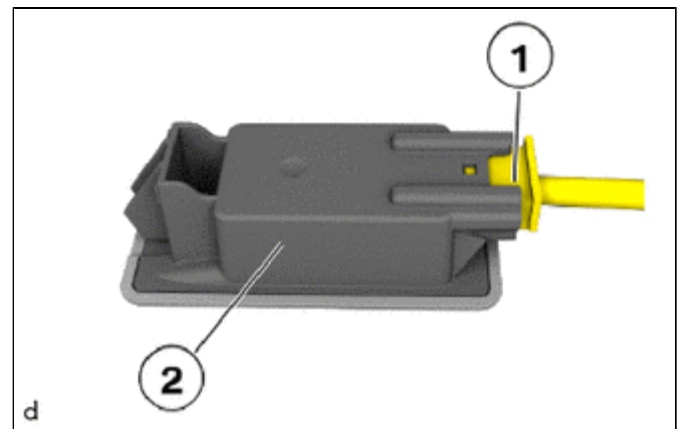

(d) Remove glove box light (2).


Last Modified: 09-05-2019	6.9:8.0.49	Doc ID: RM100000001JCIH
Model Year Start: 2020	Model: Supra	Prod Date Range: [03/2019 -]
Title: LIGHTING (INT): GLOVE BOX LIGHT: INSTALLATION; 2020 MY Supra [03/2019 -]		

INSTALLATION

PROCEDURE

1. INSTALL GLOVE BOX LIGHT

- (a) Connect and lock the connector on the glove box light.
- (b) Attach the guide (3) and claw (2) to install the glove box light (1) in the direction of the arrow.

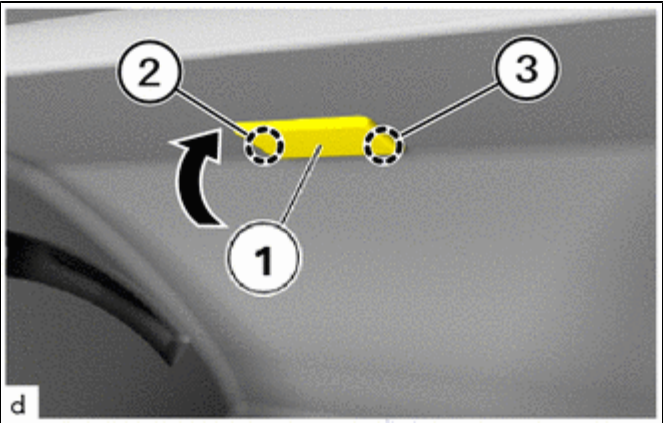


Install in this Direction

- (c) Close glove compartment door assembly.

Last Modified: 09-05-2019	6.9:8.0.49	Doc ID: RM100000001JCI9
Model Year Start: 2020	Model: Supra	Prod Date Range: [03/2019 -]
Title: LIGHTING (INT): LUGGAGE COMPARTMENT ROOM LIGHT: COMPONENTS; 2020 MY Supra [03/2019 -]		

COMPONENTS

ILLUSTRATION

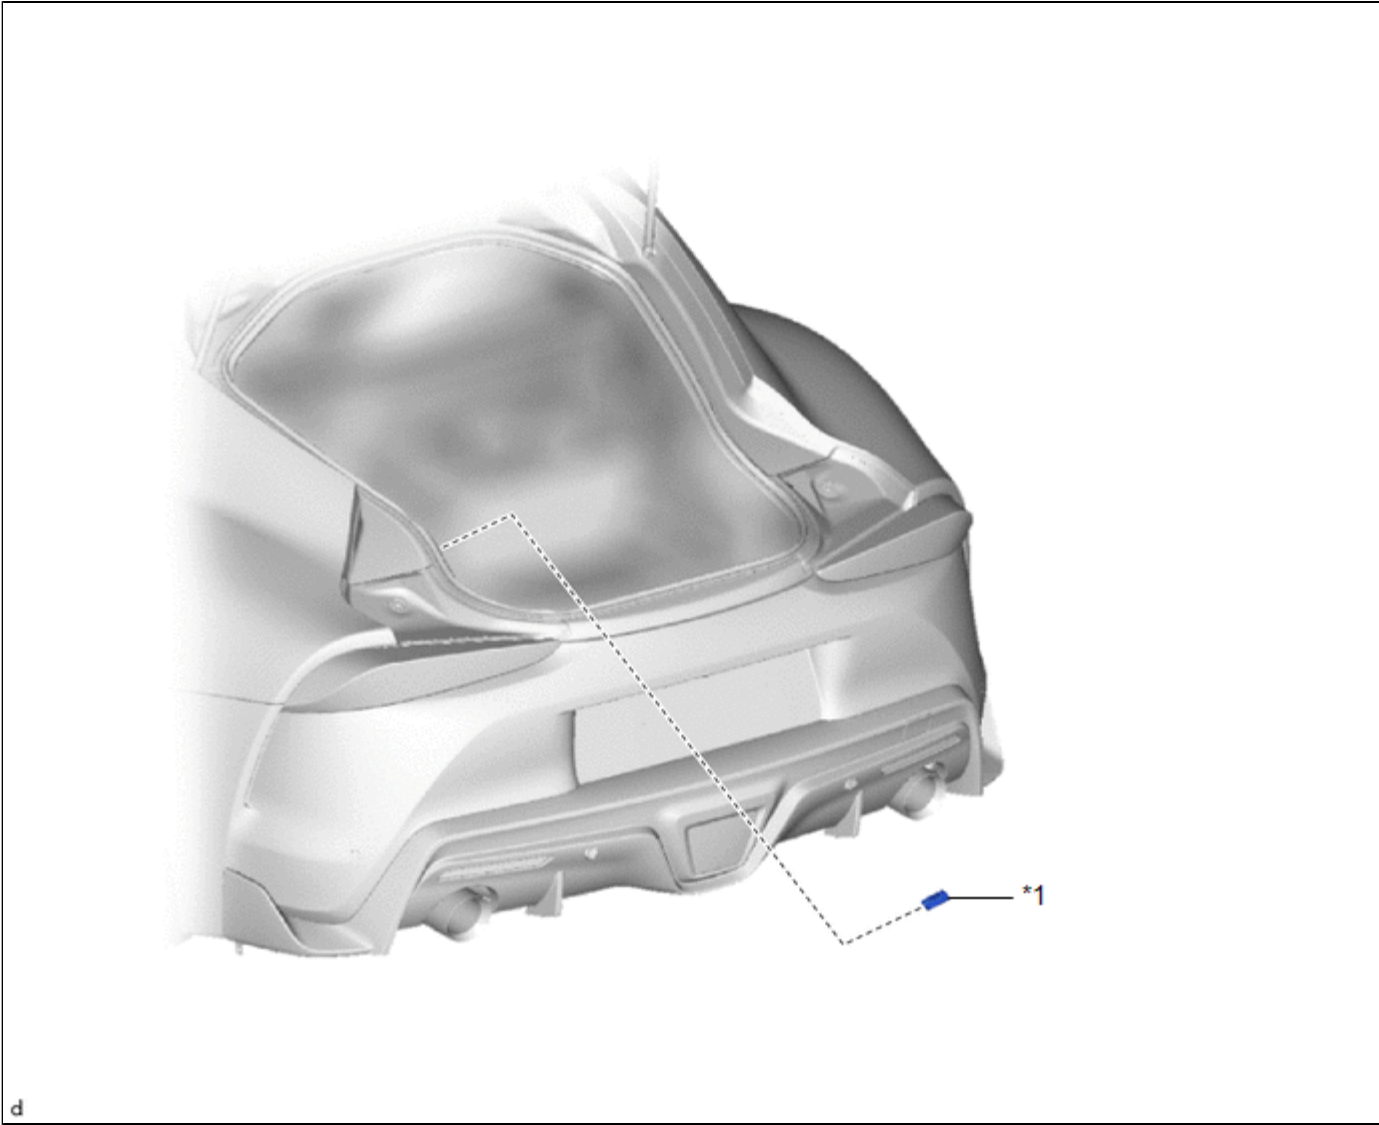

*1	NO. 1 LUGGAGE COMPARTMENT LIGHT ASSEMBLY	-	-
----	--	---	---

Last Modified: 09-05-2019	6.9:8.0.49	Doc ID: RM100000001JCIA
Model Year Start: 2020	Model: Supra	Prod Date Range: [03/2019 -]
Title: LIGHTING (INT): LUGGAGE COMPARTMENT ROOM LIGHT: REMOVAL; 2020 MY Supra [03/2019 -]		

REMOVAL

CAUTION / NOTICE / HINT


HINT:

- Use the same procedure for both the LH and RH sides.
- The procedure described below is for the LH side.


PROCEDURE

1. REMOVE NO. 1 LUGGAGE COMPARTMENT LIGHT ASSEMBLY

- (a) Using a molding remover A, detach the claw (2) to remove the No. 1 luggage compartment light assembly (1).

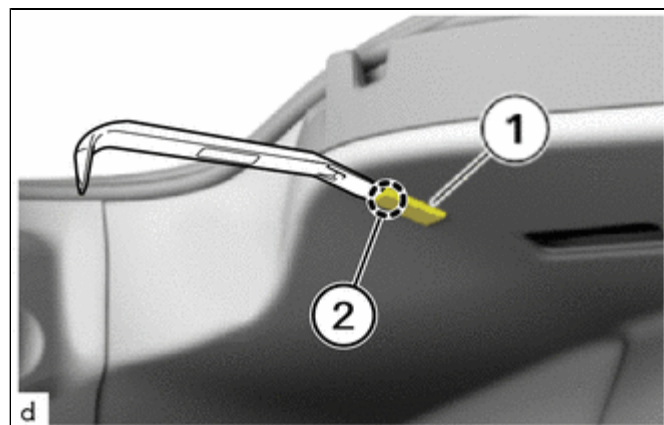

- (b) Unlock plug connection (1) and disconnect.

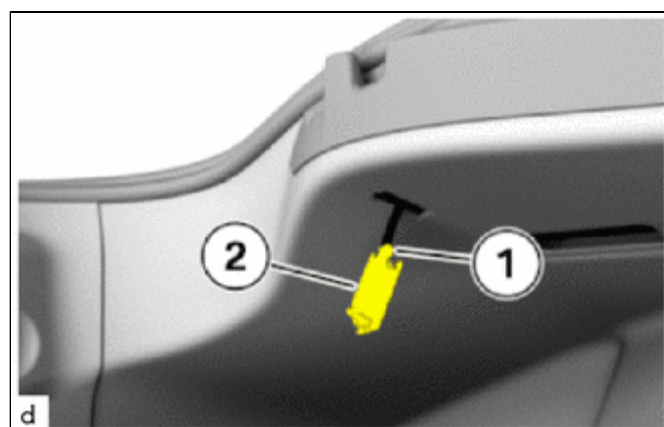

- (c) Remove the No. 1 luggage compartment light assembly (2).

Last Modified: 09-05-2019	6.9:8.0.49	Doc ID: RM100000001JCIB
Model Year Start: 2020	Model: Supra	Prod Date Range: [03/2019 -]
Title: LIGHTING (INT): LUGGAGE COMPARTMENT ROOM LIGHT: INSTALLATION; 2020 MY Supra [03/2019 -]		

INSTALLATION

CAUTION / NOTICE / HINT


HINT:

- Use the same procedure for both the LH and RH sides.
- The procedure described below is for the LH side.

PROCEDURE

1. INSTALL NO. 1 LUGGAGE COMPARTMENT LIGHT ASSEMBLY

(a) Connect and lock the connector on the No. 1 luggage compartment light assembly.

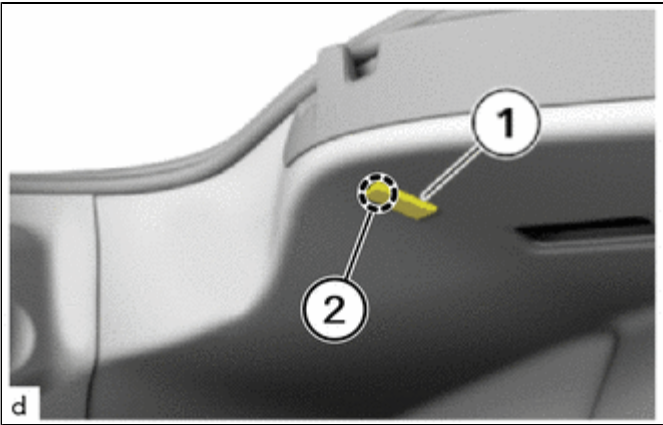


(b) Attach the claw (2) to install the No. 1 luggage compartment light assembly (1).

Last Modified: 09-05-2019	6.9:8.0.49	Doc ID: RM100000001JCI6
Model Year Start: 2020	Model: Supra	Prod Date Range: [03/2019 -]
Title: LIGHTING (INT): PERSONAL LIGHT: COMPONENTS; 2020 MY Supra [03/2019 -]		

COMPONENTS

ILLUSTRATION

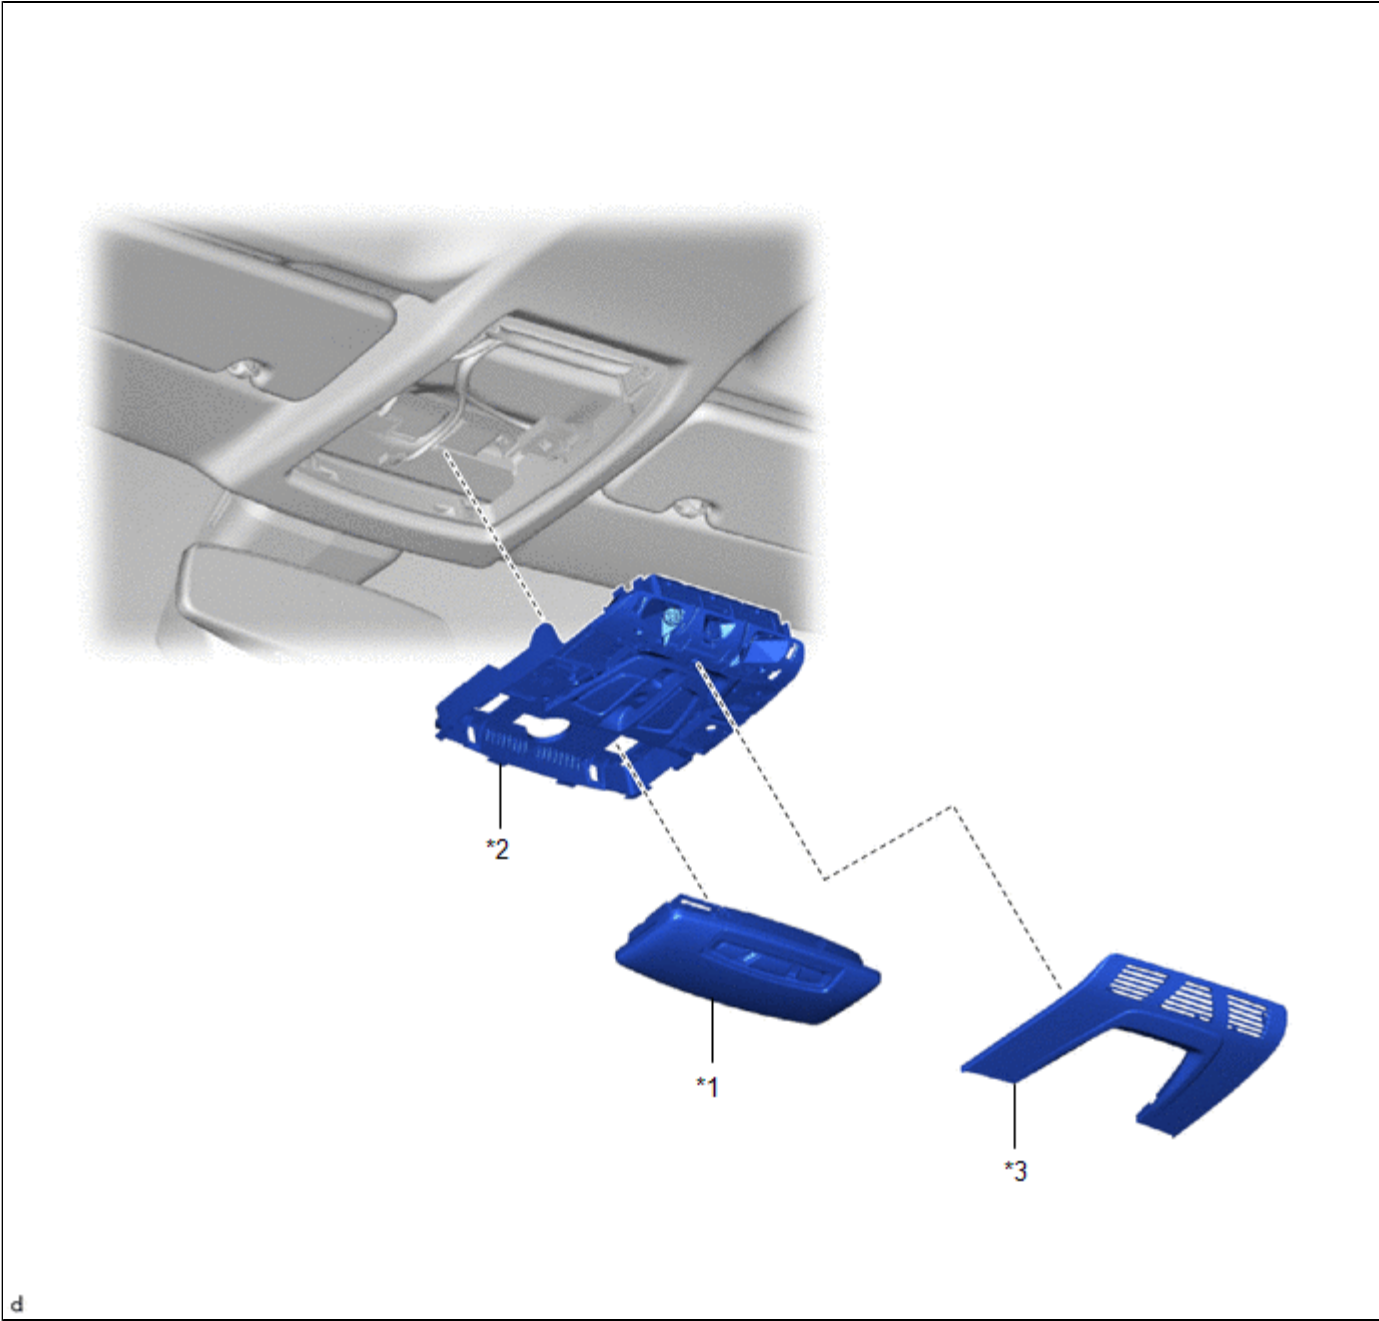

*1	MAP LIGHT ASSEMBLY	*2	ROOF CONSOLE BOX SUB-ASSEMBLY
*3	ROOF CONSOLE BOX COVER	-	-

Last Modified: 09-05-2019	6.9:8.0.49	Doc ID: RM100000001JCI7
Model Year Start: 2020	Model: Supra	Prod Date Range: [03/2019 -]
Title: LIGHTING (INT): PERSONAL LIGHT: REMOVAL; 2020 MY Supra [03/2019 -]		


REMOVAL

PROCEDURE


1. REMOVE ROOF CONSOLE BOX SUB-ASSEMBLY

(a) Using a molding remover A, detach the claws (2) and guides (3) to remove the roof console box cover (1).

NOTICE:
Carefully detach and remove the roof console box cover, not to damage the claws.

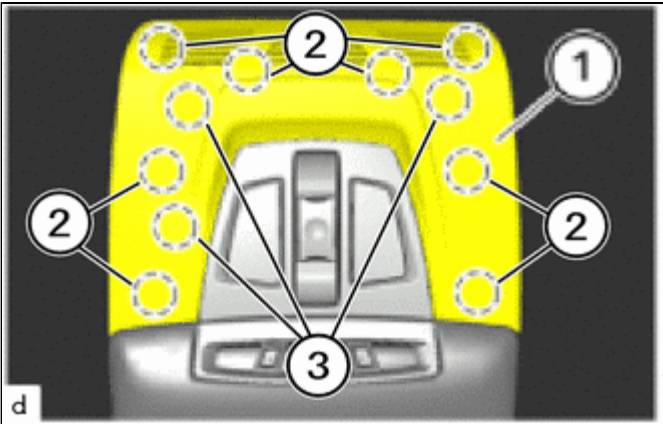


(b) Detach the retaining lugs (3) on the left and right using a screwdriver in the direction of the arrows.

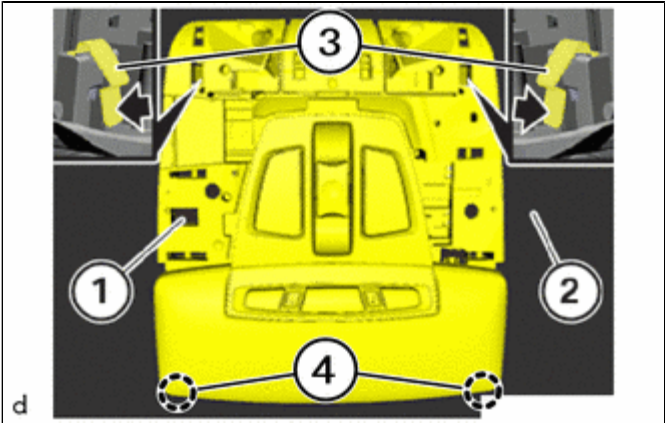


(c) Detach the guides (4) to remove the roof console box sub-assembly (1) from the roof headlining assembly (2).

(d) Unlock associated plug (1) connections and disconnect.

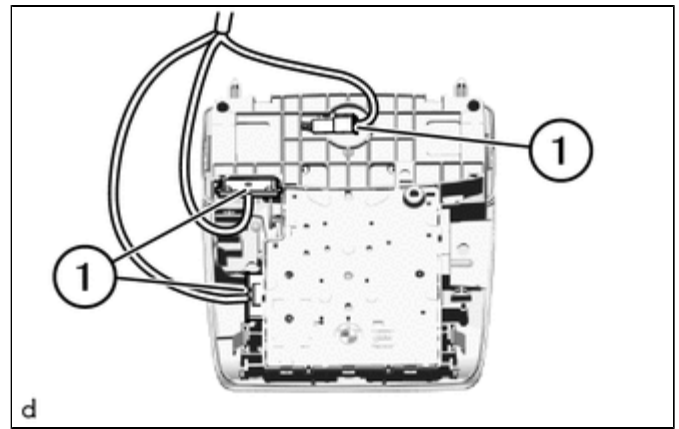

2. REMOVE MAP LIGHT ASSEMBLY

(a) Detach the clamps (2) and guides (4) to remove the map light assembly (1) from the roof console box sub-assembly (3).

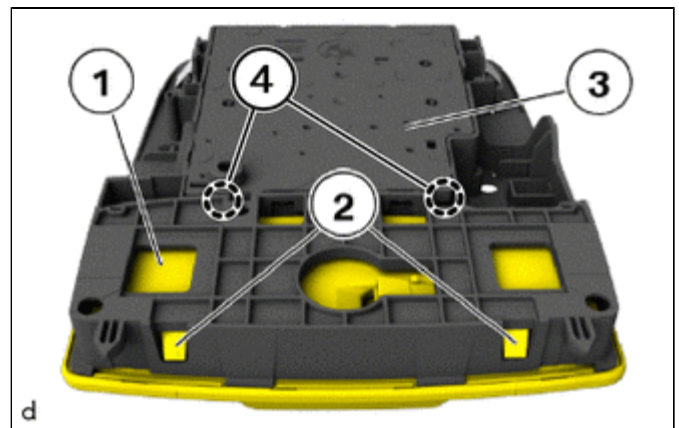


Last Modified: 09-05-2019	6.9:8.0.49	Doc ID: RM100000001JCI8
Model Year Start: 2020	Model: Supra	Prod Date Range: [03/2019 -]
Title: LIGHTING (INT): PERSONAL LIGHT: INSTALLATION; 2020 MY Supra [03/2019 -]		

INSTALLATION

PROCEDURE


1. INSTALL MAP LIGHT ASSEMBLY

- (a) Attach the guides (4) and clamps (2) to install the map light assembly (1) to the roof console box sub-assembly (3).

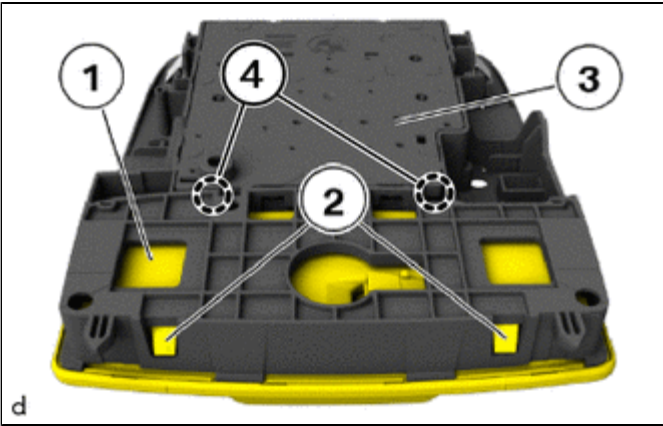


2. INSTALL ROOF CONSOLE BOX SUB-ASSEMBLY


- (a) Connect and lock corresponding connectors (1).

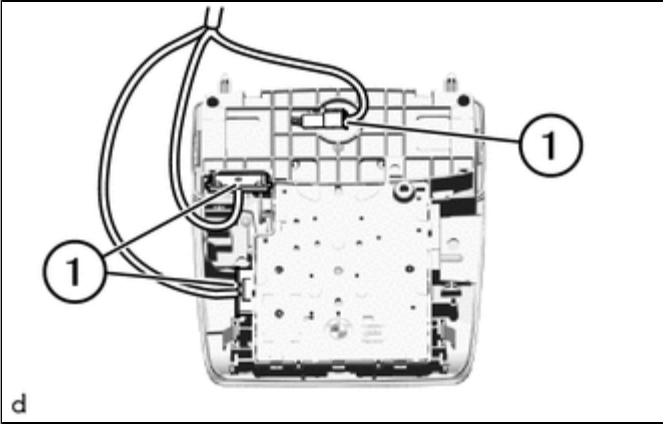

- (b) Attach the guides (4) and lugs (3) to join the roof console box sub-assembly (1) to the roof headlining assembly (2).

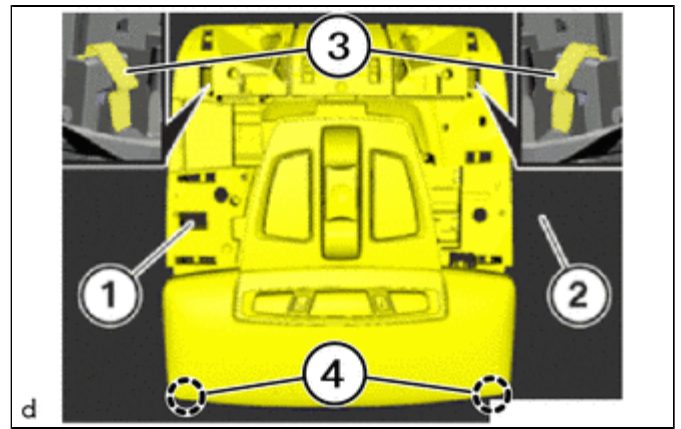


(c) Attach the guides (3) and claws (2) to install the roof console box cover (1) carefully on the marks on the roof console box sub-assembly.

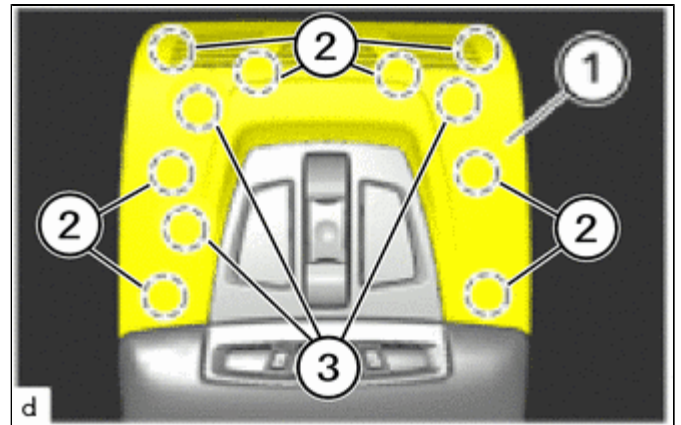

Last Modified: 09-05-2019	6.9:8.0.49	Doc ID: RM100000001JCI3
Model Year Start: 2020	Model: Supra	Prod Date Range: [03/2019 -]
Title: LIGHTING (INT): VANITY LIGHT: COMPONENTS; 2020 MY Supra [03/2019 -]		

COMPONENTS

ILLUSTRATION

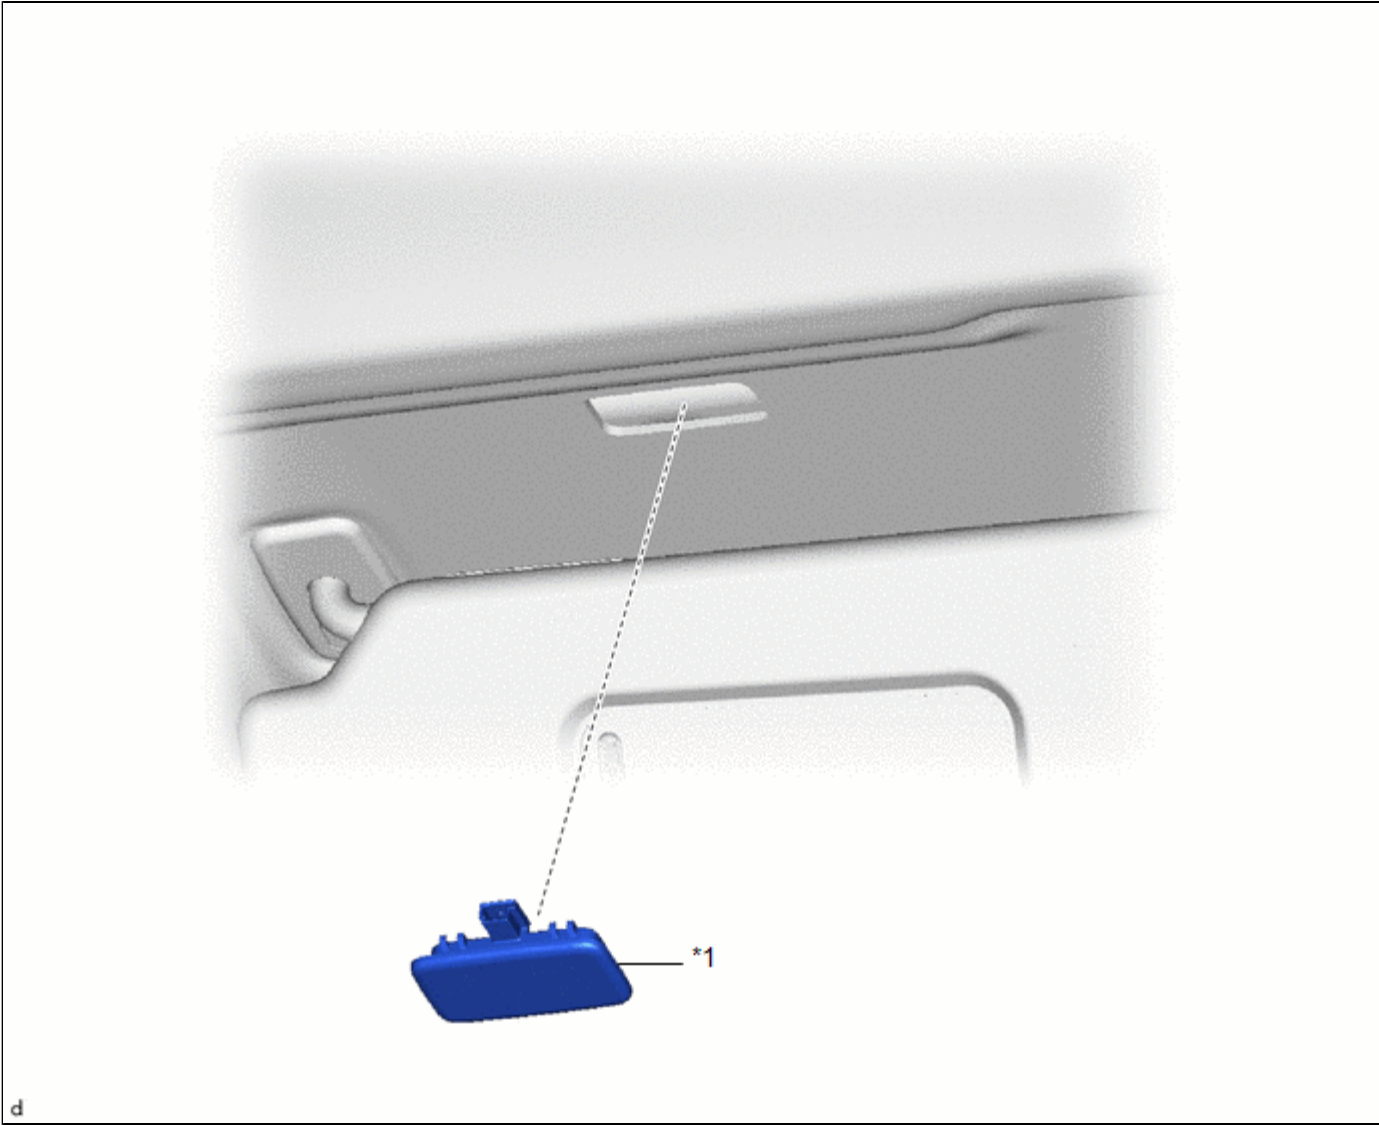

*1	VANITY LIGHT ASSEMBLY	-	-
----	-----------------------	---	---

Last Modified: 09-05-2019	6.9:8.0.49	Doc ID: RM100000001JCI4
Model Year Start: 2020	Model: Supra	Prod Date Range: [03/2019 -]
Title: LIGHTING (INT): VANITY LIGHT: REMOVAL; 2020 MY Supra [03/2019 -]		

REMOVAL

CAUTION / NOTICE / HINT


HINT:

- Use the same procedure for both the LH and RH sides.
- The procedure described below is for the LH side.


PROCEDURE

1. REMOVE VANITY LIGHT ASSEMBLY

- (a) Using a molding remover D, detach the claws (3) to remove the vanity light assembly (1) from roof headlining assembly (2).

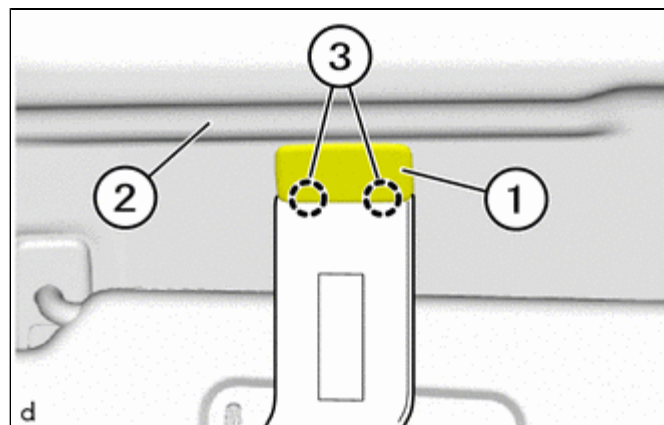

- (b) Unlock and disconnect connector (1).

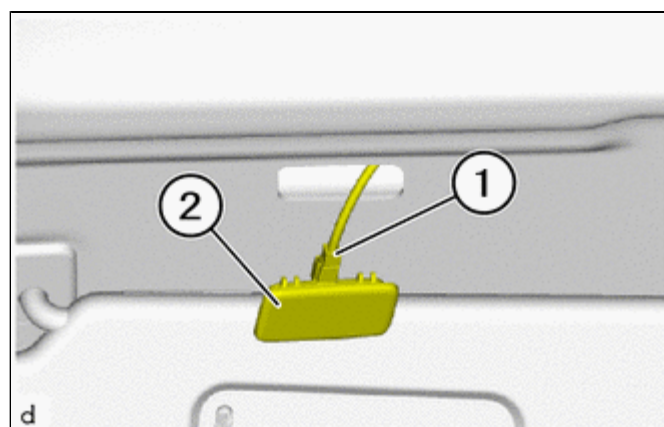

- (c) Remove vanity light assembly (2).

Last Modified: 09-05-2019	6.9:8.0.49	Doc ID: RM100000001JCI5
Model Year Start: 2020	Model: Supra	Prod Date Range: [03/2019 -]
Title: LIGHTING (INT): VANITY LIGHT: INSTALLATION; 2020 MY Supra [03/2019 -]		

INSTALLATION

CAUTION / NOTICE / HINT

HINT:


- Use the same procedure for both the LH and RH sides.
- The procedure described below is for the LH side.

PROCEDURE

1. INSTALL VANITY LIGHT ASSEMBLY

(a) Connect the connector to the vanity light assembly.


(b) Attach the claws (3) to install the vanity light assembly (1) in the roof headlining assembly (2).

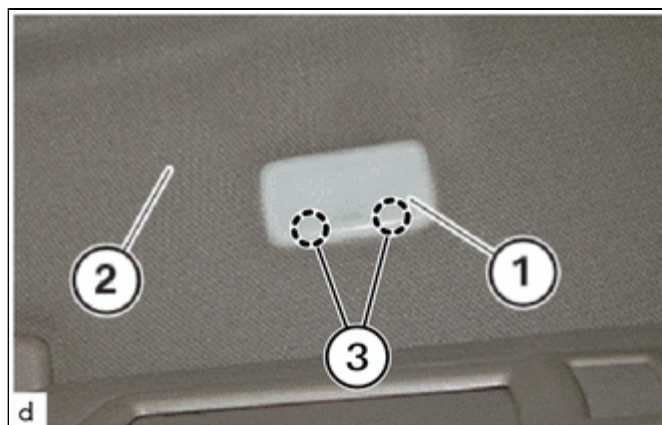

Last Modified: 09-05-2019	6.9:8.0.49	Doc ID: RM100000001JCIL
Model Year Start: 2020	Model: Supra	Prod Date Range: [03/2019 -]
Title: LIGHTING (INT): VANITY LIGHT SWITCH: COMPONENTS; 2020 MY Supra [03/2019 -]		

COMPONENTS

ILLUSTRATION

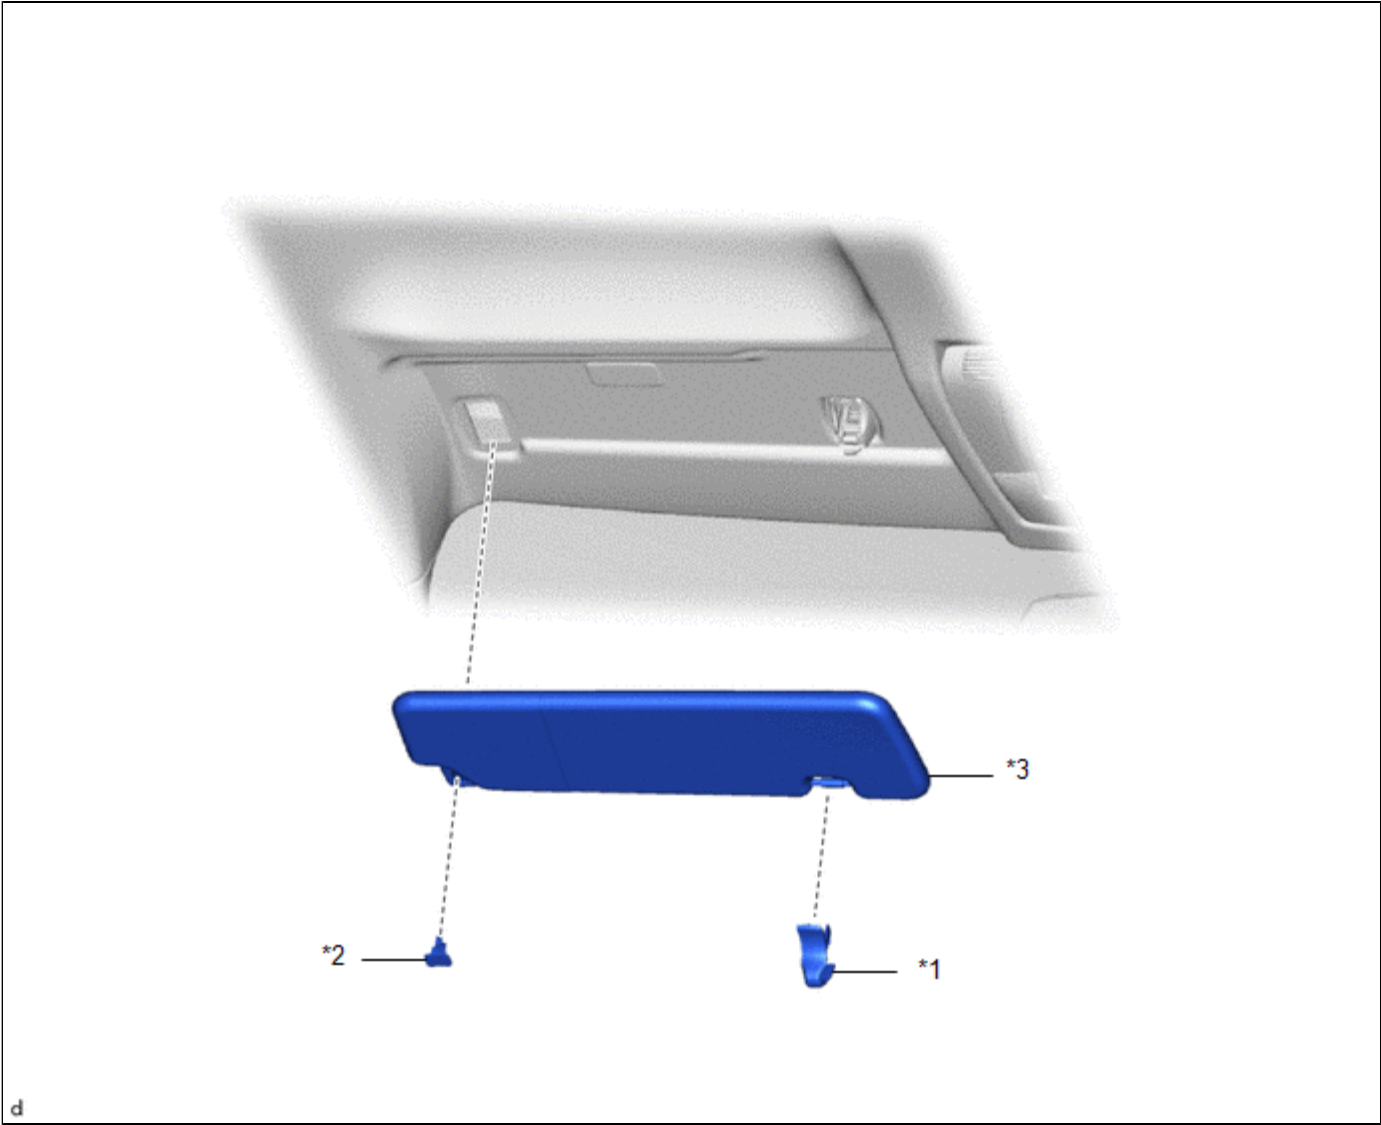

*1	VISOR HOLDER COVER	*2	COVER
*3	VISOR ASSEMBLY	-	-

Last Modified: 09-05-2019	6.9:8.0.49	Doc ID: RM100000001JCIM
Model Year Start: 2020	Model: Supra	Prod Date Range: [03/2019 -]
Title: LIGHTING (INT): VANITY LIGHT SWITCH: REMOVAL; 2020 MY Supra [03/2019 -]		

REMOVAL

CAUTION / NOTICE / HINT


HINT:

- Use the same procedure for both the LH and RH sides.
- The procedure described below is for the LH side.


PROCEDURE

1. REMOVE VISOR ASSEMBLY


- (a) Detach the claws (2) to pull out the visor holder cover (1) from the visor holder (3).

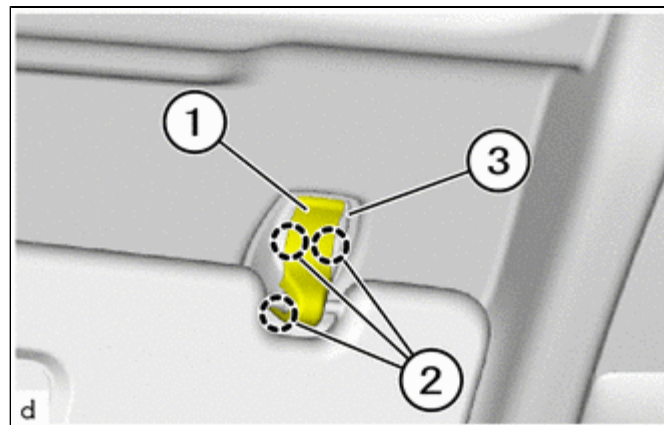

- (b) Detach the claws (3) to pull out the cover (1) from the visor assembly (2).

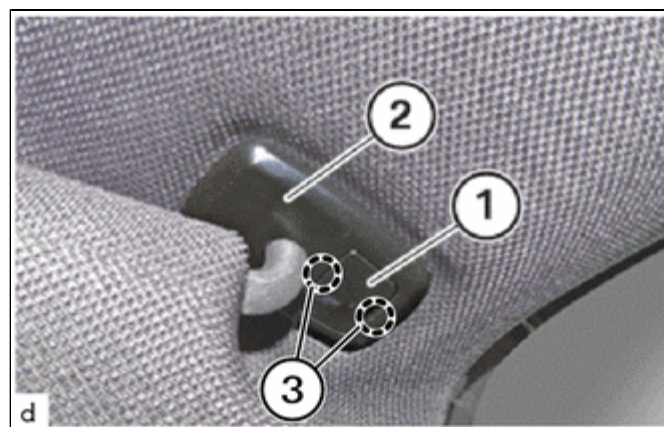

(c) Detach the clip (2) to remove visor assembly (1).

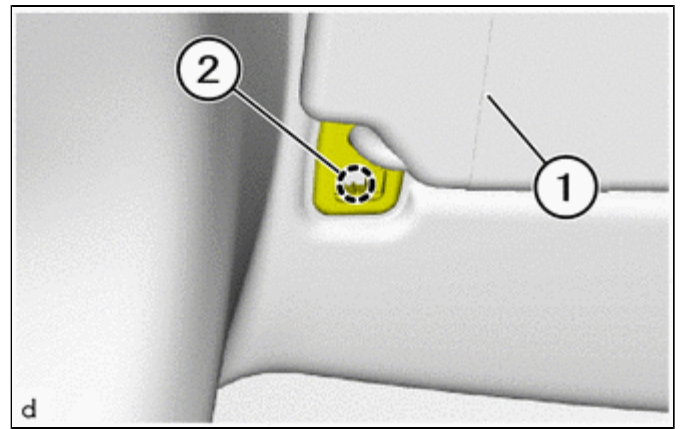

(d) Unlock plug connection and disconnect.



Last Modified: 09-05-2019	6.9:8.0.49	Doc ID: RM100000001JCIN
Model Year Start: 2020	Model: Supra	Prod Date Range: [03/2019 -]
Title: LIGHTING (INT): VANITY LIGHT SWITCH: INSTALLATION; 2020 MY Supra [03/2019 -]		

INSTALLATION

CAUTION / NOTICE / HINT

HINT:


- Use the same procedure for both the LH and RH sides.
- The procedure described below is for the LH side.

PROCEDURE

1. INSTALL VISOR ASSEMBLY

- Connect and lock the connector.
- Attach the clip to install the visor assembly.

- Attach the claws (3) to install cover (1) to the visor assembly (2).

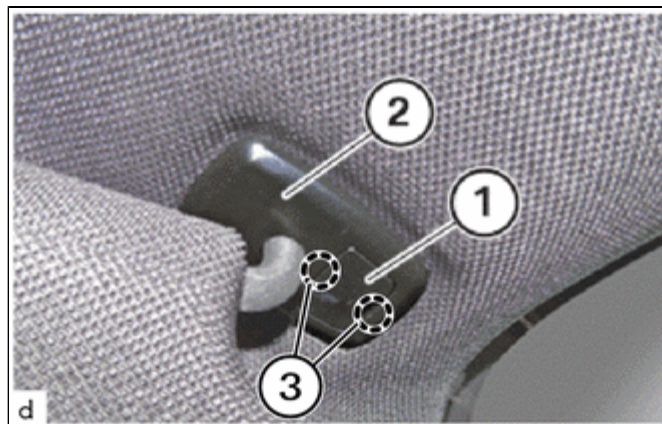

- Attach the claws (2) to install visor holder cover (1) to the visor holder (3).

