

2. Horn System

A: WIRING DIAGRAM


1. HORN

<Ref. to WI-130, WIRING DIAGRAM, Horn System.>

B: INSPECTION

1. HORN RELAY

Measure the security horn relay resistance between terminals (indicated in the table below) when connecting terminal No. 4 to battery positive terminal and terminal No. 3 to battery ground terminal.

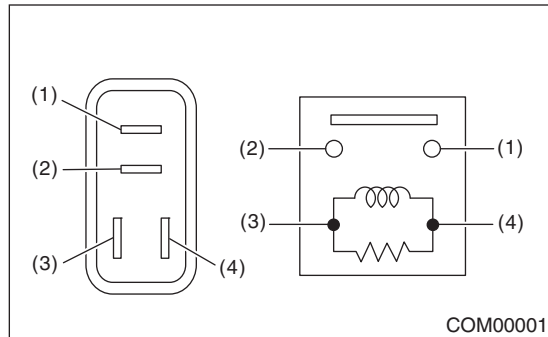

Continuity	Terminal No.	Standard
Yes	1 and 2	Less than 1 Ω
No		1 M Ω or more

C: NOTE

For removal procedure of each component in the horn system, refer to the respective section.

- Horn assembly <Ref. to COM-4, Horn.>
- Horn switch <Ref. to COM-5, Horn Switch.>