


Cadillac Eldorado 1992 – 1993 fuse box diagram

Engine compartment

Maxi Fuse/Relay Center

The maxi fuse and relays are located next to the engine compartment fuse block.

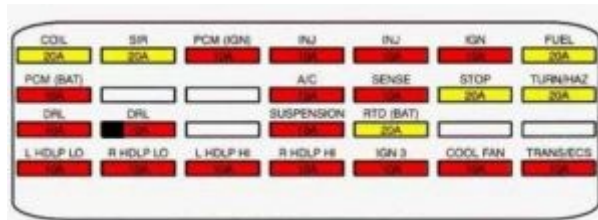


Cadillac Eldorado – fuse box diagram – engine

compartment

Fuse name	Ampere rating [A]	Usage
COIL	20	4.9L DISTRIBUTOR, 4.6L IGNITION CONTROL MODULE
SIR	20	DIAGNOSTIC ENERGY RESERVE MODULE (DERM) SIR (AIR BAG), ARMING SENSOR
PCM (IGN)	10	POWERTRAIN CONTROL MODULE (PCM), PASSKey DECODER MODULE
INJ	10	FUEL INJECTORS 1,4,6,7
INJ	10	FUEL INJECTORS 2,3,5,
IGN	10	A/C COMPRESSOR, ELECTROCHROMIC MIRROR, INSTRUMENT PANEL CLUSTER, DIAGNOSTIC ENERGY RESERVE MODULE (DERM) SIR (AIR BAG), KEYLESS ENTRY MODULE, CORNERING LIGHTS, CHIME MODULE, TWILIGHT SENTINEL/DRL MODULE, BACKUP LIGHTS, BRAKE TRANSMISSION SHIFT INTERLOCK
FUEL	20	FUELPUMP, POWERTRAIN CONTROL MODULE
PCM (BAT)	10	POWERTRAIN CONTROL MODULE (PCM)
A/C	10	A/C COMPRESSOR
HTD W/S	10	HEATED WINDSHIELD
STOP LP	20	STOP LIGHTS
TURN/HAZ	20	HAZARD LIGHTS, TURN SIGNAL LIGHTS
DRL (CANADA)	10	DAYTIME RUNNING LIGHTS

DRL (CANADA)	10	DAYTIME RUNNING LIGHTS
SUSPENSION	10	ROAD SENSING SUSPENSION, SPEED SENSITIVE SUSPENSION (4.9L)
RTD (BAT)	20	ROAD SENSING SUSPENSION
L HDLP LO (EXPORT)	10	LEFT HEADLAMP LOW BEAM
R HDLP LO (EXPORT)	10	RT HEADLAMP LOW BEAM
L HDLP HI (EXPORT)	10	LEFT HEADLAMP HIGH BEAM
R HDLP HI (EXPORT)		RIGHT HEADLAMP HIGH BEAM
IGN 3	10	HEATED WINDSHIELD, HEATER AND A/C PROGRAMMER, ELECT. LEVEL CONTROL (ELC), DEFOGGER RELAY "D", CRUISE CONTROL, POWERTRAIN CONTROL MODULE
COOLING FAN	10	COOLING FANS, POWERTRAIN CONTROL MODULE (4.6L), FRONT AND REAR HEATED OXYGEN SENSOR (4.6L)
TRANS/ECS	10	EXHAUST GAS RECIRCULATION (EGR), POWERTRAIN CONTROL MODULE (PCM), AUTOMATIC TRANSAXLE, EVAPORATIVE EMISSION CONTROL SOLENOID, OVERSPEED ALERT MODULE (EXPORT), POWER STEERING PRESSURE SWITCH

MAXI Fuse block

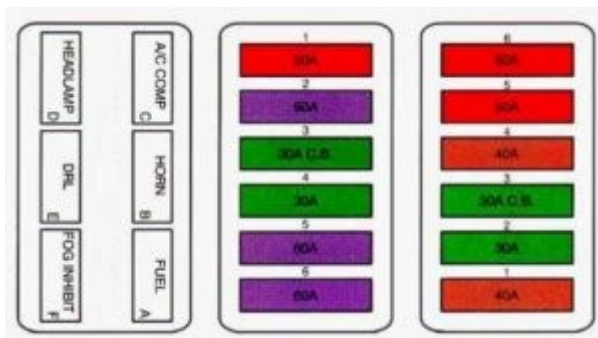

Cadillac Eldorado – fuse box diagram – maxi fuse

block

LH MAXI FUSE BLOCK

Fuse number	Fuse name	Ampere rating [A]	Usage
-------------	-----------	-------------------	-------


1		50	RETAINED ACCESSORY POWER (RADIO/WIPERS), STARTER, TRUNK COMR FUSE A11, ENGINE COMP FUSES A1, A3, A5, A7, A9, A11, A13
2	U.S.A./CANADA Z49/SAUDI	60	TRUNK COMP FUSES C1, C3, C5, C7, C9, C11, ROAD SENSING SUSPENSION
	EXPORT EXCEPT SAUD	60	ROAD SENSING SUSPENSION, REAR FOG LIGHT (EXPORT), TRUNK COMP FUSES C1, C3, C5, C7, C9, C11, C13
3	CIRCUIT BREAKER	30	TRUNK RELEASE, LEFT AND RIGHT POWER SEAT, LEFT AND RIGHT LUMBAR CONTROL, KEYLESS ENTRY MODULE, POWER DOOR LOCKS, HORNS
4		30	POWERTRAIN CONTROL MODULE (PCM), ELECTRONIC CLIMATE CONTROL, RAP/ILLUMINATED ENTRY MODULE, INSTRUMENT PANEL CLUSTER, PASSKey DECODER MODULE, THEFT DETERRENT
5		60	LEFT AND RIGHT HEATED SEATS, ELECTRONIC LEVEL CONTROL (ELC), TRUNK LID PULL DOWN, POWER ANTENNA, REAR DEFOGGER, LEFT AND RIGHT MIRROR DEFOGGERS
9		60	RETAINED ACCESSORY POWER (SUNROOF/POWER WINDOWS), ENGINE COMP. FUSES C7, D1, D3, D5, TRUNK COMF! FUSES A1, A3, A5, A7

RH MAXI FUSE BLOCK

Fuse numeber	Fuse name	Ampere rating [A]	Usage
1	FUSE	40	TURN/HAZ STOP LP, PARK LIGHTS
2	FUSE	30	DELCO-BOSEG SPEAKERS, RADIO CONTROL HEAD, REMOTE RADIO RECEIVER
3	CIRCUIT BREAKER	30	FLASH TO PASS FEATURE, DAYTIME RUNNING LIGHT (DRL), HEADLIGHTS
4	HAVAC BLOWER	40	HVAC POWER MODULE, A/C COMPRESSOR
5	ABS	50	ANTILOCK BRAKE PRESSURE VALVE

6	COOLING FANS	50	COOLING FANS
---	--------------	----	--------------

Rear Compartment Fuse Block

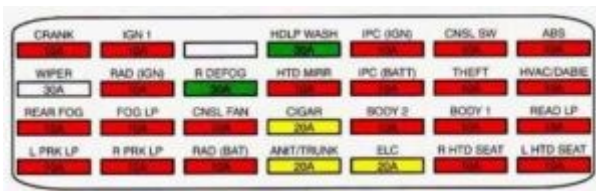

Cadillac Eldorado – fuse box diagram – trunk

compartment

Fuse name	Ampere rating [A]	Usage
CRANK	10	RAP/ILLUMINATED ENTRY MODULE, DIAGNOSTIC ENERGY RESERVE MODULE (DERM), STARTER
IGN 1	10	CATALYTIC CONVERTER ALARM MODULE (EXPORT), FUEL LEVEL SENSOR, ELECTROCHROMIC MIRROR, THEFT DETERRENT MODULE, KEYLESS ENTRY MODULE, TURN SIGNAL LIGHTS, RAP/ILLUMINATED ENTRY MODULE
HDLP WASH (EXPORT)	30	HEADLIGHT WASHER MODULE
IPC (IGN)	10	INSTRUMENT PANEL CLUSTER
CNSL SW	10	REAR BLOWER MOTOR, CONSOLE SWITCH
ABS	10	ELECTRONIC BRAKE CONTROL MODULE (4.9L), ELECTRONIC BRAKE AND TRACTION CONTROL, MODULE (NORTHSTAR)
WIPER	30	WIPER/WASHER SWITCH
RAD (IGN)	10	REMOTE RADIO RECEIVER
R DEFOG	30	REAR DEFOGGER
HTD MIRR	10	RIGHT AND LEFT POWER MIRROR-DEFOGGER
IPC (BATT)	10	INSTRUMENT PANEL CLUSTER
THEFT	10	PASS-Key@ DECODER MODULE, THEFT DETERRENT RELAY, THEFT DETERRENT MODULE
HVAC/DABIE	10	HEATER AND A/C PROGRAMMER, RAP/ILLUMINATED ENTRY MODULE
REAR FOG (EXPORT)	10	REAR FOG LIGHTS

FOG LP (4.6L)	10	FOG LIGHTS
CNSL FAN	10	REAR BLOWER MOTOR
CIGAR	20	REAR CIGAR LIGHTERS-SEVILLE ONLY, FRONT CIGAR LIGHTER, CHIME MODULE
BODY 2	10	POWER MIRROR SWITCH, RETAINED ACCESSORY POWER, TRUNK LIGHT, CONSOLE SWITCH, PANEL LIGHTS INHIBIT (EXPORT), COURTESY LIGHTS, KEYLESS ENTRY MODULE
BODY 1	10	POWER DOOR LOCKS, DOOR LOCK CYLINDER ILLUMINATION, GLOVE BOX LIGHT, FOOTWELL LIGHTS, TWILIGHT SENTINEUDRL MODULE, HEADLIGHT SWITCH
READ LP	10	LEFT AND RIGHT VANITY MIRRORS, GARAGE DOOR OPENER, FRONT AND REAR HEADER LIGHTS
L PRK LP	10	RADIO DIMMING, HEADLIGHT SWITCH, INSTRUMENT PANEL CLUSTER, LEFT MARKER LIGHT, LEFT TAIL/STOP/TURN LIGHTS, LEFT PARWTURN LIGHT
R PRK LP	10	RIGHT MARKER LIGHTS, LICENSE LIGHTS, RIGHT PARWURN LIGHT, ENGINE COMPARTMENT LIGHT, RIGHT TAIL/STOP/TURN LIGHTS
RAD (BAT)	10	REMOTE RADIO RECEIVER, RADIO CONTROL HEAD
ANT/TRUNK	20	TRUNK PULL DOWN, POWER ANTENNA
ELC	20	ELECTRONIC LEVEL CONTROL
R HTD SEAT	10	PASSENGERS HEATED SEAT
L HTD SEAT	10	DRIVERS HEATED SEAT