


Last Modified: 09-05-2019	6.9:8.0.49	Doc ID: RM100000001JCQ0
Model Year Start: 2020	Model: Supra	Prod Date Range: [03/2019 -]
Title: MIRROR (INT): INNER REAR VIEW MIRROR: COMPONENTS; 2020 MY Supra [03/2019 -]		

COMPONENTS

ILLUSTRATION

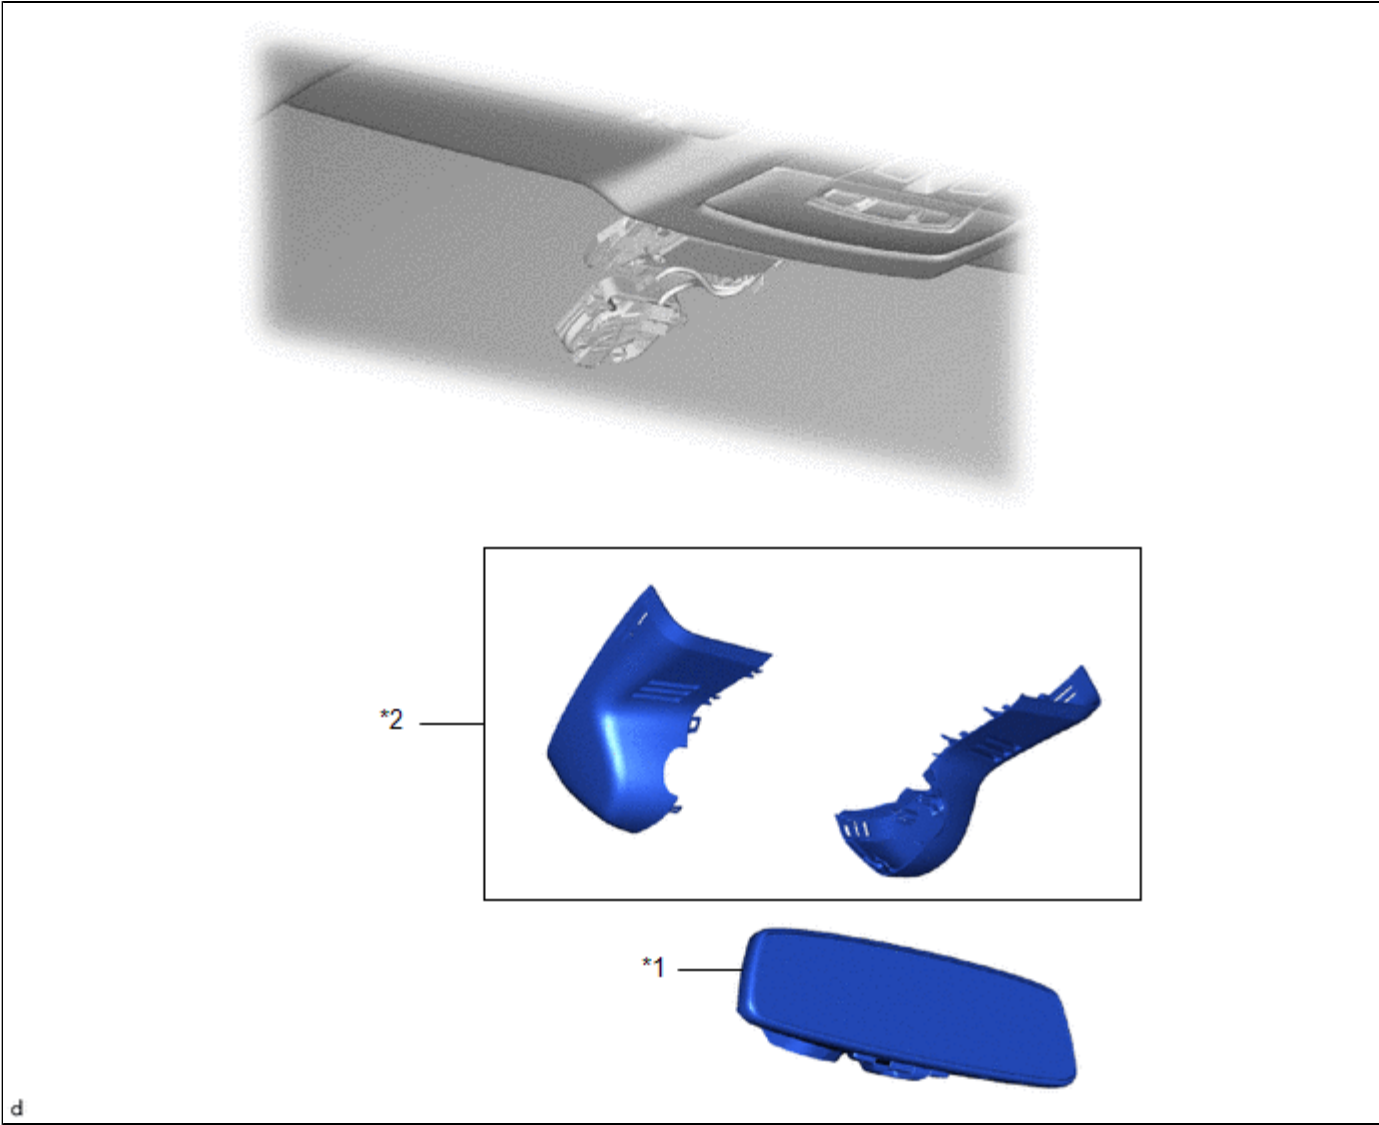

*1	INNER REAR VIEW MIRROR ASSEMBLY	*2	INNER REAR VIEW MIRROR STAY HOLDER COVER
----	---------------------------------	----	---


Last Modified: 09-05-2019	6.9:8.0.49	Doc ID: RM100000001JCQ1
Model Year Start: 2020	Model: Supra	Prod Date Range: [03/2019 -]
Title: MIRROR (INT): INNER REAR VIEW MIRROR: REMOVAL; 2020 MY Supra [03/2019 -]		

REMOVAL

PROCEDURE

1. REMOVE INNER REAR VIEW MIRROR STAY HOLDER COVER

- (a) Detach the claws (2) and guides (3) to remove the inner rear view mirror stay holder cover (1) in the direction of the arrow.

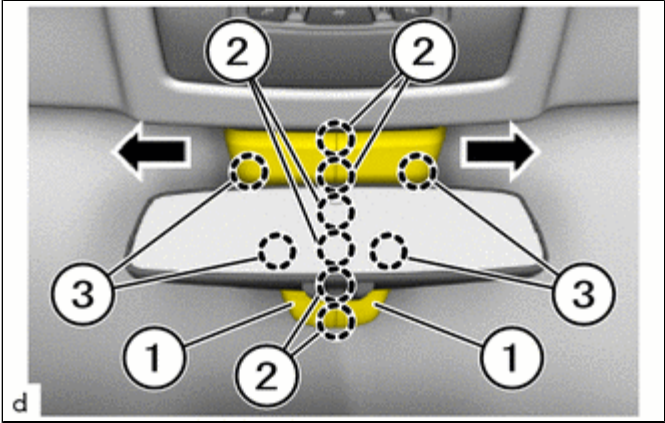



Remove in this Direction

2. REMOVE INNER REAR VIEW MIRROR ASSEMBLY

NOTICE:

Carry out the work at temperatures between 18 °C and 23 °C only.

- (a) Unlock plug connection (1) and disconnect.

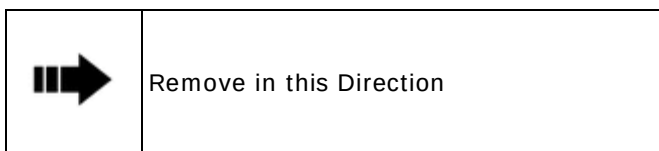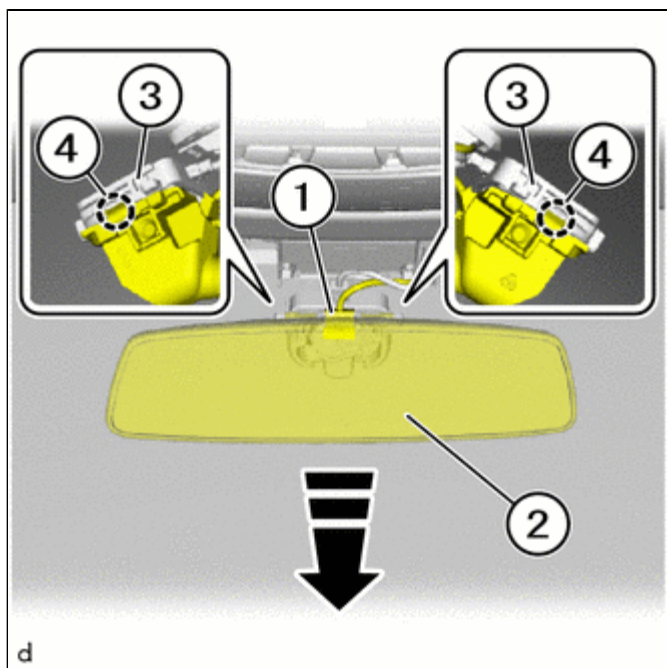

(b) Detach the guides (4) and pull to remove the inner rear view mirror assembly (2) from the mirror base (3) in the direction of the arrow.

NOTICE:

- Damage to the component.

Excessive force may damage the component.

- Handle component carefully.



Last Modified: 09-05-2019	6.9:8.0.49	Doc ID: RM100000001JCQ2
Model Year Start: 2020	Model: Supra	Prod Date Range: [03/2019 -]
Title: MIRROR (INT): INNER REAR VIEW MIRROR: INSTALLATION; 2020 MY Supra [03/2019 -]		

INSTALLATION


PROCEDURE

1. INSTALL INNER REAR VIEW MIRROR ASSEMBLY

NOTICE:

Carry out the work at temperatures between 18 °C and 23 °C only.

- (a) Attach the guides (4) to install the inner rear view mirror assembly (2) at the mirror base (3) and slide in the direction of the arrow.

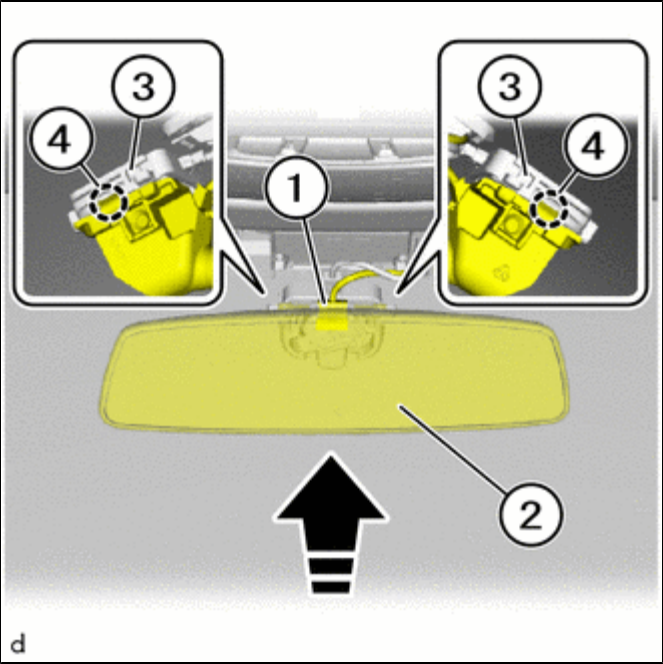

Install in this Direction


HINT:

Check the correct installation position of the interior mirror (2) at the mirror base (3).

- (b) Connect connector (1) and lock.

2. INSTALL INNER REAR VIEW MIRROR STAY HOLDER COVER

- (a) Attach the guides (3) and claws (2) to install the inner rear view mirror stay holder cover (1) in the direction of the arrow.

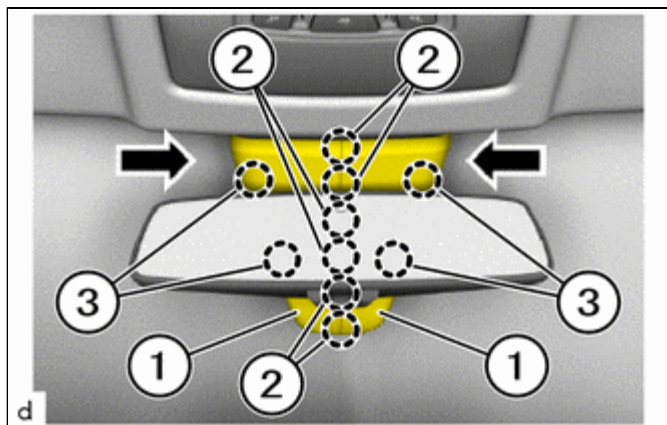

Install in this Direction



TOYOTA