


F RELAY LOCATIONS


[Body]

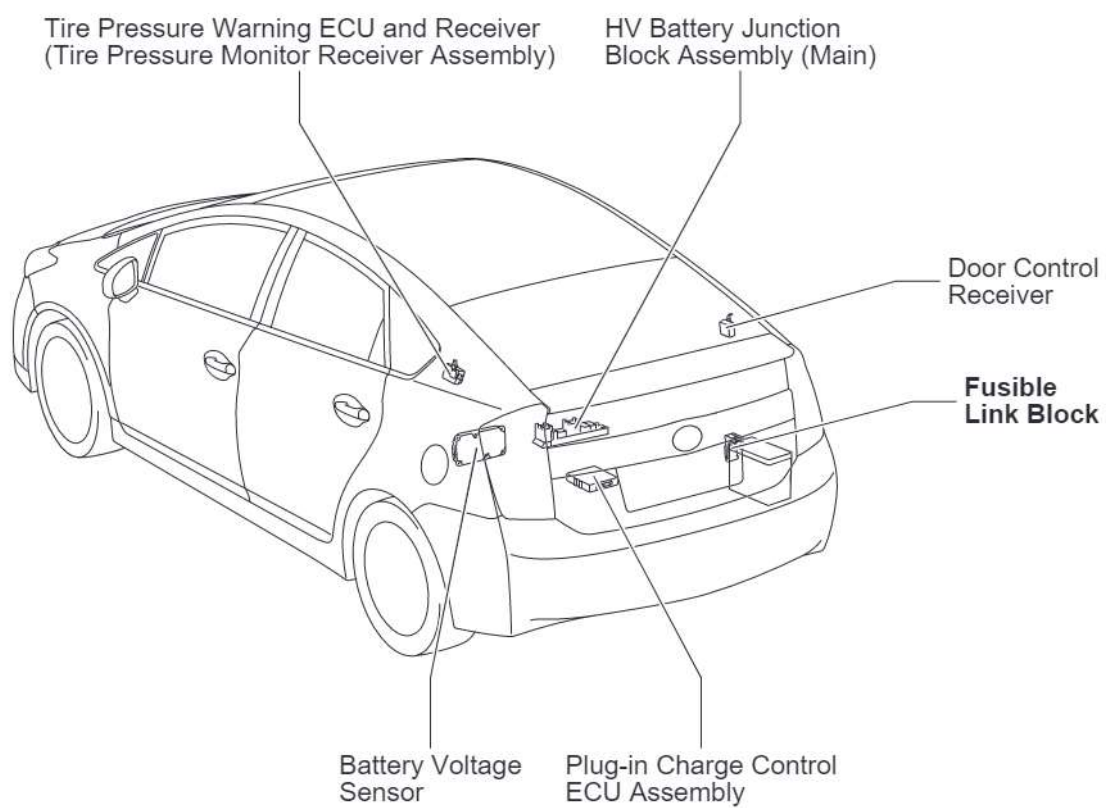

cardiagn.com

F RELAY LOCATIONS


[Engine Compartment]

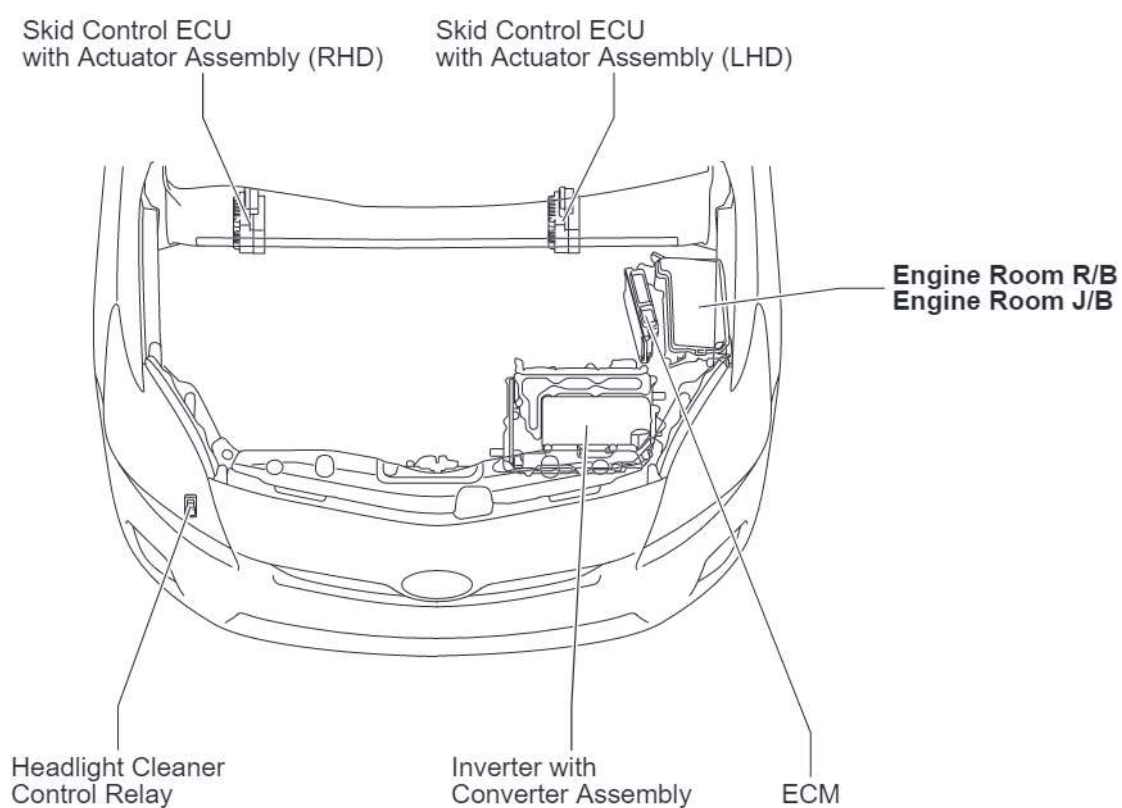

F RELAY LOCATIONS

Fuse Block


Cowl Side Panel LH (See Page 21)

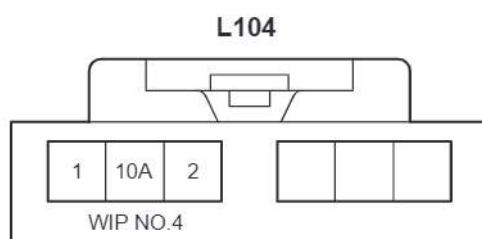


F RELAY LOCATIONS

Fusible Link Block

Right Luggage Compartment (See Page 22)

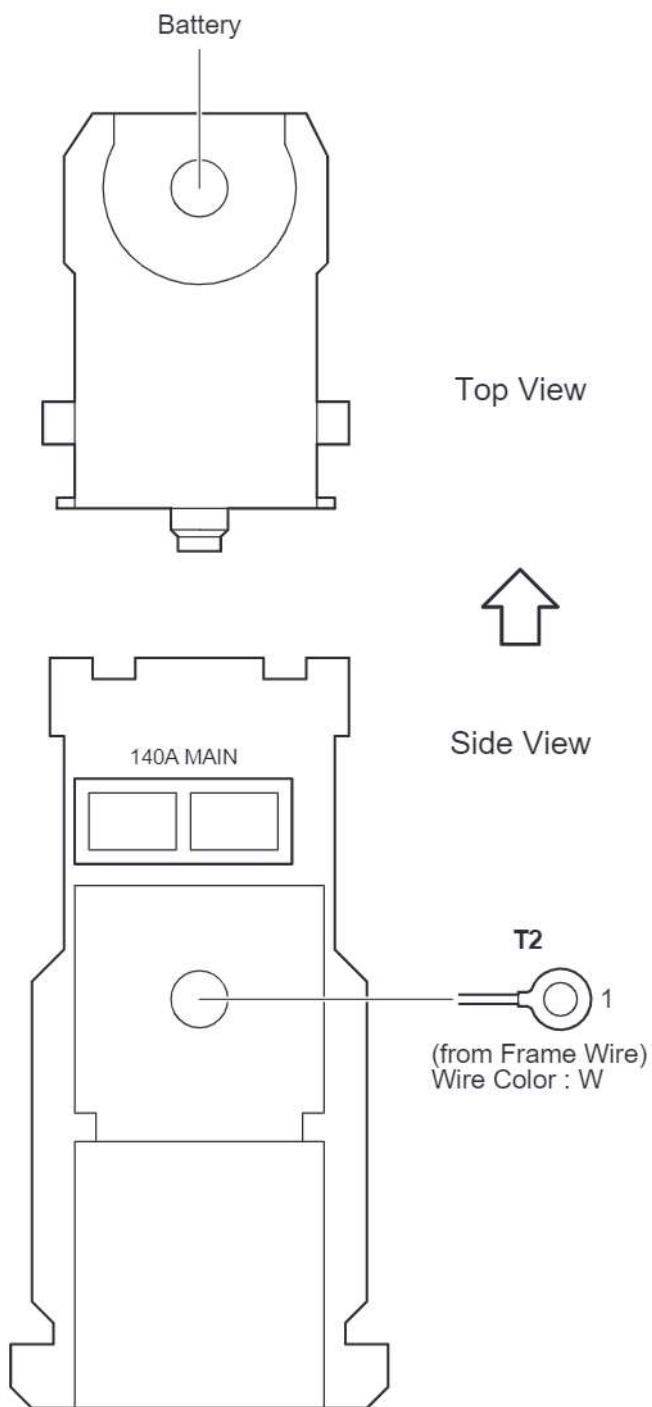

[Fusible Link Block Inner Circuit]

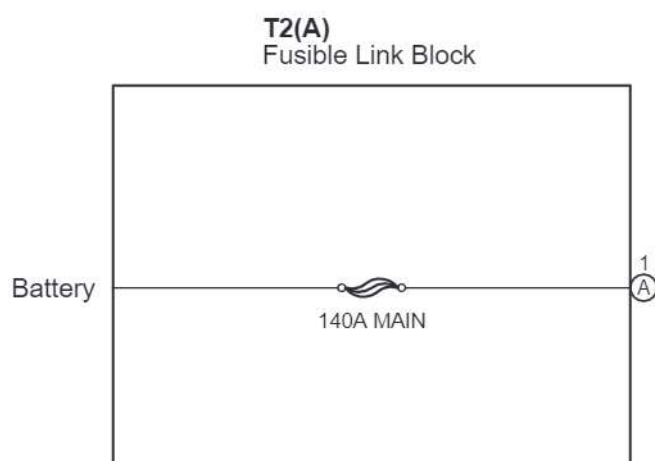


F RELAY LOCATIONS




: Instrument Panel J/B

Instrument Panel Reinforcement (See Page 21)

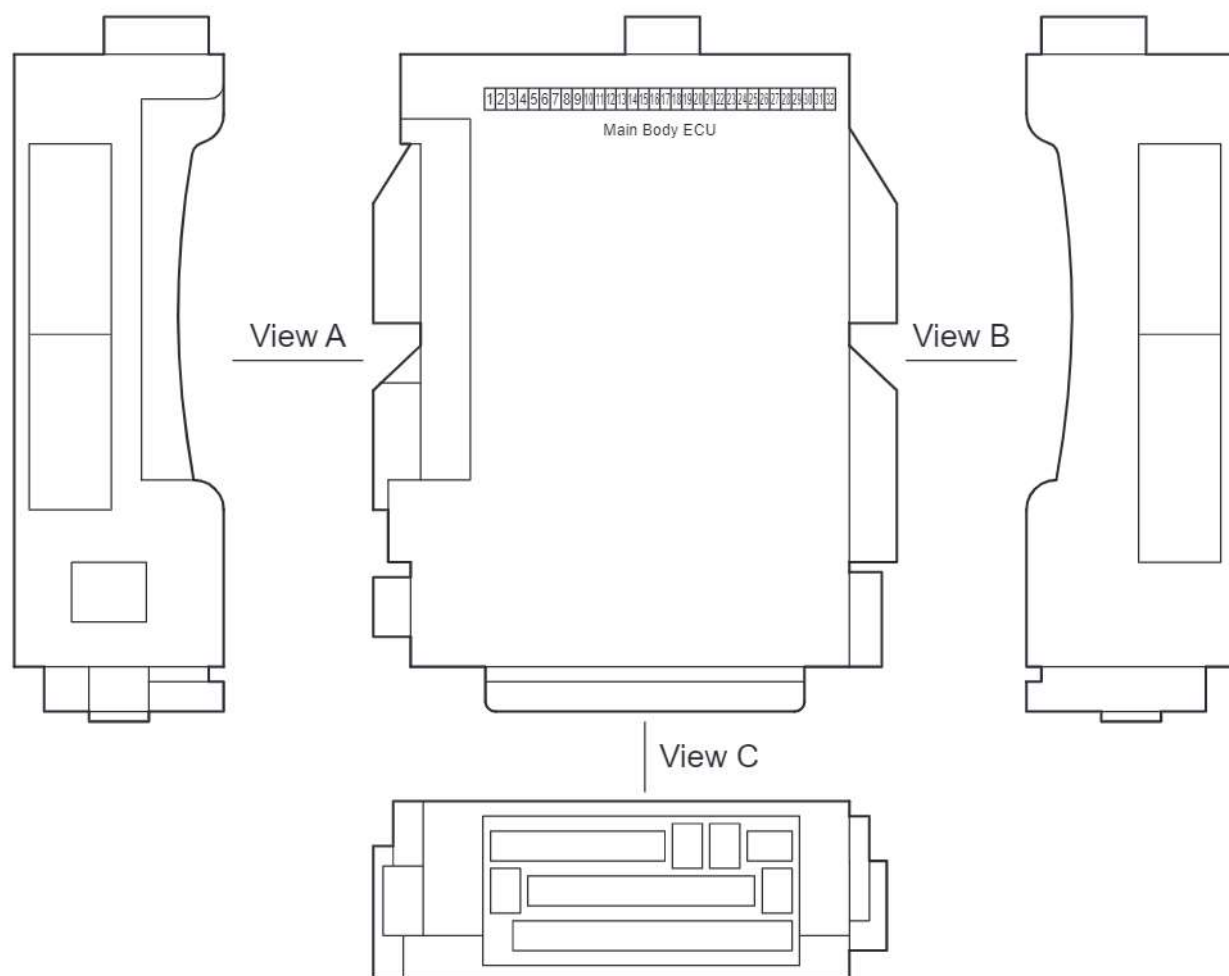

View A

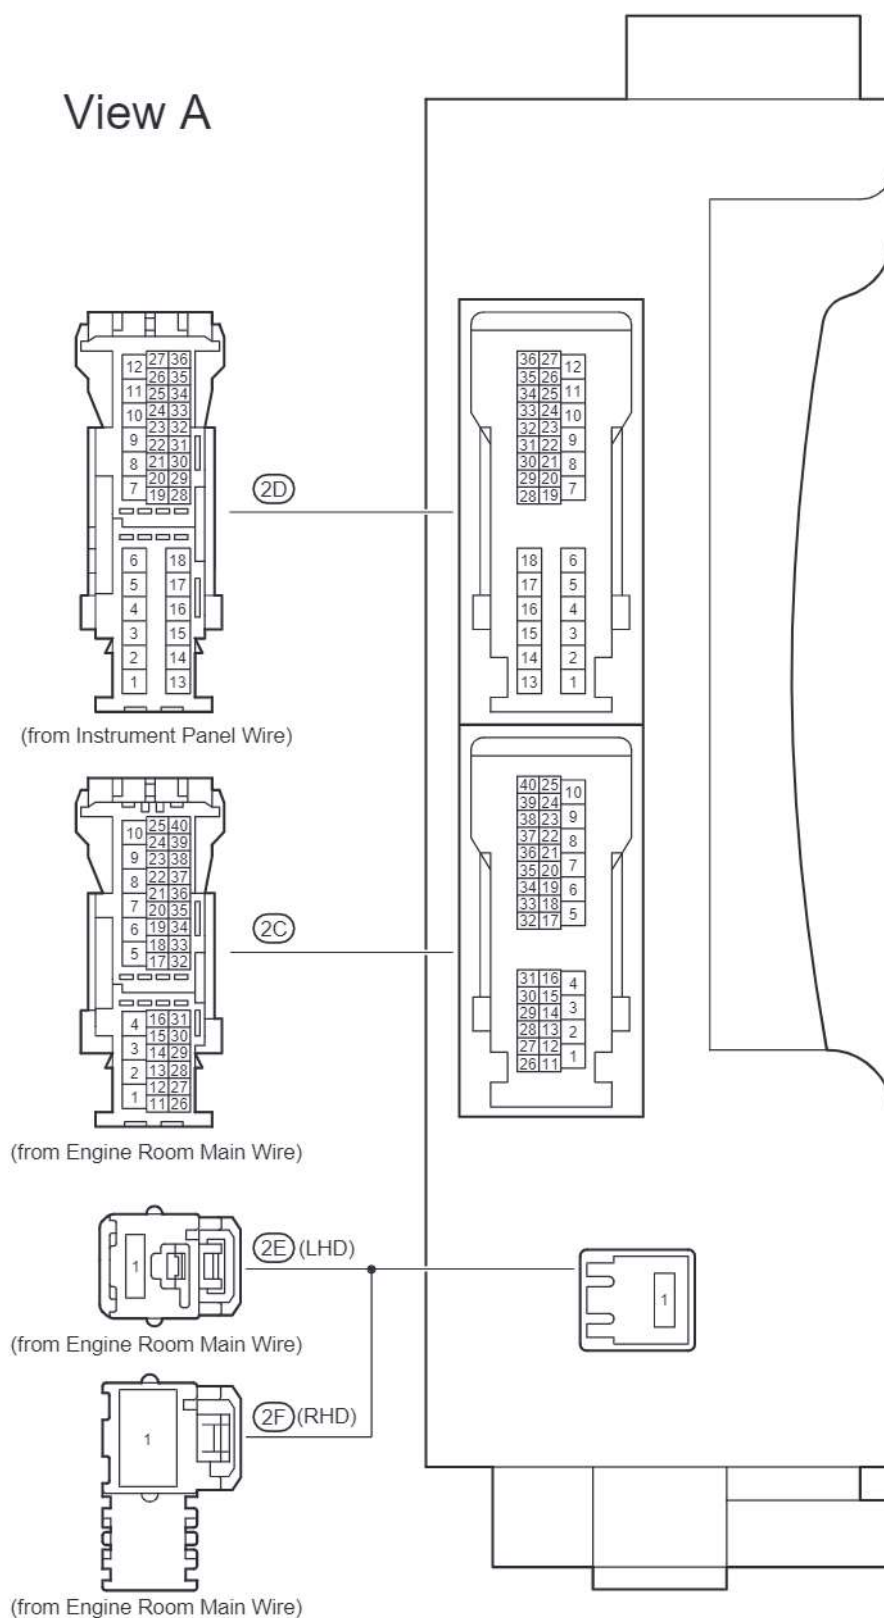


F RELAY LOCATIONS




: Instrument Panel J/B

Instrument Panel Reinforcement (See Page 21)

View B

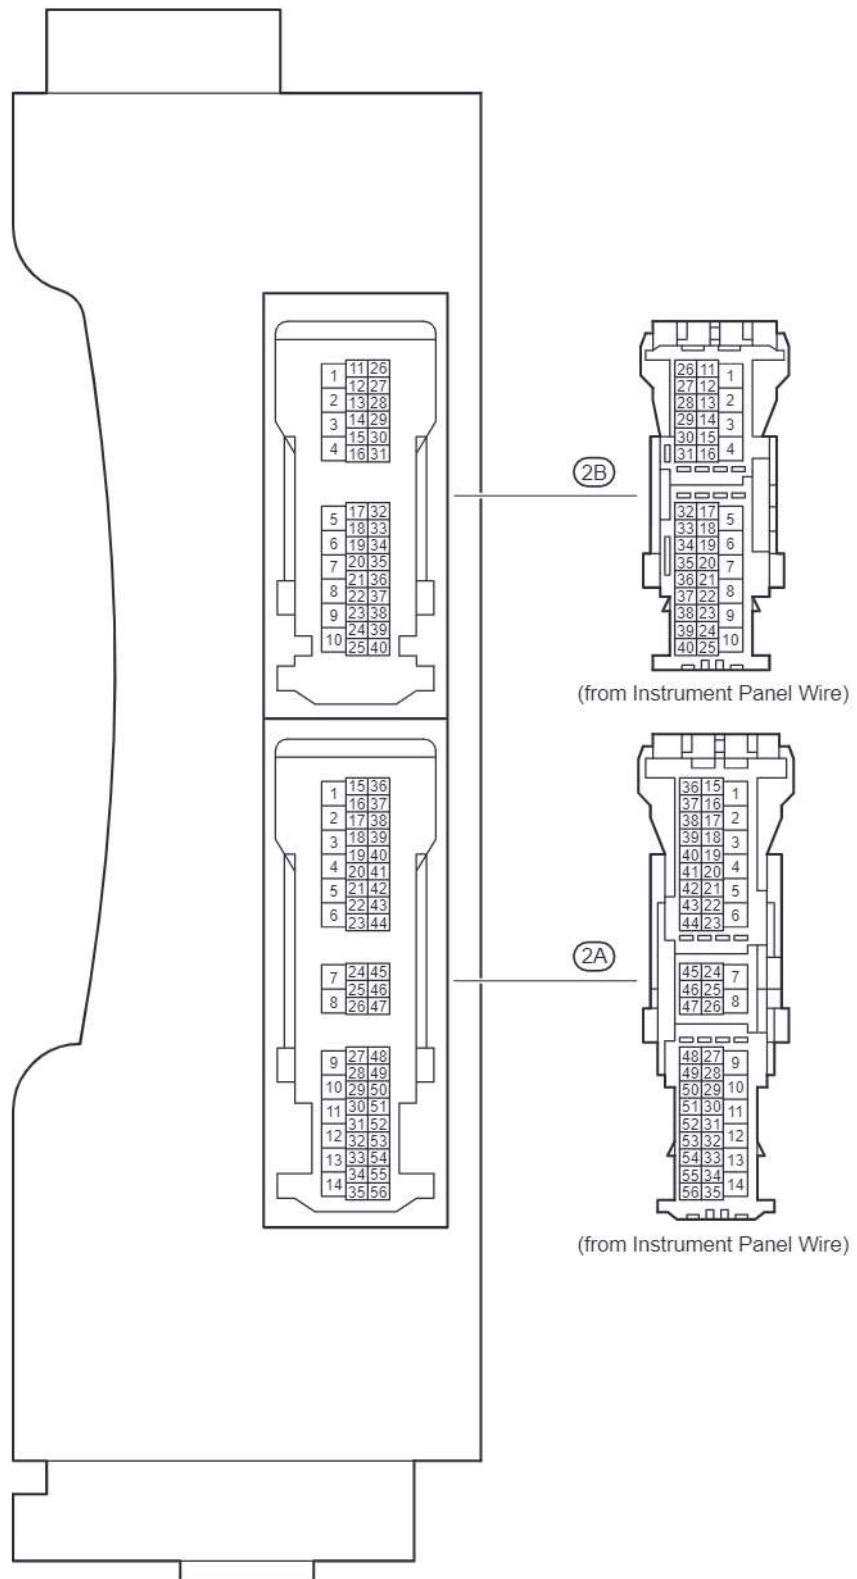


View C

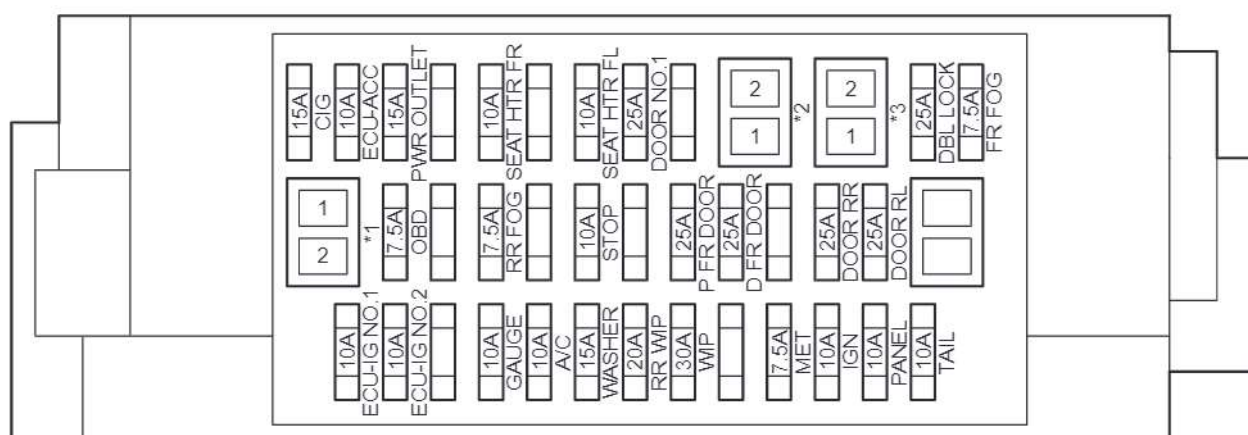

- * 1:30A PWR SEAT FL (for High Current)
- * 2:30A PSB (for High Current)
- * 3:30A PWR SEAT FR (for High Current)


F RELAY LOCATIONS

[Instrument Panel J/B Inner Circuit]

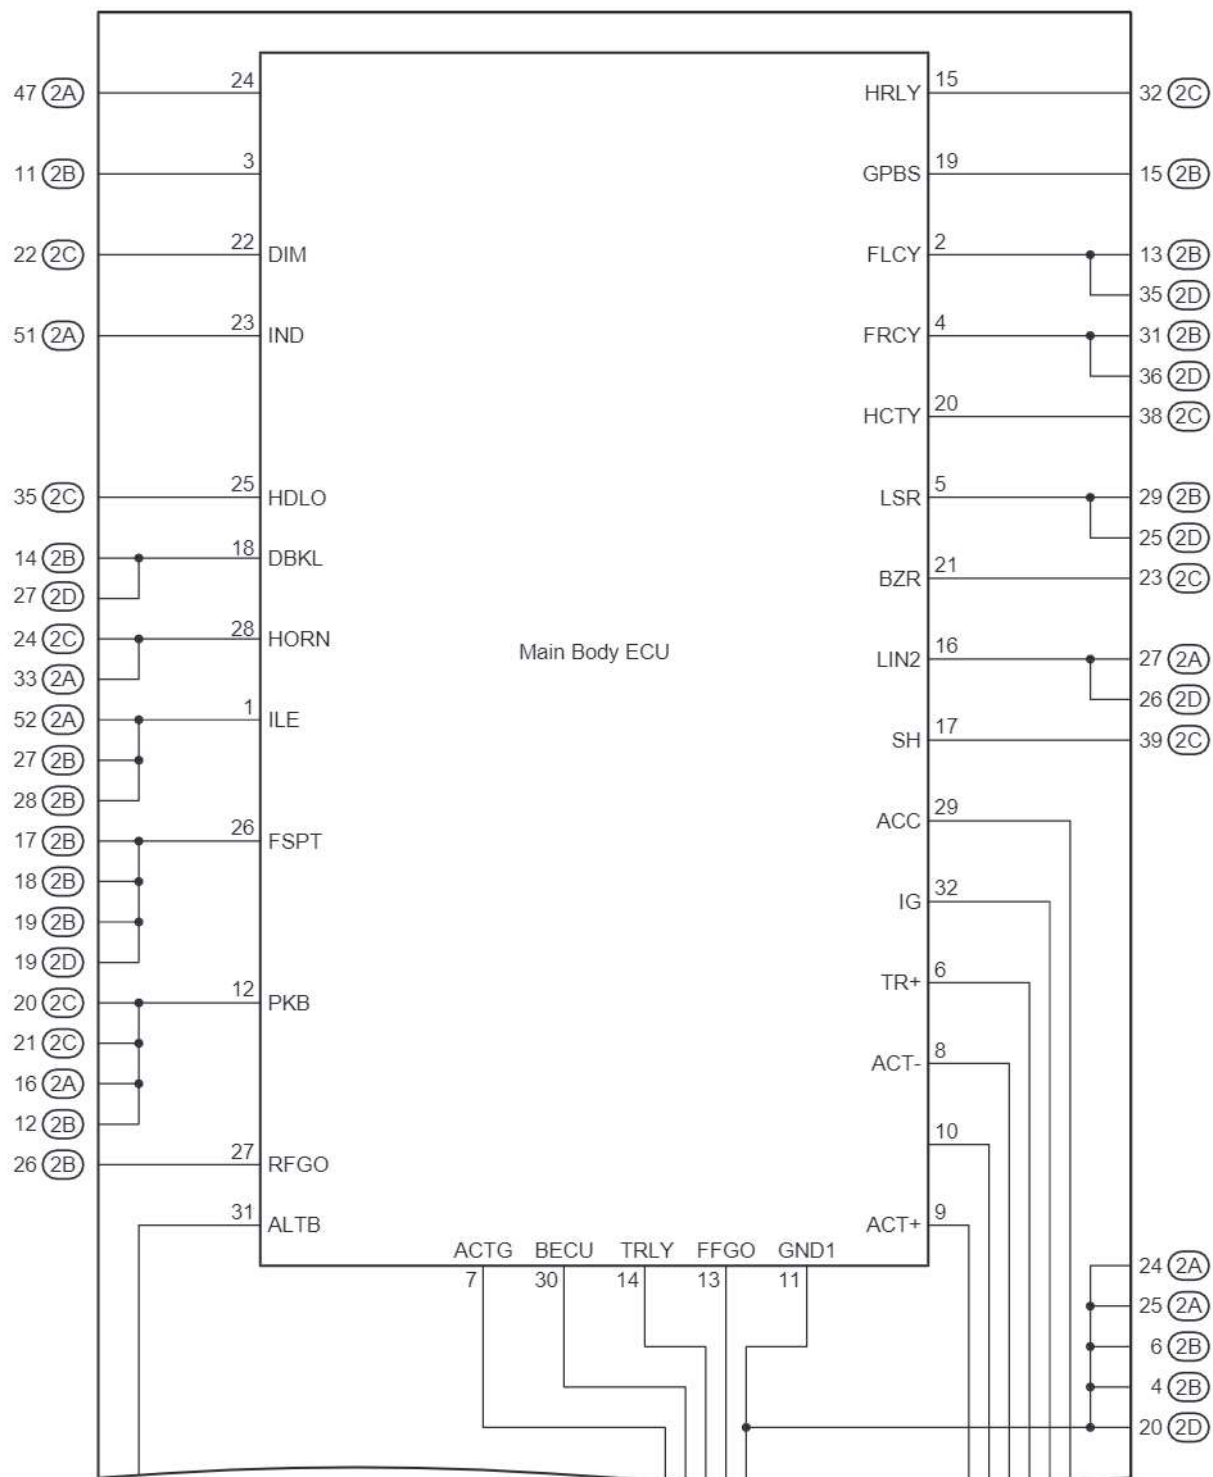

(Cont. Next Page)

(Cont'd)

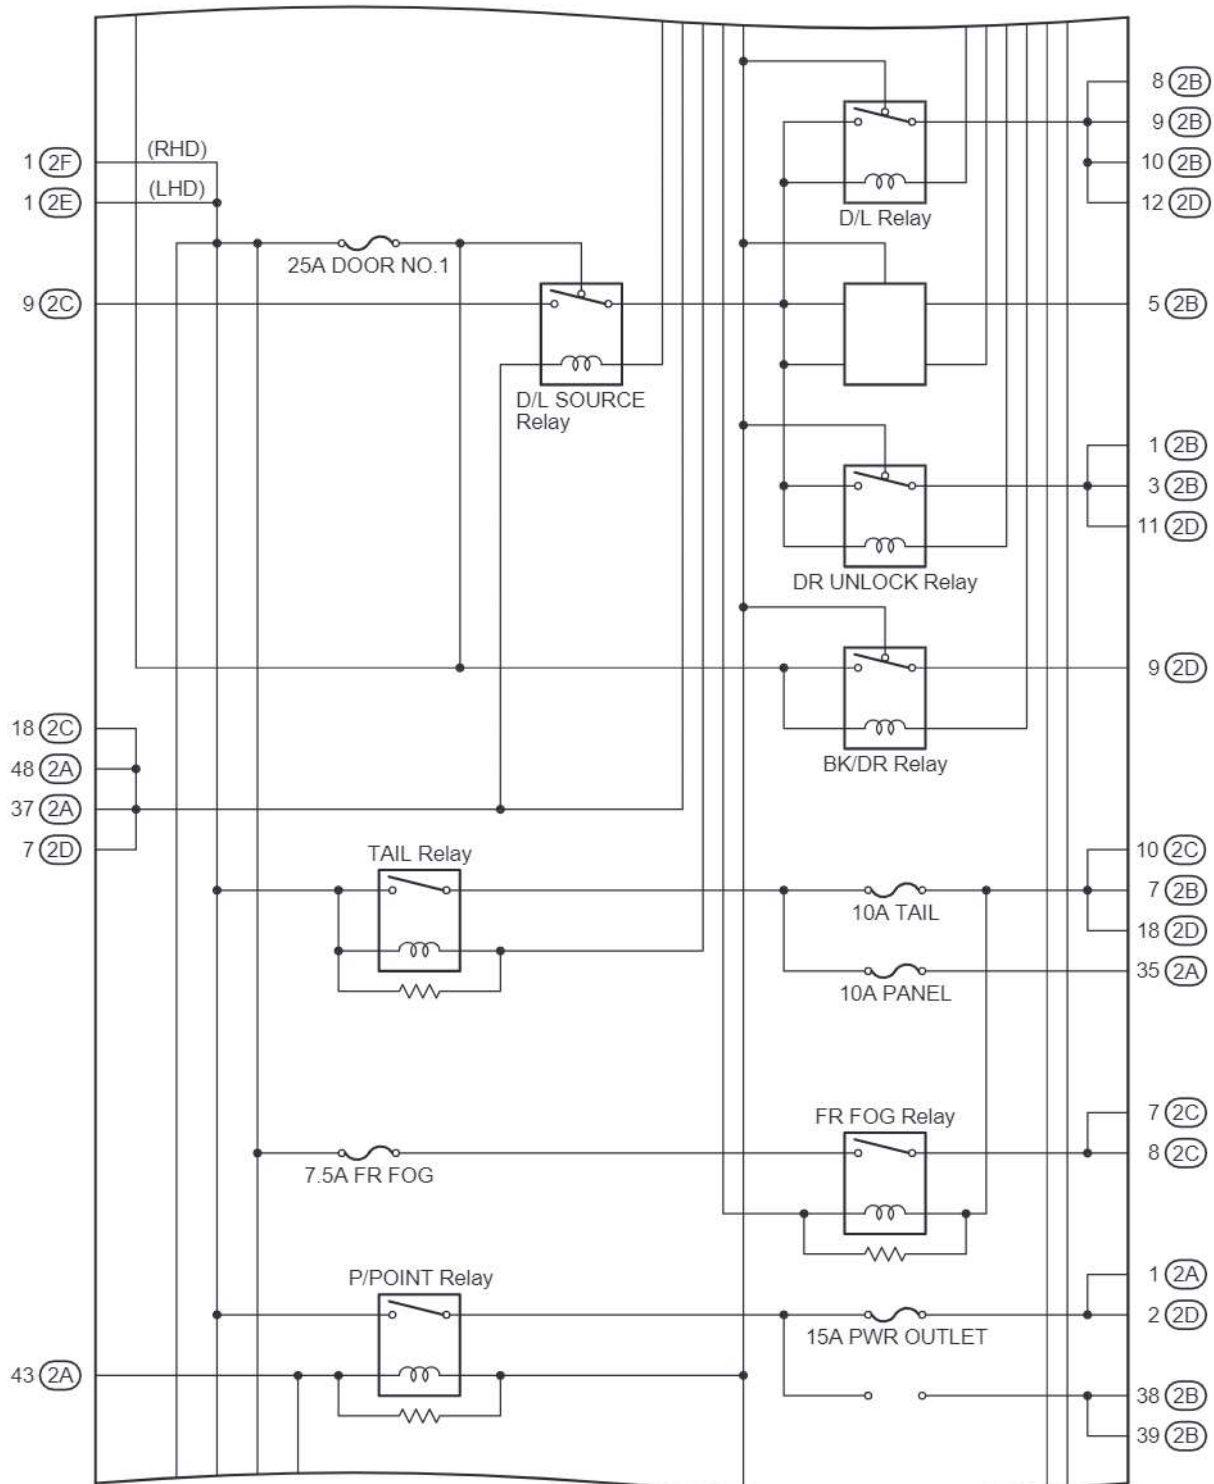


(Cont. Next Page)

F RELAY LOCATIONS


[Instrument Panel J/B Inner Circuit]

(Cont'd)

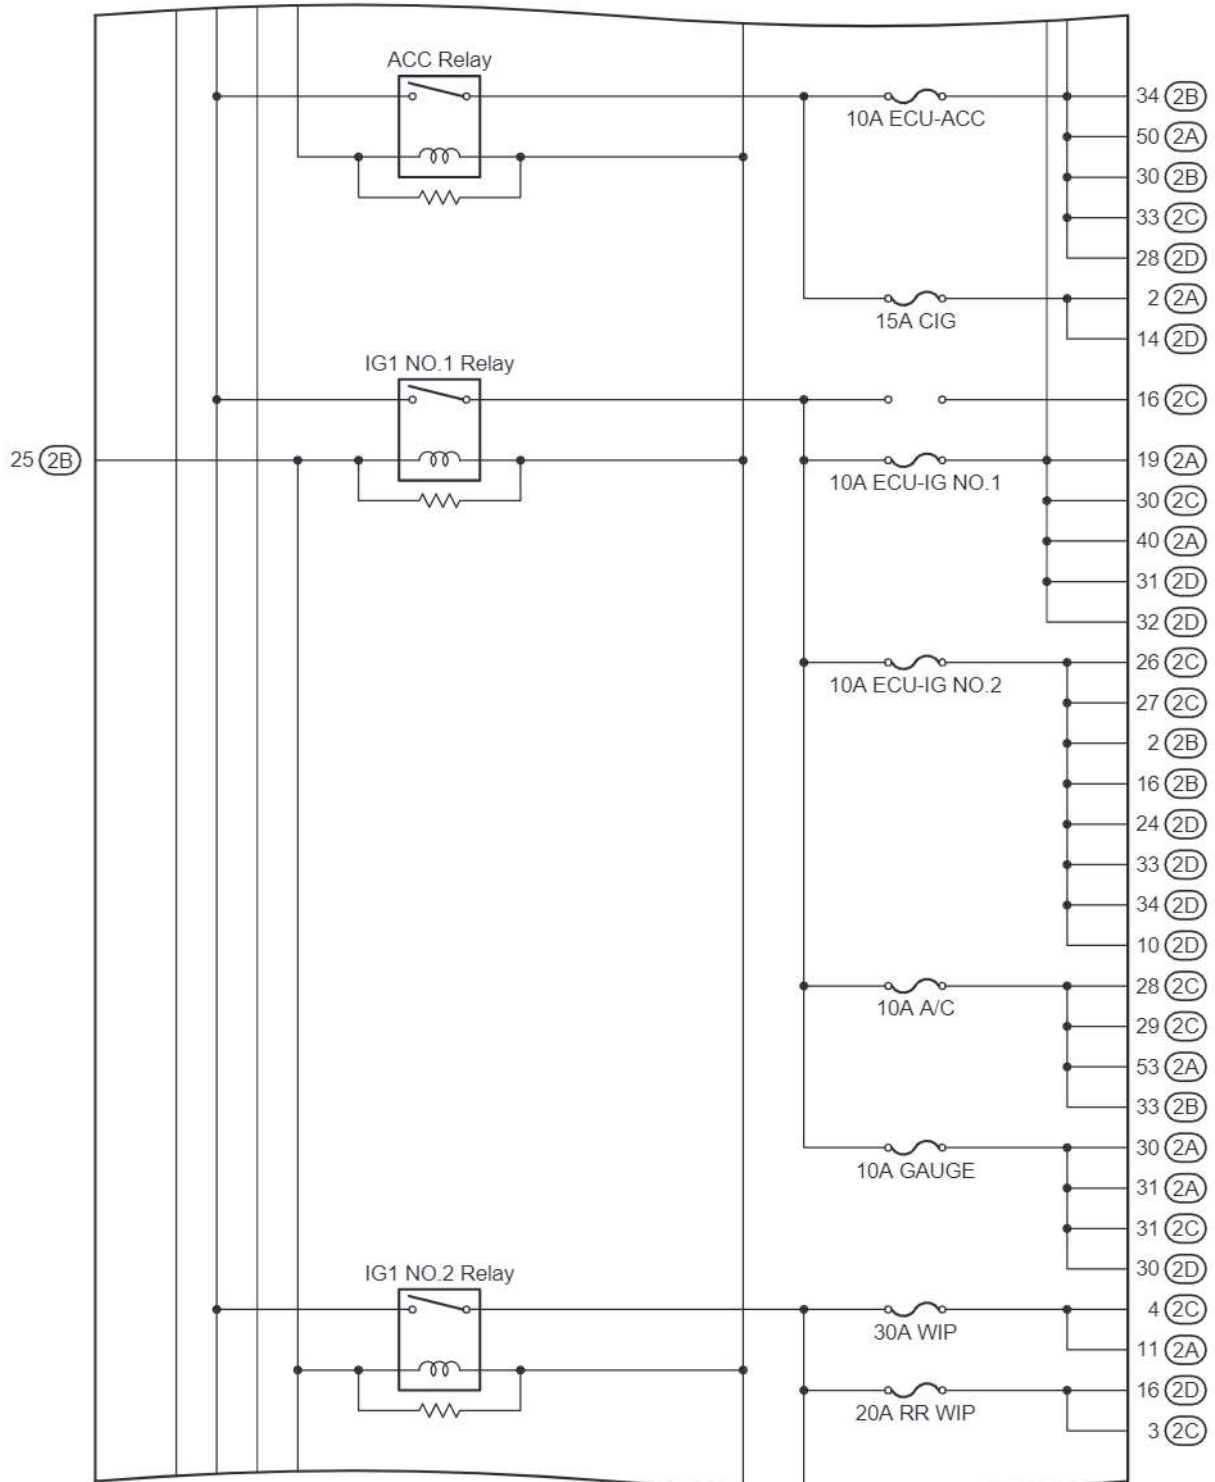

(Cont. Next Page)


(Cont'd)

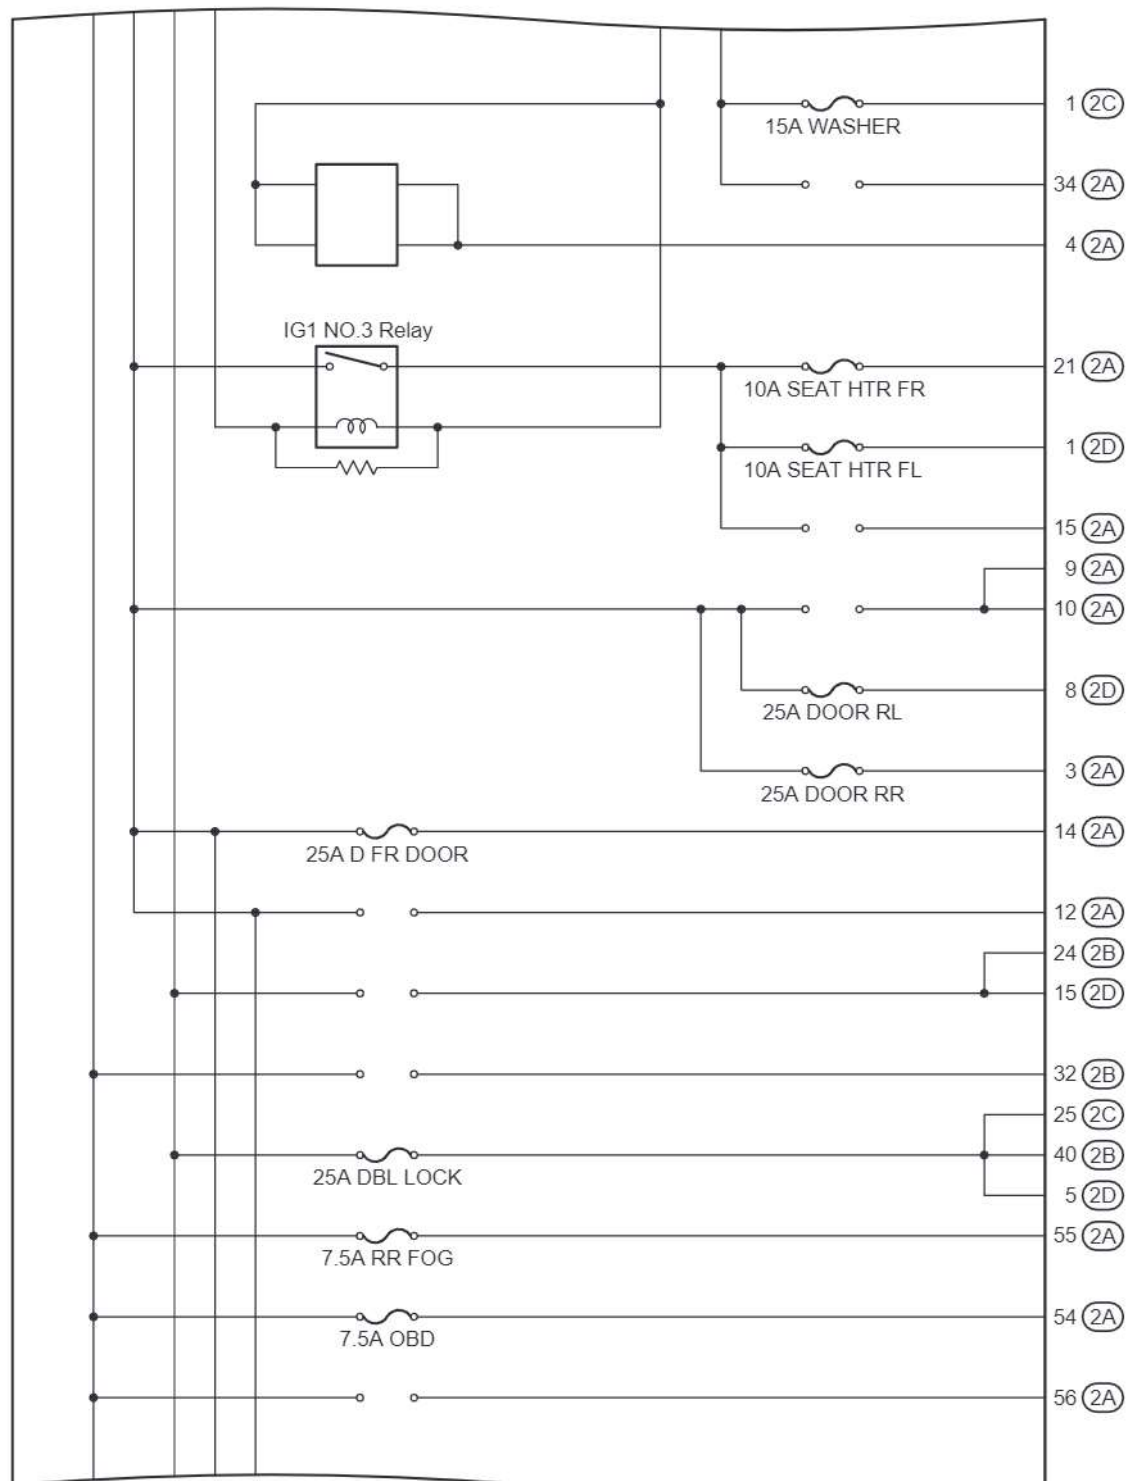


(Cont. Next Page)

F RELAY LOCATIONS


[Instrument Panel J/B Inner Circuit]

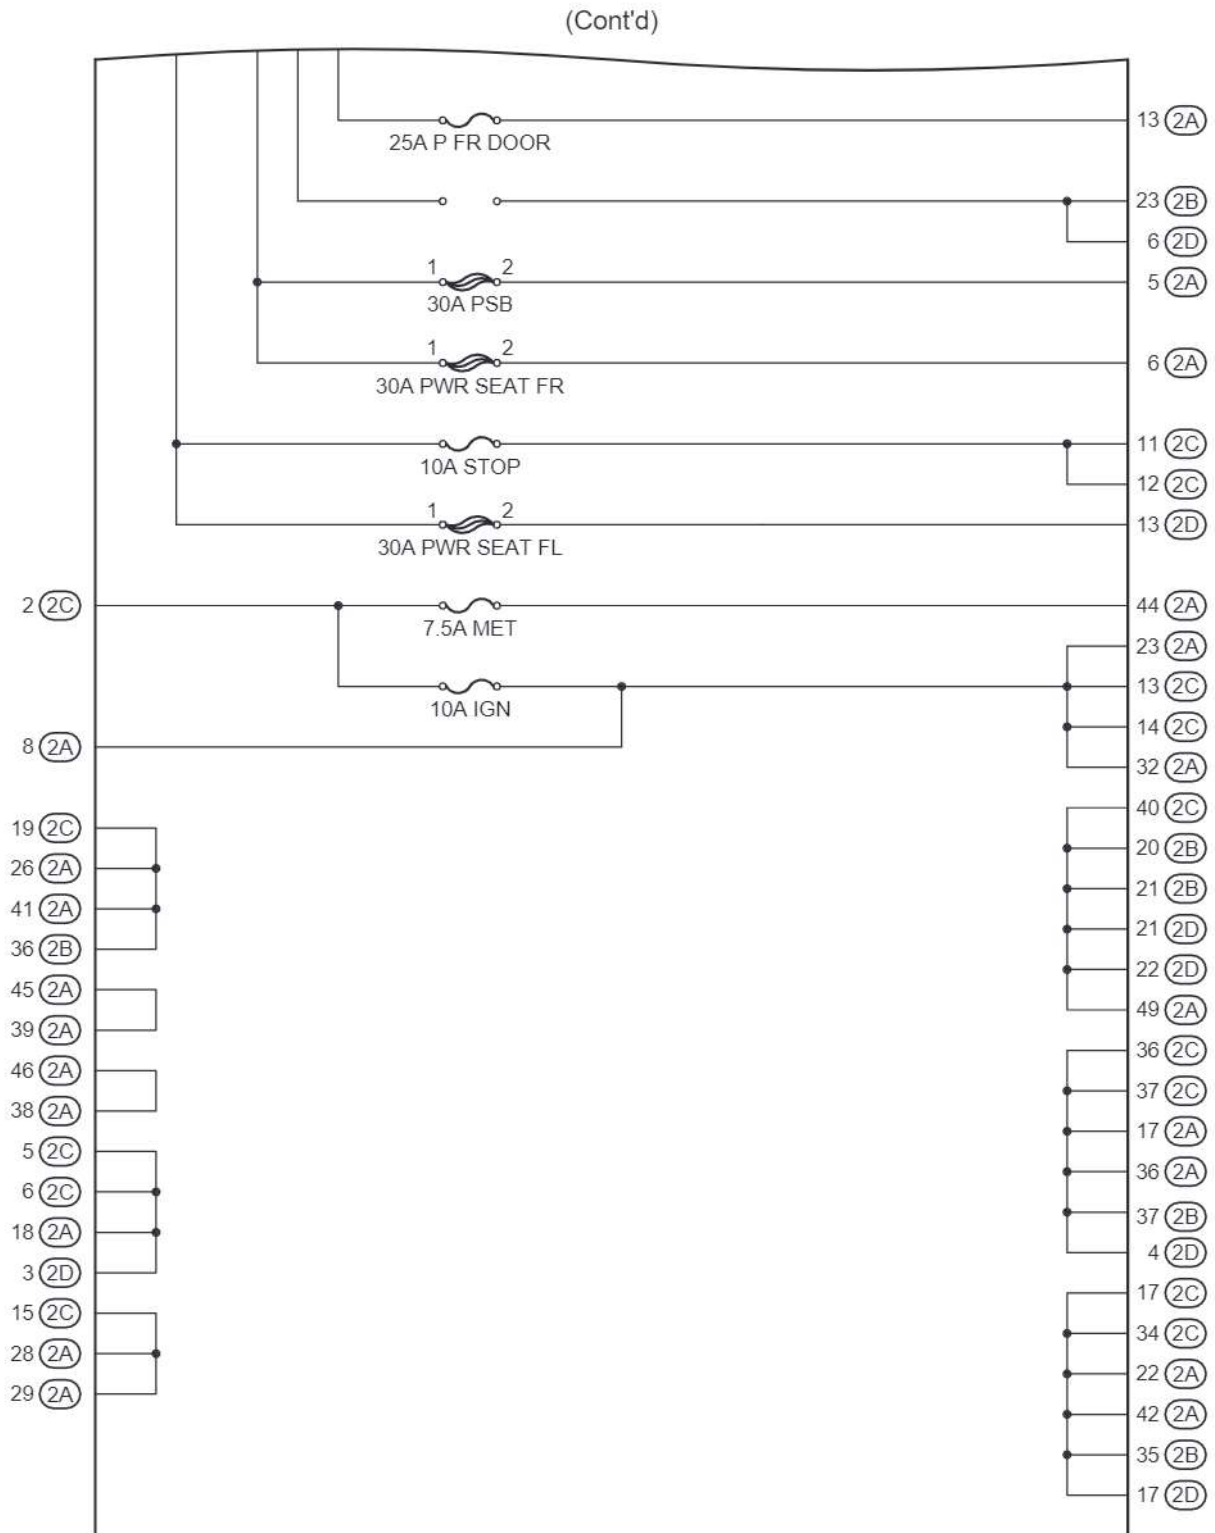


[Instrument Panel] (LHD)

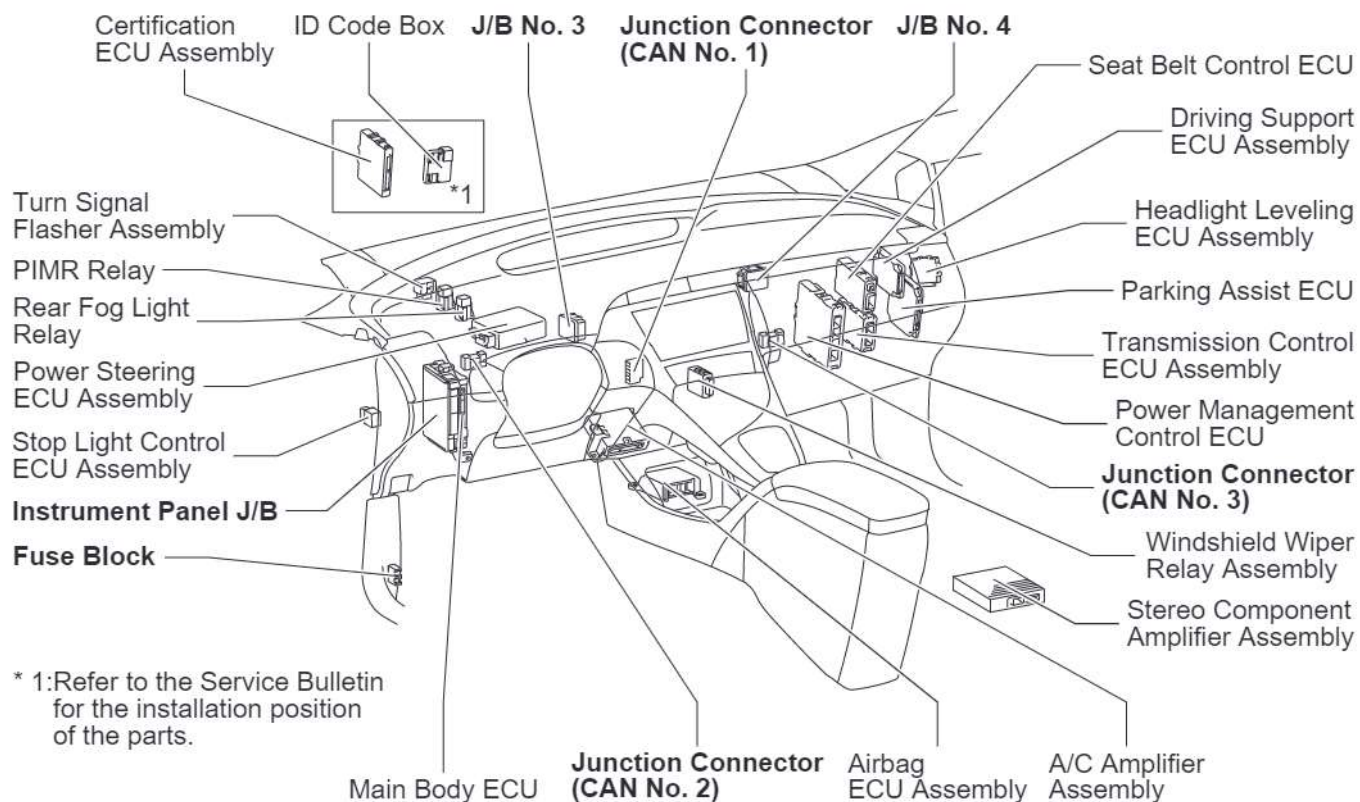


(RHD)

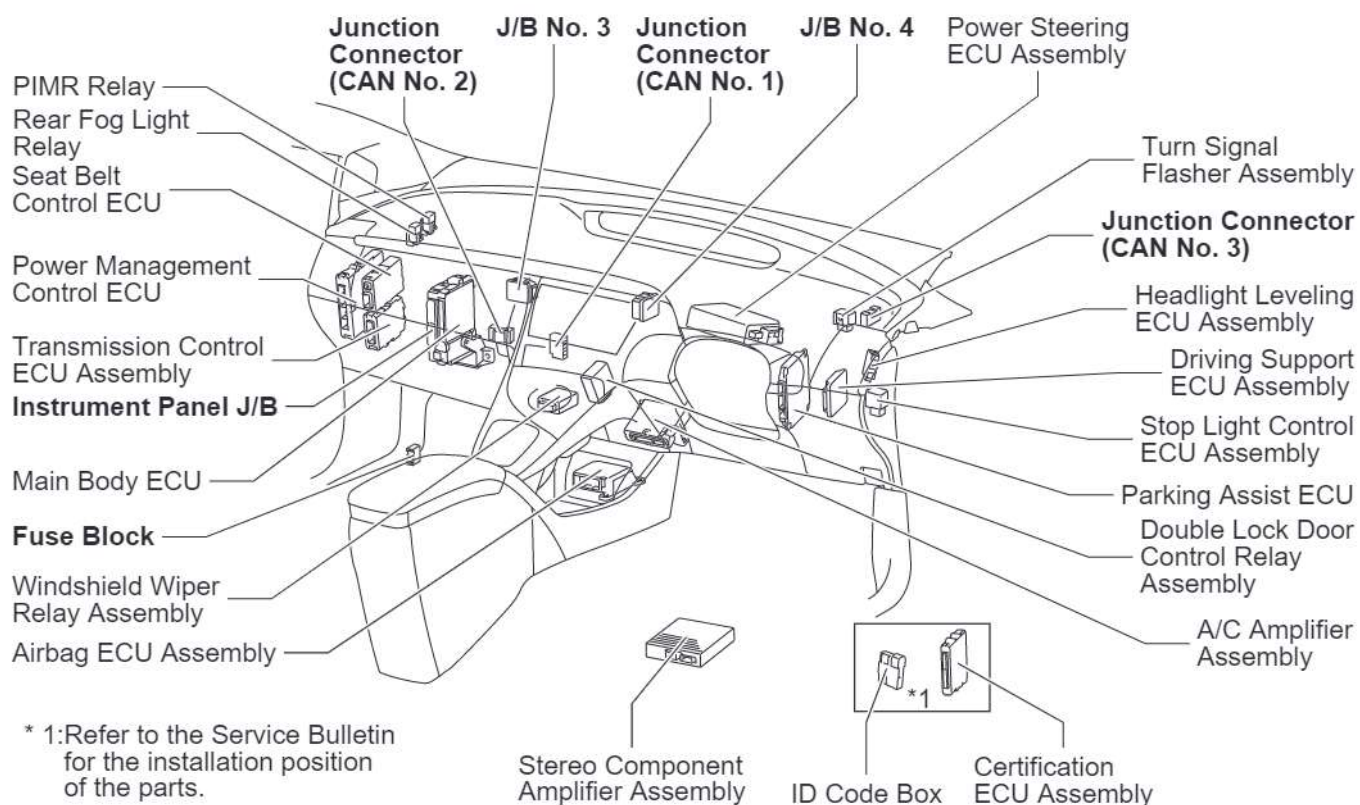

[Instrument Panel] (LHD)

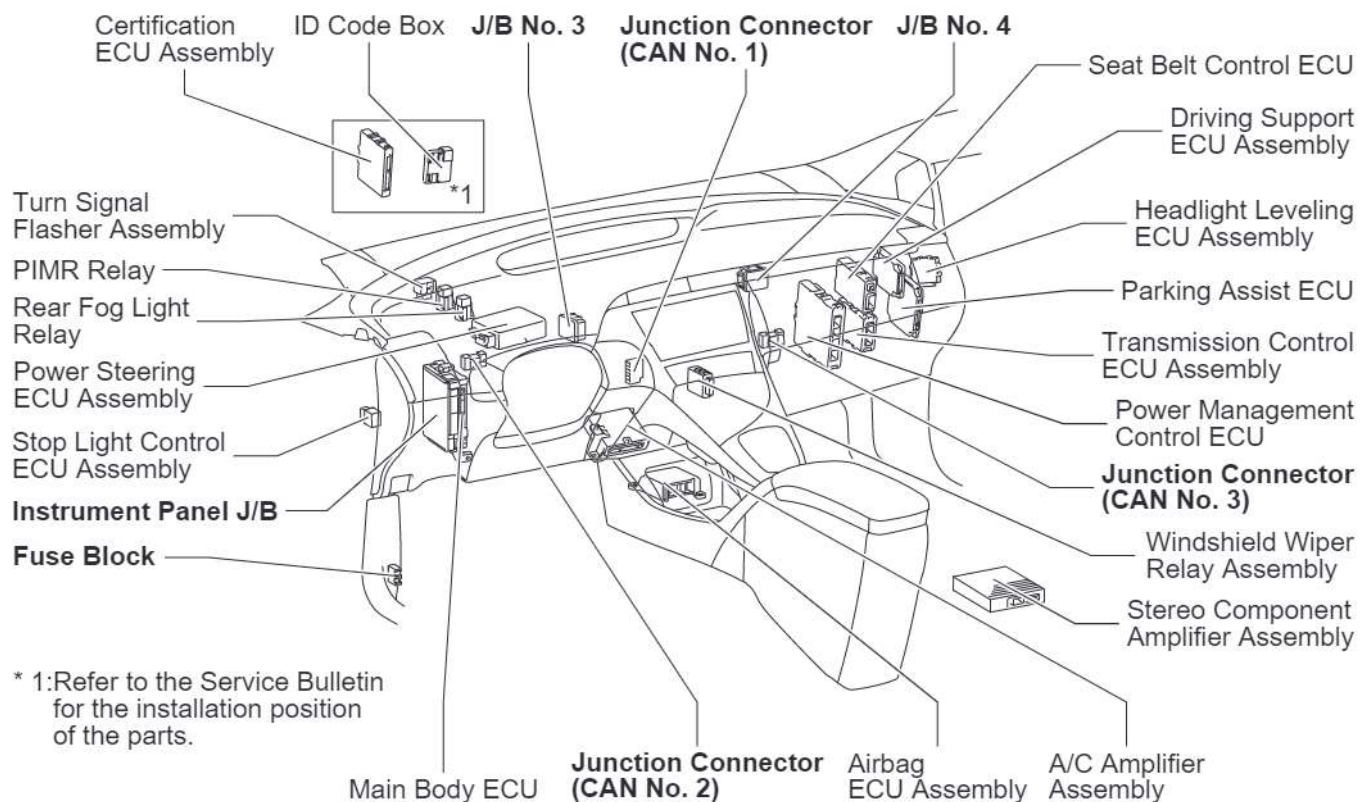


(RHD)

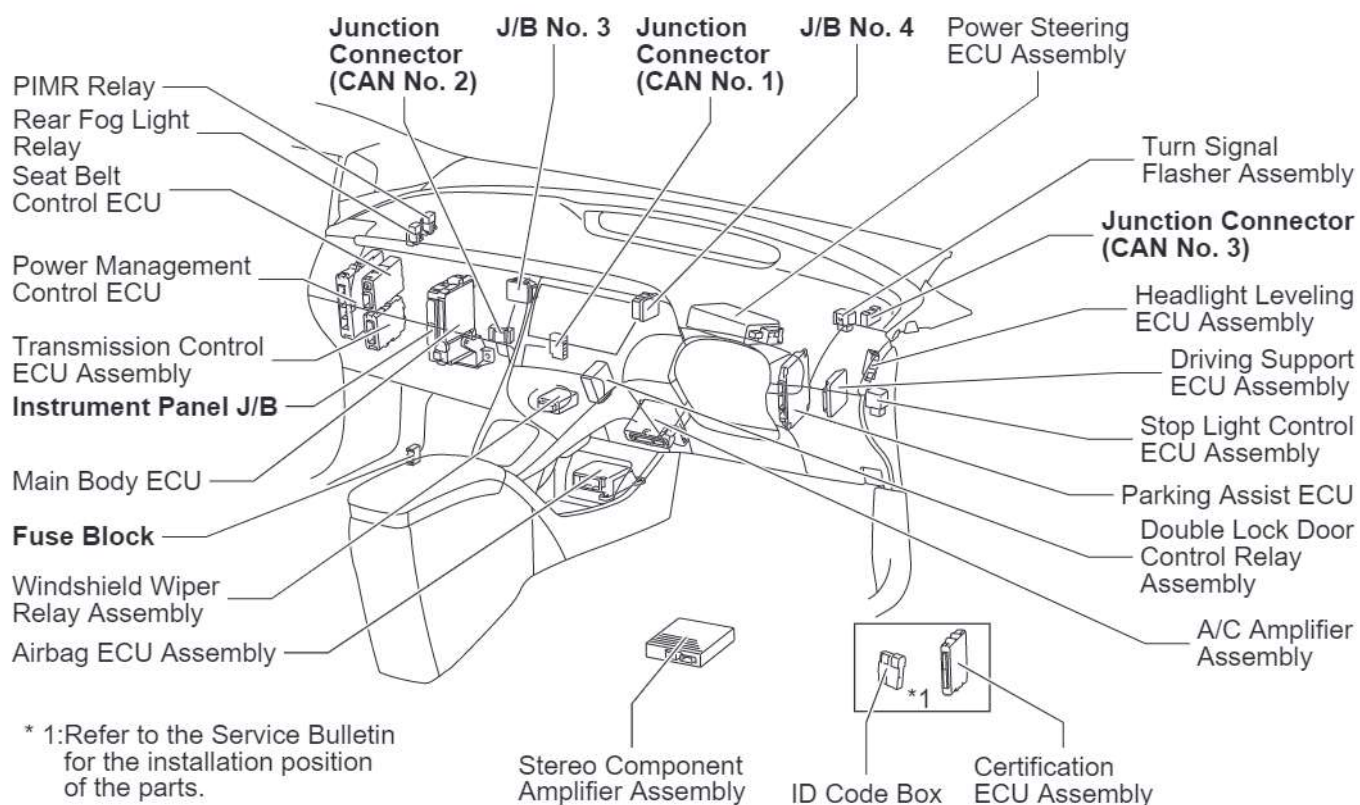

F RELAY LOCATIONS


○ : J/B No. 3

Instrument Panel Reinforcement (See Page 21)

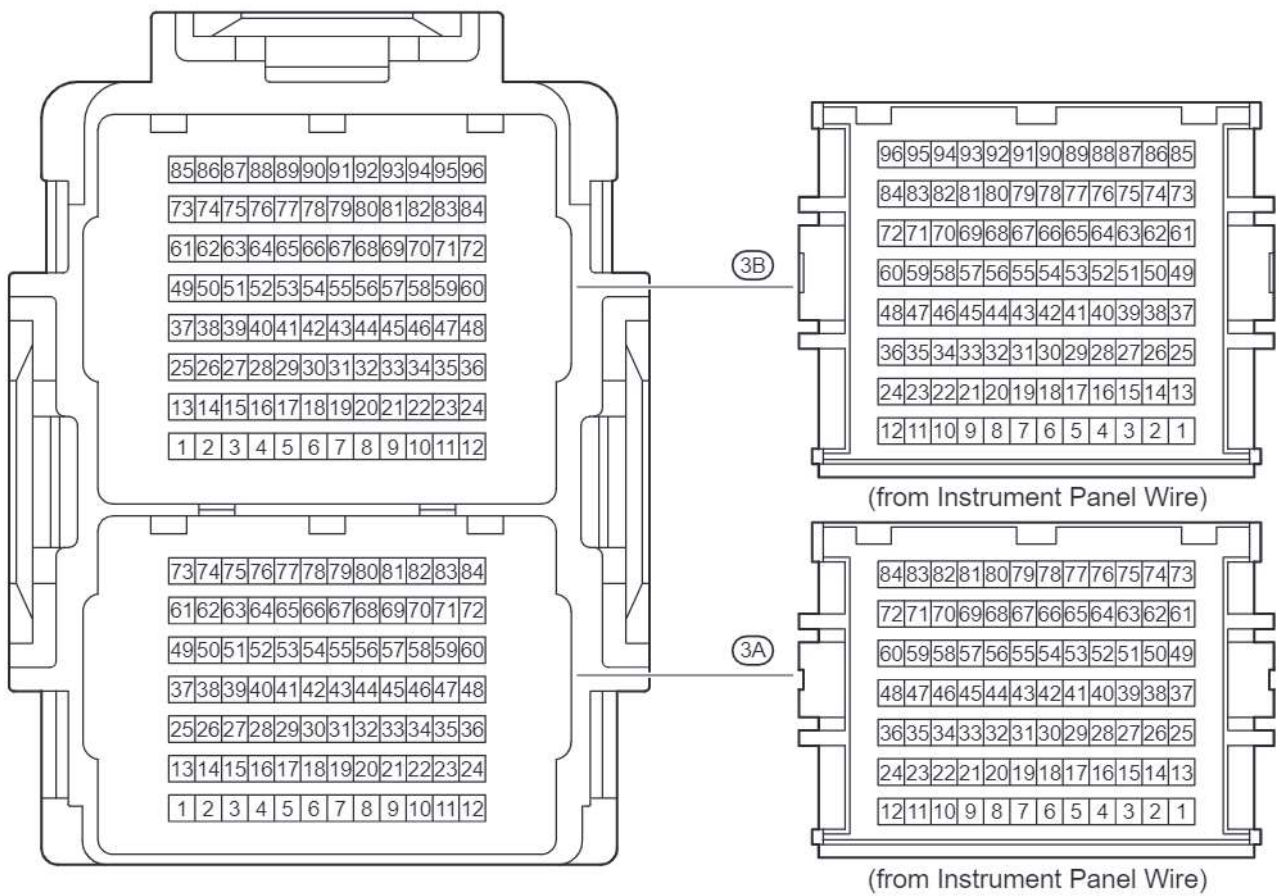


F RELAY LOCATIONS

[J/B No. 3 Inner Circuit]
(LHD)

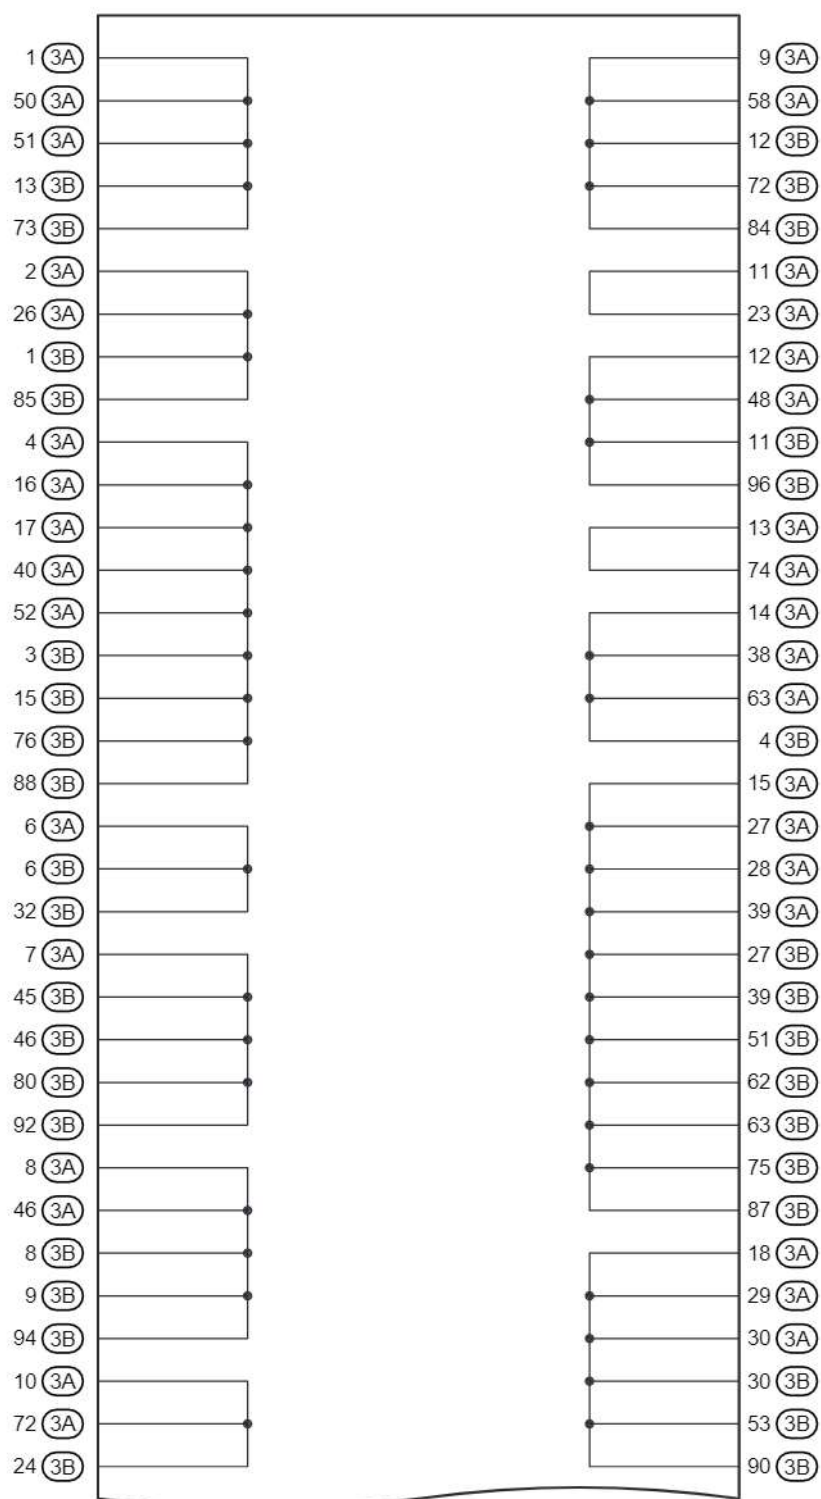

(Cont. Next Page)

(Cont'd)

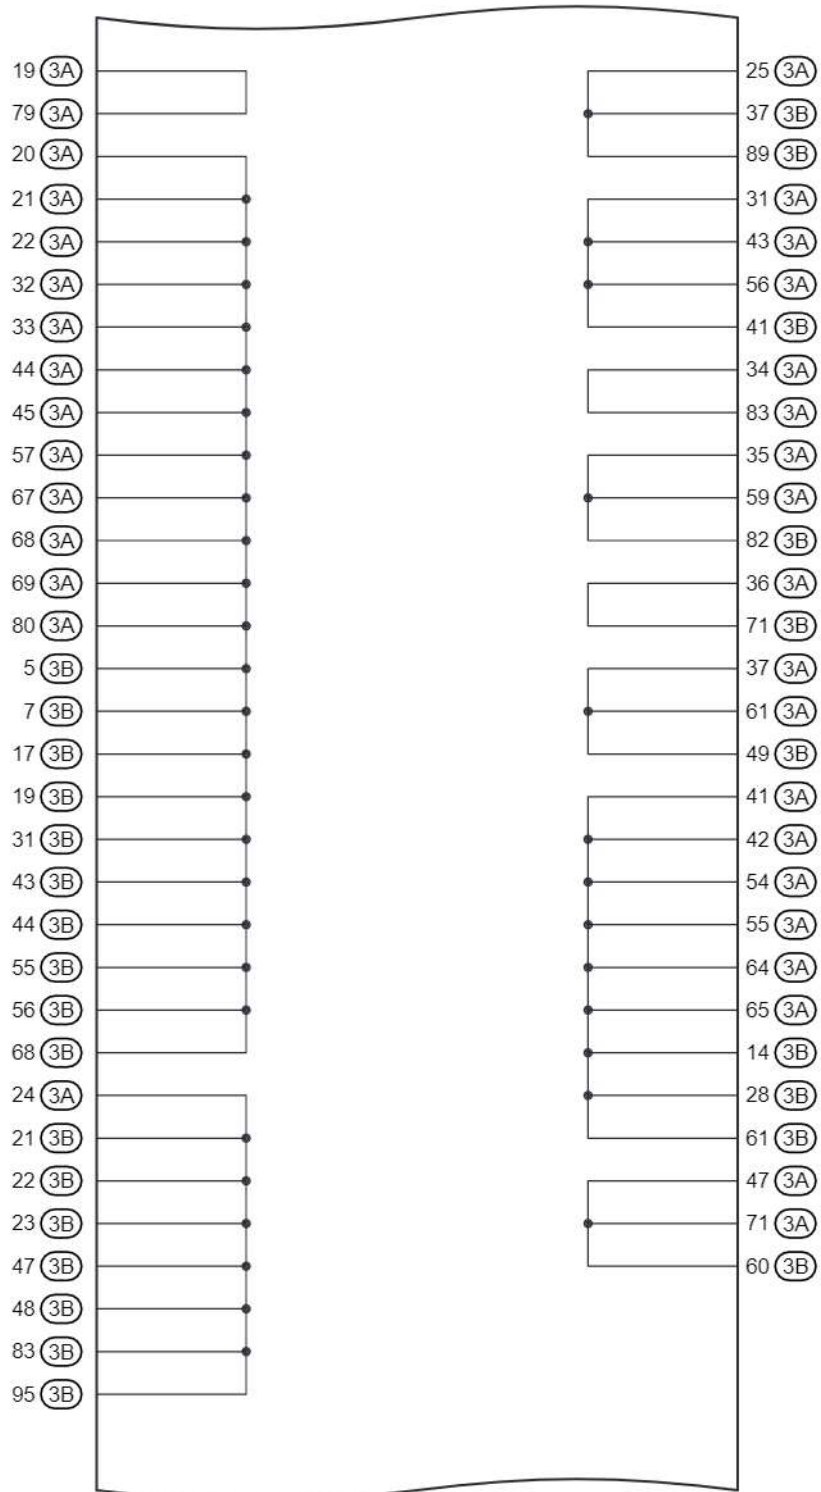


(Cont. Next Page)

F RELAY LOCATIONS


[J/B No. 3 Inner Circuit]
(LHD)

(Cont'd)

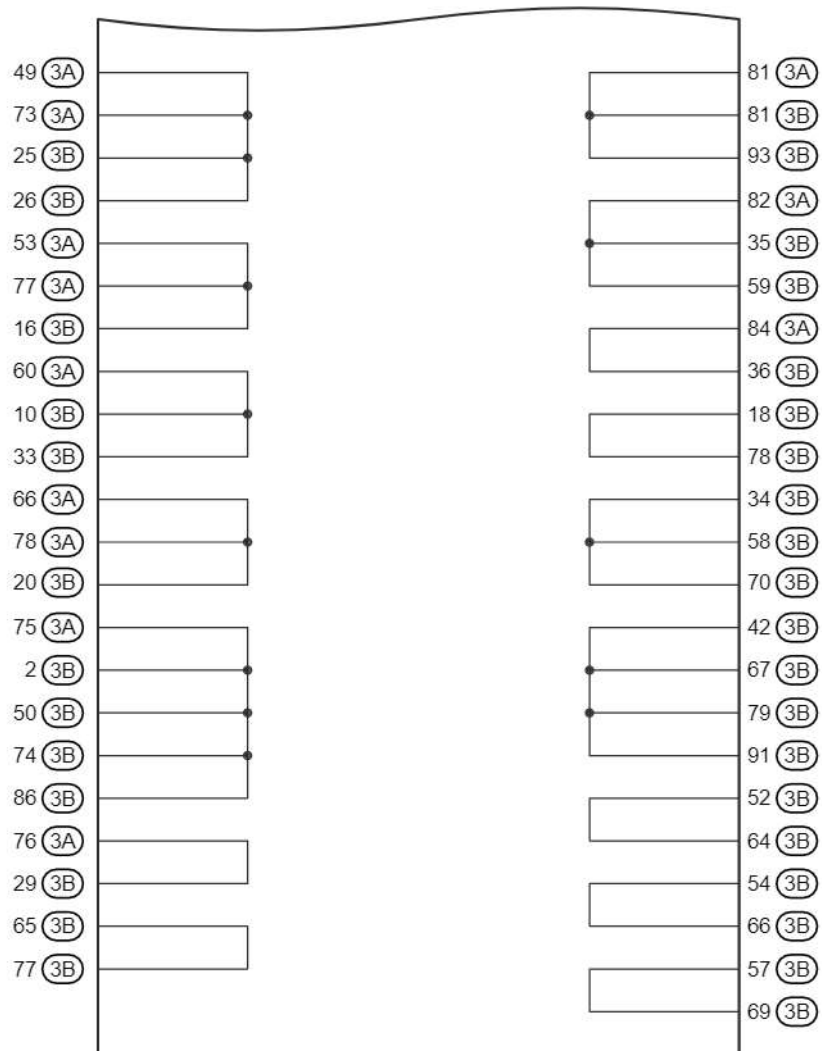


F RELAY LOCATIONS

[J/B No. 3 Inner Circuit]
(RHD)

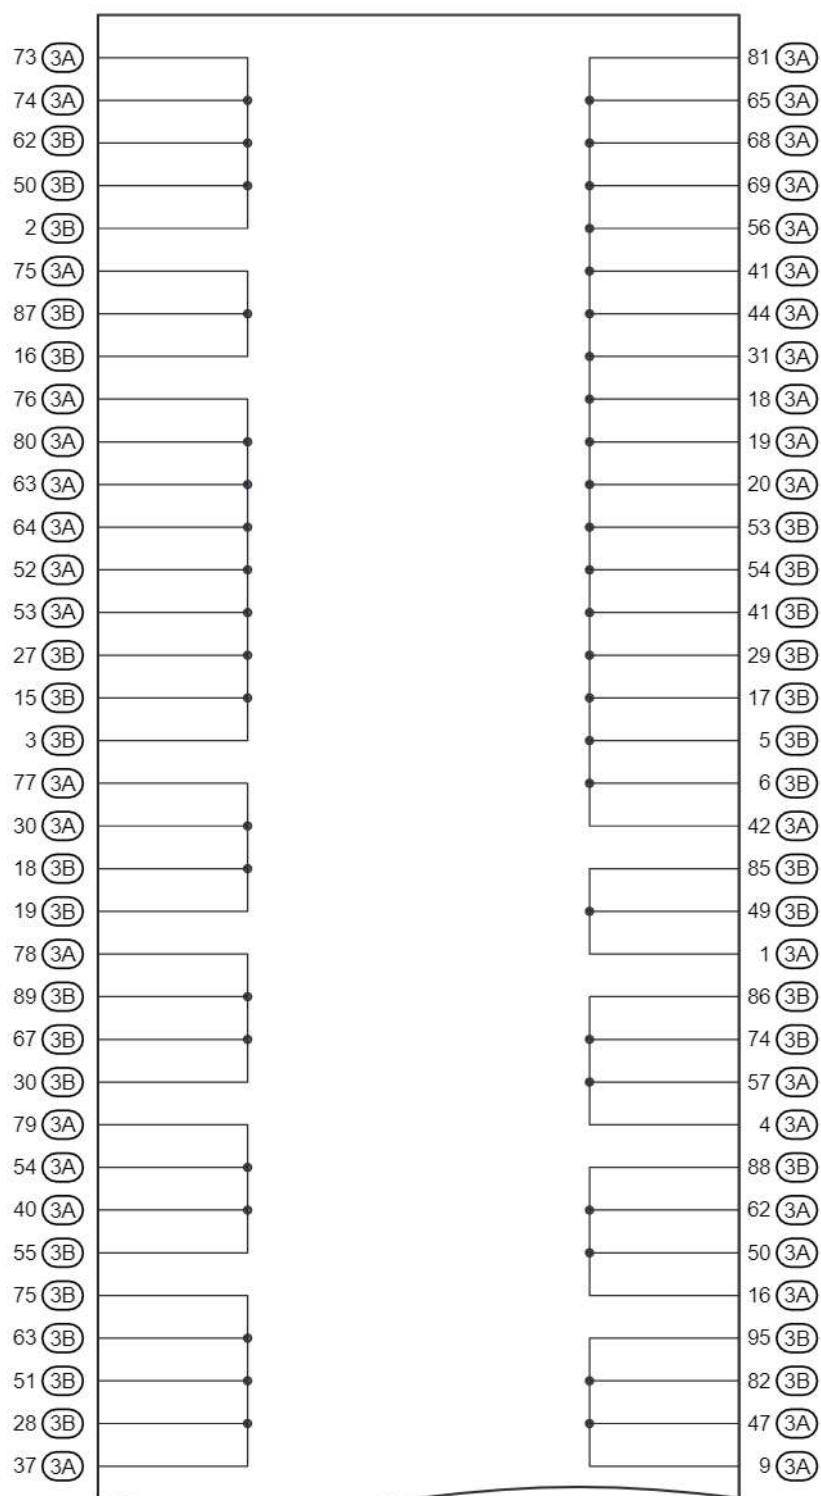

(Cont. Next Page)

(Cont'd)

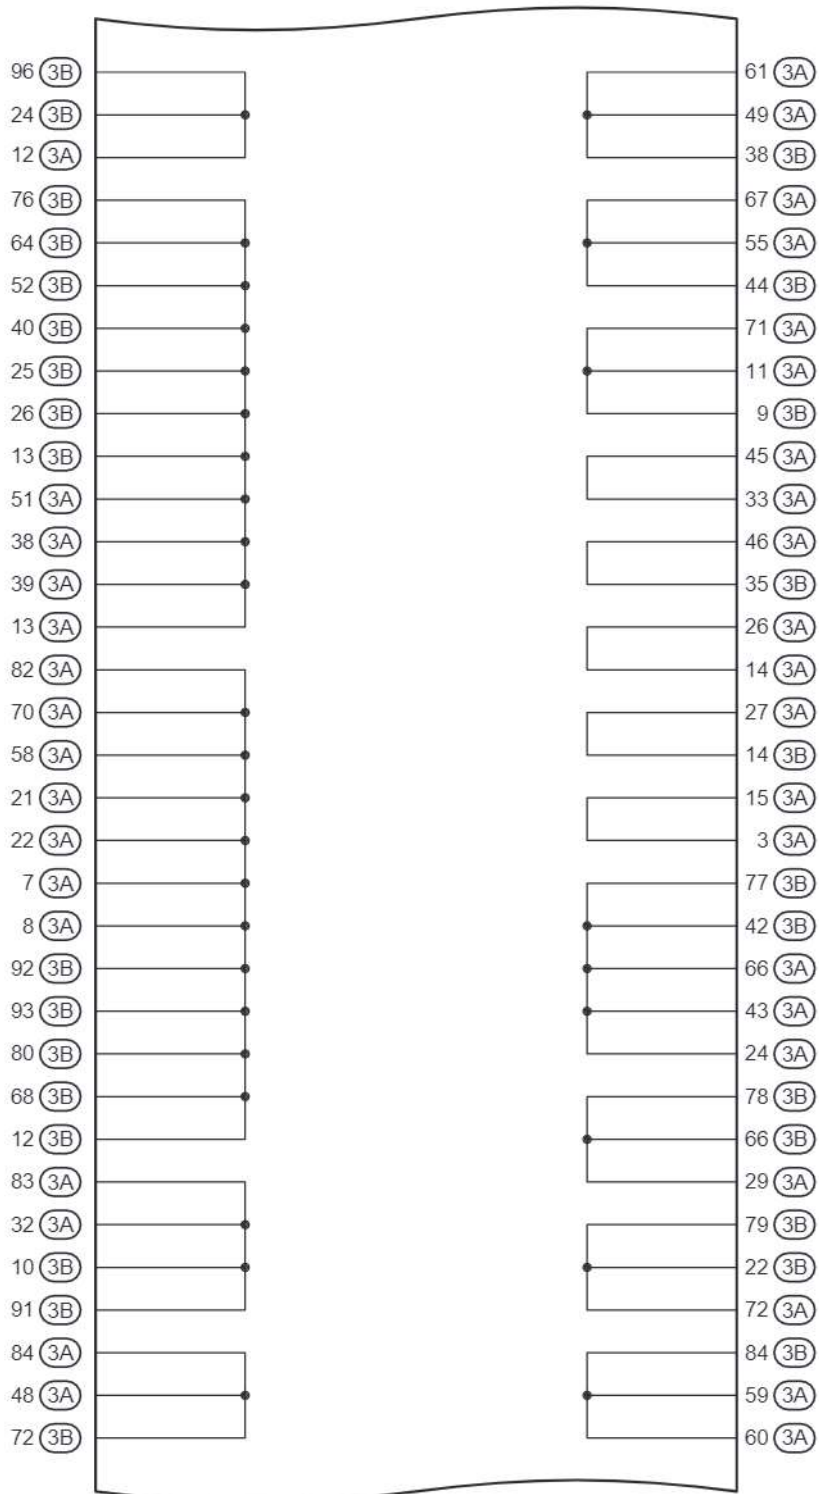


(Cont. Next Page)

F RELAY LOCATIONS

[J/B No. 3 Inner Circuit]
(RHD)


(Cont'd)

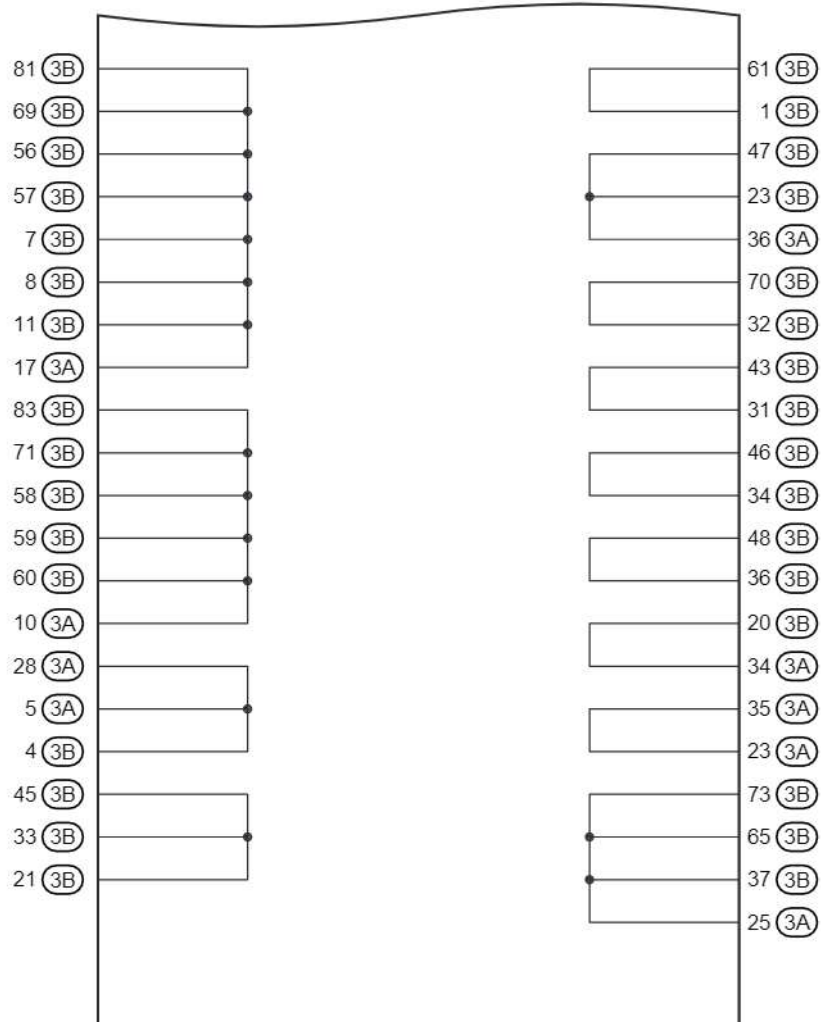


F RELAY LOCATIONS

○ : J/B No. 4

Instrument Panel Reinforcement (See Page 21)

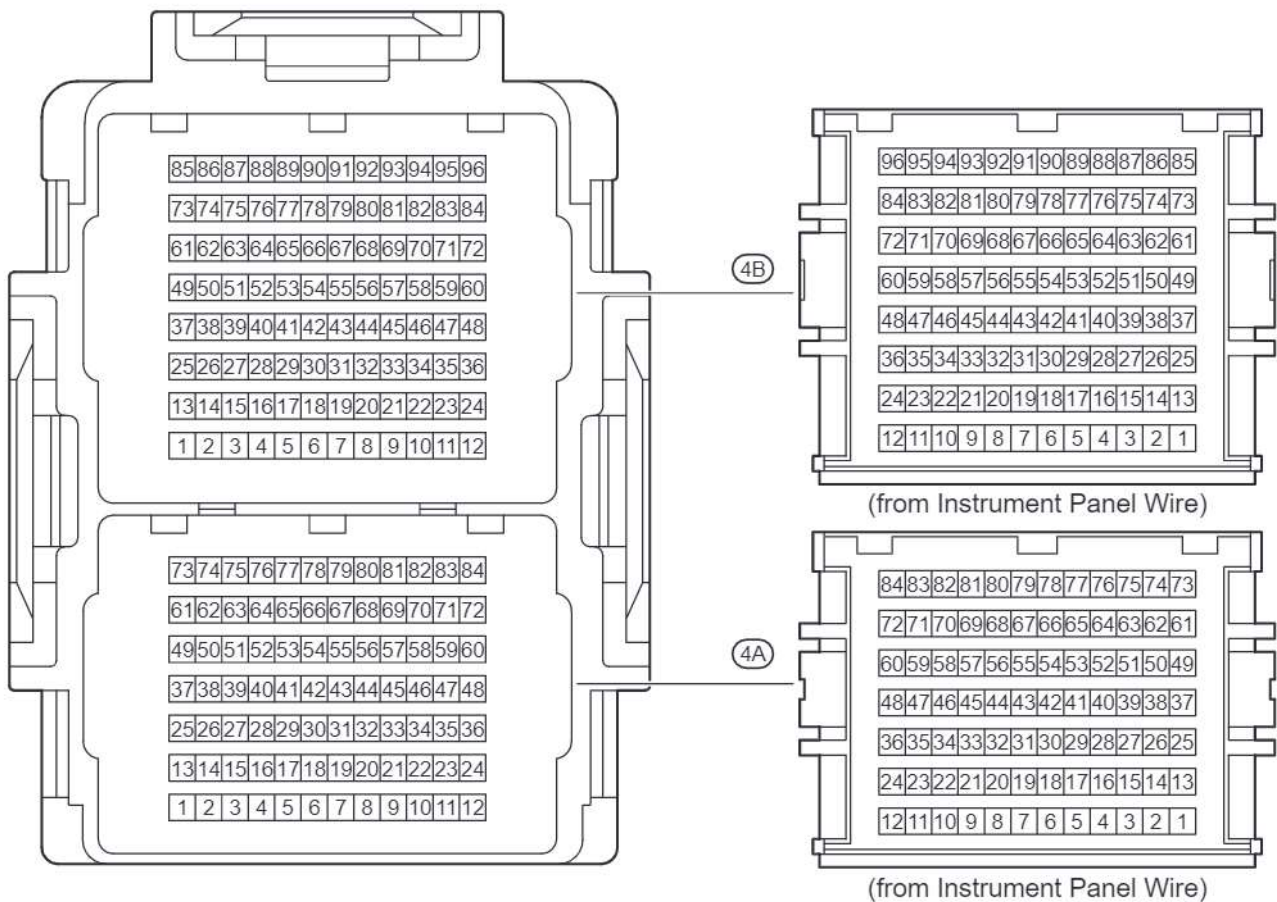

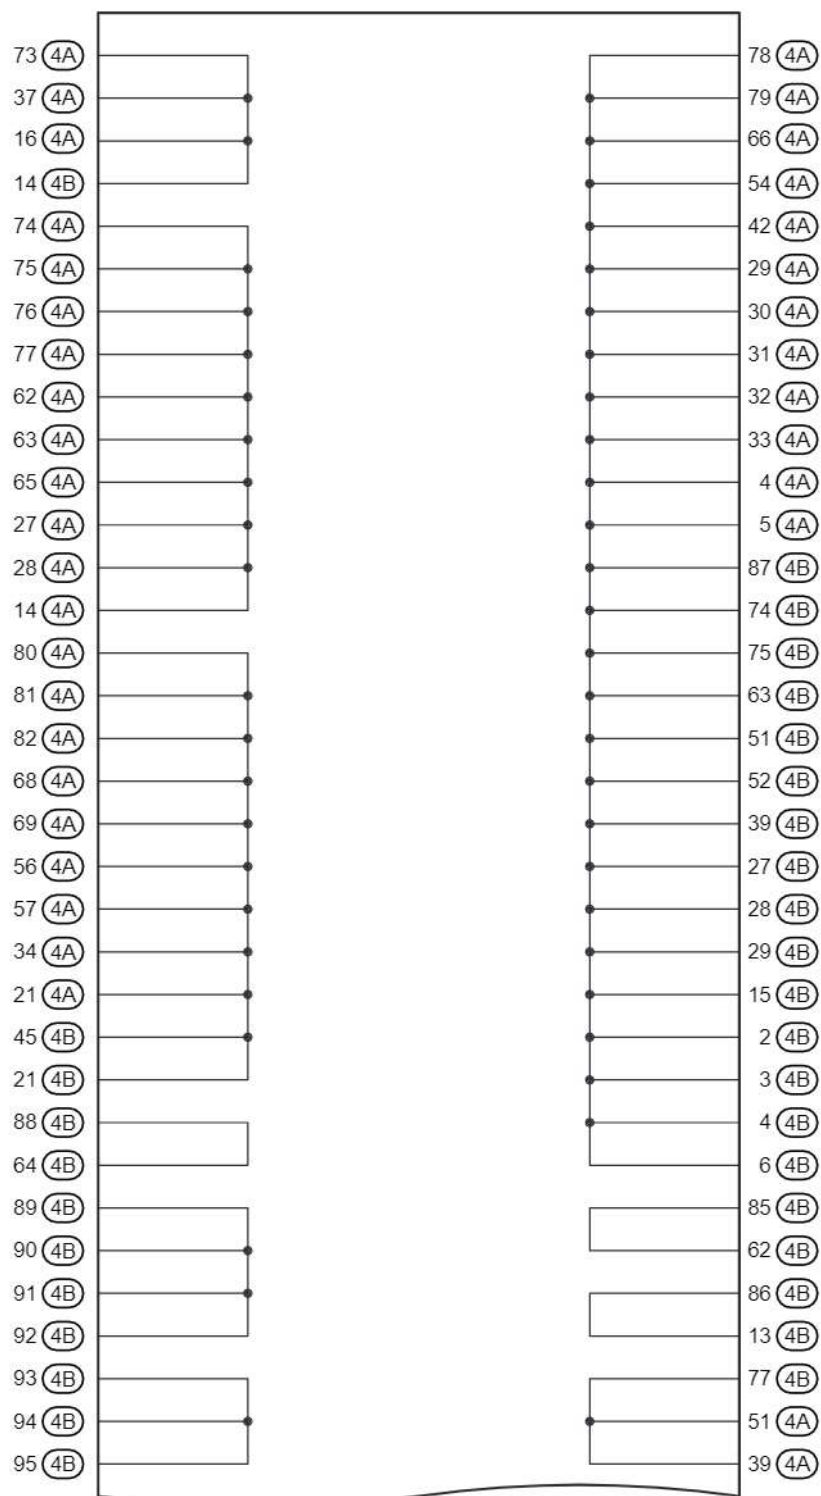
[J/B No. 4 Inner Circuit]

(Cont. Next Page)

F RELAY LOCATIONS


[J/B No. 4 Inner Circuit]

(Cont'd)

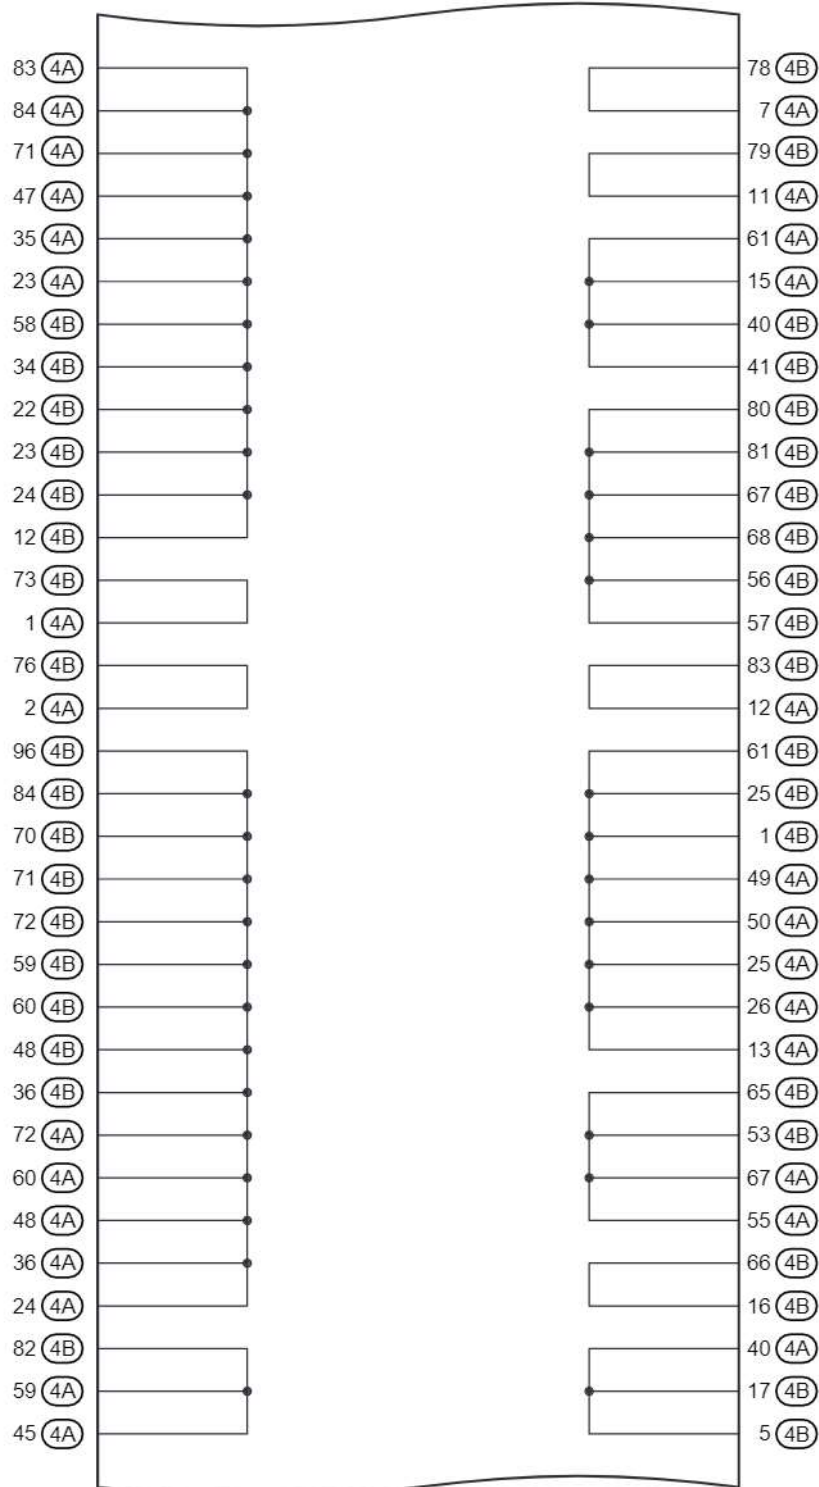

(Cont. Next Page)


(Cont'd)

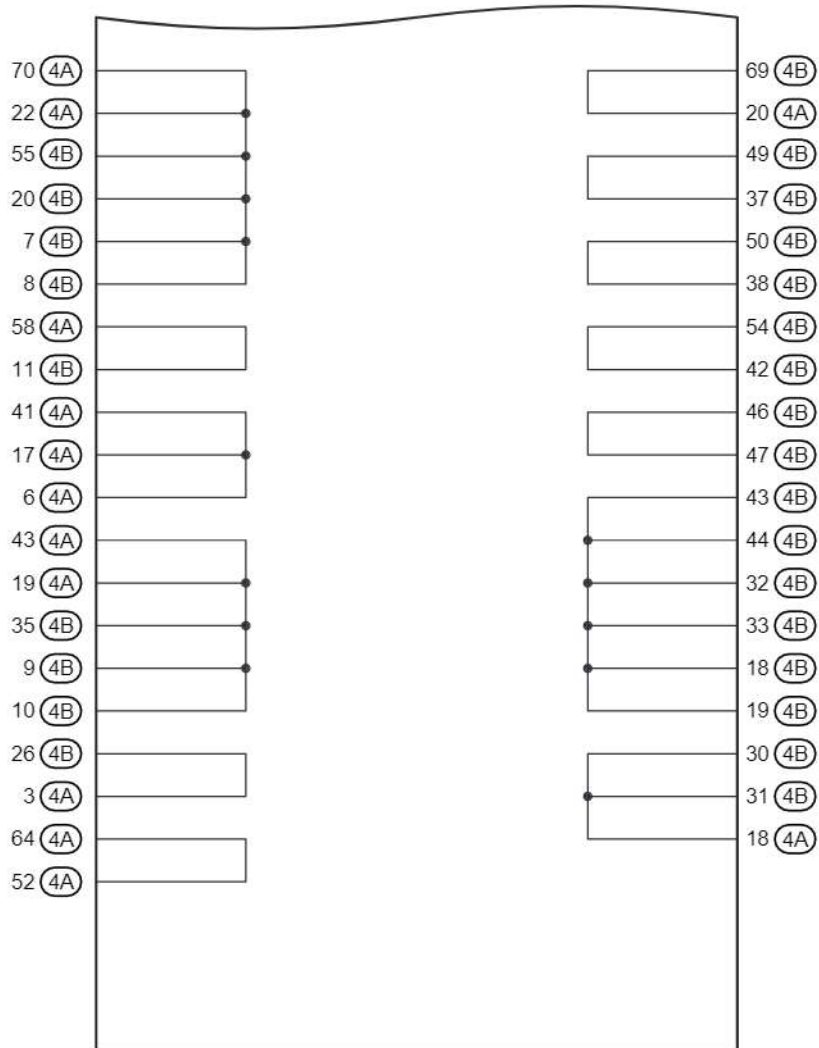

F RELAY LOCATIONS


Junction Connector (CAN No. 1)

Instrument Panel Brace LH (See Page 21)

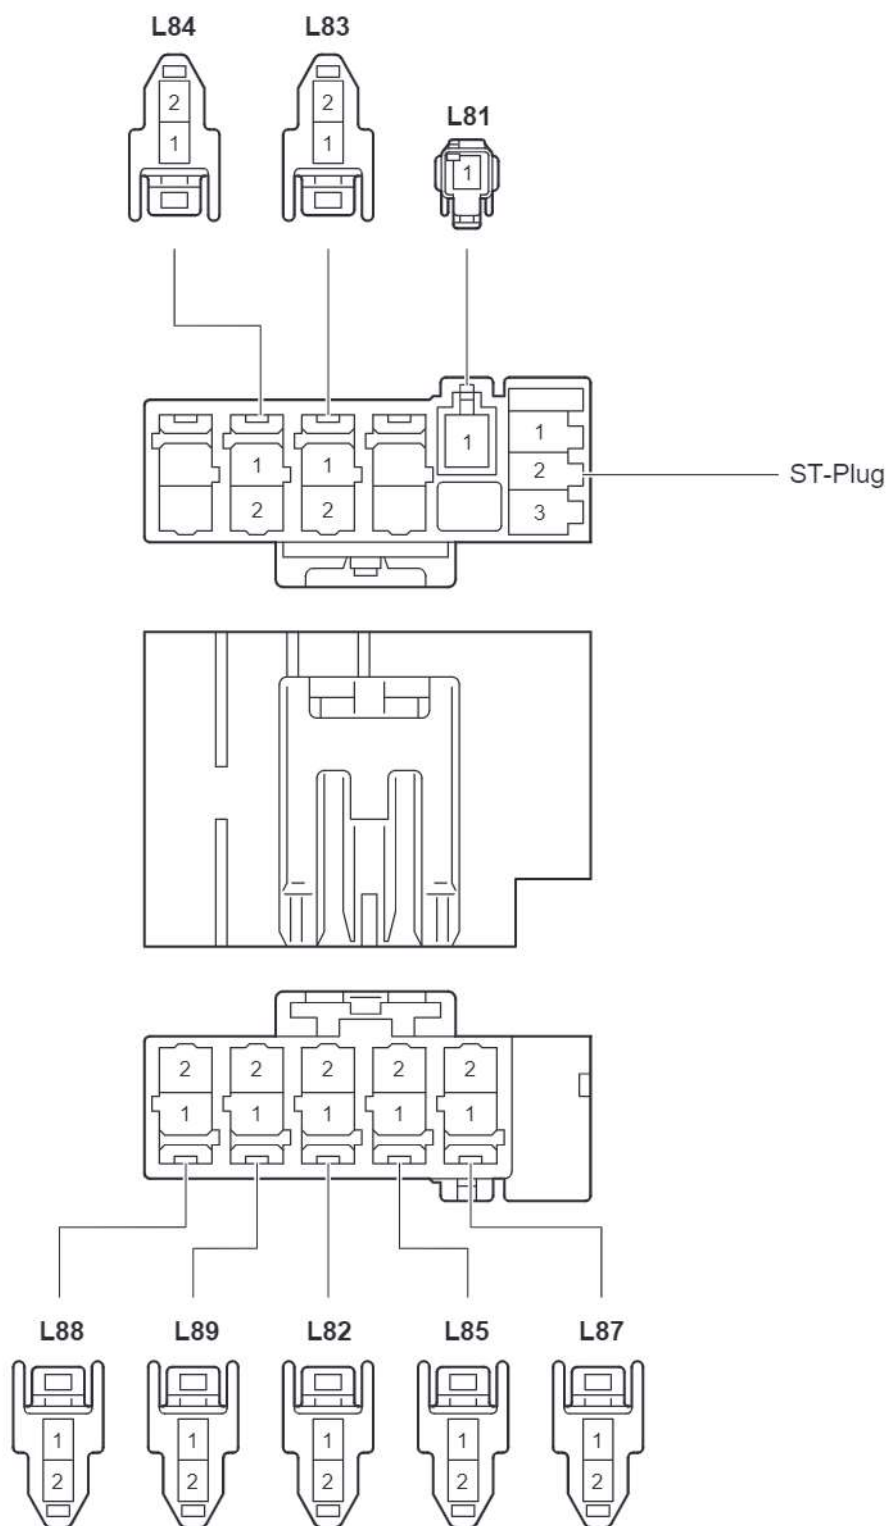

[Junction Connector (CAN No. 1) Inner Circuit]

L81(A), L82(B), L83(C), L84(D), L85(G), L87(H),
L88(E), L89(F)
Junction Connector

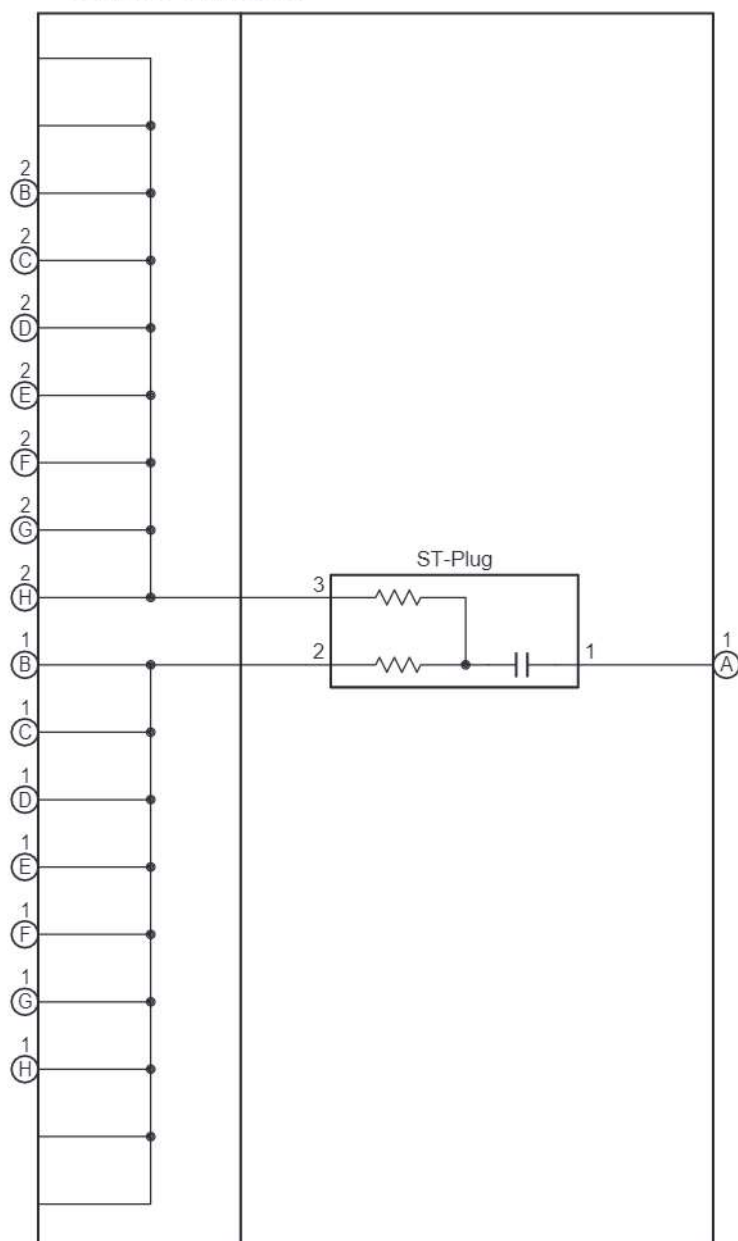


F RELAY LOCATIONS

Junction Connector (CAN No. 2)

Instrument Panel Reinforcement (See Page 21)

(LHD)

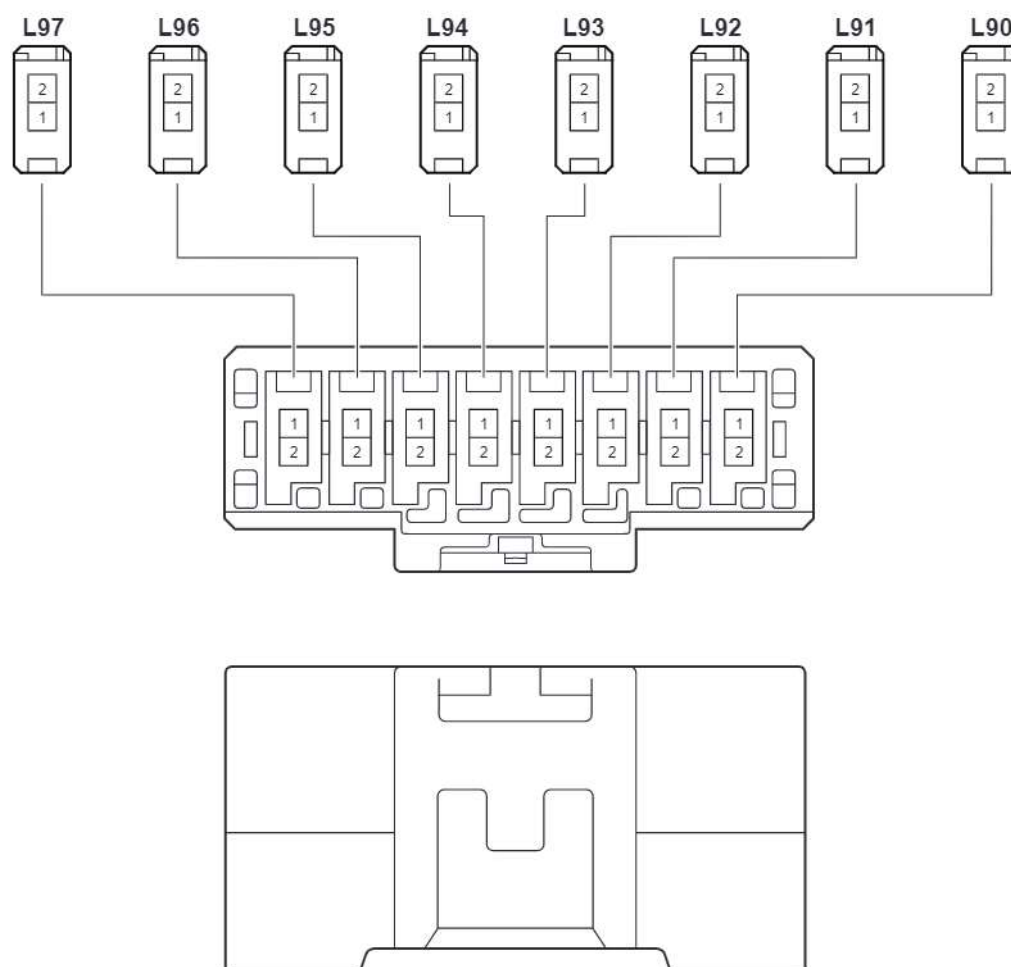


F RELAY LOCATIONS

Junction Connector (CAN No. 2)

Instrument Panel Reinforcement (See Page 21)


(RHD)

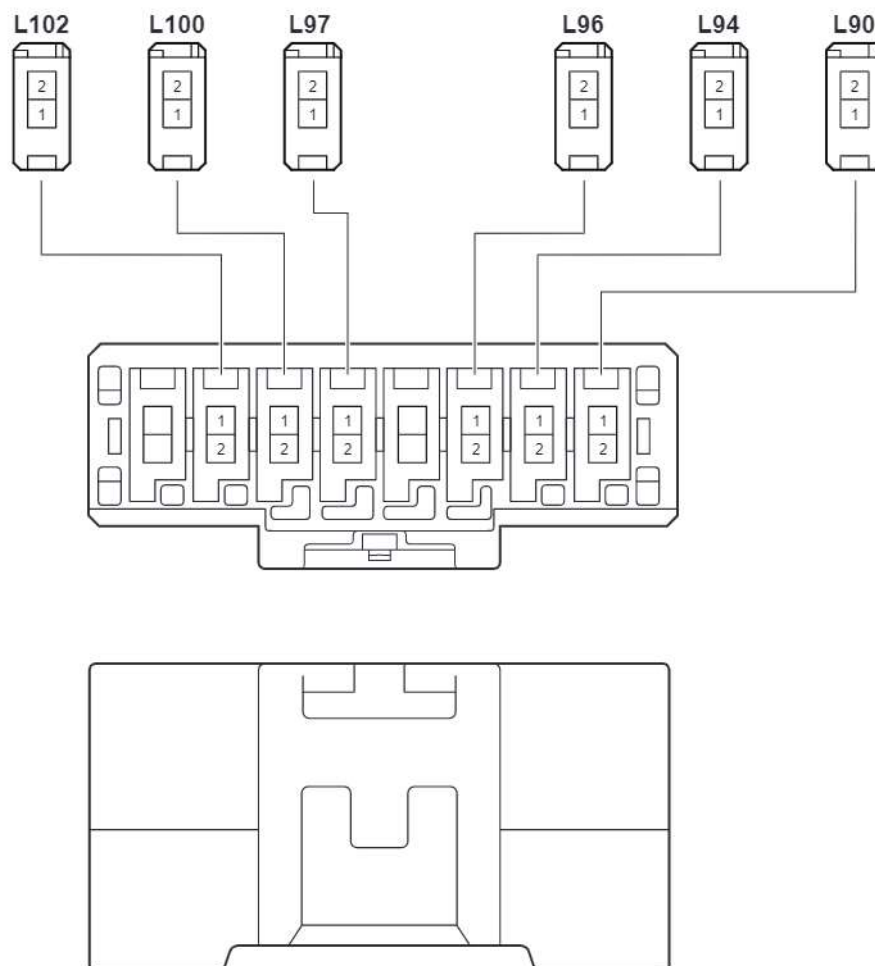


cardiagn.com

[Junction Connector (CAN No. 2) Inner Circuit] (LHD)

L90(A), L91(B), L92(C), L93(D), L94(E), L95(F),
L96(G), L97(H)
Junction Connector

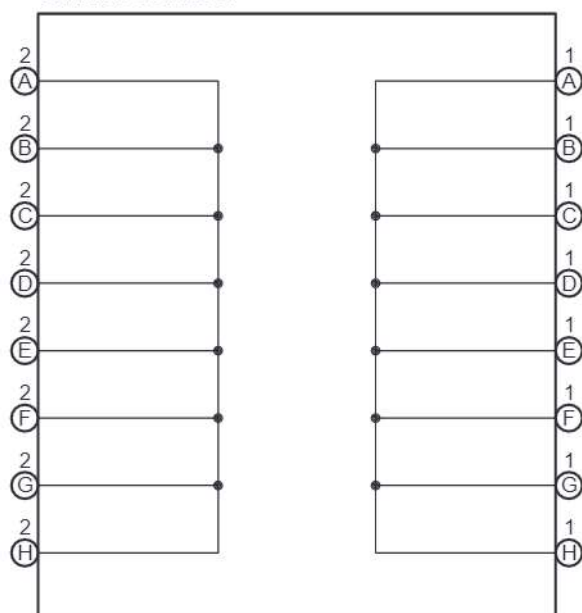

[Junction Connector (CAN No. 2) Inner Circuit] (RHD)

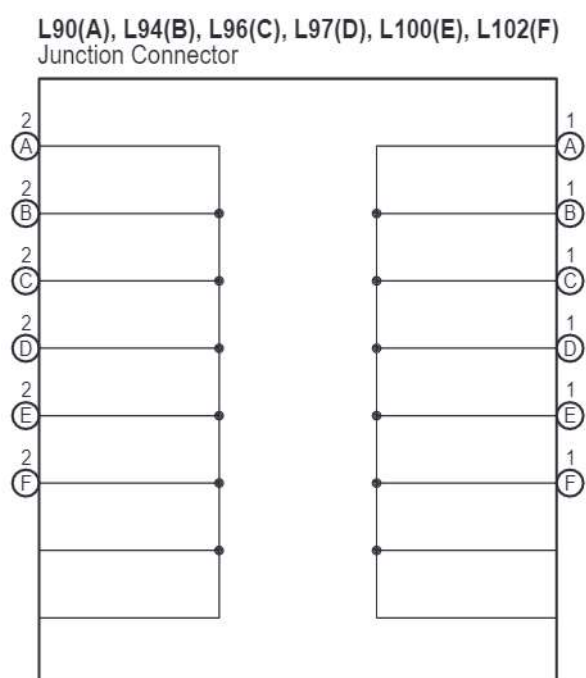


F RELAY LOCATIONS

Junction Connector (CAN No. 3)

Instrument Panel Brace RH (See Page 21)

(LHD)

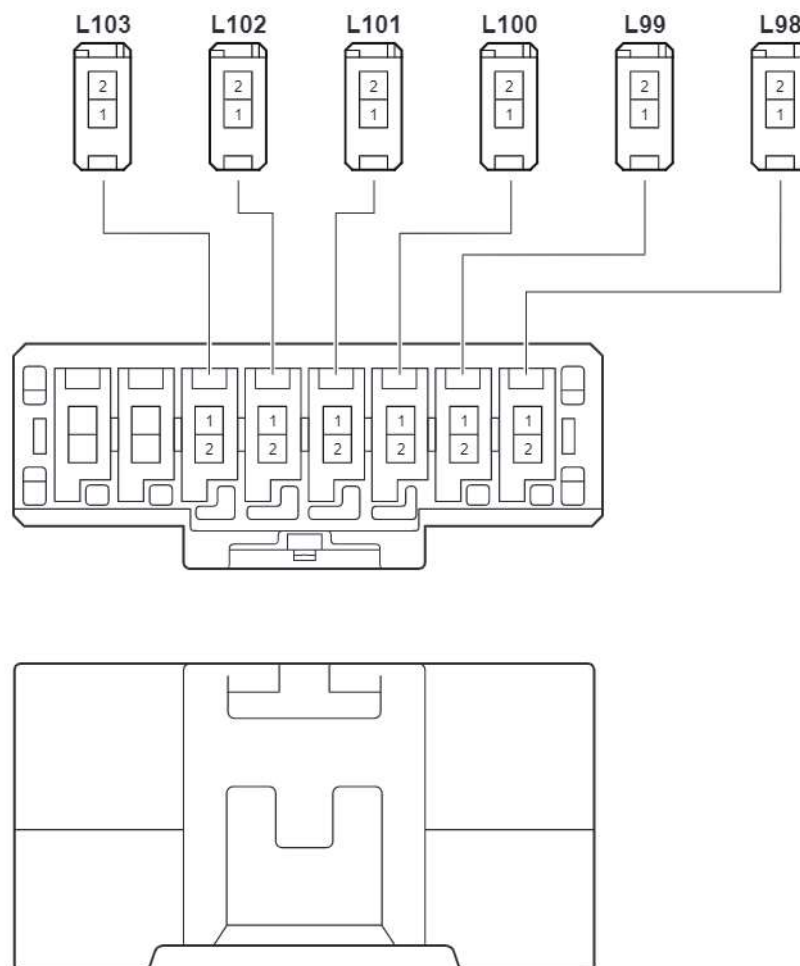


F RELAY LOCATIONS

Junction Connector (CAN No. 3)


Cowl Side Panel RH (See Page 21)

(RHD)

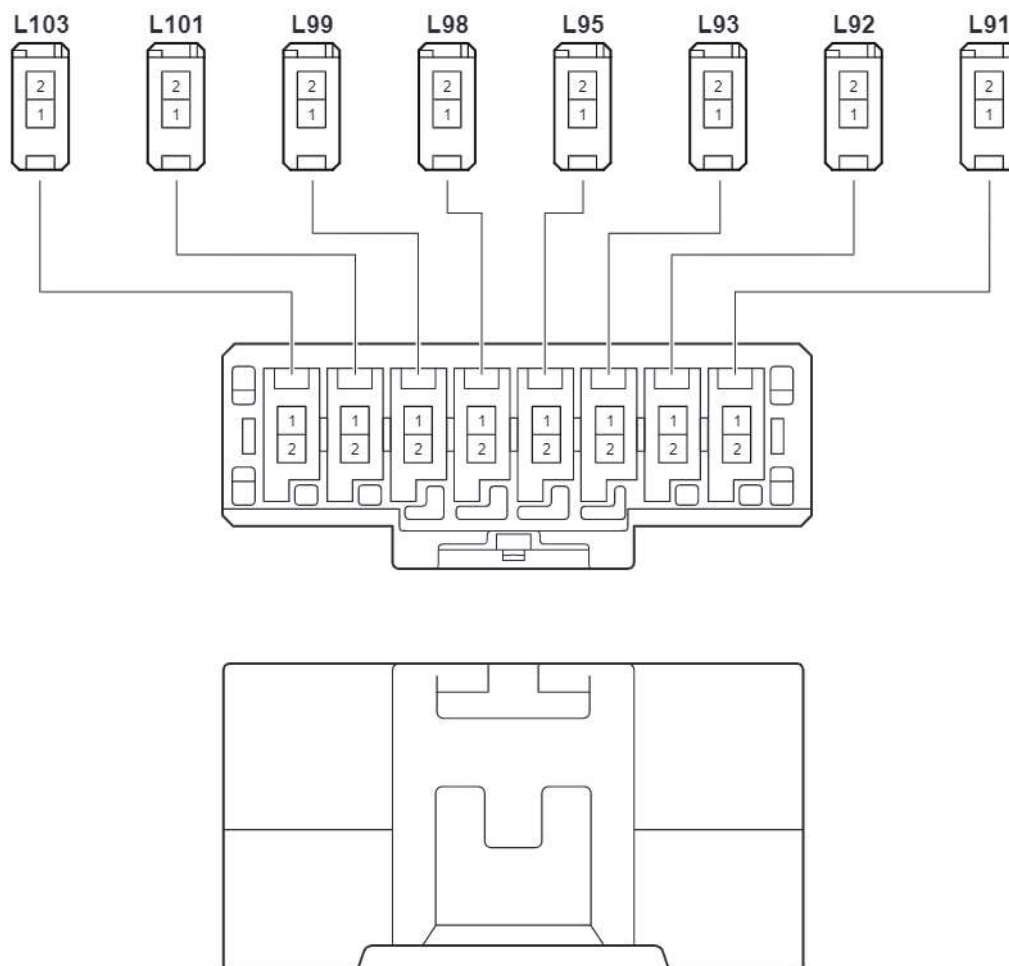


[Junction Connector (CAN No. 3) Inner Circuit] (LHD)

L98(A), L99(B), L100(C), L101(D), L102(E),
L103(F)
Junction Connector

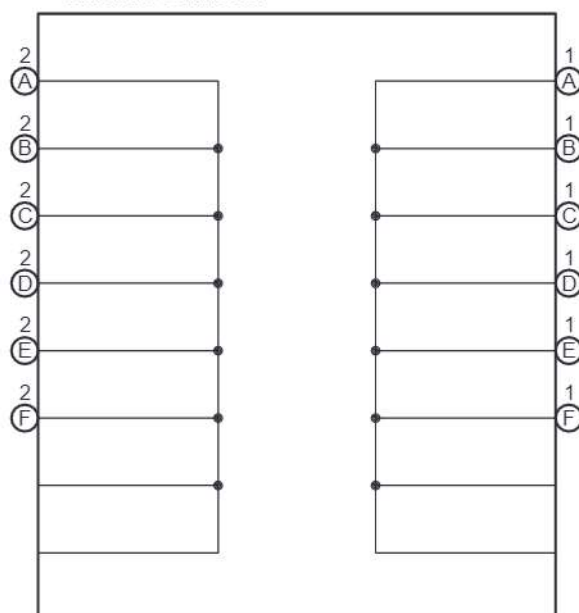


[Junction Connector (CAN No. 3) Inner Circuit] (RHD)

L91(A), L92(B), L93(C), L95(D), L98(E), L99(F),
L101(G), L103(H)
Junction Connector

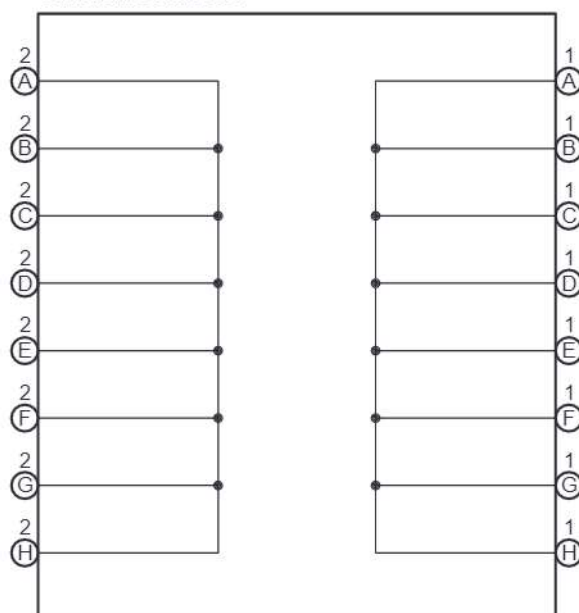


F RELAY LOCATIONS

① : Engine Room R/B	Left Engine Compartment (See Page 20)
○ : Engine Room J/B	

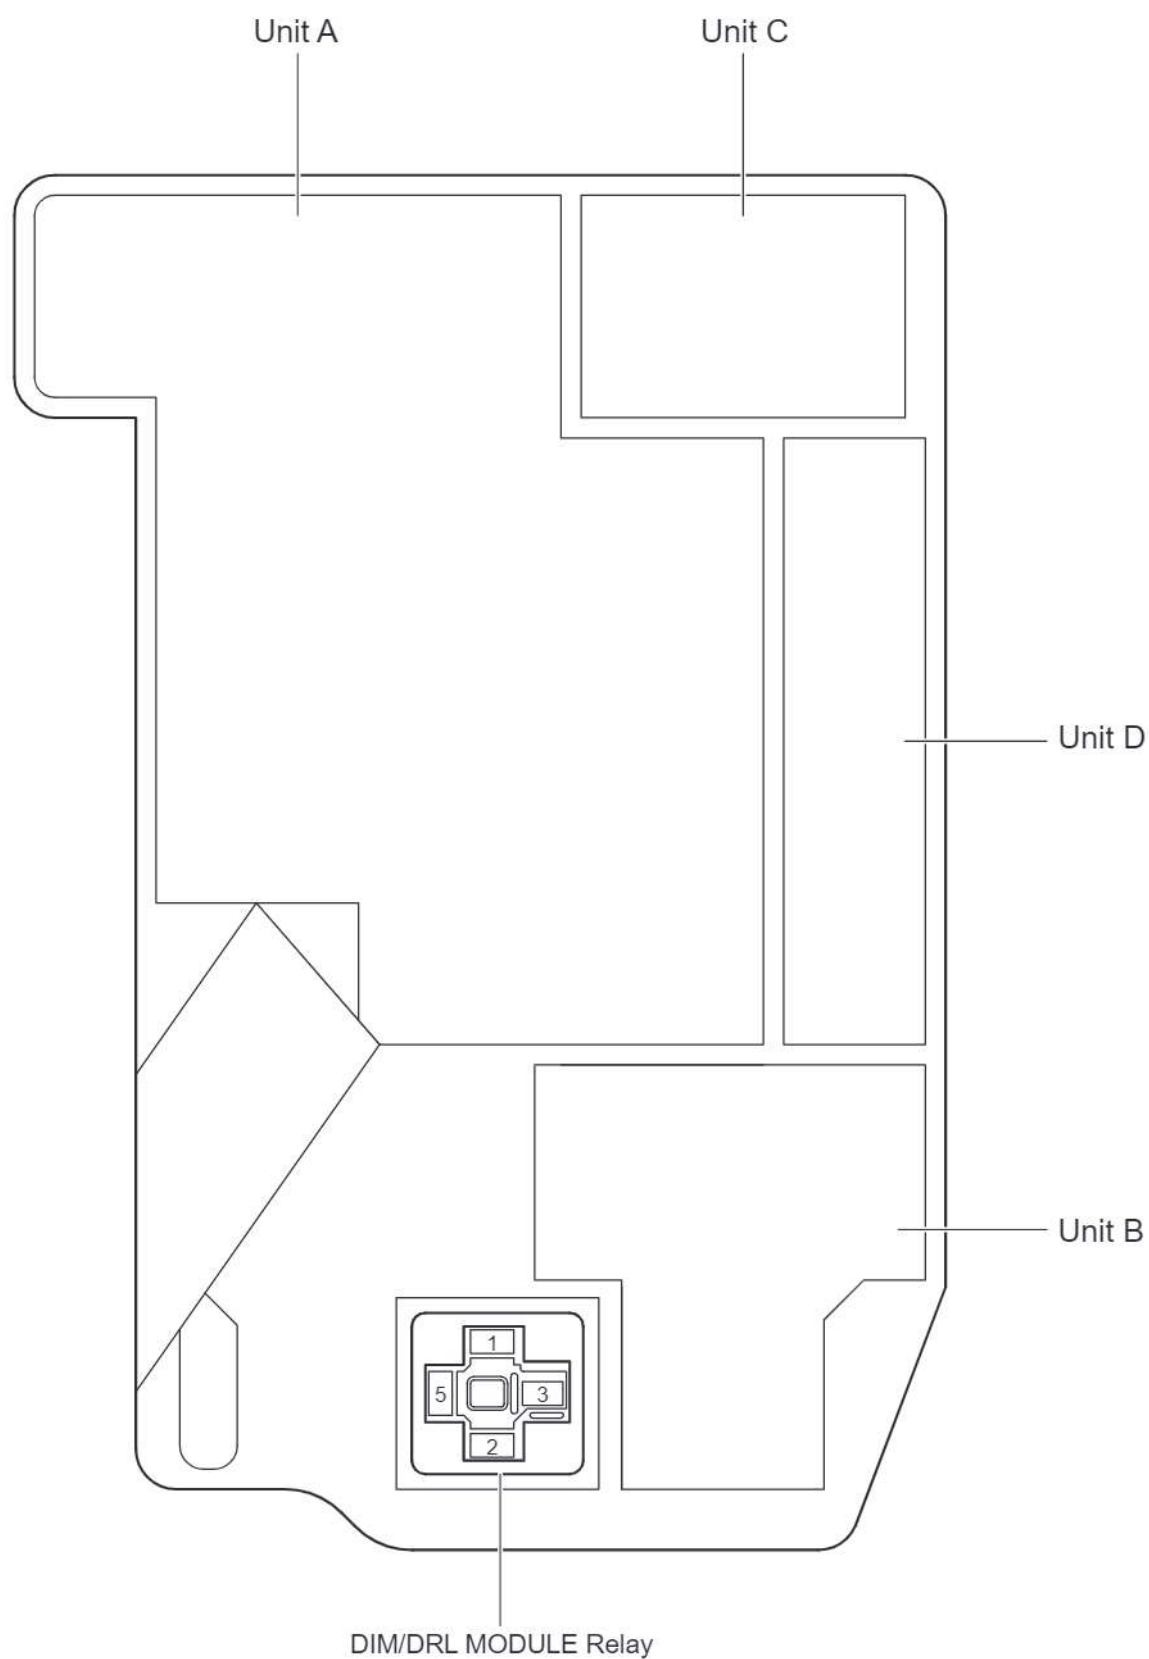


Unit A

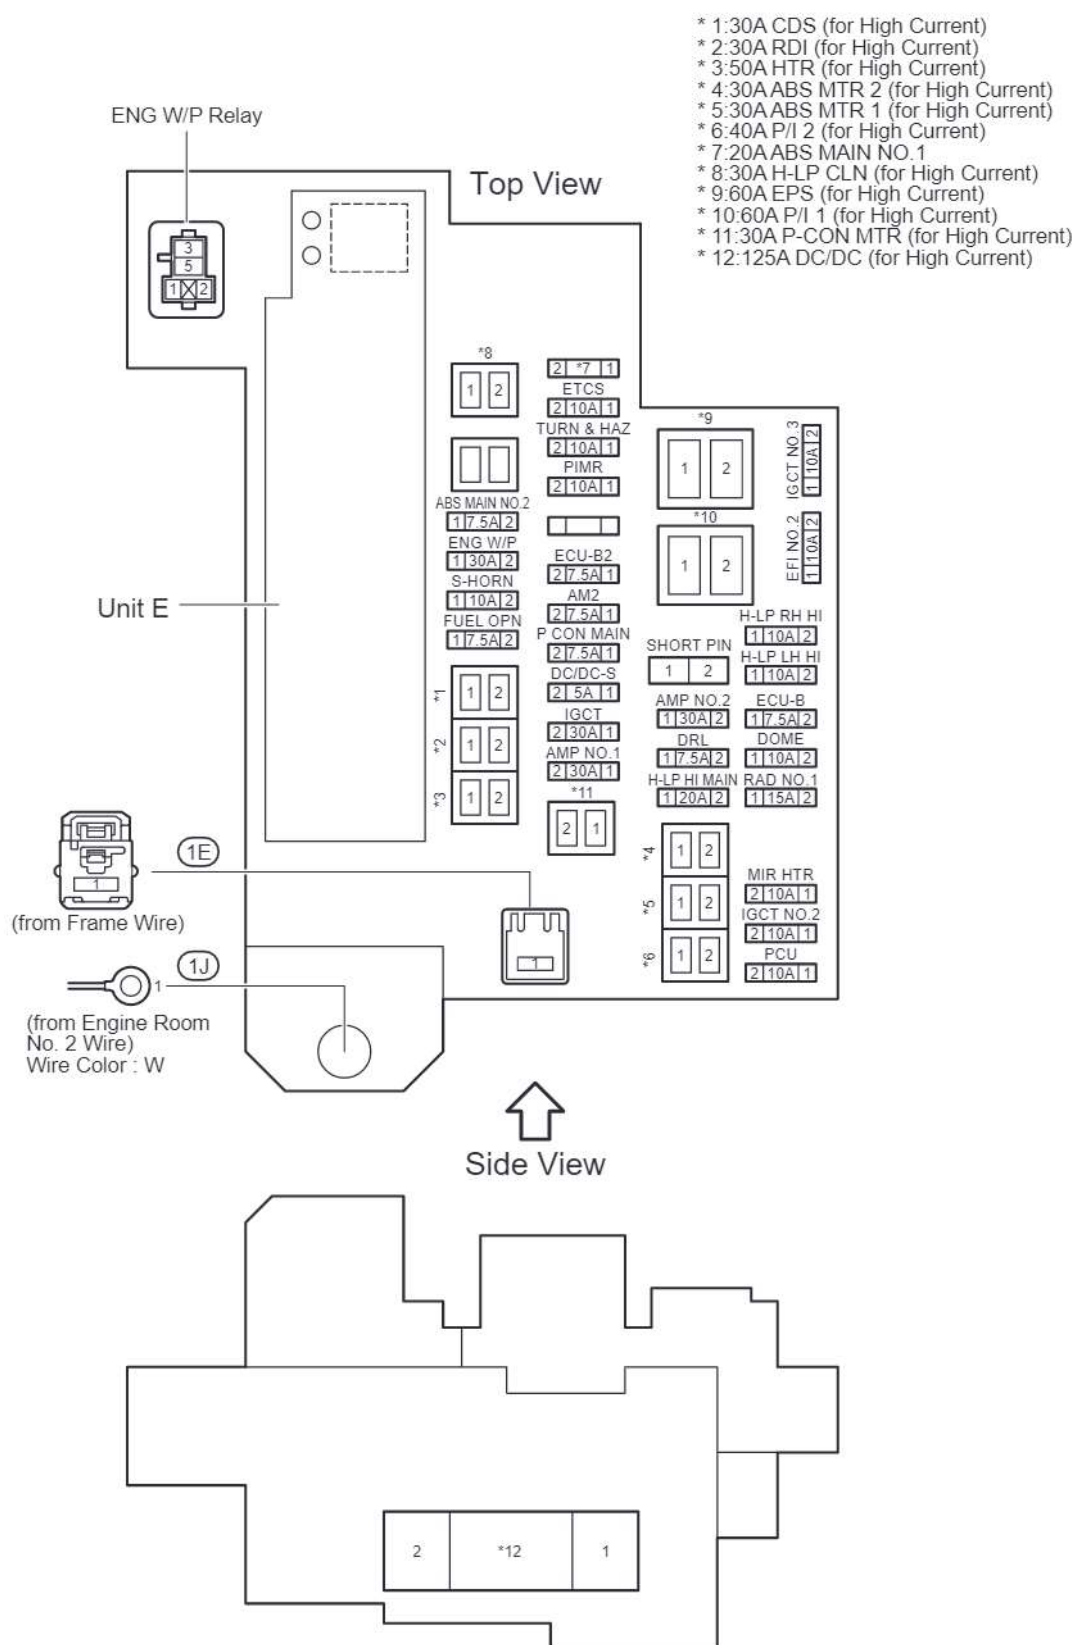


F RELAY LOCATIONS

① : Engine Room R/B	Left Engine Compartment (See Page 20)
② : Engine Room J/B	

Unit A

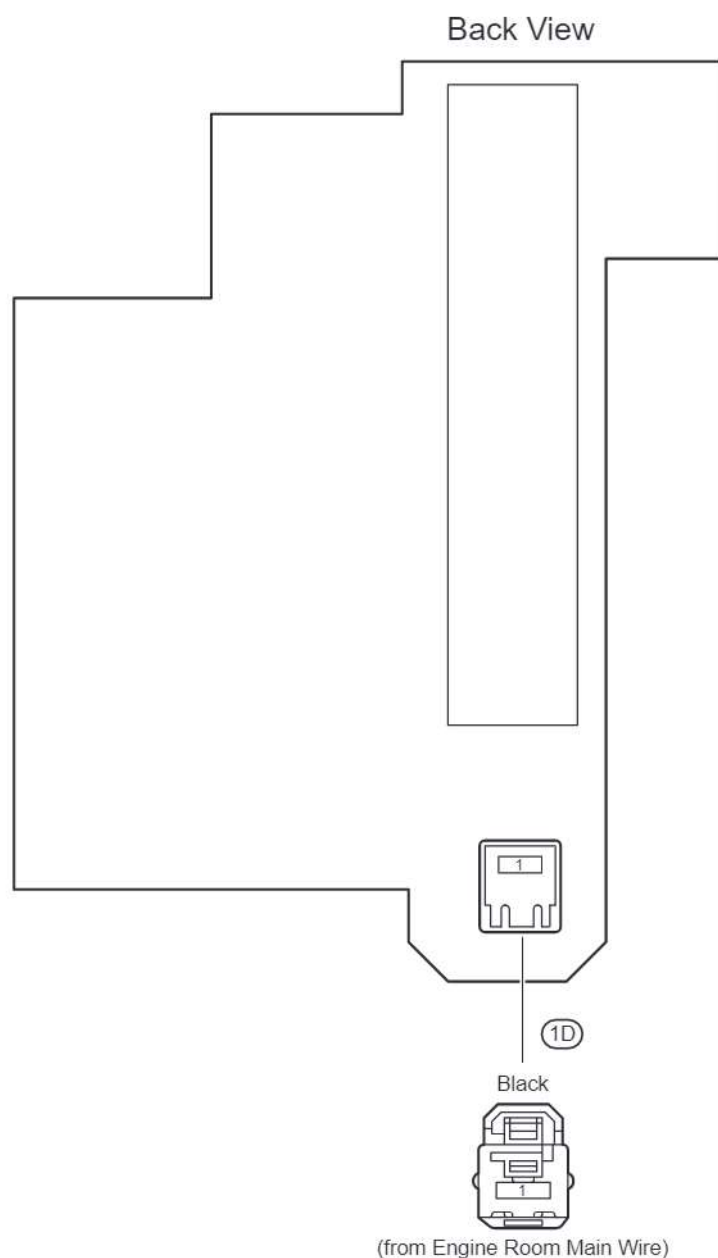


Unit E

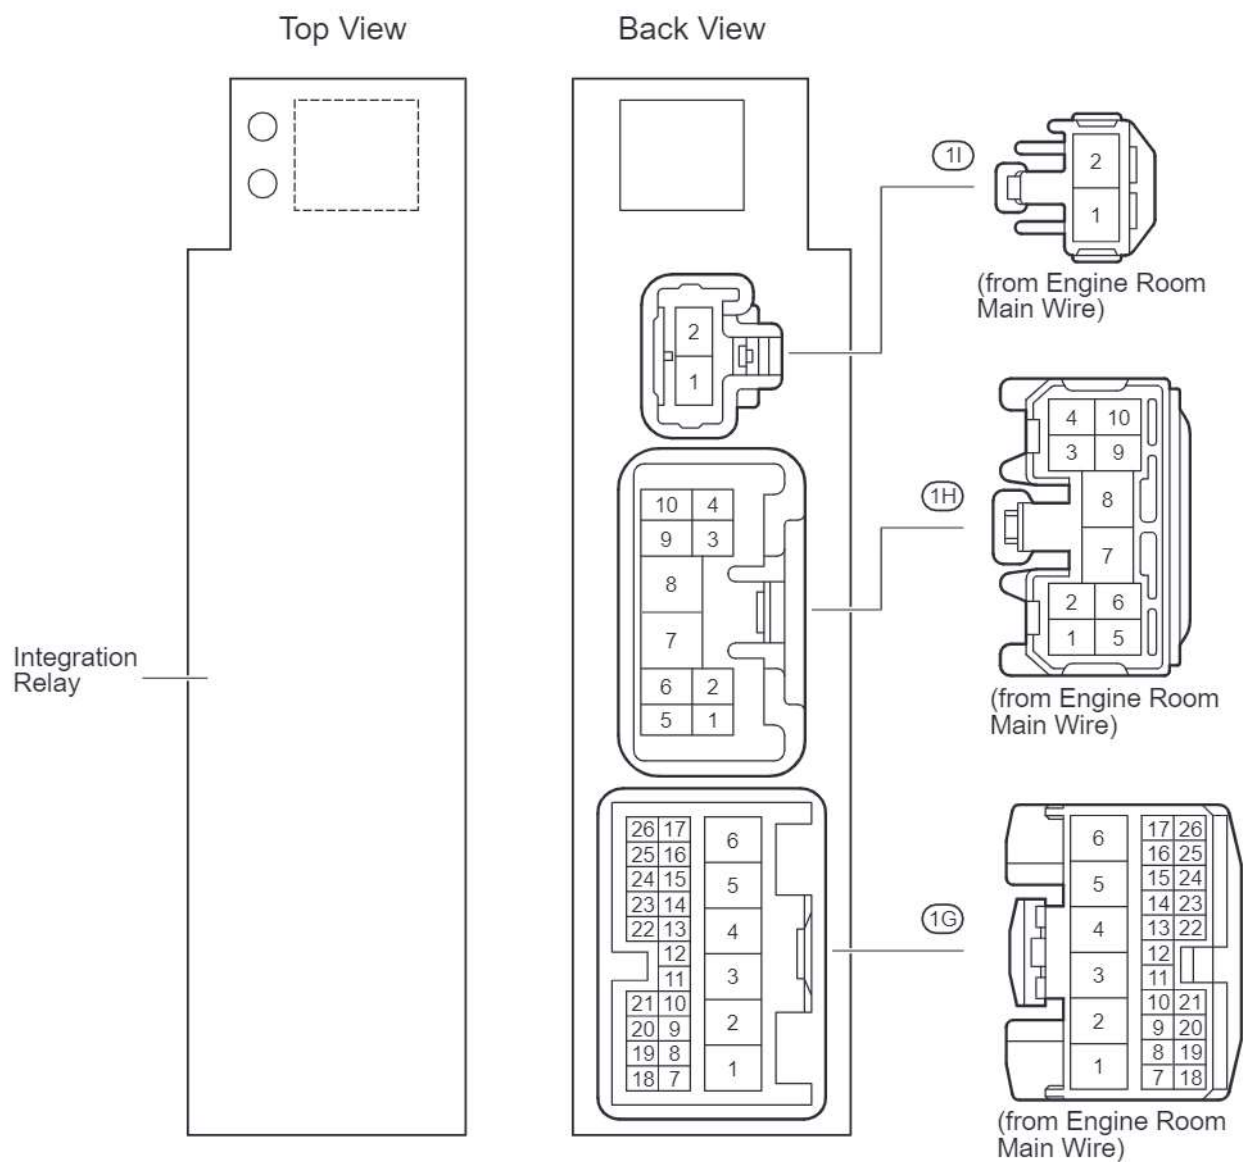

F RELAY LOCATIONS

① : Engine Room R/B	Left Engine Compartment (See Page 20)
○ : Engine Room J/B	

Unit D

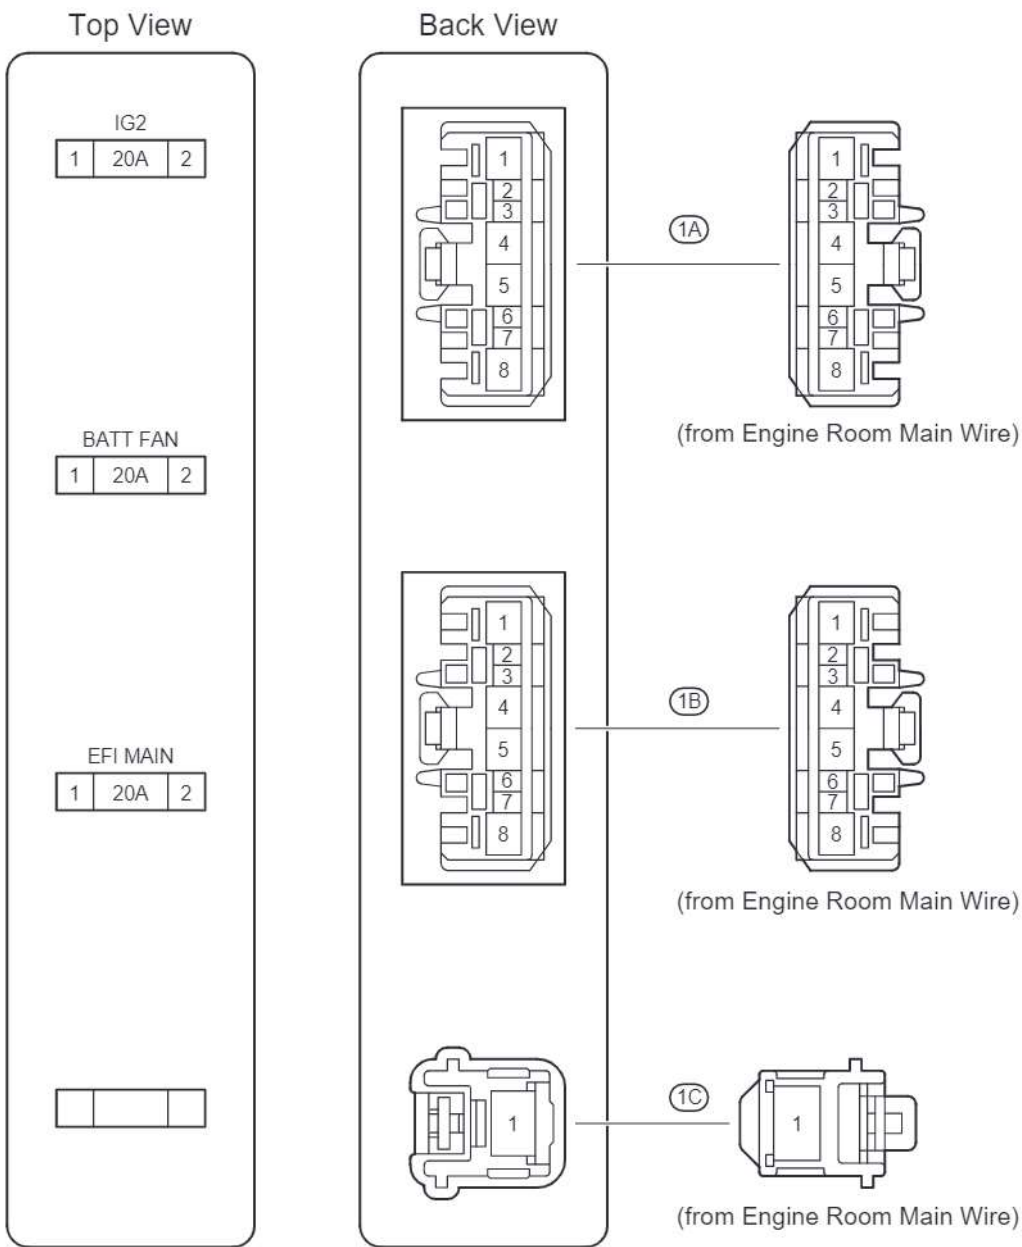


cardiagn.com


F RELAY LOCATIONS

① : Engine Room R/B	Left Engine Compartment (See Page 20)
○ : Engine Room J/B	

Unit B

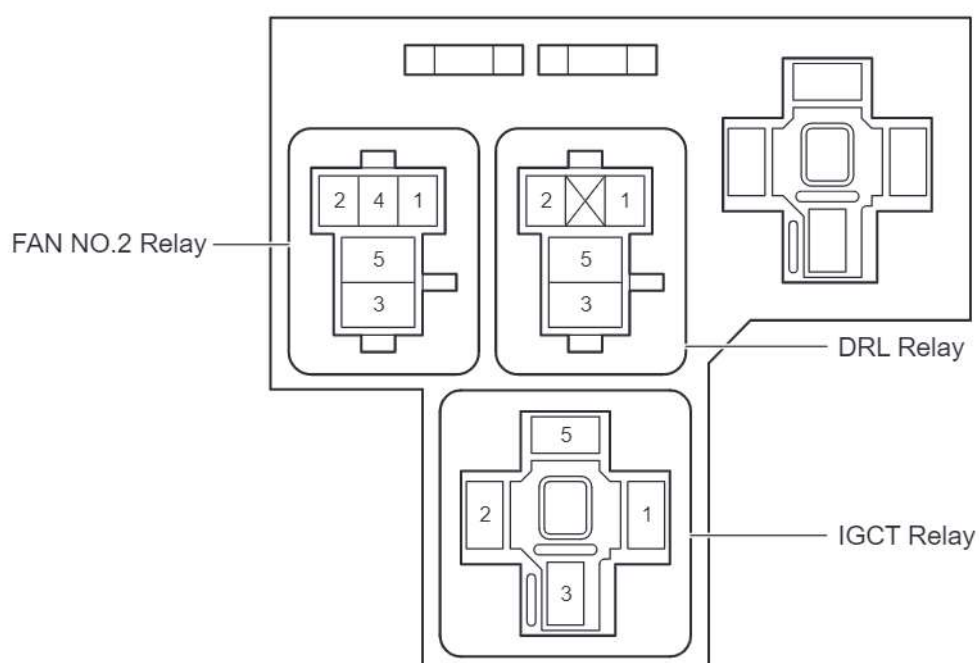


Unit C

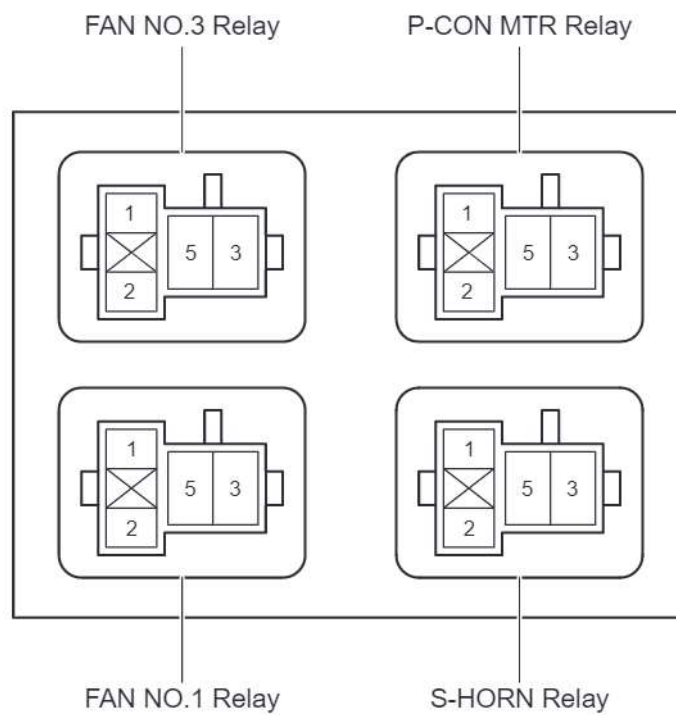

F RELAY LOCATIONS

[Engine Room R/B and Engine Room J/B Inner Circuit]

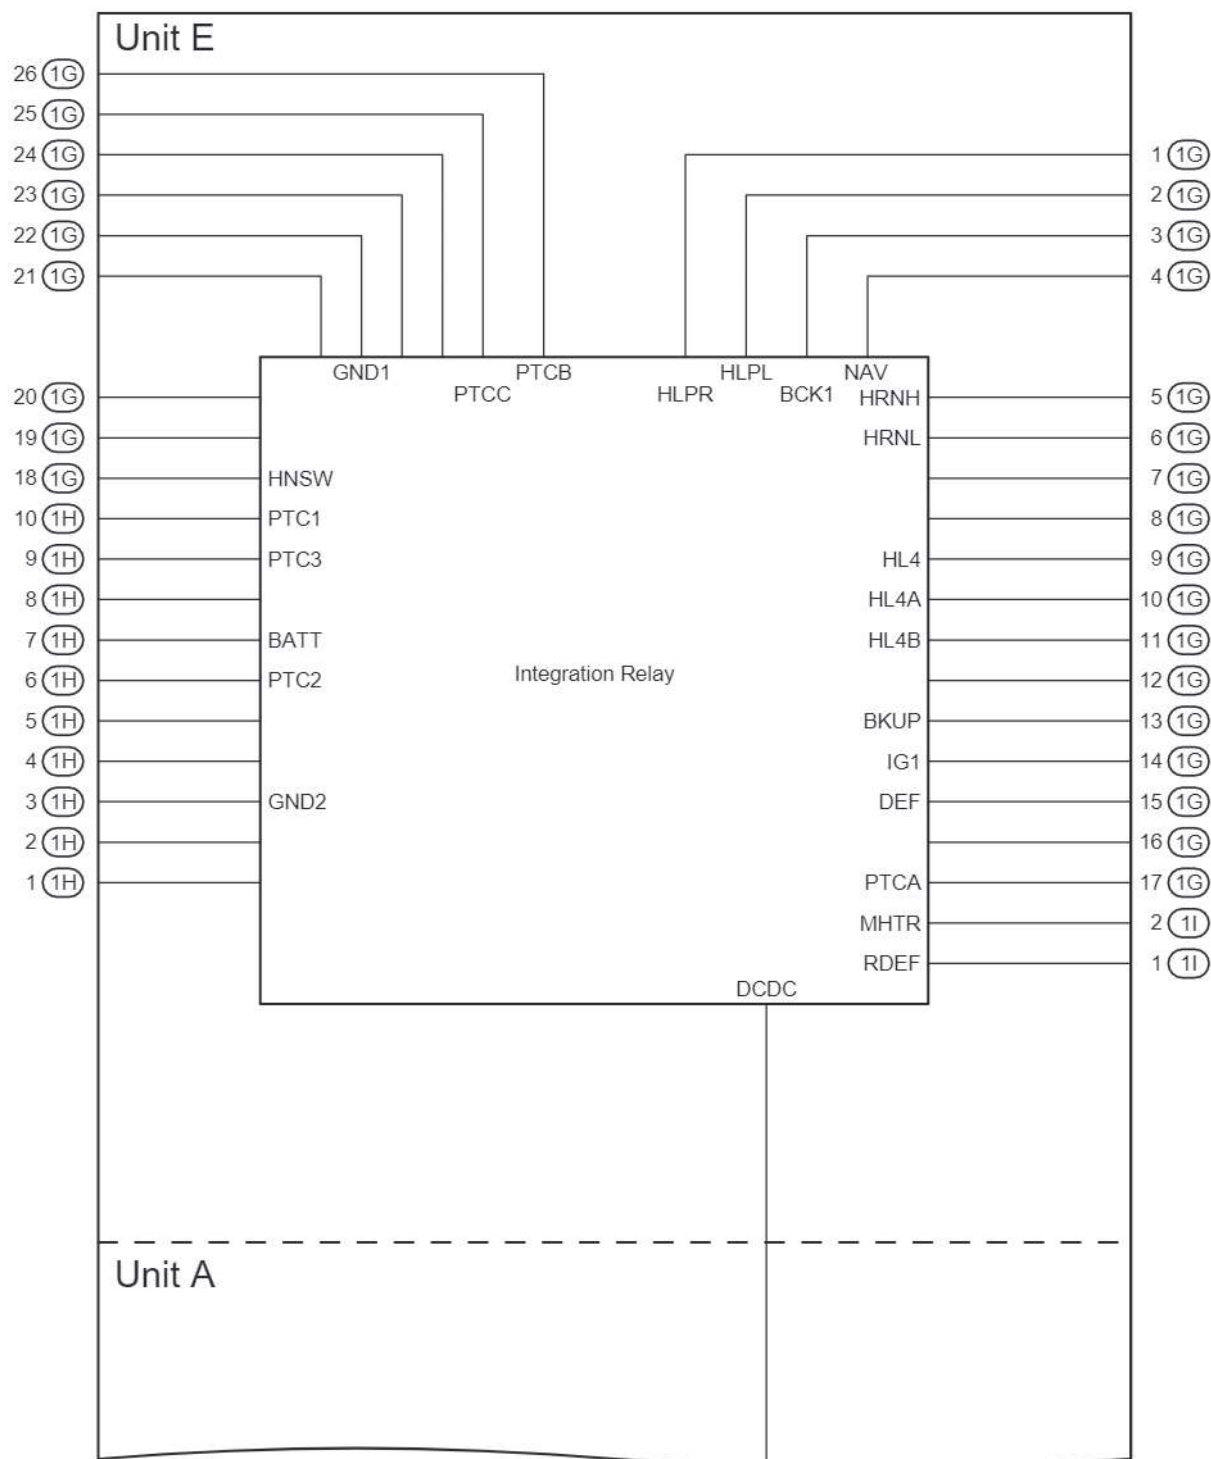

(Cont. Next Page)



[Engine Room R/B and Engine Room J/B Inner Circuit]