



|                                                                          |             |                         |
|--------------------------------------------------------------------------|-------------|-------------------------|
| Last Modified: 3-27-2012                                                 | 6.4 K       | From: 201203            |
| Model Year: 2013                                                         | Model: FR-S | Doc ID: RM000003NEB011X |
| Title: INTERIOR PANELS / TRIM: FRONT CONSOLE BOX: COMPONENTS (2013 FR-S) |             |                         |

COMPONENTS




ILLUSTRATION

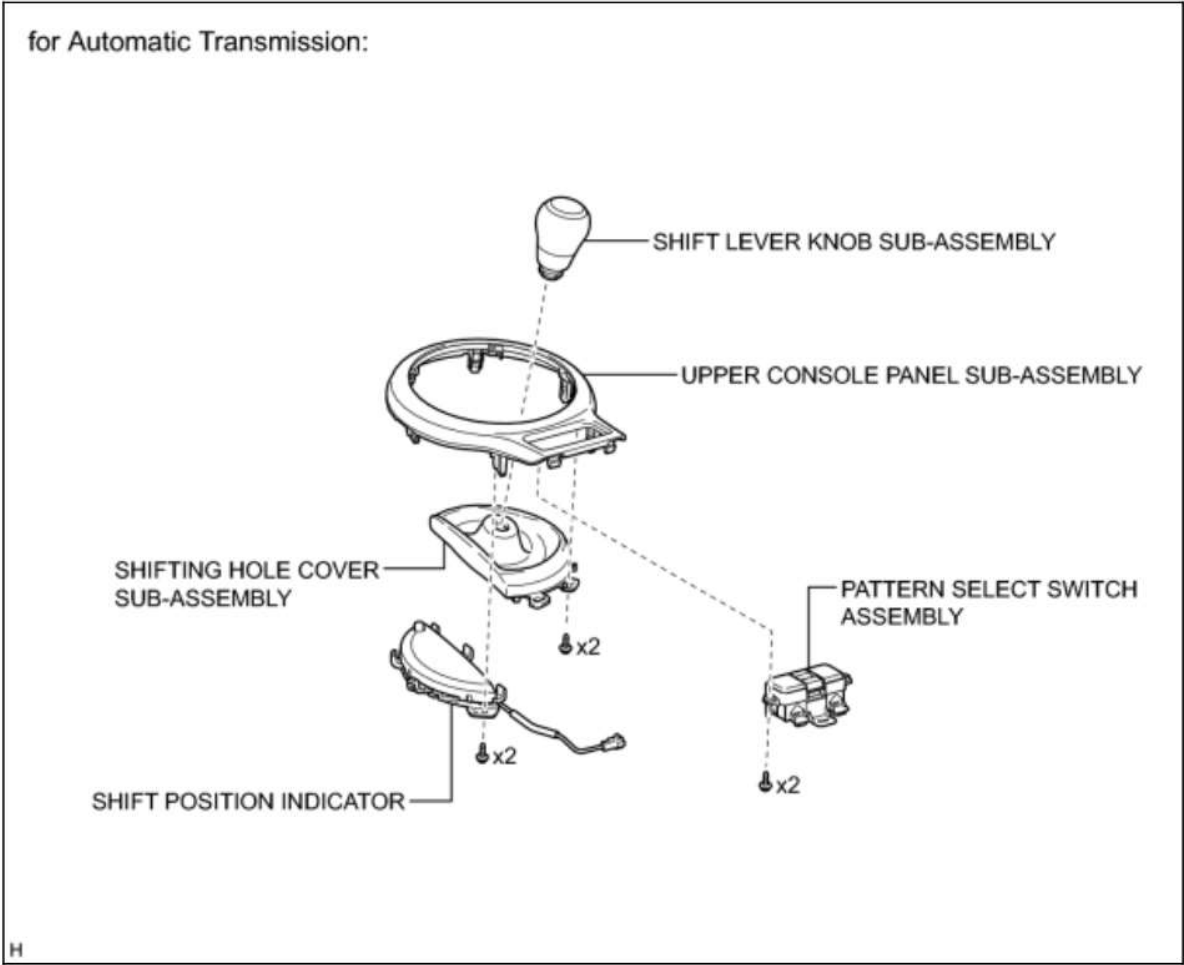

ILLUSTRATION

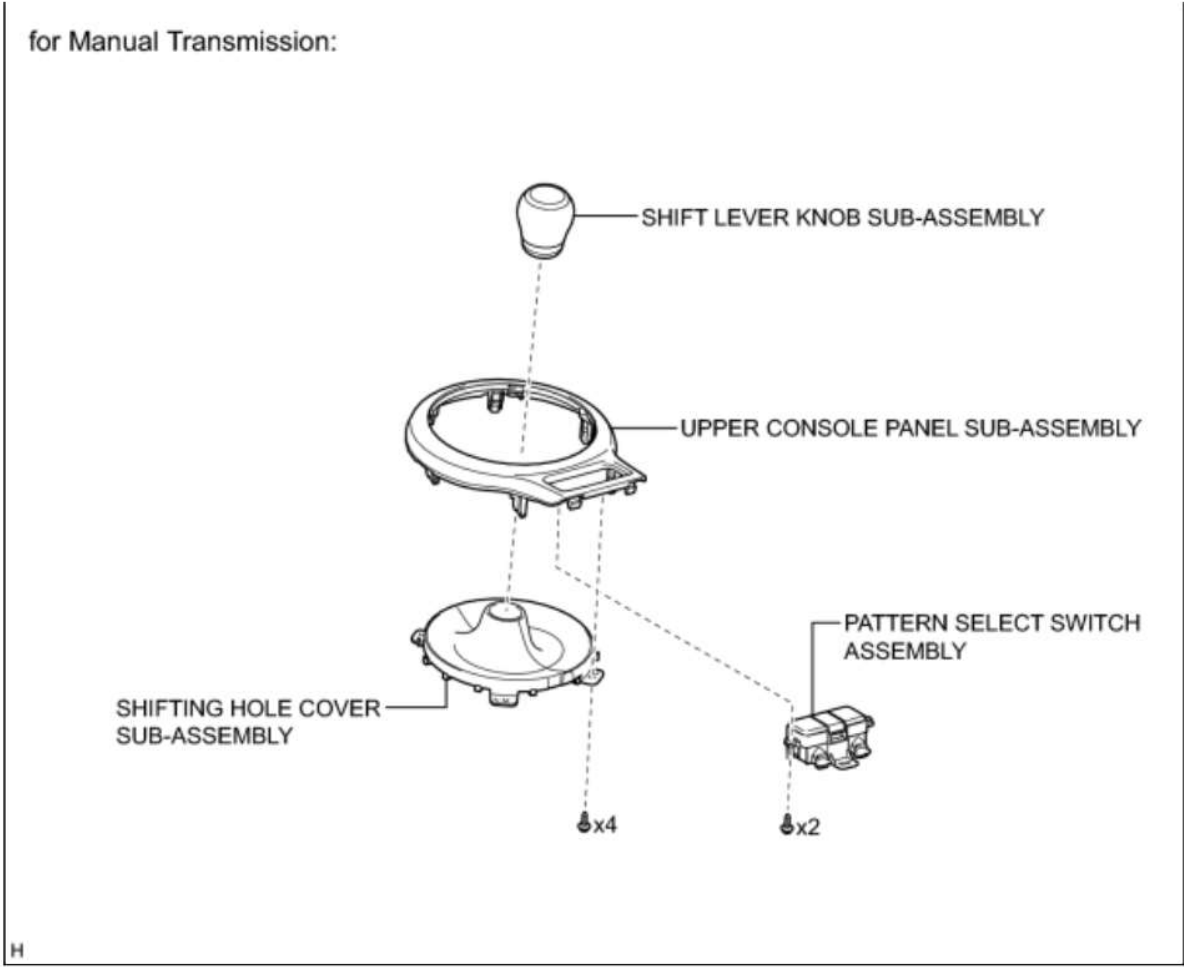

**ILLUSTRATION**

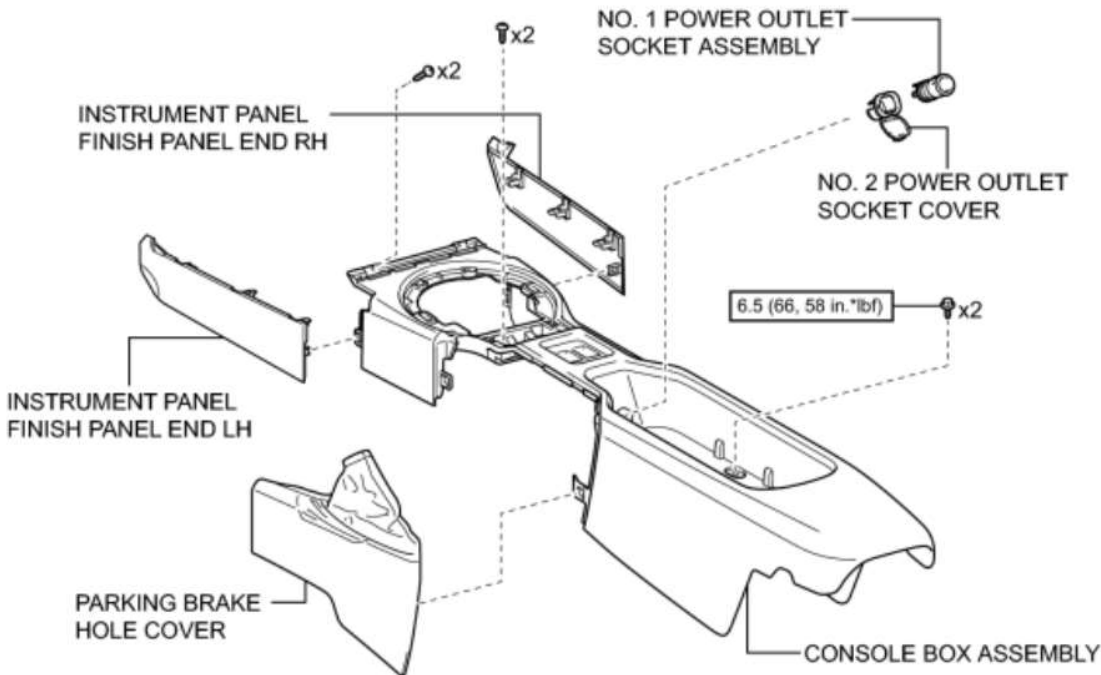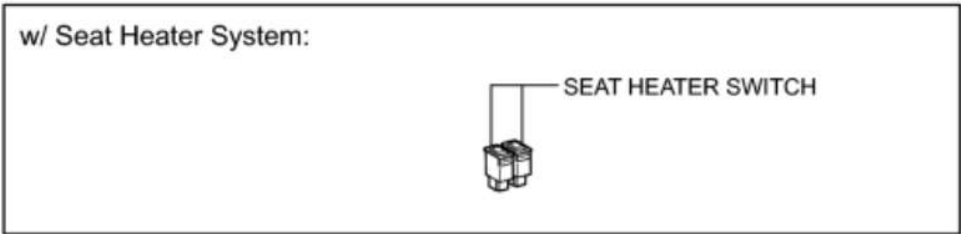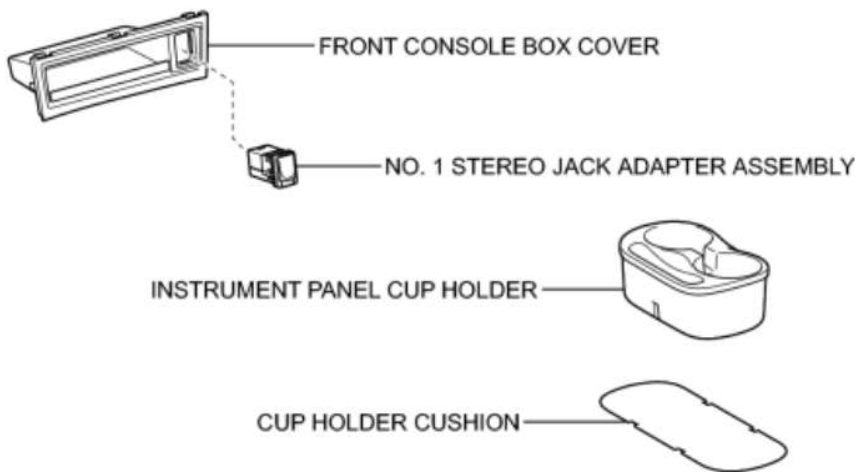

N\*m (kgf\*cm, ft\*lbf) : Specified torque

|                                                                           |             |                         |
|---------------------------------------------------------------------------|-------------|-------------------------|
| Last Modified: 3-27-2012                                                  | 6.4 A       | From: 201203            |
| Model Year: 2013                                                          | Model: FR-S | Doc ID: RM000004R0J003X |
| Title: INTERIOR PANELS / TRIM: FRONT CONSOLE BOX: DISASSEMBLY (2013 FR-S) |             |                         |

**DISASSEMBLY**

- 1. REMOVE NO. 1 POWER OUTLET SOCKET ASSEMBLY [INFO](#)
- 2. REMOVE NO. 2 POWER OUTLET SOCKET COVER [INFO](#)
- 3. REMOVE SEAT HEATER SWITCH (w/ Seat Heater System) [INFO](#)



cardiagn.com

|                                                                                   |                    |                                |
|-----------------------------------------------------------------------------------|--------------------|--------------------------------|
| <b>Last Modified:</b> 3-27-2012                                                   | 6.4 A              | <b>From:</b> 201203            |
| <b>Model Year:</b> 2013                                                           | <b>Model:</b> FR-S | <b>Doc ID:</b> RM000003NEA016X |
| <b>Title:</b> INTERIOR PANELS / TRIM: FRONT CONSOLE BOX: INSTALLATION (2013 FR-S) |                    |                                |

## INSTALLATION

### 1. INSTALL CONSOLE BOX ASSEMBLY

- Connect the connector.
- Install the console box assembly with the 4 screws and 2 bolts.

**Bolt - Torque: 6.5 N·m (66 kgf·cm, 58in·lbf)**

### 2. INSTALL INSTRUMENT PANEL FINISH PANEL END LH

- Engage the 4 claws to install the instrument panel finish panel end LH.

### 3. INSTALL INSTRUMENT PANEL FINISH PANEL END RH

#### **HINT:**

Use the same procedure as for the LH side.

### 4. INSTALL PARKING BRAKE HOLE COVER

- Engage the 5 claws to install the parking brake hole cover.

### 5. INSTALL CUP HOLDER CUSHION

- Install the cup holder cushion.

### 6. INSTALL INSTRUMENT PANEL CUP HOLDER

- Install the instrument panel cup holder.

### 7. INSTALL PATTERN SELECT SWITCH ASSEMBLY (for Manual Transmission) INFO

### 8. INSTALL SHIFTING HOLE COVER SUB-ASSEMBLY (for Manual Transmission)

- Install the shifting hole cover sub-assembly with the 4 screws.

### 9. INSTALL UPPER CONSOLE PANEL SUB-ASSEMBLY (for Manual Transmission)

- Connect the connector.
- Engage the 2 clips and 4 claws to install the upper console panel sub-assembly.

### 10. INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY (for Manual Transmission)

- Turn the knob clockwise to install the shift lever knob sub-assembly.



**Text in Illustration**

|    |             |
|----|-------------|
| *1 | Pull collar |
|----|-------------|

#### **NOTICE:**

- Tighten the shift lever knob until the tightening on the shift lever knob stiffens.

Check that the transmission moves into reverse when the pull collar is pulled.

### 11. INSTALL PATTERN SELECT SWITCH ASSEMBLY (for Automatic Transmission)

INFO

### 12. INSTALL SHIFTING HOLE COVER SUB-ASSEMBLY (for Automatic Transmission)

- (a) Engage the claw.
- (b) Install the shifting hole cover sub-assembly with the 2 screws.

### 13. INSTALL SHIFT POSITION INDICATOR (for Automatic Transmission)

- (a) Engage the clamp.
- (b) Install the shift position indicator with the 2 screws.

### 14. INSTALL UPPER CONSOLE PANEL SUB-ASSEMBLY (for Automatic Transmission)

- (a) Connect the connector.
- (b) Engage the 2 clips and 4 claws to install the upper console panel sub-assembly.

### 15. INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY (for Automatic Transmission)

- (a) Turn the knob clockwise to install the shift lever knob sub-assembly.



#### NOTICE:

- Tighten the shift lever knob until the tightening on the shift lever knob stiffens.
- Face the groove on the shift lever knob toward the rear of the vehicle.



Text in Illustration

\*1

Groove

### 16. INSTALL NO. 1 STEREO JACK ADAPTER ASSEMBLY

INFO

### 17. INSTALL FRONT CONSOLE BOX COVER

- (a) Engage the 6 claws to install the front console box cover.



cardiagn.com

|                                                                          |             |                         |
|--------------------------------------------------------------------------|-------------|-------------------------|
| Last Modified: 3-27-2012                                                 | 6.4 A       | From: 201203            |
| Model Year: 2013                                                         | Model: FR-S | Doc ID: RM000004R0K003X |
| Title: INTERIOR PANELS / TRIM: FRONT CONSOLE BOX: REASSEMBLY (2013 FR-S) |             |                         |

**REASSEMBLY**

- 1. INSTALL SEAT HEATER SWITCH (w/ Seat Heater System) [INFO](#)
- 2. INSTALL NO. 2 POWER OUTLET SOCKET COVER [INFO](#)
- 3. INSTALL NO. 1 POWER OUTLET SOCKET ASSEMBLY [INFO](#)




cardiagn.com

|                                                                       |             |                         |
|-----------------------------------------------------------------------|-------------|-------------------------|
| Last Modified: 3-27-2012                                              | 6.4 A       | From: 201203            |
| Model Year: 2013                                                      | Model: FR-S | Doc ID: RM000003NEC016X |
| Title: INTERIOR PANELS / TRIM: FRONT CONSOLE BOX: REMOVAL (2013 FR-S) |             |                         |

REMOVAL

1. REMOVE FRONT CONSOLE BOX COVER

(a) Move the shift lever to N.

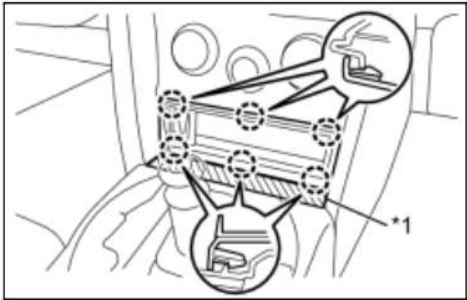

(b) Apply protective tape to the area shown in the illustration.


Text in Illustration

|    |                 |
|----|-----------------|
| *1 | Protective Tape |
|----|-----------------|

(c) Disengage the 6 claws and remove the front console box cover.


HINT:

Hold the inside of the pocket with your hand, and pull off the front console box cover.

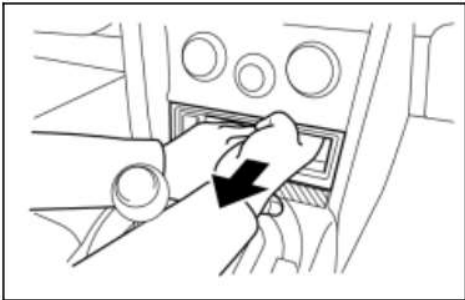

HINT:

Remove the instrument panel finish panel end RH, and then push the reverse side of the front console box cover with a bar (tool handle, etc.) to remove it.

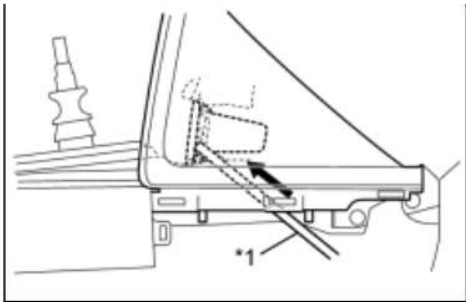

Text in Illustration


|    |     |
|----|-----|
| *1 | Bar |
|----|-----|

2. REMOVE NO. 1 STEREO JACK ADAPTER ASSEMBLY (w/ Stereo Jack Adapter) INFO
3. REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY (for Automatic Transmission)



(a) Turn the knob counterclockwise and remove the shift lever knob sub-assembly.

4. REMOVE UPPER CONSOLE PANEL SUB-ASSEMBLY (for Automatic Transmission)

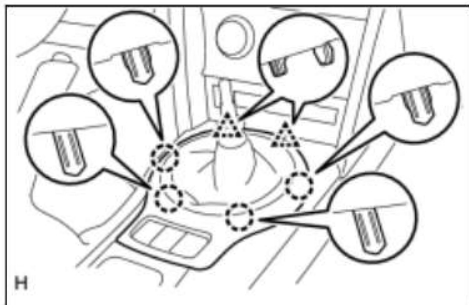


(a) Disengage the 2 clips and 4 claws.

(b) Disconnect each connector and remove the upper console panel sub-assembly.


5. REMOVE SHIFT POSITION INDICATOR (for Automatic Transmission)

(a) Remove the 2 screws.

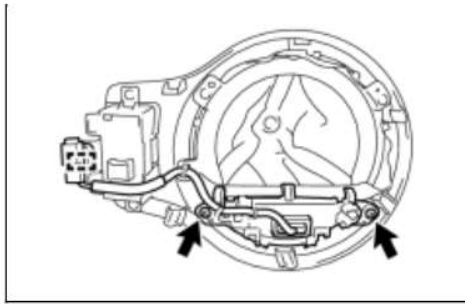

(b) Disengage the clamp to remove the shift position indicator.

#### **6. REMOVE SHIFTING HOLE COVER SUB-ASSEMBLY (for Automatic Transmission)**

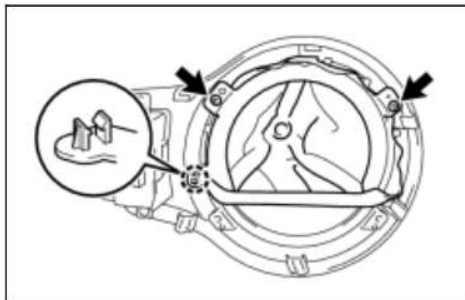

(a) Remove the 2 screws.

(b) Disengage the claw to remove the shifting hole cover sub-assembly.

#### **7. REMOVE PATTERN SELECT SWITCH ASSEMBLY (for Automatic Transmission)**

INFO


#### **8. REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY (for Manual Transmission)**



(a) Turn the knob counterclockwise and remove the shift lever knob sub-assembly.


#### **9. REMOVE UPPER CONSOLE PANEL SUB-ASSEMBLY (for Manual Transmission)**

(a) Disengage the 2 clips and 4 claws.

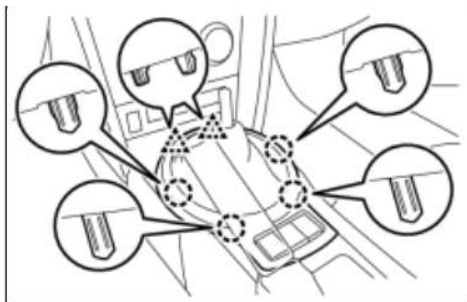

(b) Disconnect each connector and remove the upper console panel sub-assembly.


#### 10. REMOVE SHIFTING HOLE COVER SUB-ASSEMBLY (for Manual Transmission)

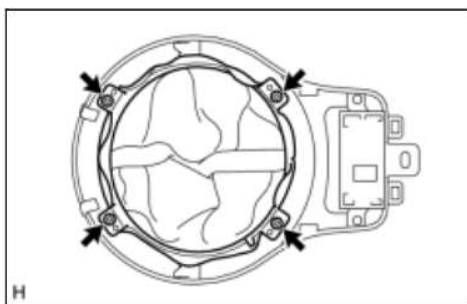

(a) Remove the 4 screws and the shifting hole cover sub-assembly.


#### 11. REMOVE PATTERN SELECT SWITCH ASSEMBLY (for Manual Transmission) INFO

#### 12. REMOVE INSTRUMENT PANEL CUP HOLDER

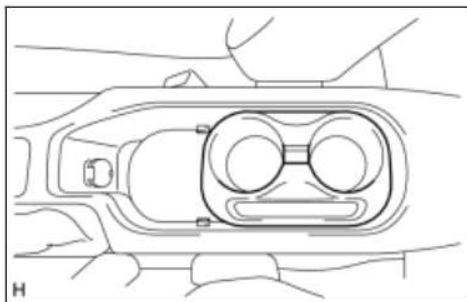


(a) Remove the instrument panel cup holder.

#### 13. REMOVE CUP HOLDER CUSHION

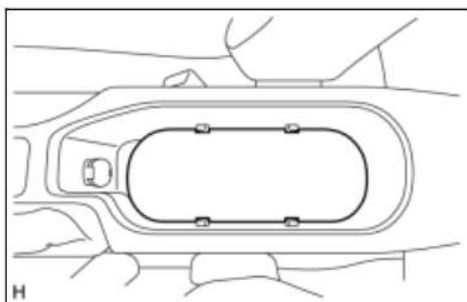

(a) Remove the cup holder cushion.

#### 14. REMOVE PARKING BRAKE HOLE COVER

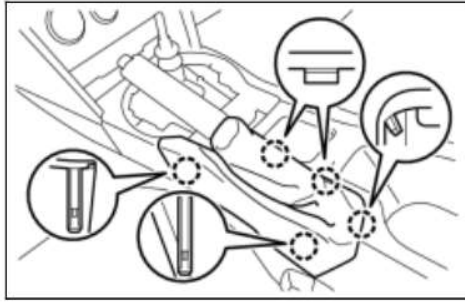


- (a) Disengage the 5 claws to remove the parking brake hole cover.

**NOTICE:**

Remove the parking brake hole cover by pulling straight it up to disengage the claws, If not claws may be broken.

#### 15. REMOVE INSTRUMENT PANEL FINISH PANEL END LH

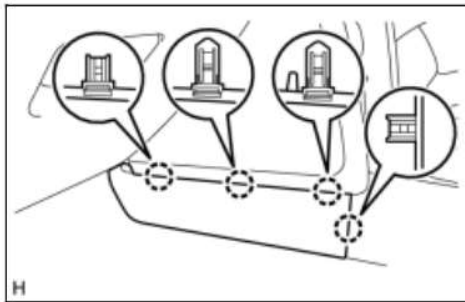


- (a) Disengage the 4 claws to remove the instrument panel finish panel end LH.

#### 16. REMOVE INSTRUMENT PANEL FINISH PANEL END RH

**HINT:**


Use the same procedure described for the LH side.

#### 17. REMOVE CONSOLE BOX ASSEMBLY

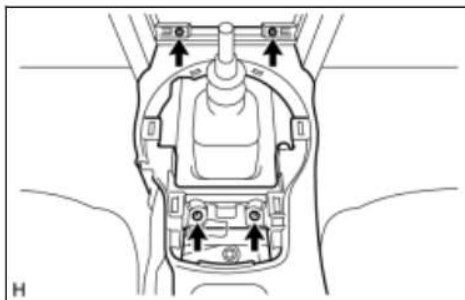

- (a) Remove the 4 screws.

- (b) Remove the 2 bolts.

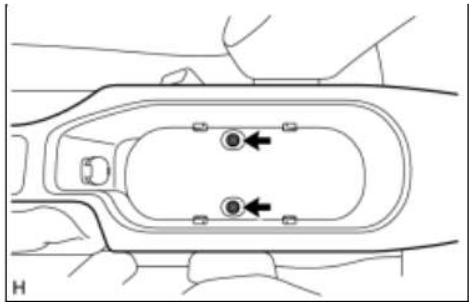


(c) Disconnect each connector and remove the console box assembly.




|                                                                               |             |                         |
|-------------------------------------------------------------------------------|-------------|-------------------------|
| Last Modified: 3-27-2012                                                      | 6.4 K       | From: 201203            |
| Model Year: 2013                                                              | Model: FR-S | Doc ID: RM000003O2P00GX |
| Title: INTERIOR PANELS / TRIM: LOWER INSTRUMENT PANEL: COMPONENTS (2013 FR-S) |             |                         |

COMPONENTS


ILLUSTRATION

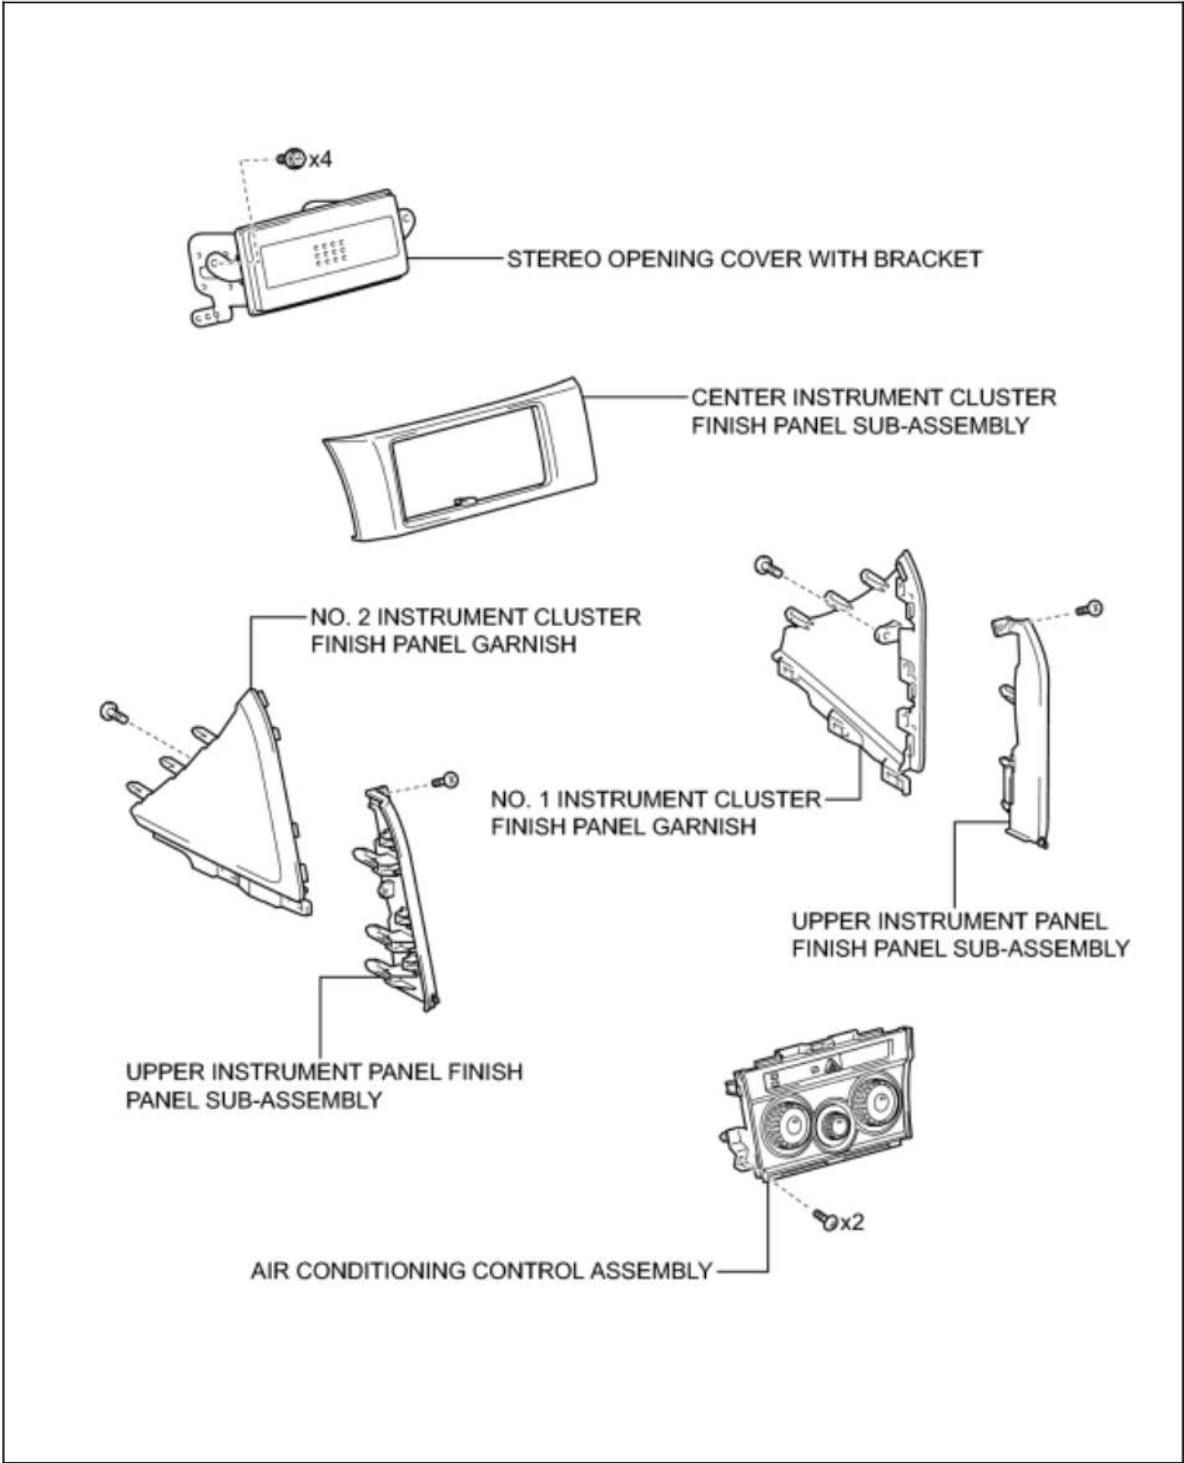

**ILLUSTRATION**

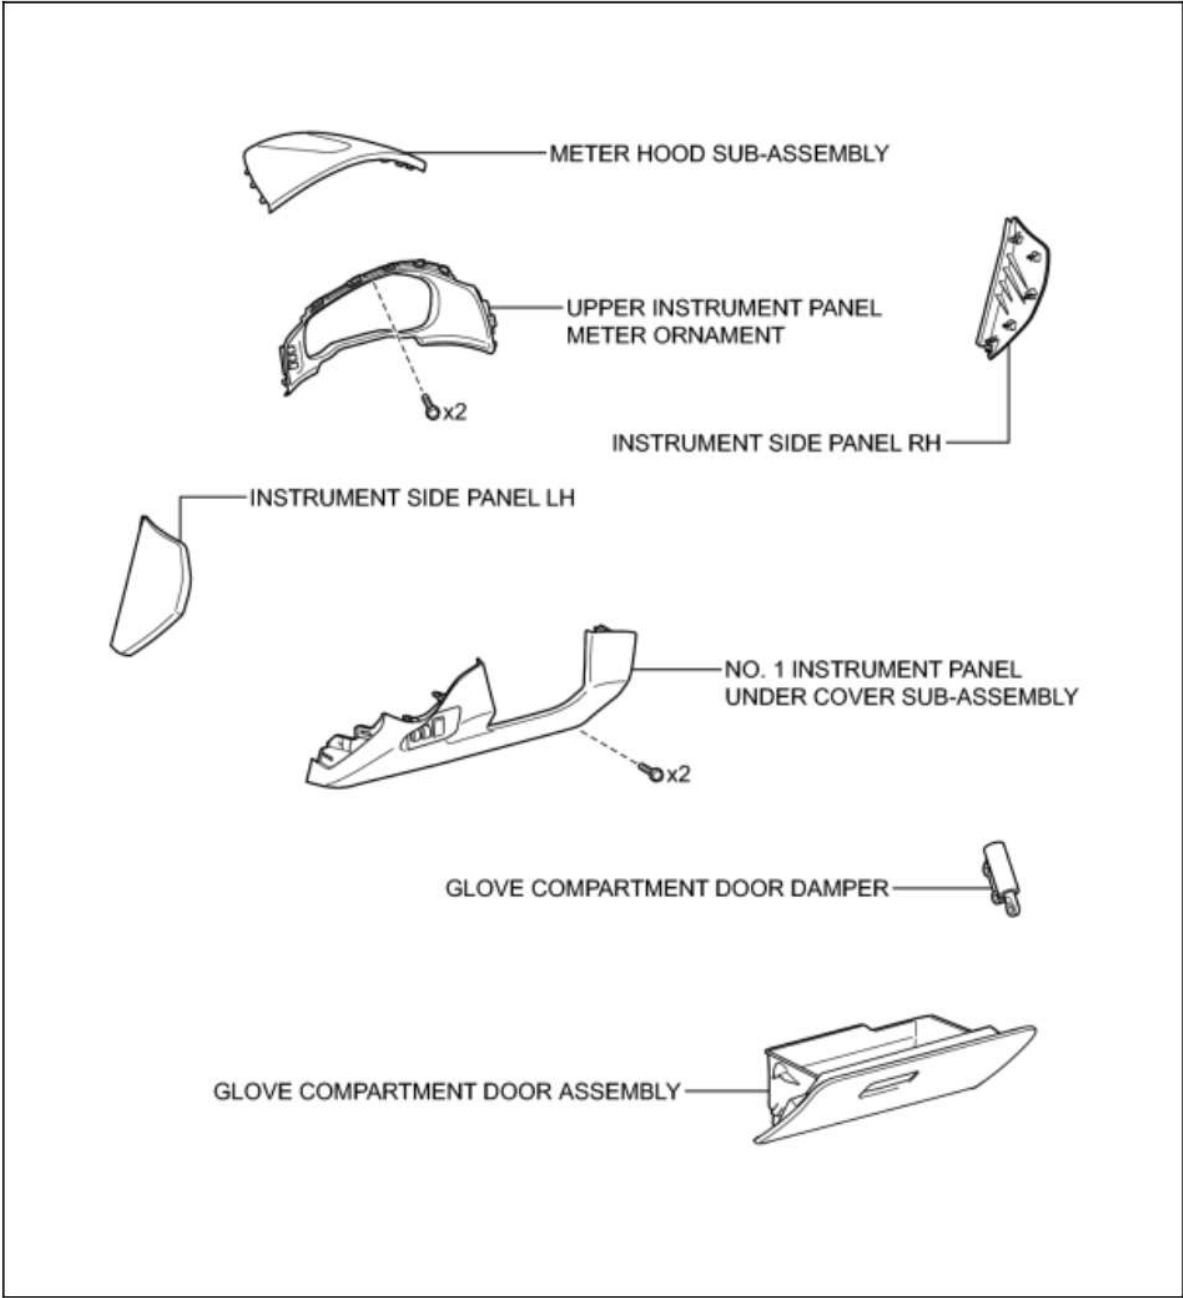


**ILLUSTRATION**

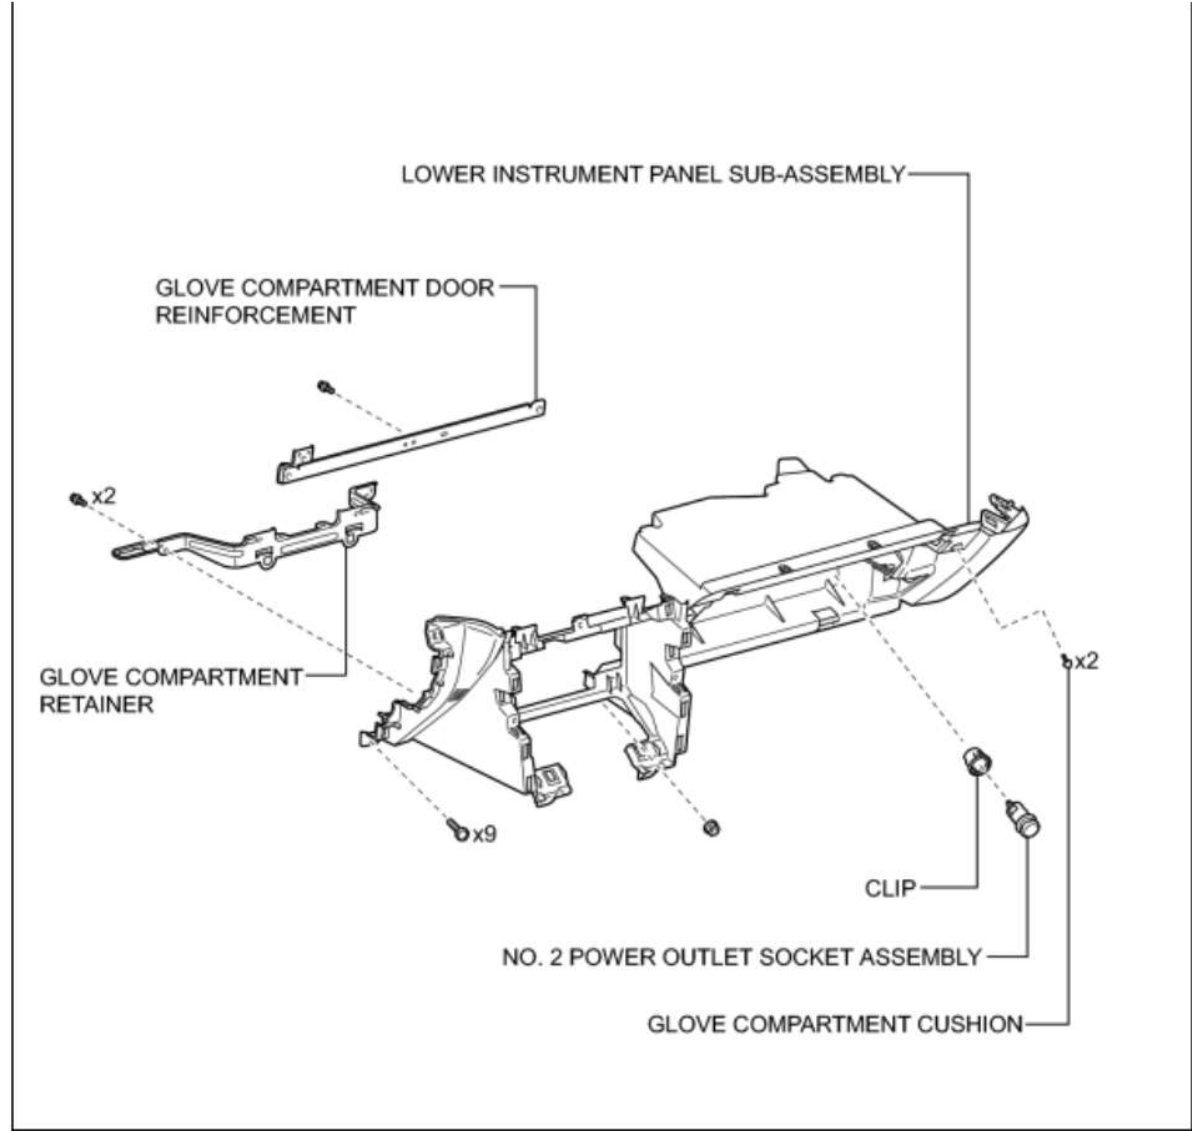

|                                                                                       |                    |                                |
|---------------------------------------------------------------------------------------|--------------------|--------------------------------|
| <b>Last Modified:</b> 3-27-2012                                                       | <b>6.4 A</b>       | <b>From:</b> 201203            |
| <b>Model Year:</b> 2013                                                               | <b>Model:</b> FR-S | <b>Doc ID:</b> RM000003O1V000X |
| <b>Title:</b> INTERIOR PANELS / TRIM: LOWER INSTRUMENT PANEL: DISASSEMBLY (2013 FR-S) |                    |                                |

## **DISASSEMBLY**


### **1. REMOVE GLOVE COMPARTMENT RETAINER**

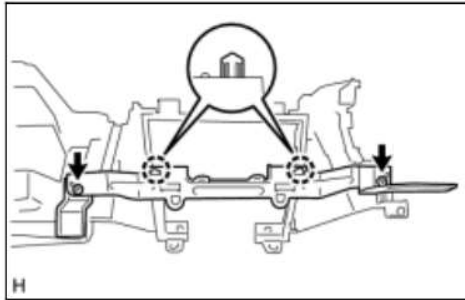

(a) Remove the 2 screws.


(b) Disengage the 2 claws to remove the glove compartment retainer.

### **2. REMOVE GLOVE COMPARTMENT DOOR REINFORCEMENT**

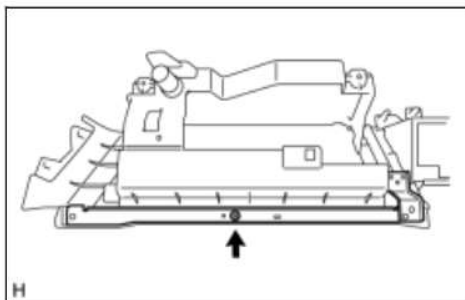

(a) Remove the screw and the glove compartment door reinforcement.

### **3. REMOVE GLOVE COMPARTMENT CUSHION**

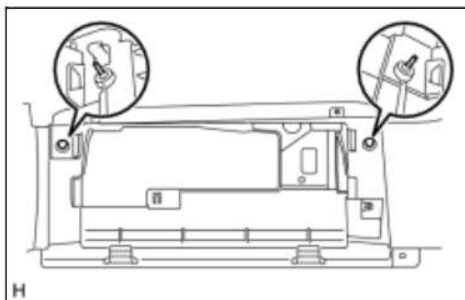

(a) Remove the 2 glove compartment cushions.

### **4. REMOVE NO. 2 POWER OUTLET SOCKET ASSEMBLY**

[INFO](#)

### **5. REMOVE CLIP**

[INFO](#)



cardiagn.com

|                                                                                        |                    |                                |
|----------------------------------------------------------------------------------------|--------------------|--------------------------------|
| <b>Last Modified:</b> 3-27-2012                                                        | 6.4 A              | <b>From:</b> 201203            |
| <b>Model Year:</b> 2013                                                                | <b>Model:</b> FR-S | <b>Doc ID:</b> RM000003O2M00GX |
| <b>Title:</b> INTERIOR PANELS / TRIM: LOWER INSTRUMENT PANEL: INSTALLATION (2013 FR-S) |                    |                                |

## **INSTALLATION**

### **1. INSTALL LOWER INSTRUMENT PANEL SUB-ASSEMBLY**

- (a) Connect the connectors.
- (b) Engage the 12 claws.
- (c) Install the lower instrument panel sub-assembly with the 2 screws and nut.

### **2. INSTALL GLOVE COMPARTMENT DOOR DAMPER**

- (a) Engage the claw to install the glove compartment door damper.

### **3. INSTALL GLOVE COMPARTMENT DOOR ASSEMBLY**

- (a) Horizontally engage the 2 hinges of the outer glove compartment door.

#### **NOTICE:**

**Make sure to install the glove compartment door assembly hinges horizontally.**

- (b) Engage the 2 stoppers to install the glove compartment door assembly.
- (c) Engage the claw to install the glove compartment door damper.

### **4. INSTALL NO. 1 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY** INFO

### **5. INSTALL UPPER INSTRUMENT PANEL METER ORNAMENT**

- (a) Connect the connector.
- (b) Engage the 2 claws that are holding the upper instrument panel meter ornament and steering column cover together.
- (c) Engage the 2 clips and 6 claws.
- (d) Install the upper instrument panel meter ornament with the screw.

### **6. INSTALL METER HOOD SUB-ASSEMBLY**

- (a) Engage the 12 claws.
- (b) Install the meter hood sub-assembly with the screw.

### **7. INSTALL INSTRUMENT SIDE PANEL RH**

- (a) Engage the 4 clips and claw to install the instrument side panel RH.

### **8. INSTALL INSTRUMENT SIDE PANEL LH**

#### **HINT:**

**Use the same procedure as for the RH side.**

### **9. INSTALL AIR CONDITIONING CONTROL ASSEMBLY** INFO

### **10. INSTALL UPPER INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY (for LH Side)**

- (a) Engage the 3 claws.

(b) Install the upper instrument panel finish panel sub-assembly with the screw.

#### **11. INSTALL NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH**

(a) Engage the 6 claws.

(b) Install the No. 1 instrument cluster finish panel garnish with the screw.

#### **12. INSTALL UPPER INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY (for RH Side)**

##### **HINT:**

Use the same procedure as for the LH side.

#### **13. INSTALL NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH**

##### **HINT:**

Use the same procedure as for the LH side.

#### **14. INSTALL STEREO OPENING COVER WITH BRACKET**

(a) Install the stereo opening cover with bracket with the 4 screws.

#### **15. INSTALL CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY**

(a) Engage the 4 clips and 2 claws to install the center instrument cluster finish panel sub-assembly.

#### **16. INSTALL CONSOLE BOX ASSEMBLY**

##### **INFO**

#### **17. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**

Torque: 6.0 N·m (61 kgf·cm, 53in·lbf)



|                                                                               |             |                         |
|-------------------------------------------------------------------------------|-------------|-------------------------|
| Last Modified: 3-27-2012                                                      | 6.4 L       | From: 201203            |
| Model Year: 2013                                                              | Model: FR-S | Doc ID: RM000003QLG02RX |
| Title: INTERIOR PANELS / TRIM: LOWER INSTRUMENT PANEL: PRECAUTION (2013 FR-S) |             |                         |

**PRECAUTION**

**1. PRECAUTION FOR VEHICLE WITH AIRBAG**

- (a) Some operations in this section may affect the airbag. Prior to performing the corresponding operations, read the SRS Precaution [INFO](#) .



|                                                                                      |                    |                                |
|--------------------------------------------------------------------------------------|--------------------|--------------------------------|
| <b>Last Modified:</b> 3-27-2012                                                      | 6.4 A              | <b>From:</b> 201203            |
| <b>Model Year:</b> 2013                                                              | <b>Model:</b> FR-S | <b>Doc ID:</b> RM000003O2U00GX |
| <b>Title:</b> INTERIOR PANELS / TRIM: LOWER INSTRUMENT PANEL: REASSEMBLY (2013 FR-S) |                    |                                |

## REASSEMBLY


### 1. INSTALL CLIP

[INFO](#)

### 2. INSTALL NO. 2 POWER OUTLET SOCKET ASSEMBLY


[INFO](#)

### 3. INSTALL GLOVE COMPARTMENT CUSHION

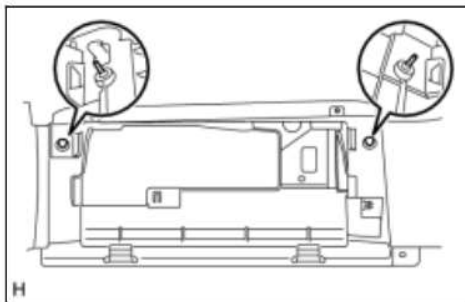


(a) Install the 2 glove compartment cushions.

### 4. INSTALL GLOVE COMPARTMENT DOOR REINFORCEMENT

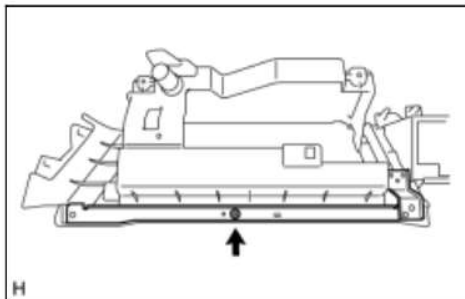

(a) Install the glove compartment door reinforcement with the screw.

### 5. INSTALL GLOVE COMPARTMENT RETAINER

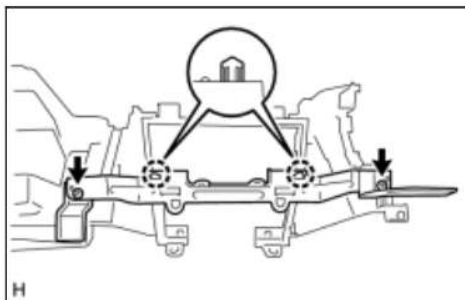

(a) Engage the 2 claws.

(b) Install the glove compartment retainer with the 2 screws.



cardiagn.com

|                                                                            |             |                         |
|----------------------------------------------------------------------------|-------------|-------------------------|
| Last Modified: 3-27-2012                                                   | 6.4 A       | From: 201203            |
| Model Year: 2013                                                           | Model: FR-S | Doc ID: RM000003O1U00PX |
| Title: INTERIOR PANELS / TRIM: LOWER INSTRUMENT PANEL: REMOVAL (2013 FR-S) |             |                         |

REMOVAL

1. TABLE OF BOLT, SCREW AND NUT

(a) All bolts, screws and nuts relevant to installing and removing the instrument panel are shown along with an alphabetical code in the table.

| Code | Shape                                                                                                                                            | Code | Shape                                                                                                                                         |
|------|--------------------------------------------------------------------------------------------------------------------------------------------------|------|-----------------------------------------------------------------------------------------------------------------------------------------------|
| <A>  |  <p>φ=11.5<br/>(0.453 in)<br/><br/>Length=16<br/>(0.630 in)</p> | <B>  |  <p>φ=10<br/>(0.394 in)<br/><br/>Length=7<br/>(0.276 in)</p> |

2. PRECAUTION

**NOTICE:**  
After turning the ignition switch off, waiting time may be required before disconnecting the cable from the negative (-) battery terminal. Therefore, make sure to read the disconnecting the cable from the negative (-) battery terminal notices before proceeding with work INFO.

3. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL INFO

4. REMOVE CONSOLE BOX ASSEMBLY


INFO

5. REMOVE CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY


(a) Using a moulding remover, disengage the 2 claws and 4 clips to remove the center instrument cluster finish panel sub-assembly.

Text in Illustration

|    |                  |
|----|------------------|
| *1 | Moulding Remover |
|----|------------------|

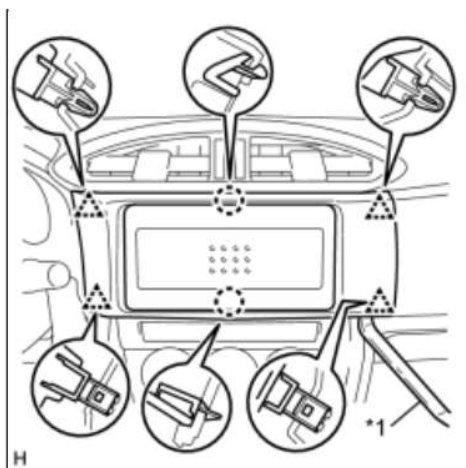


## 6. REMOVE STEREO OPENING COVER WITH BRACKET

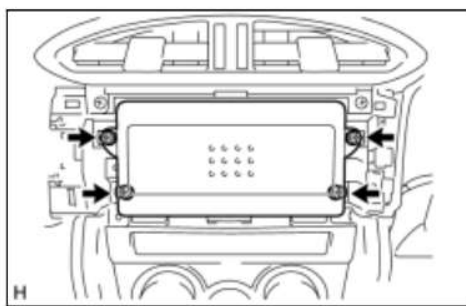

- (a) Remove the 4 screws to remove the stereo opening cover with bracket.

## 7. REMOVE NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH

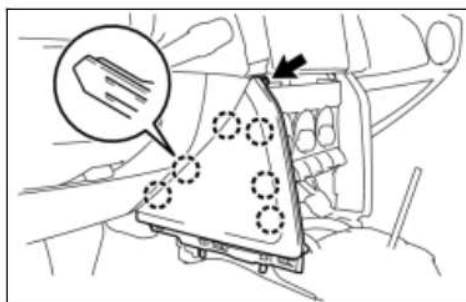


- (a) Remove the screw.

- (b) Disengage the 6 claws to remove the No. 2 instrument cluster finish panel garnish.

## 8. REMOVE UPPER INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY (for LH Side)

- (a) Remove the screw.

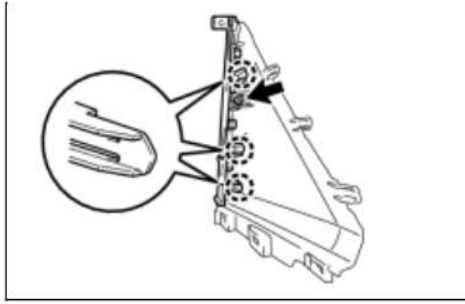

(b) Disengage the 3 claws to remove the upper instrument panel finish panel sub-assembly.

## 9. REMOVE NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

### HINT:

Use the same procedure as for the LH side.

## 10. REMOVE UPPER INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY (for RH Side)


### HINT:

Use the same procedure as for the LH side.

## 11. REMOVE AIR CONDITIONING CONTROL ASSEMBLY

INFO

## 12. REMOVE INSTRUMENT SIDE PANEL RH

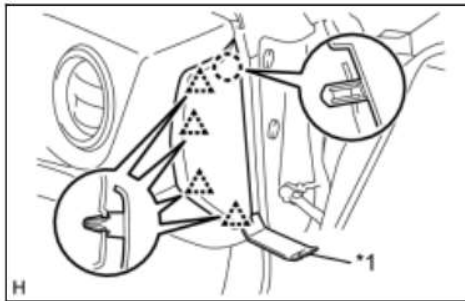

(a) Using a moulding remover, disengage the claw and 4 clips and remove the instrument side panel RH.

### Text in Illustration

\*1

Moulding Remover


## 13. REMOVE INSTRUMENT SIDE PANEL LH

### HINT:

Use the same procedure as for the RH side.


## 14. REMOVE METER HOOD SUB-ASSEMBLY

(a) Remove the screw.

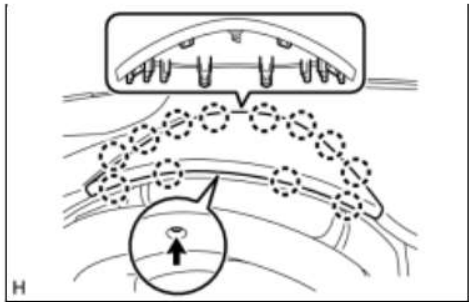


(b) Disengage the 12 claws, and then pull out the meter hood sub-assembly diagonally upwards to remove it.

15. REMOVE UPPER INSTRUMENT PANEL METER ORNAMENT

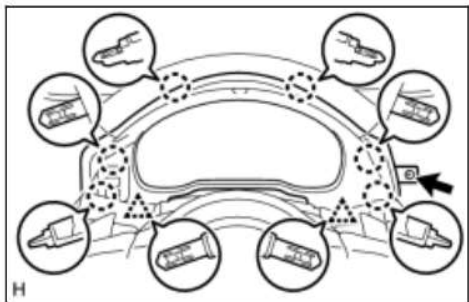

(a) Remove the screw.

(b) Disengage the 6 claws and 2 clips.

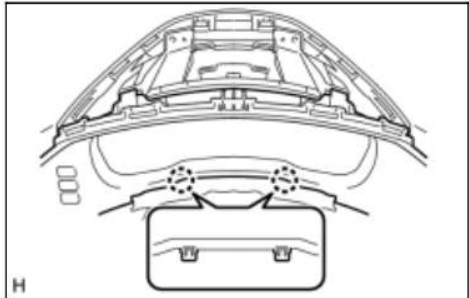

(c) Disengage the 2 claws that are holding the upper instrument panel meter ornament and steering column cover together.

(d) Disconnect the connector and remove the upper instrument panel meter ornament.



16. REMOVE NO. 1 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY INFO

17. REMOVE GLOVE COMPARTMENT DOOR ASSEMBLY

(a) Disengage the claw and release the glove compartment door damper.

Text in Illustration

|    |                               |
|----|-------------------------------|
| *1 | Glove Compartment Door Damper |
|----|-------------------------------|

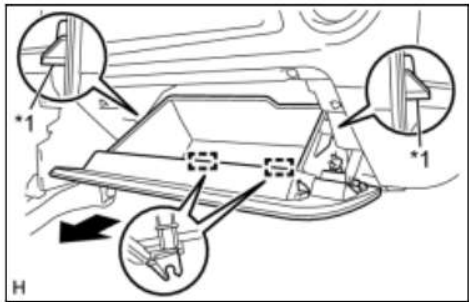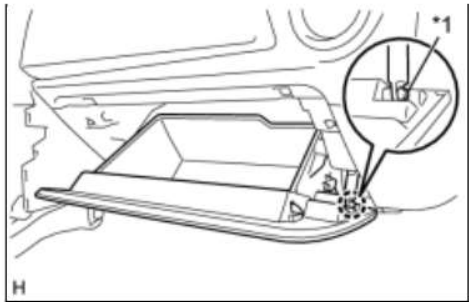

(b) Release the 2 stoppers and open the glove compartment door assembly until it is horizontal.


**Text in Illustration**

|    |         |
|----|---------|
| *1 | Stopper |
|----|---------|

(c) Pull the glove compartment door assembly horizontally backward to disengage the 2 hinges and remove the glove compartment door assembly.

**NOTICE:**  
Be sure to pull the glove compartment door assembly horizontally to remove it.



**18. REMOVE GLOVE COMPARTMENT DOOR DAMPER**

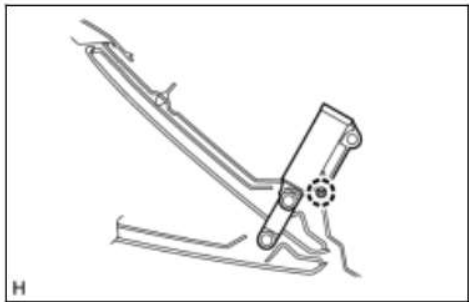

(a) Disengage the claw and remove the glove compartment door damper.

**19. REMOVE LOWER INSTRUMENT PANEL SUB-ASSEMBLY**


(a) Remove the 7 screws.

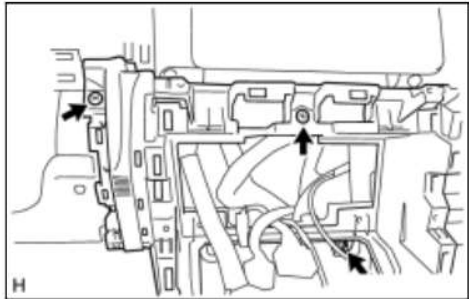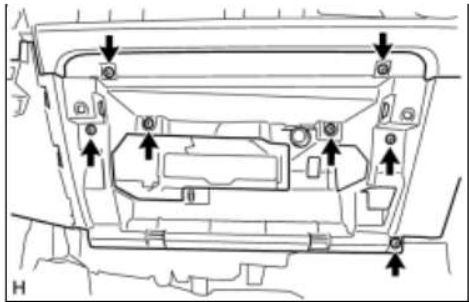

(b) Remove the 2 screws and nut.

(c) Disconnect the connectors.

(d) Disengage the 12 claws to remove the lower instrument panel sub-assembly.

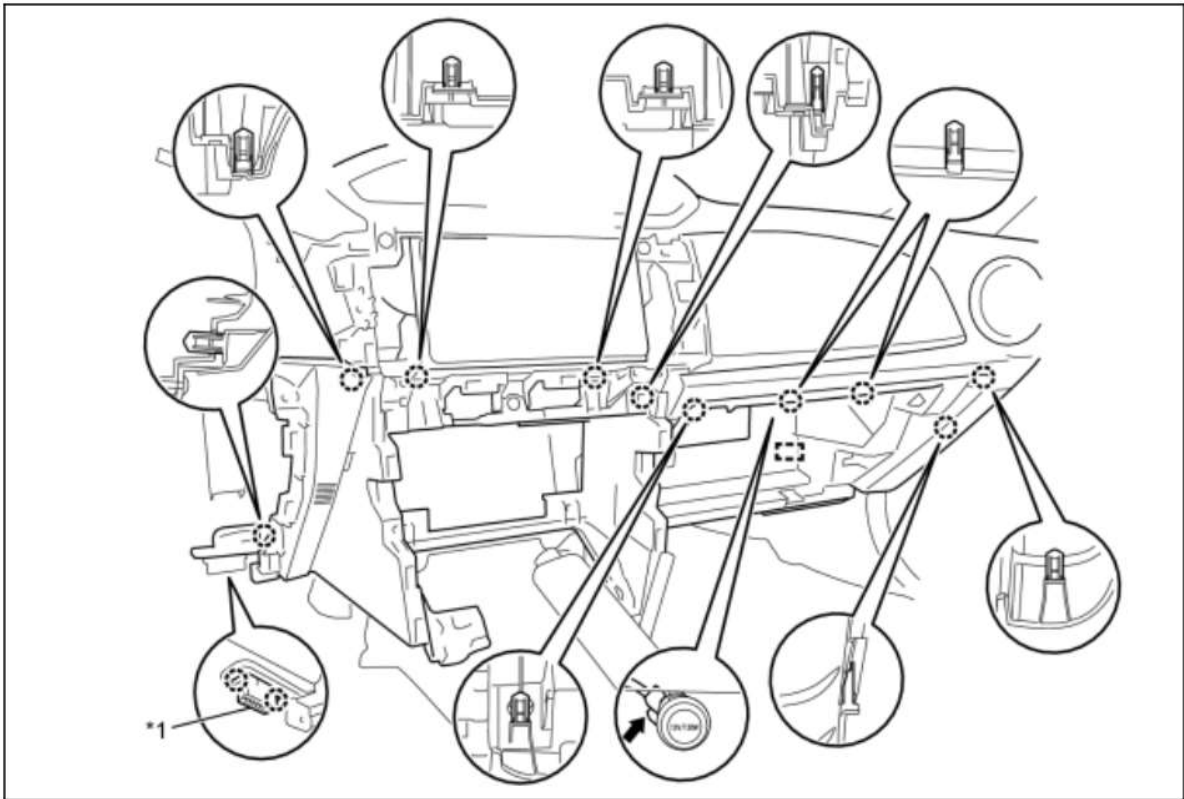

**Text in Illustration**


|    |      |   |   |
|----|------|---|---|
| *1 | DLC3 | - | - |
|----|------|---|---|




|                                                                        |             |                         |
|------------------------------------------------------------------------|-------------|-------------------------|
| Last Modified: 3-27-2012                                               | 6.4 K       | From: 201203            |
| Model Year: 2013                                                       | Model: FR-S | Doc ID: RM00000300W00NX |
| Title: INTERIOR PANELS / TRIM: ROOF HEADLINING: COMPONENTS (2013 FR-S) |             |                         |

COMPONENTS


ILLUSTRATION

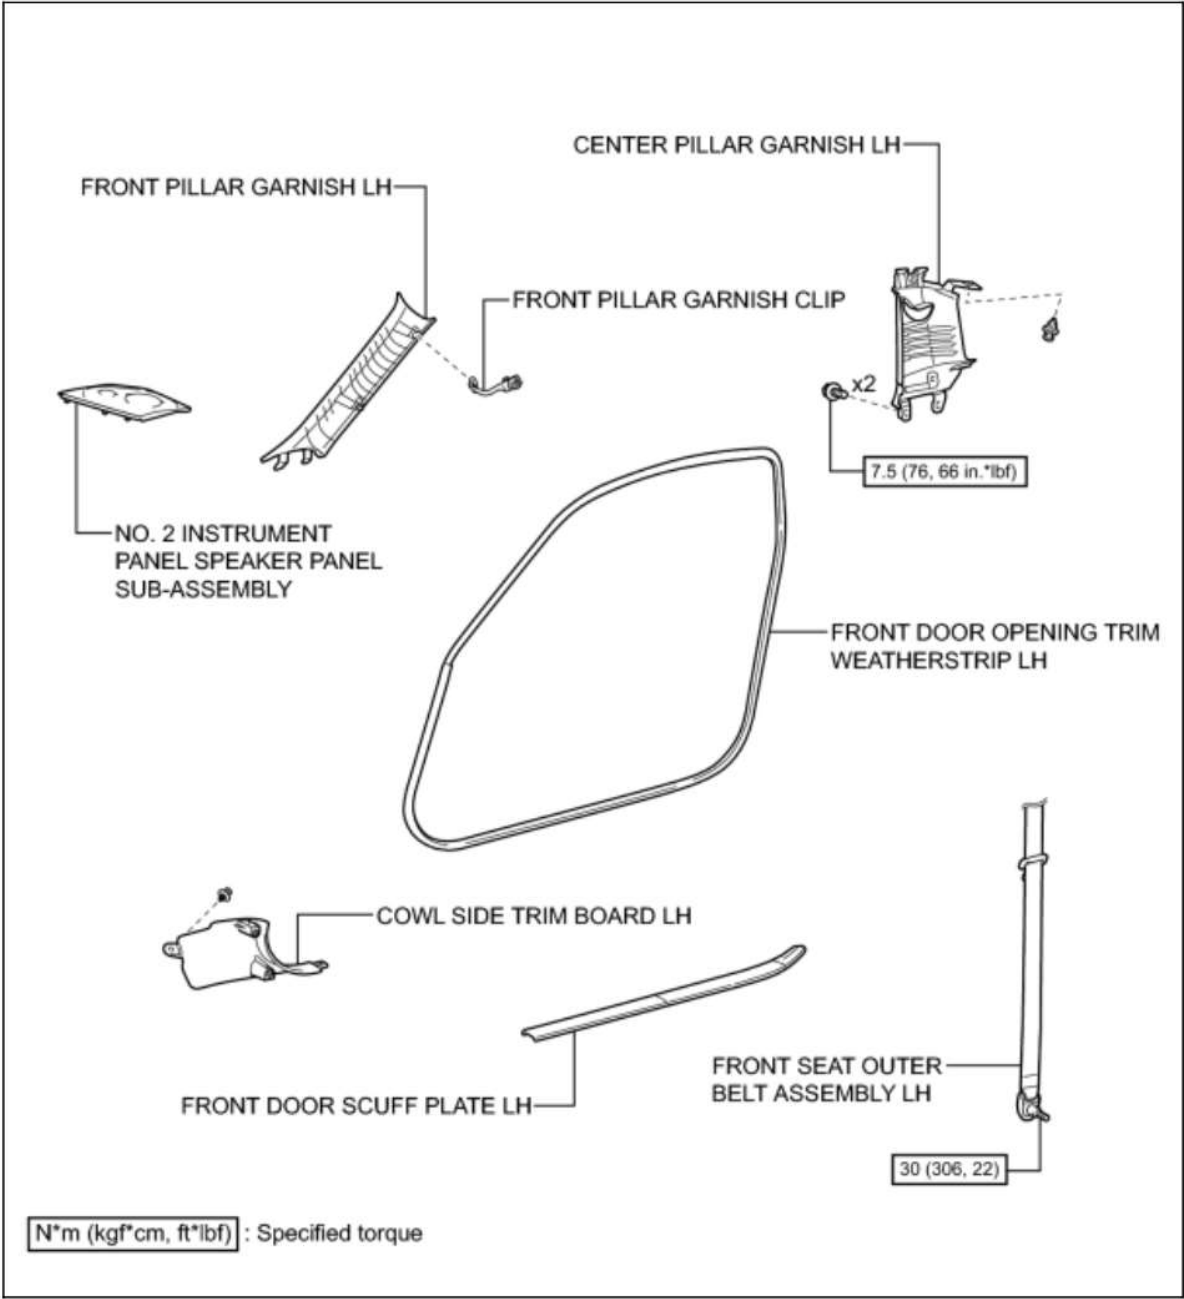


ILLUSTRATION

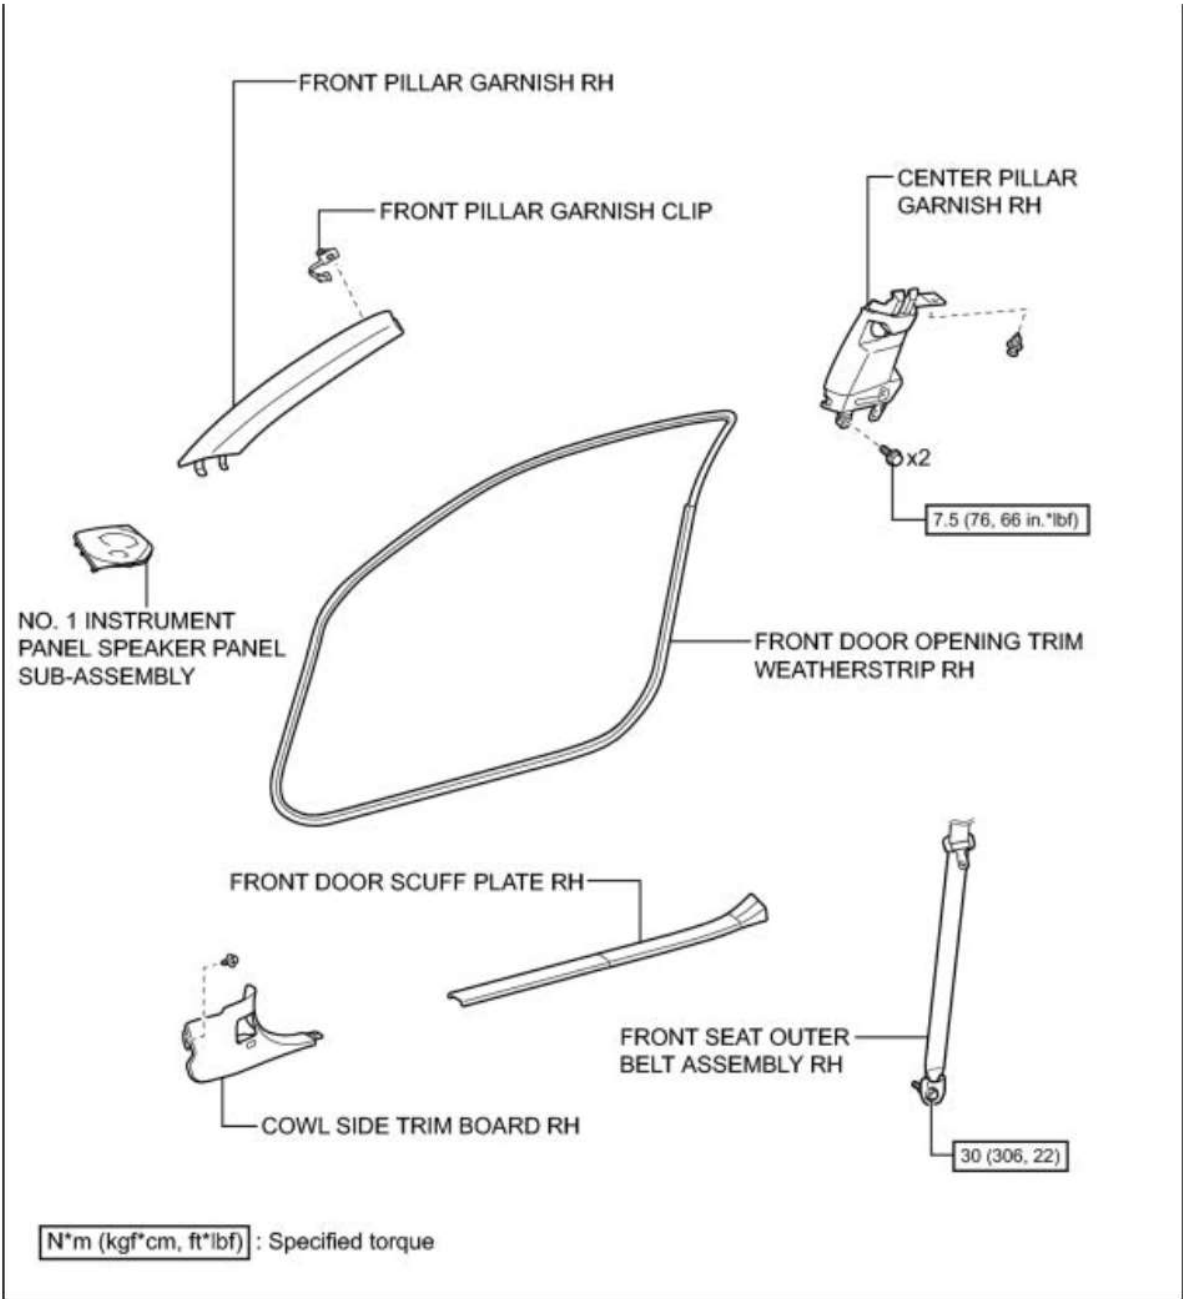


**ILLUSTRATION**

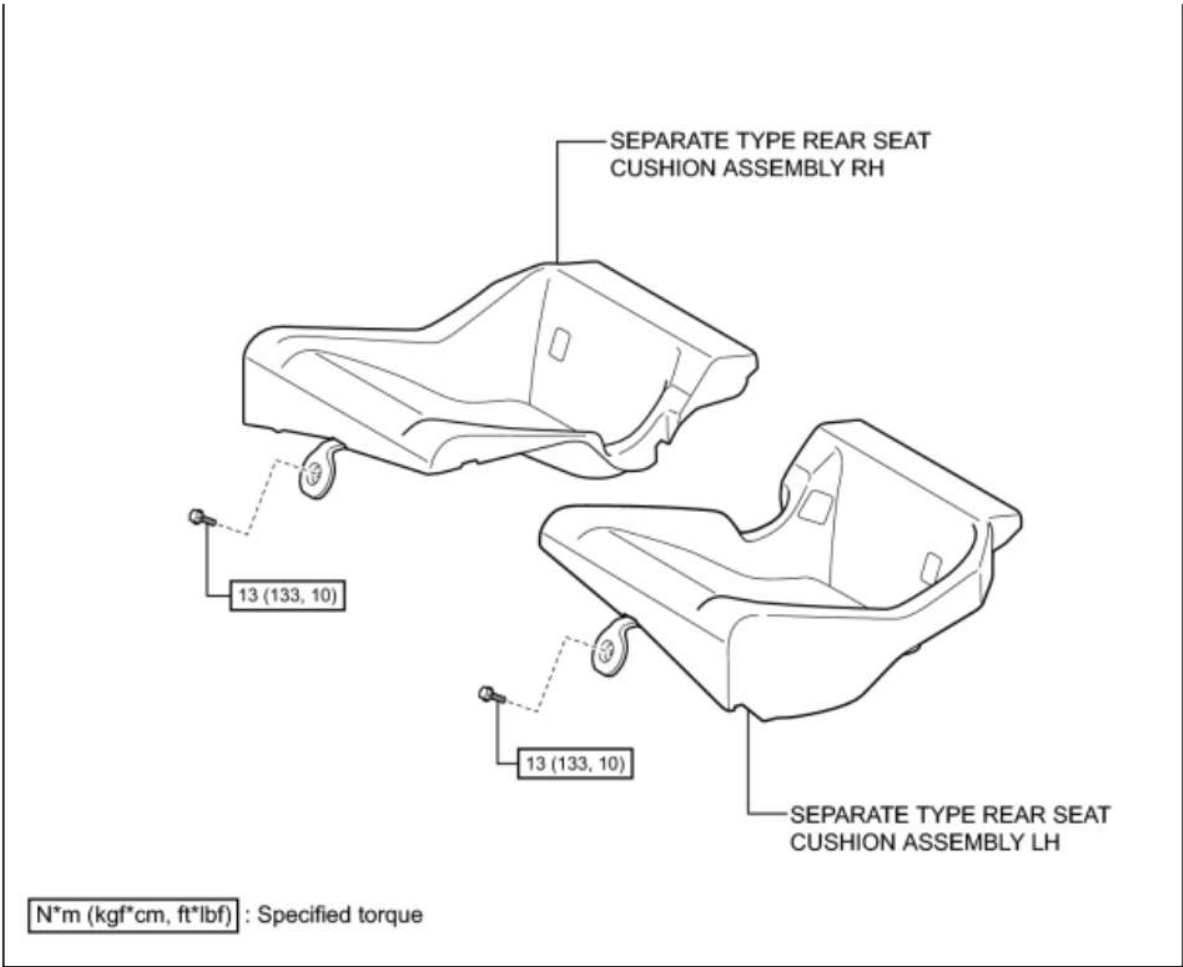


**ILLUSTRATION**

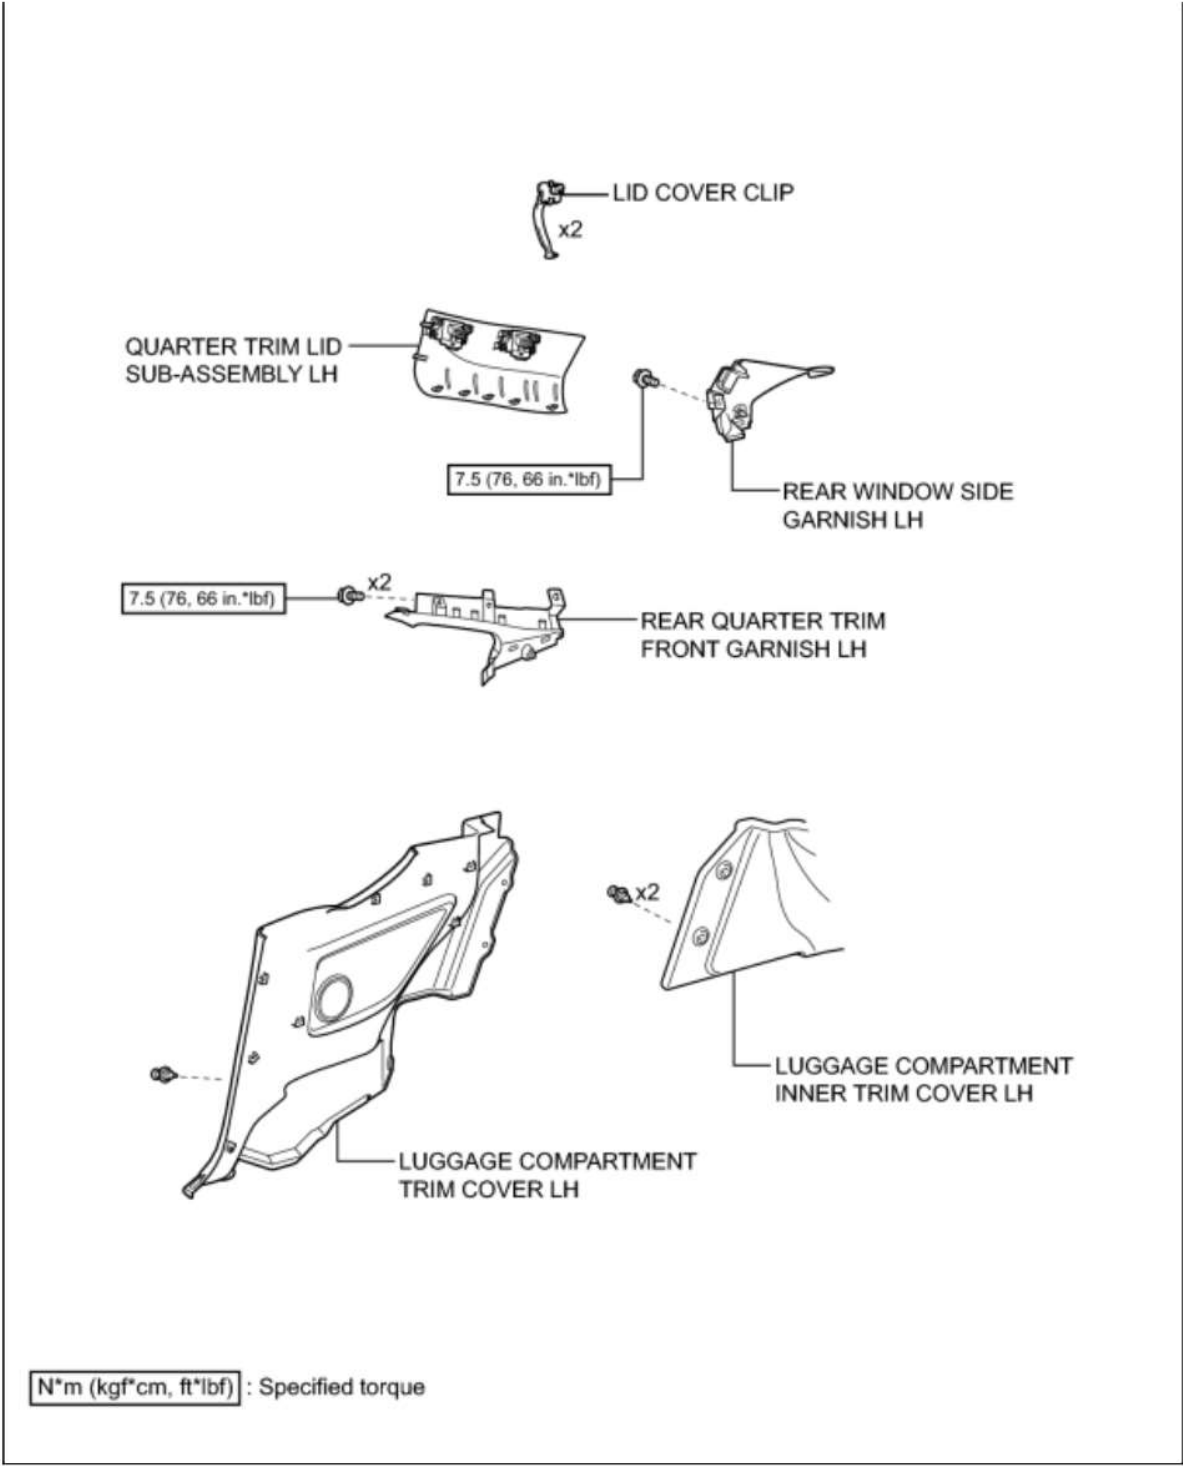

**ILLUSTRATION**

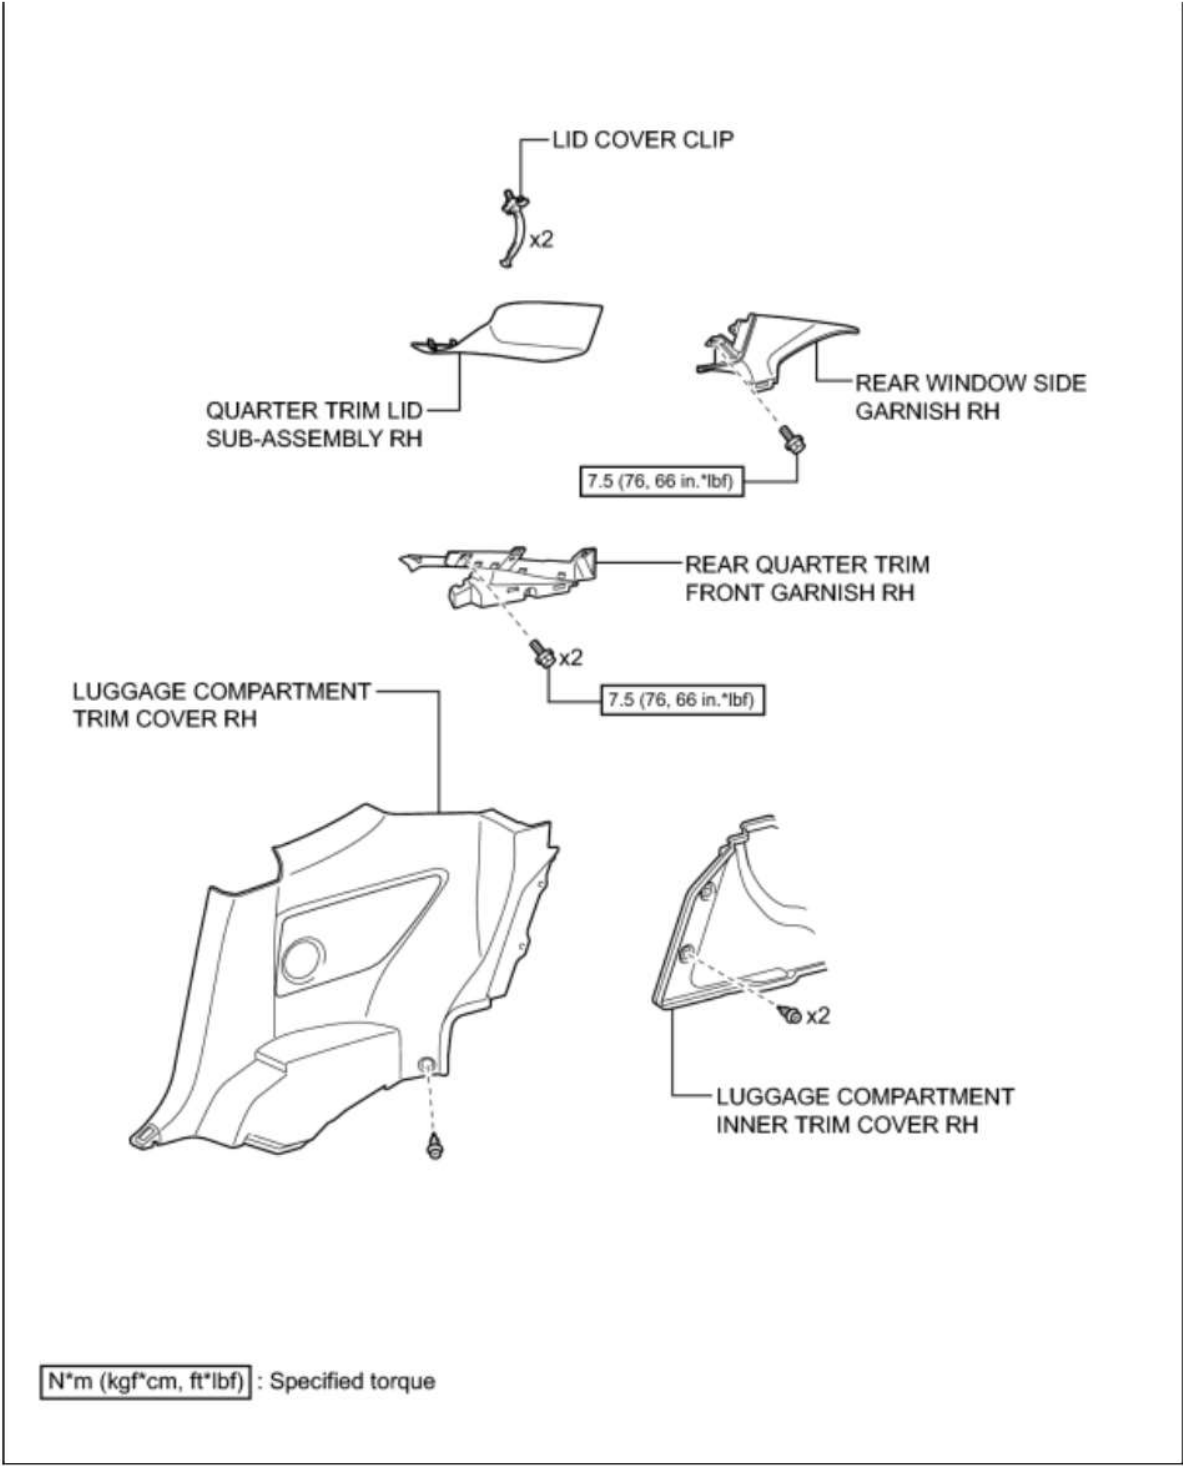


**ILLUSTRATION**

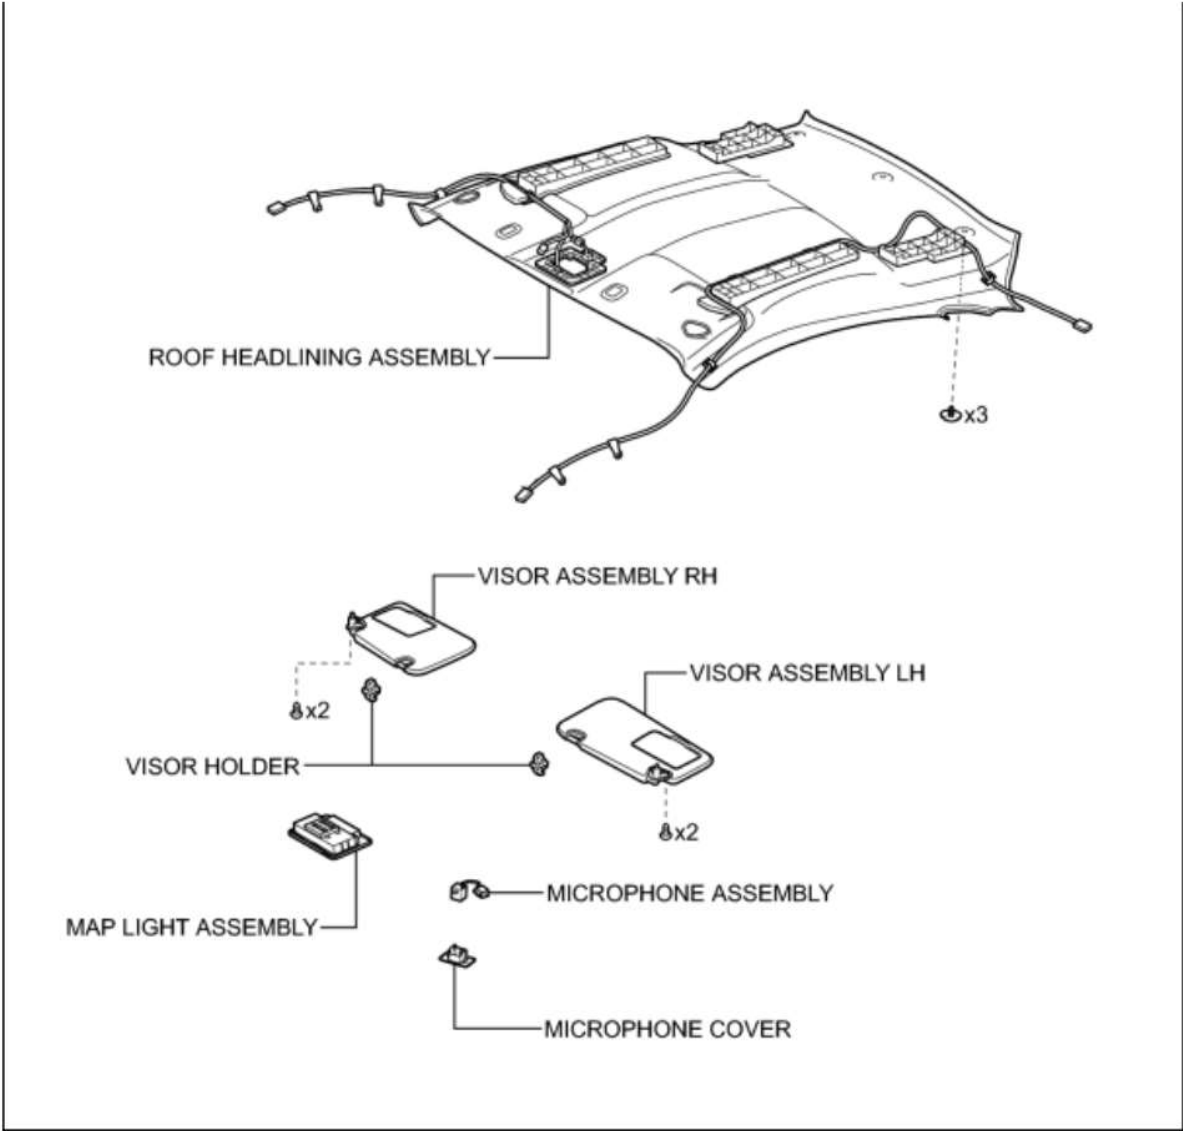

**ILLUSTRATION**

cardiagn.com

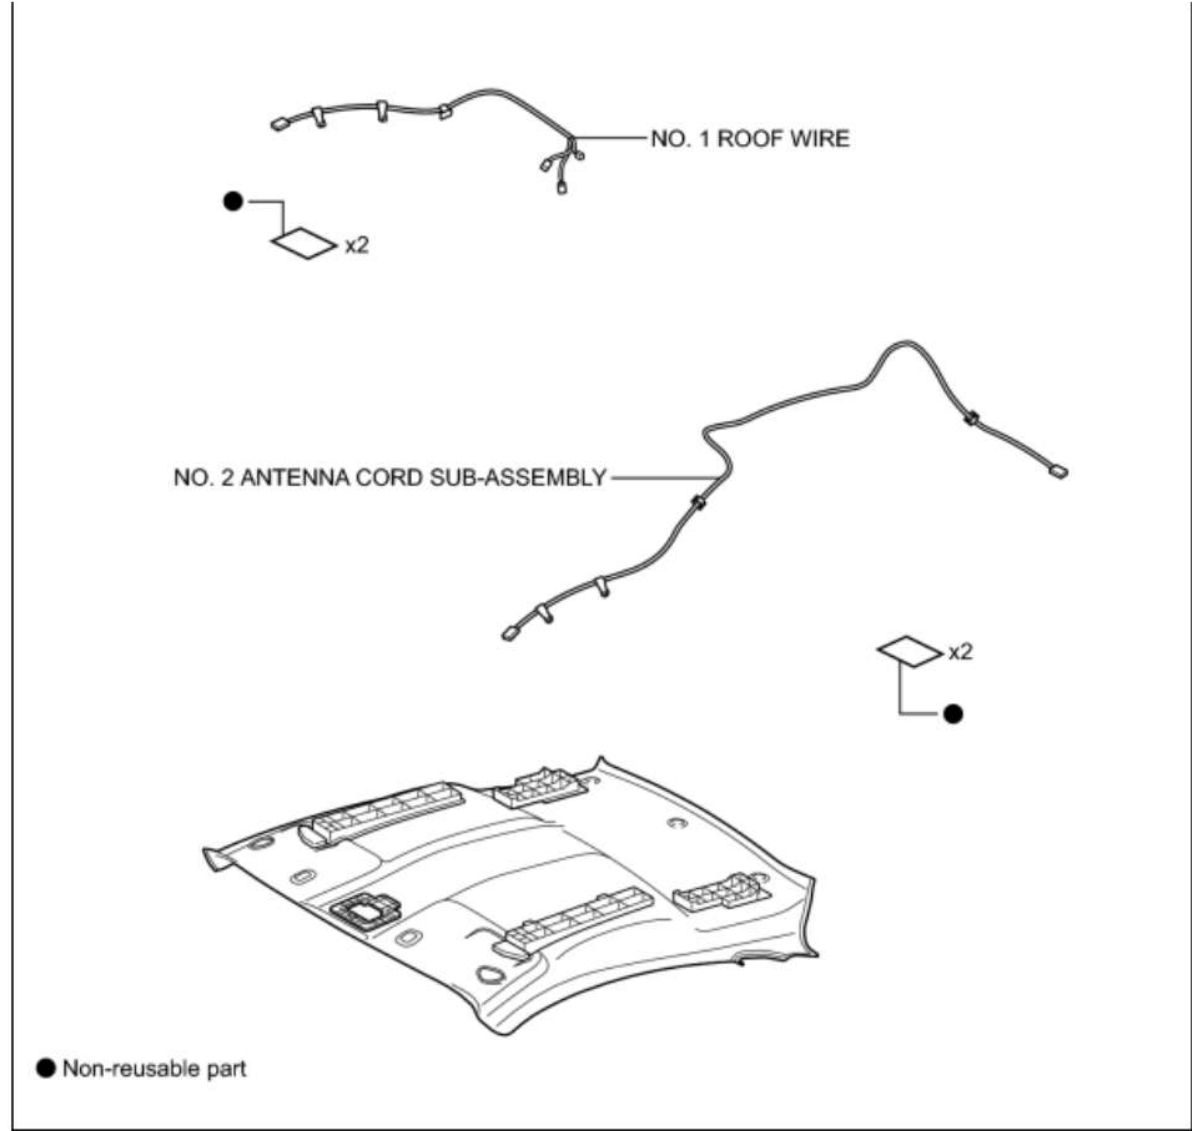

|                                                                         |             |                         |
|-------------------------------------------------------------------------|-------------|-------------------------|
| Last Modified: 3-27-2012                                                | 6.4 A       | From: 201203            |
| Model Year: 2013                                                        | Model: FR-S | Doc ID: RM000004R0R00BX |
| Title: INTERIOR PANELS / TRIM: ROOF HEADLINING: DISASSEMBLY (2013 FR-S) |             |                         |

DISASSEMBLY

1. REMOVE MICROPHONE ASSEMBLY


INFO

2. REMOVE MICROPHONE COVER

INFO

3. REMOVE NO. 1 ROOF WIRE

(a) Remove the adhesive tape from the roof headlining.

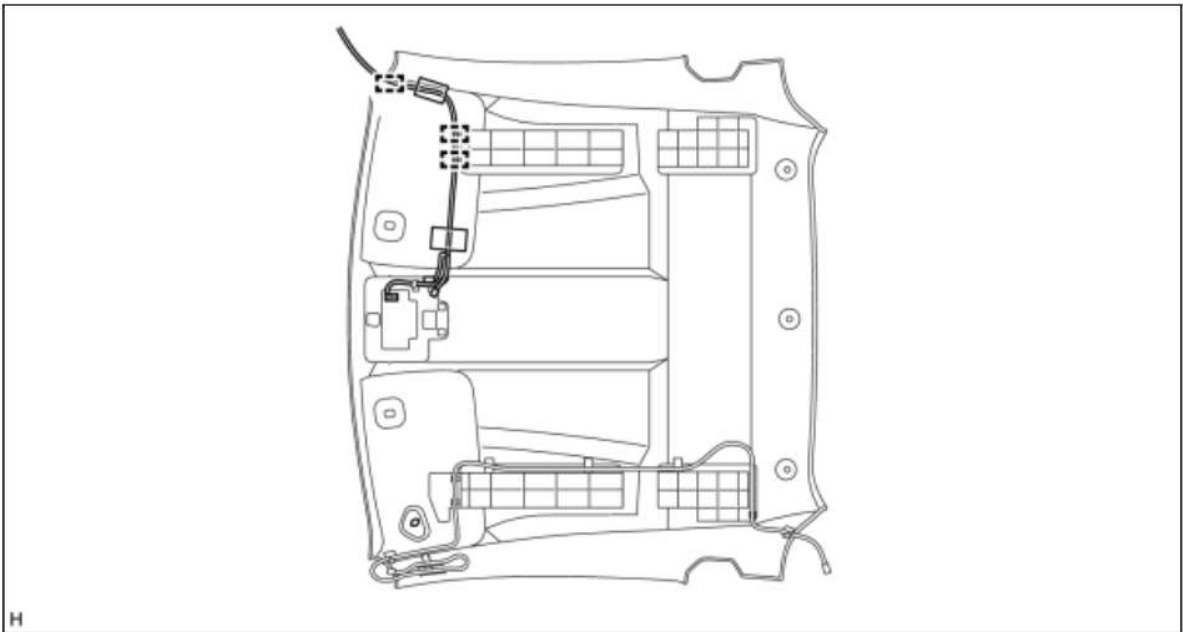

Text in Illustration

|                                                                                     |      |   |   |
|-------------------------------------------------------------------------------------|------|---|---|
|  | Tape | - | - |
|-------------------------------------------------------------------------------------|------|---|---|

(b) Disengage the 3 guides remove the No. 1 roof wire from the roof headlining.

4. REMOVE NO. 2 ANTENNA CORD SUB-ASSEMBLY


INFO



|                                                                                 |                    |                                |
|---------------------------------------------------------------------------------|--------------------|--------------------------------|
| <b>Last Modified:</b> 3-27-2012                                                 | 6.4 A              | <b>From:</b> 201203            |
| <b>Model Year:</b> 2013                                                         | <b>Model:</b> FR-S | <b>Doc ID:</b> RM000001JVP00VX |
| <b>Title:</b> INTERIOR PANELS / TRIM: ROOF HEADLINING: INSTALLATION (2013 FR-S) |                    |                                |

## **INSTALLATION**

### **1. INSTALL ROOF HEADLINING ASSEMBLY**

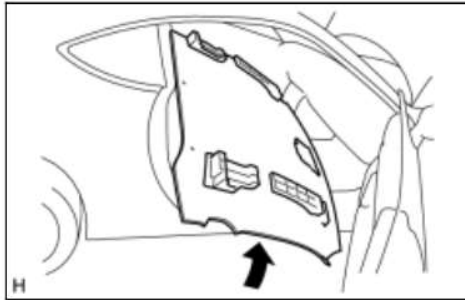

- (a) Put the roof headlining assembly into the vehicle through the front passenger side door.

#### **NOTICE:**

**Do not damage the roof headlining assembly or body interior.**

- (b) Engage the clip at the front of the roof headlining, and install the roof headlining assembly.
- (c) Connect the antenna cord sub-assembly connectors.
- (d) Install the 3 clips at the rear of the roof headlining.
- (e) Engage the 2 clamps and connect the connector from the front pillar LH.
- (f) Engage the 3 clamps and connect the connector from the front pillar RH.

### **2. INSTALL VISOR HOLDER**

- (a) Engage the 2 claws install the 2 visor holders.

### **3. INSTALL VISOR ASSEMBLY LH**

- (a) Install the visor assembly LH with the 2 screws.

### **4. INSTALL VISOR ASSEMBLY RH**

#### **HINT:**

**Use the same procedure as for the LH side.**

### **5. INSTALL MAP LIGHT ASSEMBLY**

INFO

### **6. INSTALL CENTER PILLAR GARNISH LH**

- (a) Engage the 2 guides and clip.
- (b) Install the center pillar garnish LH with the 2 bolts and clip.

**Torque: 7.5 N·m (76 kgf·cm, 66in·lbf)**

### **7. INSTALL CENTER PILLAR GARNISH RH**

#### **HINT:**

**Use the same procedure as for the LH side.**

**8. INSTALL REAR QUARTER TRIM FRONT GARNISH LH**

- (a) Engage the claw and clip.
- (b) Install the rear quarter trim front garnish LH with the 2 bolts.

**Torque: 7.5 N·m (76 kgf·cm, 66in·lbf)**

**9. INSTALL REAR QUARTER TRIM FRONT GARNISH RH****HINT:**

Use the same procedure as for the LH side.

**10. INSTALL REAR WINDOW SIDE GARNISH LH**

- (a) Engage the guide and 2 clips.
- (b) Install the rear window side garnish LH with the bolt.

**Torque: 7.5 N·m (76 kgf·cm, 66in·lbf)**

**11. INSTALL REAR WINDOW SIDE GARNISH RH****HINT:**


Use the same procedure as for the LH side.

**12. INSTALL QUARTER TRIM LID SUB-ASSEMBLY LH**

- (a) Install the 2 lid cover clips from the quarter trim lid sub-assembly LH.

**NOTICE:**

If there is any damage, be sure to replace the lid cover clip with a new one.

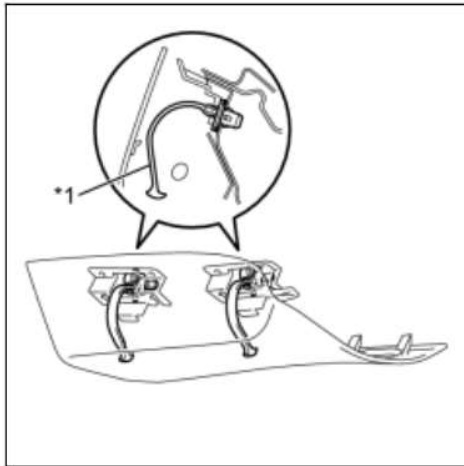

- (b) Engage the 2 guides and 6 claws and install the quarter trim lid sub-assembly LH.

**Text in Illustration**

|    |                |
|----|----------------|
| *1 | Lid Cover Clip |
|----|----------------|

**13. INSTALL QUARTER TRIM LID SUB-ASSEMBLY RH****HINT:**

Use the same procedure as for the LH side.

**14. INSTALL LUGGAGE COMPARTMENT TRIM COVER LH**

- (a) Engage the 7 clips install the quarter trim panel assembly LH.
- (b) Install the clip.

**15. INSTALL LUGGAGE COMPARTMENT TRIM COVER RH****HINT:**

Use the same procedure as for the for LH side.

**16. INSTALL LUGGAGE COMPARTMENT INNER TRIM COVER LH**

- (a) Fold down the rear seatback assembly.
- (b) Engage the 2 clips install the luggage compartment inner trim cover LH.

**17. INSTALL LUGGAGE COMPARTMENT INNER TRIM COVER RH****HINT:**

Use the same procedure as for the LH side.

**18. INSTALL SEPARATE TYPE REAR SEAT CUSHION ASSEMBLY LH**

INFO

**19. INSTALL SEPARATE TYPE REAR SEAT CUSHION ASSEMBLY RH**

INFO

**20. INSTALL FRONT SEAT OUTER BELT ASSEMBLY LH**

INFO

**21. INSTALL FRONT SEAT OUTER BELT ASSEMBLY RH**


INFO

**22. INSTALL COWL SIDE TRIM BOARD LH**

- (a) Engage the 2 clips install the cowl side trim board LH.
- (b) Install the clip.

**23. INSTALL COWL SIDE TRIM BOARD RH****HINT:**

Use the same procedure as for the LH side.

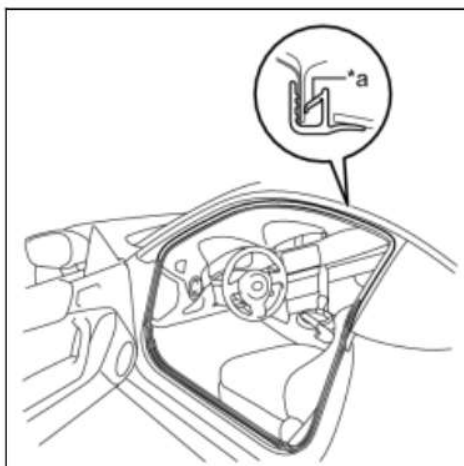**24. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH**

- (a) Align the alignment mark on the weatherstrip with the protruding portion on the body indicated by the arrow in the illustration, and install the front door opening trim weatherstrip LH.

**Text in Illustration**

|    |                |
|----|----------------|
| *a | Alignment Mark |
|----|----------------|

**NOTICE:**

After installation, check that the corners fit correctly.

**25. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP RH****HINT:**

Use the same procedure as for the LH side.

## 26. INSTALL FRONT DOOR SCUFF PLATE LH

- (a) Engage the 6 claws install the front door scuff plate LH.

## 27. INSTALL FRONT DOOR SCUFF PLATE RH

### **HINT:**

Use the same procedure as for the LH side.

## 28. INSTALL FRONT PILLAR GARNISH LH INFO

## 29. INSTALL FRONT PILLAR GARNISH RH INFO

## 30. INSTALL NO. 2 INSTRUMENT PANEL SPEAKER PANEL SUB-ASSEMBLY INFO

## 31. INSTALL NO. 1 INSTRUMENT PANEL SPEAKER PANEL SUB-ASSEMBLY INFO

## 32. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

Torque: 6.0 N·m (61 kgf·cm, 53in·lbf)




|                                                                        |             |                         |
|------------------------------------------------------------------------|-------------|-------------------------|
| Last Modified: 3-27-2012                                               | 6.4 A       | From: 201203            |
| Model Year: 2013                                                       | Model: FR-S | Doc ID: RM000004R0S00BX |
| Title: INTERIOR PANELS / TRIM: ROOF HEADLINING: REASSEMBLY (2013 FR-S) |             |                         |

REASSEMBLY

1. INSTALL NO. 2 ANTENNA CORD SUB-ASSEMBLY

2. INSTALL NO. 1 ROOF WIRE

(a) Engage the 2 guides and position the No. 1 roof wire as shown in the illustration.

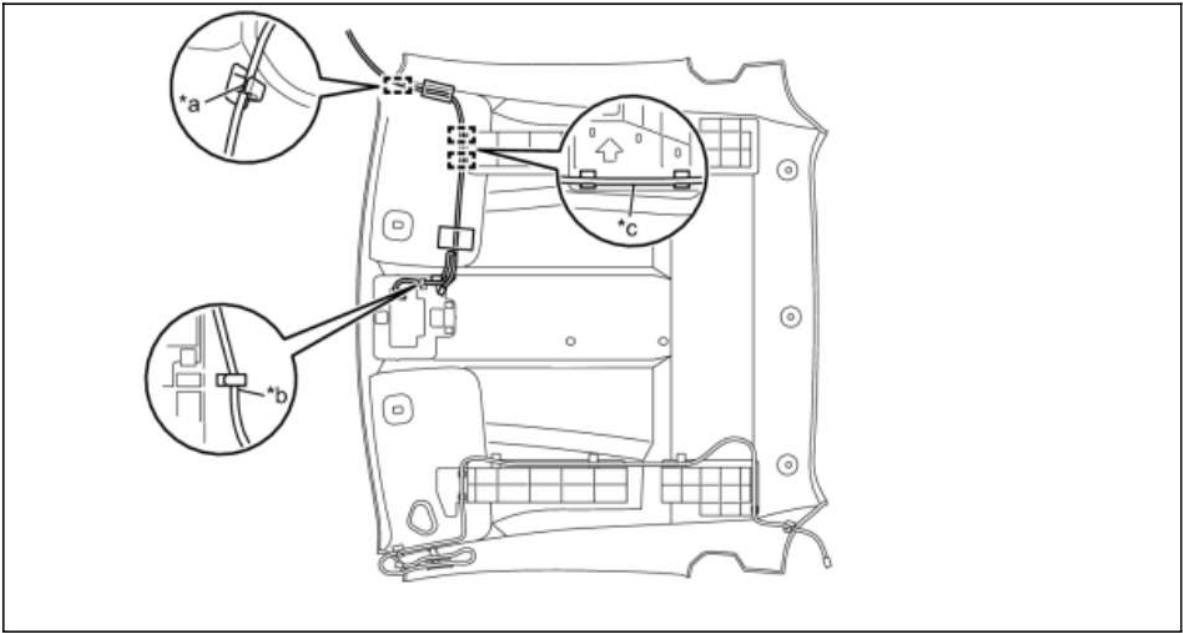

NOTICE:

Make sure that the No. 1 roof wire is not twisted and that the marking line (white) faces up.

Text in Illustration

|                                                                                     |                                                                                                      |    |                                                                            |
|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------|----|----------------------------------------------------------------------------|
| *a                                                                                  | Align the center of the white tape on the wire with the edge of the trim, and fix the wire in place. | *b | Align the white tape on the wire with the clip, and fix the wire in place. |
| *c                                                                                  | Align the white tape on the wire with the clamp, and fix the wire in place.                          | -  | -                                                                          |
|  | Tape                                                                                                 | -  | -                                                                          |

(b) Apply the tape as shown in the illustration.

3. INSTALL MICROPHONE COVER

4. INSTALL MICROPHONE ASSEMBLY INFO



cardiagn.com

|                                                                            |                    |                                |
|----------------------------------------------------------------------------|--------------------|--------------------------------|
| <b>Last Modified:</b> 3-27-2012                                            | 6.4 A              | <b>From:</b> 201203            |
| <b>Model Year:</b> 2013                                                    | <b>Model:</b> FR-S | <b>Doc ID:</b> RM000001JVR00VX |
| <b>Title:</b> INTERIOR PANELS / TRIM: ROOF HEADLINING: REMOVAL (2013 FR-S) |                    |                                |

## REMOVAL

### 1. PRECAUTION

#### NOTICE:

After turning the ignition switch off, waiting time may be required before disconnecting the cable from the negative (-) battery terminal. Therefore, make sure to read the disconnecting the cable from the negative (-) battery terminal notices before proceeding with work [INFO](#).

### 2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL [INFO](#)


### 3. REMOVE NO. 2 INSTRUMENT PANEL SPEAKER PANEL SUB-ASSEMBLY [INFO](#)

### 4. REMOVE NO. 1 INSTRUMENT PANEL SPEAKER PANEL SUB-ASSEMBLY [INFO](#)

### 5. REMOVE FRONT PILLAR GARNISH LH [INFO](#)

### 6. REMOVE FRONT PILLAR GARNISH RH [INFO](#)

### 7. REMOVE FRONT DOOR SCUFF PLATE LH

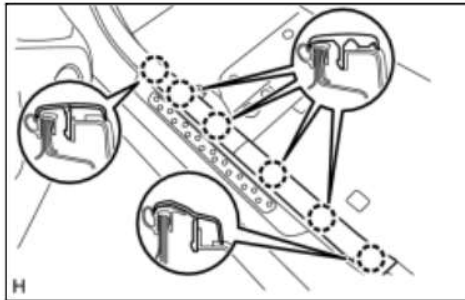

(a) Disengage the 6 claws and remove the front door scuff plate LH.


### 8. REMOVE FRONT DOOR SCUFF PLATE RH

#### HINT:

Use the same procedure described for the LH side.

### 9. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH

(a) Remove the front door opening trim weatherstrip LH.

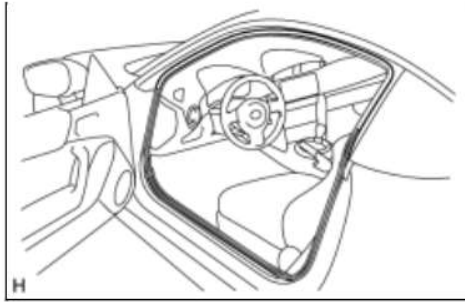


#### 10. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH

##### **HINT:**

Use the same procedure described for the LH side.

#### 11. REMOVE COWL SIDE TRIM BOARD LH

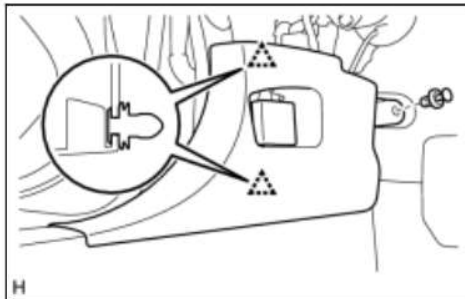

(a) Remove the clip.

(b) Disengage the 2 clips and remove the cowl side trim board LH.

#### 12. REMOVE COWL SIDE TRIM BOARD RH

##### **HINT:**

Use the same procedure described for the LH side.

#### 13. SEPARATE FRONT SEAT OUTER BELT ASSEMBLY LH

INFO

#### 14. SEPARATE FRONT SEAT OUTER BELT ASSEMBLY RH

##### **HINT:**

Use the same procedure described for the LH side.

#### 15. REMOVE SEPARATE TYPE REAR SEAT CUSHION ASSEMBLY LH


INFO

#### 16. REMOVE SEPARATE TYPE REAR SEAT CUSHION ASSEMBLY RH

INFO

#### 17. REMOVE LUGGAGE COMPARTMENT INNER TRIM COVER LH

(a) Fold down the bench type rear seatback assembly.

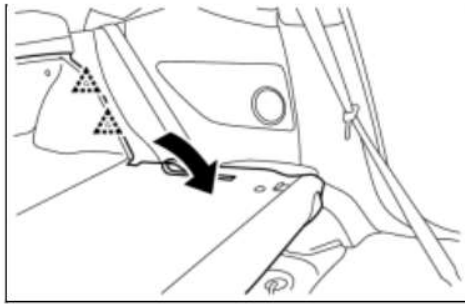


(b) Disengage the 2 clips and disconnect the luggage compartment inner trim cover LH.

#### 18. REMOVE LUGGAGE COMPARTMENT INNER TRIM COVER RH

##### **HINT:**

Use the same procedure described for the LH side.

#### 19. REMOVE LUGGAGE COMPARTMENT TRIM COVER LH

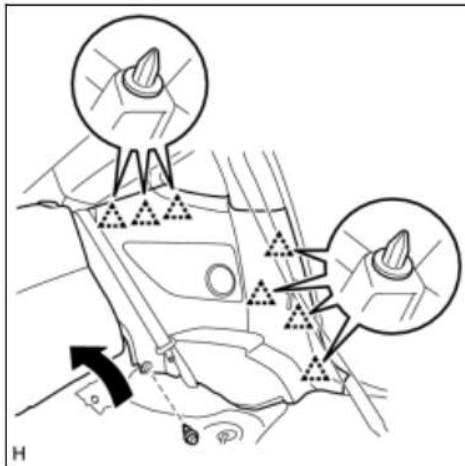

(a) Pull up the rear seatback assembly.

(b) Remove the clip.

(c) Disengage the 7 clips and remove the luggage compartment trim cover LH.



#### 20. REMOVE LUGGAGE COMPARTMENT TRIM COVER RH

##### **HINT:**

Use the same procedure described for the LH side.

#### 21. REMOVE QUARTER TRIM LID SUB-ASSEMBLY LH


(a) Along the arrow in the illustration, disengage the 6 claws.

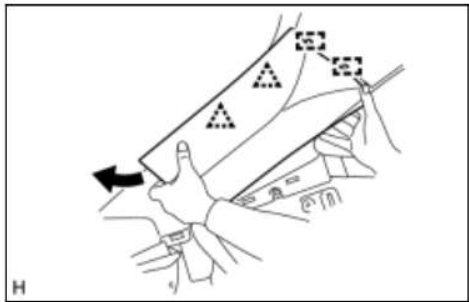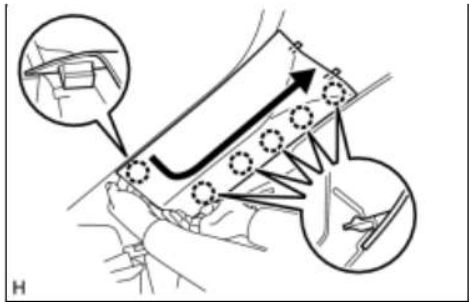

(b) Disengage the 2 clips and 2 guides.

**HINT:**

Make the quarter trim lid sub-assembly LH hang down from the lid cover clip.

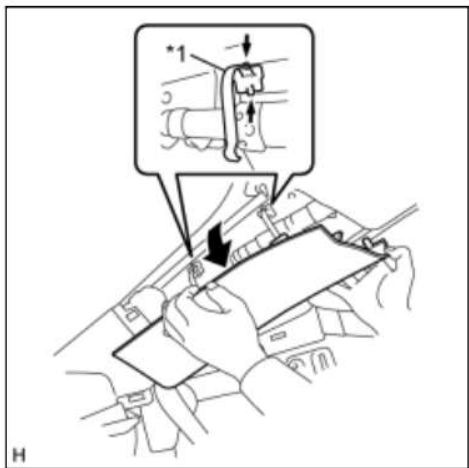

(c) Push the lid cover clip knobs in the direction of the arrow to remove the 2 lid cover clips along with the quarter trim lid sub-assembly LH.

**Text in Illustration**

|    |                |
|----|----------------|
| *1 | Lid Cover Clip |
|----|----------------|

(d) Remove the 2 lid cover clips from the lid cover LH.

**NOTICE:**


If there is any damage, be sure to replace the lid cover clip with a new one.

**22. REMOVE QUARTER TRIM LID SUB-ASSEMBLY RH**

**HINT:**

Use the same procedure described for the LH side.

**23. REMOVE REAR WINDOW SIDE GARNISH LH**

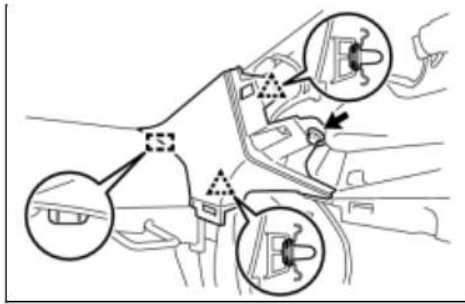

(a) Remove the bolt.


(b) Disengage the 2 clips and guide remove the rear window side garnish LH.

#### 24. REMOVE REAR WINDOW SIDE GARNISH RH

##### **HINT:**

Use the same procedure described for the LH side.

#### 25. REMOVE REAR QUARTER TRIM FRONT GARNISH LH

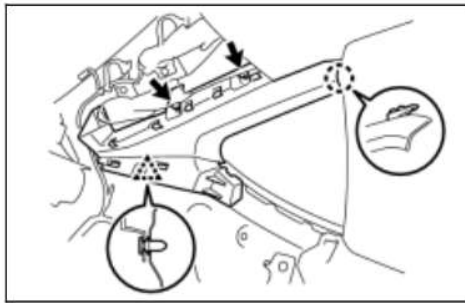

(a) Remove the 2 bolts.


(b) Disengage the clip and claw remove the rear quarter trim front garnish LH.

#### 26. REMOVE REAR QUARTER TRIM FRONT GARNISH RH

##### **HINT:**

Use the same procedure described for the LH side.

#### 27. REMOVE CENTER PILLAR GARNISH LH

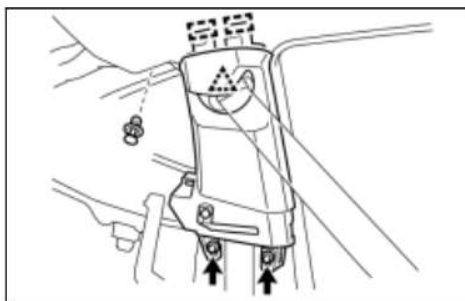

(a) Remove the 2 bolts and clip.

(b) Disengage the clips and 2 guides remove the center pillar garnish LH.


#### 28. REMOVE CENTER PILLAR GARNISH RH

##### **HINT:**

Use the same procedure described for the LH side.

### 29. REMOVE MAP LIGHT ASSEMBLY INFO

### 30. REMOVE VISOR ASSEMBLY LH

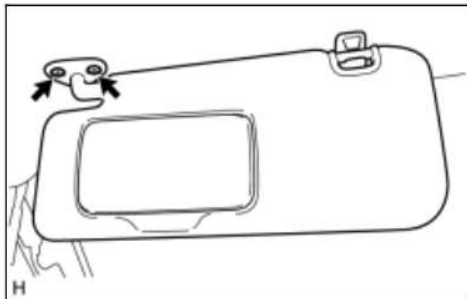


(a) Remove the 2 screws.

### 31. REMOVE VISOR ASSEMBLY RH

#### **HINT:**


Use the same procedure described for the LH side.

### 32. REMOVE VISOR HOLDER

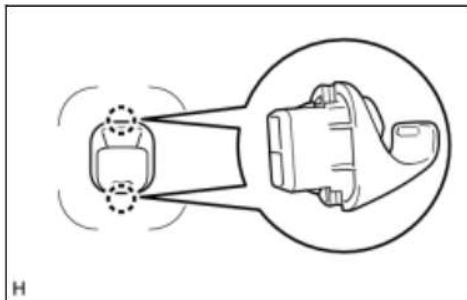

(a) Disengage the 2 claws remove the 2 visor holders.


### 33. REMOVE ROOF HEADLINING ASSEMBLY

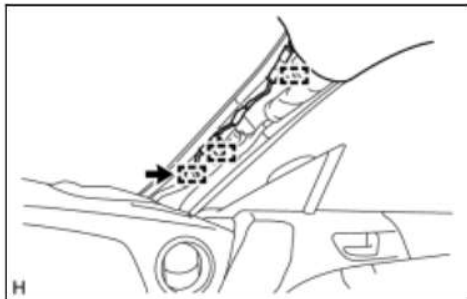


(a) Disengage the 3 clamps and disconnect the connector from the front pillar RH.




(b) Disengage the 2 clamps and disconnect the connector from the front pillar LH.

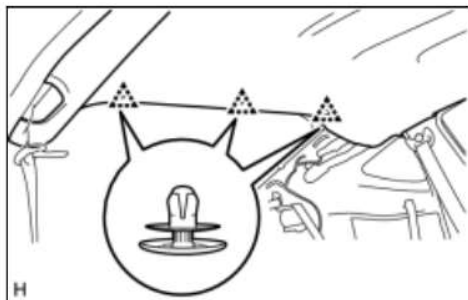

(c) Remove the 3 clips at the rear of the roof headlining.

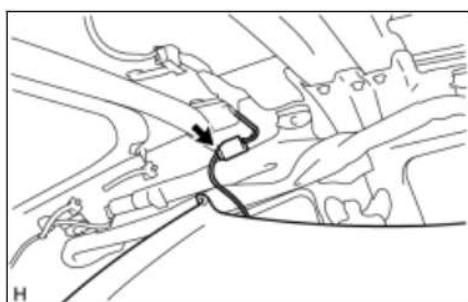


(d) Disconnect the antenna cord sub-assembly connector.

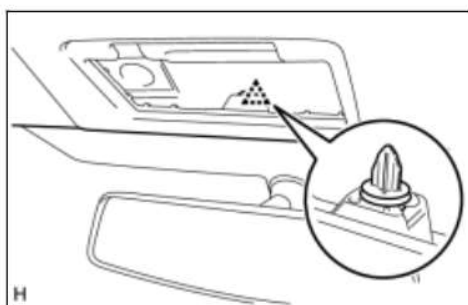

(e) Disengage the clip at the front of the roof headlining, and remove the roof headlining assembly.

(f) Remove the roof headlining assembly from the vehicle through the front passenger side door.

**NOTICE:**

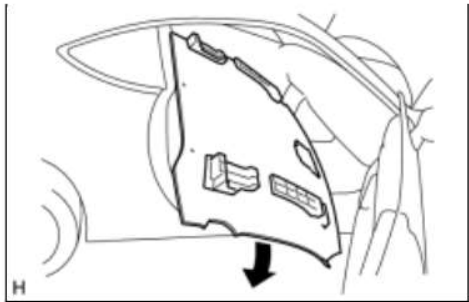


Do not damage the roof headlining assembly or body interior.




|                                                                               |             |                         |
|-------------------------------------------------------------------------------|-------------|-------------------------|
| Last Modified: 3-27-2012                                                      | 6.4 K       | From: 201203            |
| Model Year: 2013                                                              | Model: FR-S | Doc ID: RM000003O2O00DX |
| Title: INTERIOR PANELS / TRIM: UPPER INSTRUMENT PANEL: COMPONENTS (2013 FR-S) |             |                         |

COMPONENTS


ILLUSTRATION

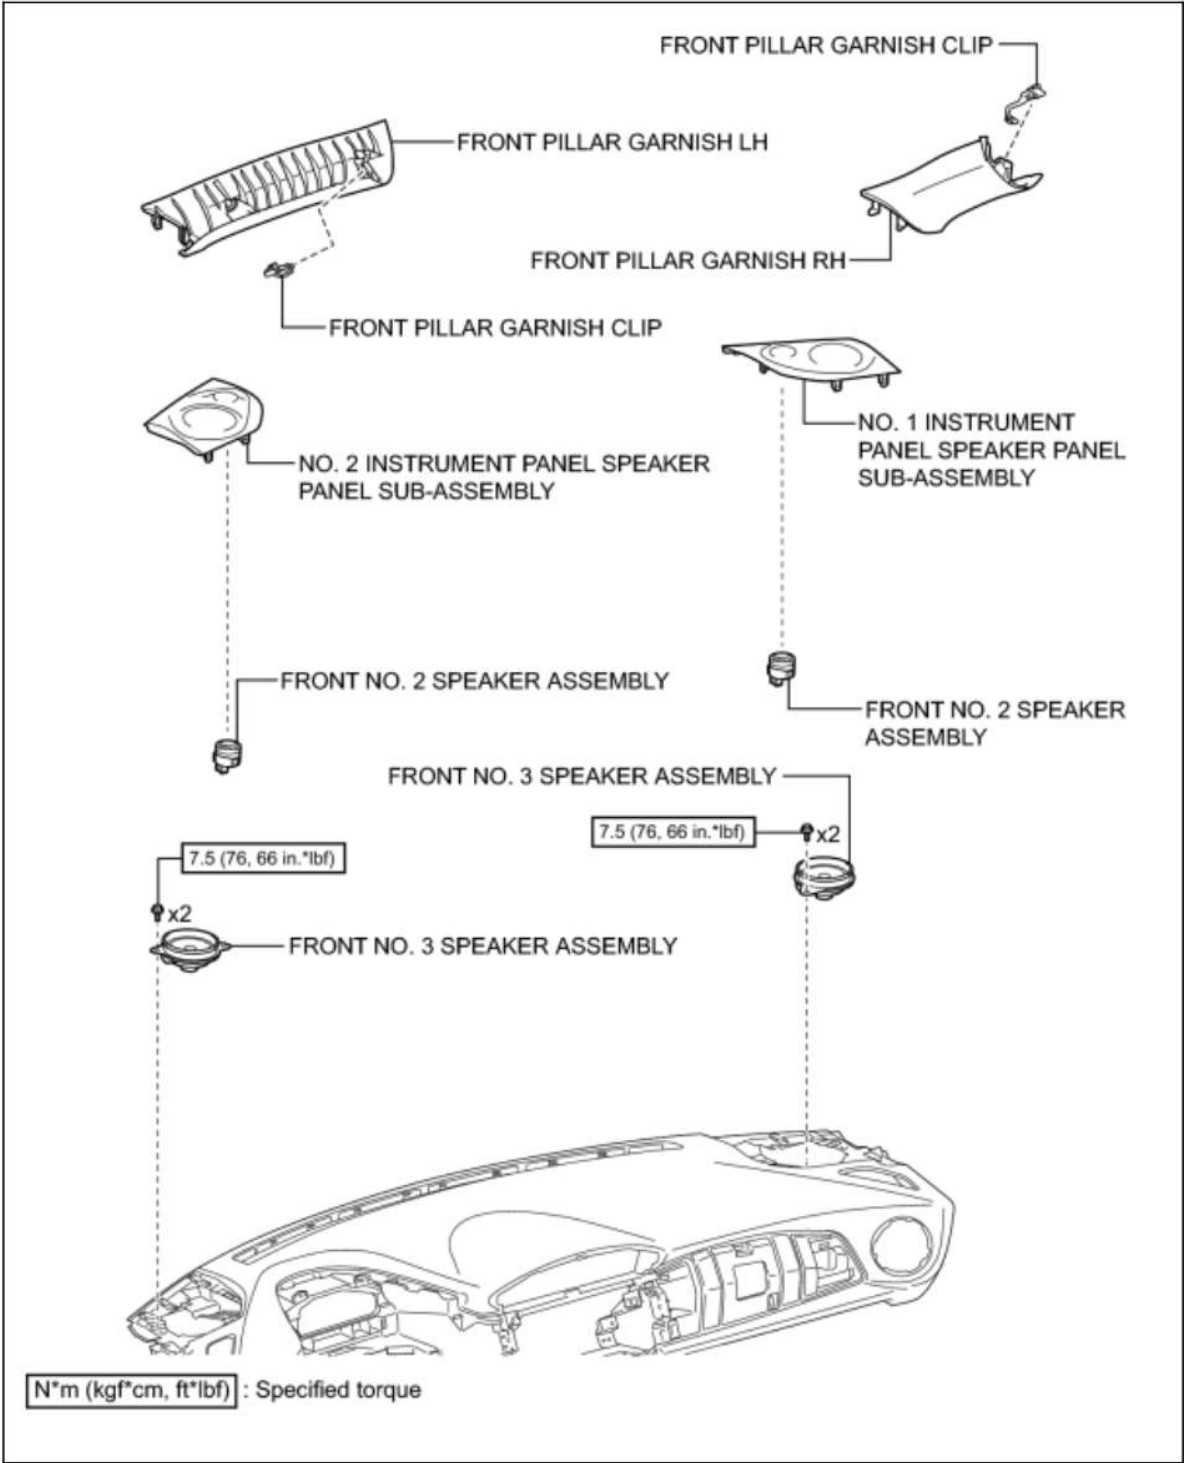

ILLUSTRATION

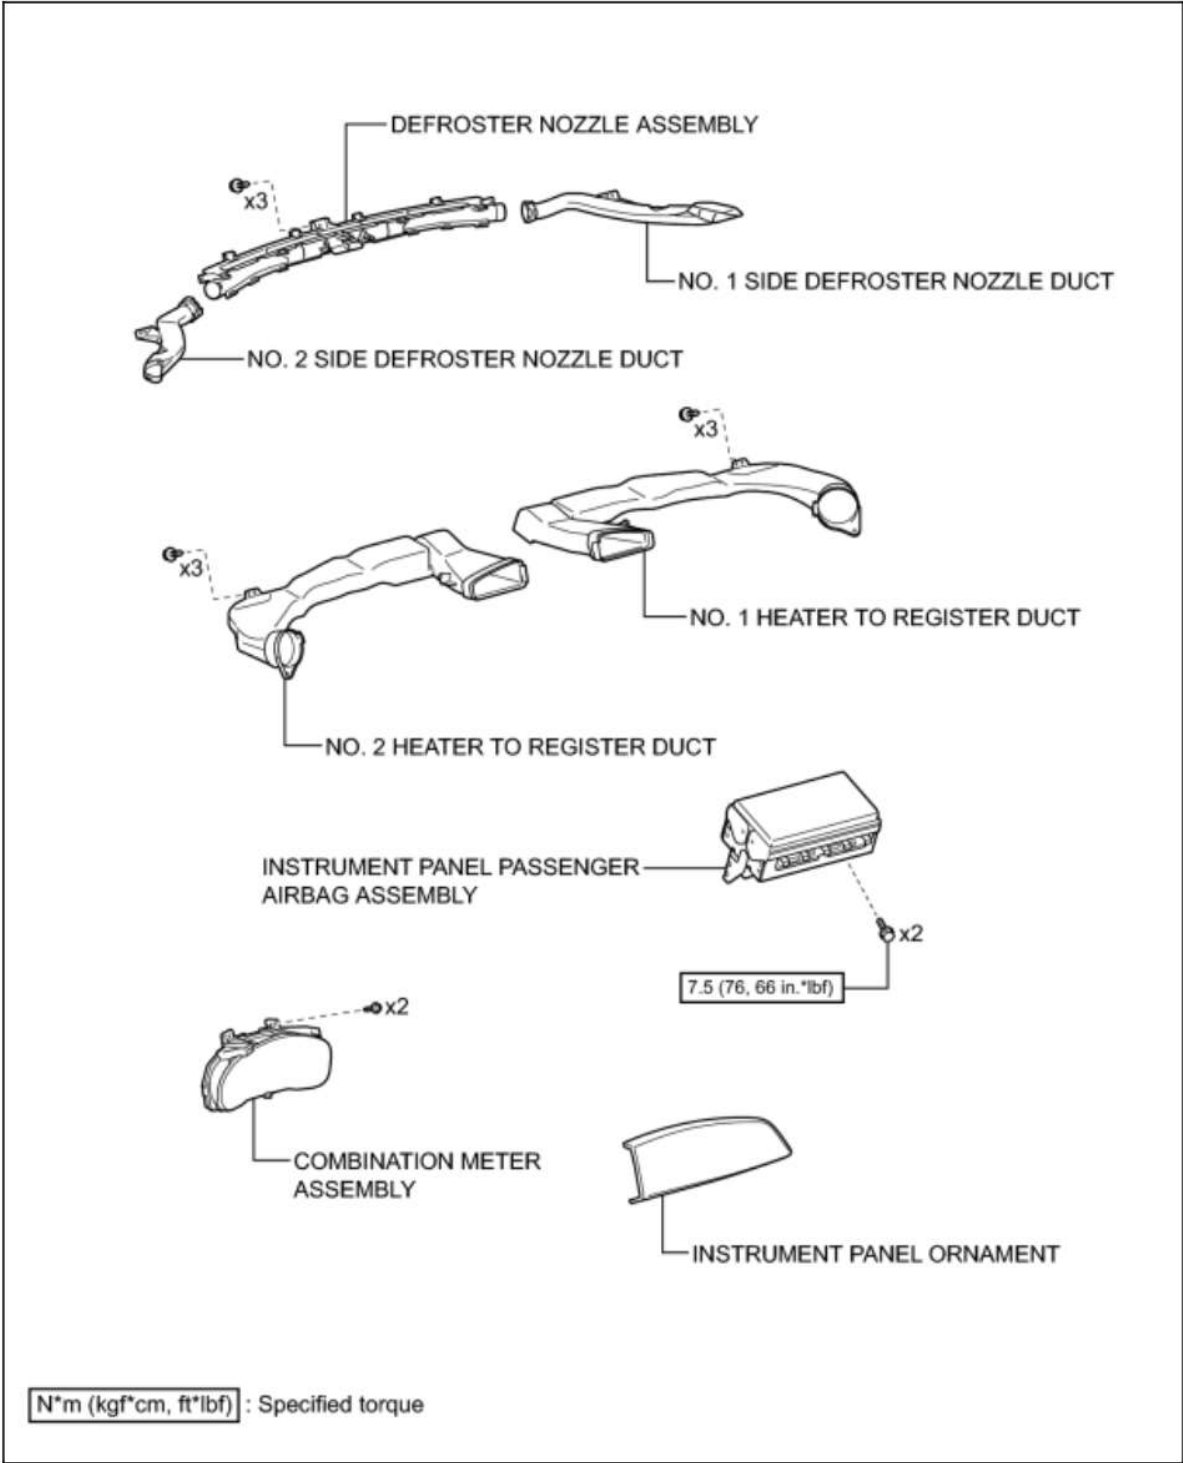


ILLUSTRATION

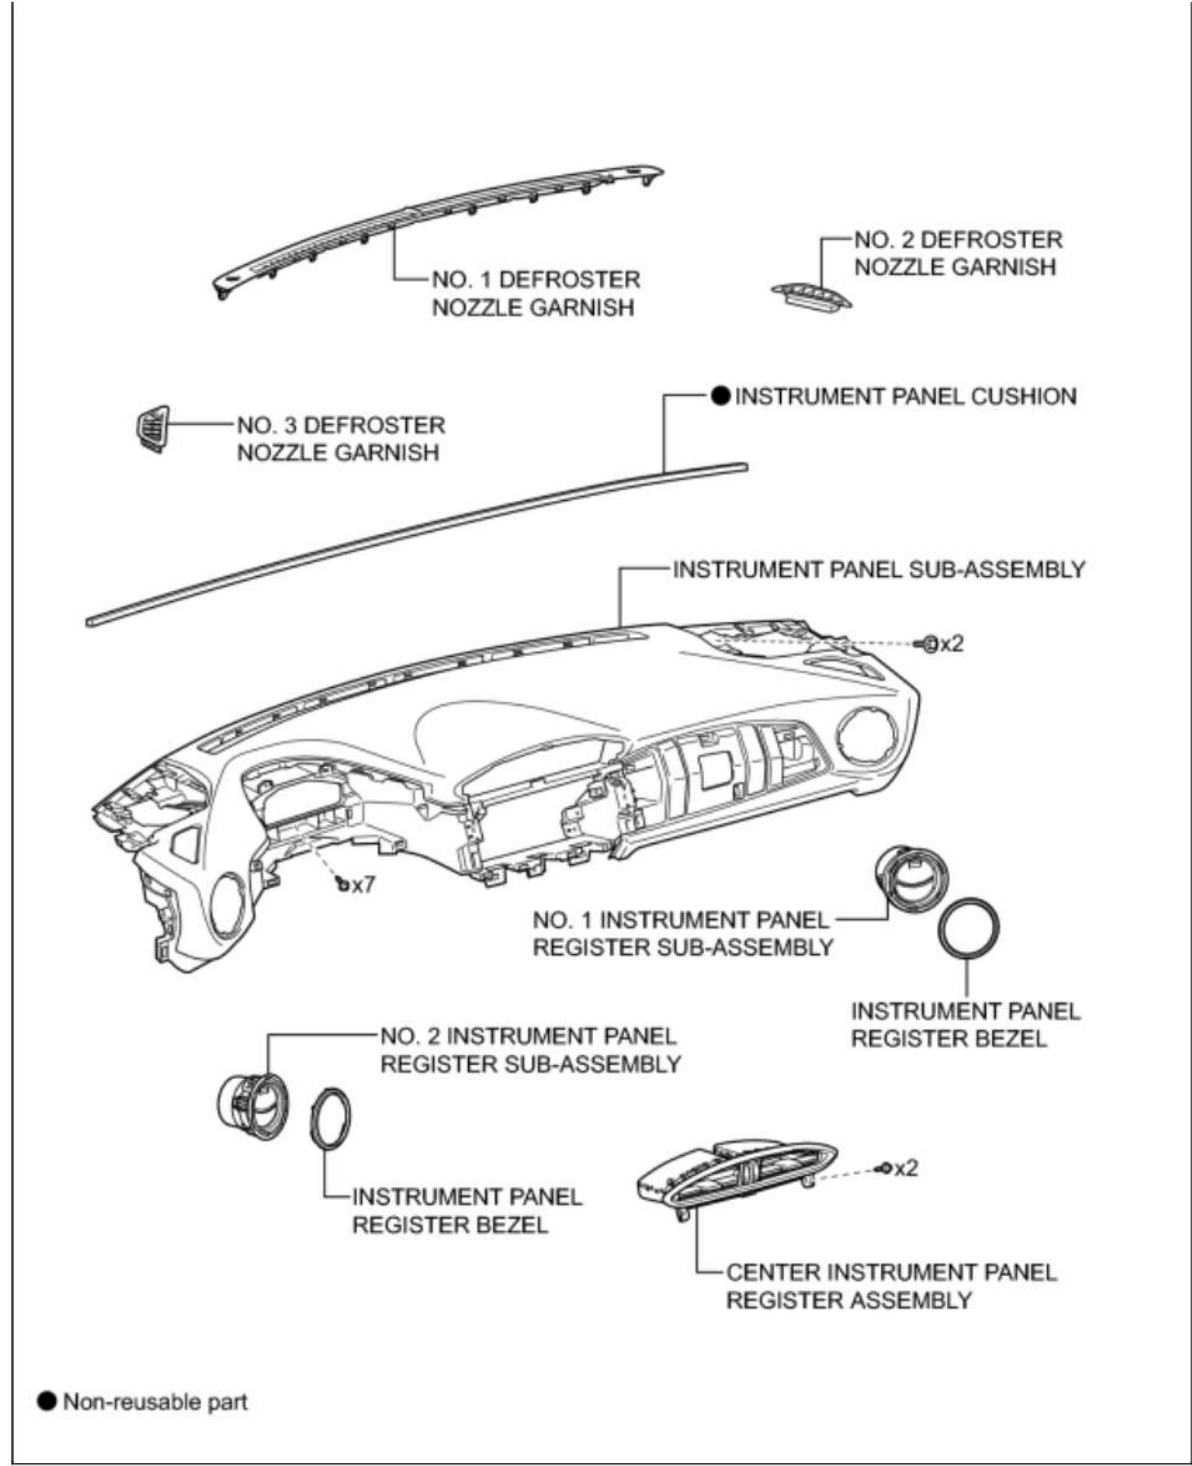

|                                                                                       |                    |                                |
|---------------------------------------------------------------------------------------|--------------------|--------------------------------|
| <b>Last Modified:</b> 3-27-2012                                                       | <b>6.4 A</b>       | <b>From:</b> 201203            |
| <b>Model Year:</b> 2013                                                               | <b>Model:</b> FR-S | <b>Doc ID:</b> RM000003O1100LX |
| <b>Title:</b> INTERIOR PANELS / TRIM: UPPER INSTRUMENT PANEL: DISASSEMBLY (2013 FR-S) |                    |                                |

## **DISASSEMBLY**

### **1. REMOVE NO. 2 HEATER TO REGISTER DUCT**

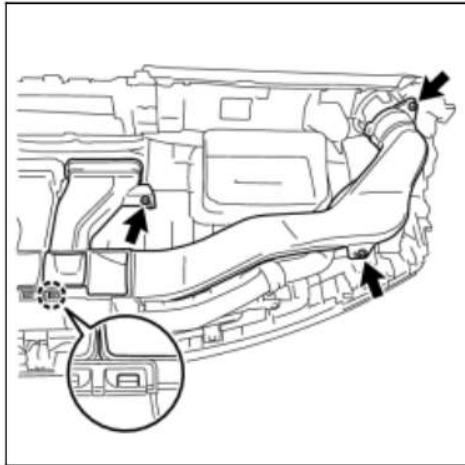

(a) Remove the 3 screws.


(b) Disengage the claw to remove the No. 2 heater to register duct.

### **2. REMOVE NO. 1 HEATER TO REGISTER DUCT**

#### **HINT:**

Use the same procedure as for the No. 2 heater to register duct.


### **3. REMOVE DEFROSTER NOZZLE ASSEMBLY**

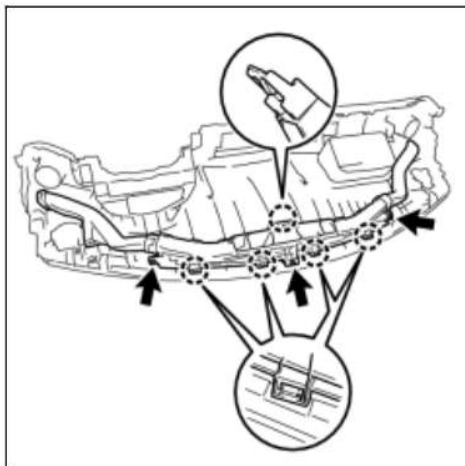

(a) Remove the 3 screws.

(b) Disengage the 5 claws and remove the defroster nozzle assembly, No. 2 side defroster nozzle duct, and No. 1 side defroster nozzle duct as a single unit.

#### 4. REMOVE NO. 2 SIDE DEFROSTER NOZZLE DUCT

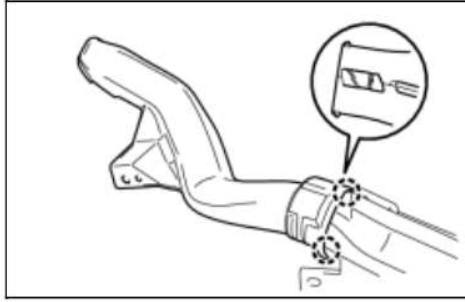


(a) Disengage the 2 claws to remove the No. 2 side defroster nozzle duct.

#### 5. REMOVE NO. 1 SIDE DEFROSTER NOZZLE DUCT

##### **HINT:**

Use the same procedure as for the No. 2 side defroster nozzle duct.

#### 6. REMOVE NO. 3 DEFROSTER NOZZLE GARNISH

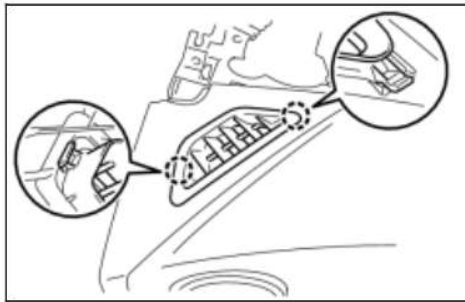


(a) Disengage the 2 claws to remove the No. 3 defroster nozzle garnish.

#### 7. REMOVE NO. 2 DEFROSTER NOZZLE GARNISH

##### **HINT:**


Use the same procedure as for the No. 3 defroster nozzle garnish.

#### 8. REMOVE CENTER INSTRUMENT PANEL REGISTER ASSEMBLY

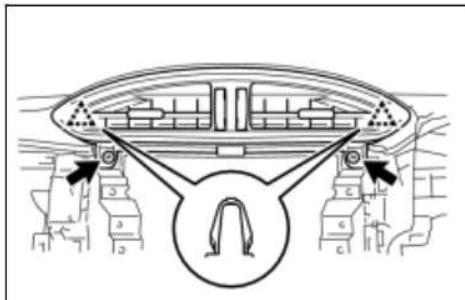

(a) Remove the 2 screws.


(b) Disengage the 2 clips to remove the center instrument panel register assembly.

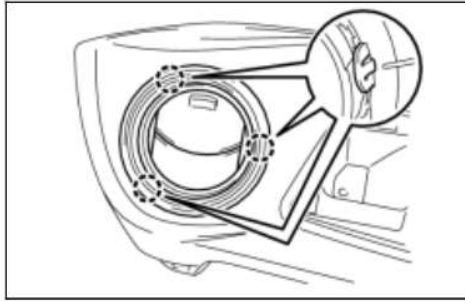**9. REMOVE NO. 2 INSTRUMENT PANEL REGISTER SUB-ASSEMBLY**

- (a) Disengage the 3 claws to remove the No. 2 instrument panel register sub-assembly.

**10. REMOVE NO. 1 INSTRUMENT PANEL REGISTER SUB-ASSEMBLY****HINT:**

Use the same procedure as for the No. 2 instrument panel register sub-assembly.

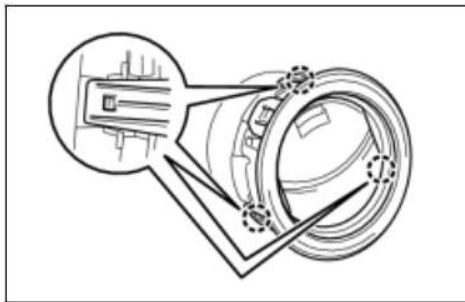**11. REMOVE INSTRUMENT PANEL REGISTER BEZEL (for LH Side)**


- (a) Disengage the 3 claws to remove the instrument panel register bezel.

**12. REMOVE INSTRUMENT PANEL REGISTER BEZEL (for RH Side)****HINT:**


Use the same procedure as for the LH side.

**13. REMOVE NO. 1 DEFROSTER NOZZLE GARNISH**

- (a) Disengage the 16 claws and 8 guides to remove the No. 1 defroster nozzle garnish.

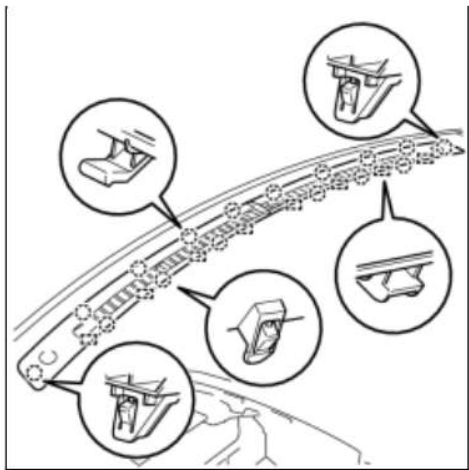

**14. REMOVE INSTRUMENT PANEL CUSHION**

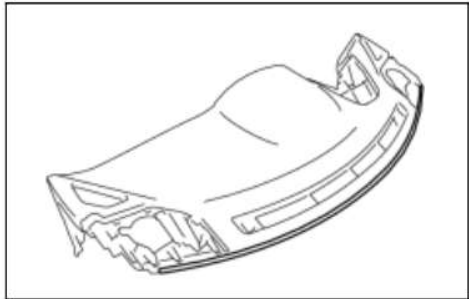

(a) Remove the instrument panel cushion.




|                                                                                        |                    |                                |
|----------------------------------------------------------------------------------------|--------------------|--------------------------------|
| <b>Last Modified:</b> 3-27-2012                                                        | 6.4 A              | <b>From:</b> 201203            |
| <b>Model Year:</b> 2013                                                                | <b>Model:</b> FR-S | <b>Doc ID:</b> RM000003O2K00HX |
| <b>Title:</b> INTERIOR PANELS / TRIM: UPPER INSTRUMENT PANEL: INSTALLATION (2013 FR-S) |                    |                                |

## **INSTALLATION**

### **1. INSTALL INSTRUMENT PANEL SUB-ASSEMBLY**

- (a) Install the instrument panel sub-assembly with the 7 screws and 2 bolts.

### **2. INSTALL INSTRUMENT PANEL PASSENGER AIRBAG ASSEMBLY**

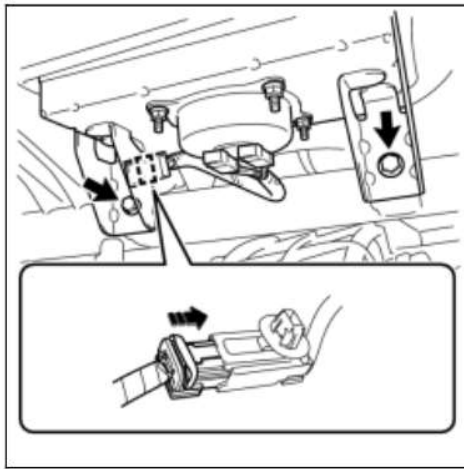

- (a) Install the instrument panel passenger airbag assembly with the 2 bolts.

**Torque: 7.5 N·m (76 kgf·cm, 66in·lbf)**

- (b) Connect the passenger airbag connector.  
(c) Engage the clamp.

### **3. INSTALL INSTRUMENT PANEL ORNAMENT**

- (a) Engage the 3 claws and 3 clips and install the instrument panel ornament.

### **4. INSTALL COMBINATION METER ASSEMBLY** INFO


### **5. INSTALL FRONT PILLAR GARNISH LH**

- (a) Remove the protective cover (w/curtain shield airbag).  
(b) Make sure that the front pillar garnish clip is not damaged.

#### **NOTICE:**

**If there is any damage, replace the front pillar garnish clip with a new one.**

- (c) Hook the tip of the front pillar garnish clip on the front

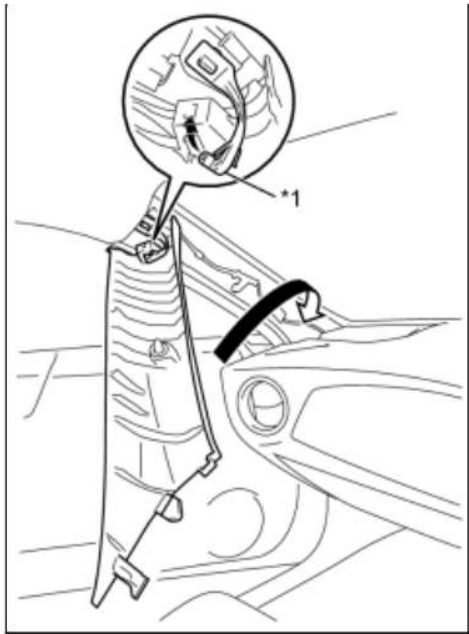


pillar garnish LH as shown in the illustration.

**Text in Illustration**

|    |                           |
|----|---------------------------|
| *1 | Front Pillar Garnish Clip |
|----|---------------------------|

(d) Turn the front pillar garnish LH in the direction of the arrow.

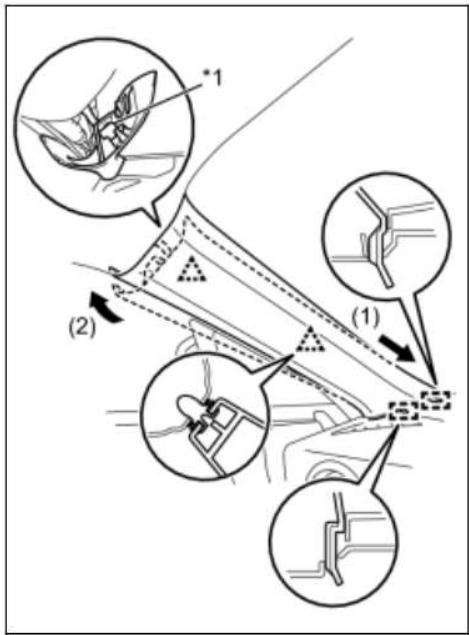

(e) Insert the 2 guides in the direction of the arrow (1).

(f) Engage the 2 clips and the front pillar garnish clip in the direction of the arrow, and install the front pillar garnish LH.

**Text in Illustration**

|    |                           |
|----|---------------------------|
| *1 | Front Pillar Garnish Clip |
|----|---------------------------|

**6. INSTALL FRONT PILLAR GARNISH RH**

**HINT:**

Use the same procedure as for the LH side.

**7. INSTALL FRONT NO. 3 SPEAKER ASSEMBLY (for LH Side)** INFO**8. INSTALL FRONT NO. 2 SPEAKER ASSEMBLY (for LH Side)** INFO**9. INSTALL NO. 1 INSTRUMENT PANEL SPEAKER PANEL SUB-ASSEMBLY**

- (a) Connect connector.
- (b) Engage the 6 claws to install the No. 1 instrument panel speaker panel sub-assembly.

**10. INSTALL FRONT NO. 3 SPEAKER ASSEMBLY (for RH Side)** INFO**11. INSTALL FRONT NO. 2 SPEAKER ASSEMBLY (for RH Side)** INFO**12. INSTALL NO. 2 INSTRUMENT PANEL SPEAKER PANEL SUB-ASSEMBLY****HINT:**

Use the same procedure as for the LH side.

**13. INSTALL LOWER INSTRUMENT PANEL SUB-ASSEMBLY**INFO**14. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**

Torque: 6.0 N·m (61 kgf·cm, 53in·lbf)

**15. CHECK SRS WARNING LIGHT**INFO

|                                                                               |             |                         |
|-------------------------------------------------------------------------------|-------------|-------------------------|
| Last Modified: 3-27-2012                                                      | 6.4 L       | From: 201203            |
| Model Year: 2013                                                              | Model: FR-S | Doc ID: RM000003QLG02QX |
| Title: INTERIOR PANELS / TRIM: UPPER INSTRUMENT PANEL: PRECAUTION (2013 FR-S) |             |                         |

**PRECAUTION**

**1. PRECAUTION FOR VEHICLE WITH AIRBAG**


- (a) Some operations in this section may affect the airbag. Prior to performing the corresponding operations, read the SRS Precaution [INFO](#) .



|                                                                                      |                    |                                |
|--------------------------------------------------------------------------------------|--------------------|--------------------------------|
| <b>Last Modified:</b> 3-27-2012                                                      | <b>6.4 A</b>       | <b>From:</b> 201203            |
| <b>Model Year:</b> 2013                                                              | <b>Model:</b> FR-S | <b>Doc ID:</b> RM000003O3E00GX |
| <b>Title:</b> INTERIOR PANELS / TRIM: UPPER INSTRUMENT PANEL: REASSEMBLY (2013 FR-S) |                    |                                |


## **REASSEMBLY**

### **1. INSTALL INSTRUMENT PANEL CUSHION**

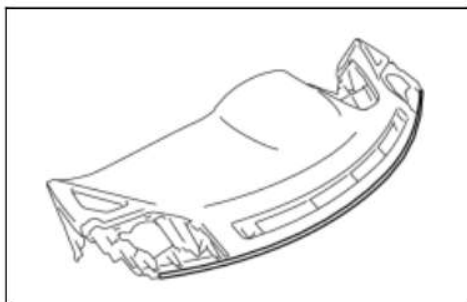


(a) Install a new instrument panel cushion.

### **2. INSTALL NO. 1 DEFROSTER NOZZLE GARNISH**

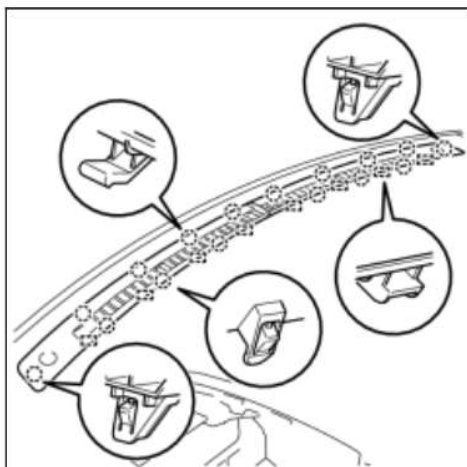

(a) Engage the 16 claws and 8 guides to install the No. 1 defroster nozzle garnish .

### **3. INSTALL INSTRUMENT PANEL REGISTER BEZEL (for LH Side)**

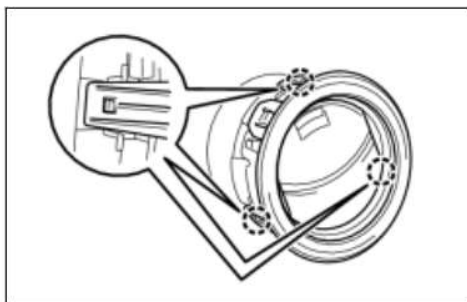


(a) Engage the 3 claws to install the instrument panel register bezel.

#### 4. INSTALL INSTRUMENT PANEL REGISTER BEZEL (for RH Side)

##### **HINT:**

Use the same procedure as for the LH side.

#### 5. INSTALL NO. 2 INSTRUMENT PANEL REGISTER SUB-ASSEMBLY

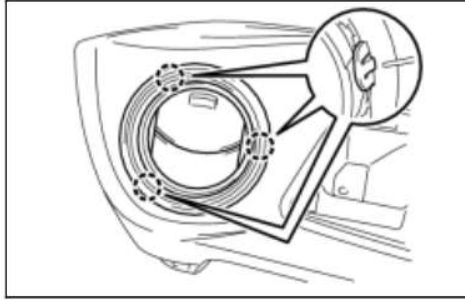


(a) Engage the 3 claws to install the No. 2 instrument panel register sub-assembly.

#### 6. INSTALL NO. 1 INSTRUMENT PANEL REGISTER SUB-ASSEMBLY

##### **HINT:**

Use the same procedure as for the No. 2 instrument panel register sub-assembly.


#### 7. INSTALL CENTER INSTRUMENT PANEL REGISTER ASSEMBLY

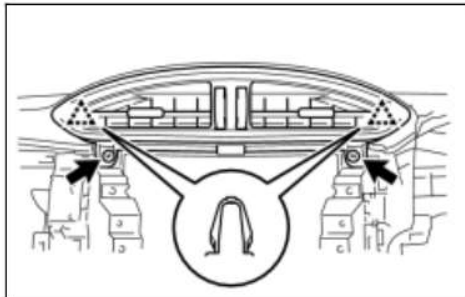

(a) Engage the 2 clips.

(b) Install the center instrument panel register assembly with the 2 screws.

#### 8. INSTALL NO. 3 DEFROSTER NOZZLE GARNISH

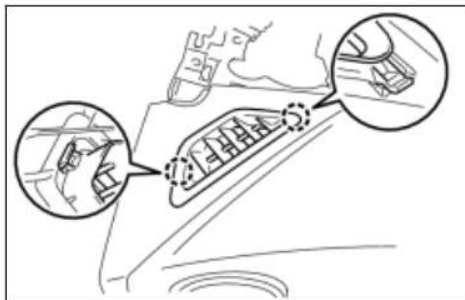


(a) Engage the 2 claws to install the No. 3 defroster nozzle garnish.

## 9. INSTALL NO. 2 DEFROSTER NOZZLE GARNISH

### HINT:

Use the same procedure as for the No. 3 defroster nozzle garnish.

## 10. INSTALL NO. 2 SIDE DEFROSTER NOZZLE DUCT

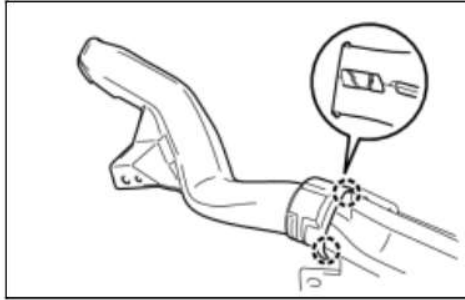


(a) Engage the 2 claws to install the No. 2 side defroster nozzle duct.

## 11. INSTALL NO. 1 SIDE DEFROSTER NOZZLE DUCT

### HINT:

Use the same procedure as for the No. 2 side defroster nozzle duct.


## 12. INSTALL DEFROSTER NOZZLE ASSEMBLY

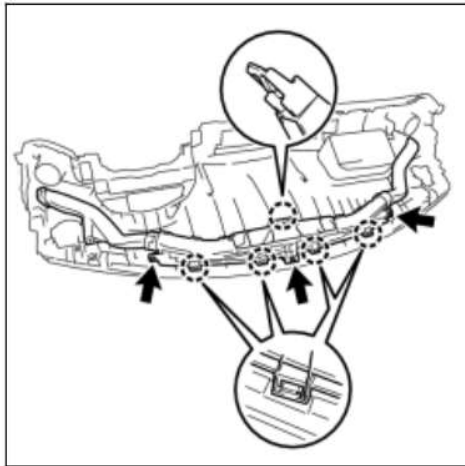

(a) Engage the 5 claws.

(b) Install the defroster nozzle assembly, No. 2 side defroster nozzle duct, and No. 1 side defroster nozzle duct as a single unit with the screws.

## 13. INSTALL NO. 2 HEATER TO REGISTER DUCT

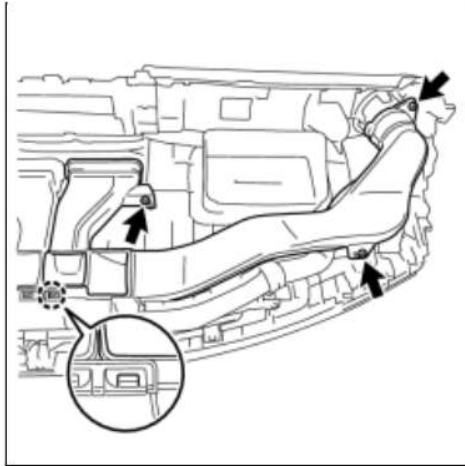

(a) Engage the claw.

(b) Install the No. 2 heater to register duct with the 3 screws.

#### 14. INSTALL NO. 1 HEATER TO REGISTER DUCT

##### **HINT:**


Use the same procedure as for the No. 2 heater to register duct.



|                                                                                   |                    |                                |
|-----------------------------------------------------------------------------------|--------------------|--------------------------------|
| <b>Last Modified:</b> 3-27-2012                                                   | <b>6.4 A</b>       | <b>From:</b> 201203            |
| <b>Model Year:</b> 2013                                                           | <b>Model:</b> FR-S | <b>Doc ID:</b> RM000003O1000MX |
| <b>Title:</b> INTERIOR PANELS / TRIM: UPPER INSTRUMENT PANEL: REMOVAL (2013 FR-S) |                    |                                |

## REMOVAL

### 1. TABLE OF BOLT, SCREW AND NUT

| Code | Shape                                                                                                                                                              | Code | Shape                                                                                                                                                            | Code | Shape                                                                                                                                                              |
|------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <A>  |  <p><math>\varnothing=11.5</math><br/>(0.453 in)<br/>Length=16<br/>(0.630 in)</p> | <B>  |  <p><math>\varnothing=10</math><br/>(0.394 in)<br/>Length=25<br/>(0.984 in)</p> | <C>  |  <p><math>\varnothing=10</math><br/>(0.394 in)<br/>Length=16<br/>(0.630 in)</p> |

(a) All bolts, screws and nuts relevant to installing and removing the instrument panel are shown along with their alphabetical code in the table.

### 2. PRECAUTION

#### CAUTION:

Be sure to read Precaution thoroughly before servicing.

INFO

#### NOTICE:

After turning the ignition switch off, waiting time may be required before disconnecting the cable from the negative (-) battery terminal. Therefore, make sure to read the disconnecting the cable from the negative (-) battery terminal notices before proceeding with work.

INFO

### 3. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

#### CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.


#### NOTICE:

- The power window system utilizes a mechanism that the door glass moves down slightly when the door is opened, and that the glass moves up when closing the door in order to prevent the door molding from being damaged. When the battery negative (-) terminal needs to be disconnected for servicing, fully open the driver and passenger door glasses in advance.

### 4. REMOVE LOWER INSTRUMENT PANEL SUB-ASSEMBLY

INFO


### 5. REMOVE NO. 2 INSTRUMENT PANEL SPEAKER PANEL SUB-ASSEMBLY

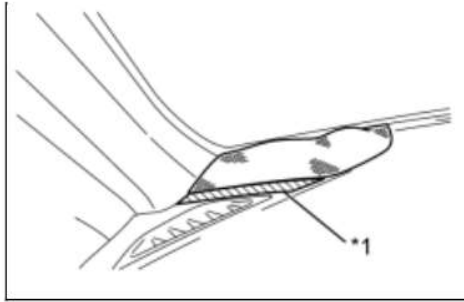

(a) Apply protective tape to the area shown in the illustration.

**Text in Illustration**

|    |                 |
|----|-----------------|
| *1 | Protective Tape |
|----|-----------------|

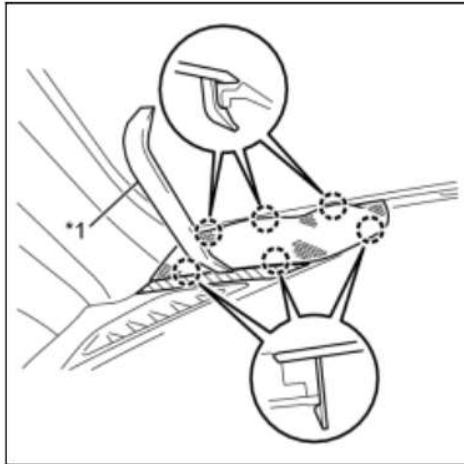

(b) Using a moulding remover, disengage the 6 claws and remove the No. 2 instrument panel speaker panel sub-assembly.

**Text in Illustration**

|    |                  |
|----|------------------|
| *1 | Moulding Remover |
|----|------------------|

(c) Disconnect the connector.

**6. REMOVE FRONT NO. 2 SPEAKER ASSEMBLY (for LH Side)** INFO

**7. REMOVE FRONT NO. 3 SPEAKER ASSEMBLY (for LH Side)** INFO

**8. REMOVE NO. 1 INSTRUMENT PANEL SPEAKER PANEL SUB-ASSEMBLY**

**HINT:**

Use the same procedure described for the LH side.

**9. REMOVE FRONT NO. 2 SPEAKER ASSEMBLY (for RH Side)** INFO


**10. REMOVE FRONT NO. 3 SPEAKER ASSEMBLY (for RH Side)** INFO

**11. REMOVE FRONT PILLAR GARNISH LH**

(a) Pull the upper part of the front pillar garnish LH in the direction of the arrow (1), and disengage the 2 clips and the front pillar garnish clip.

**Text in Illustration**




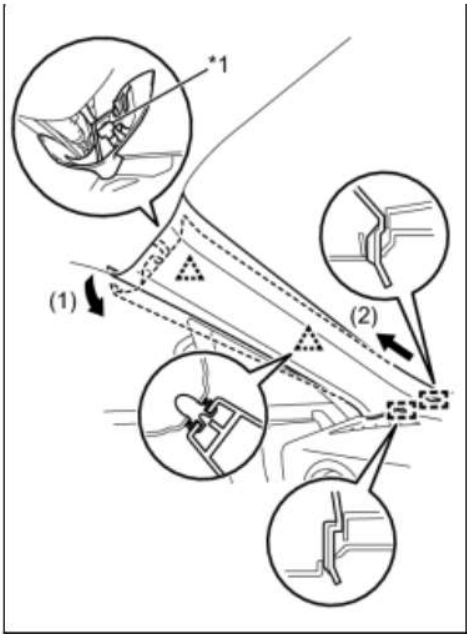

|    |                           |
|----|---------------------------|
| *1 | Front Pillar Garnish Clip |
|----|---------------------------|

**HINT:**  
The front pillar garnish clip should be remained on the front pillar garnish LH.

(b) Pull the front pillar garnish LH in the direction of the arrow (2) and disengage the 2 guides.

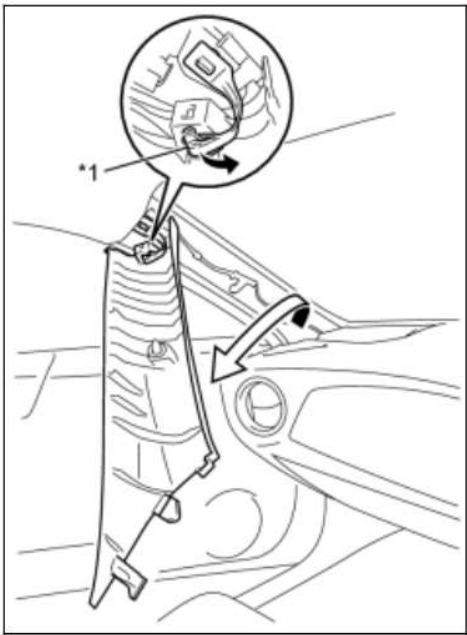

(c) Turn the front pillar garnish LH in the direction of the arrow.

**NOTICE:**  
While turning, be careful not to damage the curtain shield airbag.


(d) Disengage the tip of the front pillar garnish clip and remove the front pillar garnish LH.

**NOTICE:**

- Do not use any tools to disengage the tip of the front pillar garnish clip.
- Be careful not to damage the front pillar garnish clip.

**Text in Illustration**

|    |                           |
|----|---------------------------|
| *1 | front pillar garnish clip |
|----|---------------------------|

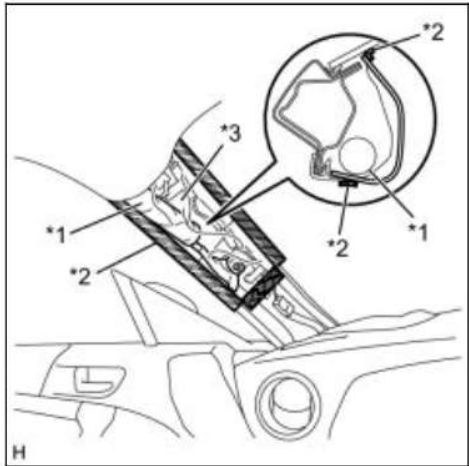

(e) Protect the curtain shield airbag assembly (w/curtain shield airbag).

**Text in Illustration**

|    |                                |
|----|--------------------------------|
| *1 | Curtain Shield Airbag Assembly |
| *2 | Adhesive Tape                  |
| *3 | Protective Cover               |

(f) Cover the airbag with a piece of cloth or nylon and secure the edges of the cover with tape as shown in the illustration.

**NOTICE:**

Cover the curtain shield airbag with a protective cover as soon as the front pillar garnish LH is removed.


**12. REMOVE FRONT PILLAR GARNISH RH**

**HINT:**

Use the same procedure described for the LH side.


**13. REMOVE COMBINATION METER ASSEMBLY** INFO

**14. REMOVE INSTRUMENT PANEL ORNAMENT**

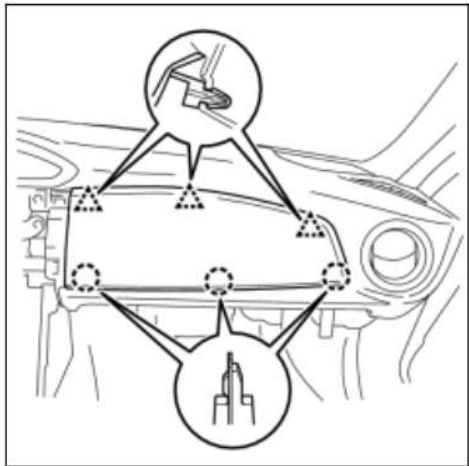

(a) Disengage the 3 clips and 3 claws to remove the instrument panel ornament.

**15. REMOVE INSTRUMENT PANEL PASSENGER AIRBAG ASSEMBLY**

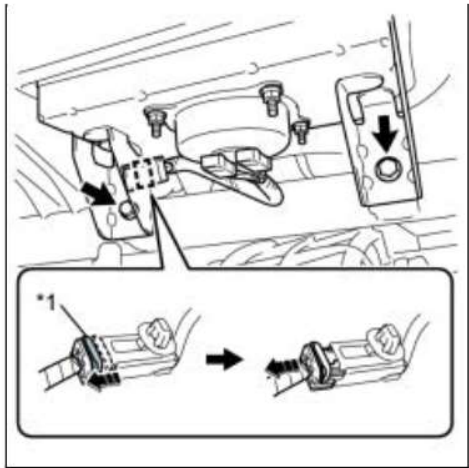

(a) Disengage the clamp.

(b) Slide the slider and disconnect the passenger airbag connector.

**Text in Illustration**

|    |        |
|----|--------|
| *1 | Slider |
|----|--------|

(c) Remove the 2 bolts and the instrument panel passenger airbag assembly.

**16. REMOVE INSTRUMENT PANEL SUB-ASSEMBLY**

(a) Remove the 2 bolts and 7 screws to remove the instrument panel sub-assembly.

