

Wiring Diagram Type 928 S Model 87

PAGE 1	LAMPS ROW
PAGE 2	LAMPS USA
PAGE 3	BODY
PAGE 4	INSTRUMENTS AND INDICATORS
PAGE 5	VENTILATION, HEATING, AC
PAGE 6	MIRROR, SEAT ADJUSTMENT
PAGE 7	SEAT- AND MIRROR MEMORY
PAGE 8	RADIO
PAGE 9	ABS, ALARM SYSTEM, TRAILER COUPLING
PAGE 10	ENGINE COMPARTMENT, TEMPOSTAT
PAGE 11	CENTRAL ELECTRICAL SYSTEM

Wiring Diagram Type 928 S Model 87

The wiring diagram comprises **11** individual wiring diagrams.
They are subdivided into coordinate fields.

Each individual wiring diagram comprises a part of the central electrical system within a dash-dot frame.

This part of the central electrical system shows all the lines and relays required for individual wiring diagram.

The ground-connecting points are designated with "MP" and their location is shown in a vehicle diagram.

The 10-pole plugs on central electrical system are clipped together from 3 parts.

Part 1, with the cast-on fastening pin, is the "initial element".

Part 2 is the "module element".

Both parts are identified by the digits 1 . . . 5.

Part 3 is a "coding element".


The designations of the plug connections in wiring diagram for central electrical system refer e. g. from A 11 . . . 15 to the "initial element", from A 21 . . . 26 to module element.

Wiring Diagram Type 928 S
Model 87 page 1

LAMPS ROW


Wiring Diagram Type 928S Model 8/ page 1

LAMPS ROW

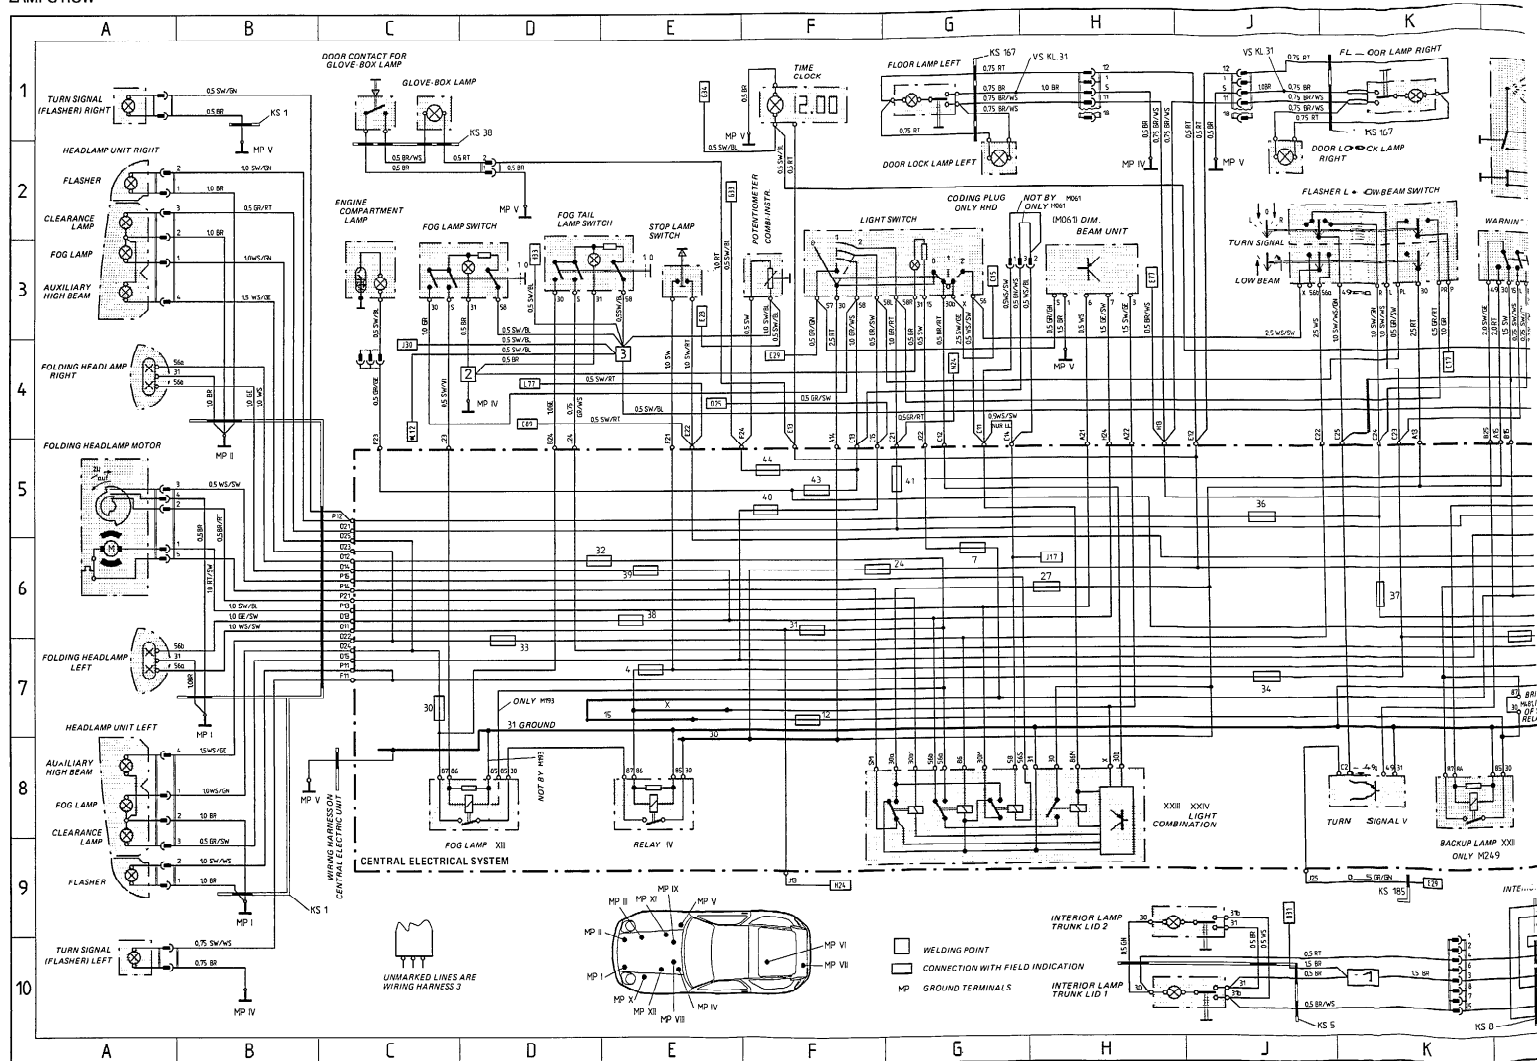

Printed in Germany - XIV, 1986

SW - BLACK WS - WHITE RT - RED GN - GREEN GE - YELLOW GR - GREY BR - BROWN BL - BLUE LI - VIOLET

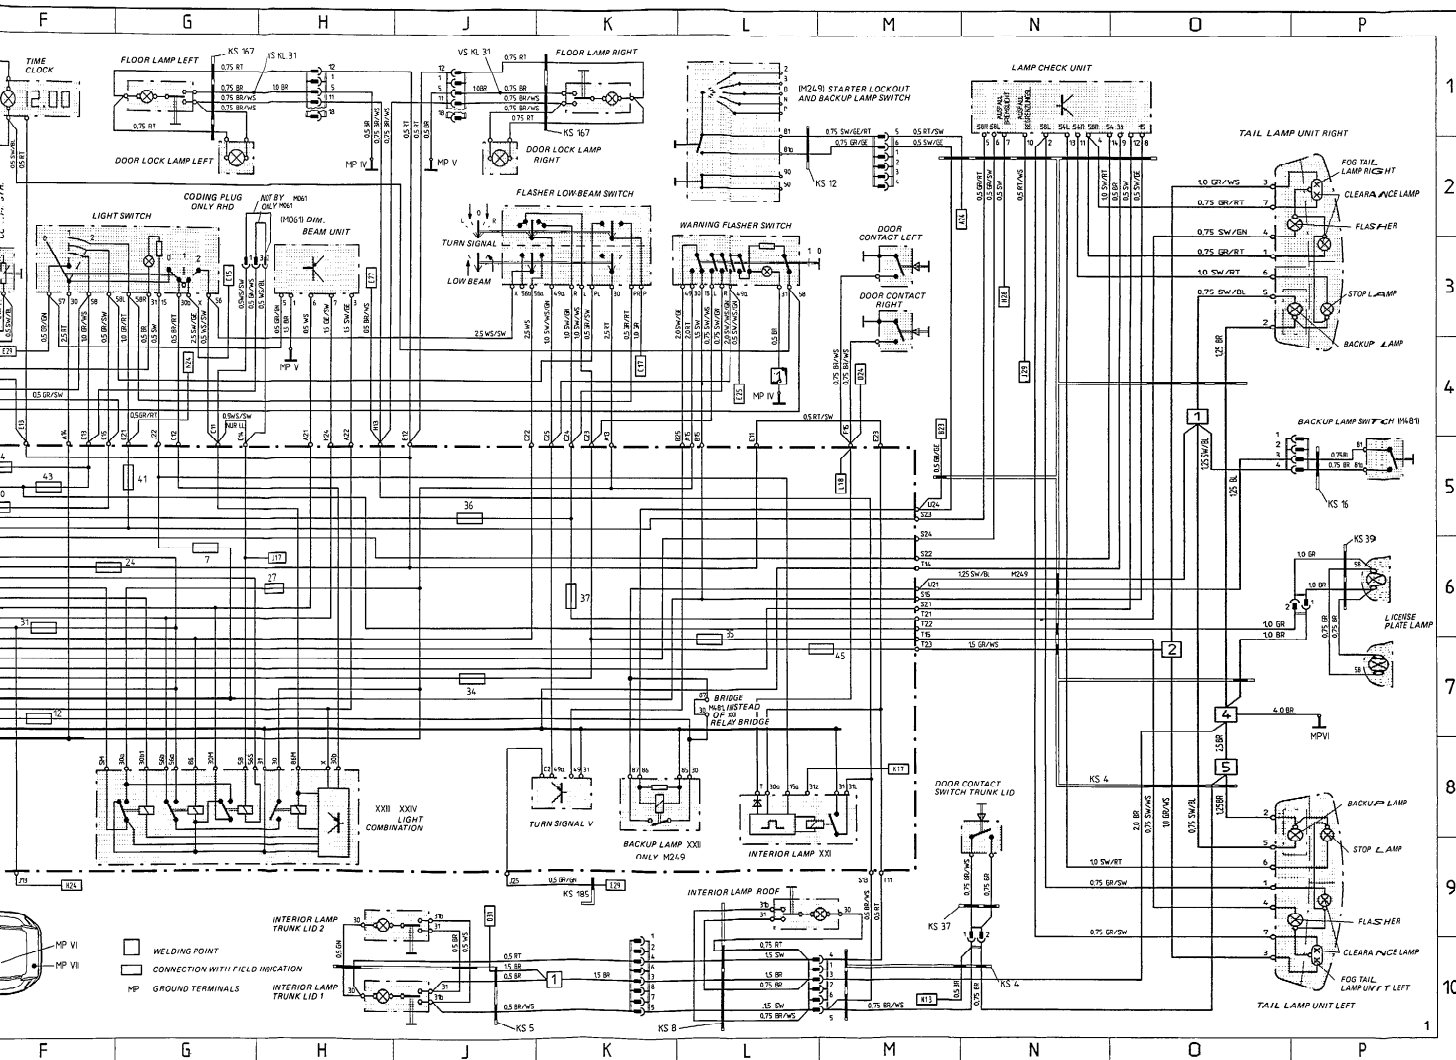


Wiring Diagram Type 928 S
Model 87 page 2

LAMPS USA


Wiring Diagram Type 928S Model 87 page 2

LAMPS USA

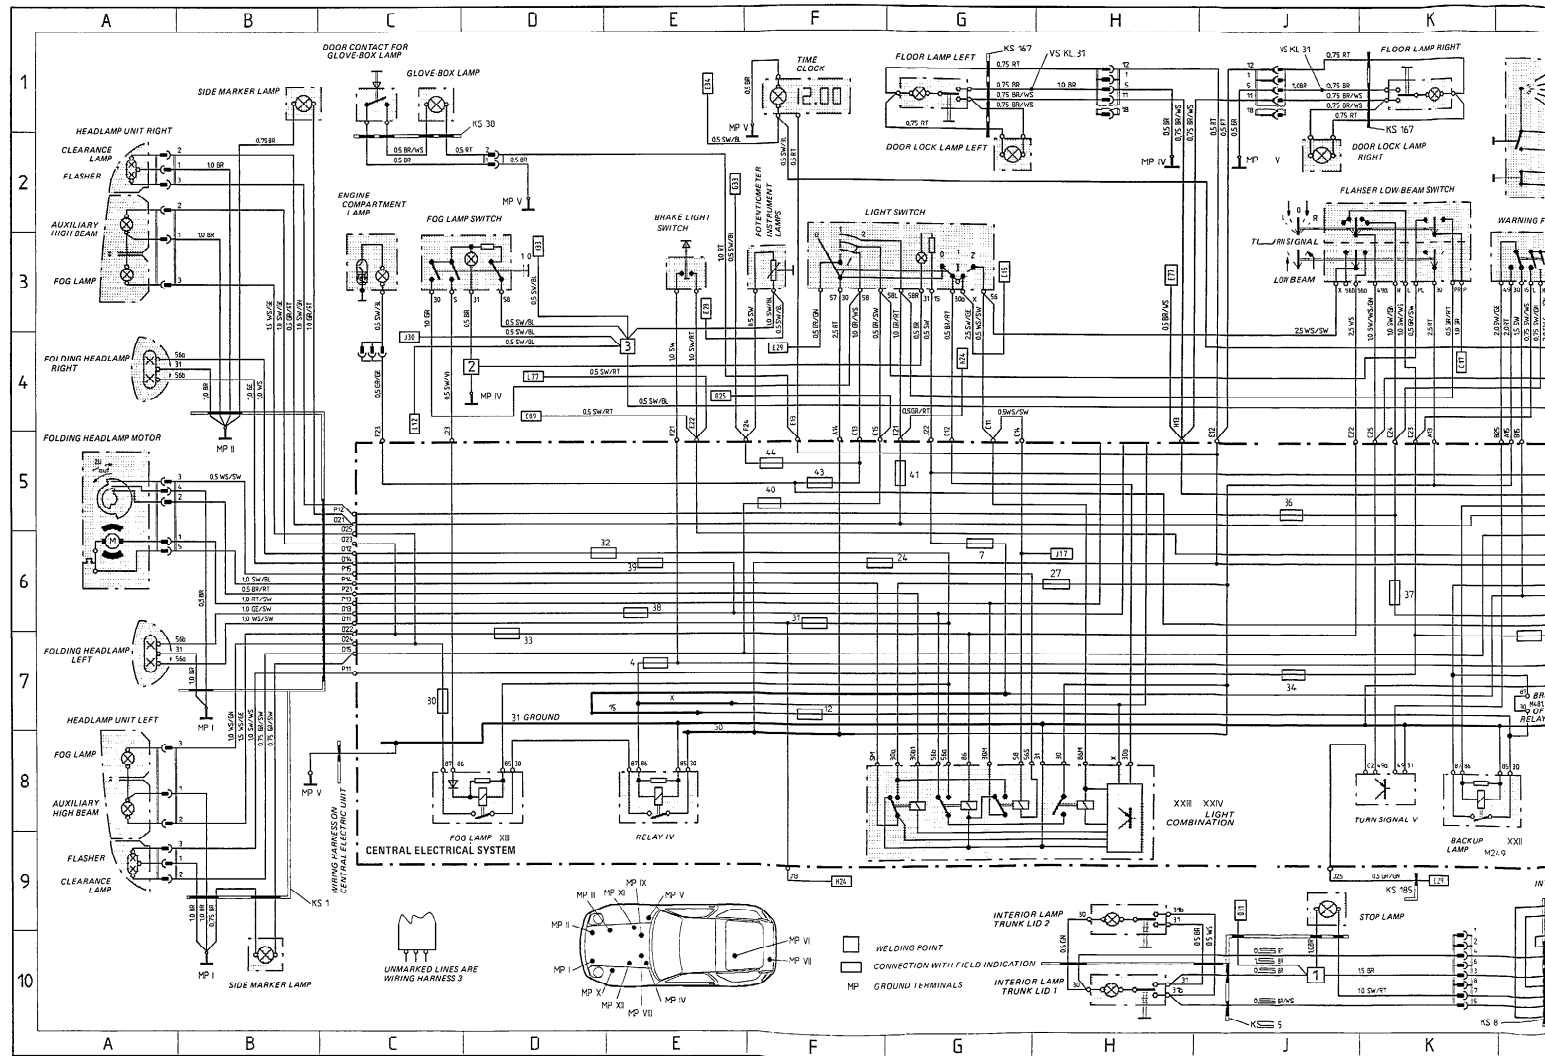

Printed in Germany - XIV, 1986

SW - BLACK WS - WHITE RT - RED GN - GREEN GE - YELLOW GH - GREY BR - BROWN BL - BLUE LI - VIOLET

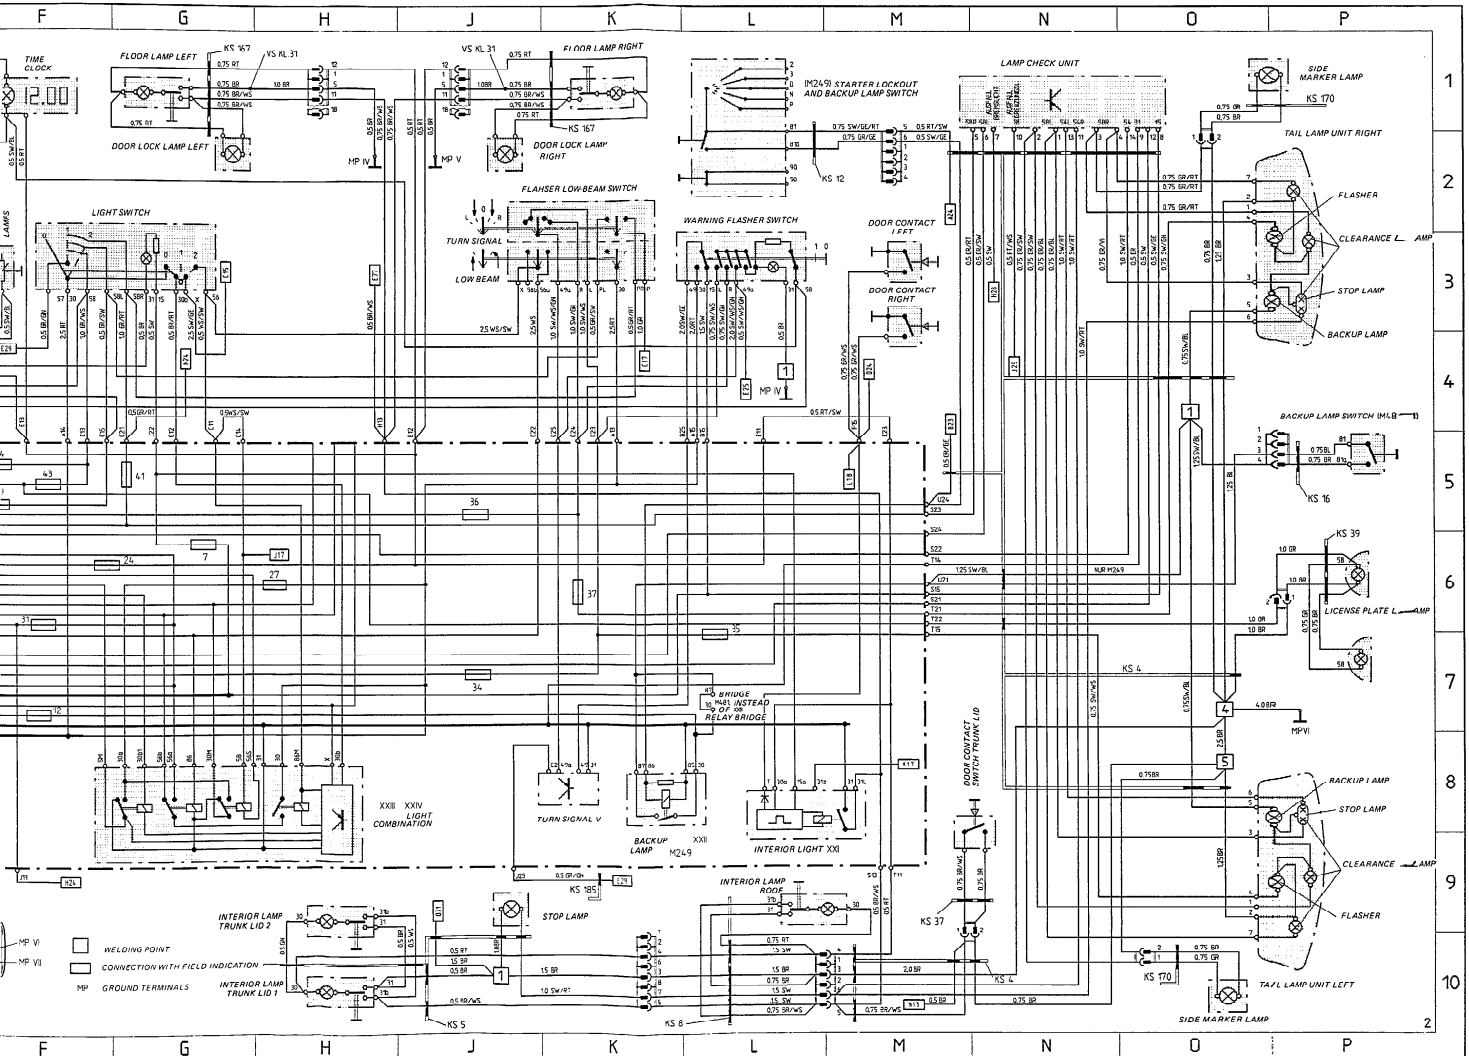


Current Flow Diagram 97-259

Wiring Diagram Type 928 S
Model 87 page 3

BODY


Wiring Diagram Type 928 S Model 8/ page 3

BODY

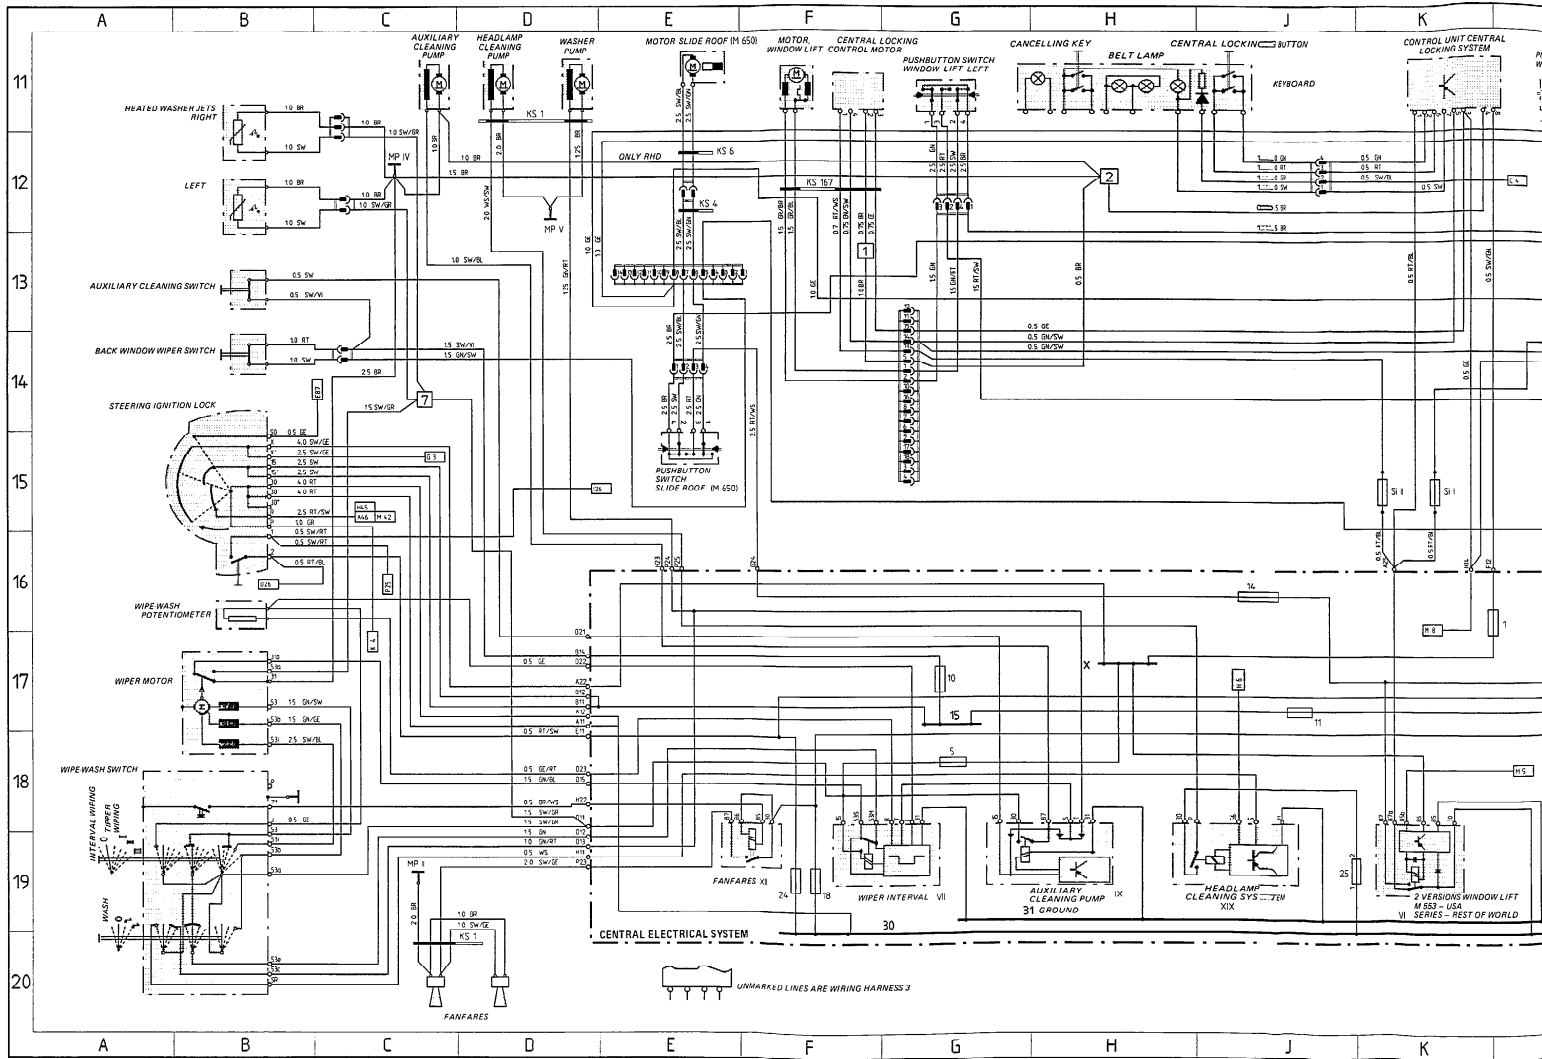

Printed in Germany - XIV, 1986

SW - BLACK WS - WHITE RT - RED GN - GREEN CE - YELLOW GR - GREY BR - BROWN BL - BLUE LI - VIOLET




Wiring Diagram Type 928 S Model 87 page 4

INSTRUMENTS AND INDICATORS


Wiring Diagram Type 928 S Model 87 page 4

INSTRUMENTS AND INDICATORS

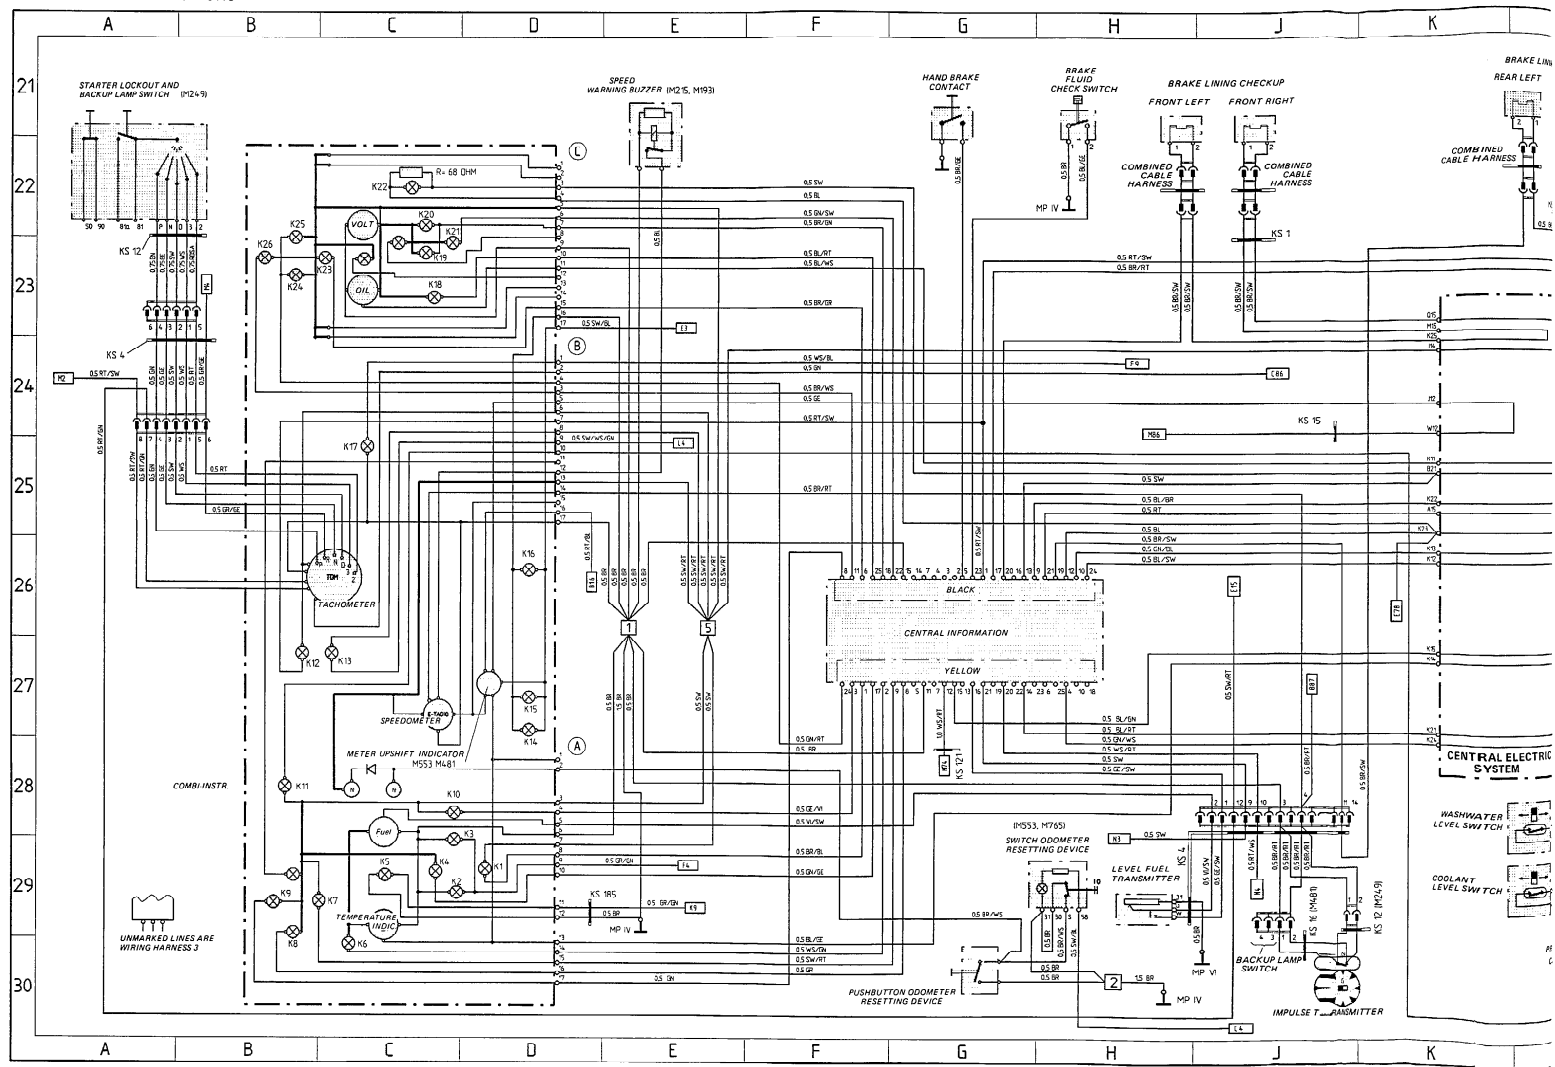

Printed in Germany - XIV, 1986

SW - BLACK WS - WHITE RT - RED GN - GREEN OE - YELLOW GR - GREY BR - BROWN BL - BLUE LI - VIOLET

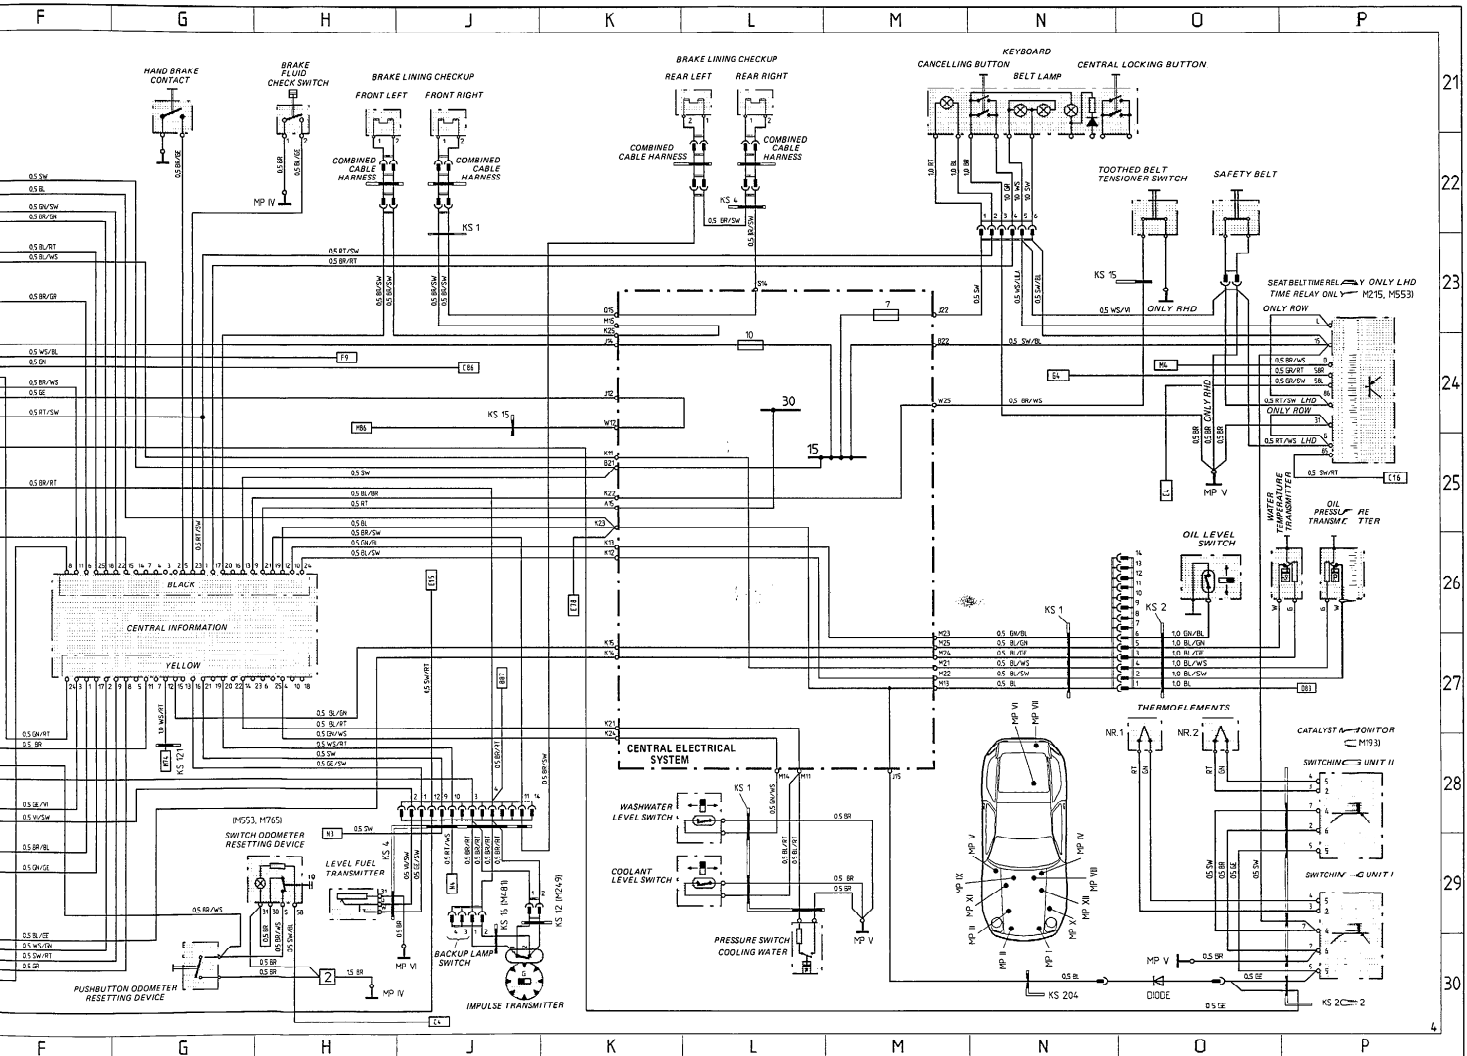


Wiring Diagram Type 928 S Model 87 page 5

VENTILATION, HEATING, AC


Wiring Diagram Type 928 S Model 87 page 5

VENTILATION, HEATING, AC

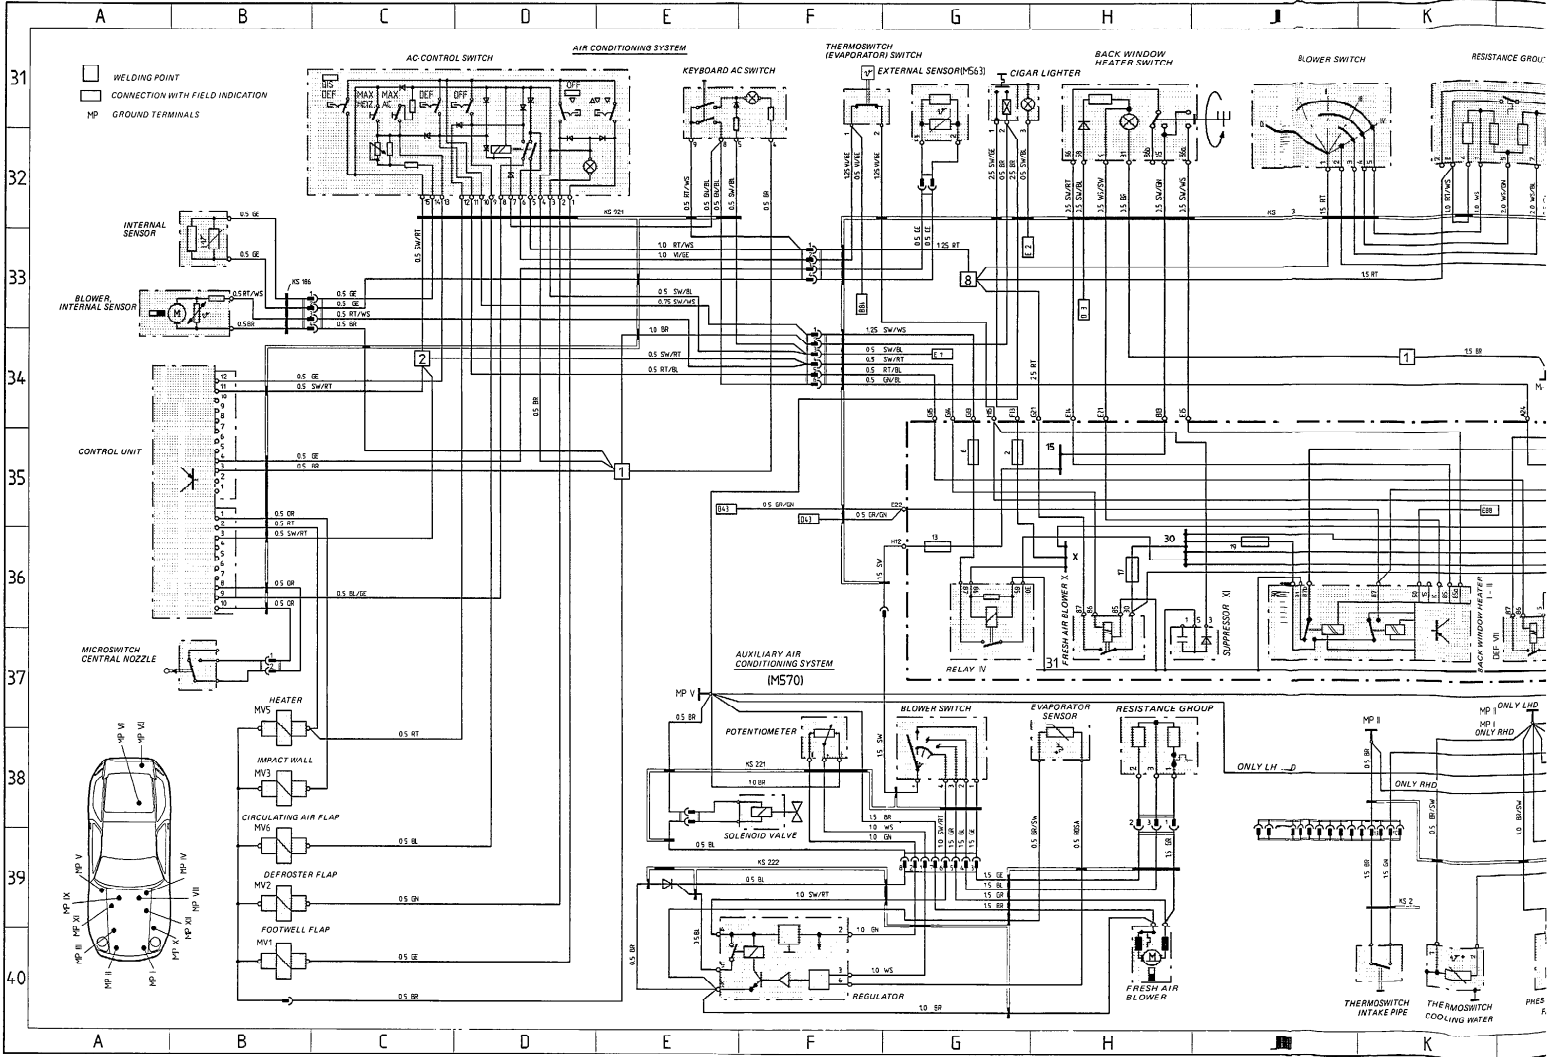

Printed in Germany - XIV, 1986

SW - BLACK WS - WHITE RT - RED GN - GREEN GE - YELLOW GR - GREY BR - BROWN BL - BLUE LI - VIOLET

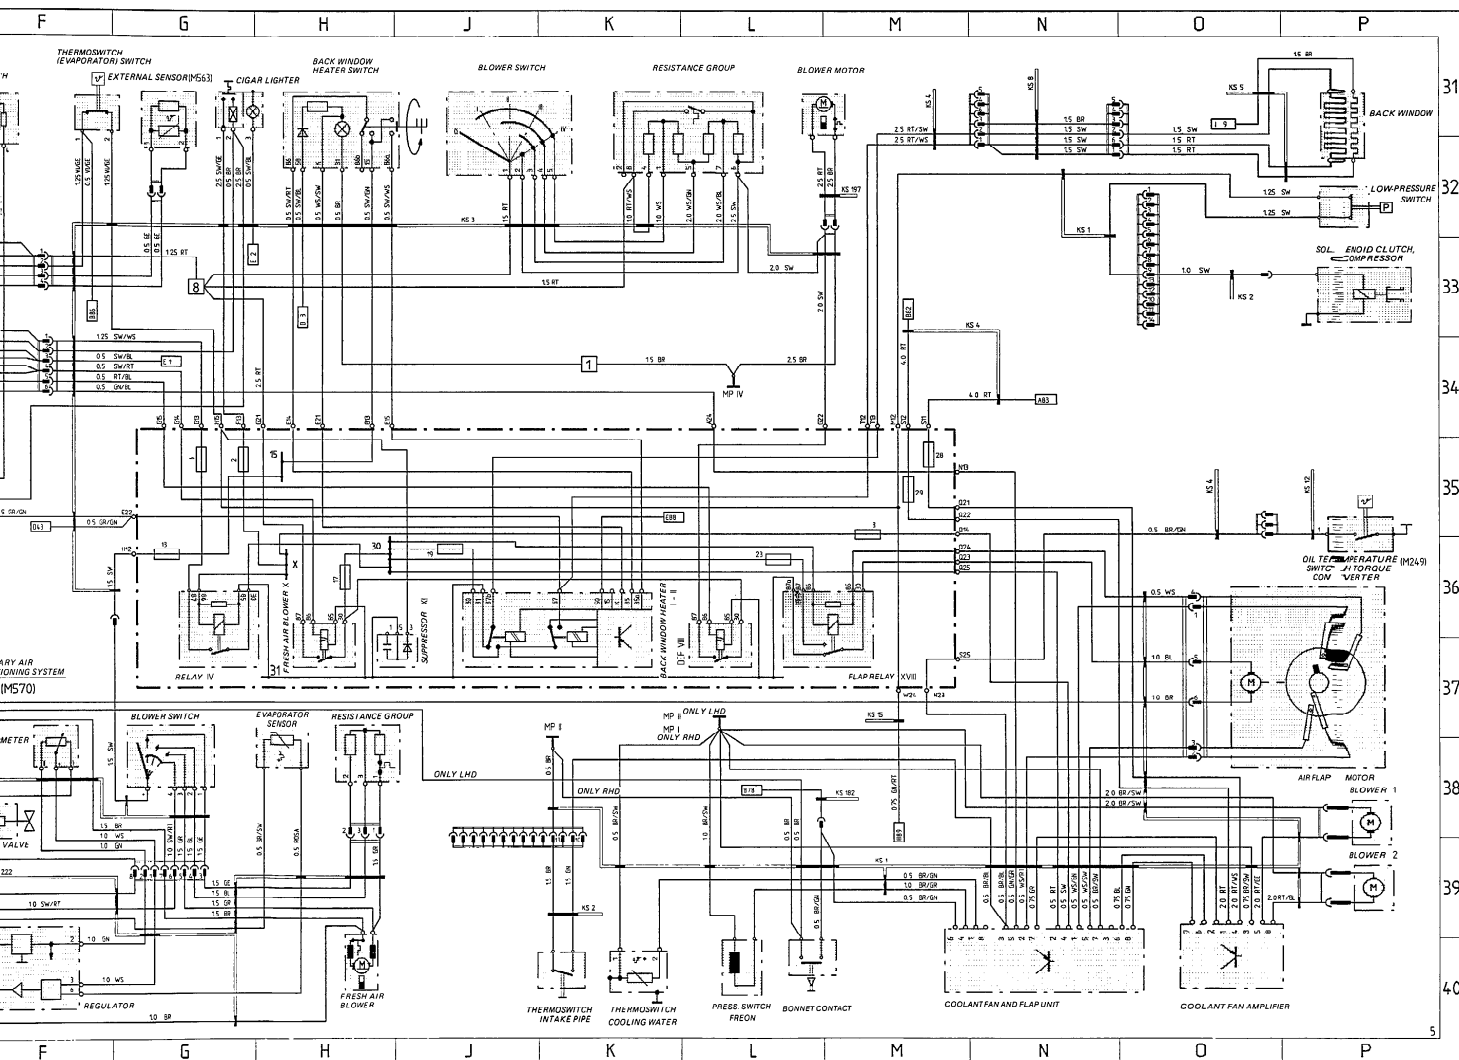

BLACK WS - WHITE RT - RED GN - GREEN GE - YELLOW GR - GREY BR - BROWN BL - BLUE LI - VIOLET

Current Flow Diagram 97-265


Wiring Diagram Type 928 S Model 87 page 6

MIRROR, SEAT ADJUSTMENT

MIRROR, SEAT ADJUSTMENT



SW - BLACK WS - WHITE RT - RED GN - GREEN GE - YELLOW GR - GREY BR - BROWN BL - BLUE LI - VIOLET

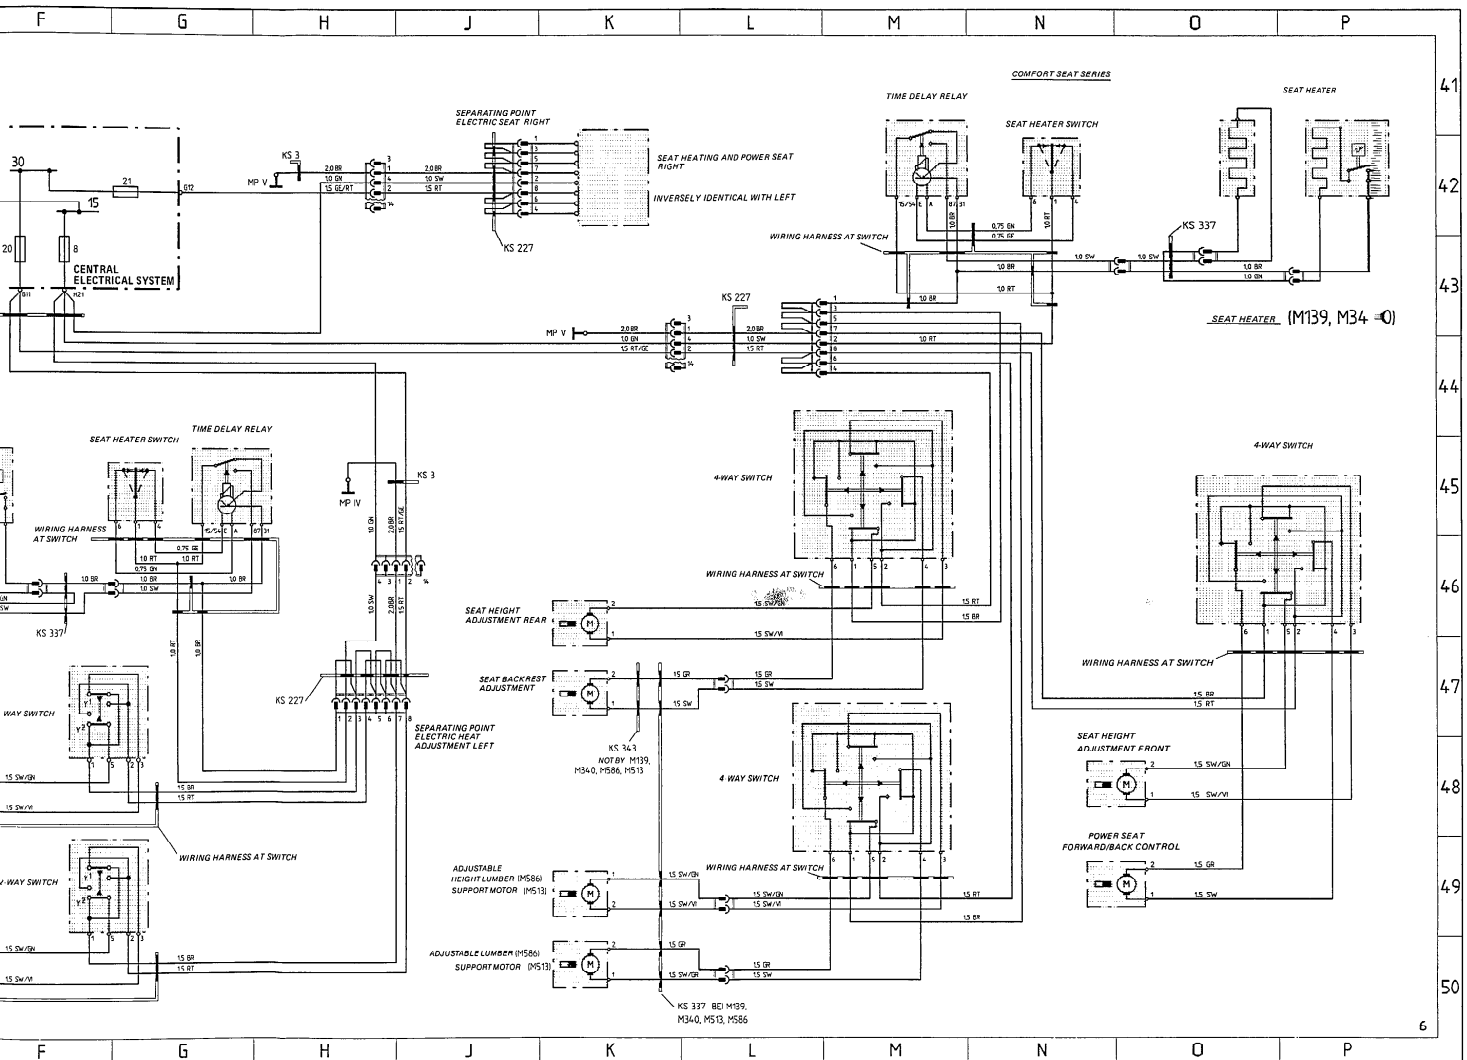


Wiring Diagram Type 928 S Model 87 page 7

SEAT- AND MIRROR MEMORY


Wiring Diagram Type 928 S Model 87 page 4

SEAT-AND MIRROR MEMORY

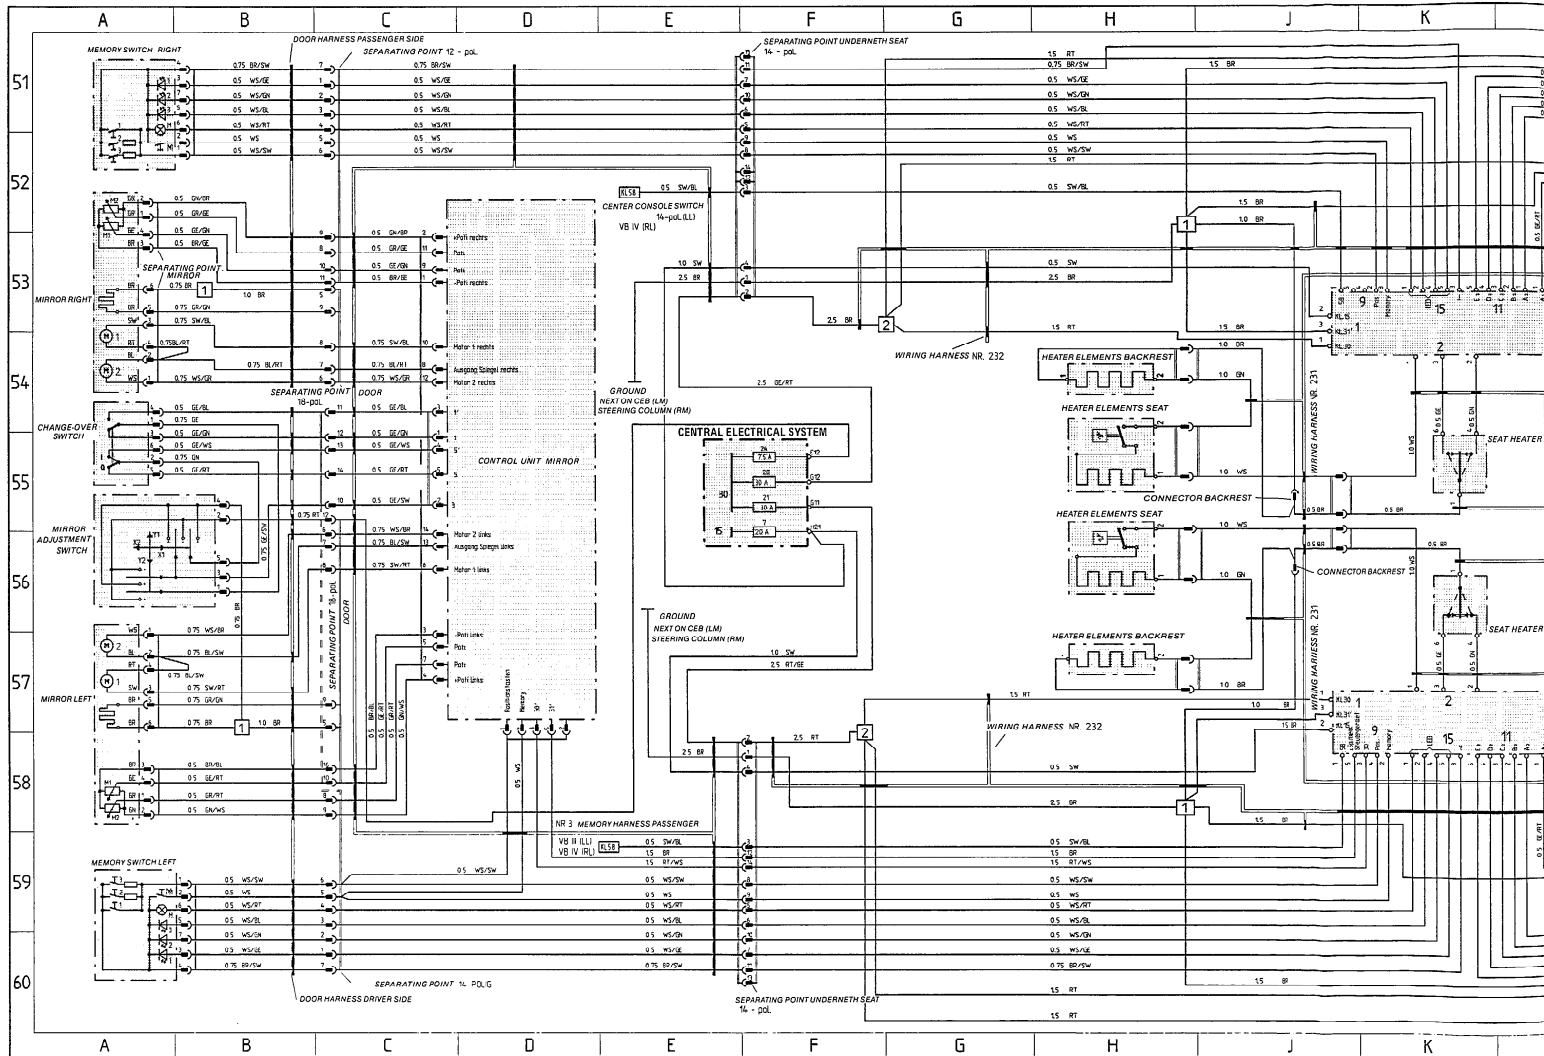

Printed in Germany - XIV, 1986

SW = BLACK WS = WHITE RT = RED GN = GREEN GE = YELLOW GR = GREY BR = BROWN BL = BLUE LI = VIOLET

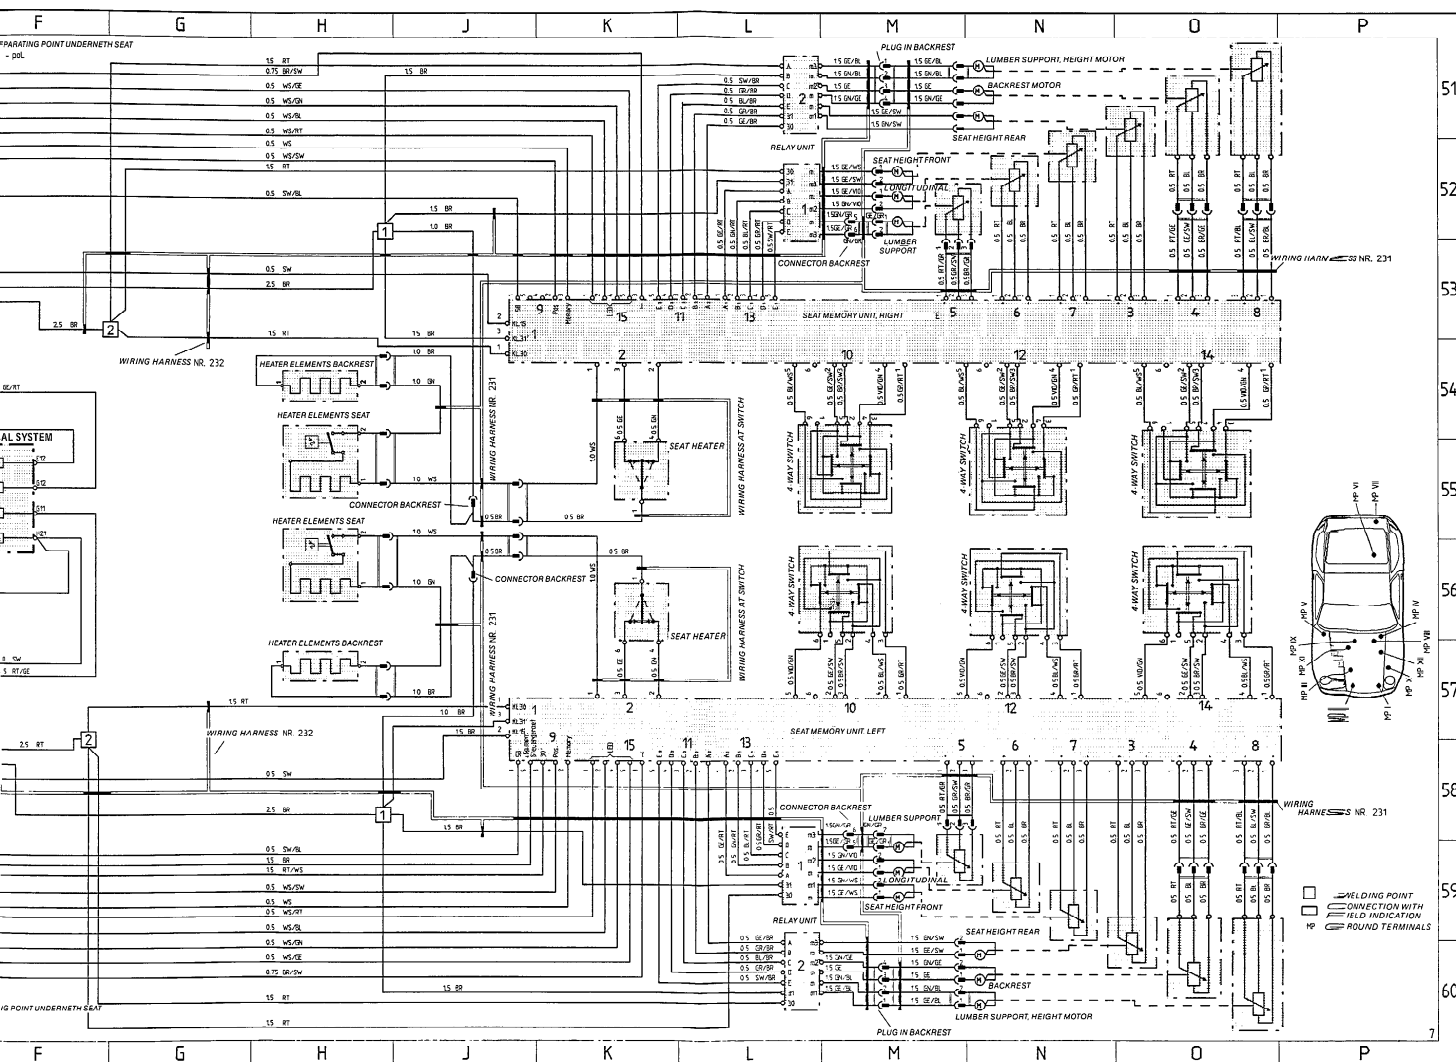


Wiring Diagram Type 928 S
Model 87 page 8

RADIO

RADIO




SW = BLACK WS = WHITE RT = RED GN = GREEN GE = YELLOW GR = GREY BR = BROWN BL = BLUE LI = VIOLET

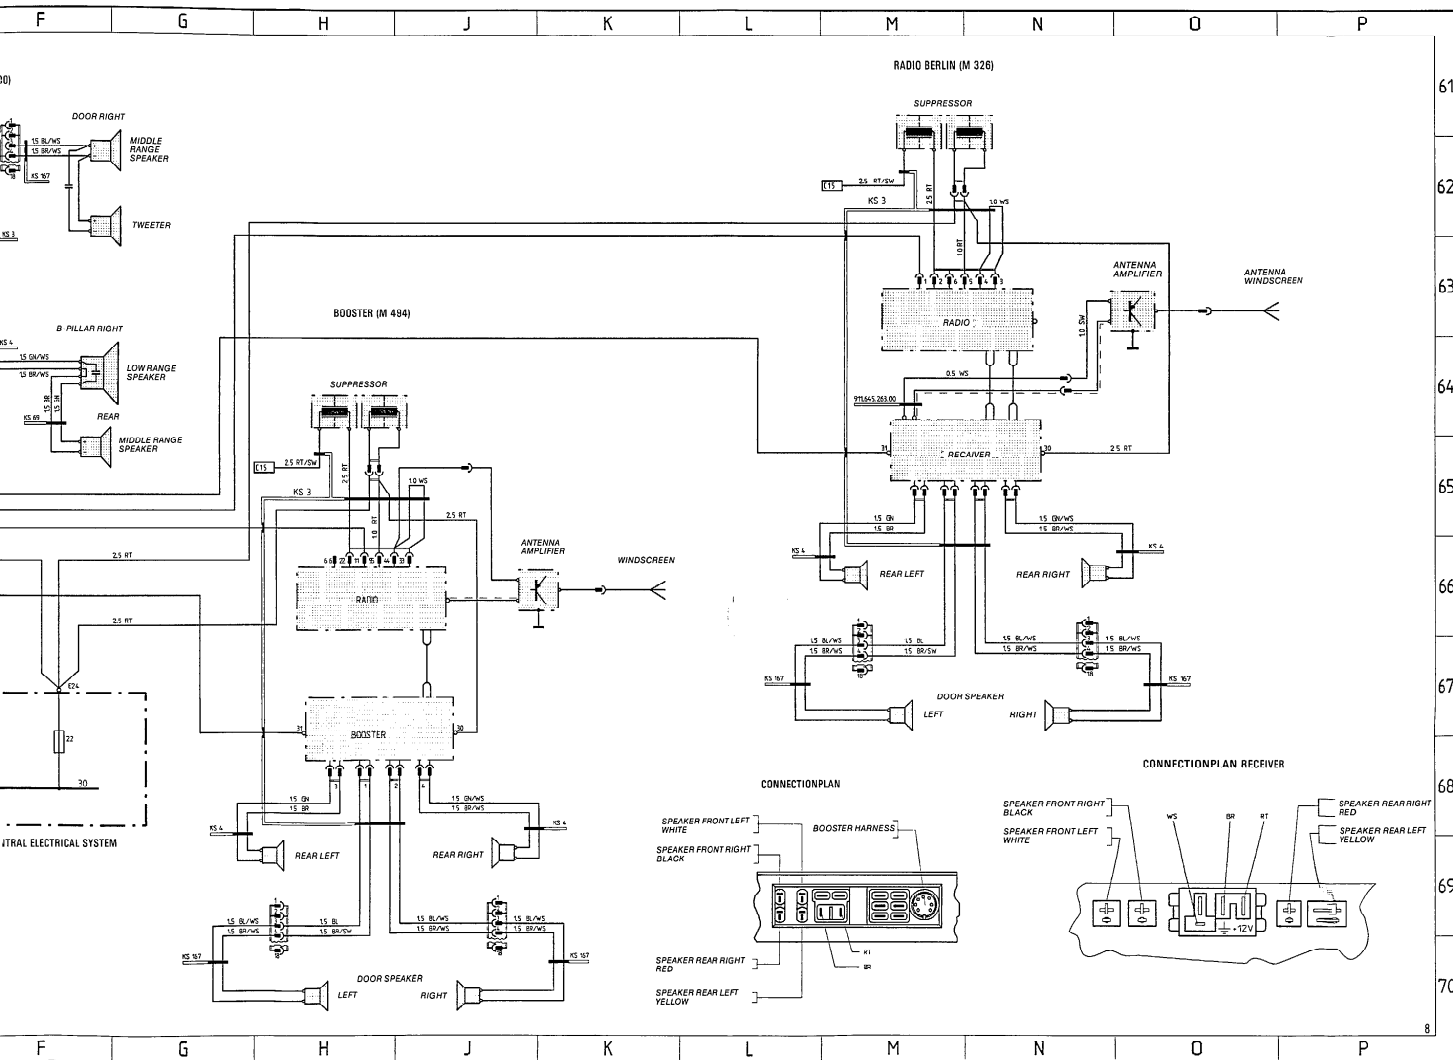


Wiring Diagram Type 928S Model 87 page 9

ABS, ALARM SYSTEM, TRAILER COUPLING

ABS, ALARM SYSTEM, TRAILER COUPLING



SW - BLACK WS - WHITE RT - RED GN - GREEN GE - YELLOW GR - GREY BR - BROWN BL - BLUE LI - VIOLET

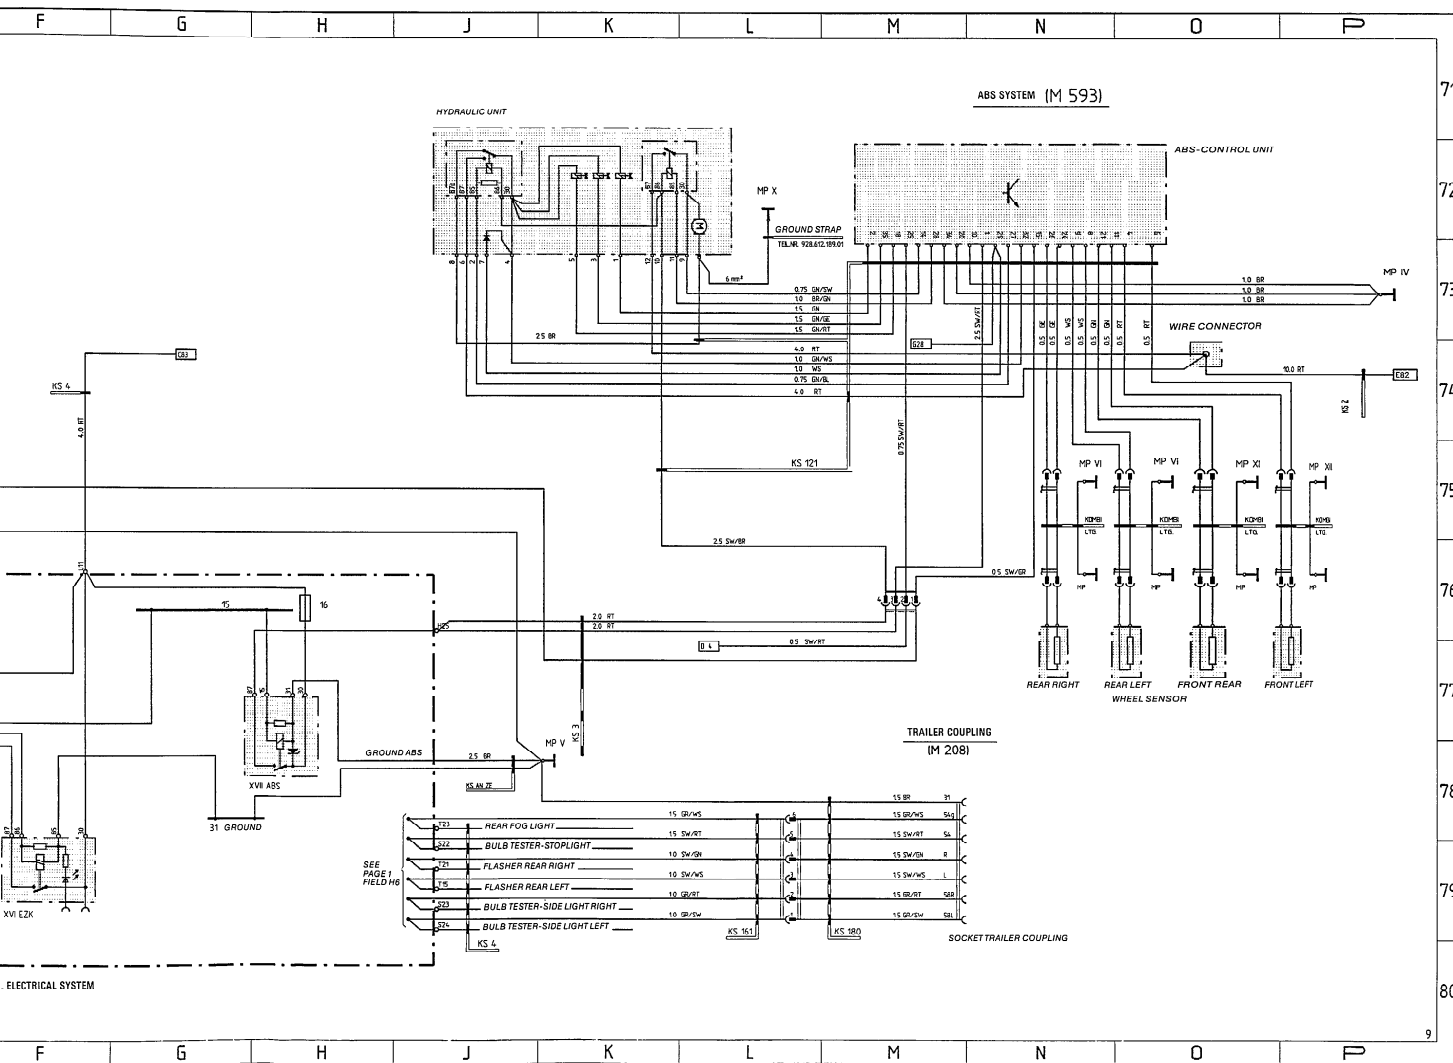


Wiring Diagram Type 928S Model 87 page 10

ENGINE COMPARTMENT, TEMPOSTAT


Wiring Diagram Type 928S Model 87 page 10

ENGINE COMPARTMENT, TEMPOSTAT

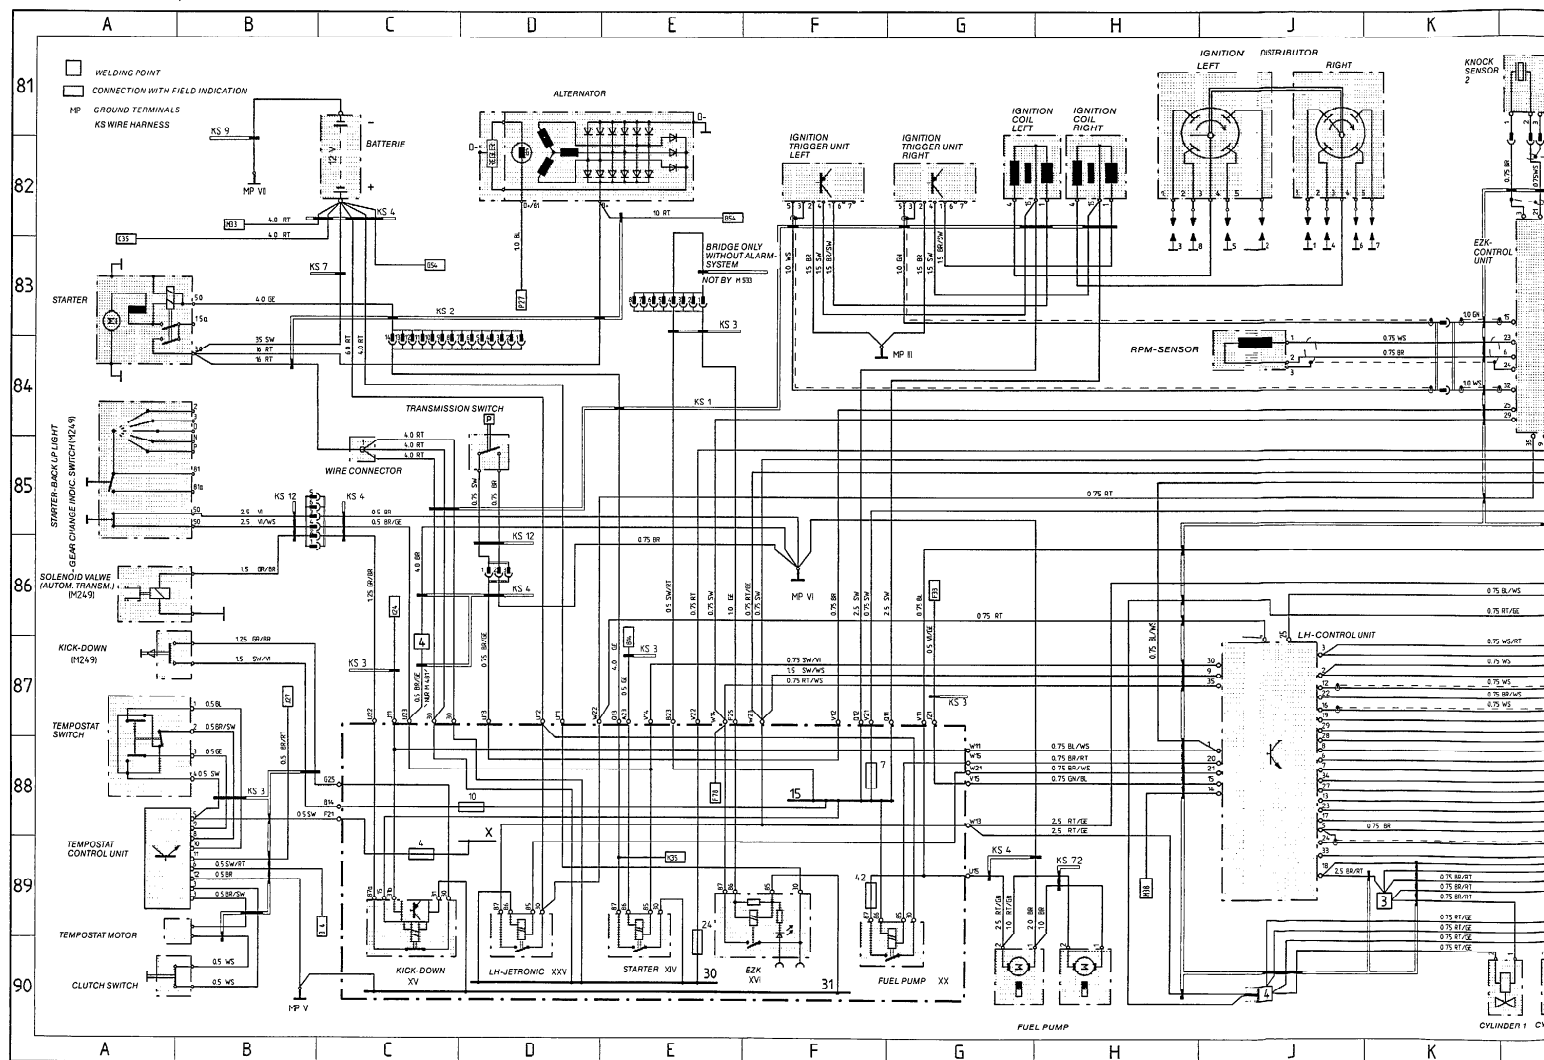

Printed in Germany - XIV 1986

SW - BLACK WG - WHITE RT - RED GN - GREEN GE - YELLOW GR - GREY BR - BROWN BL - BLUE LI - VIOLET

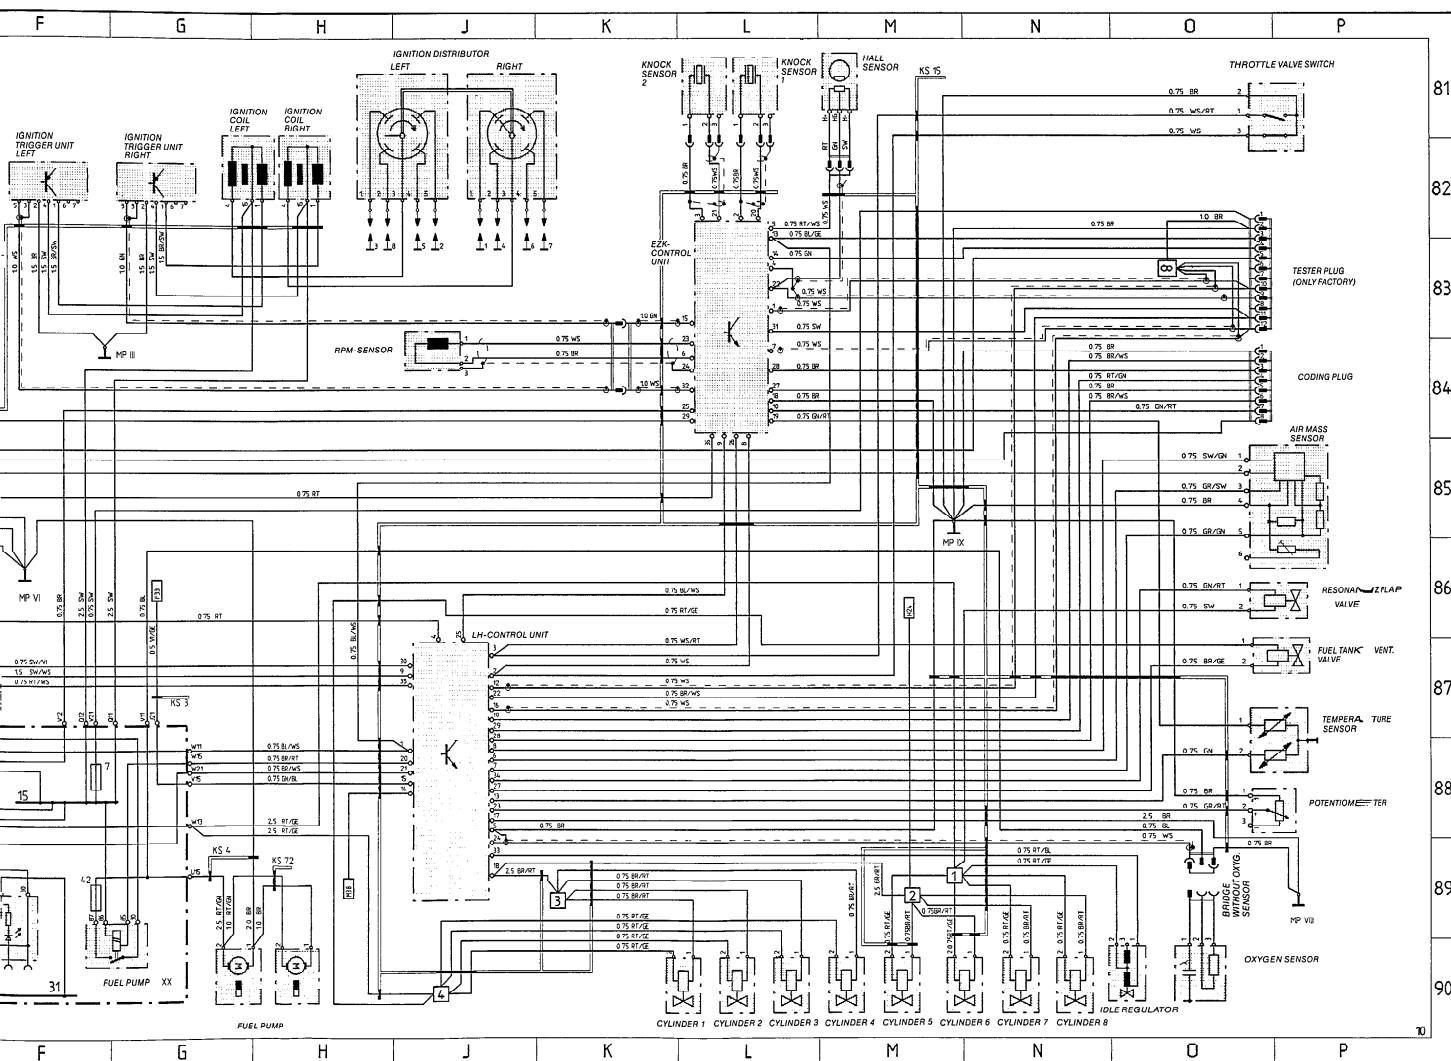

WS = WHITE RT = RED GN = GREEN GE = YELLOW GR = GREY BR = BROWN BL = BLUE LI = VIOLET


Current Flow Diagram 97-275

Wiring Diagram Type 928S Model 87 page 11

CENTRAL ELECTRICAL SYSTEM

Wiring Diagram Type 928S Model 87 page 11

CENTRAL ELECTRICAL SYSTEM

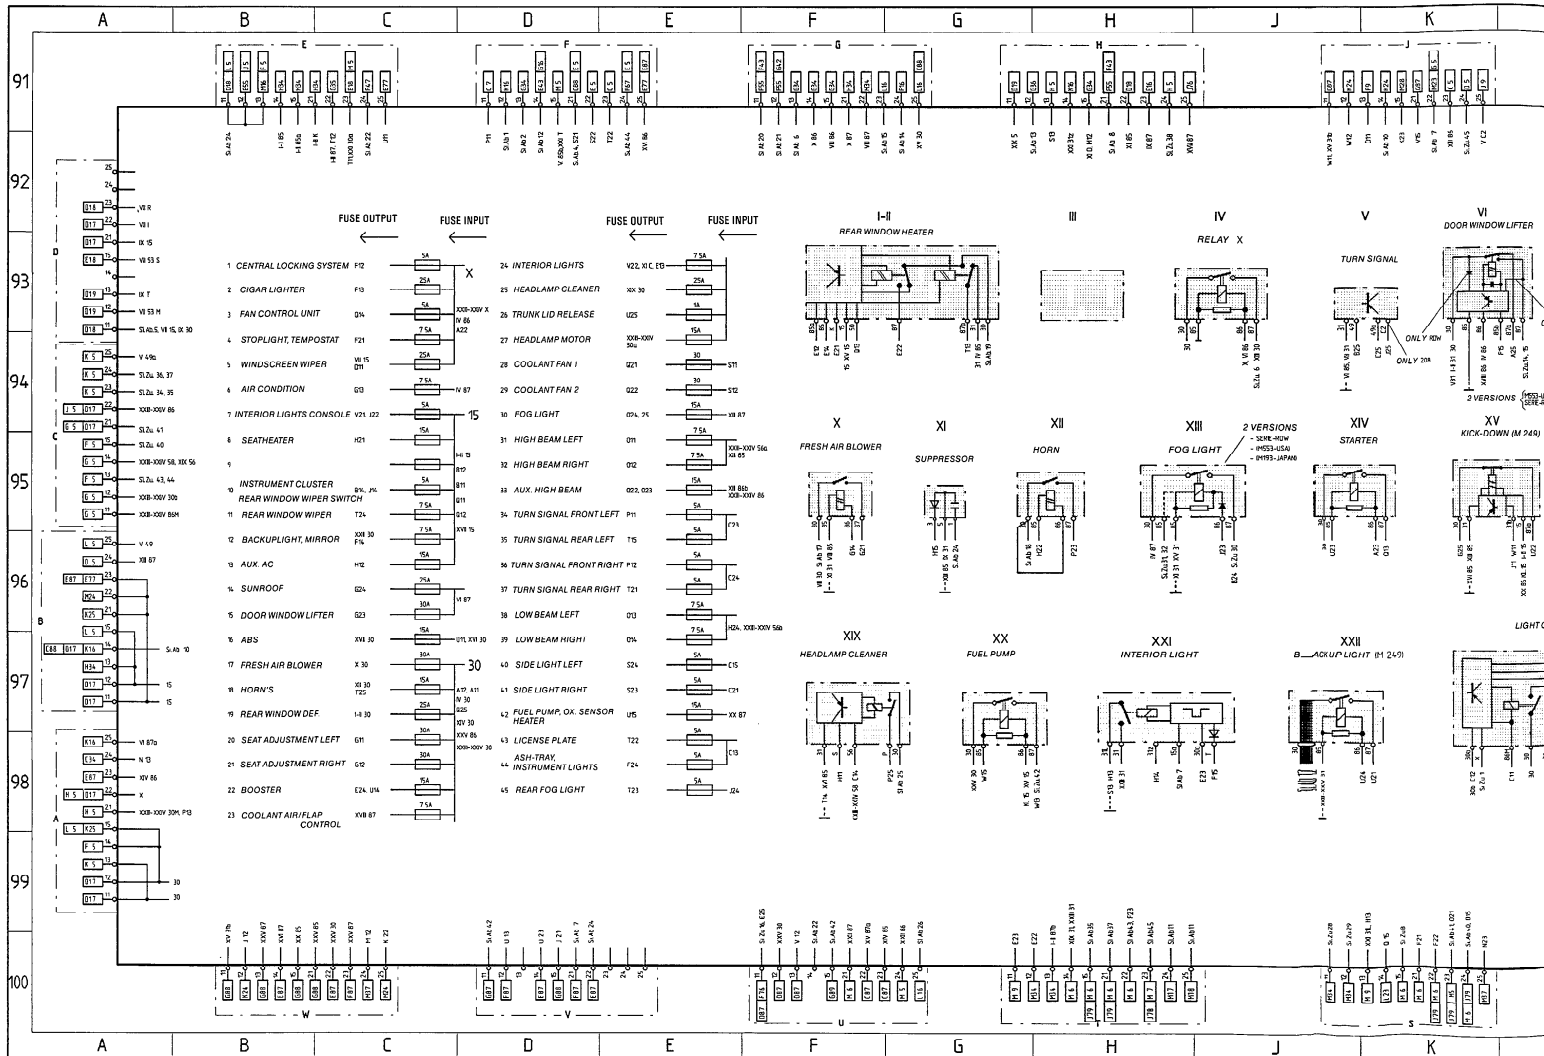

Printed in Germany - XIV, 1986

SW - BLACK WS - WHITE RT - RED ON - GREEN GE - YELLOW GR - GREY BR - BROWN BL - BLUE LI - VIOLET

