


Chevrolet Spark 2009 – 2015 (M300) fuse box diagram

Engine compartment fuse box

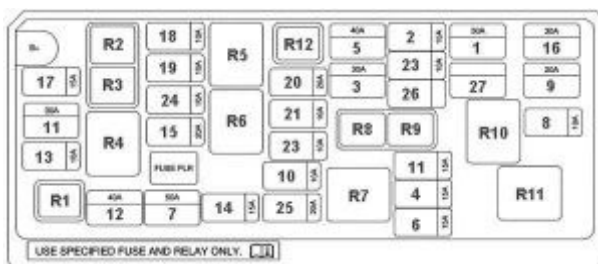

Chevrolet Spark – fuse box diagram – engine

compartment


No.	A	Description
F1UA	50	Rear Window Demister Relay, Fuse Block – Instrument Panel
F1UB	15	Hazard Lamps Switch
F2UA	30	Ignition Switch
F2UB	15	Engine Control Module, Ignition Coil 1, Ignition Coil 2, Ignition Coil 3, Ignition Coil 4, Ignition Coil Module, K103 LPG Control Module
F3UA	40	Ignition Switch
F3UB	15	Heated Oxygen Sensor, Exhaust Gas Recirculation Valve, Evaporative Emissions Purge Solenoid (EVAP) Valve, Heated Oxygen Sensor 1, Camshaft Position Sensor, Heated Oxygen Sensor 2
F4UA	50	Electronic Brake Control Module (EBCM)
F4UB	10	Engine Control Module, Transmission Control Module (MFL)
F5UA	20	Seat Heating Relay
F5UB	–	Not Used
F6UA	30	Cooling Fan High Speed Relay
F6UB	15	Engine Control Module, Ignition Coil 1, Ignition Coil 2, Ignition Coil 3, Ignition Coil 4, Ignition Coil Module, LPG Control Module
F7UA	40	Electronic Brake Control Module (EBCM)
F7UB	10	A/C Compressor Clutch
F8UA	–	Not Used
F8UB	20	Cooling Fan Resistor
F9UA	30	Starter Relay
F9UB	15	Fuel Pump Relay
F10UB	10	Number Plate Lamp, Tail Lamp – Left, Park/Indicator Lamp – Left, Headlamp Levelling Actuator – Left

F11UB	10	Park/Indicator Lamp – Right, Headlamp Levelling Actuator – Right, Tail Lamp – Right, Interior Lamp Relay
F12UB	20	Headlamp Assembly – Right, Headlamp Assembly – Left, Instrument Cluster
F13UB	10	Headlamp Assembly – Left, Headlamp Levelling Switch
F14UB	10	Headlamp Assembly – Right
F15UB	10	Horn Relay, Bonnet Ajar Switch
F16UB	10	Front Fog Lamp Relay

Relays

R1	A/C Relay
R2	Engine Main Relay
R3	Fan HI Relay
R4	Fan LO Relay
R5	Front Fog Relay
R6	Fuel Pump Relay
R7	Headlamp HI Relay
R8	Headlamp LO Relay
R9	Horn Relay
R10	Heated Seat Relay
R11	Starter Relay

Instrument Panel Fuse Block

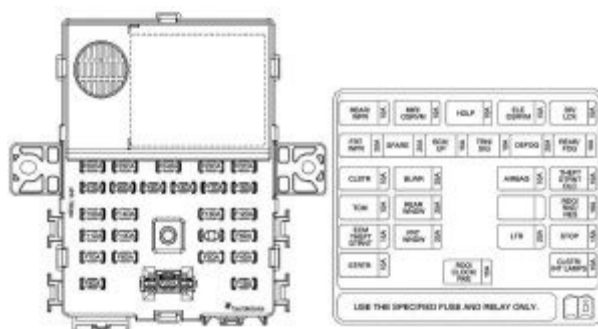

Chevrolet Spark – fuse box diagram – instrument

panel

No.	A	Description
F1DA	10	Interior Light, Cargo Lamp, Inflatable Restraint Sensing and Diagnostic Module
F2DA	15	Mobile Telephone Control Module, Radio, Instrument Cluster, Remote Control Door Lock Receiver (RCDLR), Content Theft Deterrent Control Module, HVAC Control Module.
F3DA	10	Instrument Cluster, Starter Motor, Park / Neutral Switch, Remote Control Door Lock Receiver (RCDLR), Ignition Switch

F4DA	15	Brake Lamp Switch, Engine Control Module (ECM), Transmission Control Module (TCM), Electronic Brake Control Module (EBCM), Tail Lamp – Left, Tail Lamp – Right, Centre High Mounted Stop Lamp (CHMSL)
F5DA	20	Cigarette Lighter Receptacle Fuse
F6DA	25	Window Switch – Passenger, Window Switch – Driver, Window Switch Global
F7DA	15	Fuel Pump Relay, Engine Control Module (ECM), Automatic Transmission Turbine Speed Sensor, Fuel Rail Pressure Sensor, Vehicle Speed Sensor (VSS), LPG Control Module, Automatic Transmission Output Shaft Speed Sensor, Immobilizer Control Module, Immobilizer Control Module – Auxiliary
F8DA	10	Instrument Cluster, Radio, Remote Control Door Lock Receiver (RCDLR), Content Theft Deterrent Control Module
F9DA	–	Not Used
F10DA	25	Window Switch – Driver
F11DA	10	Brake Lamp Switch, Transmission Control Module, Automatic Transmission Shift Lever
F12DA	10	Data Link Connector (DLC), Data Link Connector (DLC) 2, Immobilizer Control Module – Auxiliary, Immobilizer Control Module
F13DA	10	Inflatable Restraint Sensing and Diagnostic Module
F14DA	25	Blower Motor Control Module
F15DA	10	Info Display Module, Instrument Cluster, Mobile Telephone Control Module
F16DA	10	Rear Fog Lamp Relay, Tail Lamp – Left, Tail Lamp – Right, Instrument Cluster.
F17DA	20	Rear Window Demister Grid
F18DA	10	Hazard Lamps Switch
F19DA	15	Park / Neutral Position (PNP) Switch, Reversing Lamp Switch
F20DA	25	Not Used
F21DA	20	Windscreen Wiper Motor, Windscreen Wiper / Washer Switch
F22DA	15	Door Lock Relay, Door Unlock Relay
F23DA	15	HVAC Controls Switch Assembly, Windscreen Demister Grid, Outside Rearview Mirror – Driver, Outside Rearview Mirror – Passenger
F24DA	10	Content Theft Deterrent Control Module, Fuse Block – Underhood, Headlamp Dipped beam Relay,

		Headlamp Main Beam Relay, Starter Relay, Heated Seats Relay
F25DA	10	Instrument Cluster, HVAC Control, Outside Rearview Mirror Switch
F26DA	10	Windscreen Wiper / Washer Switch, Rear Window Wiper Motor