


Dodge Monaco 1988 – 1992 fuse box diagram

Passenger Compartment Fuse Box

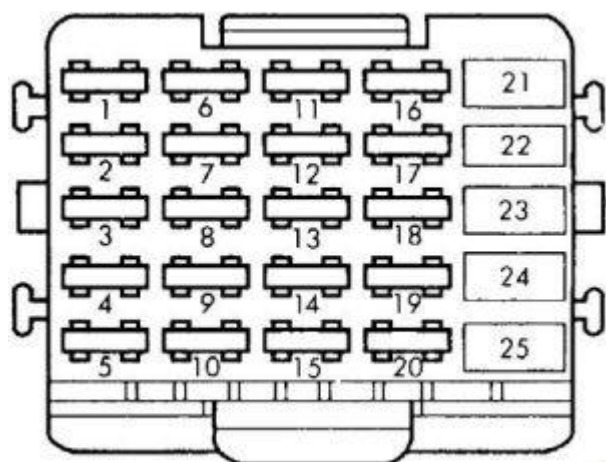

Dodge Monaco – fuse box diagram – passenger compartment


Fuse	[A]	Protected Component
1	3	'91-'92: Left & Right Pods, Cluster Light, Console, Radio, Disc Player
2	10	'88-'89: Mirrors, Chime, VM Module, Trip Computer, Radio, Heater, Heater & A/C Controls, Digital Instrument Cluster, Clock (Battery for Memory)
	15	'90: Mirrors, Chime, IOD, VM Module, Courtesy Lights, Trip Computer Radio, Decklid Release, Dome Light, Illumination Entry Module, Underhood Light, Glove Box Light, Trunk Light, VDS Module, Keyless Entry
	3	'91-'92: Trip Computer, VM Module, Climate, Control Display, Radio Disc Player
3	5	'88-'90: Back-Up Lights
	20	'91-'92: Intermittent Wiper Module
4	5	'88-'90: Vanity Lights

	10	'91-'92: Radio, Compact Disc
5	20	'88-'90: Radio, Cigarette Lighter
	3	'91-'92: Lighting Control Module
6	20	'91-'92: Chime, Clock, Keyless Entry, VM Module, Trip Computer, Power Mirrors, Underhood, Courtesy, Rear, Glove Box, Dome/Reading, Trunk, Vanity Lights, Power Door Locks, ATC Control Module, Radio, Illuminated Entry, Deck Lid Release Solenoid
7	7.5	'88-'90: Automatic Transmission
	5	'91-'92: Chime, Clock, Instrument Cluster, Cruise Indicator, VM Module, Illuminated Entry, Trip Computer, Cruise Control Servo
8	15	'88-'90: Trip Computer, VM Module, Clock, Chime System Illumination Entry, Rear Defogger Relay, Back-Up Lights, Transmission Computer (Ignition)
	20	'91-'92: Power Mirrors
9	15	'88-'90: Light Control System (Ignition)
	20	'91-'92: Anti-Lock, Console, Horns, Restraint Module, Power Antenna, Diagnostic Connector
10	10	'88-'90: Instrument Cluster, Light Outage, Module, Heater & A/C Controls, Passive Restraint Module
	7.5	'91-'92: Right Side Exterior Lights
11	–	–
12	20	'88-'90: Stoplights, Turn, Hazard, Park, Side & License Lights (Left Side)

	10	'91-'92: Center Stoplight, Brake Switch
13	7.5	'88-'89: Instrument Panel LCD
	3	'90: Instrument Panel LCD
14	7.5	'88-'89: Instrument Panel & Clock
	3	'90: Instrument Panel & Clock
	15	'91-'92: Climate Module & Display, EGR Solenoid, Light Outage Module, Air Control Module, Daytime Running Lights, HEVAC Module
15	10	'88-'90: Instrument Cluster
	10	'91-'92: Lamp Outage Module, Left Side, Front and Rear Exterior Lights
16	30	'88-'90: Rear Defogger, Power Antenna
17	15	'88-'89: Interior Lights, Glove Box Light, Trunk Light, Underhood Light
18	20	'88-'90: Horn, Stoplight Switch
19	10	'88-'90: Passive Restraint System
	10	'91-'92: Right Low Beam Headlight
20	20	'88-'90: Stoplights, Turn, Hazard, Park, Side & License Lights (Right Side)
	10	'91-'92: Left Low Beam Headlight

Circuit Breaker		
21	12.5	'88-'90: Headlights
	21	'91-'92: Headlights, Daytime Running Lights
22	30	Power Seats, Power Door Locks, Passive Restraint Motors ('91-'92)
23	30	'88-'90: Protection System Motors & Relays, Passive Restraint System ('90)
24	30	'88-'90: Intermittent Wiper/Washer
	30	'91-'92: Power Windows
25	30	'88-'90: Power Windows & Sun Roof

Engine Compartment Fuse Box ('91-'92)

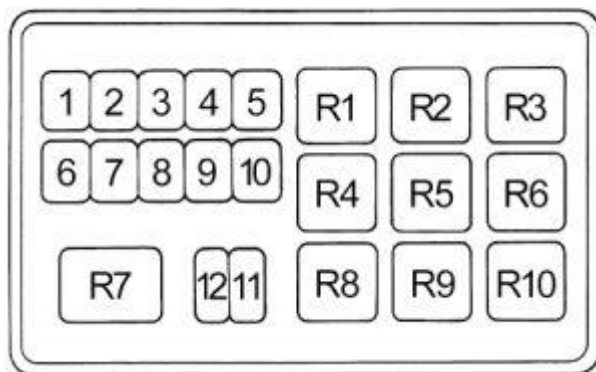

Dodge Monaco – fuse box diagram –


engine compartment

Fuse	[A]	Protected Component
1	–	–

2	40	Headlights
3	20	Left Park Lamps
4	40	Ignition Switch, Starter Relay, ABS
5	40	Radiator Fan Relay
6	–	–
7	40	ABS Pump Motor Relay
8	20	Right Park Lamps
9	40	Blower Motor
10	30	Auto Shutdown Relay, Fuel Pump Relay, Single Board Engine Controller (SBEC), Fuel Injectors, EGR Solenoid, Direct Ignition Coil, CAM Sensor, Crank Sensor, Heated O2 Sensor, Throttle Position Sensor, Coolant Temperature Sensor, Auto Idle Speed Motor, MAP Sensor, Charge Temperature Sensor
11	7.5	Ignition, Fuel Pump Relay, Alternator, Heated O2 Sensor
12	20	ABS System Relay
Relay		
R1	–	
R2	A/C Compressor Clutch	

R3	Fuel Pump
R4	–
R5	Starter
R6	Auto Shutdown
R7	ABS Pump Motor
R8	ABS Warning Lamp
R9	ABS System
R10	Radiator Fan

Passenger Compartment Relay Box

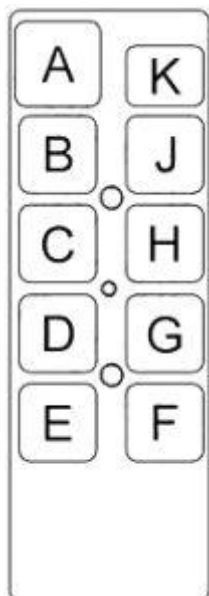


Dodge Monaco -fuse box diagram – passenger relay box

No.	Relay

A	Power Antenna
B	Rear Window Defroster
C	Low Beam Headlamp
D	High Beam Headlamp
E	–
F	Illuminated Entry
G	Horn
H	Cruise Control
J	Parking Lamp
K	–

Engine Compartment Relay Box ('88-'90)

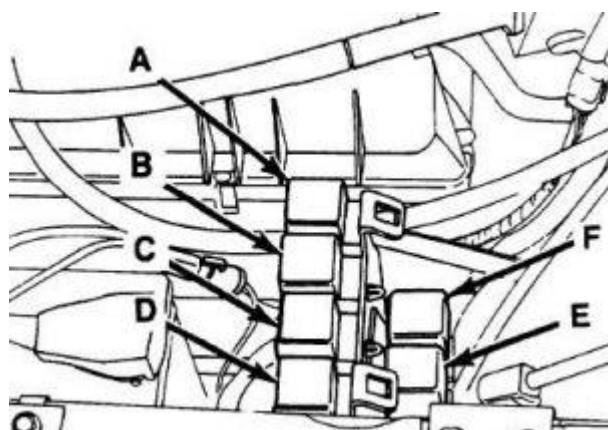

box

Dodge Monaco – fuse box diagram – engine relay

No.	Relay
A	Ignition
B	Starter
C	Radiator Fan
D	A/C Compressor Clutch
E	B+ Latch
F	Fuel Pump