

Windshield


Removal

CAUTION:

- Put on gloves to protect your hands.
- Wear eye protection when removing the glass with piano wire.
- Use seat covers to avoid damaging any surfaces.

1. To remove the windshield, first remove the:
 - Rearview mirror (see page 20-19)
 - Sunvisors and holders (see page 20-45)
 - Sunglasses holder (see page 20-45)
 - Front pillar trim (see page 20-43)
 - Windshield wiper arms and cowl cover (see page 20-91)
2. Remove the molding.


NOTE: When molding removal is difficult, cut the molding with a knife.

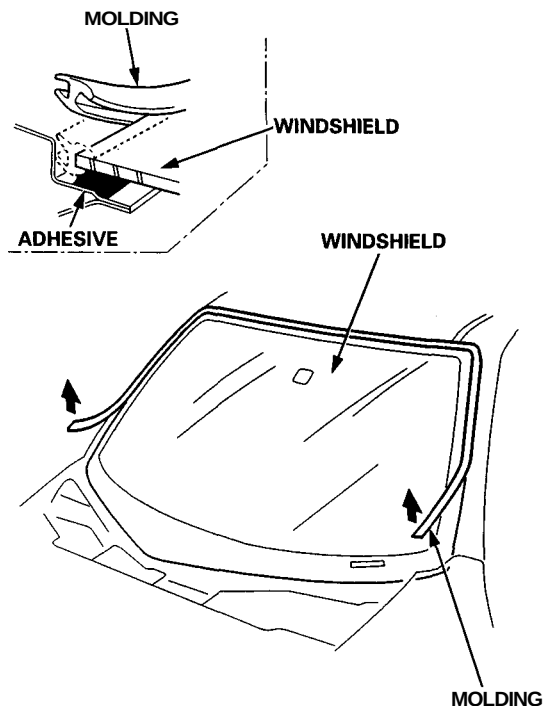

3. Pull down the front of the headliner (see page 20-45).


CAUTION: Take care not to bend the headliner excessively.

4. Apply protective tape along the edge of the dashboard and body as shown. Using an awl, make a hole through the rubber dam and adhesive from inside the vehicle. Push the piano wire through the hole, and wrap each end around a piece of wood.

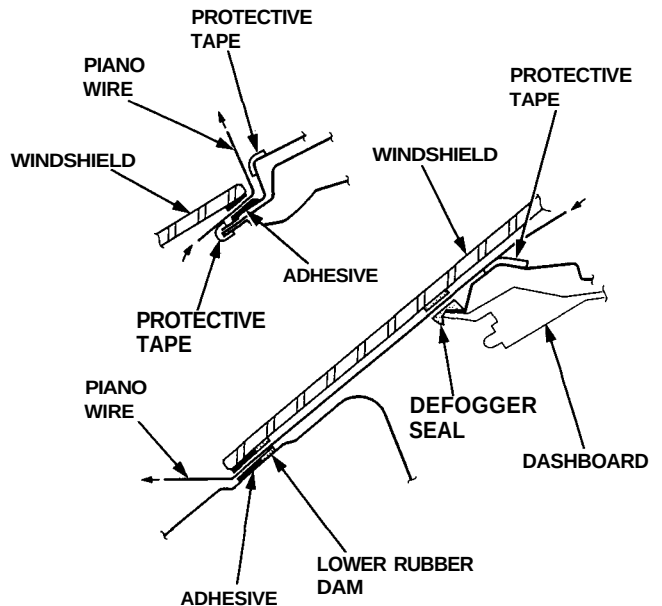

5. With a helper on the outside, pull the piano wire back and forth in a sawing motion, and carefully cut through the rubber dam and adhesive around the entire windshield.

CAUTION: Hold the piano wire as close to the windshield as possible to prevent damage to the body and dashboard.

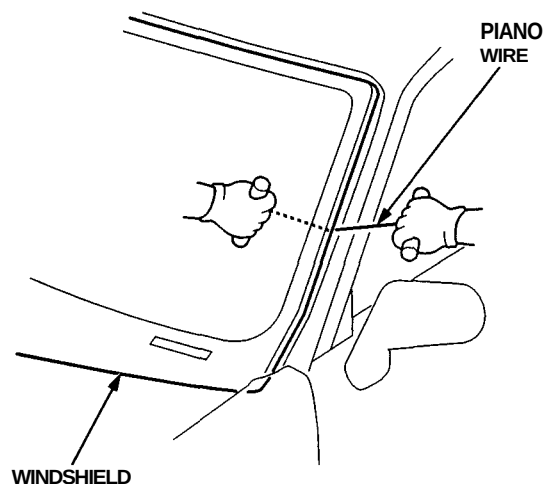

6. Carefully remove the windshield.