

Washer Reservoir


Removal

CAUTION: Put on gloves to protect your hands.

'96 - '99 models:

1. Remove the bolt, then pull out the washer filler.

►: Bolt location, 1

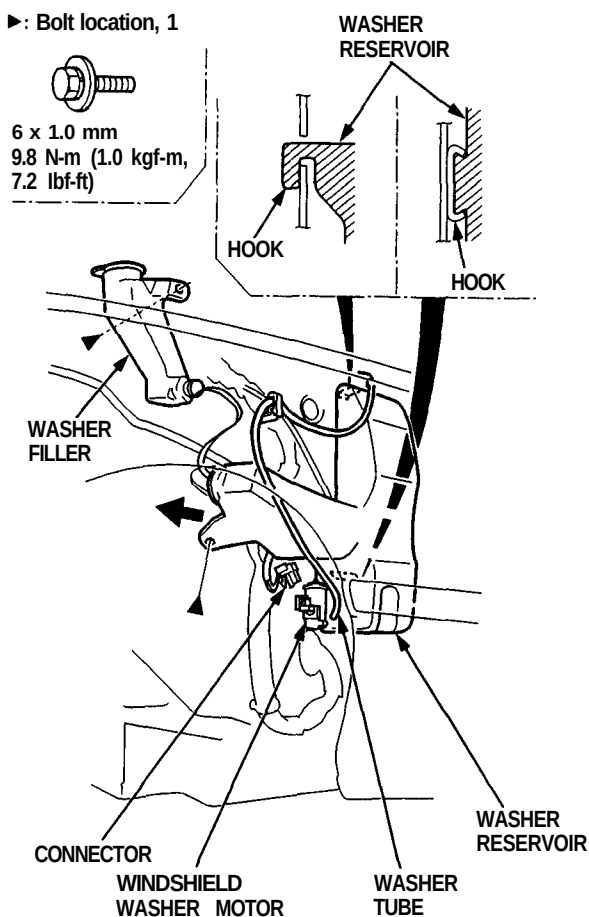

2. Pull away the inner fender as necessary (see page 20-85).
3. Disconnect the washer tube and windshield washer motor connector.
4. Remove the bolt, then remove the washer reservoir by sliding it forward.
5. Installation is the reverse of the removal procedure.


NOTE:

- Make sure the windshield washer motor connector and washer tube is connected properly.
- Check the windshield washer motor operation.

'00-'01 models:


1. Remove the bolt, then pull out the washer filler.

►: Bolt location, 1

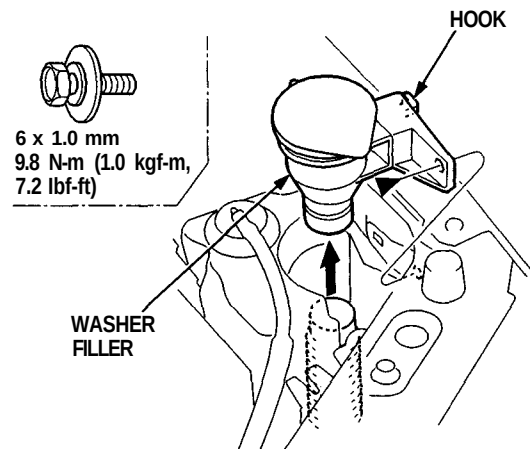

2. Pull away the inner fender as necessary (see page 20-85).
3. Disconnect the washer tube and washer motor connector.

►: Bolt locations, 3

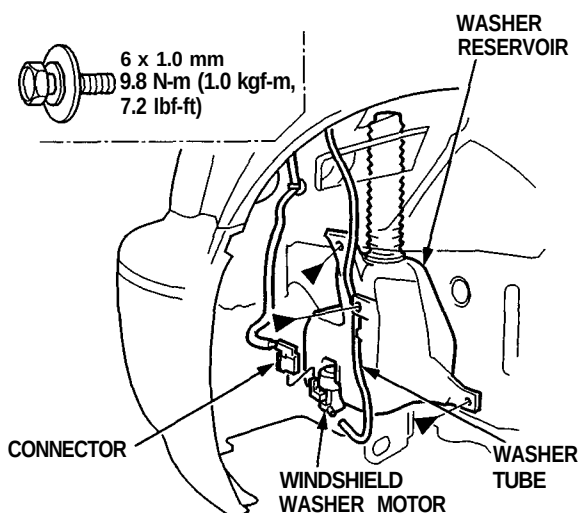

4. Remove the bolt, then remove the washer reservoir.
5. Installation is the reverse of the removal procedure.

NOTE:

- Make sure the washer motor connector and washer tube is connected properly.
- Check the washer motor operation.