


Porsche 924 1976 – 1991 fuse box diagram

Type 1

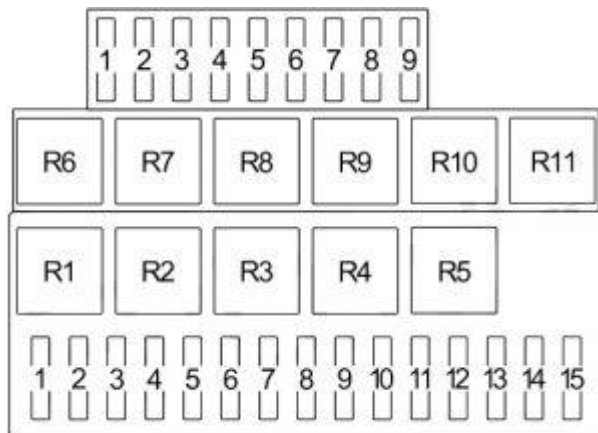

Porsche 924 – fuse box diagram – type 1


No.	A	Circuits
1	8	Headlight Low Beam (Left)
2	8	Headlight Low Beam (Right)
3	8	Headlight High Beam (Left)
4	8	Headlight High Beam (Right)
5	16	Additional High Beams
6	8	Stoplights, Emergency Flasher, Concealed Headlight Motor
7	8	Clock, Interior Light, Cigar Lighter, Radio, Trunk Light
8	8	Turn Indicators, Brake Warning Light

	8	Stoplights
9	8	Back-Up Lights, Rear Wiper, Outside Mirror Motor, Turn Signal Indicator Lights
10	16	Fresh Air Fan
	16	Outside Mirror Heating, Control Wire For Rear Window Defogger
11	8	Windshield Wipers, Washer Pump
12	8	License Plate Lights, Luggage Compartment Light, Ashtray Light, Instrument and Switch Lights, Glove Box Light
13	8	Side Marker (Right)
14	8	Side Marker (Left), Engine Compartment Light
15	16	Foglights
	8	Front Fog Light
1	8	Retractable Headlights
	16	Concealed Headlight Motor
	8	Horn

2	16	Fuel Pump, Auxiliary Air Valve, Control Pressure Regulator, Frequency Valve (Oxygen Sensor)
3	16	Radiator Fan, Antenna
	16	Blower Motor
4	25	Rear Window Defogger
5	16	A/C Condenser Fan
6	25	A/C Compressor, Fresh Air Fan
7	8	Rear Fog Light
8	25	Power Windows
	16	Power Windows
9	25	Pop-Up Roof, Tailgate Unlock Motor
	25	Blower, Tailgate Unlock Motor
Relay		
R1	Bridge (term. 56 – 56b)	
	Headlight Flasher and Low Beam	
R2	Additional High Beams	

R3	Horn
	Blower
R4	Intermittent Wiper
R5	Turn Signals/Emergency Flasher
R6	Cooling Fan
	Horn
R7	Fuel Pump
	Headlight Washer System
R8	Air Conditioning System (Blower)
	Foglights
R9	Headlight Washer System
R10	Warning Time with Gong (USA)
	Catalytic Converter Monitoring Control (Japan)
	Seat Belt Warning
R11	Rear Window Defogger and Seat Belts

Models with an air conditioner have two additional relays underneath the instrument panel next to the center console.

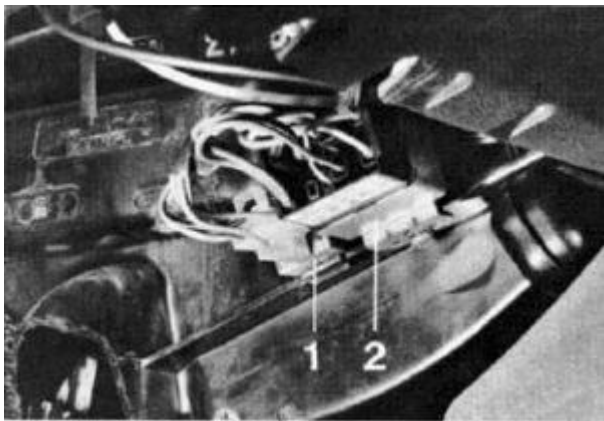

Porsche 924 – fuse box diagram –

additional relays

No.	Relay
1	Blower
2	Air Conditioning System




Porsche 924 – fuse box diagram – additional relays

No.	Relay
-----	-------

1	Radio
2	Power Window

Type 2

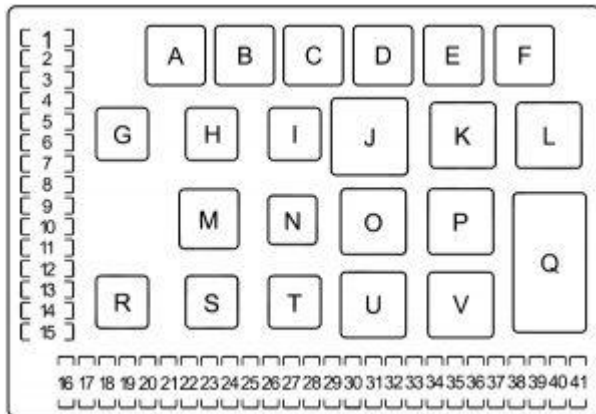

Porsche 924 – fuse box diagram – type 2

No.	A	Protected Component
1	25	Prop-Up Roof, Hatchback Release
2	25	Headlight Motor
3	15	Horns
4	30	Power Windows
5	15	Foglights
6	30	Seat Adjustment
7	—	—

8	—	—
9	—	—
10	25	Cooling Fan No.2
11	15	Cigar Lighter, Hatchback Release, Clock, Fuel Gauge, Glove Box Interior Lights
12	—	—
13	30	Rear Defogger, Heated Mirror
14	30	Air Fan
15	25	Cooling Fan No.2
16	15	Headlight Motor
17	7,5	Heating, A/C Compressor Clutch
18	7,5	Instruments, Roof Control, Hall Pick-Up, Gong
19	15	Stoplight, Cruise Control
20	7,5	High Beam (Left)
21	7,5	High Beam (Right)

22	7,5	Low Beam (Left)
23	7,5	Low Beam (Right)
24	30	Wiper, Heated Wiper Nozzles, Windshield & Headlight, Washer Pump
25	25	Seat Heating
26	—	—
27	—	—
28	25	Back-Up Light
29	—	—
30	7,5	Left Rear Turn Signal & Side Light
31	7,5	Left Front Turn Signal
32	7,5	Right Front Turn Signal
33	7,5	Right Rear Turn Signal & Side Light
34	15	Fuel Pump, Oxygen Sensor
35	—	—

36	7,5	Radio
37	7,5	Headlight Motor
38	7,5	Instrument Illumination
39	7,5	Radio
40	7,5	Left Parking & Right License Plate Light
41	7,5	Right Parking & Left License Plate Light, Engine Compartment Light
Relay		
A	A/C Compressor	
B	Prop-Up Roof	
C	—	
D	—	
E	—	
F	—	
G	Foglight	

H	Foglight
I	—
J	Retainer X
K	Headlight Washing System
L	Gong, Catalytic Converter
M	Bridges
N	Power Window
O	Buzzer
P	Intermittent Wipers
Q	Cooling Fan
R	Air Fan
S	Retainer 15
T	Rear Window & Fuse Test Receptacle
U	Turn Signal Flasher

V	DME
---	-----