


11.Rear Washer

A: REMOVAL


- 1) Remove the roof spoiler. (Model with roof spoiler) <Ref. to EI-38, REMOVAL, Roof Spoiler.>
- 2) Hold the claw of the washer nozzle from the outer side of the rear gate, and remove the washer nozzle.

CAUTION:

Be careful not to scratch the rear gate panel during removal.

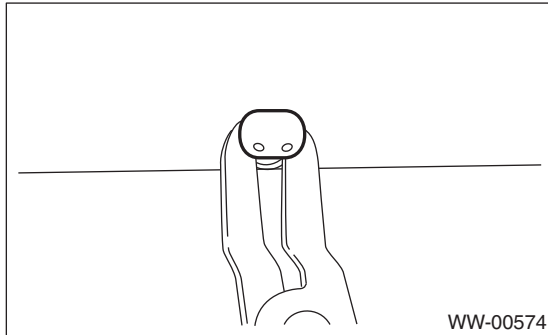

- 3) Remove the washer hose (B) from washer nozzle (A).

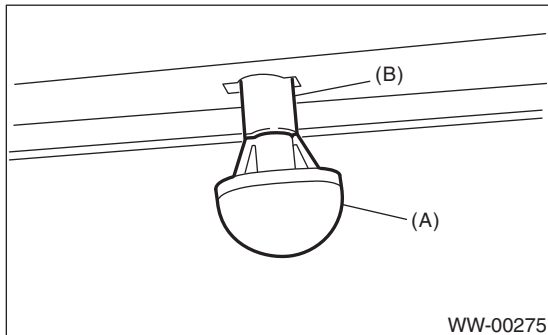

B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Adjust the washer nozzle position. <Ref. to WW-21, ADJUSTMENT, Rear Washer.>

C: INSPECTION

- Make sure the nozzle and hose are not clogged.
- Make sure the hose is not bent.

D: ADJUSTMENT


- 1) Turn the wiper switch to OFF position.
- 2) While the vehicle is stopped, adjust the washer spray position as shown in the figure.

Spray position:

A: 72°

B: 45 mm (1.8 in)

C: 36 mm (1.4 in)

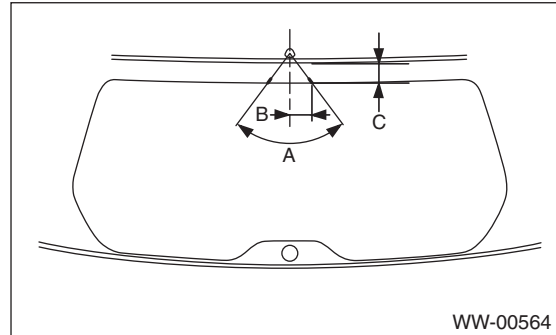

Rear Washer

WIPER AND WASHER SYSTEMS

	Page
1. General Description	2
2. Audio System	3
3. Navigation System	4
4. Audio	6
5. Front Speaker	7
6. Tweeter	8
7. Rear Speaker	9
8. Antenna	10
9. Steering Satellite Switch	11
10. Navigation Body	12
11. GPS Antenna	13
12. Front Accessory Power Supply Socket	14
13. Rear Accessory Power Supply Socket	15
14. AUX Input Terminal	16