



(M/T)
(A/T)
(M/T)
(A/T)
D34
D33
D39
D37
D36
D38
D38
D35
D42
D35
D41
D40
D23
D27
D32
D26
D25
D29
(*1)
D28
(*2)
D28
D11
D31
D22
D94
D30
D21
D20
D7
D3
D1
D44
D43
D5
D6
D9
D10
D24
D19
(*1)
D78
(*2)
D17
(*1)
D72
(*2)
D16
D13
* 1:Before Aug. 2010 Production
* 2:From Aug. 2010 Production

D	1	Engine ECU
D	3	Engine ECU
D	5	Alternator
D	6	Alternator
D	7	Engine Oil Pressure SW
D	9	Noise Filter (Ignition)
D	10	Camshaft Position Sensor
D	11	Engine Oil Level Sensor
D	13	A/C Compressor
D	16	Power Steering Oil Pressure SW
D	17	Crankshaft Position Sensor
D	19	Camshaft Timing Oil Control Valve
D	20	Ignition Coil (No.1)
D	21	Ignition Coil (No.2)
D	22	Ignition Coil (No.3)
D	23	Ignition Coil (No.4)
D	24	Fuel Injector (No.1)
D	25	Fuel Injector (No.2)
D	26	Fuel Injector (No.3)
D	27	Fuel Injector (No.4)
D	28	Purge VSV
D	29	Throttle Body Assembly
D	30	Air Switching Valve
D	31	Variable Resistor
D	32	Water Temp. Sensor (Engine Coolant)
D	33	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
D	34	Heated Oxygen Sensor (Bank 1 Sensor 1)
D	35	Heated Oxygen Sensor (Bank 1 Sensor 2)
D	36	Back-Up Lamp SW
D	37	Park/Neutral Position SW
D	38	Speed Sensor
D	39	A/T Fluid Temp. Sensor
D	40	Transmission Revolution Sensor (Input)
D	41	ECT Solenoid
D	42	Transmission Revolution Sensor (Output)
D	43	Junction Connector
D	44	Junction Connector
D	72	Crankshaft Position Sensor
D	78	Camshaft Timing Oil Control Valve
D	94	Air Pressure Sensor


D 1
White

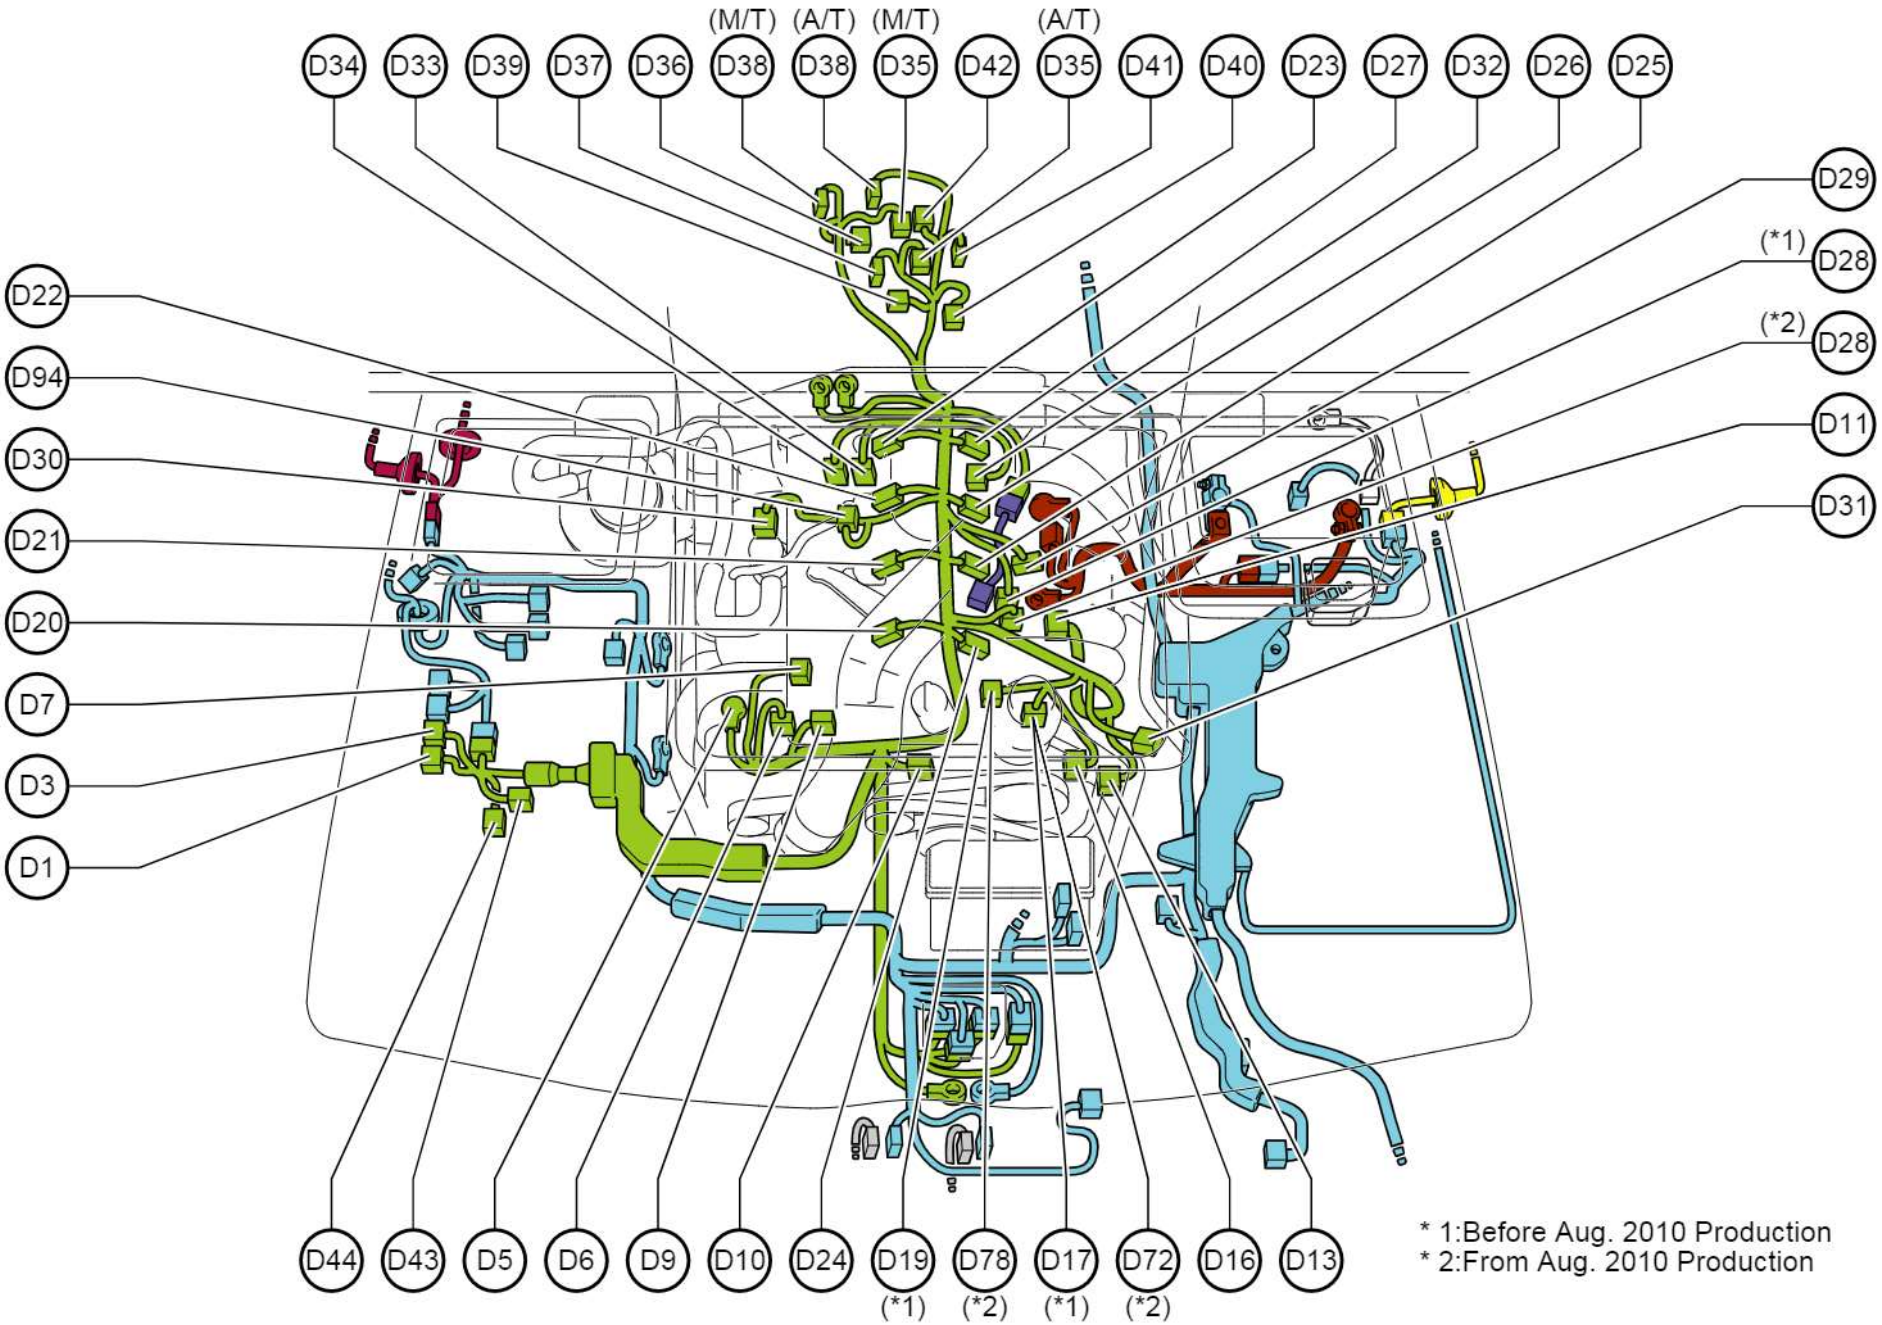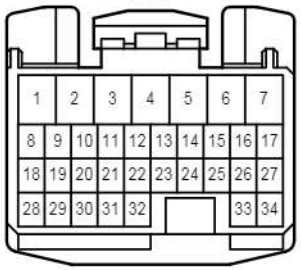

D 3
White

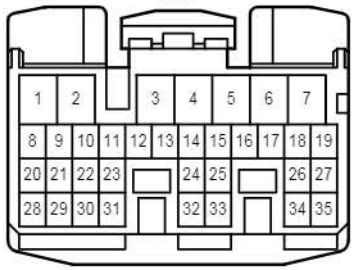


D 5



(Before Sep. 2007 Production)

D 5



(From Sep. 2007 Production)

D 6
Green



D 7
Black



D 9
Gray



D 10
Black



D 11
Gray



D 13
Gray



D 16
Black




D 17
Gray




D 19
Gray




D 20
Black




D 21
Black




D 22
Black




D 23
Black




D 24
Brown




D 25
Gray



D 26
Brown



D 27
Gray




D 28
Black



D 29
Black



D 30
Black



D 31
Black



D 32
Black



D 33
Dark Gray



D 38
Black



D 39
Gray



D 40
Black




D 41
Gray




D 42
Black



D 43
Black

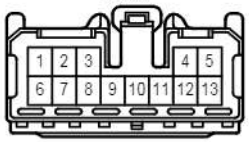

D 44
Blue

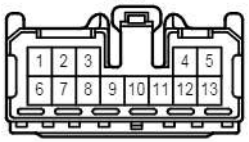

D 72
Dark Gray




D 78
Black



D 94
Black




* 2:From Aug. 2010 Production

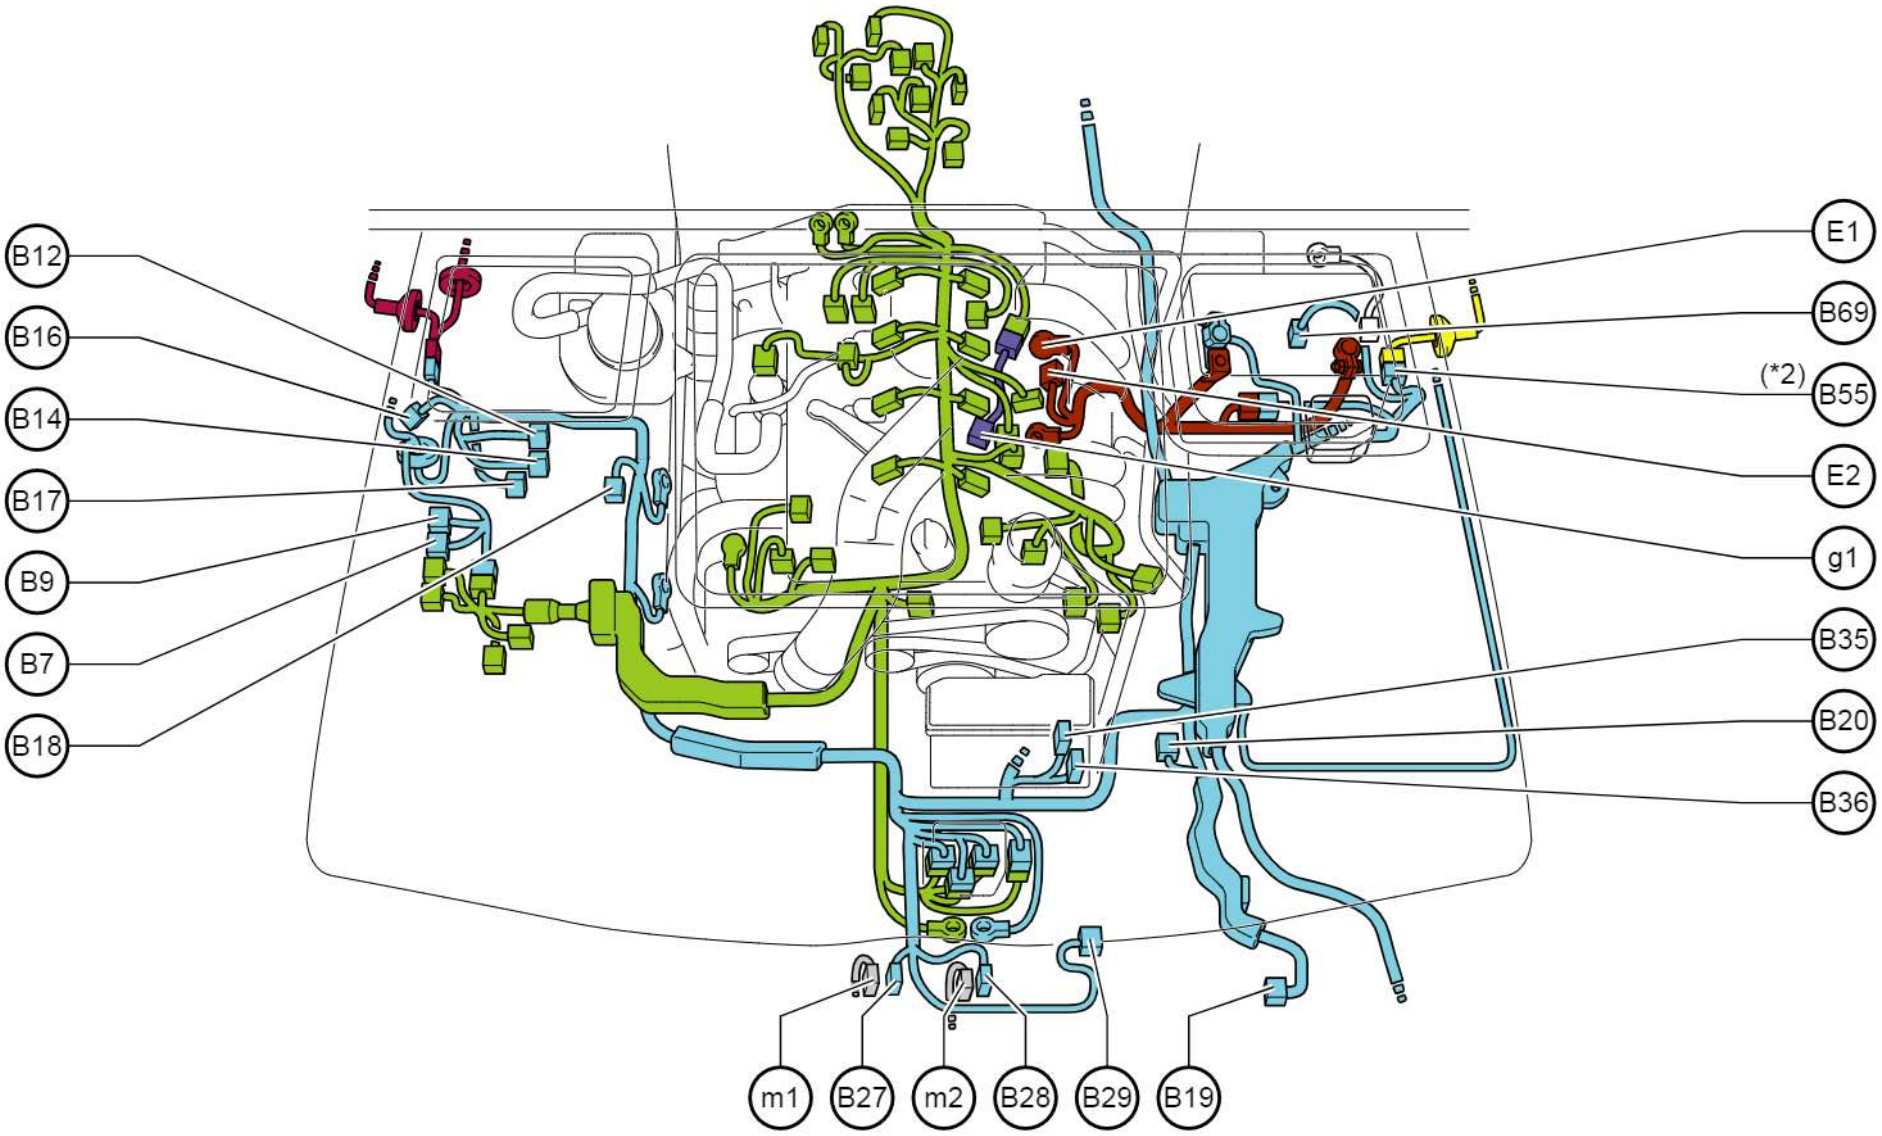


B	7	Engine ECU
B	9	Engine ECU
B	12	Air Injection Control Driver
B	14	Air Injection Control Driver
B	16	A/C Magnetic Valve (Rear A/C)
B	17	Air Pump
B	18	Speed Sensor (Front RH)
B	19	Skid Control ECU with Actuator
B	20	Speed Sensor (Front LH)
B	27	Cooling Fan ECU No.1
B	28	Cooling Fan ECU No.2
B	29	Water Temp. Sensor (Radiator)
B	35	Junction Connector
B	36	Junction Connector
B	55	Slide Door Control Junction (Male LH)
B	69	Battery Thermometer Sensor
E	1	Starter
E	2	Starter
g	1	Knock Control Sensor (Bank 1)
m	1	Cooling Fan ECU No.1 , Cooling Fan Motor No.1
m	2	Cooling Fan ECU No.2 , Cooling Fan Motor No.1

B 7
White

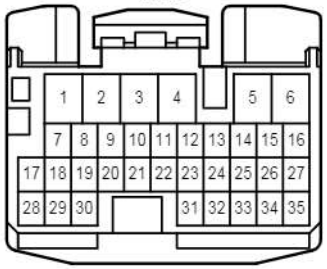


B 9
White

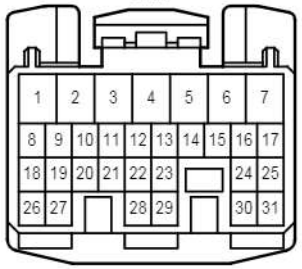

B 12
Black




B 14
Gray

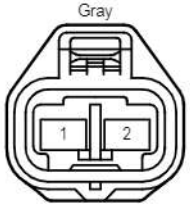

B 16
Gray




B 17
Gray

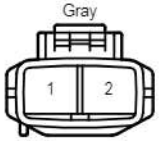

B 18
Black



B 19
Black

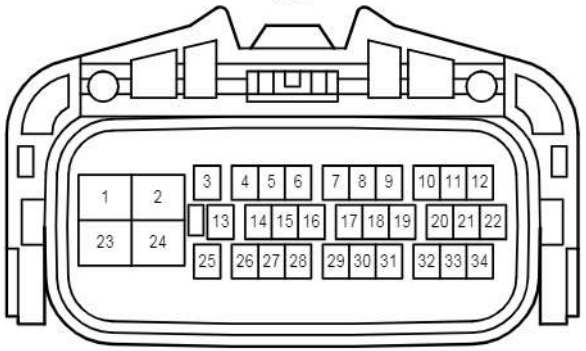

B 20
Gray



B 27
Gray




B 28
Black




B 29
Black



B 35
Black

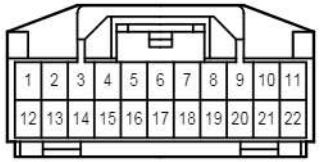

B 36
White

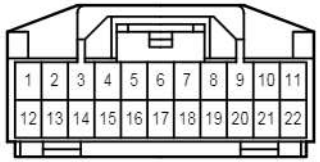

B 55
White



B 69
White



E 1





E 2
Black




g 1
Black

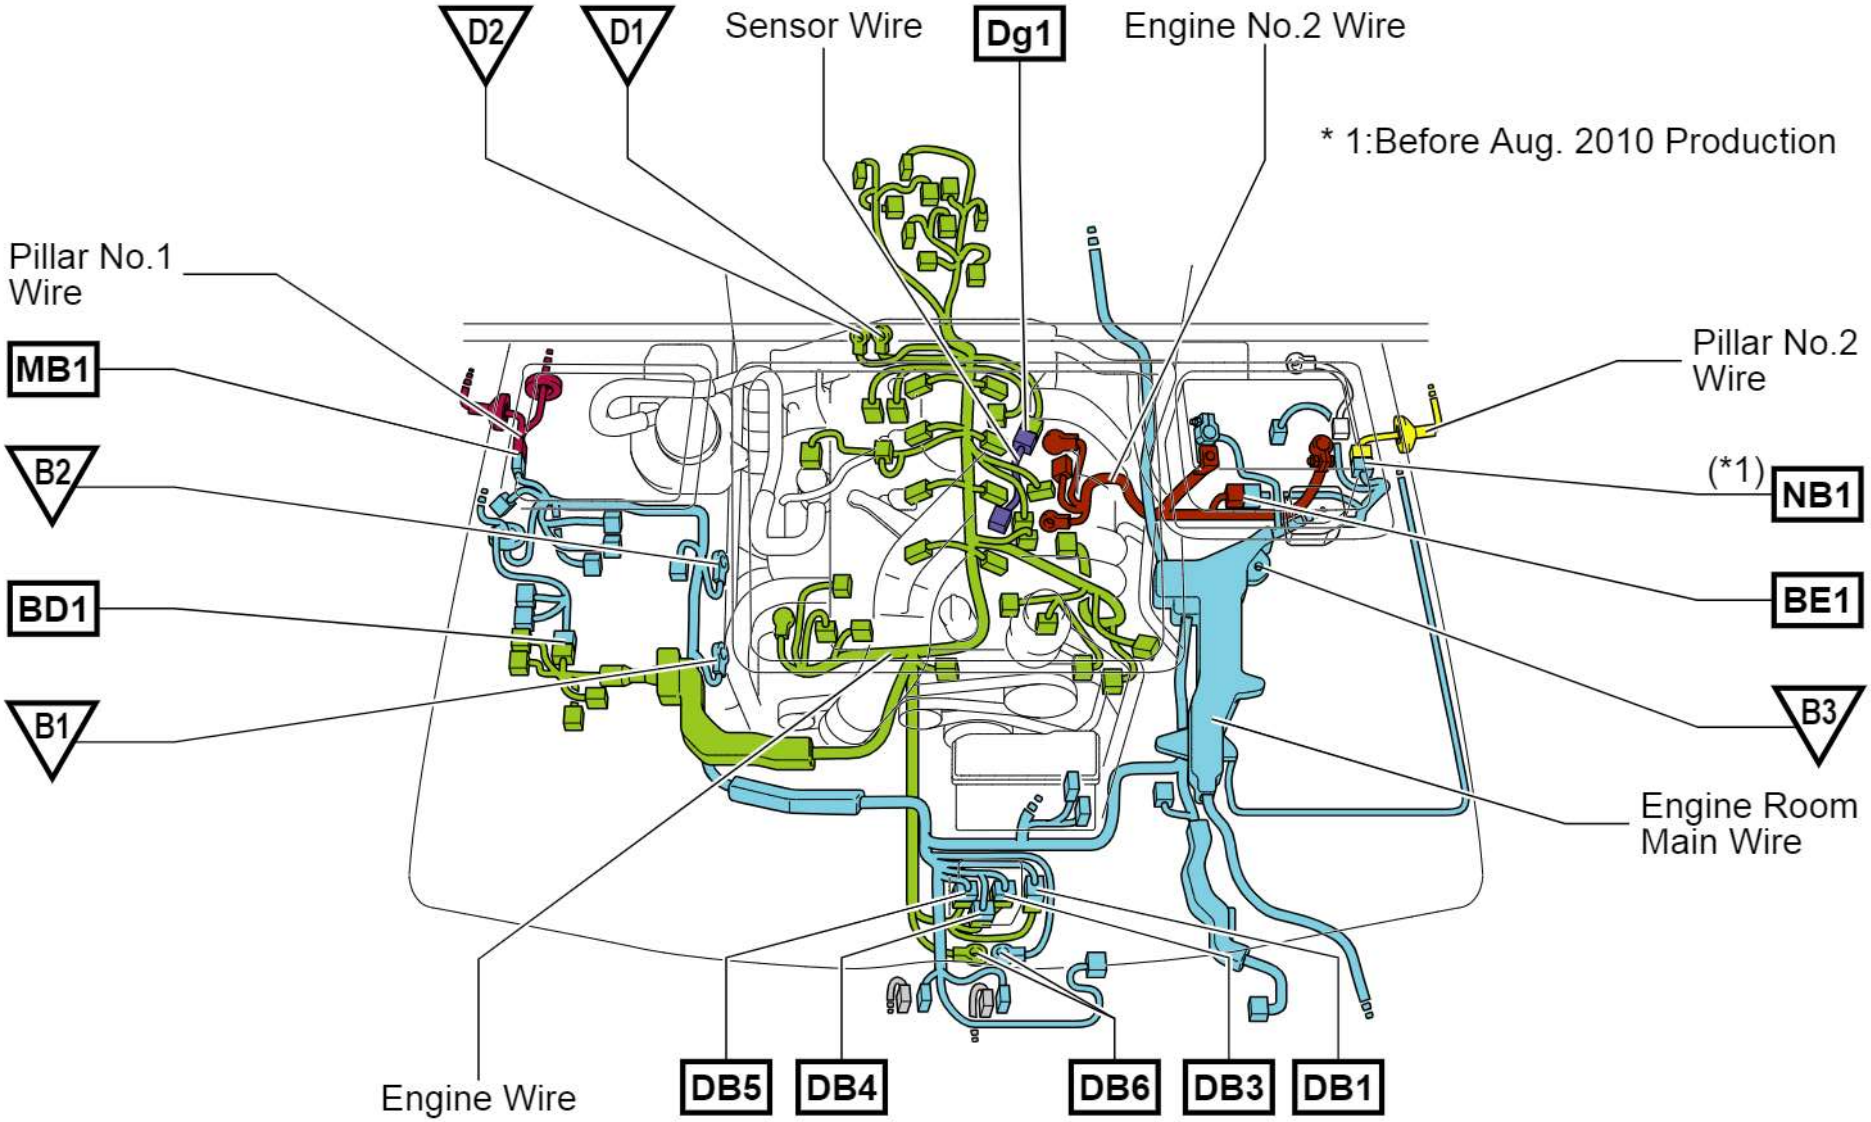




D2
D1
Sensor Wire
Dg1
Engine No.2 Wire
* 1:Before Aug. 2010 Production
Pillar No.1 Wire
MB1
B2
BD1
B1
Pillar No.2 Wire
(*1)
NB1
BE1
B3
Engine Room Main Wire
Engine Wire
DB5
DB4
DB6
DB3
DB1

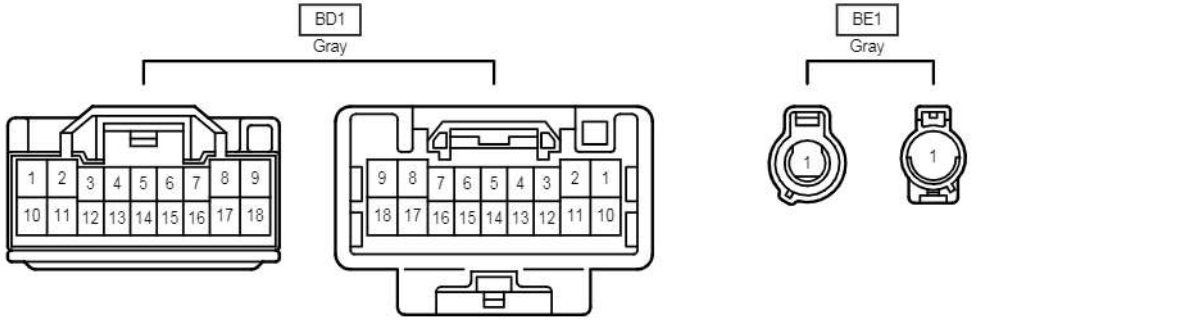

BD1
Gray
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18
9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11 10


BE1
Gray
1
1

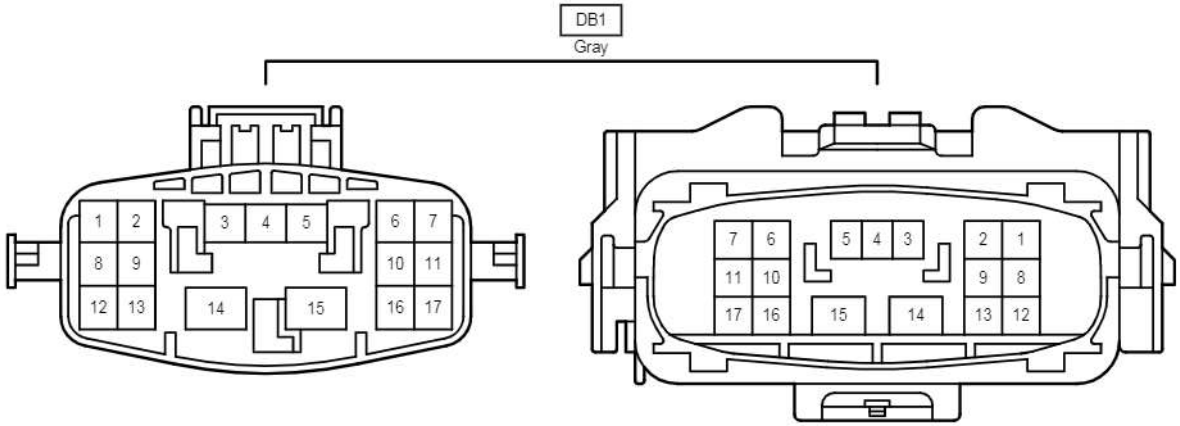
DB1
Gray
1 2 3 4 5 6 7
8 9 10 11
12 13 14 15 16 17
7 6 5 4 3 2 1
11 10 9 8
17 16 15 14 13 12

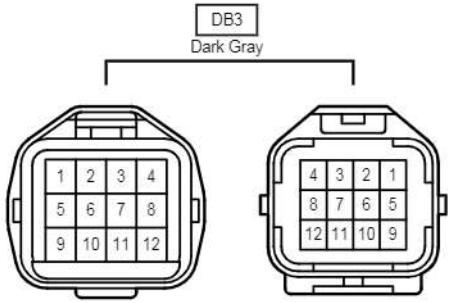

DB3
Dark Gray
1 2 3 4
5 6 7 8
9 10 11 12
4 3 2 1
8 7 6 5
12 11 10 9

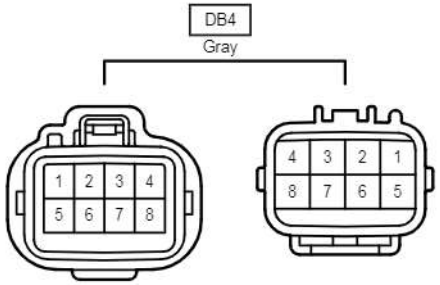

DB4
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5

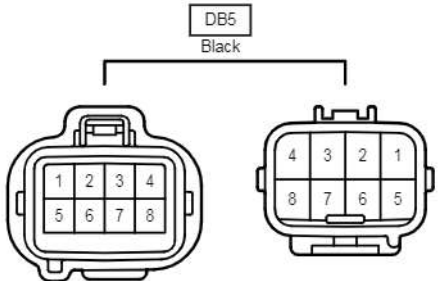
DB5
Black
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5

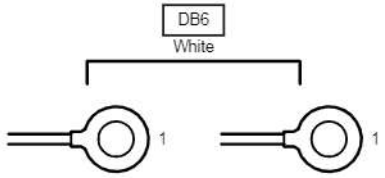
DB6
White
1
1

Wire and Wire , Ground Points in Engine Compartment <LHD 2TR-FE>

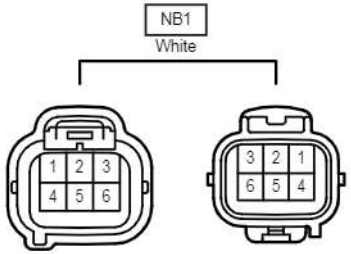

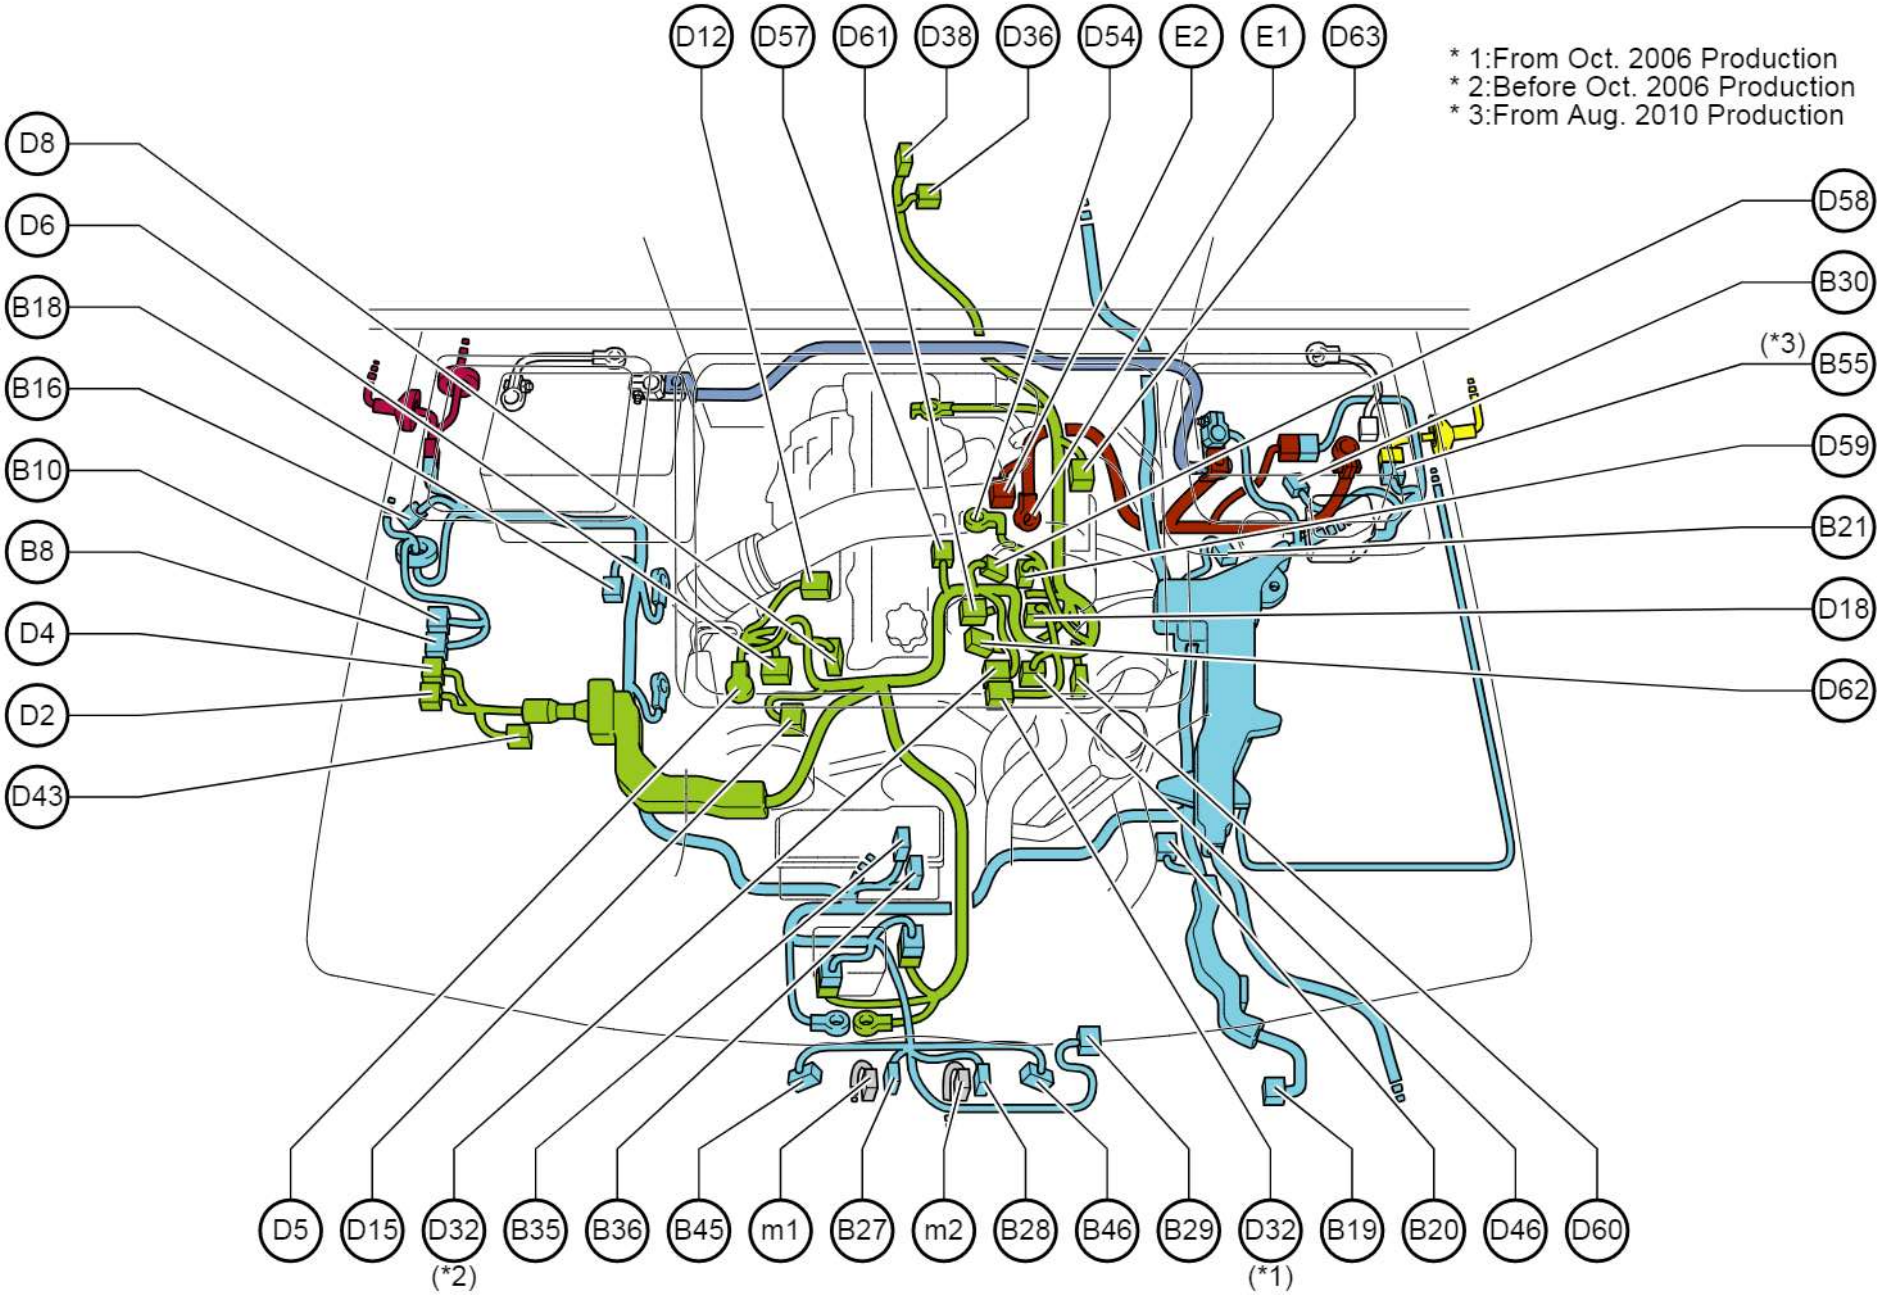
D12
D57
D61
D38
D36
D54
E2
E1
D63
* 1:From Oct. 2006 Production
* 2:Before Oct. 2006 Production
* 3:From Aug. 2010 Production
D8
D6
B18
B16
B10
B8
D4
D2
D43
D58
B30
(*3)
B55
D59
B21
D18
D62
D5
D15
D32
(*2)
B35
B36
B45
m1
B27
m2
B28
B46
B29
D32
(*1)
B19
B20
D46
D60


B 8 Engine ECU
B 10 Engine ECU
B 16 A/C Magnetic Valve (Rear A/C)
B 18 Speed Sensor (Front RH)
B 19 Skid Control ECU with Actuator
B 20 Speed Sensor (Front LH)
B 21 Fuel Filter Warning SW
B 27 Cooling Fan ECU No.1
B 28 Cooling Fan ECU No.2
B 29 Water Temp. Sensor (Radiator)
B 30 Fuel Sedimentary Level Warning SW
B 35 Junction Connector
B 36 Junction Connector
B 45 Cooling Fan ECU No.1
B 46 Cooling Fan ECU No.2
B 55 Slide Door Control Junction (Male LH)

D 2 Engine ECU
D 4 Engine ECU
D 5 Alternator
D 6 Alternator
D 8 Engine Oil Pressure SW
D 12 Engine Oil Level Sensor
D 15 A/C Compressor
D 18 Engine Speed Sensor
D 32 Water Temp. Sensor (Engine Coolant)
D 36 Back-Up Lamp SW
D 38 Speed Sensor
D 43 Junction Connector
D 46 Fuel Temp. Sensor
D 54 Glow Plug
D 57 Manifold Absolute Pressure Sensor
D 58 Throttle Body Assembly
D 59 Spill Control Valve
D 60 Injection Pump Assembly
D 61 Timer Control Valve
D 62 Crankshaft Position Sensor
D 63 Throttle Position SW


E 1 Starter
E 1 Starter
E 2 Starter

m 1 Cooling Fan ECU No.1 , Cooling Fan Motor No.1

B 8
White

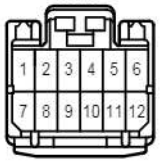

B 10
White

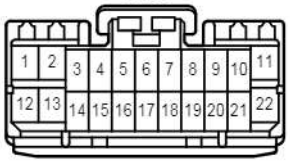


B 16
Gray



B 18
Black



B 19
Black

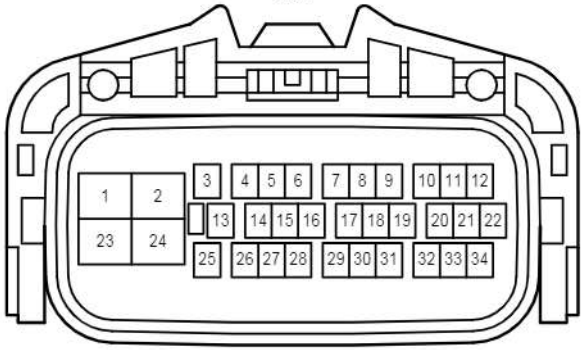

B 20
Gray



B 21
Black



B 27
Gray



B 28
Black




B 29
Black




B 30
Gray




B 35
Black

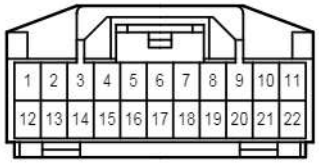


B 36
White

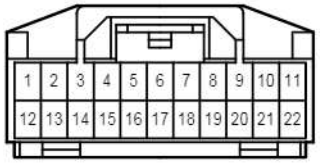

B 45
Black

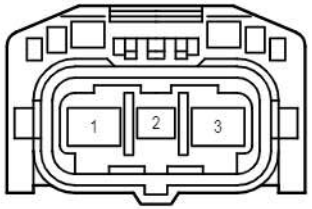


B 46
Black

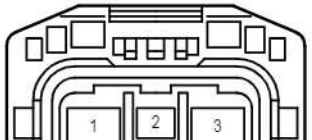

B 55
White



D 2
White

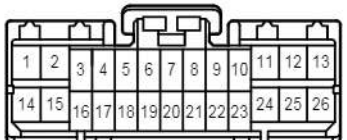

Position of Parts in Engine Compartment <LHD 5L-E>

D 8
White



D 12
White



D 15
Gray



D 18
White



D 32
Black




D 36
Gray



D 38
Black




D 43
Black

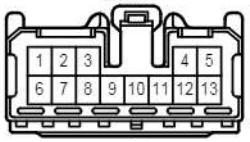

D 46
Dark Gray



D 54



D 57
Black



D 58
Gray



D 59
Gray



D 60
Black



D 61
Brown




D 62
Black



D 63
Black




E 1



(5L-E Except Cold Area Spec., 2KD-FTV M/T South Africa Production Except Cold Area Spec., 2TR-FE China)

E 1



(5L-E Cold Area Spec.)

E 2
Black




(1KD-FTV, 2KD-FTV, 5L-E)


m 1
Gray




m 2
Black

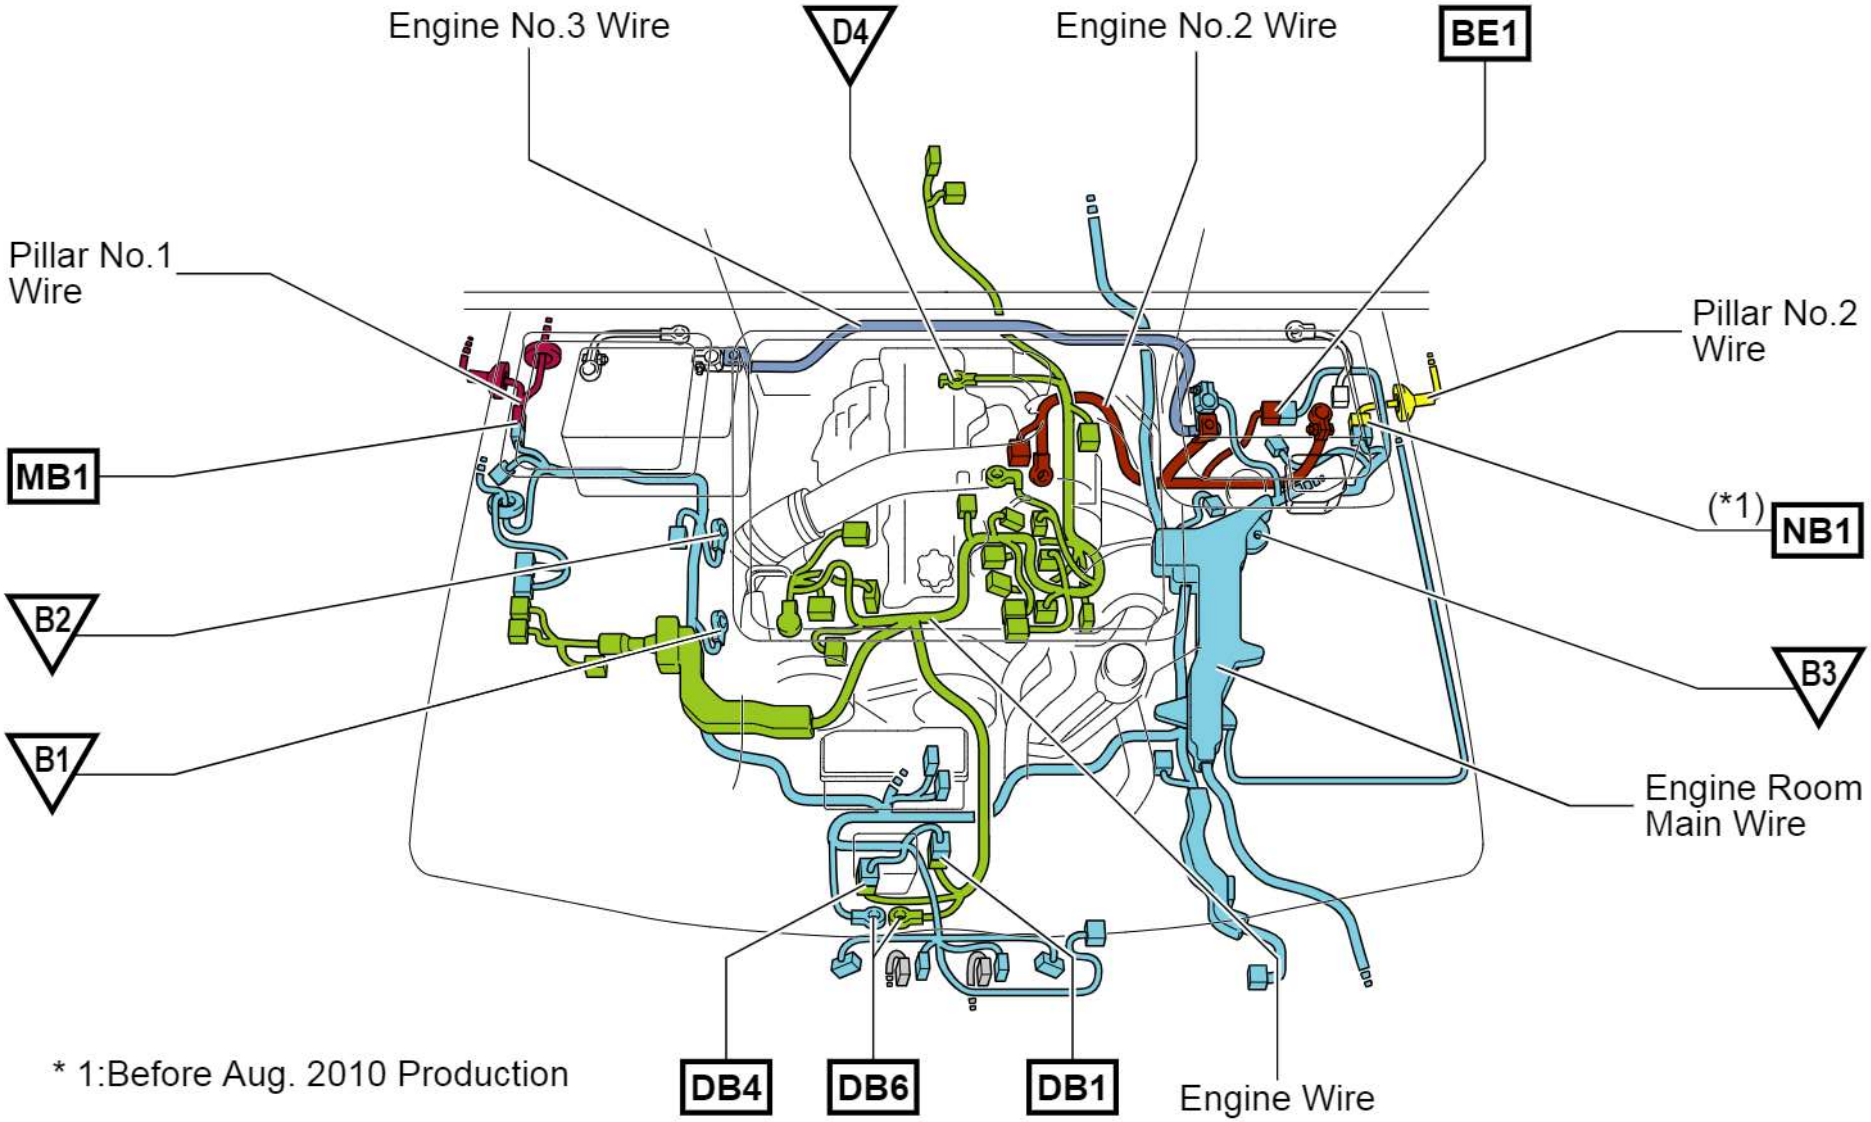


Engine No.3 Wire
D4
Engine No.2 Wire
BE1
Pillar No.1 Wire
Pillar No.2 Wire
MB1
(*1)
NB1
B2
B3
B1
Engine Room Main Wire
* 1:Before Aug. 2010 Production
DB4
DB6
DB1
Engine Wire

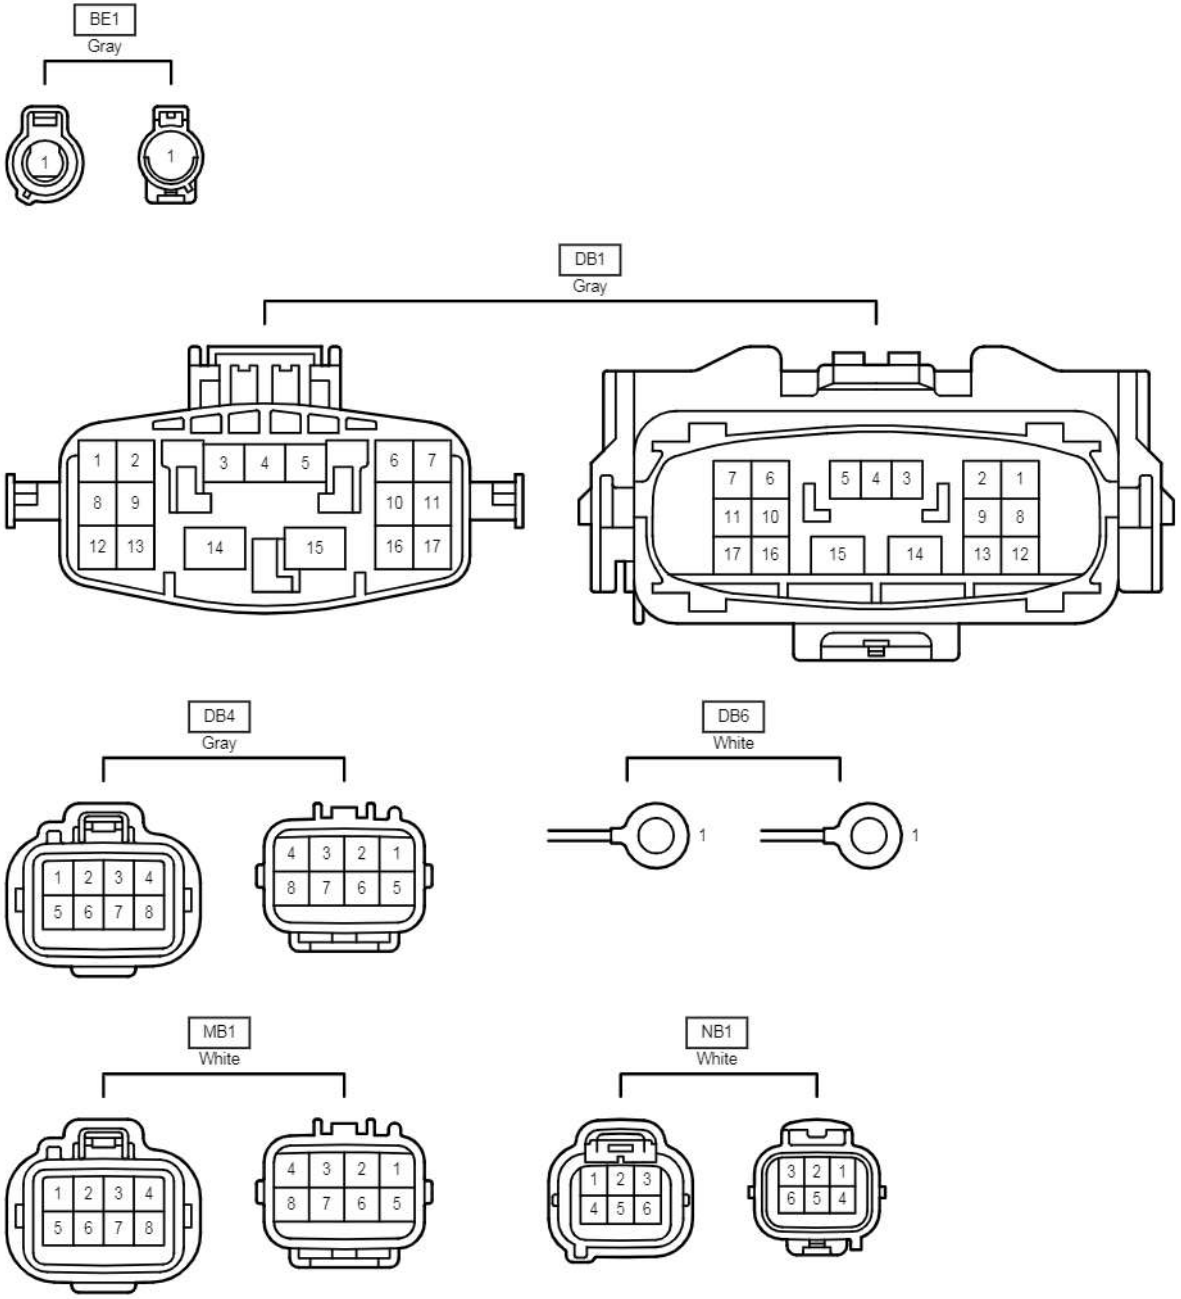
BE1
Gray
1
1
DB1
Gray
1 2 3 4 5 6 7
8 9 10 11
12 13 14 15 16 17
7 6 5 4 3 2 1
11 10 9 8
17 16 15 14 13 12
DB4
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
DB6
White
1
1
MB1
White
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
NB1
White
1 2 3
4 5 6
3 2 1
6 5 4

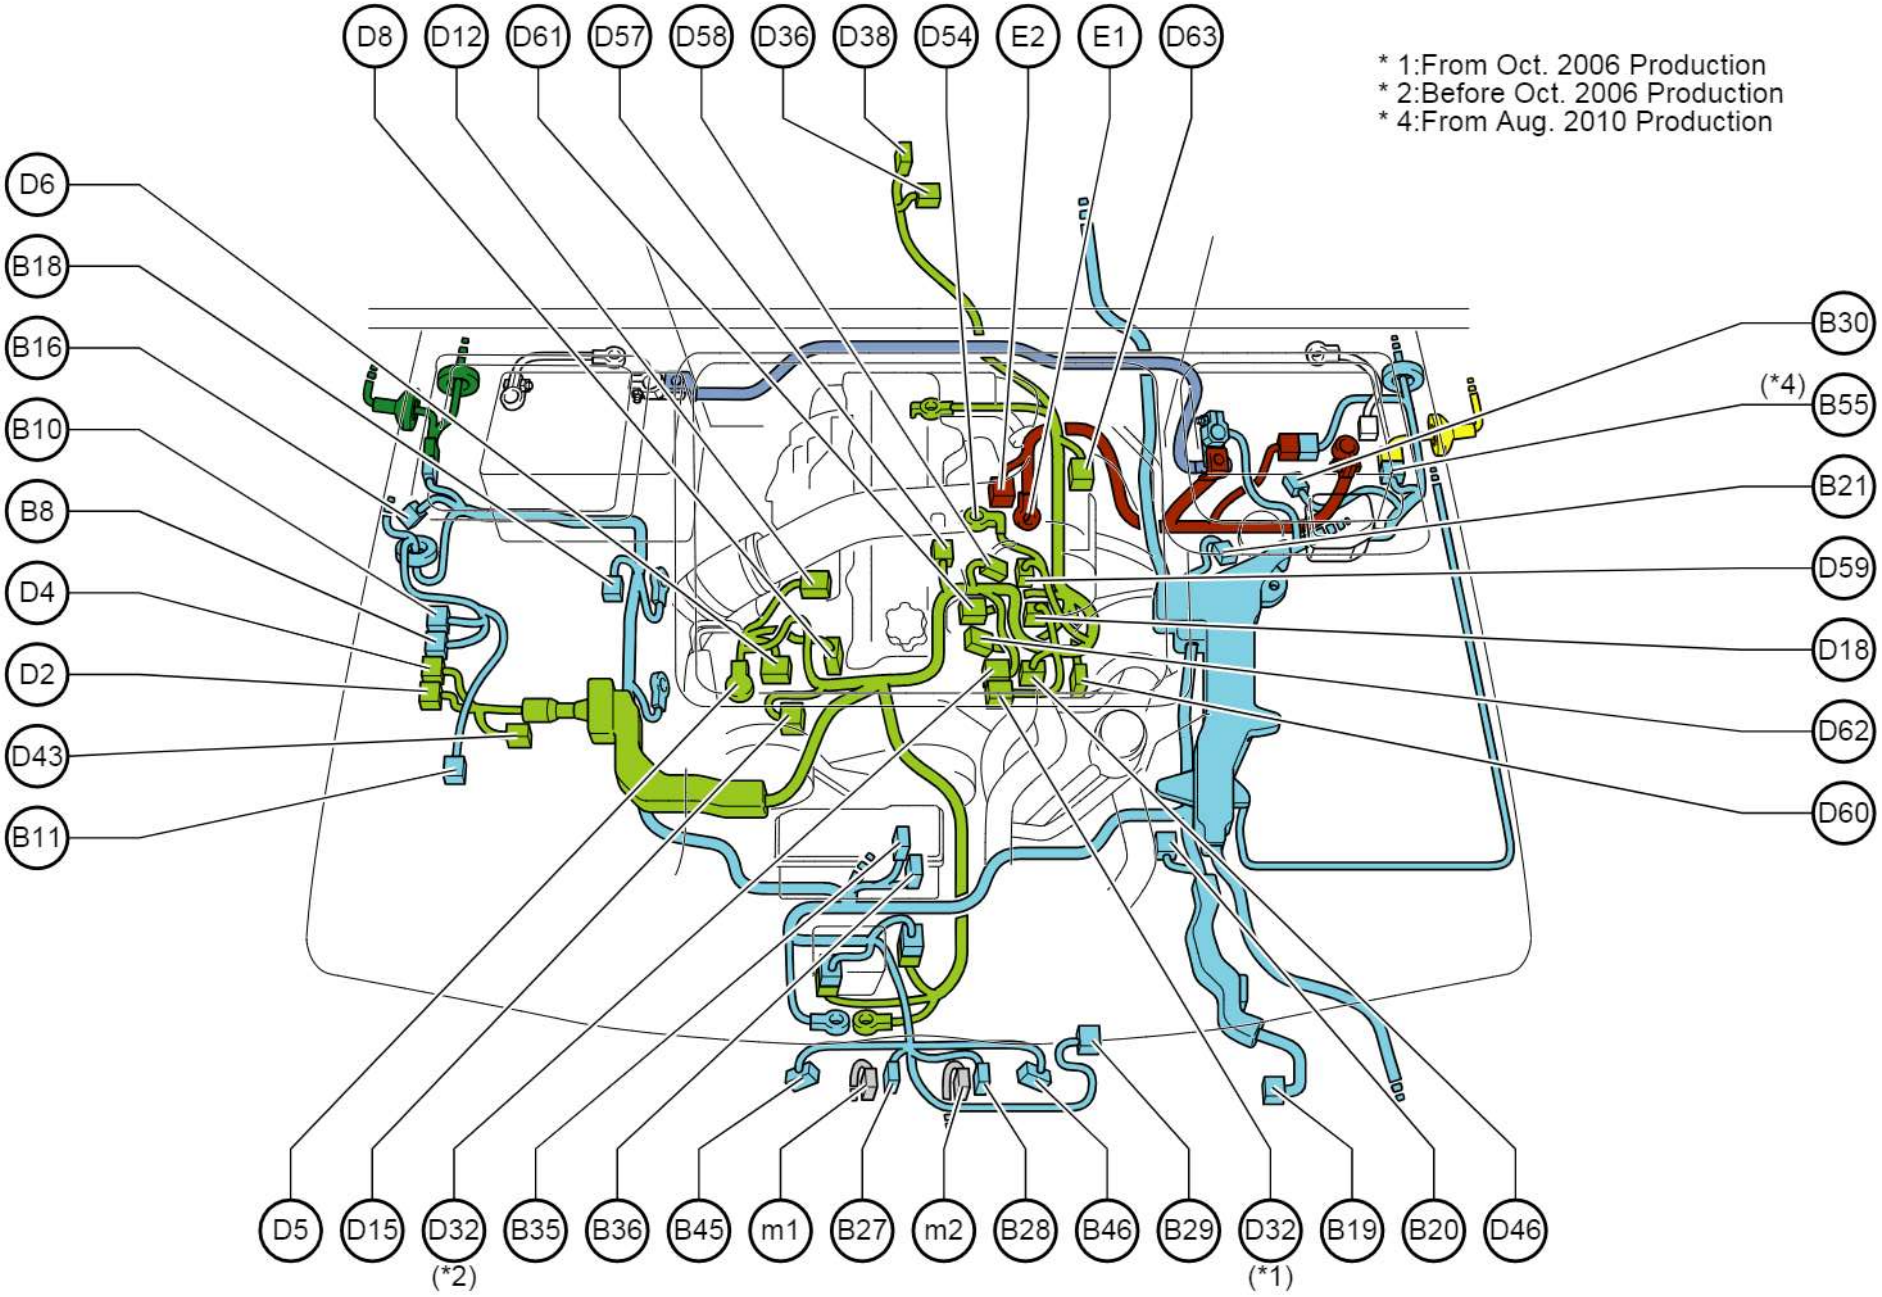

D8
D12
D61
D57
D58
D36
D38
D54
E2
E1
D63
* 1:From Oct. 2006 Production
* 2:Before Oct. 2006 Production
* 4:From Aug. 2010 Production
D6
B18
B16
B10
B8
D4
D2
D43
B11
B30
(*4)
B55
B21
D59
D18
D62
D60
D5
D15
D32
(*2)
B35
B36
B45
m1
B27
m2
B28
B46
B29
D32
(*1)
B19
B20
D46

B 8 Engine ECU
B 10 Engine ECU
B 11 Front Seat Inner Belt (Driver's Side)
B 16 A/C Magnetic Valve (Rear A/C)
B 18 Speed Sensor (Front RH)
B 19 Skid Control ECU with Actuator
B 20 Speed Sensor (Front LH)
B 21 Fuel Filter Warning SW
B 27 Cooling Fan ECU No.1
B 28 Cooling Fan ECU No.2
B 29 Water Temp. Sensor (Radiator)
B 30 Fuel Sedimentary Level Warning SW
B 35 Junction Connector
B 36 Junction Connector
B 45 Cooling Fan ECU No.1
B 46 Cooling Fan ECU No.2
B 55 Slide Door Control Junction (Male LH)


D 2 Engine ECU
D 4 Engine ECU
D 5 Alternator
D 6 Alternator
D 8 Engine Oil Pressure SW
D 12 Engine Oil Level Sensor
D 15 A/C Compressor
D 18 Engine Speed Sensor
D 32 Water Temp. Sensor (Engine Coolant)
D 36 Back-Up Lamp SW
D 38 Speed Sensor
D 43 Junction Connector
D 46 Fuel Temp. Sensor
D 54 Glow Plug
D 57 Manifold Absolute Pressure Sensor
D 58 Throttle Body Assembly
D 59 Spill Control Valve
D 60 Injection Pump Assembly
D 61 Timer Control Valve
D 62 Crankshaft Position Sensor
D 63 Throttle Position SW

E 1 Starter
E 1 Starter
E 2 Starter

B 8
White

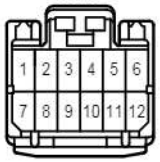

B 10
White

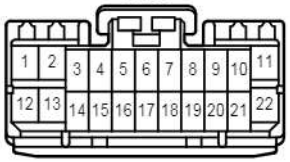

B 11
White




B 16
Gray



B 18
Black



B 19
Black

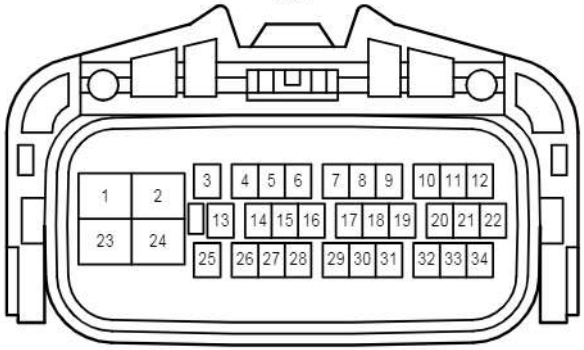

B 20
Gray



B 21
Black



B 27
Gray



B 28
Black




B 29
Black




B 30
Gray




B 35
Black

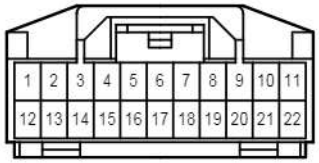


B 36
White

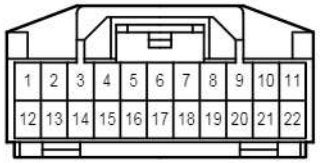

B 45
Black

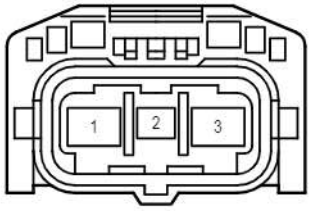


B 46
Black

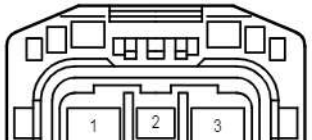

B 55
White



D 2
White

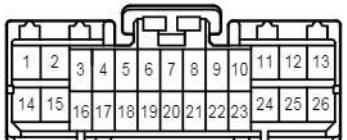

Position of Parts in Engine Compartment <RHD 5L-E>

D 8
White



D 12
White



D 15
Gray



D 18
White



D 32
Black




D 36
Gray



D 38
Black




D 43
Black

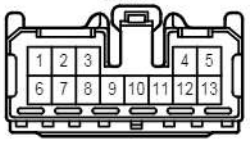

D 46
Dark Gray



D 54



D 57
Black



D 58
Gray



D 59
Gray



D 60
Black



D 61
Brown




D 62
Black



D 63
Black




E 1



(5L-E Cold Area Spec.)

E 1



(5L-E Except Cold Area Spec., 2KD-FTV M/T South Africa Production Except Cold Area Spec., 2TR-FE China)

E 2
Black




(1KD-FTV, 2KD-FTV, 5L-E)

m 1
Gray





m 2
Black

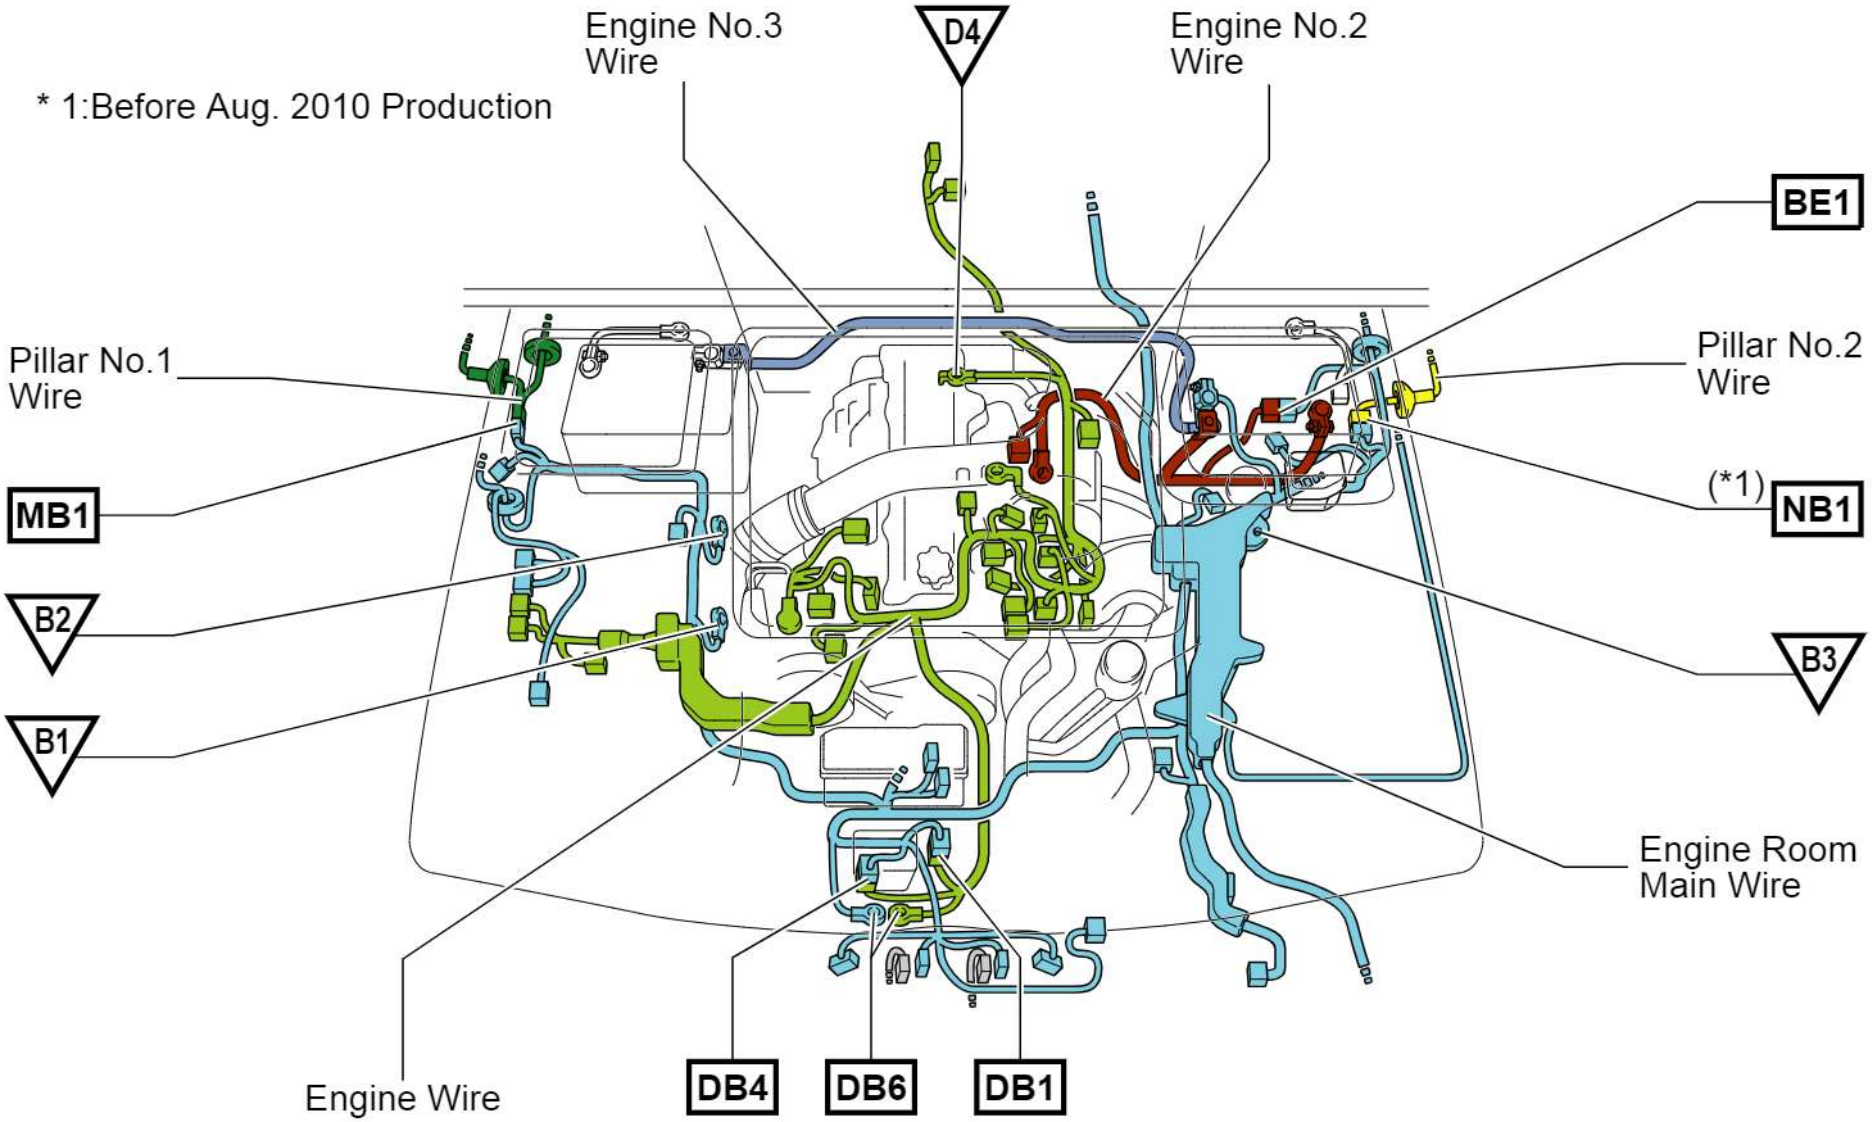


* 1:Before Aug. 2010 Production
Engine No.3 Wire
D4
Engine No.2 Wire
BE1
Pillar No.1 Wire
Pillar No.2 Wire
(*1)
NB1
MB1
B2
B1
B3
Engine Room Main Wire
Engine Wire
DB4
DB6
DB1


Wire and Wire , Ground Points in Engine Compartment <RHD 5L-E>

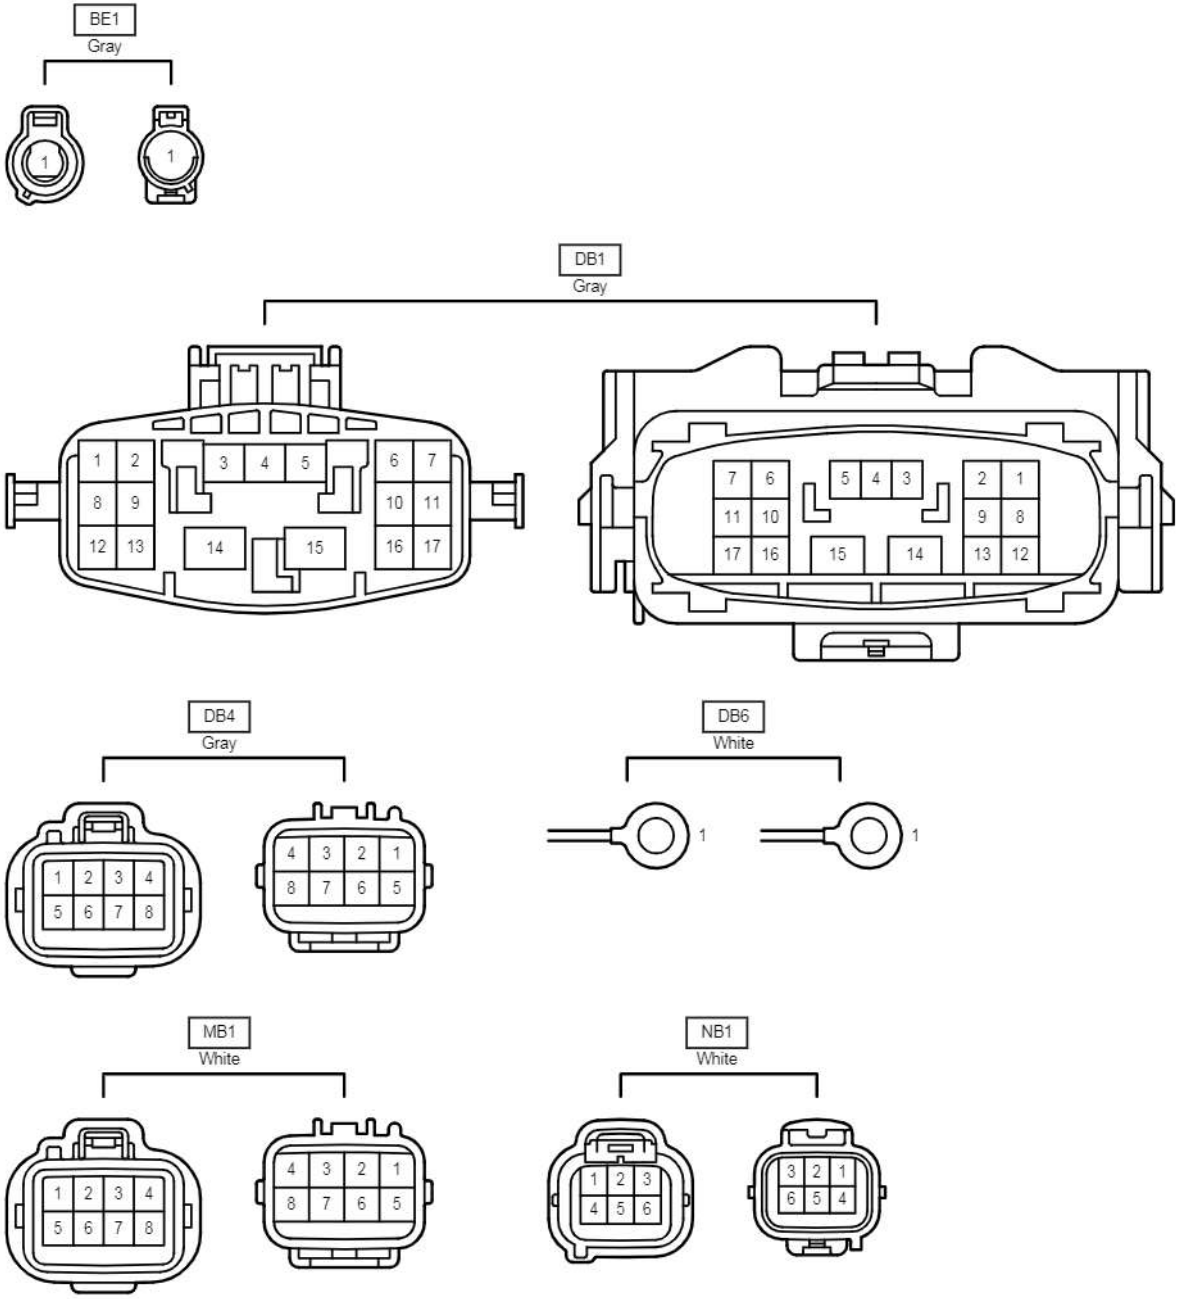

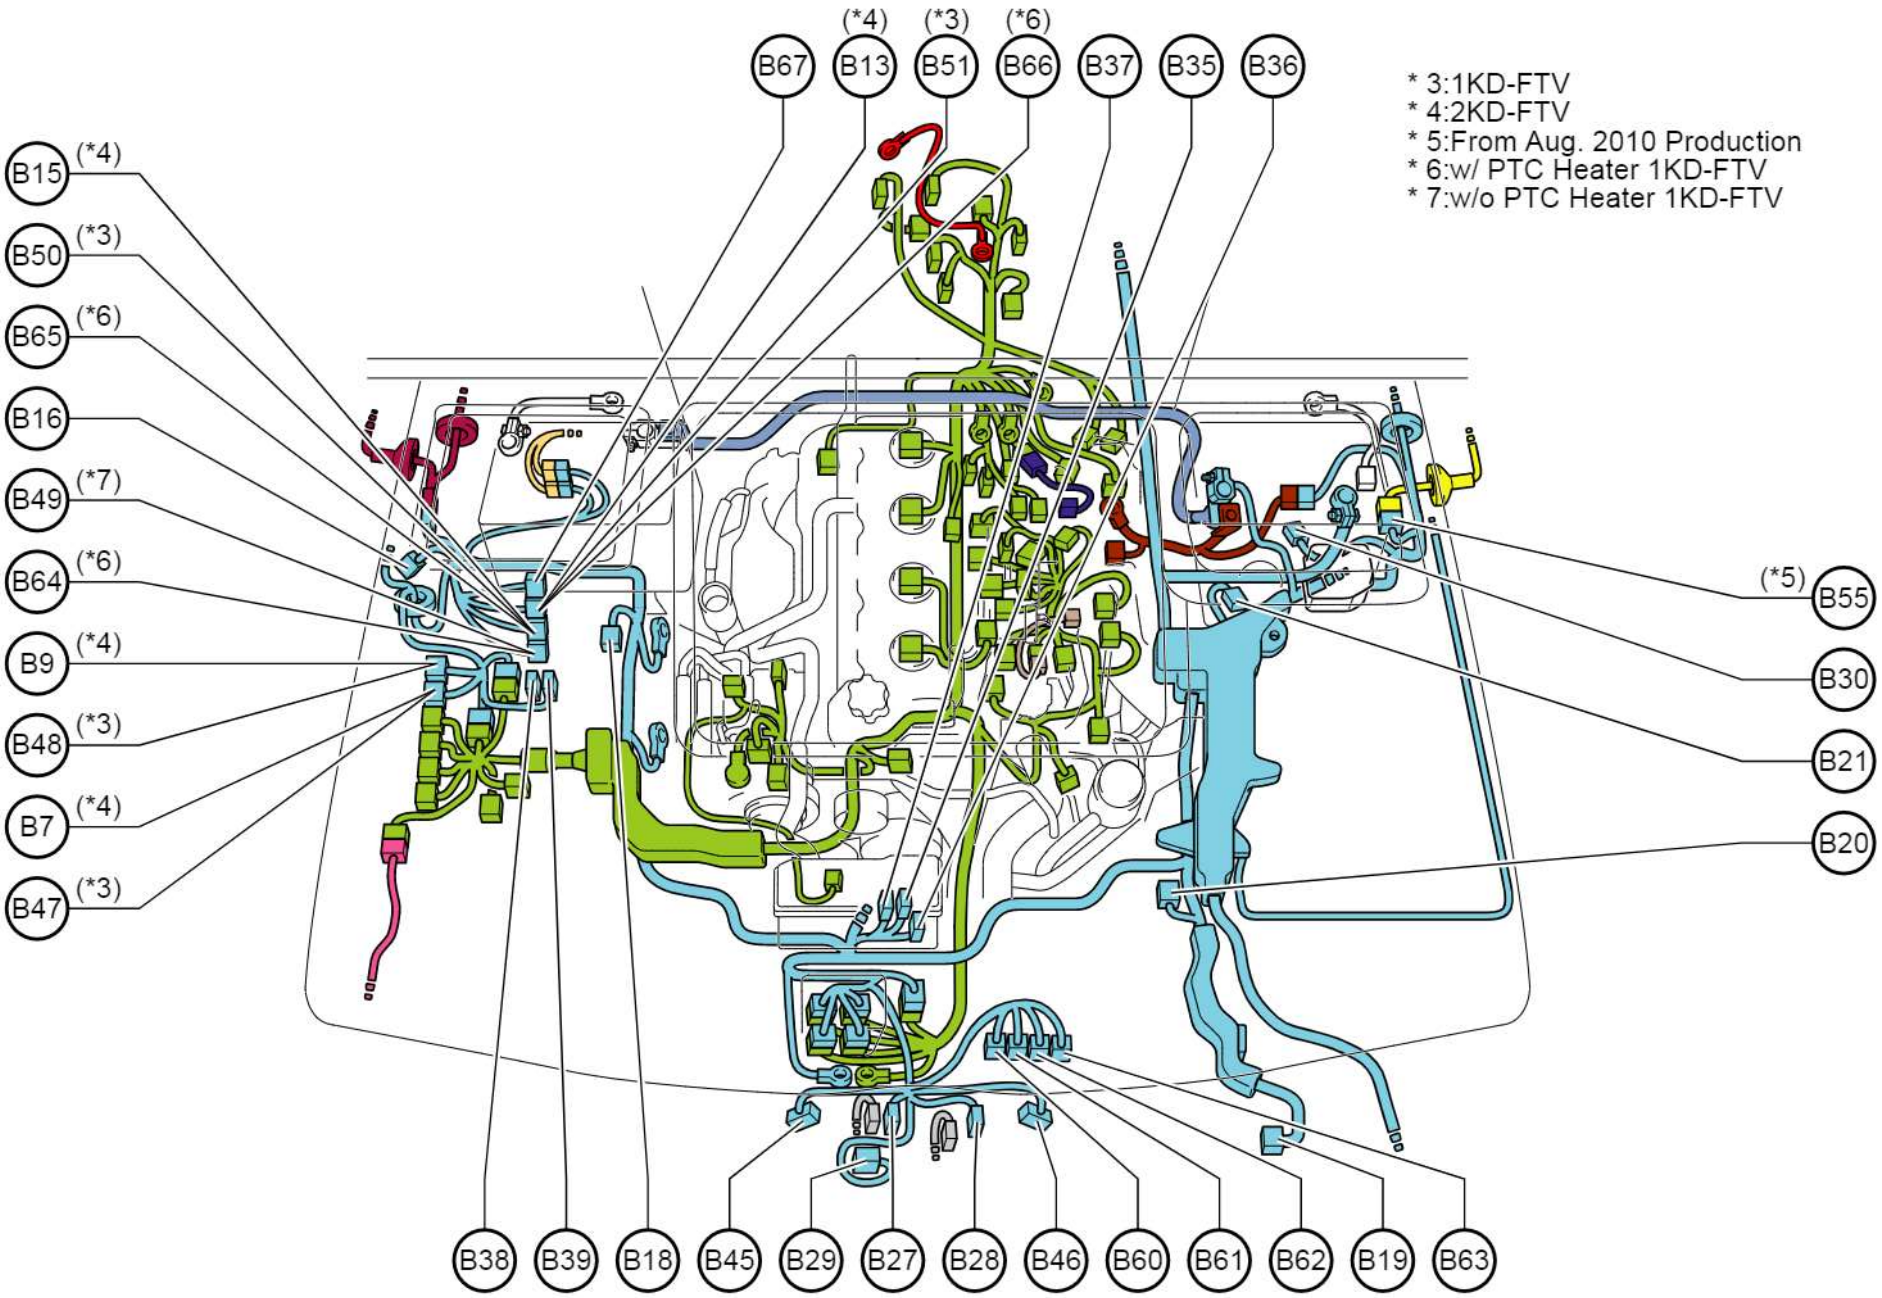

(*4)
(*3)
(*6)
B67
B13
B51
B66
B37
B35
B36
* 3:1KD-FTV
* 4:2KD-FTV
* 5:From Aug. 2010 Production
* 6:w/ PTC Heater 1KD-FTV
* 7:w/o PTC Heater 1KD-FTV
B15 (*4)
B50 (*3)
B65 (*6)
B16
B49 (*7)
B64 (*6)
B9 (*4)
B48 (*3)
B7 (*4)
B47 (*3)
(*5) B55
B30
B21
B20
B38
B39
B18
B45
B29
B27
B28
B46
B60
B61
B62
B19
B63

B	7	Engine ECU
B	9	Engine ECU
B	13	Injector Driver (EDU)
B	15	Injector Driver (EDU)
B	16	A/C Magnetic Valve (Rear A/C)
B	18	Speed Sensor (Front RH)
B	19	Skid Control ECU with Actuator
B	20	Speed Sensor (Front LH)
B	21	Fuel Filter Warning SW
B	27	Cooling Fan ECU No.1
B	28	Cooling Fan ECU No.2
B	29	Water Temp. Sensor (Radiator)
B	30	Fuel Sedimentary Level Warning SW
B	35	Junction Connector
B	36	Junction Connector
B	37	Junction Connector
B	38	Junction Connector
B	39	Junction Connector
B	45	Cooling Fan ECU No.1
B	46	Cooling Fan ECU No.2
B	47	Engine ECU
B	48	Engine ECU
B	49	Injector Driver (EDU)
B	50	Injector Driver (EDU)
B	51	Injector Driver (EDU)
B	55	Slide Door Control Junction (Male LH)
B	60	Injector Driver (EDU)
B	61	Injector Driver (EDU)
B	62	Injector Driver (EDU)
B	63	Injector Driver (EDU)
B	64	Glow Plug Controller
B	65	Glow Plug Controller
B	66	Glow Plug Controller
B	67	Glow Plug Controller


B 7
White

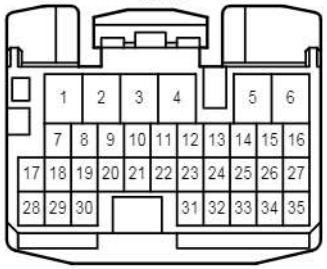


B 9
White

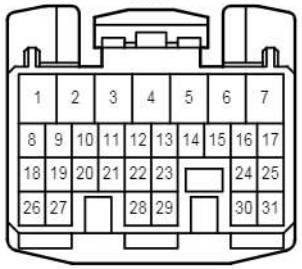

B 13
Black

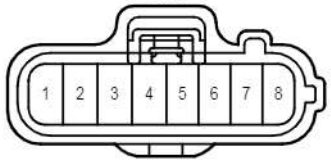

B 15
Dark Gray

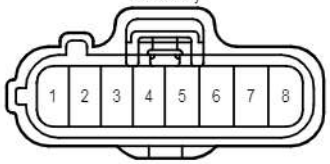


B 16
Gray



B 18
Black



B 19
Black

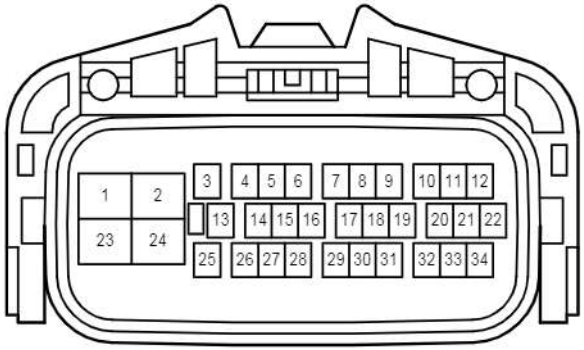

B 20
Gray



B 21
Black



B 27
Gray



B 28
Black




B 29
Black




B 30
Gray




B 35
Black




B 36
White




B 37
Black




B 38
Black



B 47
White

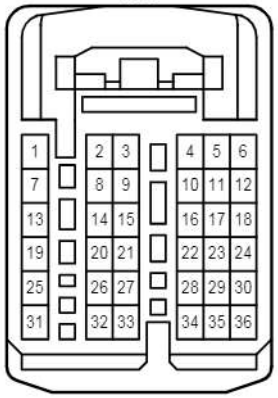

B 48
White

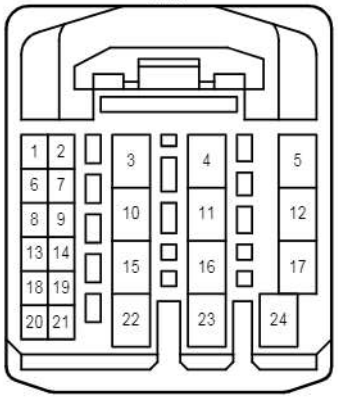

B 49
Black



B 50
White



B 51
Gray



B 55
White



B 60
Dark Gray



B 61
Gray



B 62
White




B 63
Blue



B 64
White



B 65
Gray

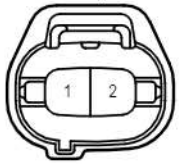


B 66
Dark Gray




B 67
Black

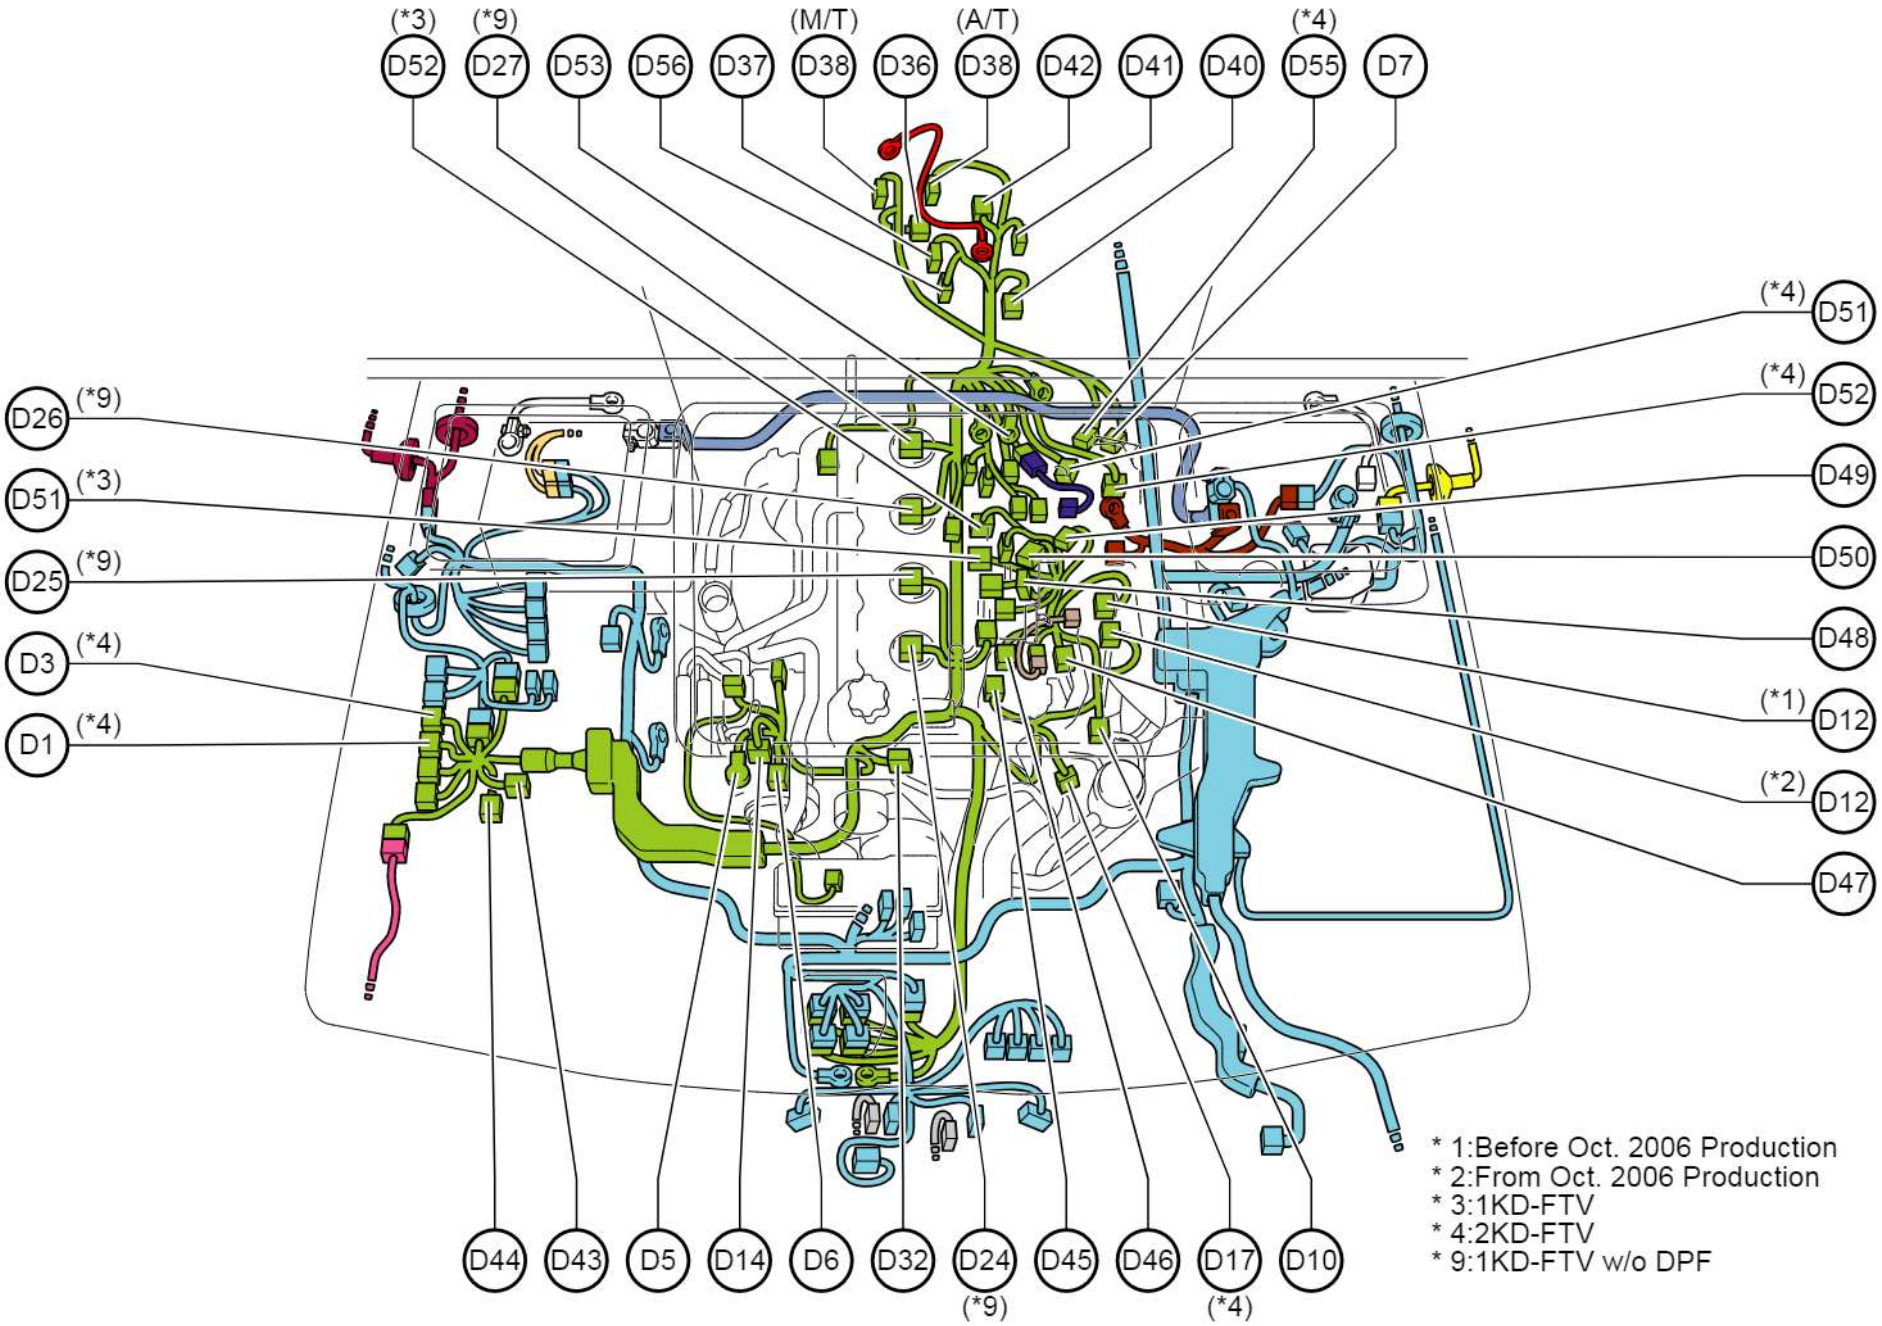



(*3) D52
(*9) D27
D53
D56
D37
(M/T) D38
D36
(A/T) D38
D42
D41
D40
(*4) D55
D7
(*4) D51
(*4) D52
D49
D50
D48
(*1) D12
(*2) D12
D47
(*9) D26
(*3) D51
(*9) D25
(*4) D3
(*4) D1
D44
D43
D5
D14
D6
D32
D24 (*9)
D45
D46
D17 (*4)
D10
* 1:Before Oct. 2006 Production
* 2:From Oct. 2006 Production
* 3:1KD-FTV
* 4:2KD-FTV
* 9:1KD-FTV w/o DPF

D	1	Engine ECU
D	3	Engine ECU
D	5	Alternator
D	6	Alternator
D	7	Engine Oil Pressure SW
D	10	Camshaft Position Sensor
D	12	Engine Oil Level Sensor
D	14	A/C Compressor
D	17	Crankshaft Position Sensor
D	24	Fuel Injector (No.1)
D	25	Fuel Injector (No.2)
D	26	Fuel Injector (No.3)
D	27	Fuel Injector (No.4)
D	32	Water Temp. Sensor (Engine Coolant)
D	36	Back-Up Lamp SW
D	37	Park/Neutral Position SW
D	38	Speed Sensor
D	40	Transmission Revolution Sensor (Input)
D	41	ECT Solenoid
D	42	Transmission Revolution Sensor (Output)
D	43	Junction Connector
D	44	Junction Connector
D	45	Fuel Pressure Sensor
D	46	Fuel Temp. Sensor
D	47	Suction Control Valve
D	48	Throttle Body Assembly
D	49	Inlet Air Temp. Sensor (Intake Manifold)
D	50	Throttle Body Assembly
D	51	Turbo Pressure Sensor
D	52	EGR Valve Position Sensor
D	53	Glow Plug
D	55	VRV (EGR)
D	56	A/T Fluid Temp. Sensor


D 1
White

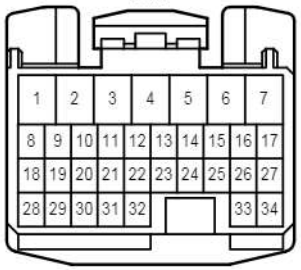

D 3
White

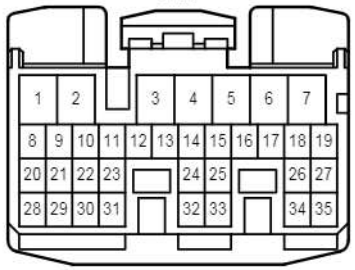


D 5



(Before Sep. 2007 Production)

D 5



(From Sep. 2007 Production)

D 6
Green



D 7
Black



D 10
Black



D 12
White




D 14
Gray




D 17
Gray




D 24
Brown




D 25
Gray



D 26
Brown



D 27
Gray




D 32
Black



D 36
Gray



D 37
Gray

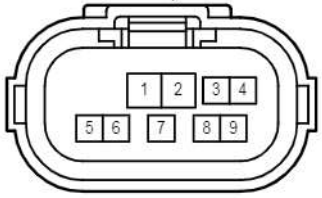

D 38
Black



D 40
Black



D 41
Gray



D 42
Black



Position of Parts in Engine Compartment <LHD 1KD-FTV, 2KD-FTV>

D 48
Black



D 49
Gray



D 50
Black




D 51
Black



D 52
Black




D 53



(1KD-FTV Before Sep. 2007 Production, 2KD-FTV)

D 53




(1KD-FTV From Sep. 2007 Production)

D 55
Brown



D 56
White

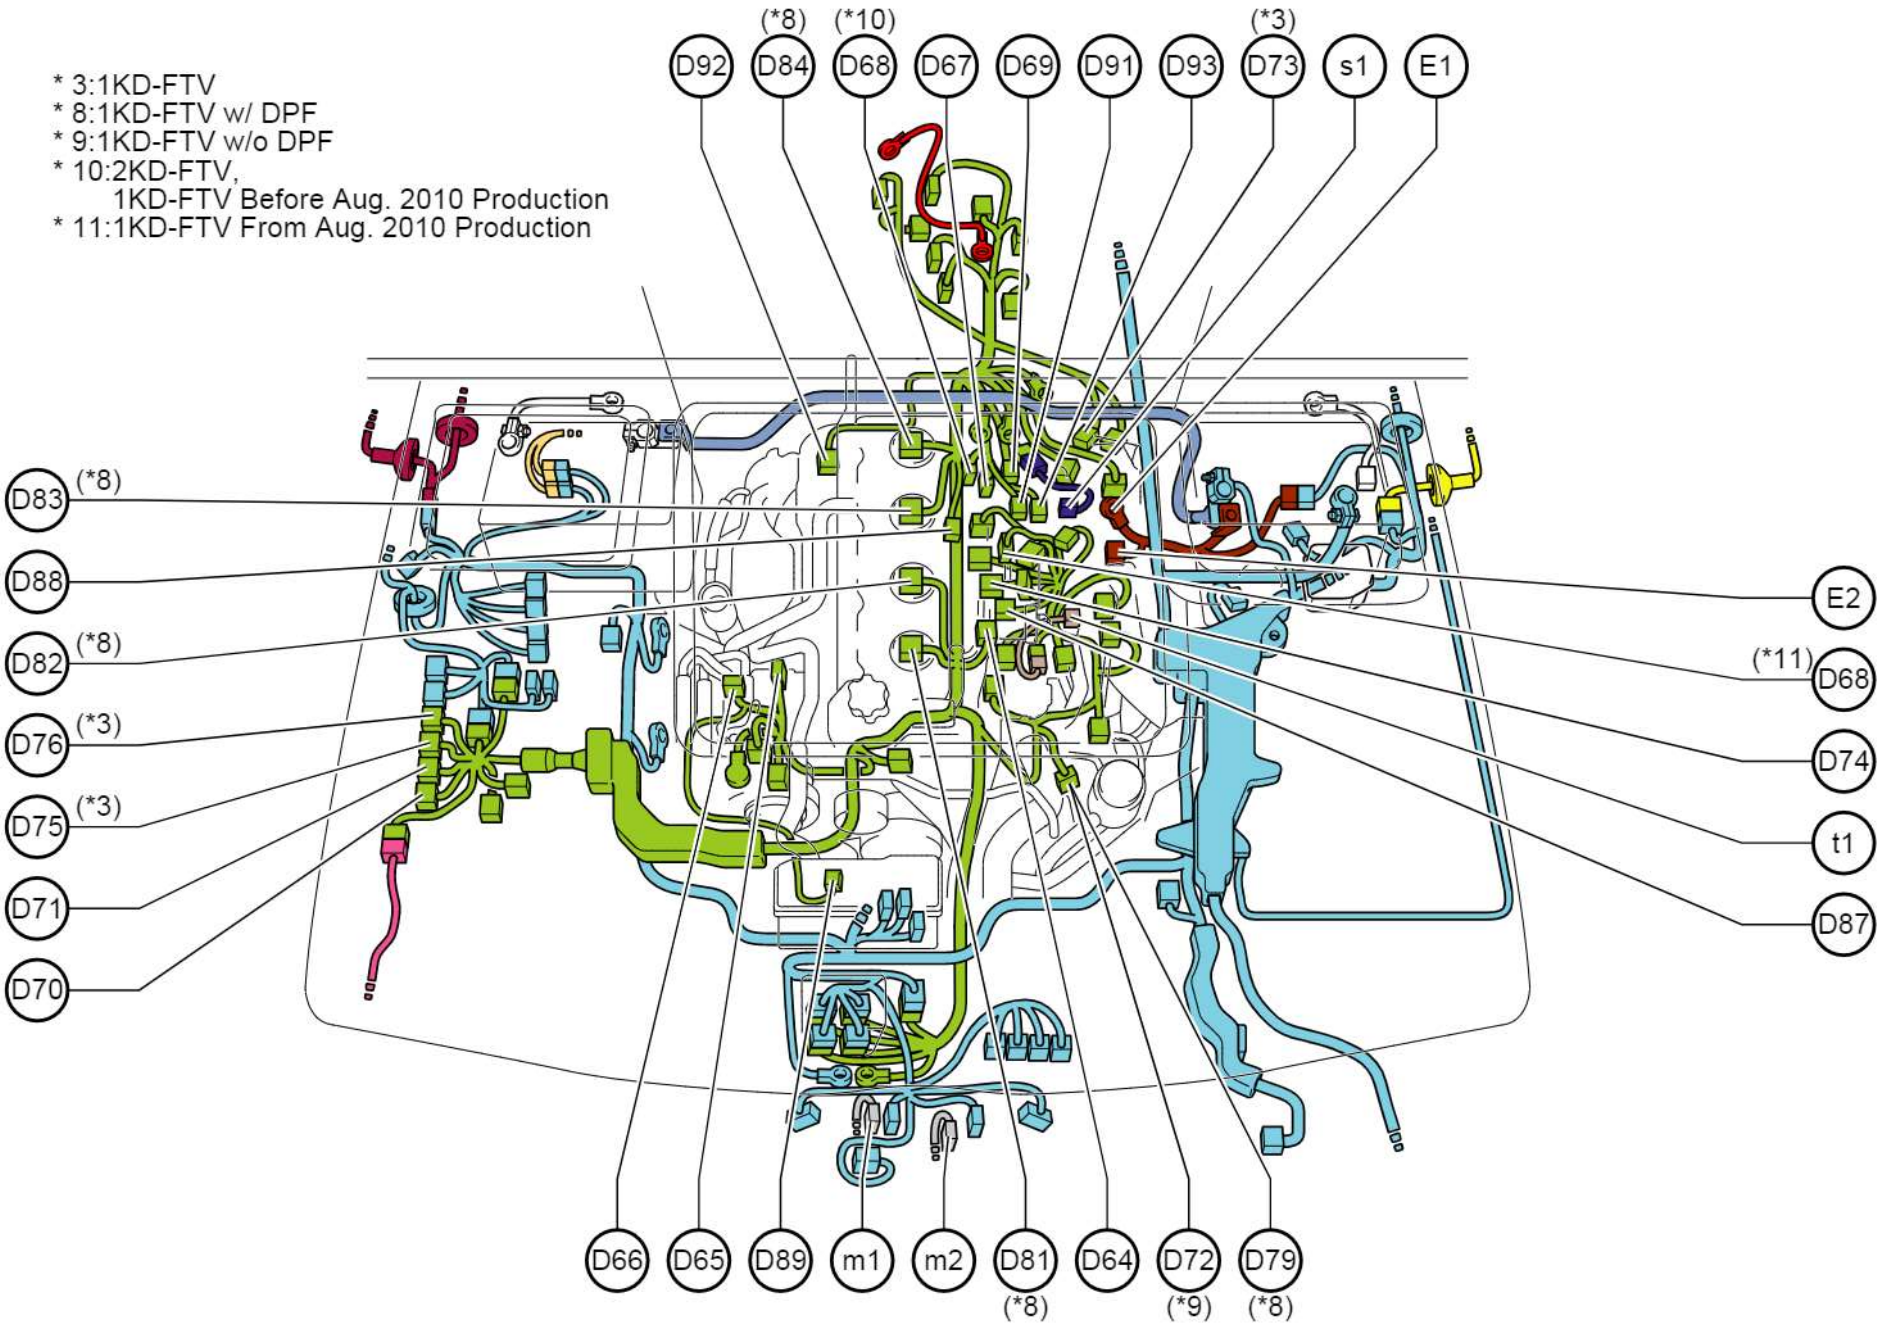


* 3:1KD-FTV
* 8:1KD-FTV w/ DPF
* 9:1KD-FTV w/o DPF
* 10:2KD-FTV,
1KD-FTV Before Aug. 2010 Production
* 11:1KD-FTV From Aug. 2010 Production
D92
(*8)
D84
(*10)
D68
D67
D69
D91
D93
(*3)
D73
s1
E1
D83
(*8)
D88
D82
(*8)
D76
(*3)
D75
(*3)
D71
D70
E2
(*11)
D68
D74
t1
D87
D66
D65
D89
m1
m2
D81
(*8)
D64
D72
(*9)
D79
(*8)

D 64 Pressure Discharge Valve
D 65 Turbocharger Variable Nozzle Motor Assembly
D 66 Turbocharger Variable Nozzle Motor Assembly
D 67 Swirl Control Valve
D 68 VSV (EGR Cut)
D 69 Fuel Pressure Sensor
D 70 Engine ECU
D 71 Engine ECU
D 72 Crankshaft Position Sensor
D 73 VRV (EGR)
D 74 VSV (EGR)
D 75 Engine ECU
D 76 Engine ECU
D 79 Crankshaft Position Sensor
D 81 Fuel Injector Assembly (No.1)
D 82 Fuel Injector Assembly (No.2)
D 83 Fuel Injector Assembly (No.3)
D 84 Fuel Injector Assembly (No.4)
D 87 Pressure Discharge Valve
D 88 Glow Plug
D 89 Oil Pressure Switching Valve Assembly
D 91 Suction Control Valve Assembly
D 92 Exhaust Fuel Addition Injector Assembly
D 93 Oil Pressure Sender Gage Assembly

E 1 Starter
E 1 Starter
E 1 Starter
E 2 Starter

m 1 Cooling Fan ECU No.1 , Cooling Fan Motor No.1
m 2 Cooling Fan ECU No.2 , Cooling Fan Motor No.1

s 1 Electric EGR Control Valve Assembly

t 1 Diesel Throttle Body Assembly


D 64
Gray



D 65
Black




D 66
Black

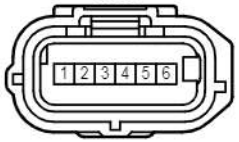

D 67
Blue




D 68
Brown

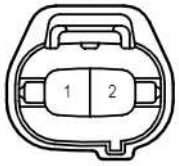


D 69
Black



D 70
White

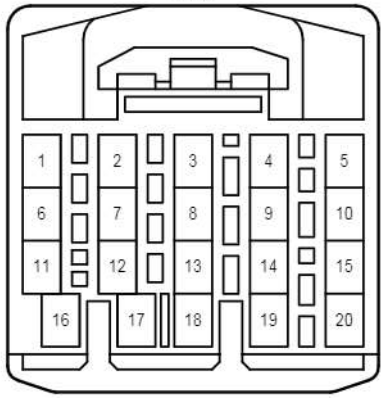

D 71
White

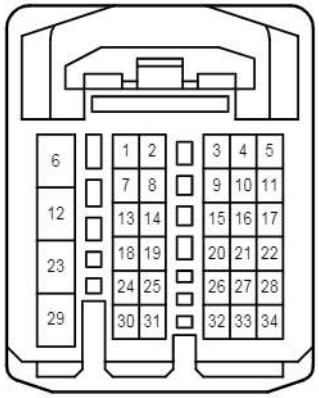

D 72
Dark Gray




D 73
Black




D 74
Blue



D 75
White

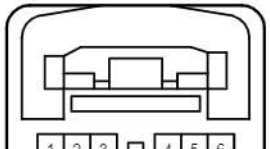


D 76
White

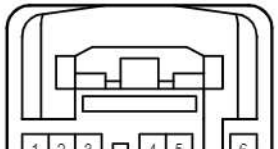


D 79
Dark Gray




D 81
Black

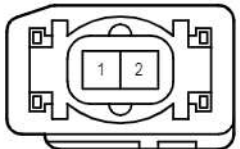


D 82
Gray

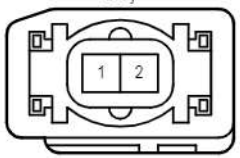


D 83
Black

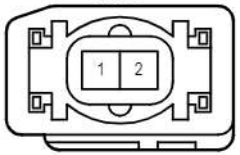

D 84
Gray

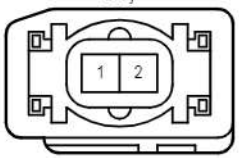

D 87
Gray

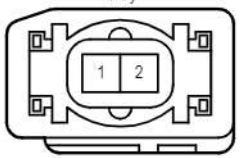

D 88
Black



D 89
Black



D 91
Brown




D 92
Black



D 93
Black




E 1




(2KD-FTV A/T Except Cold Area Spec.)

E 1



(1KD-FTV Russia, 2KD-FTV Cold Area Spec.)

E 1



(1KD-FTV Except Russia, 2KD-FTV M/T Except South Africa Production Except Cold Area Spec.)

E 2
Black



(1KD-FTV, 2KD-FTV, 5L-E)

m 1
Gray



m 2
Black





s 1
Black




t 1
Black

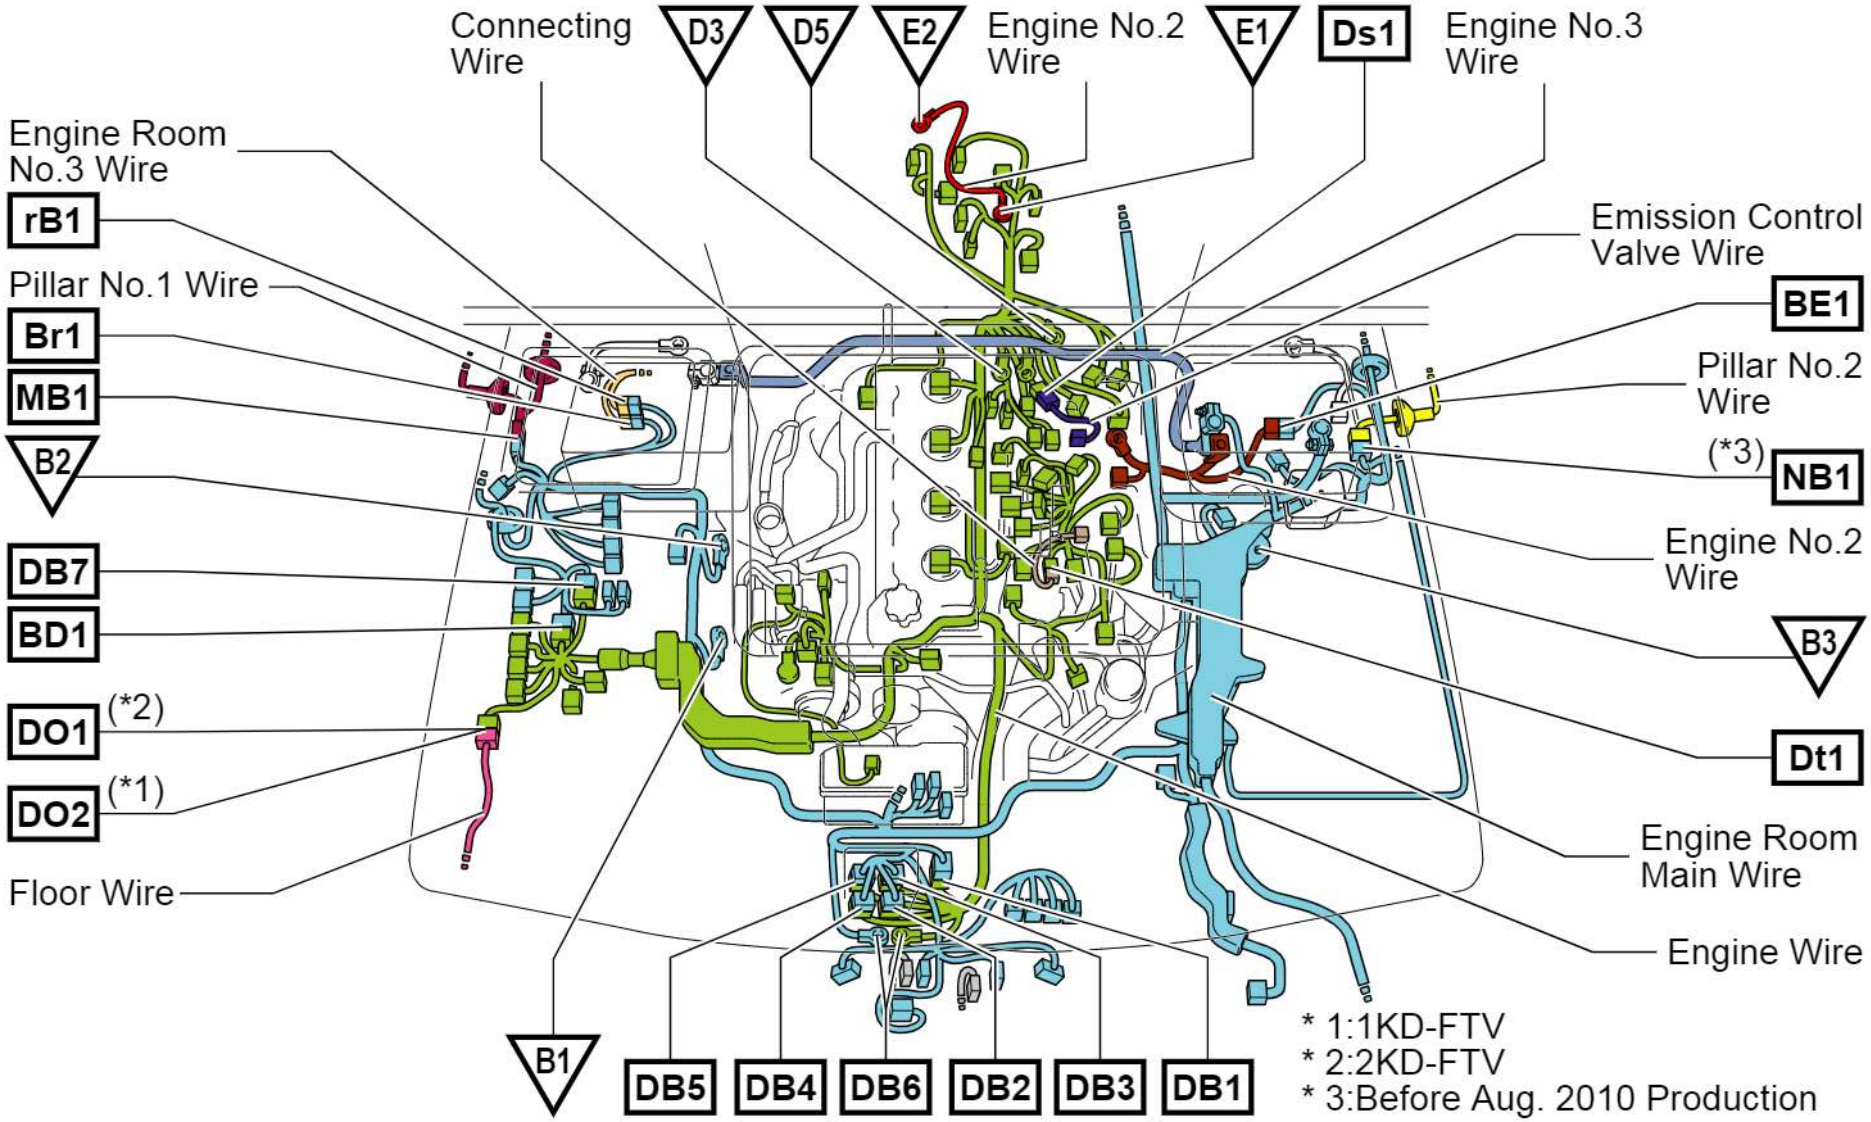



Connecting Wire
D3
D5
E2
Engine No.2 Wire
E1
Ds1
Engine No.3 Wire
Engine Room No.3 Wire
rB1
Pillar No.1 Wire
Br1
MB1
B2
DB7
BD1
DO1
(*2)
DO2
(*1)
Floor Wire
Emission Control Valve Wire
BE1
Pillar No.2 Wire
(*3)
NB1
Engine No.2 Wire
B3
Dt1
Engine Room Main Wire
Engine Wire
B1
DB5
DB4
DB6
DB2
DB3
DB1
* 1:1KD-FTV
* 2:2KD-FTV
* 3:Before Aug. 2010 Production

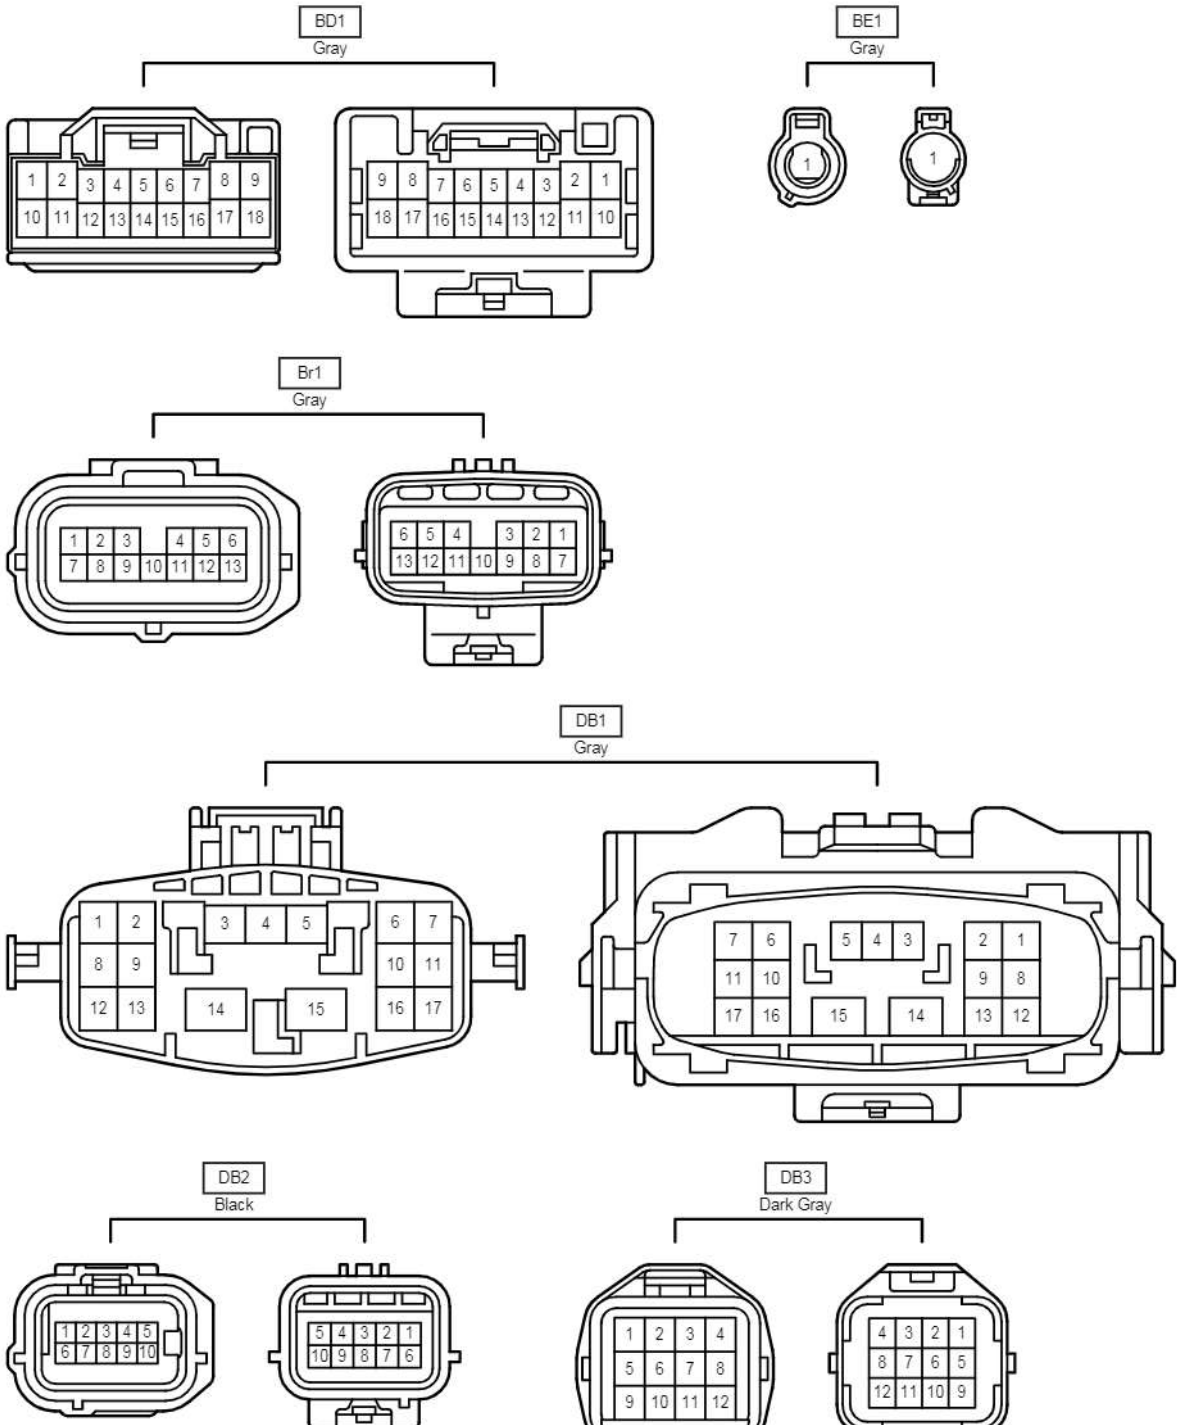
BD1
Gray
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18
9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11 10
BE1
Gray
1
1
Br1
Gray
1 2 3 4 5 6
7 8 9 10 11 12 13
6 5 4 3 2 1
13 12 11 10 9 8 7
DB1
Gray
1 2 3 4 5 6 7
8 9 10 11
12 13 14 15 16 17
7 6 5 4 3 2 1
11 10 9 8
17 16 15 14 13 12
DB2
Black
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6
DB3
Dark Gray
1 2 3 4
5 6 7 8
9 10 11 12
4 3 2 1
8 7 6 5
12 11 10 9


Wire and Wire , Ground Points in Engine Compartment <LHD 1KD-FTV, 2KD-FTV>

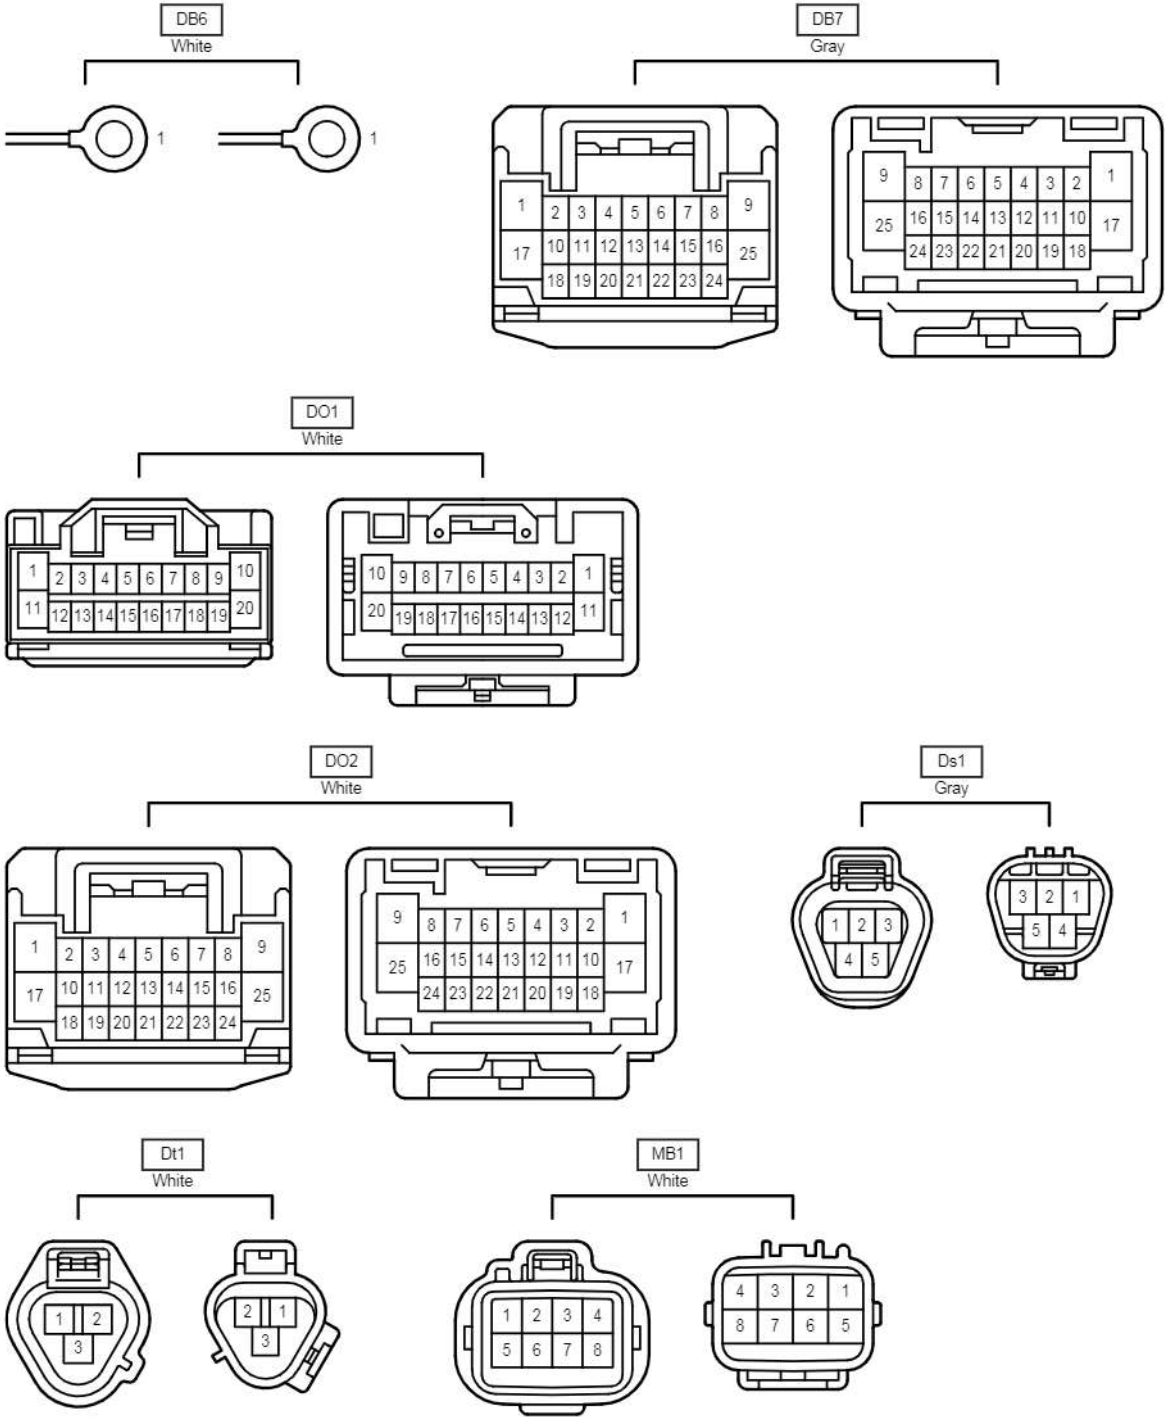

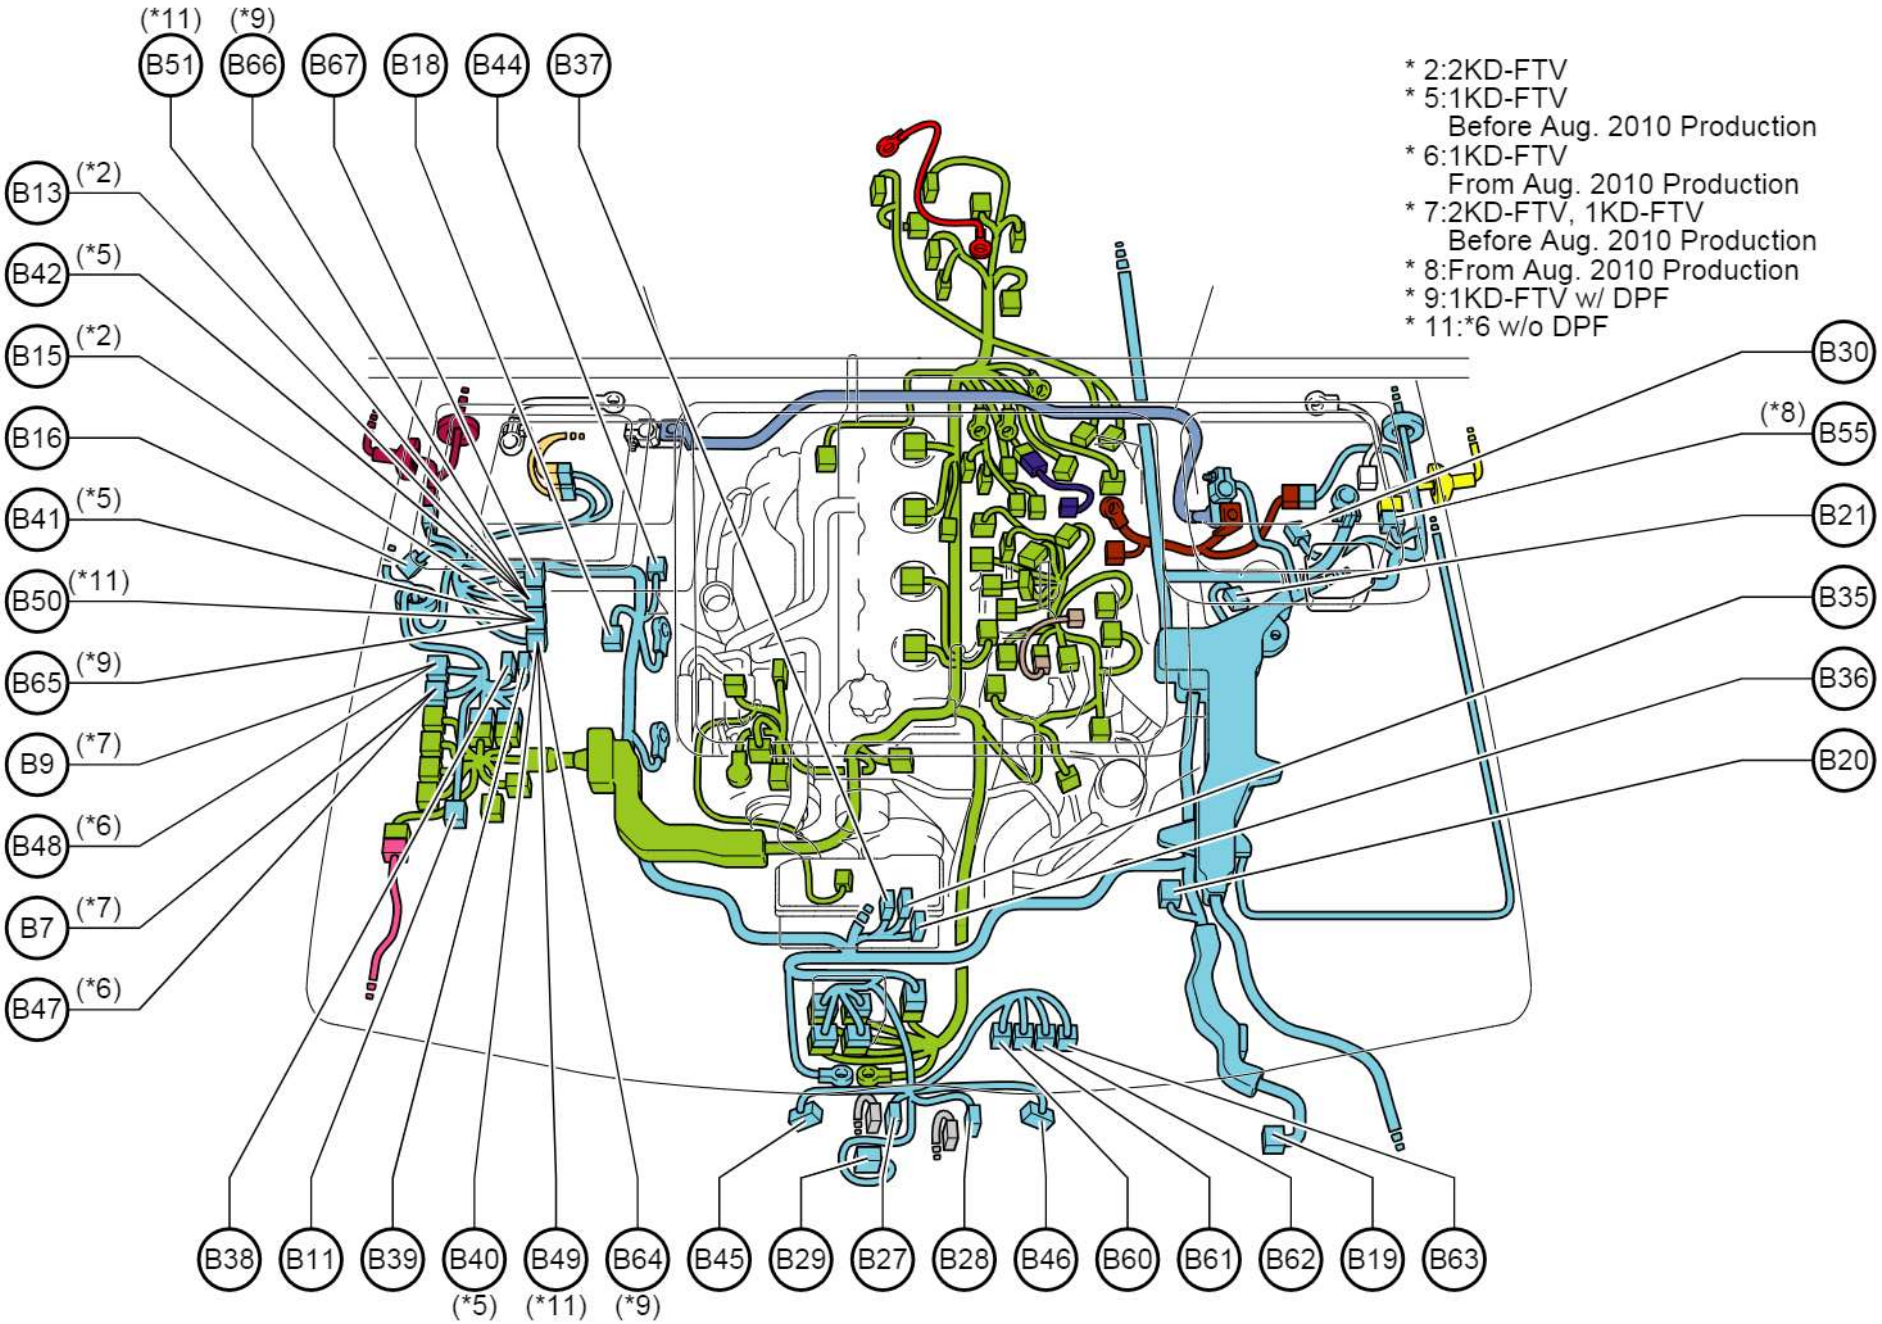

(*11) B51
(*9) B66
B67
B18
B44
B37
B13 (*2)
B42 (*5)
B15 (*2)
B16
B41 (*5)
B50 (*11)
B65 (*9)
B9 (*7)
B48 (*6)
B7 (*7)
B47 (*6)
B30
(*8) B55
B21
B35
B36
B20
B38
B11
B39
B40 (*5)
B49 (*11)
B64 (*9)
B45
B29
B27
B28
B46
B60
B61
B62
B19
B63
* 2:2KD-FTV
* 5:1KD-FTV
Before Aug. 2010 Production
* 6:1KD-FTV
From Aug. 2010 Production
* 7:2KD-FTV, 1KD-FTV
Before Aug. 2010 Production
* 8:From Aug. 2010 Production
* 9:1KD-FTV w/ DPF
* 11:*6 w/o DPF

B	7	Engine ECU
B	9	Engine ECU
B	11	Front Seat Inner Belt (Driver's Side)
B	13	Injector Driver (EDU)
B	15	Injector Driver (EDU)
B	16	A/C Magnetic Valve (Rear A/C)
B	18	Speed Sensor (Front RH)
B	19	Skid Control ECU with Actuator
B	20	Speed Sensor (Front LH)
B	21	Fuel Filter Warning SW
B	27	Cooling Fan ECU No.1
B	28	Cooling Fan ECU No.2
B	29	Water Temp. Sensor (Radiator)
B	30	Fuel Sedimentary Level Warning SW
B	35	Junction Connector
B	36	Junction Connector
B	37	Junction Connector
B	38	Junction Connector
B	39	Junction Connector
B	40	Injector Driver (EDU)
B	41	Injector Driver (EDU)
B	42	Injector Driver (EDU)
B	44	Option Connector (TVSS Siren)
B	45	Cooling Fan ECU No.1
B	46	Cooling Fan ECU No.2
B	47	Engine ECU
B	48	Engine ECU
B	49	Injector Driver (EDU)
B	50	Injector Driver (EDU)
B	51	Injector Driver (EDU)
B	55	Slide Door Control Junction (Male LH)
B	60	Injector Driver (EDU)
B	61	Injector Driver (EDU)
B	62	Injector Driver (EDU)
B	63	Injector Driver (EDU)
B	64	Glow Plug Controller
B	65	Glow Plug Controller
B	66	Glow Plug Controller
B	67	Glow Plug Controller

B 7
White

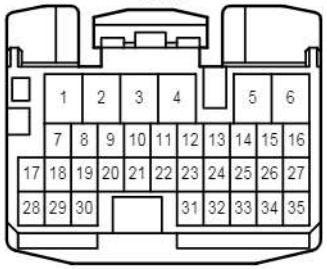


B 9
White

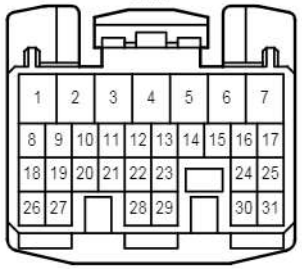


B 11
White



B 13
Black

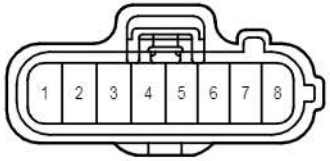

B 15
Dark Gray

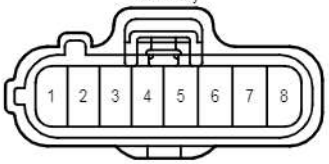


B 16
Gray



B 18
Black



B 19
Black

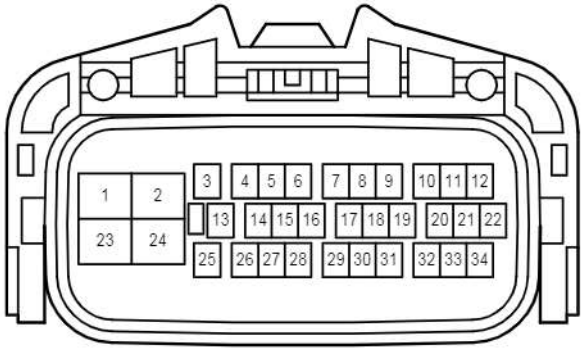

B 20
Gray



B 21
Black



B 27
Gray



B 28
Black




B 29
Black




B 30
Gray




B 35
Black




B 36
White



B 37
Black



B 38
Black



B 41
Gray



(From Sep. 2007 Production until Apr. 2009 Production)

B 41
White



(From Apr. 2009 Production)

B 42
White



(Before Apr. 2009 Production)

B 42
Gray




(From Apr. 2009 Production)


B 44
Gray




B 45
Black

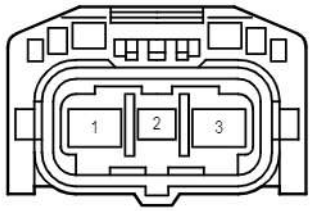


B 46
Black

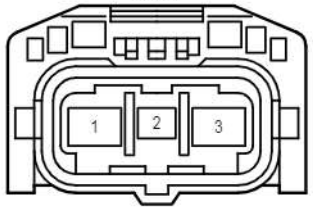

B 47
White

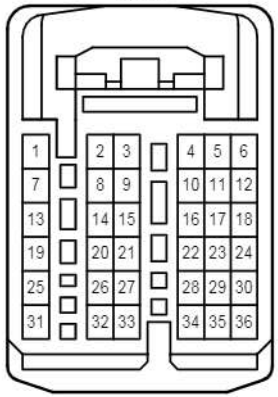

B 48
White

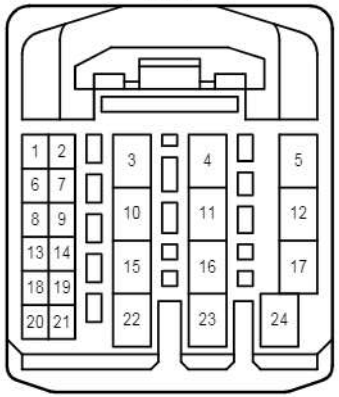

B 49
Black



B 50
White



B 51
Gray



B 55
White



B 60
Dark Gray



B 61
Gray



B 62
White




B 63
Blue




B 64
White




B 65
Gray



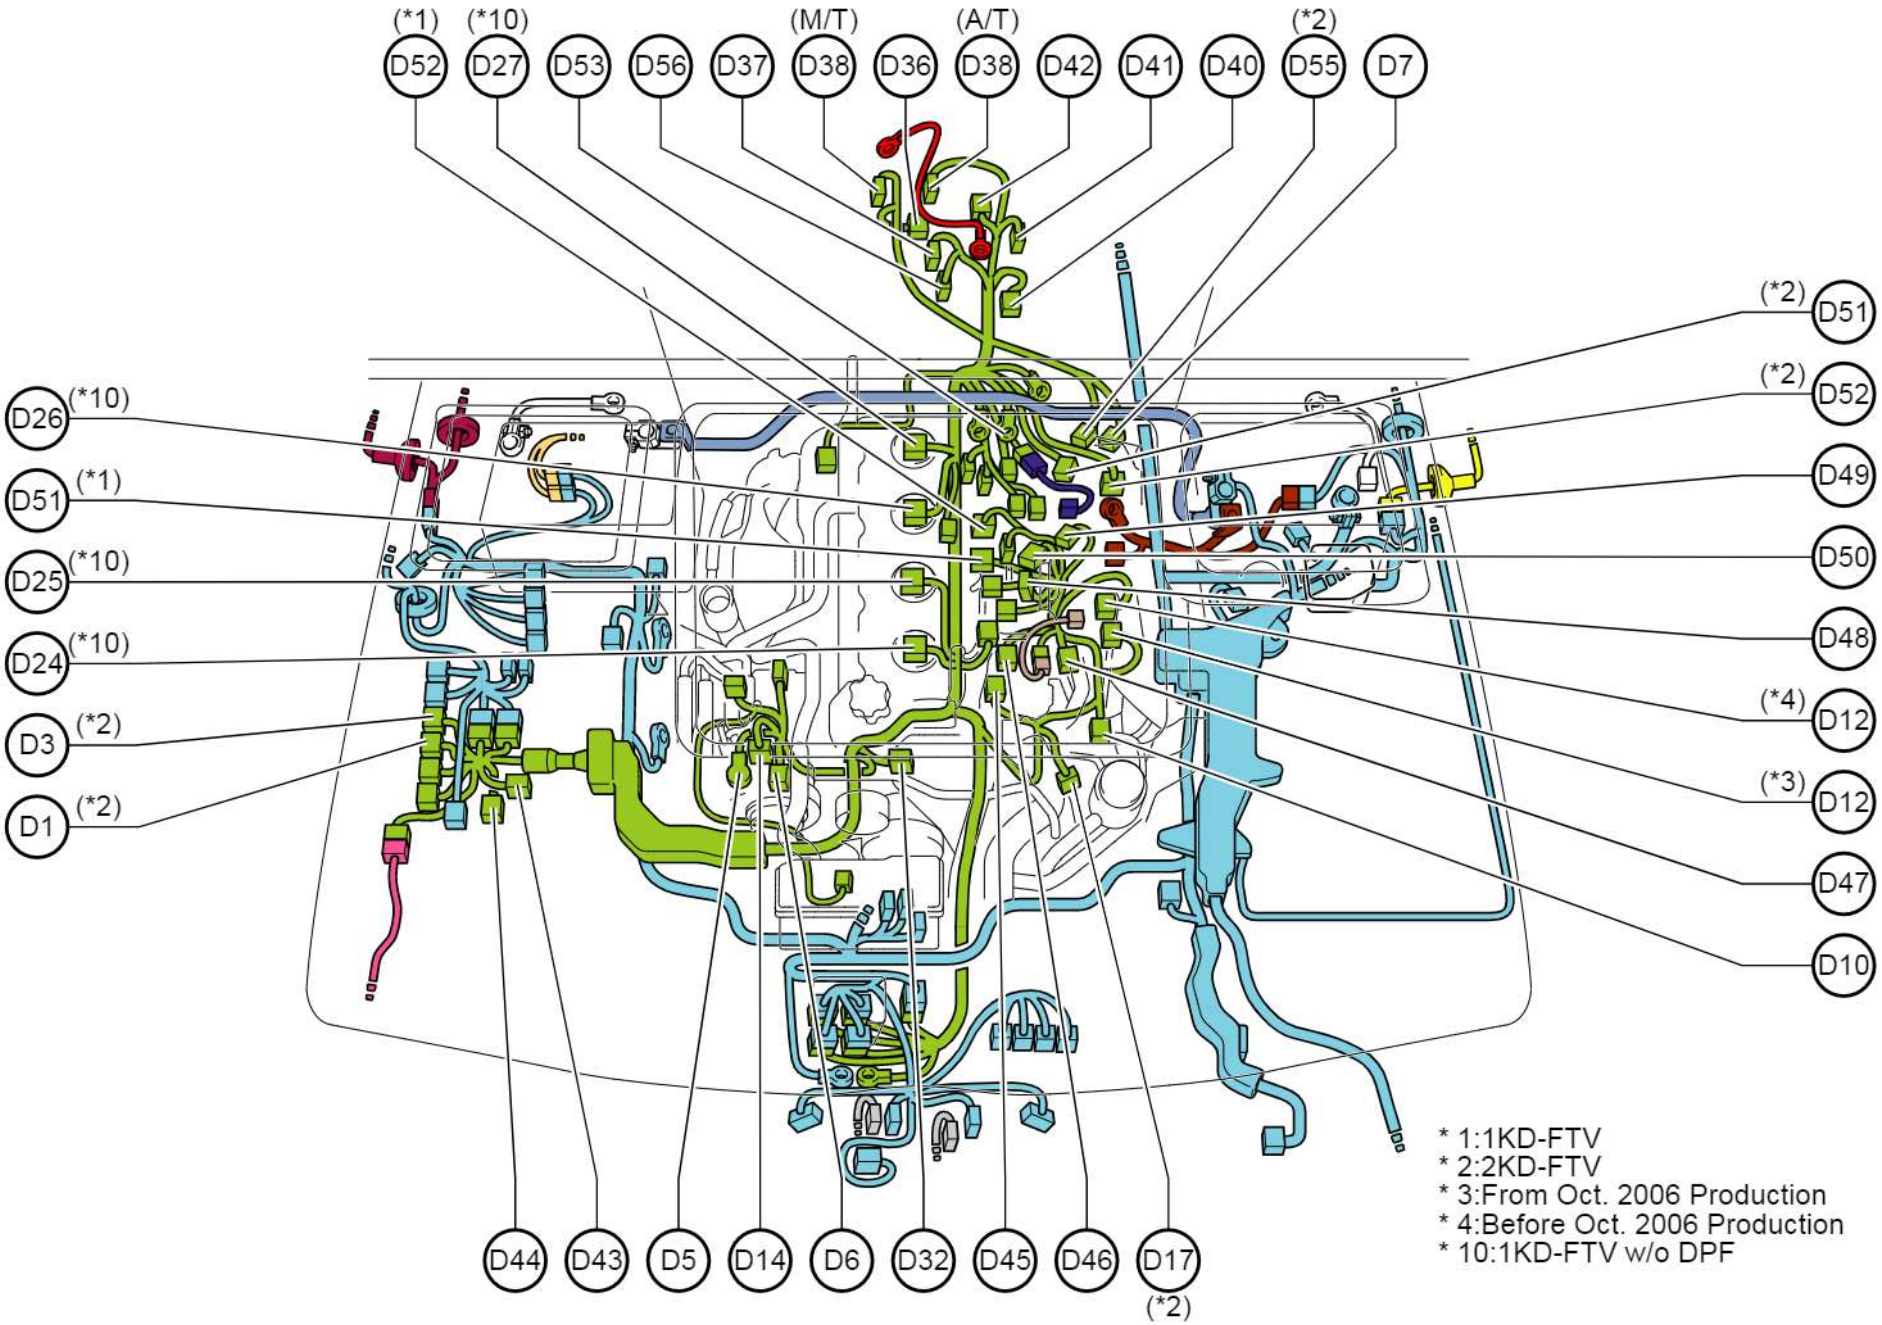

(*1) D52
(*10) D27
D53
D56
D37
(M/T) D38
D36
(A/T) D38
D42
D41
D40
(*2) D55
D7
(*2) D51
(*2) D52
D49
D50
D48
(*4) D12
(*3) D12
D47
D10
(*10) D26
(*1) D51
(*10) D25
(*10) D24
(*2) D3
(*2) D1
D44
D43
D5
D14
D6
D32
D45
D46
D17 (*2)
* 1:1KD-FTV
* 2:2KD-FTV
* 3:From Oct. 2006 Production
* 4:Before Oct. 2006 Production
* 10:1KD-FTV w/o DPF

D	1	Engine ECU
D	3	Engine ECU
D	5	Alternator
D	6	Alternator
D	7	Engine Oil Pressure SW
D	10	Camshaft Position Sensor
D	12	Engine Oil Level Sensor
D	14	A/C Compressor
D	17	Crankshaft Position Sensor
D	24	Fuel Injector (No.1)
D	25	Fuel Injector (No.2)
D	26	Fuel Injector (No.3)
D	27	Fuel Injector (No.4)
D	32	Water Temp. Sensor (Engine Coolant)
D	36	Back-Up Lamp SW
D	37	Park/Neutral Position SW
D	38	Speed Sensor
D	40	Transmission Revolution Sensor (Input)
D	41	ECT Solenoid
D	42	Transmission Revolution Sensor (Output)
D	43	Junction Connector
D	44	Junction Connector
D	45	Fuel Pressure Sensor
D	46	Fuel Temp. Sensor
D	47	Suction Control Valve
D	48	Throttle Body Assembly
D	49	Inlet Air Temp. Sensor (Intake Manifold)
D	50	Throttle Body Assembly
D	51	Turbo Pressure Sensor
D	52	EGR Valve Position Sensor
D	53	Glow Plug
D	55	VRV (EGR)
D	56	A/T Fluid Temp. Sensor


D 1
White

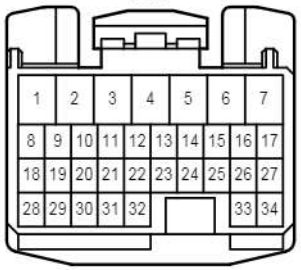

D 3
White

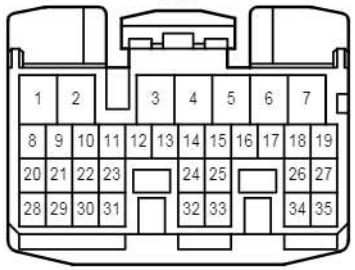


D 5



(Before Sep. 2007 Production)

D 5



(From Sep. 2007 Production)

D 6
Green



D 7
Black



D 10
Black



D 12
White




D 14
Gray




D 17
Gray




D 24
Brown




D 25
Gray



D 26
Brown



D 27
Gray




D 32
Black



D 36
Gray



D 37
Gray

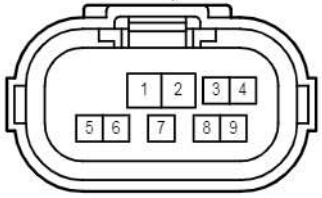

D 38
Black



D 40
Black



D 41
Gray



D 42
Black



Position of Parts in Engine Compartment <RHD 1KD-FTV, 2KD-FTV>

D 48
Black



D 49
Gray



D 50
Black




D 51
Black



D 52
Black




D 53



(1KD-FTV Before Sep. 2007 Production, 2KD-FTV)

D 53




(1KD-FTV From Sep. 2007 Production)

D 55
Brown



D 56
White

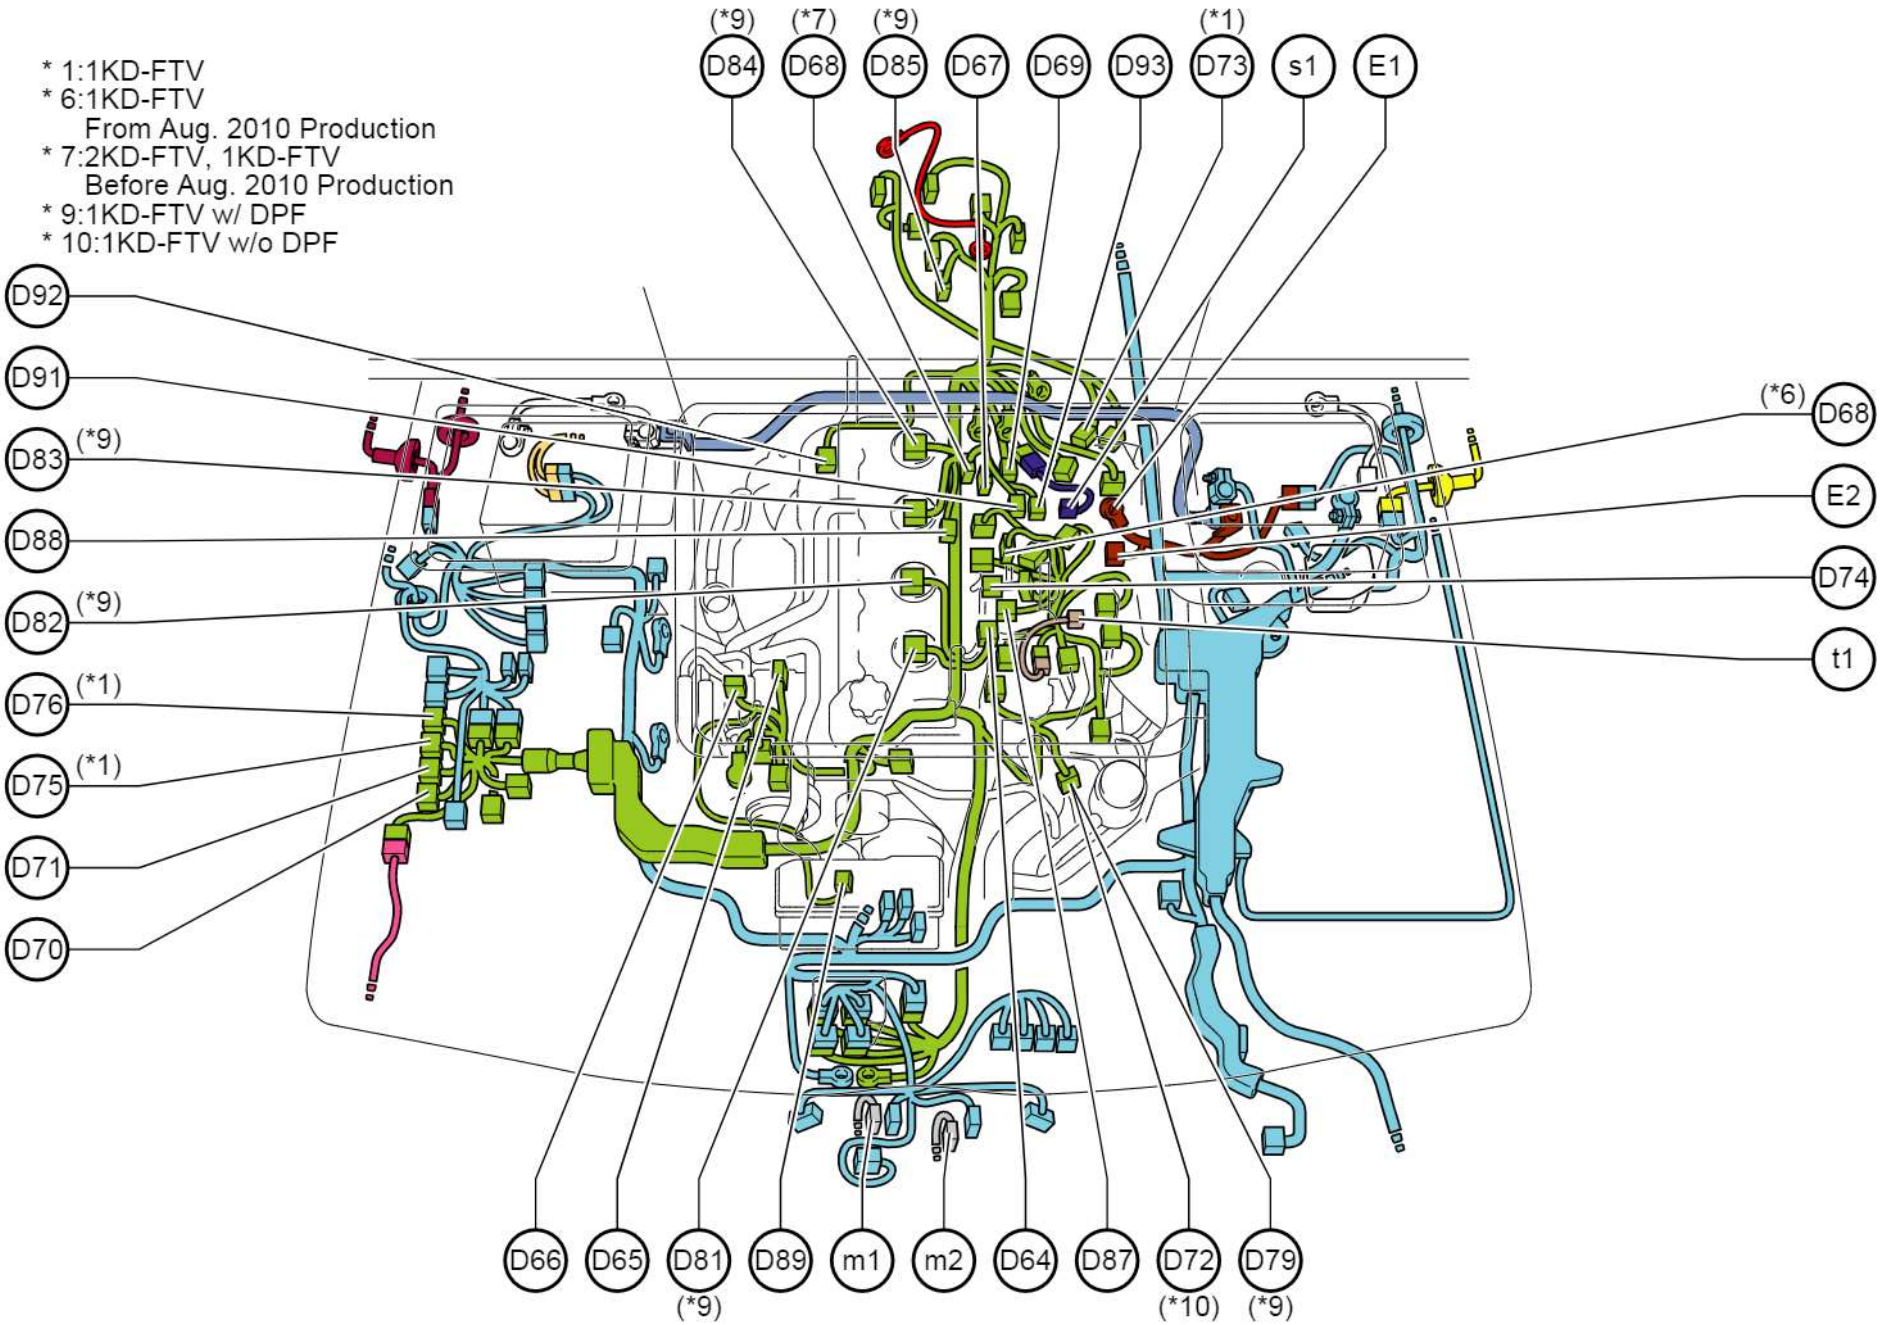


* 1:1KD-FTV
* 6:1KD-FTV
From Aug. 2010 Production
* 7:2KD-FTV, 1KD-FTV
Before Aug. 2010 Production
* 9:1KD-FTV w/ DPF
* 10:1KD-FTV w/o DPF
(*9) D84
(*7) D68
(*9) D85
D67
D69
D93
(*1) D73
s1
E1
D92
D91
(*9) D83
D88
(*9) D82
(*1) D76
(*1) D75
D71
D70
(*6) D68
E2
D74
t1
D66
D65
D81 (*9)
D89
m1
m2
D64
D87
D72 (*10)
D79 (*9)

D 64 Pressure Discharge Valve
D 65 Turbocharger Variable Nozzle Motor Assembly
D 66 Turbocharger Variable Nozzle Motor Assembly
D 67 Swirl Control Valve
D 68 VSV (EGR Cut)
D 69 Fuel Pressure Sensor
D 70 Engine ECU
D 71 Engine ECU
D 72 Crankshaft Position Sensor
D 73 VRV (EGR)
D 74 VSV (EGR)
D 75 Engine ECU
D 76 Engine ECU
D 79 Crankshaft Position Sensor
D 81 Fuel Injector Assembly (No.1)
D 82 Fuel Injector Assembly (No.2)
D 83 Fuel Injector Assembly (No.3)
D 84 Fuel Injector Assembly (No.4)
D 85 A/T Fluid Temp. Sensor
D 87 Pressure Discharge Valve
D 88 Glow Plug
D 89 Oil Pressure Switching Valve Assembly
D 91 Suction Control Valve Assembly
D 92 Exhaust Fuel Addition Injector Assembly
D 93 Oil Pressure Sender Gage Assembly

E 1 Starter
E 1 Starter
E 1 Starter
E 2 Starter

m 1 Cooling Fan ECU No.1 , Cooling Fan Motor No.1
m 2 Cooling Fan ECU No.2 , Cooling Fan Motor No.1

s 1 Electric EGR Control Valve Assembly

t 1 Diesel Throttle Body Assembly


D 64
Gray



D 65
Black




D 66
Black

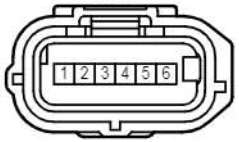

D 67
Blue




D 68
Brown

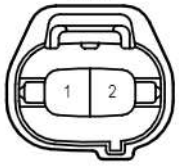


D 69
Black



D 70
White

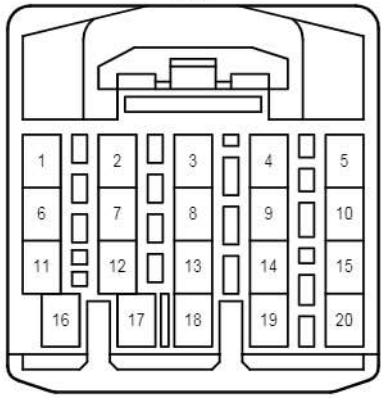

D 71
White

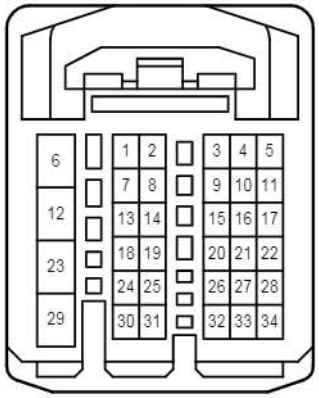

D 72
Dark Gray




D 73
Black




D 74
Blue



D 75
White

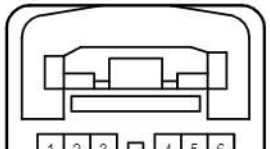


D 76
White

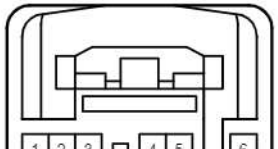


D 79
Dark Gray




D 81
Black

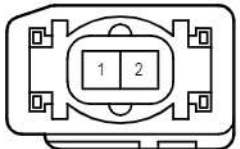


D 82
Gray

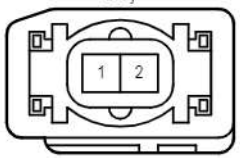

D 83
Black

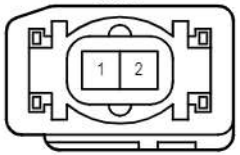


D 84
Gray

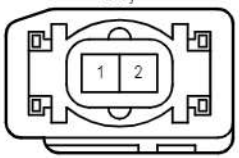

D 85
Black



D 87
Gray

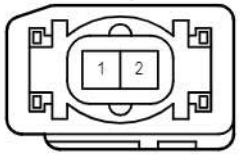

D 88
Black



D 89
Black



D 91
Brown




D 92
Black



D 93
Black




E 1




(2KD-FTV A/T Except Cold Area Spec.)

E 1



(1KD-FTV Russia, 2KD-FTV Cold Area Spec.)

E 1



(1KD-FTV Except Russia, 2KD-FTV M/T Except South Africa Production Except Cold Area Spec.)

E 2
Black



(1KD-FTV, 2KD-FTV, 5L-E)

m 1
Gray



m 2
Black





s 1
Black




t 1
Black

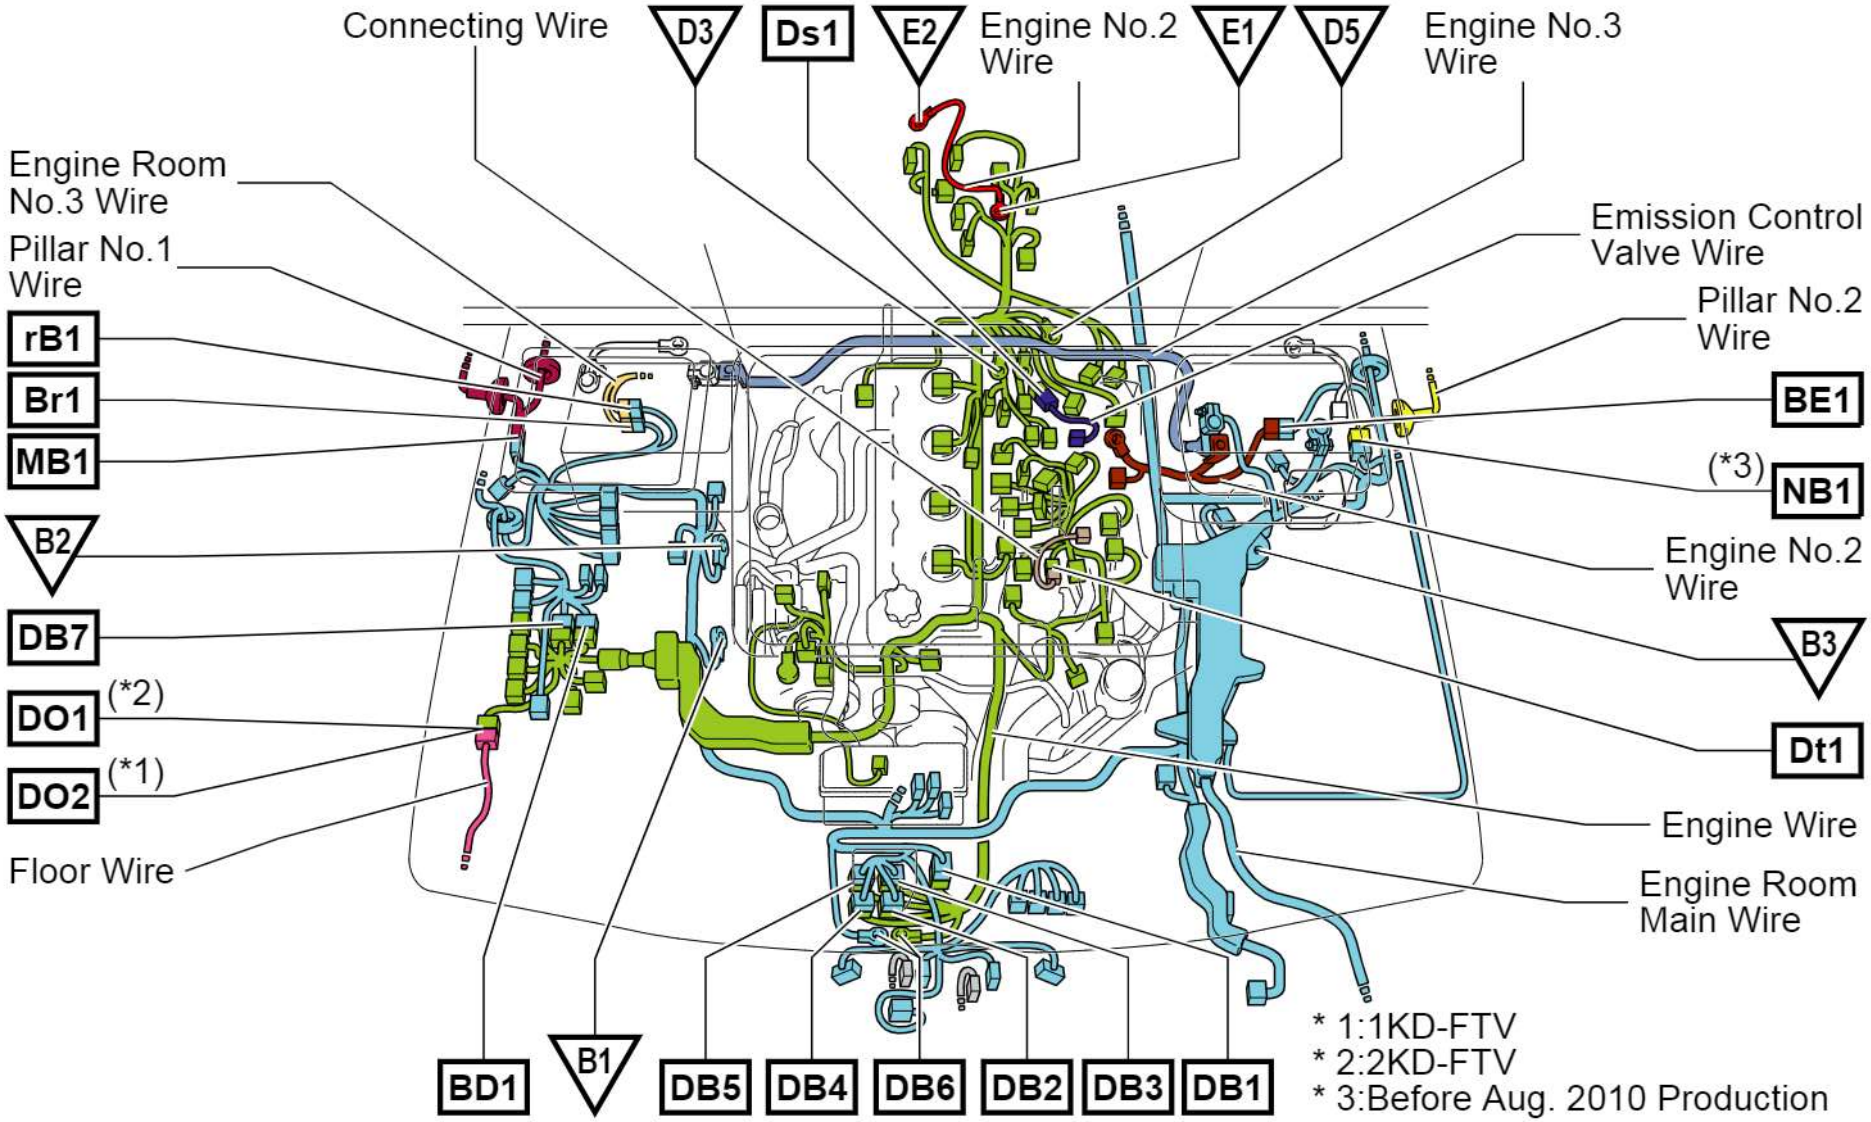




Connecting Wire
D3
Ds1
E2
Engine No.2 Wire
E1
D5
Engine No.3 Wire
Engine Room No.3 Wire
Pillar No.1 Wire
rB1
Br1
MB1
B2
DB7
DO1
(*2)
DO2
(*1)
Floor Wire
Emission Control Valve Wire
Pillar No.2 Wire
BE1
(*3)
NB1
Engine No.2 Wire
B3
Dt1
Engine Wire
Engine Room Main Wire
BD1
B1
DB5
DB4
DB6
DB2
DB3
DB1
* 1:1KD-FTV
* 2:2KD-FTV
* 3:Before Aug. 2010 Production

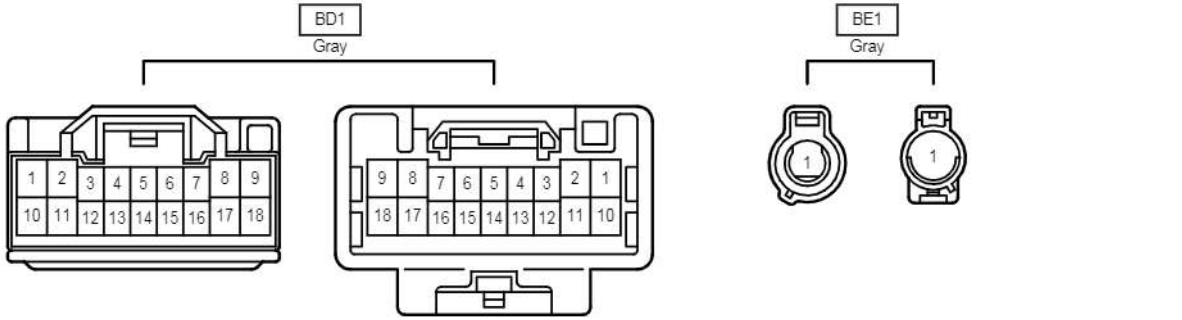

BD1
Gray
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18
9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11 10

BE1
Gray
1
1

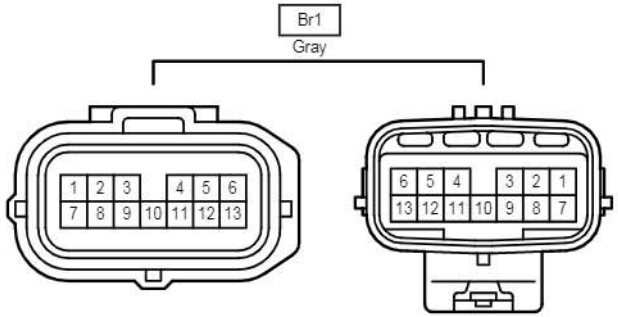

Br1
Gray
1 2 3 4 5 6
7 8 9 10 11 12 13
6 5 4 3 2 1
13 12 11 10 9 8 7

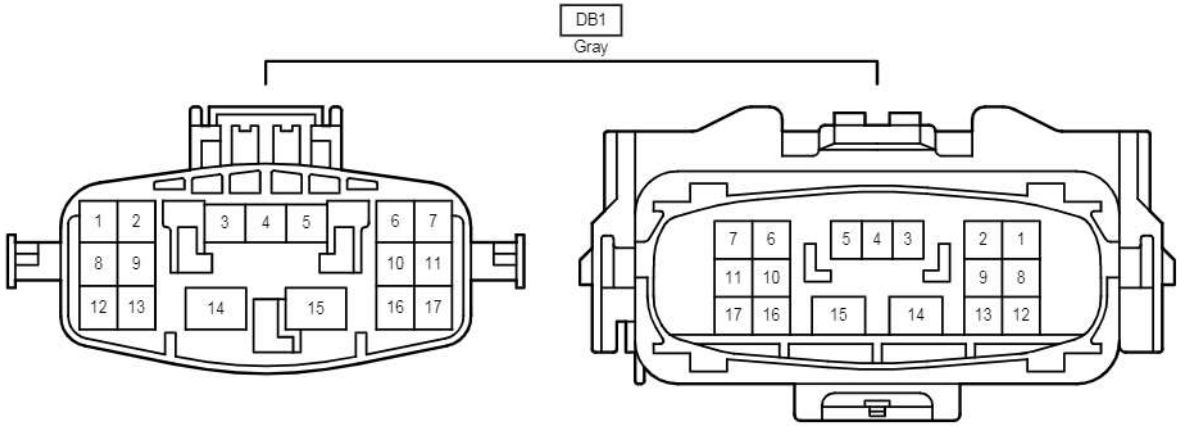

DB1
Gray
1 2 3 4 5 6 7
8 9 10 11
12 13 14 15 16 17
7 6 5 4 3 2 1
11 10 9 8
17 16 15 14 13 12

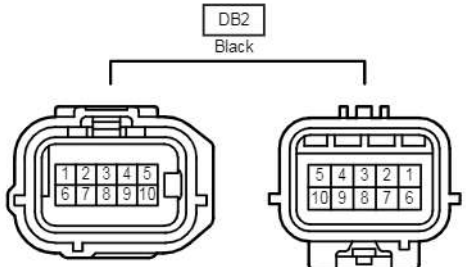
DB2
Black
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6

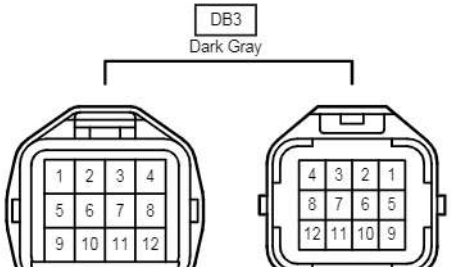
DB3
Dark Gray
1 2 3 4
5 6 7 8
9 10 11 12
4 3 2 1
8 7 6 5
12 11 10 9


Wire and Wire , Ground Points in Engine Compartment <RHD 1KD-FTV, 2KD-FTV>

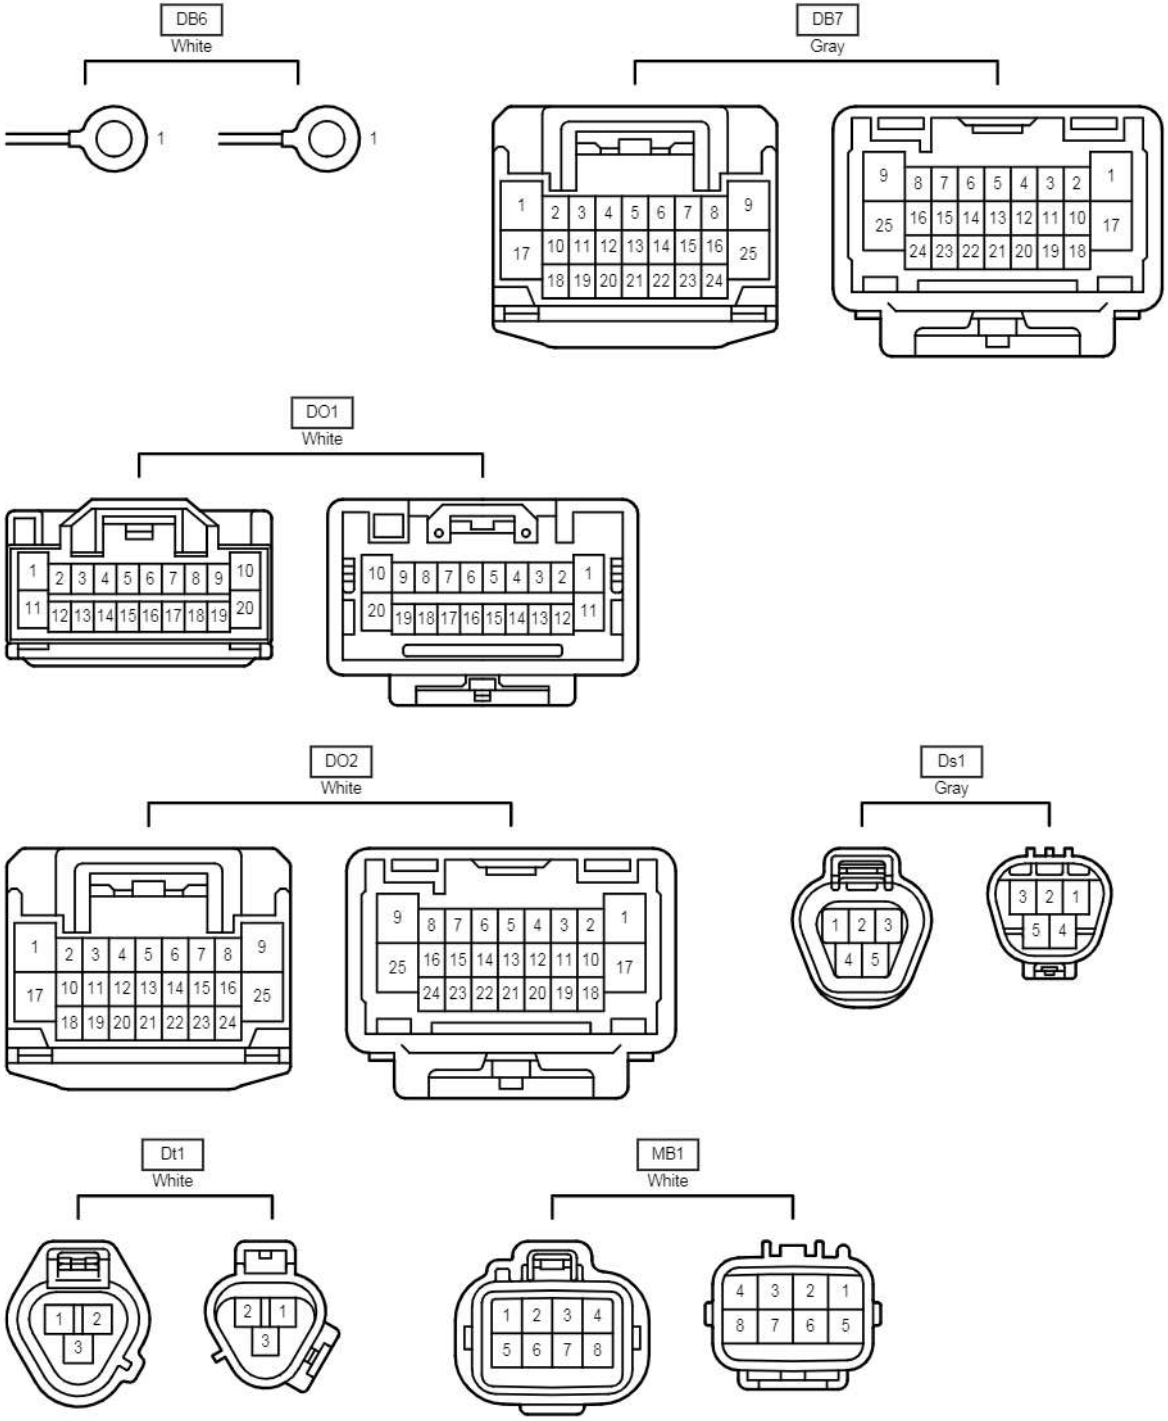

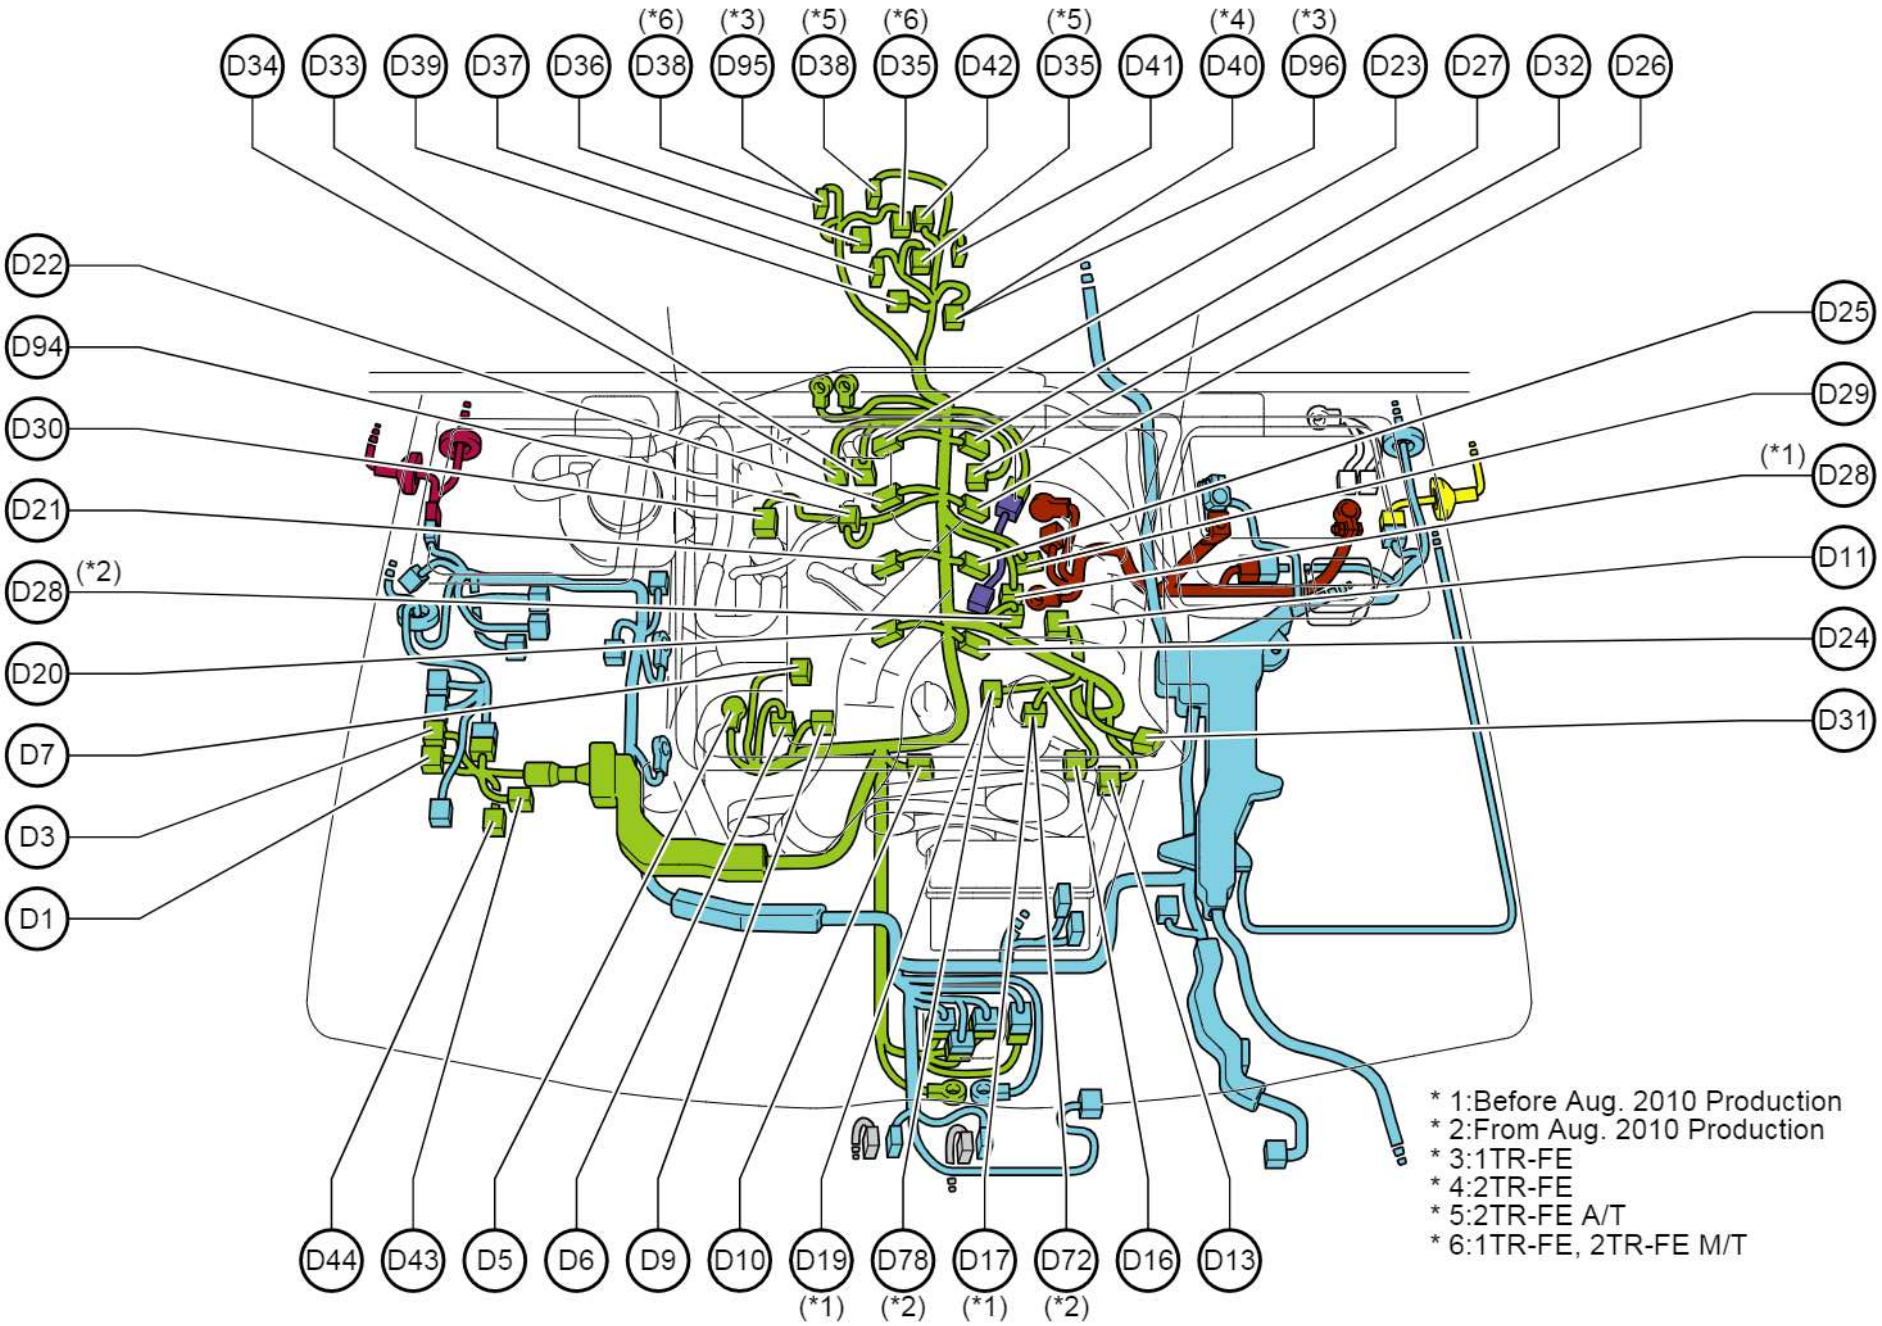

D34
D33
D39
D37
D36
(*6)
D38
(*3)
D95
(*5)
D38
(*6)
D35
D42
(*5)
D35
D41
(*4)
D40
(*3)
D96
D23
D27
D32
D26
D22
D94
D30
D21
D28
(*2)
D20
D7
D3
D1
D25
D29
(*1)
D28
D11
D24
D31
D44
D43
D5
D6
D9
D10
D19
(*1)
D78
(*2)
D17
(*1)
D72
(*2)
D16
D13
* 1:Before Aug. 2010 Production
* 2:From Aug. 2010 Production
* 3:1TR-FE
* 4:2TR-FE
* 5:2TR-FE A/T
* 6:1TR-FE, 2TR-FE M/T

D	1	Engine ECU
D	3	Engine ECU
D	5	Alternator
D	6	Alternator
D	7	Engine Oil Pressure SW
D	9	Noise Filter (Ignition)
D	10	Camshaft Position Sensor
D	11	Engine Oil Level Sensor
D	13	A/C Compressor
D	16	Power Steering Oil Pressure SW
D	17	Crankshaft Position Sensor
D	19	Camshaft Timing Oil Control Valve
D	20	Ignition Coil (No.1)
D	21	Ignition Coil (No.2)
D	22	Ignition Coil (No.3)
D	23	Ignition Coil (No.4)
D	24	Fuel Injector (No.1)
D	25	Fuel Injector (No.2)
D	26	Fuel Injector (No.3)
D	27	Fuel Injector (No.4)
D	28	Purge VSV
D	29	Throttle Body Assembly
D	30	Air Switching Valve
D	31	Variable Resistor
D	32	Water Temp. Sensor (Engine Coolant)
D	33	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
D	34	Heated Oxygen Sensor (Bank 1 Sensor 1)
D	35	Heated Oxygen Sensor (Bank 1 Sensor 2)
D	36	Back-Up Lamp SW
D	37	Park/Neutral Position SW
D	38	Speed Sensor
D	39	A/T Fluid Temp. Sensor
D	40	Transmission Revolution Sensor (Input)
D	41	ECT Solenoid
D	42	Transmission Revolution Sensor (Output)
D	43	Junction Connector
D	44	Junction Connector
D	72	Crankshaft Position Sensor
D	78	Camshaft Timing Oil Control Valve
D	94	Air Pressure Sensor
D	95	A/T Fluid Temp. Sensor
D	96	Transmission Revolution Sensor (Input)


D 1
White

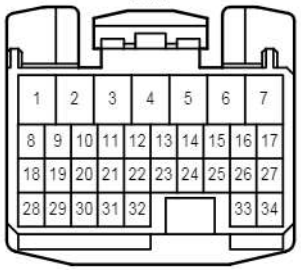

D 3
White

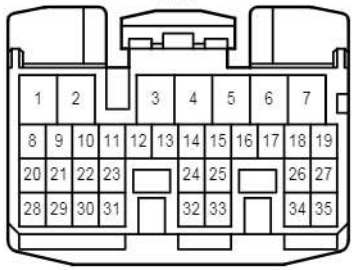


D 5



(Before Sep. 2007 Production)

D 5



(From Sep. 2007 Production)

D 6
Green



D 7
Black



D 9
Gray



D 10
Black



D 11
Gray



D 13
Gray



D 16
Black




D 17
Gray




D 19
Gray




D 20
Black




D 21
Black




D 22
Black




D 23
Black




D 24
Brown




D 25
Gray



D 26
Brown



D 27
Gray




D 28
Black



D 29
Black



D 30
Black



D 31
Black



D 32
Black



D 33
Dark Gray



D 38
Black



D 39
Gray



D 40
Black




D 41
Gray




D 42
Black



D 43
Black

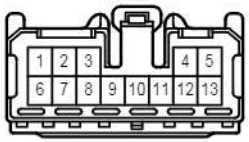

D 44
Blue

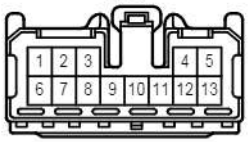

D 72
Dark Gray



D 78
Black



D 94
Black




D 95
White



D 96
Gray




* 2:From Aug. 2010 Production

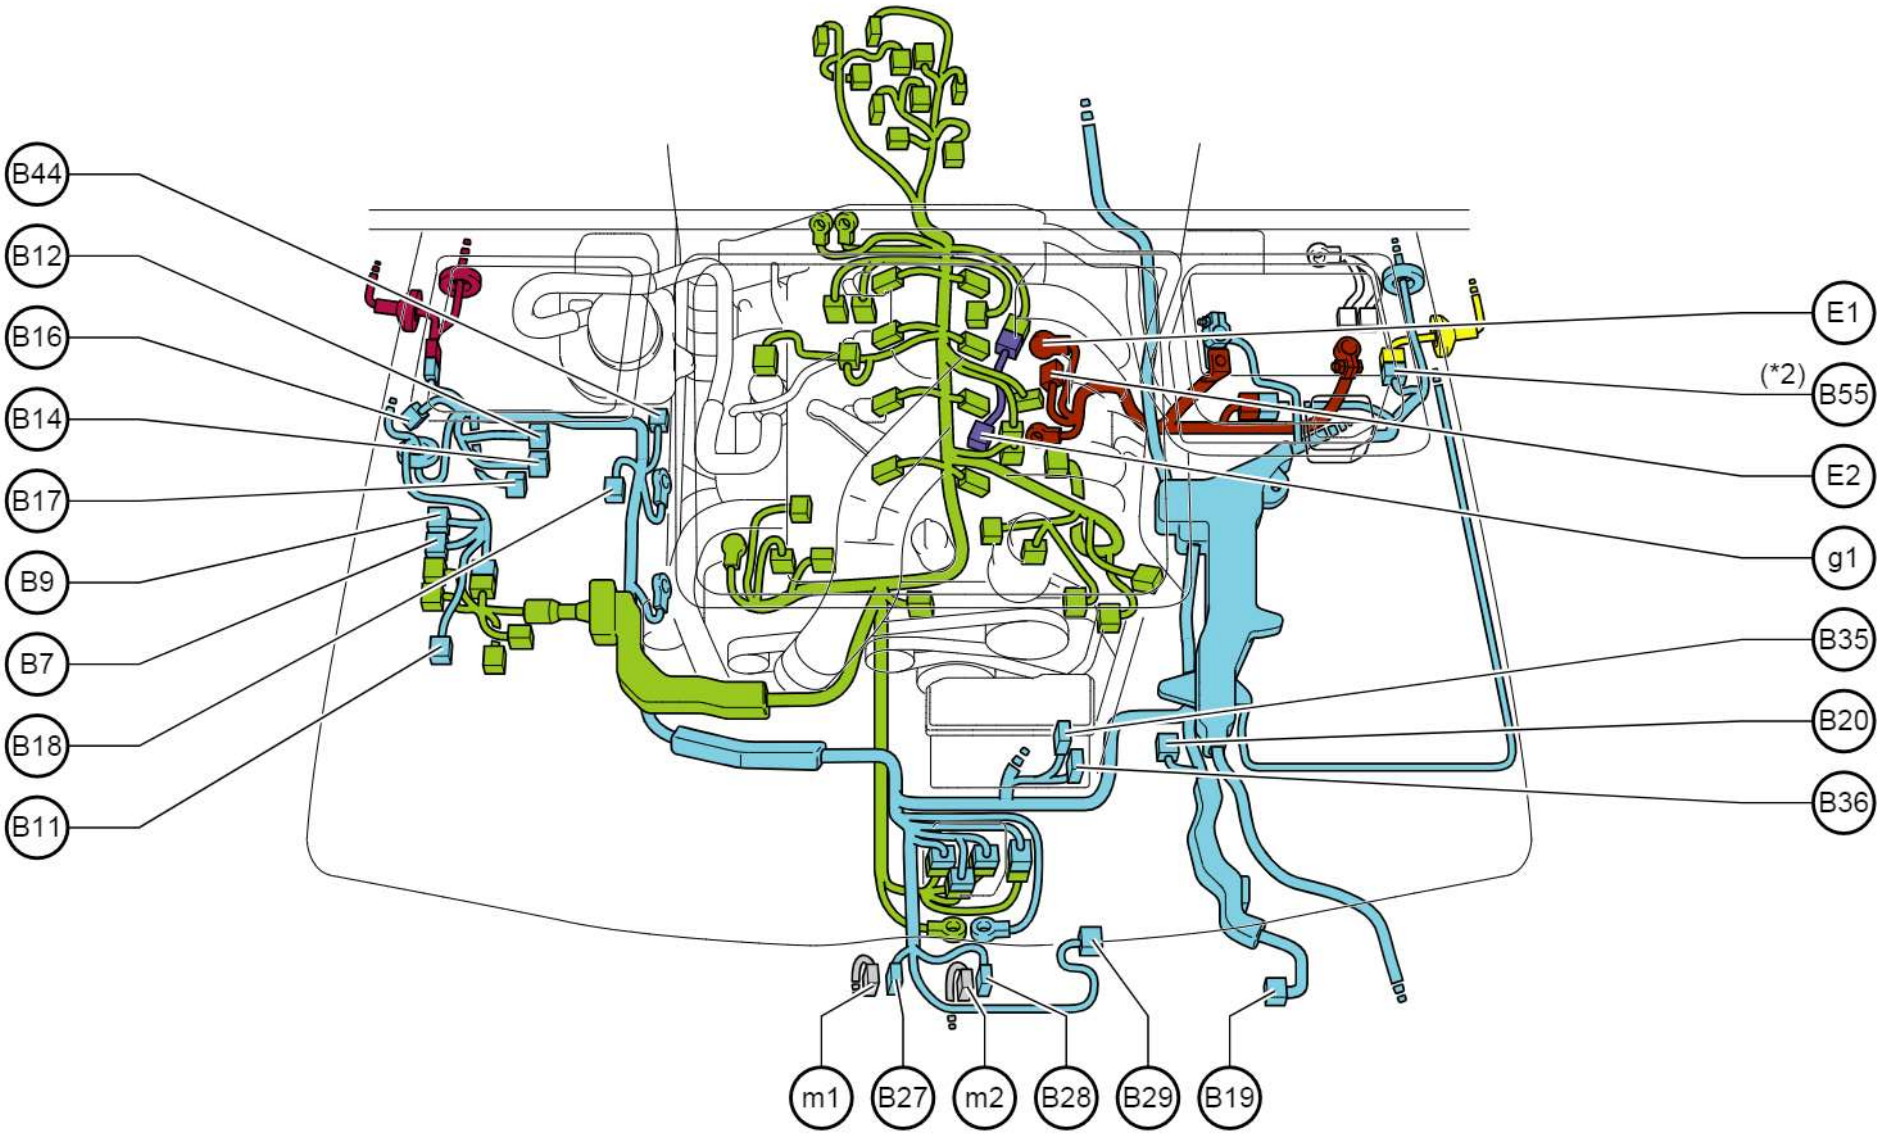


B	7	Engine ECU
B	9	Engine ECU
B	11	Front Seat Inner Belt (Driver's Side)
B	12	Air Injection Control Driver
B	14	Air Injection Control Driver
B	16	A/C Magnetic Valve (Rear A/C)
B	17	Air Pump
B	18	Speed Sensor (Front RH)
B	19	Skid Control ECU with Actuator
B	20	Speed Sensor (Front LH)
B	27	Cooling Fan ECU No.1
B	28	Cooling Fan ECU No.2
B	29	Water Temp. Sensor (Radiator)
B	35	Junction Connector
B	36	Junction Connector
B	44	Option Connector (TVSS Siren)
B	55	Slide Door Control Junction (Male LH)
E	1	Starter
E	2	Starter
g	1	Knock Control Sensor (Bank 1)
m	1	Cooling Fan ECU No.1 , Cooling Fan Motor No.1
m	2	Cooling Fan ECU No.2 , Cooling Fan Motor No.1

B 7
White

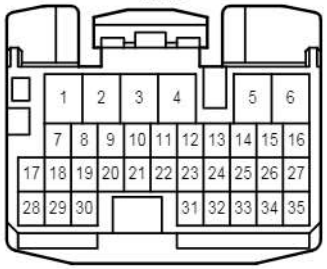

B 9
White

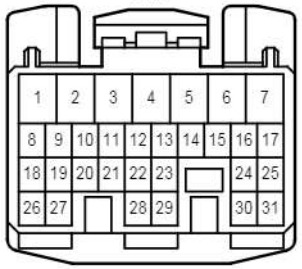


B 11
White



B 12
Black



B 14
Gray

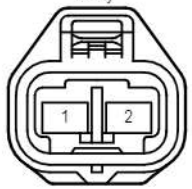

B 16
Gray




B 17
Gray



B 18
Black



B 19
Black

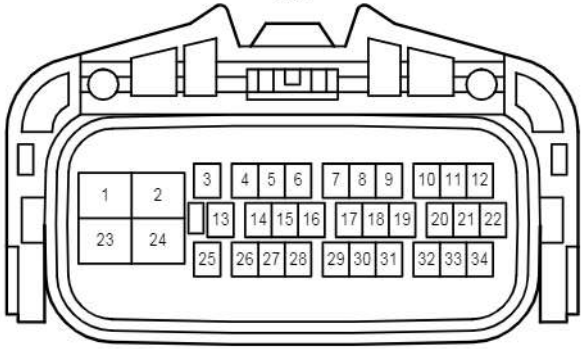

B 20
Gray



B 27
Gray




B 28
Black




B 29
Black



B 35
Black

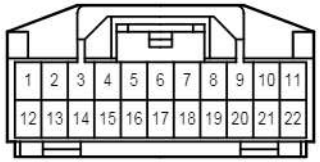

B 36
White

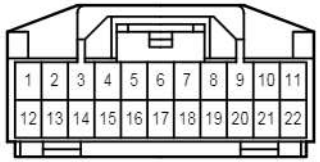

B 44
Gray



B 55
White



E 1




E 2
Black





g 1
Black

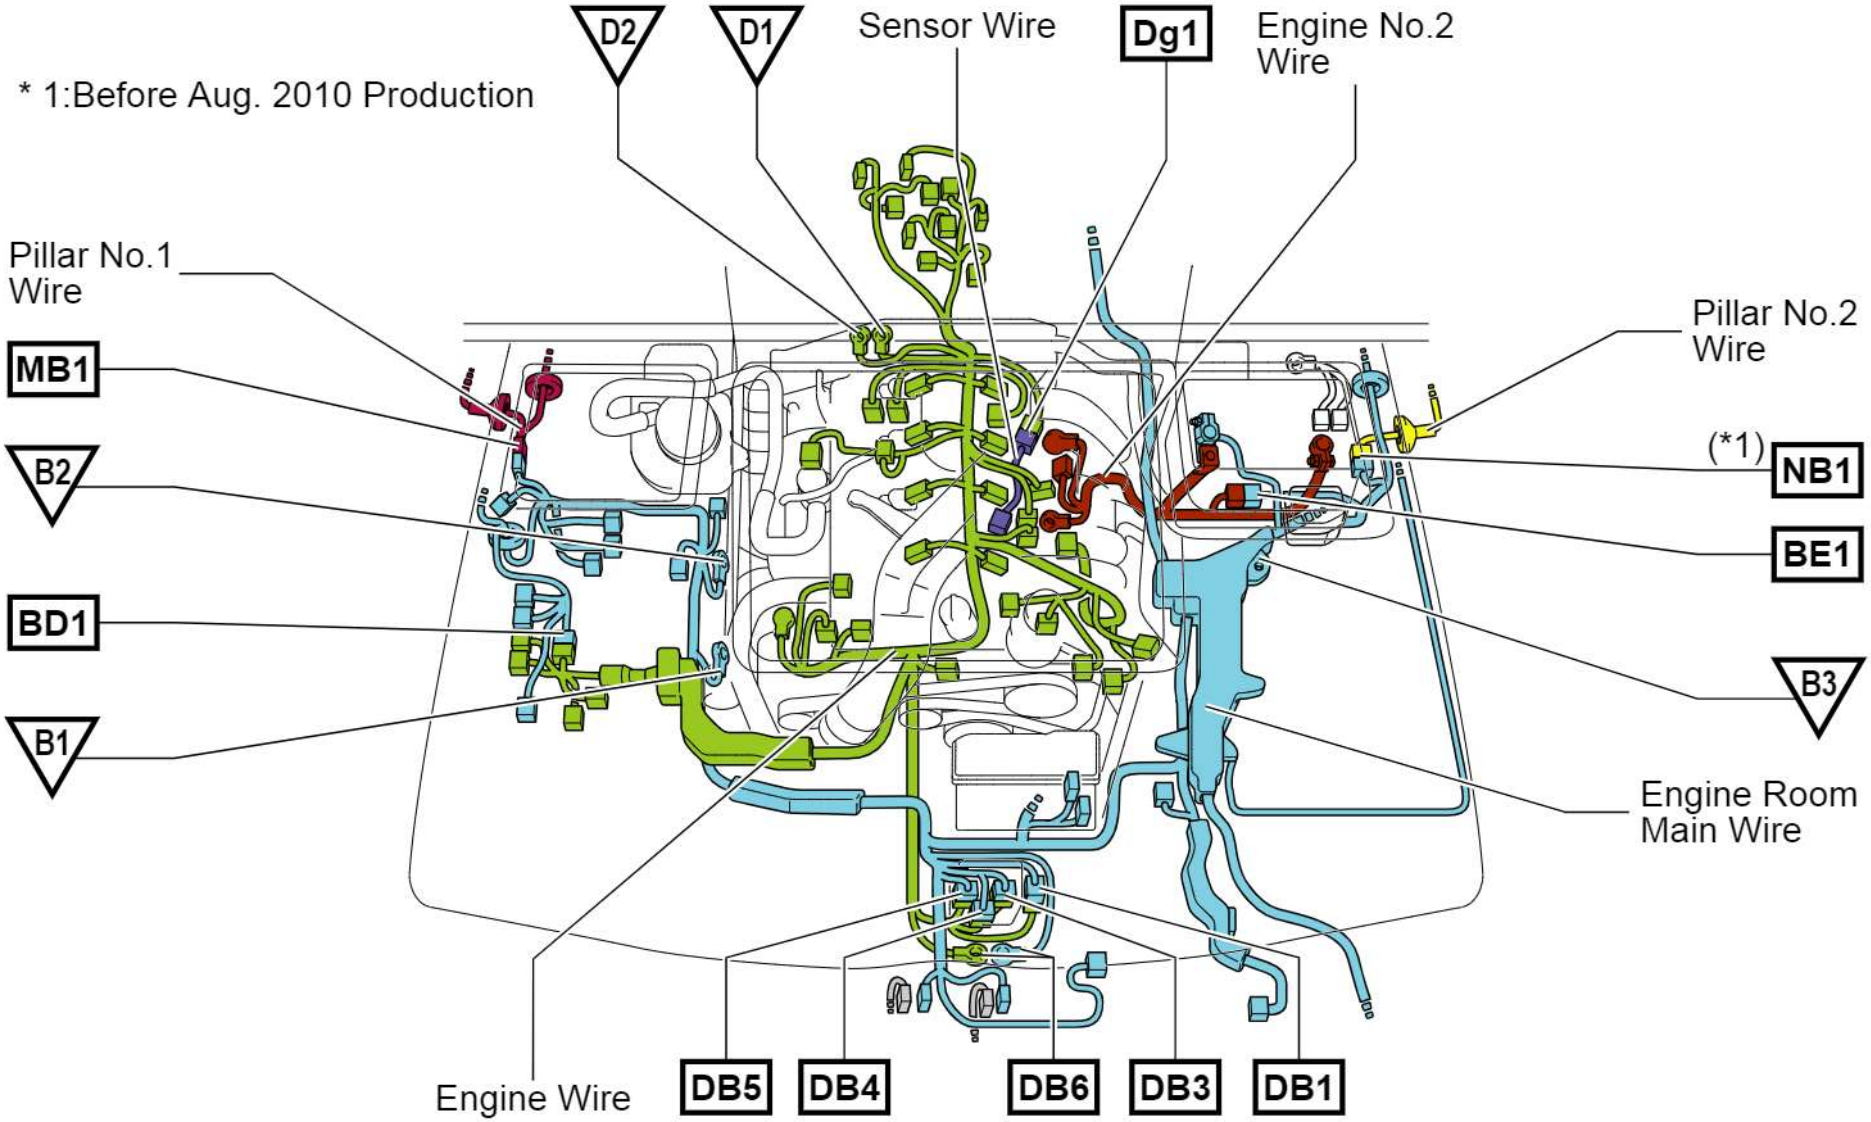




* 1:Before Aug. 2010 Production
D2
D1
Sensor Wire
Dg1
Engine No.2 Wire
Pillar No.1 Wire
MB1
B2
BD1
B1
Pillar No.2 Wire
(*1)
NB1
BE1
B3
Engine Room Main Wire
Engine Wire
DB5
DB4
DB6
DB3
DB1


Wire and Wire , Ground Points in Engine Compartment <RHD 1TR-FE, 2TR-FE>

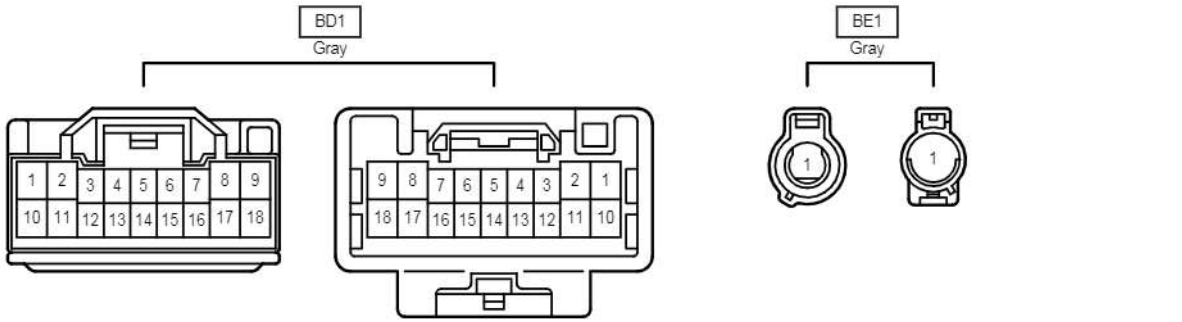


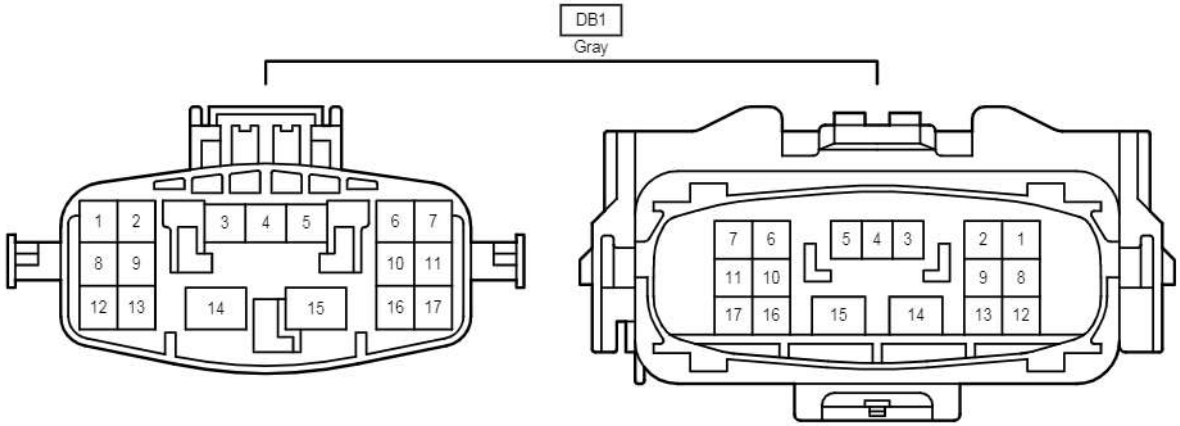

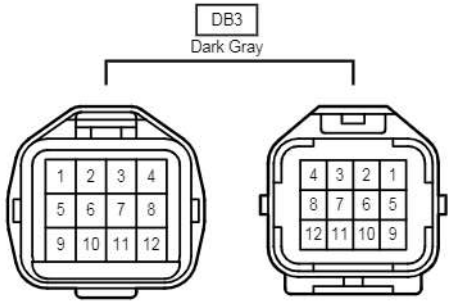


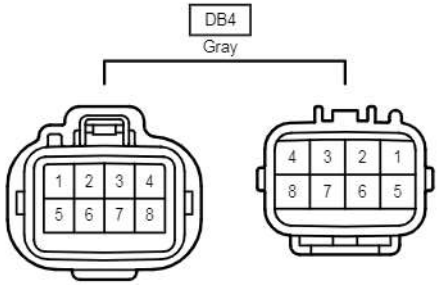


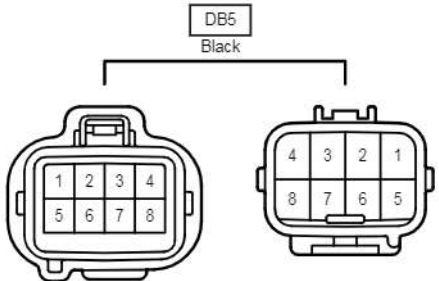


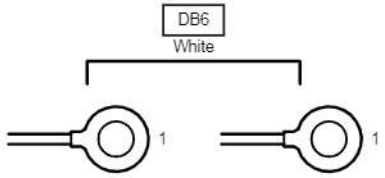

Wire and Wire , Ground Points in Engine Compartment <RHD 1TR-FE, 2TR-FE>

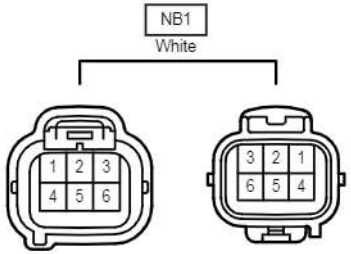

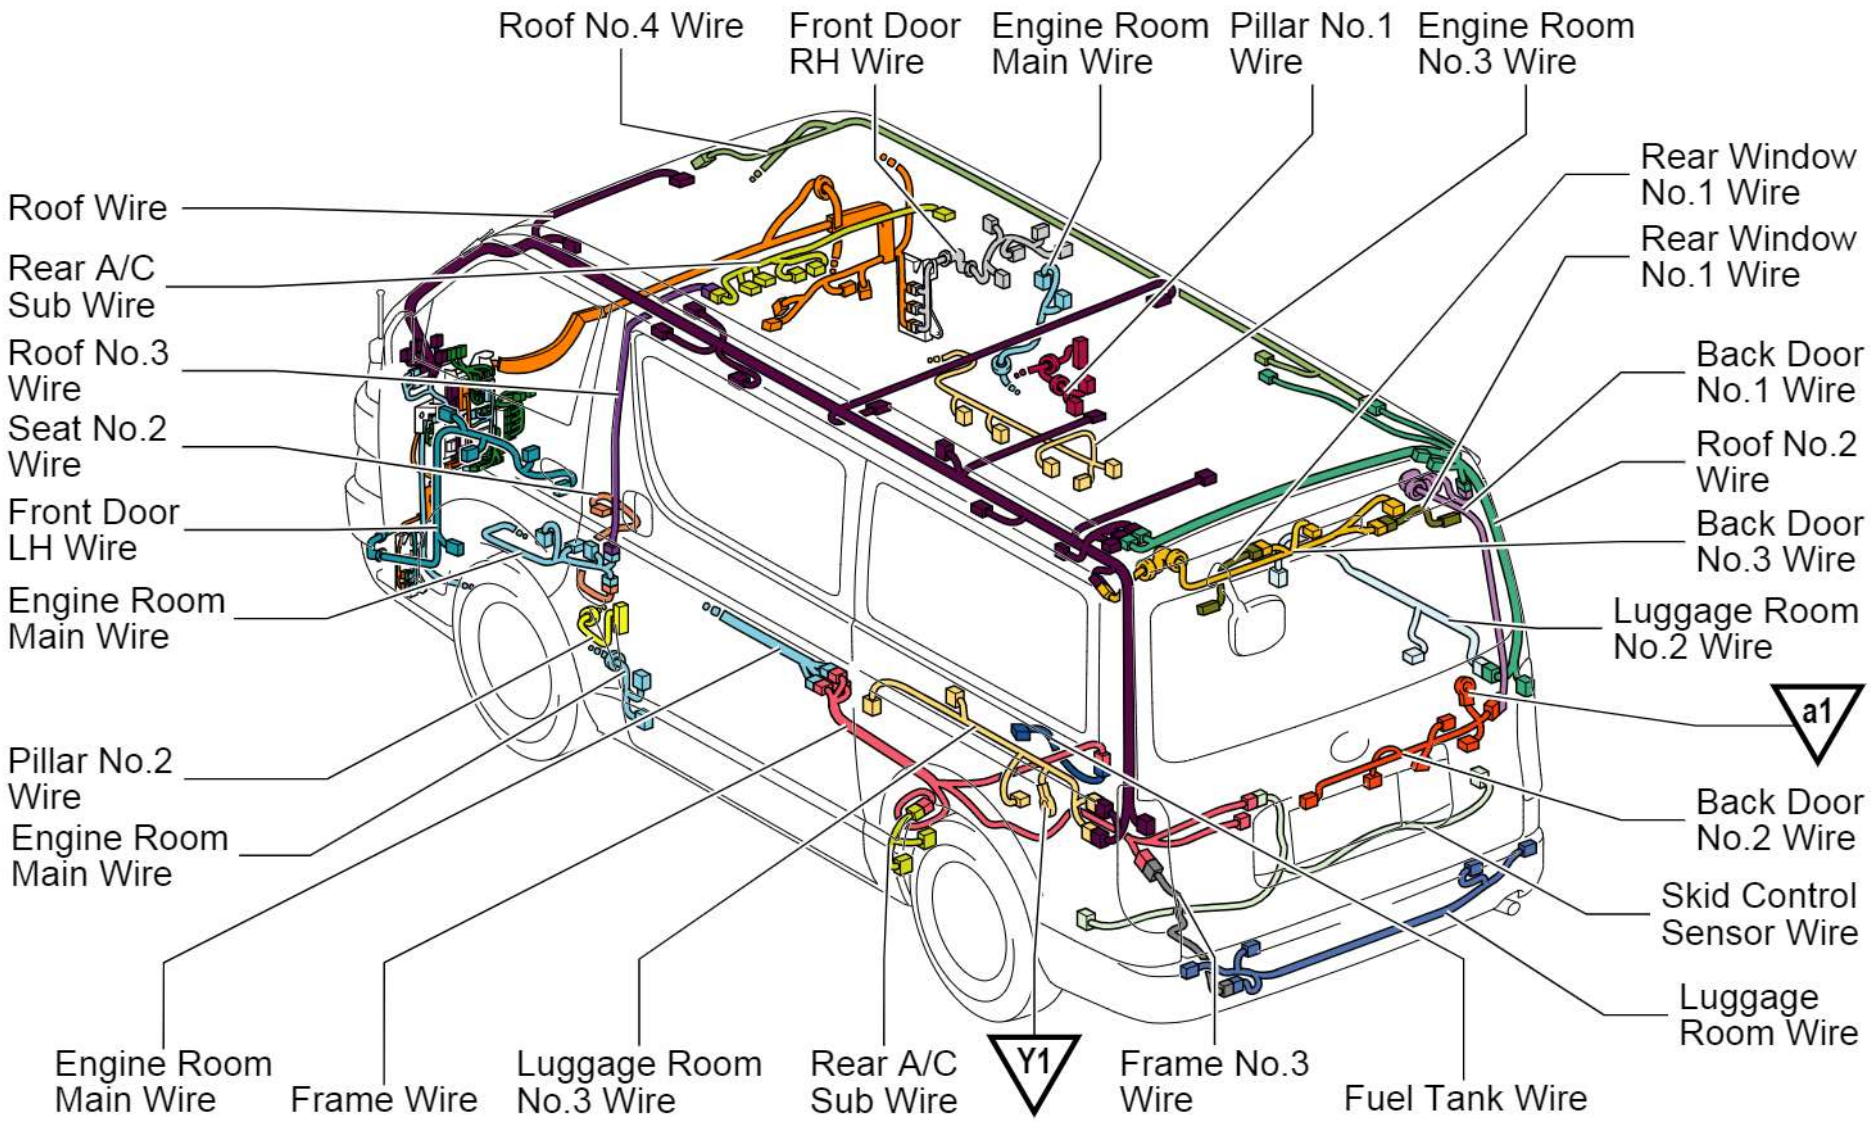
Roof No.4 Wire
Front Door RH Wire
Engine Room Main Wire
Pillar No.1 Wire
Engine Room No.3 Wire
Roof Wire
Rear A/C Sub Wire
Roof No.3 Wire
Seat No.2 Wire
Front Door LH Wire
Engine Room Main Wire
Pillar No.2 Wire
Engine Room Main Wire
Rear Window No.1 Wire
Rear Window No.1 Wire
Back Door No.1 Wire
Roof No.2 Wire
Back Door No.3 Wire
Luggage Room No.2 Wire
a1
Back Door No.2 Wire
Skid Control Sensor Wire
Luggage Room Wire
Engine Room Main Wire
Frame Wire
Luggage Room No.3 Wire
Rear A/C Sub Wire
Y1
Frame No.3 Wire
Fuel Tank Wire

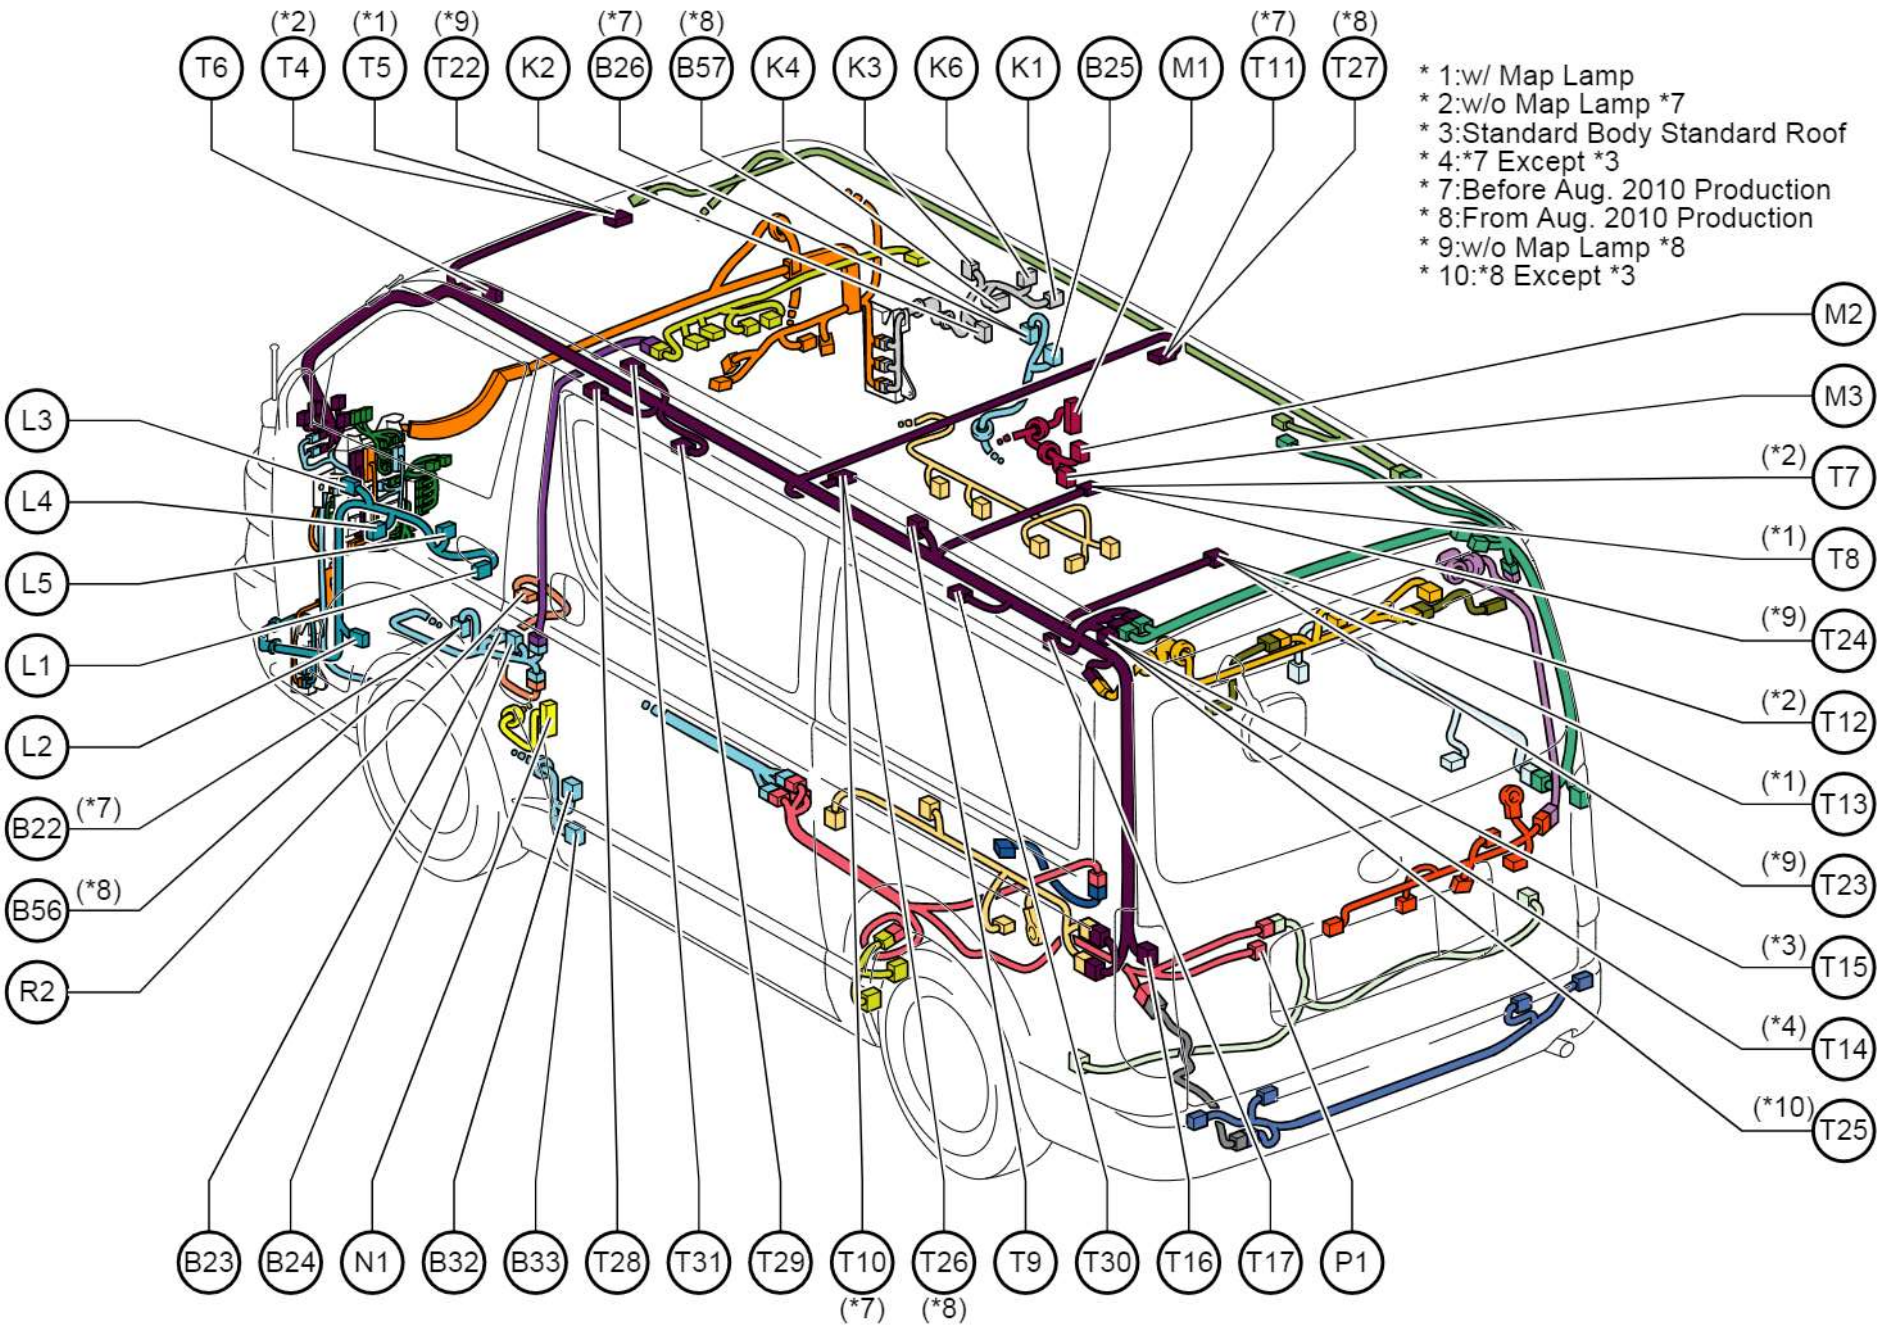
T6
(*2) T4
(*1) T5
(*9) T22
K2
(*7) B26
(*8) B57
K4
K3
K6
K1
B25
M1
(*7) T11
(*8) T27
* 1:w/ Map Lamp
* 2:w/o Map Lamp *7
* 3:Standard Body Standard Roof
* 4:*7 Except *3
* 7:Before Aug. 2010 Production
* 8:From Aug. 2010 Production
* 9:w/o Map Lamp *8
* 10:*8 Except *3
L3
L4
L5
L1
L2
B22 (*7)
B56 (*8)
R2
M2
M3
(*2) T7
(*1) T8
(*9) T24
(*2) T12
(*1) T13
(*9) T23
(*3) T15
(*4) T14
(*10) T25
B23
B24
N1
B32
B33
T28
T31
T29
T10 (*7)
T26 (*8)
T9
T30
T16
T17
P1


B	22	Door Courtesy SW (Front LH)
B	23	Front Seat Outer Belt (LH)
B	24	Blower SW (Rear Heater)
B	25	Front Seat Outer Belt (RH)
B	26	Door Courtesy SW (Front RH)
B	32	Door Control Relay (LH)
B	33	Step Lamp (LH)
B	56	Door Courtesy SW (Front LH)
B	57	Door Courtesy SW (Front RH)
K	1	Door Lock Assembly (Front RH)
K	2	Speaker (Front Door RH)
K	3	Outer Rear View Mirror (RH)
K	4	Power Window Regulator Motor (Front RH)
K	6	Power Window SW (Front RH)
L	1	Door Lock Assembly (Front LH)
L	2	Speaker (Front Door LH)
L	3	Outer Rear View Mirror (LH)
L	4	Power Window Regulator Motor (Front LH)
L	5	Power Window Master SW
M	1	Slide Door Control Junction (Male RH)
M	2	Door Control Relay (RH)
M	3	Step Lamp (RH)
N	1	Slide Door Control Junction (Male LH)
P	1	Rear Speed Sensor RH
R	2	Front Seat Inner Belt (Driver's Side)
T	4	Room Lamp (Front)
T	5	Map Lamp
T	6	Diode (Door Courtesy No.4)
T	7	Room Lamp (Center)
T	8	Room Lamp (Center)
T	9	Diode (Door Courtesy No.5)
T	10	Speaker (Roof LH)
T	11	Speaker (Roof RH)
T	12	Room Lamp (Rear)
T	13	Room Lamp (Rear)
T	14	Junction Connector
T	15	Junction Connector

Position of Parts in Body <LHD>


B 22
Black




B 23
Yellow

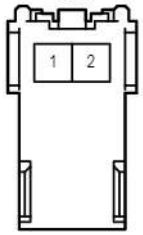

B 24
Blue

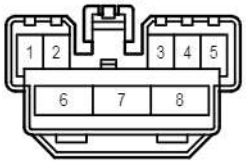

B 25
Yellow

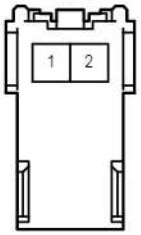


B 26
Black



B 32
Gray



B 33
White




B 56
Black



B 57
Black




K 1
White

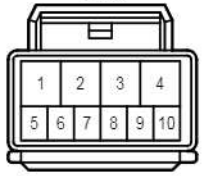

K 2
White




K 3
White

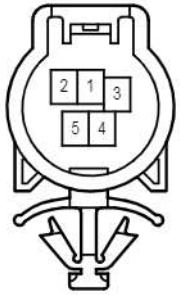


K 4
Black



K 6
White

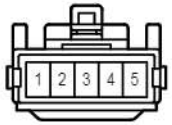


L 1
White

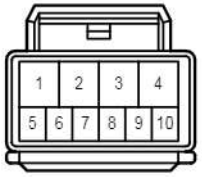

L 2
White




L 3
White

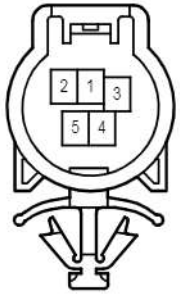


L 4
Black



L 5
White

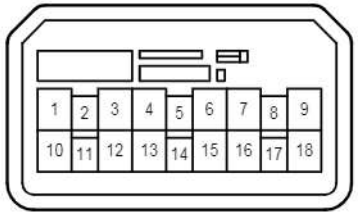

M 1
White

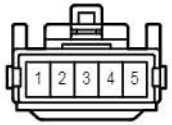

M 2
Gray



M 3
White



N 1
White



P 1
Black



R 2
Blue




T 4
White



Position of Parts in Body <LHD>

T 11
White




T 12
White




T 13
White




T 14
Blue

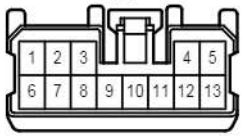

T 15
Black



T 16
White




T 17
White



T 22
White




T 23
White




T 24
White



T 25
Blue

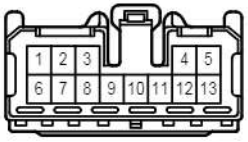

T 26
White



T 27
White



T 28
Blue




T 29
Black




T 30
Black



T 31
Black



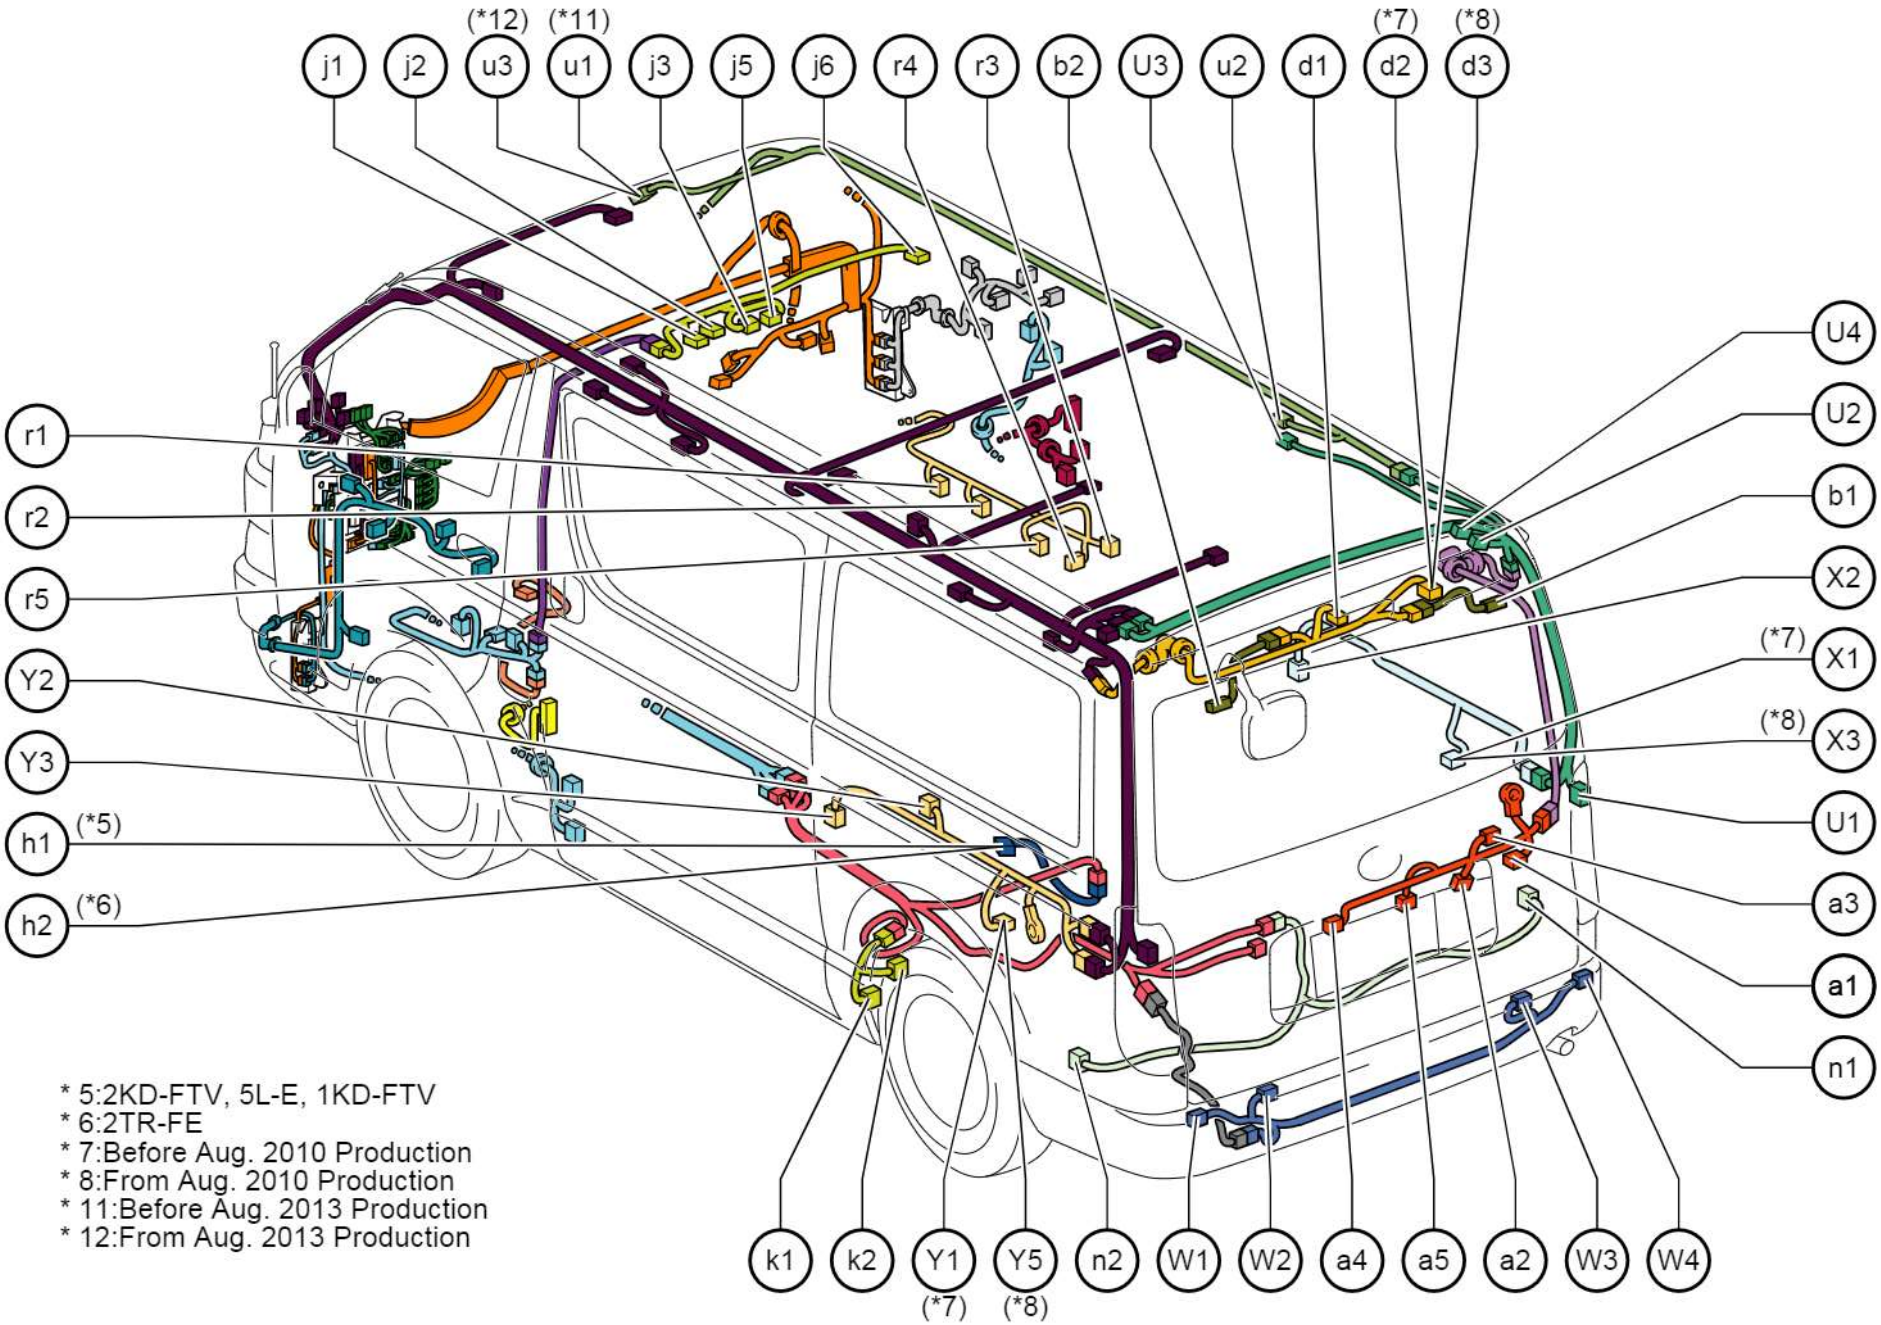

* 5:2KD-FTV, 5L-E, 1KD-FTV
* 6:2TR-FE
* 7:Before Aug. 2010 Production
* 8:From Aug. 2010 Production
* 11:Before Aug. 2013 Production
* 12:From Aug. 2013 Production

U 1 Rear Combination Lamp (RH)
U 2 Junction Connector
U 3 Rear Hammer Switch RH
U 4 Junction Connector

W 1 Ultrasonic Sensor No.1 (Rear LH)
W 2 Ultrasonic Sensor No.2 (LH)
W 3 Ultrasonic Sensor No.2 (RH)
W 4 Ultrasonic Sensor No.1 (Rear RH)

X 1 Speaker (Rear RH)
X 2 Door Courtesy SW (Slide Door RH)
X 3 Speaker (Rear RH)

Y 1 Speaker (Rear LH)
Y 2 Door Control Receiver
Y 3 Door Courtesy SW (Slide Door LH)
Y 5 Speaker (Rear LH)

a 1 Junction Connector
a 2 Back Door Courtesy SW
a 3 Back Door Lock Assembly
a 4 License Plate Lamp
a 5 Television Camera Assembly

b 1 Rear Window Defogger
b 2 Rear Window Defogger

d 1 Center Stop Lamp
d 2 Rear Wiper Motor
d 3 Rear Wiper Motor


h 1 Fuel Sender Gage
h 2 Fuel Suction Pump and Gage Assembly

j 1 Blower Motor (Rear A/C LH)
j 1 Blower Motor (Rear A/C LH)
j 2 Blower Resistor (Rear A/C)
j 3 Blower SW (Rear A/C)
j 5 A/C Evaporator Temp. Sensor (Rear A/C)
j 6 Blower Motor (Rear A/C RH)
j 6 Blower Motor (Rear A/C RH)


k 1 Blower Motor (Rear Heater)

Position of Parts in Body <LHD>

U 1
White




U 2
Black




U 3
Black




U 4
Black




W 1
Black




W 2
Black



W 3
Black




W 4
Black




X 1
White



X 2
White

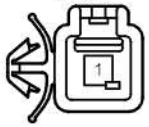


X 3
White




Y 1
White



Y 2
White

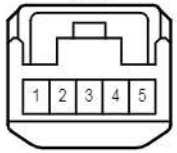


Y 3
White

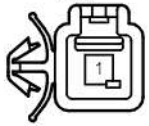


Y 5
White




a 1
Black




a 2
White

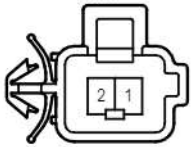


a 3
Gray

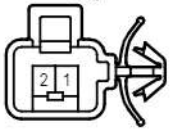

a 4
White

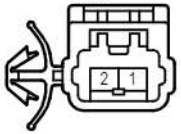

a 5
Gray

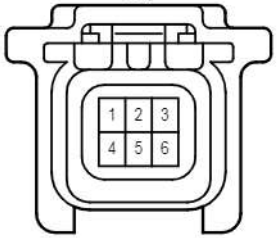

b 1
Black



b 2
Black



d 1
White



d 2
White



d 3
White



h 1
Dark Gray



h 2
Dark Gray

j 1
Black

j 1
Gray


Position of Parts in Body <LHD>

j 6
Black




(For production from approximately Dec. 2006)

k 1
Black



k 2
Black

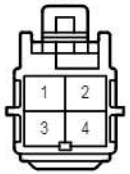

n 1
Gray



n 2
Gray



r 1
Dark Gray



r 2
Black



r 3
Black



r 4
Dark Gray



r 5
Black



u 1
Black




u 2
Black




u 3
Black

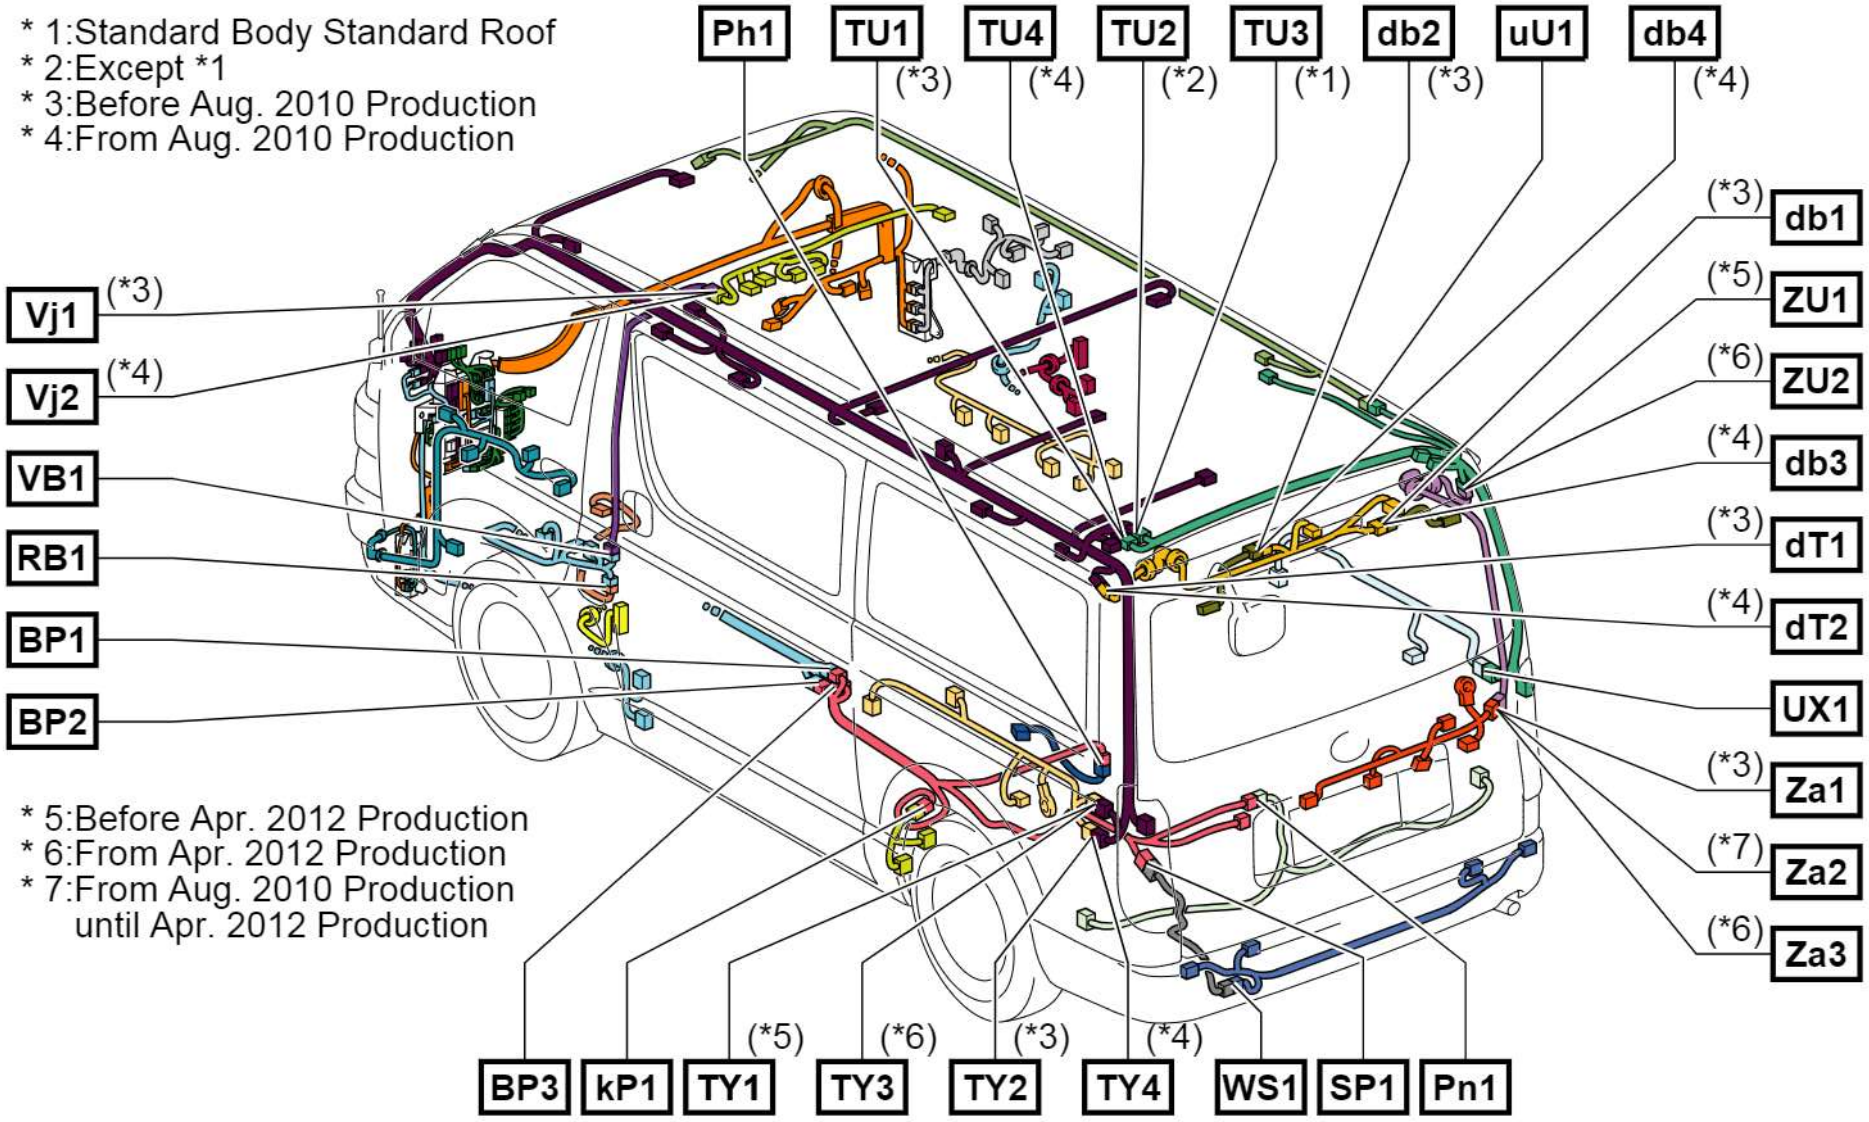



* 1:Standard Body Standard Roof
* 2:Except *1
* 3:Before Aug. 2010 Production
* 4:From Aug. 2010 Production
* 5:Before Apr. 2012 Production
* 6:From Apr. 2012 Production
* 7:From Aug. 2010 Production until Apr. 2012 Production
Ph1
TU1 (*3)
TU4 (*4)
TU2 (*2)
TU3 (*1)
db2 (*3)
uU1
db4 (*4)
(*3) db1
(*5) ZU1
(*6) ZU2
(*4) db3
(*3) dT1
(*4) dT2
UX1
(*3) Za1
(*7) Za2
(*6) Za3
(*3) Vj1
(*4) Vj2
VB1
RB1
BP1
BP2
BP3
kP1
(*5) TY1
(*6) TY3
(*3) TY2
(*4) TY4
WS1
SP1
Pn1


BP1
Black

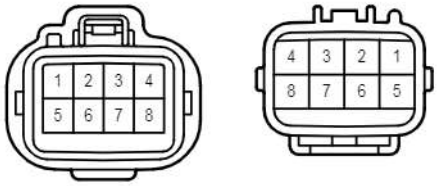

BP2
Dark Gray

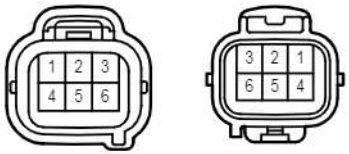


BP3
Black

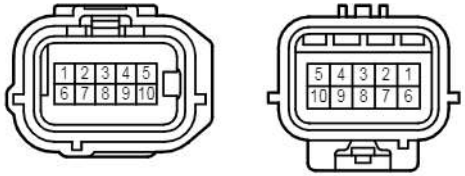


Ph1
Dark Gray




Pn1
Black Gray

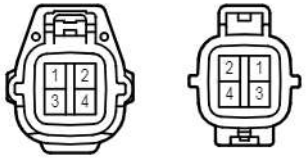


RB1
White

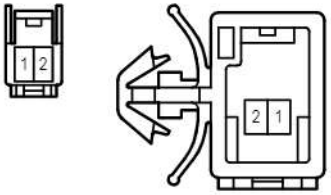


SP1
Black

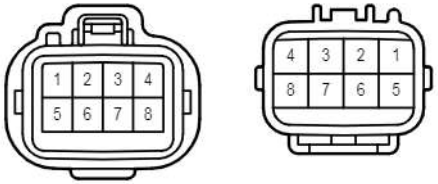


TU1
White

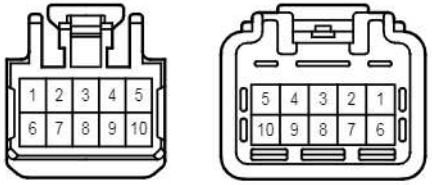

TU2
White

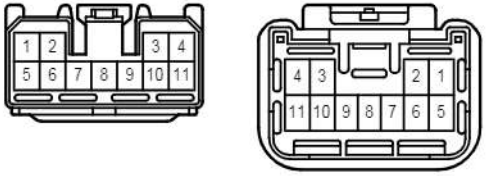


TU3
White




TU4
White




TY3
White

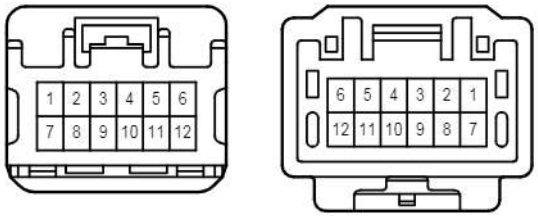


TY4
White

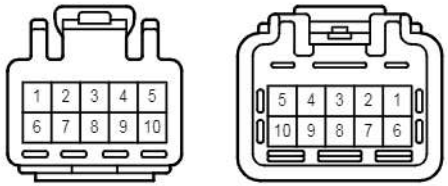


UX1
White

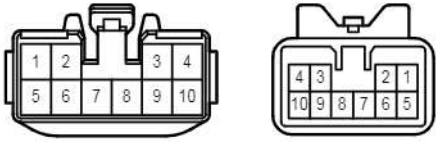


VB1
White

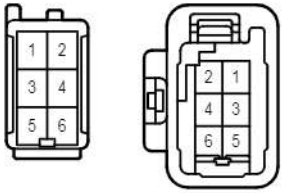


Vj1
White

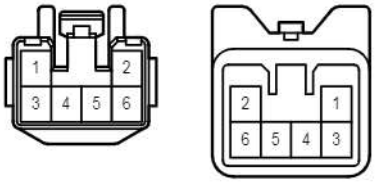


Vj2
White

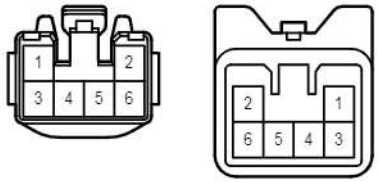

WS1
Black

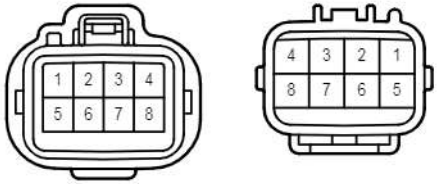

ZU1
White

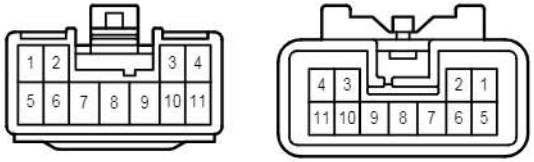


ZU2
White





Za1
White



Wire and Wire in Body <LHD>

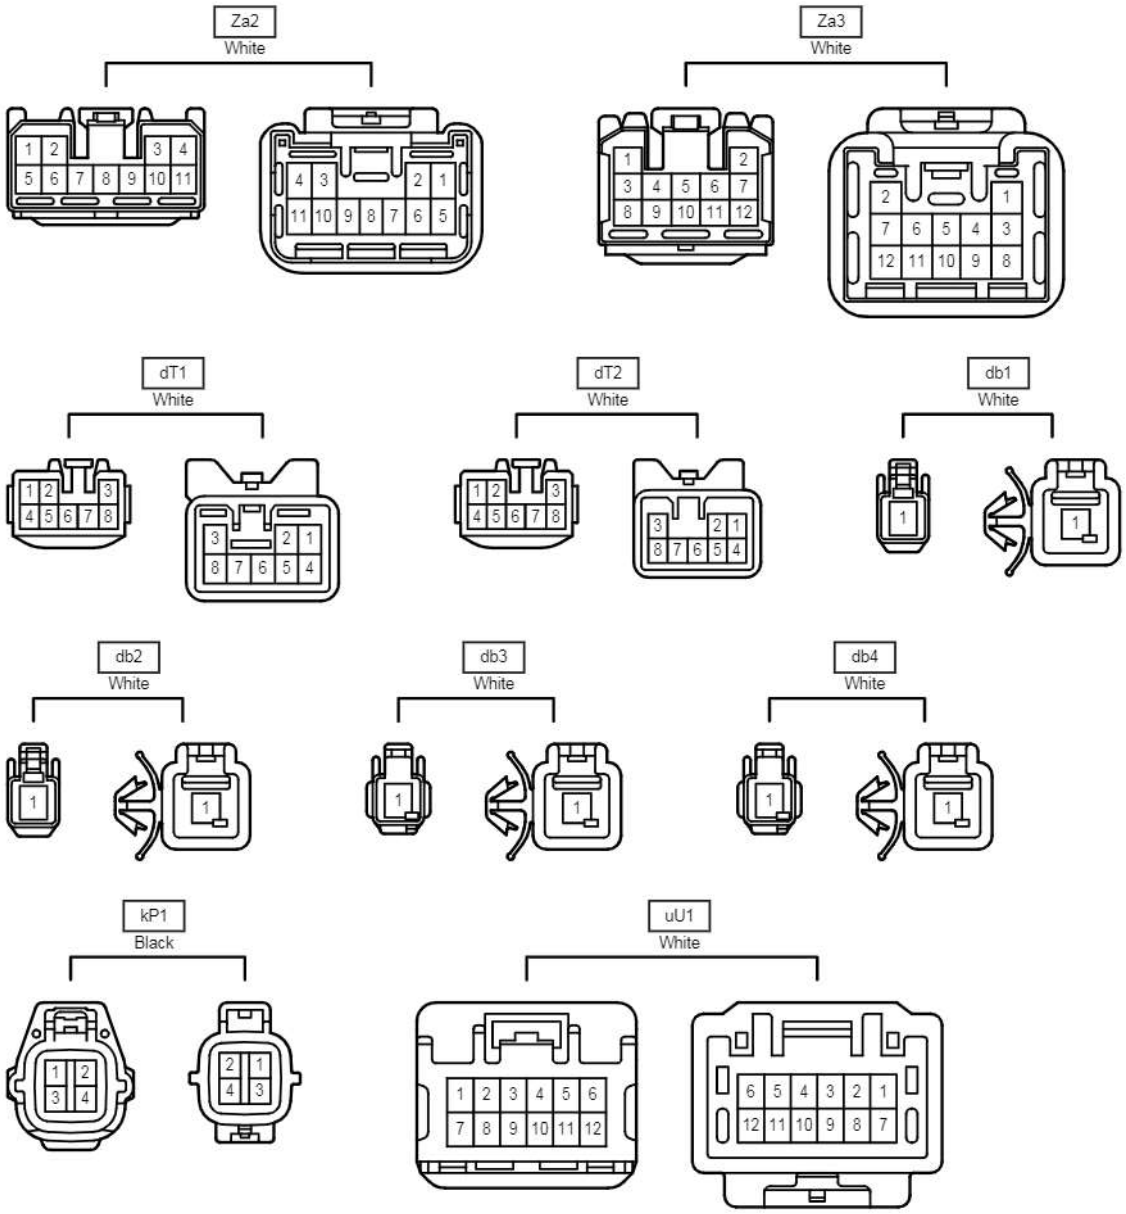

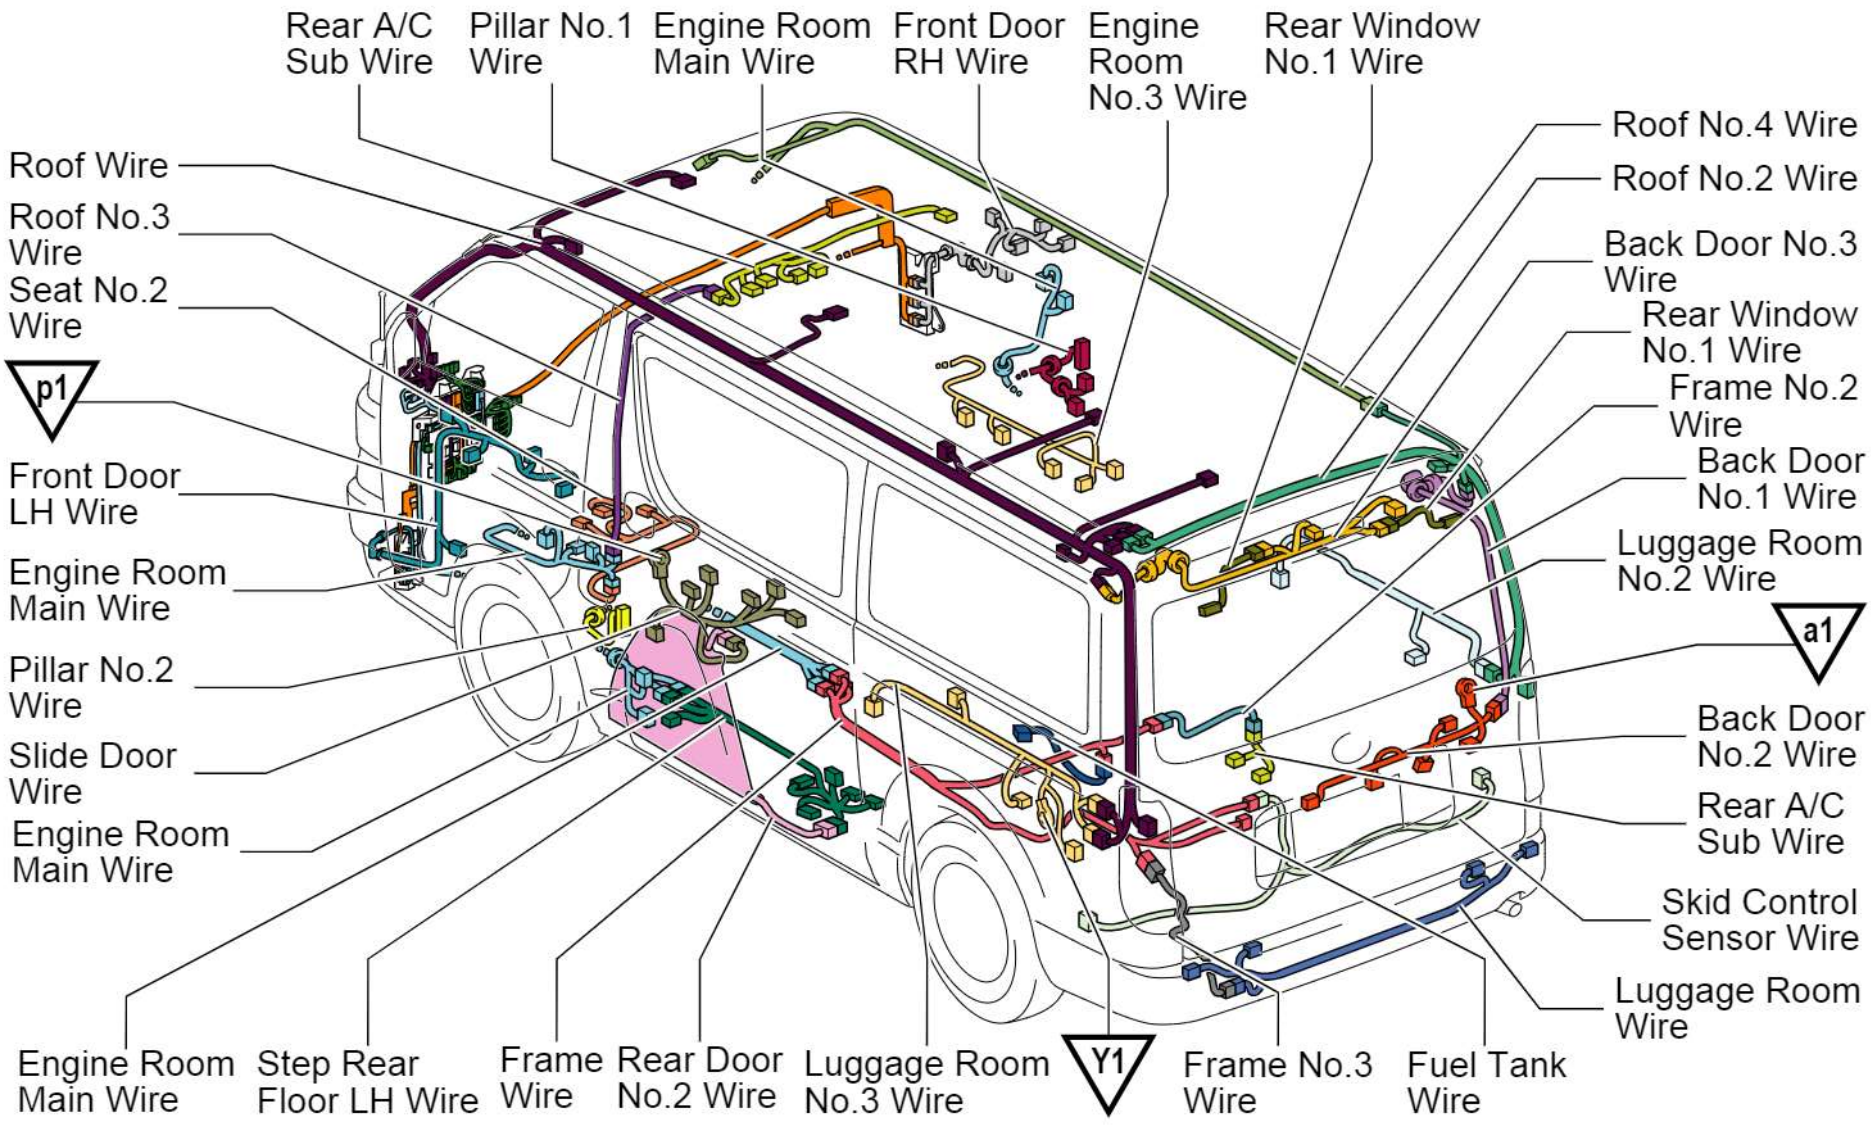
Rear A/C Sub Wire
Pillar No.1 Wire
Engine Room Main Wire
Front Door RH Wire
Engine Room No.3 Wire
Rear Window No.1 Wire
Roof Wire
Roof No.3 Wire
Seat No.2 Wire
p1
Front Door LH Wire
Engine Room Main Wire
Pillar No.2 Wire
Slide Door Wire
Engine Room Main Wire
Roof No.4 Wire
Roof No.2 Wire
Back Door No.3 Wire
Rear Window No.1 Wire
Frame No.2 Wire
Back Door No.1 Wire
Luggage Room No.2 Wire
a1
Back Door No.2 Wire
Rear A/C Sub Wire
Skid Control Sensor Wire
Luggage Room Wire
Engine Room Main Wire
Step Rear Floor LH Wire
Frame Wire
Rear Door No.2 Wire
Luggage Room No.3 Wire
Y1
Frame No.3 Wire
Fuel Tank Wire

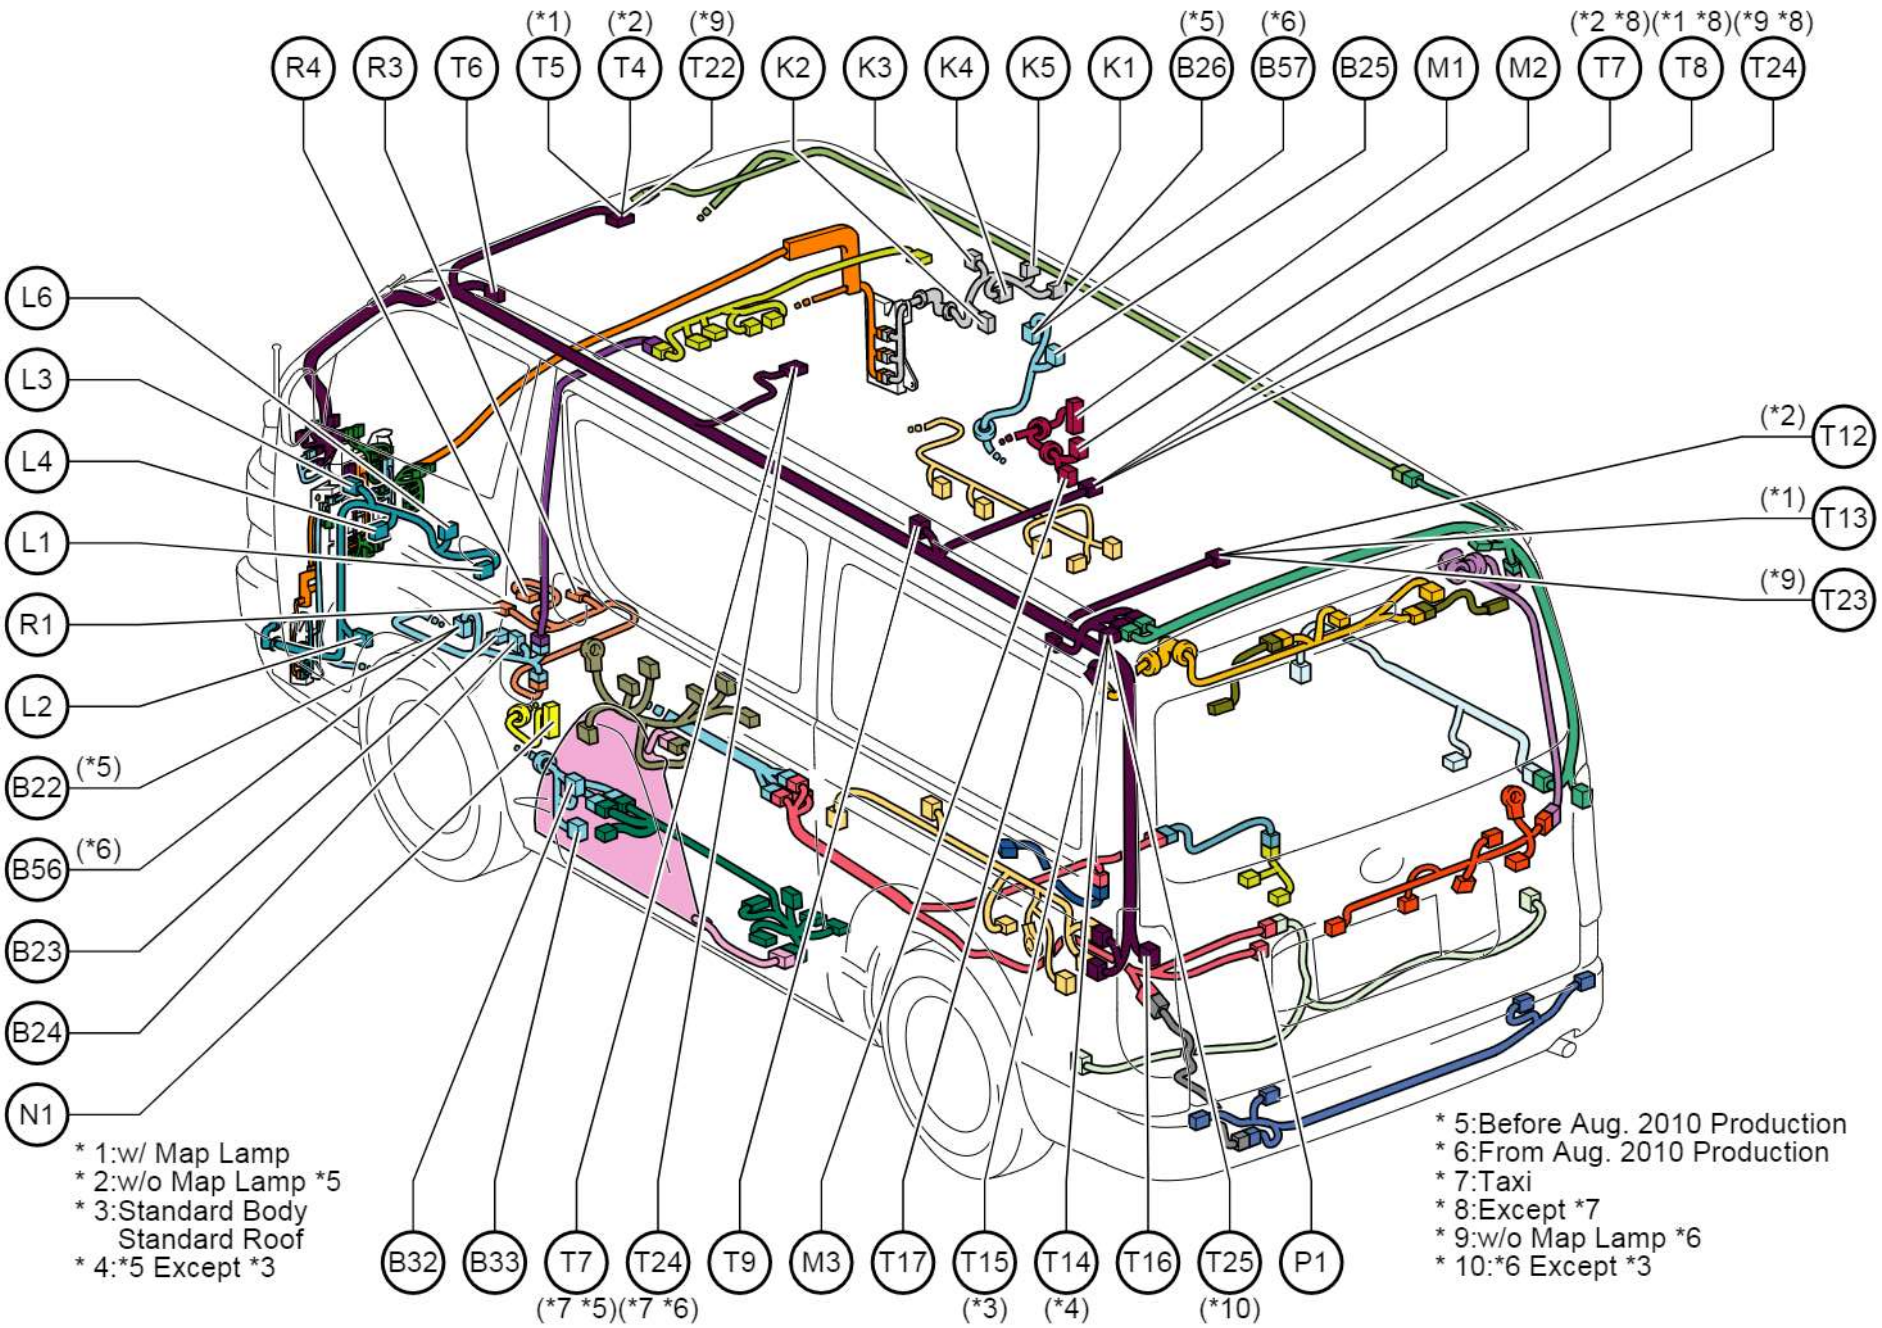
R4
R3
T6
(*1) T5
(*2) T4
(*9) T22
K2
K3
K4
K5
K1
(*5) B26
(*6) B57
B25
M1
M2
(*2 *8) T7
(*1 *8) T8
(*9 *8) T24
L6
L3
L4
L1
R1
L2
(*5) B22
(*6) B56
B23
B24
N1
(*2) T12
(*1) T13
(*9) T23
B32
B33
T7 (*7 *5)
T24 (*7 *6)
T9
M3
T17
T15 (*3)
T14 (*4)
T16
T25 (*10)
P1
* 1:w/ Map Lamp
* 2:w/o Map Lamp *5
* 3:Standard Body
Standard Roof
* 4:*5 Except *3
* 5:Before Aug. 2010 Production
* 6:From Aug. 2010 Production
* 7:Taxi
* 8:Except *7
* 9:w/o Map Lamp *6
* 10:*6 Except *3


B	22	Door Courtesy SW (Front LH)
B	23	Front Seat Outer Belt (LH)
B	24	Blower SW (Rear Heater)
B	25	Front Seat Outer Belt (RH)
B	26	Door Courtesy SW (Front RH)
B	32	Door Control Relay (LH)
B	33	Step Lamp (LH)
B	56	Door Courtesy SW (Front LH)
B	57	Door Courtesy SW (Front RH)
K	1	Door Lock Assembly (Front RH)
K	2	Speaker (Front Door RH)
K	3	Outer Rear View Mirror (RH)
K	4	Power Window Regulator Motor (Front RH)
K	5	Power Window Master SW
L	1	Door Lock Assembly (Front LH)
L	2	Speaker (Front Door LH)
L	3	Outer Rear View Mirror (LH)
L	4	Power Window Regulator Motor (Front LH)
L	6	Power Window SW (Front LH)
M	1	Slide Door Control Junction (Male RH)
M	2	Door Control Relay (RH)
M	3	Step Lamp (RH)
N	1	Slide Door Control Junction (Male LH)
P	1	Rear Speed Sensor RH
R	1	Front Seat Inner Belt (Front Passenger's Side)
R	3	Front Seat Inner Belt (Front Passenger's Side)
R	4	Belt Warning Occupant Detection Sensor
T	4	Room Lamp (Front)
T	5	Map Lamp
T	6	Diode (Door Courtesy No.4)
T	7	Room Lamp (Center)
T	8	Room Lamp (Center)
T	9	Diode (Door Courtesy No.5)
T	12	Room Lamp (Rear)
T	13	Room Lamp (Rear)
T	14	Junction Connector
T	15	Junction Connector

Position of Parts in Body <RHD>


B 22
Black




B 23
Yellow

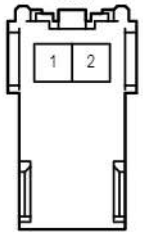

B 24
Blue

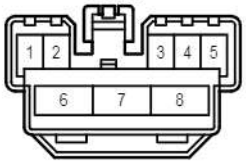

B 25
Yellow

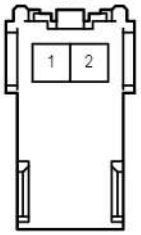


B 26
Black



B 32
Gray



B 33
White




B 56
Black



B 57
Black




K 1
White

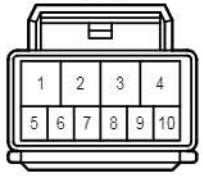

K 2
White




K 3
White

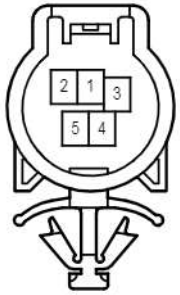


K 4
Black



K 5
White

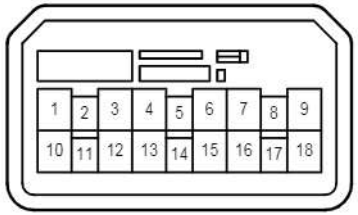


L 1
White

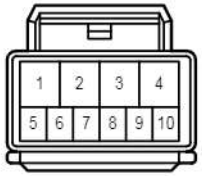

L 2
White



L 3
White

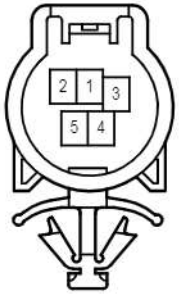

L 4
Black



L 6
White



M 1
White



M 2
Gray

M 3
White

N 1
White


P 1
Black

R 1
Blue

R 3
White

Position of Parts in Body <RHD>

T 9
White




T 12
White




T 13
White




T 14
Blue

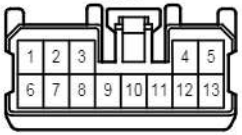

T 15
Black



T 16
White




T 17
White



T 22
White




T 23
White




T 24
White



T 25
Blue

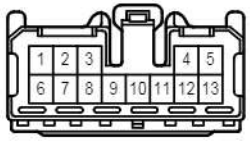

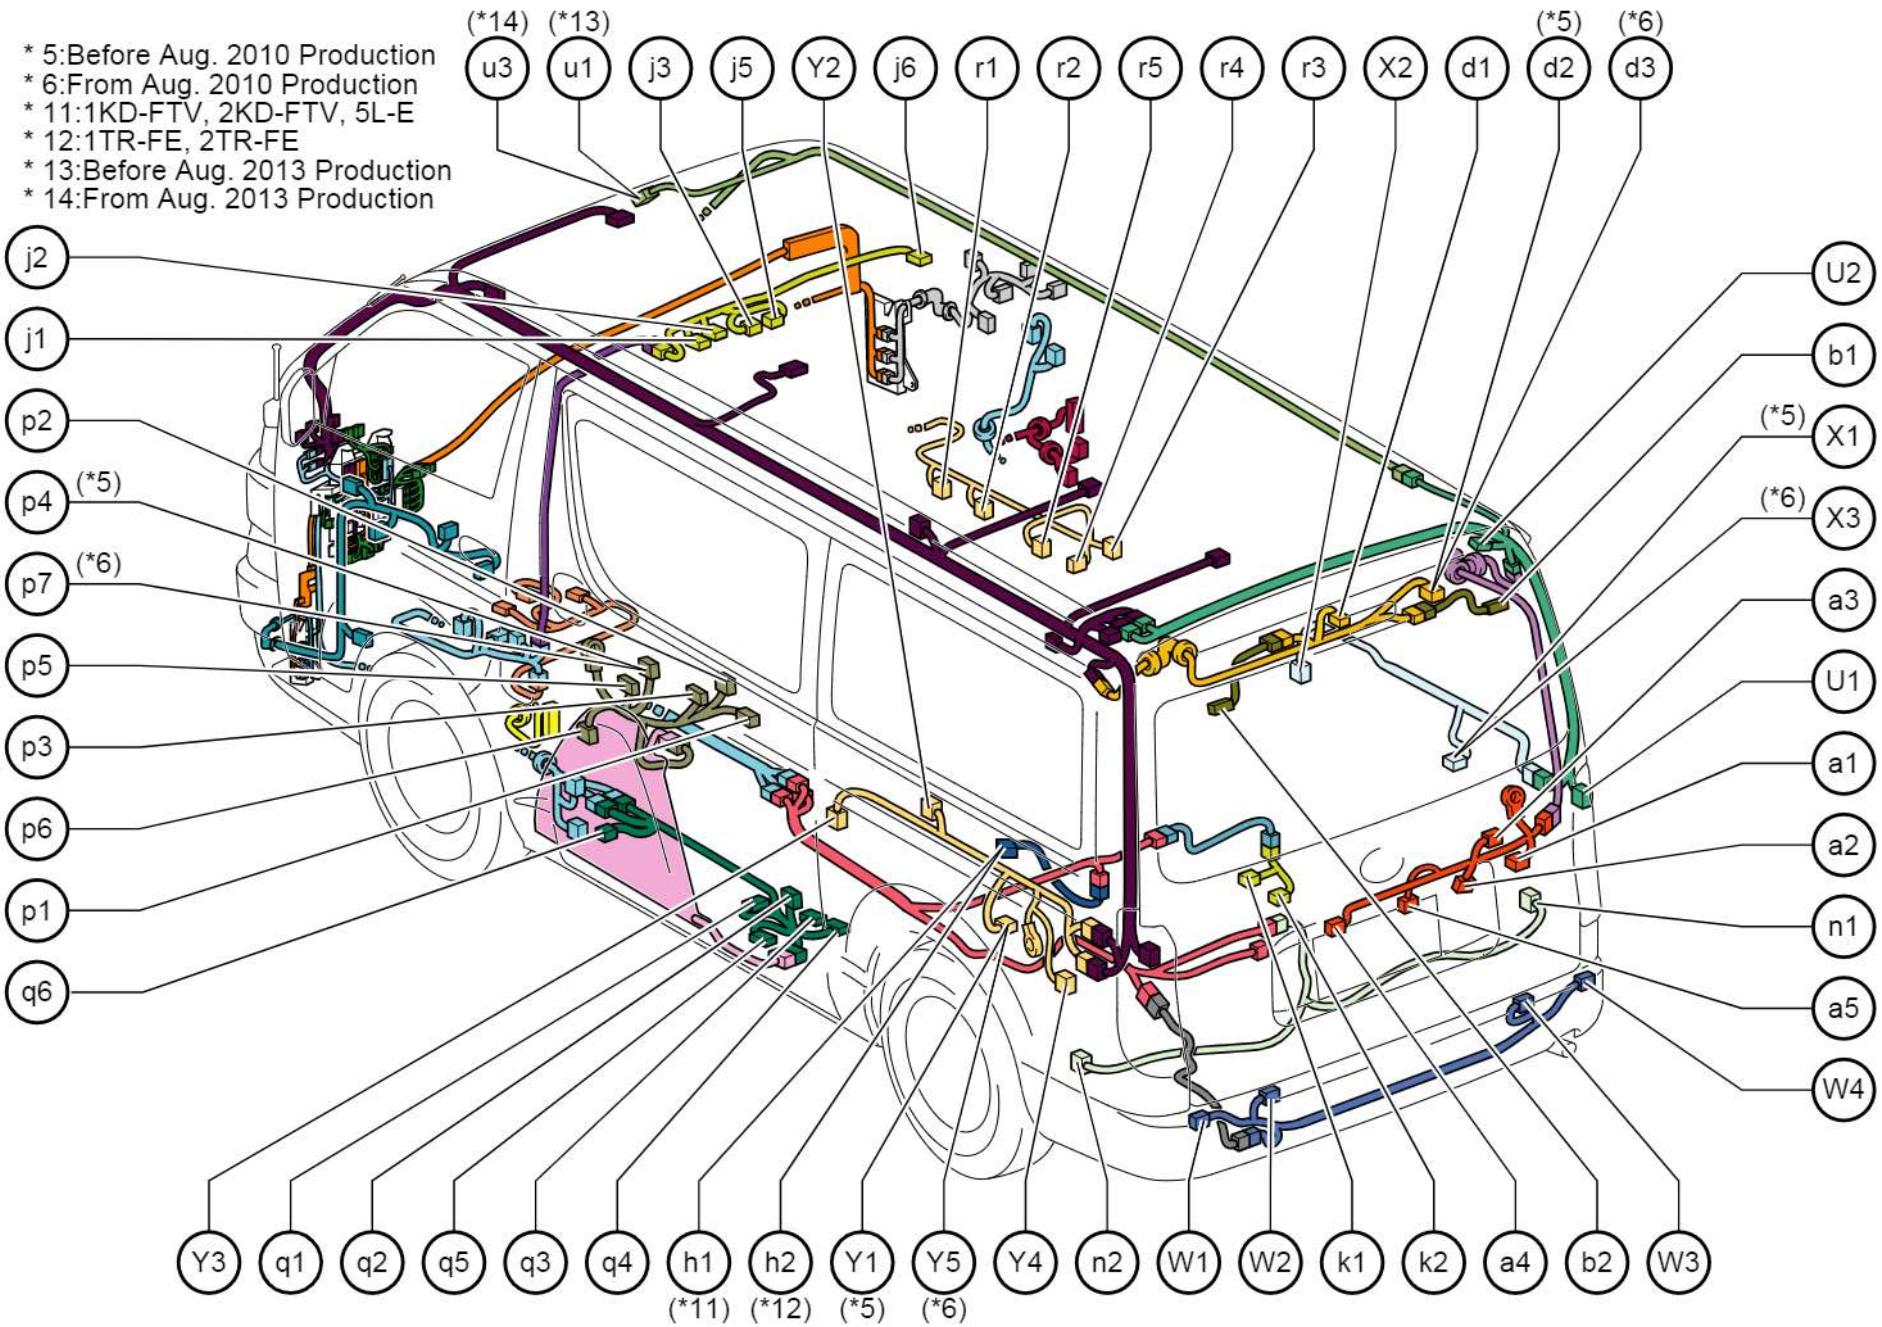
* 5:Before Aug. 2010 Production
* 6:From Aug. 2010 Production
* 11:1KD-FTV, 2KD-FTV, 5L-E
* 12:1TR-FE, 2TR-FE
* 13:Before Aug. 2013 Production
* 14:From Aug. 2013 Production
(*14)
(*13)
(*5)
(*6)
u3
u1
j3
j5
Y2
j6
r1
r2
r5
r4
r3
X2
d1
d2
d3
j2
j1
p2
p4
(*5)
p7
(*6)
p5
p3
p6
p1
q6
U2
b1
(*5)
X1
(*6)
X3
a3
U1
a1
a2
n1
a5
W4
Y3
q1
q2
q5
q3
q4
h1
(*11)
h2
(*12)
Y1
(*5)
Y5
(*6)
Y4
n2
W1
W2
k1
k2
a4
b2
W3

U	1	Rear Combination Lamp (RH)
U	2	Junction Connector
W	1	Ultrasonic Sensor No.1 (Rear LH)
W	2	Ultrasonic Sensor No.2 (LH)
W	3	Ultrasonic Sensor No.2 (RH)
W	4	Ultrasonic Sensor No.1 (Rear RH)
X	1	Speaker (Rear RH)
X	2	Door Courtesy SW (Slide Door RH)
X	3	Speaker (Rear RH)
Y	1	Speaker (Rear LH)
Y	2	Door Control Receiver
Y	3	Door Courtesy SW (Slide Door LH)
Y	4	Option Connector (Clearance Warning ECU)
Y	5	Speaker (Rear LH)
a	1	Junction Connector
a	2	Back Door Courtesy SW
a	3	Back Door Lock Assembly
a	4	License Plate Lamp
a	5	Television Camera Assembly
b	1	Rear Window Defogger
b	2	Rear Window Defogger
d	1	Center Stop Lamp
d	2	Rear Wiper Motor
d	3	Rear Wiper Motor
h	1	Fuel Sender Gage
h	2	Fuel Suction Pump and Gage Assembly
j	1	Blower Motor (Rear A/C LH)
j	1	Blower Motor (Rear A/C LH)
j	2	Blower Resistor (Rear A/C)
j	3	Blower SW (Rear A/C)
j	5	A/C Evaporator Temp. Sensor (Rear A/C)
j	6	Blower Motor (Rear A/C RH)
j	6	Blower Motor (Rear A/C RH)
k	1	Blower Motor (Rear Heater)
k	2	Blower Resistor (Rear Heater)


q 4 Door Control Relay (Power Slide Door)
q 5 Slide Door Motor Assembly
q 6 Step Lamp (LH)

r 1 Exhaust Gas Temperature Sensor
r 2 No.2 Exhaust Gas Temperature Sensor
r 3 No.3 Exhaust Gas Temperature Sensor
r 4 Air Fuel Ratio Sensor
r 5 Differential Pressure Sensor


u 1 Inner Rear View Mirror Assembly
u 3 Inner Rear View Mirror Assembly

Position of Parts in Body <RHD>


U 1
White




U 2
Black




W 1
Black




W 2
Black



W 3
Black




W 4
Black



X 1
White



X 2
White

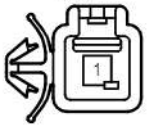


X 3
White




Y 1
White




Y 2
White

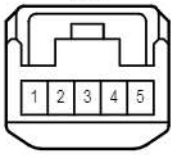

Y 3
White

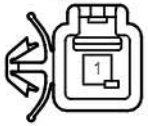


Y 4
White

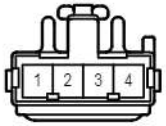

(Before Apr. 2009 Production)

Y 4
Black

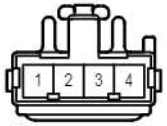


(From Apr. 2009 Production)


Y 5
White




a 1
Black




a 2
White

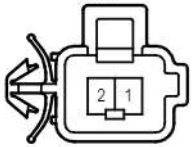


a 3
Gray

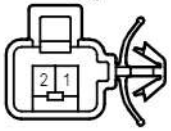

a 4
White

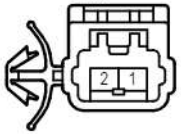

a 5
Gray

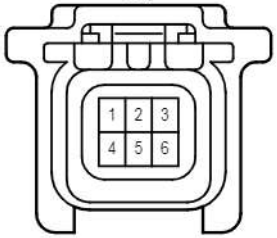

b 1
Black



b 2
Black



d 1
White



d 2
White



d 3
White



h 1
Dark Gray



h 2
Dark Gray

j 1
Black

j 1
Gray


Position of Parts in Body <RHD>

j 6
Black



(For production through approximately Dec. 2006)

k 1
Black



k 2
Black



n 1
Gray




n 2
Gray




p 1
White



p 2
White



p 3
White




p 4
White




p 5
Black



p 6
Gray

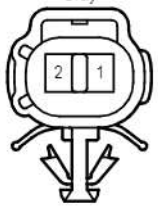

p 7
White




q 1
Gray




q 2
Black



q 3
Blue

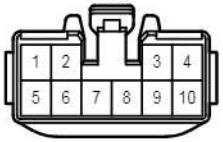


q 4
White

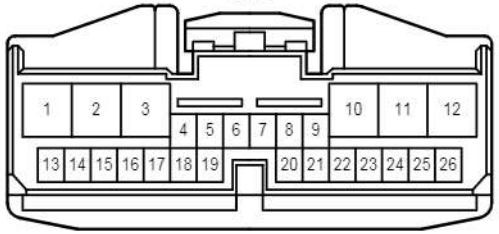

q 5
Gray



q 6
White



r 1
Dark Gray



r 2
Black



r 3
Black



r 4
Dark Gray




r 5
Black




u 1
Black


u 3
Black

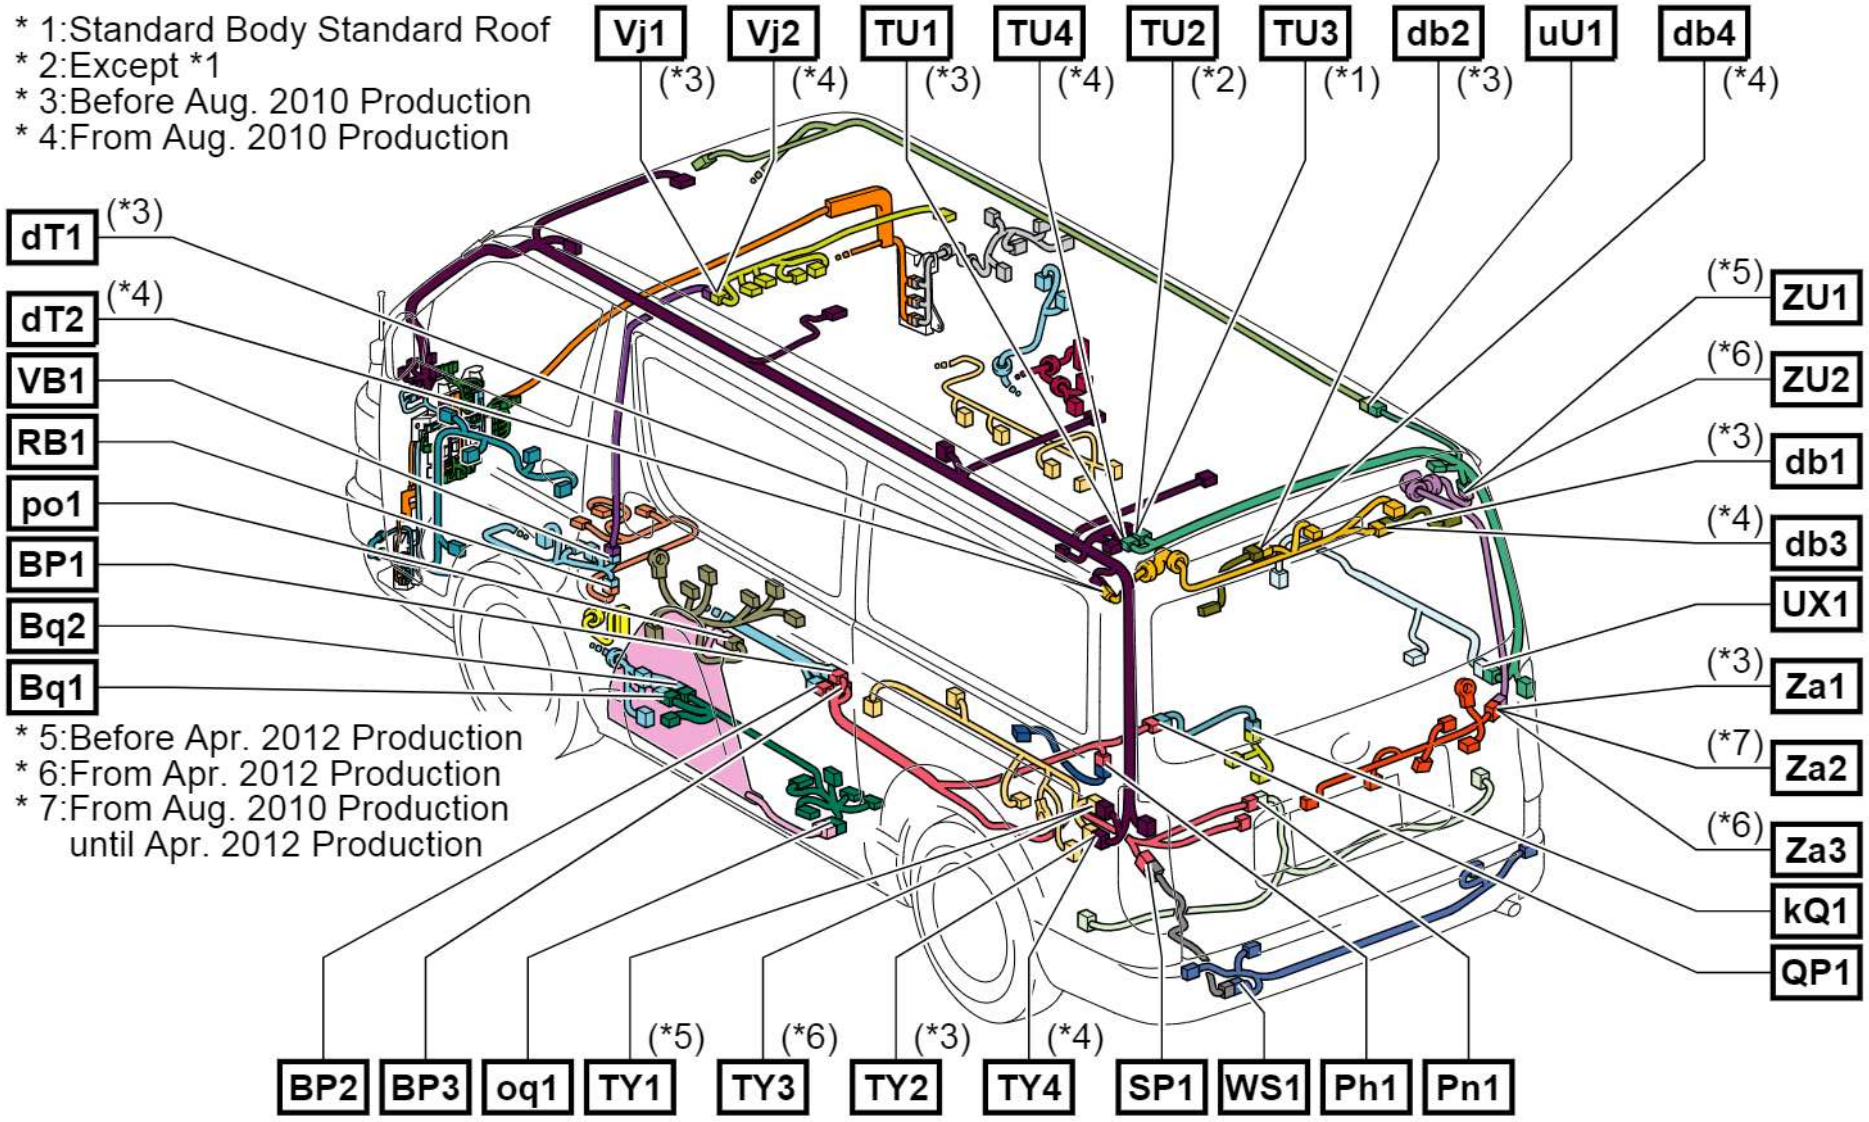
* 1:Standard Body Standard Roof
* 2:Except *1
* 3:Before Aug. 2010 Production
* 4:From Aug. 2010 Production
* 5:Before Apr. 2012 Production
* 6:From Apr. 2012 Production
* 7:From Aug. 2010 Production until Apr. 2012 Production
Vj1 (*3)
Vj2 (*4)
TU1 (*3)
TU4 (*4)
TU2 (*2)
TU3 (*1)
db2 (*3)
uU1
db4 (*4)
dT1 (*3)
dT2 (*4)
VB1
RB1
po1
BP1
Bq2
Bq1
(*5) ZU1
(*6) ZU2
(*3) db1
(*4) db3
UX1
(*3) Za1
(*7) Za2
(*6) Za3
kQ1
QP1
BP2
BP3
oq1
(*5) TY1
(*6) TY3
(*3) TY2
(*4) TY4
SP1
WS1
Ph1
Pn1


BP1
Black

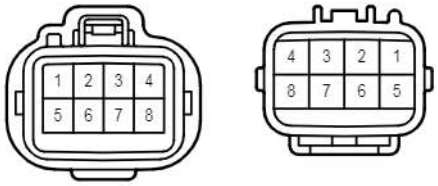


BP2
Dark Gray

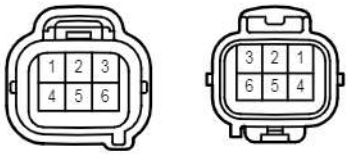


BP3
Black

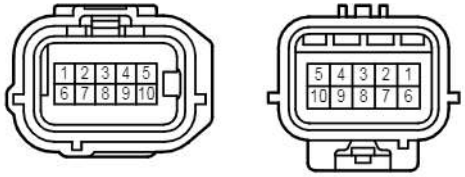

Bq1
White

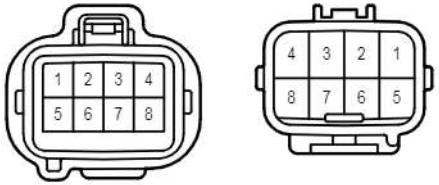


Bq2
Black

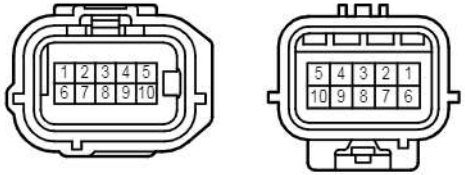


Ph1
Dark Gray




Pn1
Black Gray

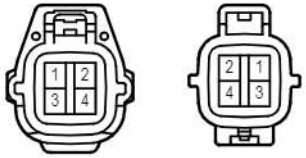

QP1
Black

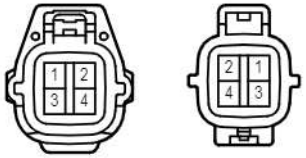

RB1
White

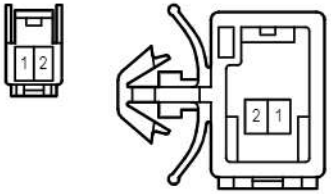


SP1
Black




TU1
White




TU4
White

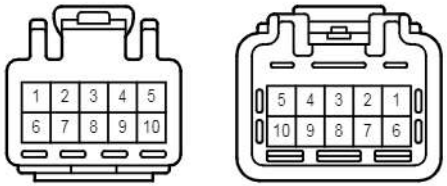


TY1
White

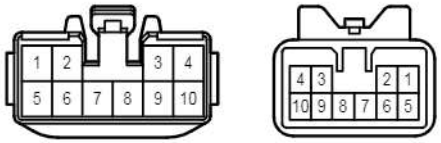


TY2
White

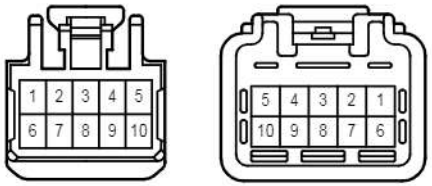


TY3
White

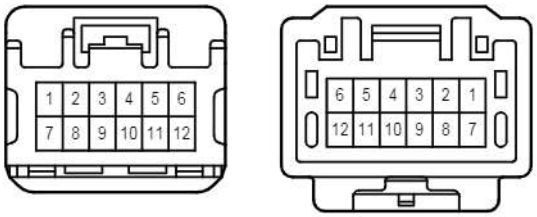


TY4
White

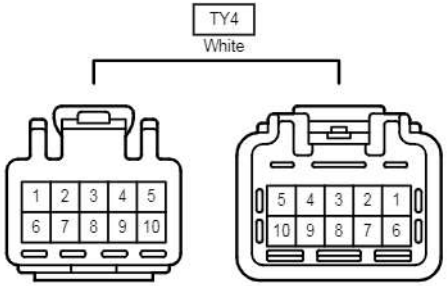


UX1
White

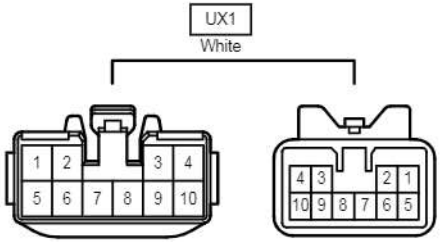


VB1
White

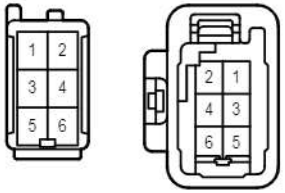

Vj1
White

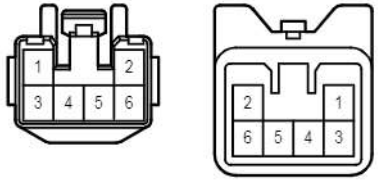

Vj2
White

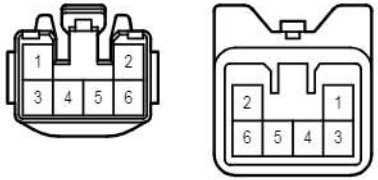


WS1
Black


ZU1
White

Wire and Wire in Body <RHD>


ZU2
White

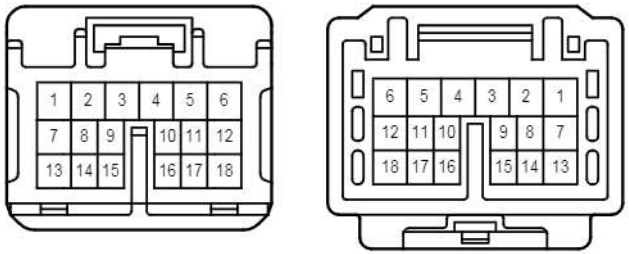


Za1
White

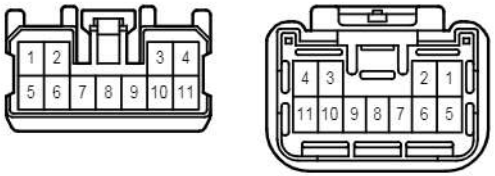


Za2
White

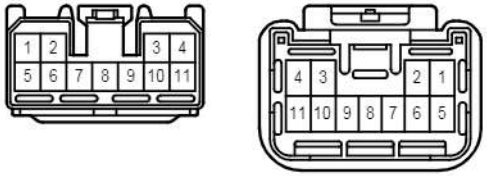


Za3
White

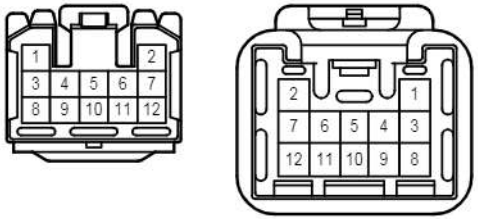

dT1
White

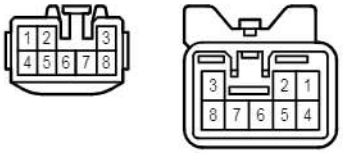

dT2
White

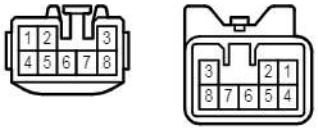

db1
White




db2
White



db3
White



db4
White

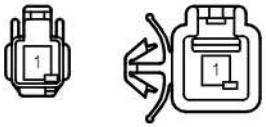


kQ1
Black




Wire and Wire in Body <RHD>


oq1
Gray

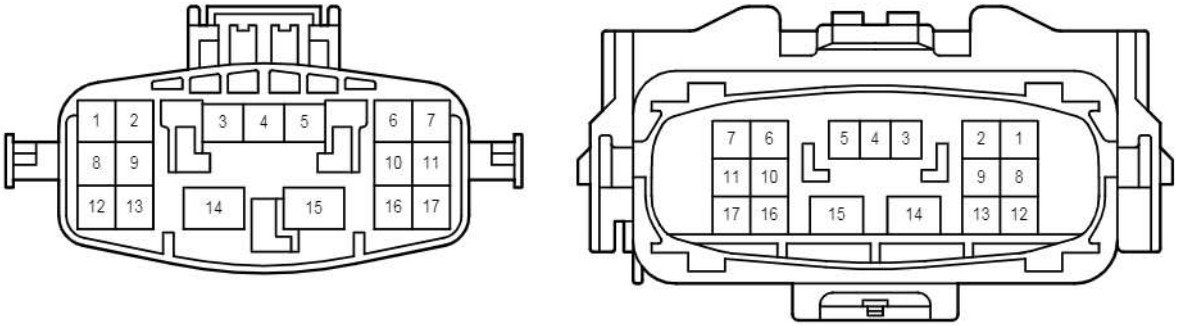



po1
White

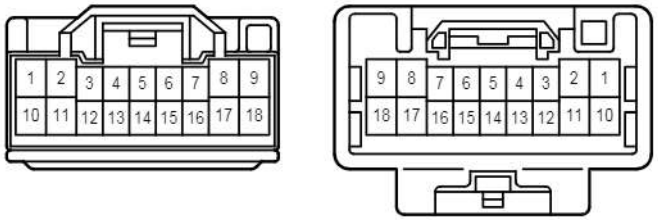

uU1
White

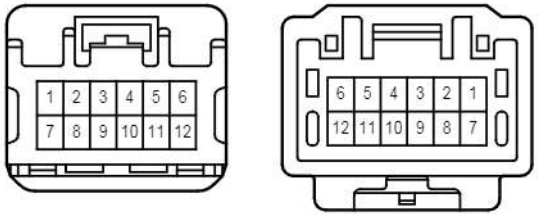

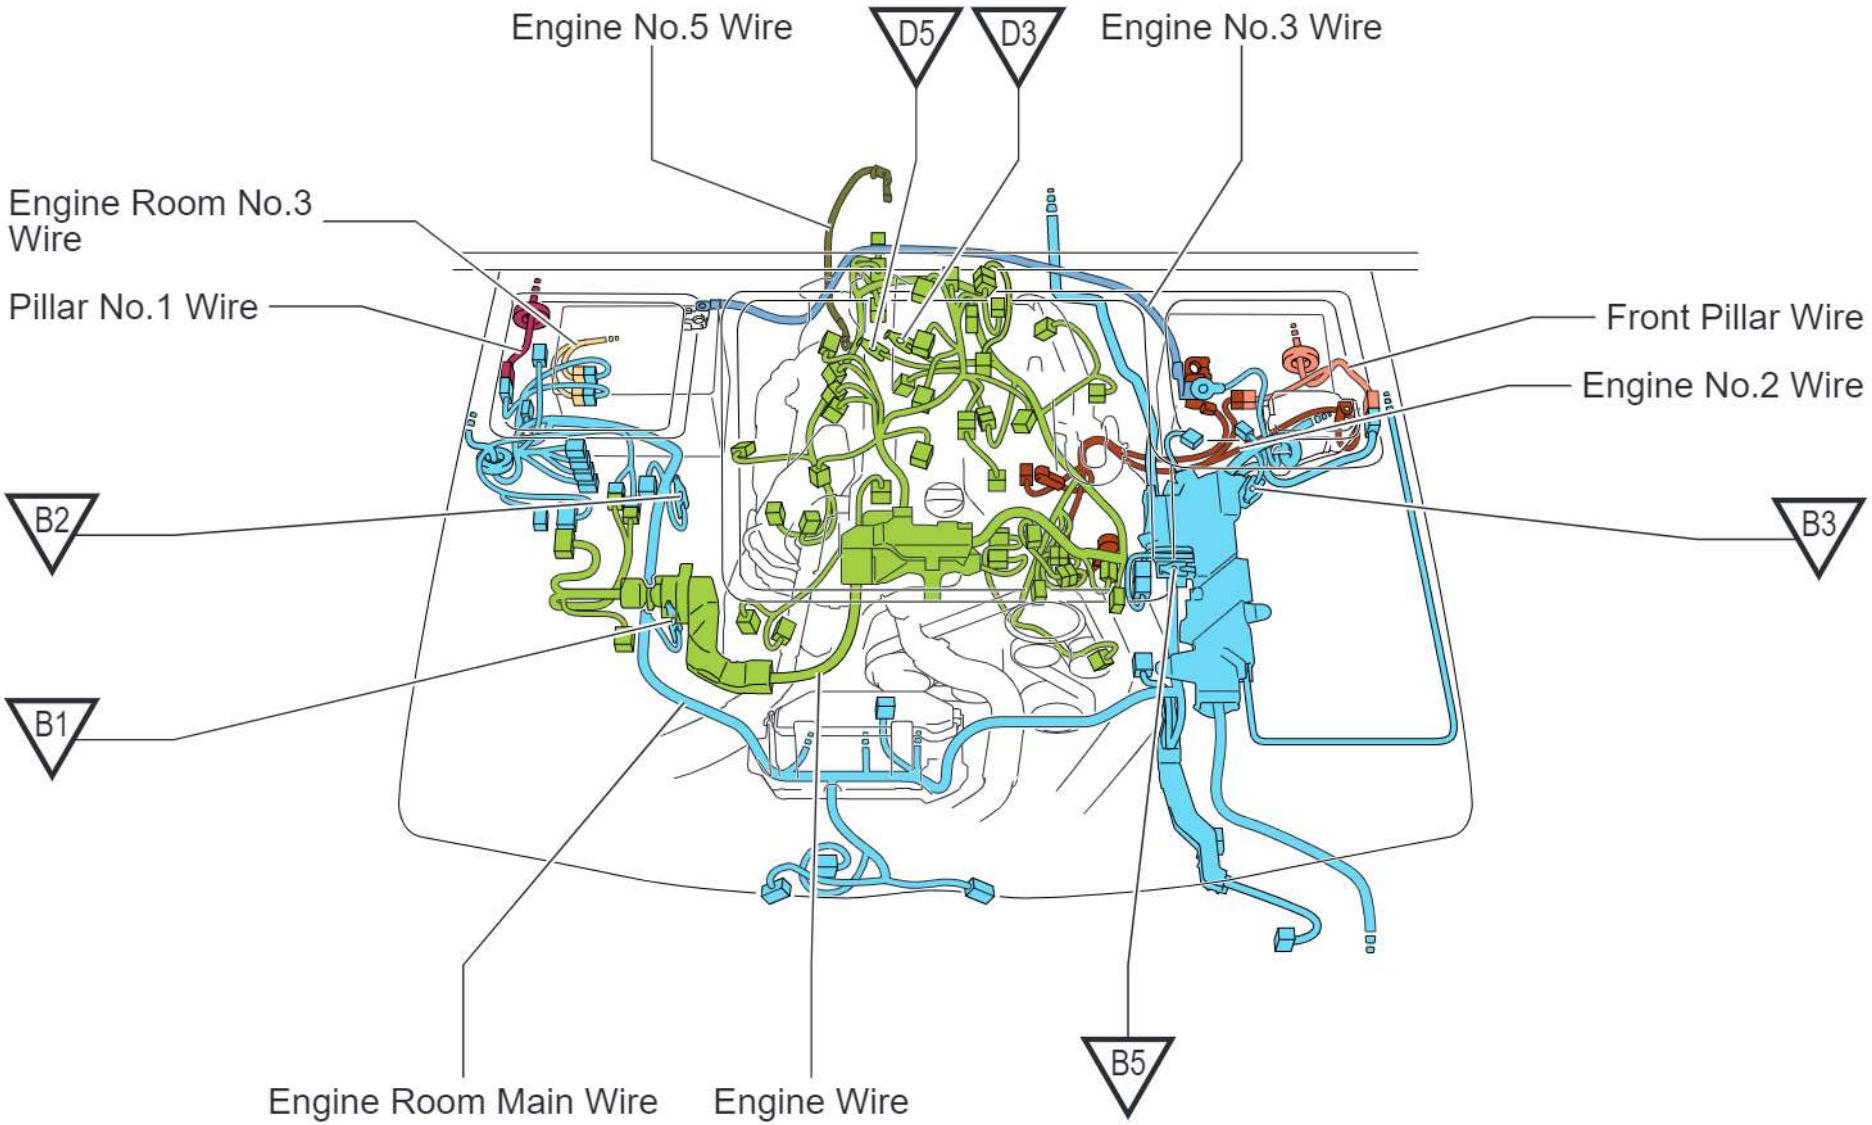
Engine No.5 Wire
D5
D3
Engine No.3 Wire
Engine Room No.3 Wire
Pillar No.1 Wire
Front Pillar Wire
Engine No.2 Wire
B2
B3
B1
B5
Engine Room Main Wire
Engine Wire

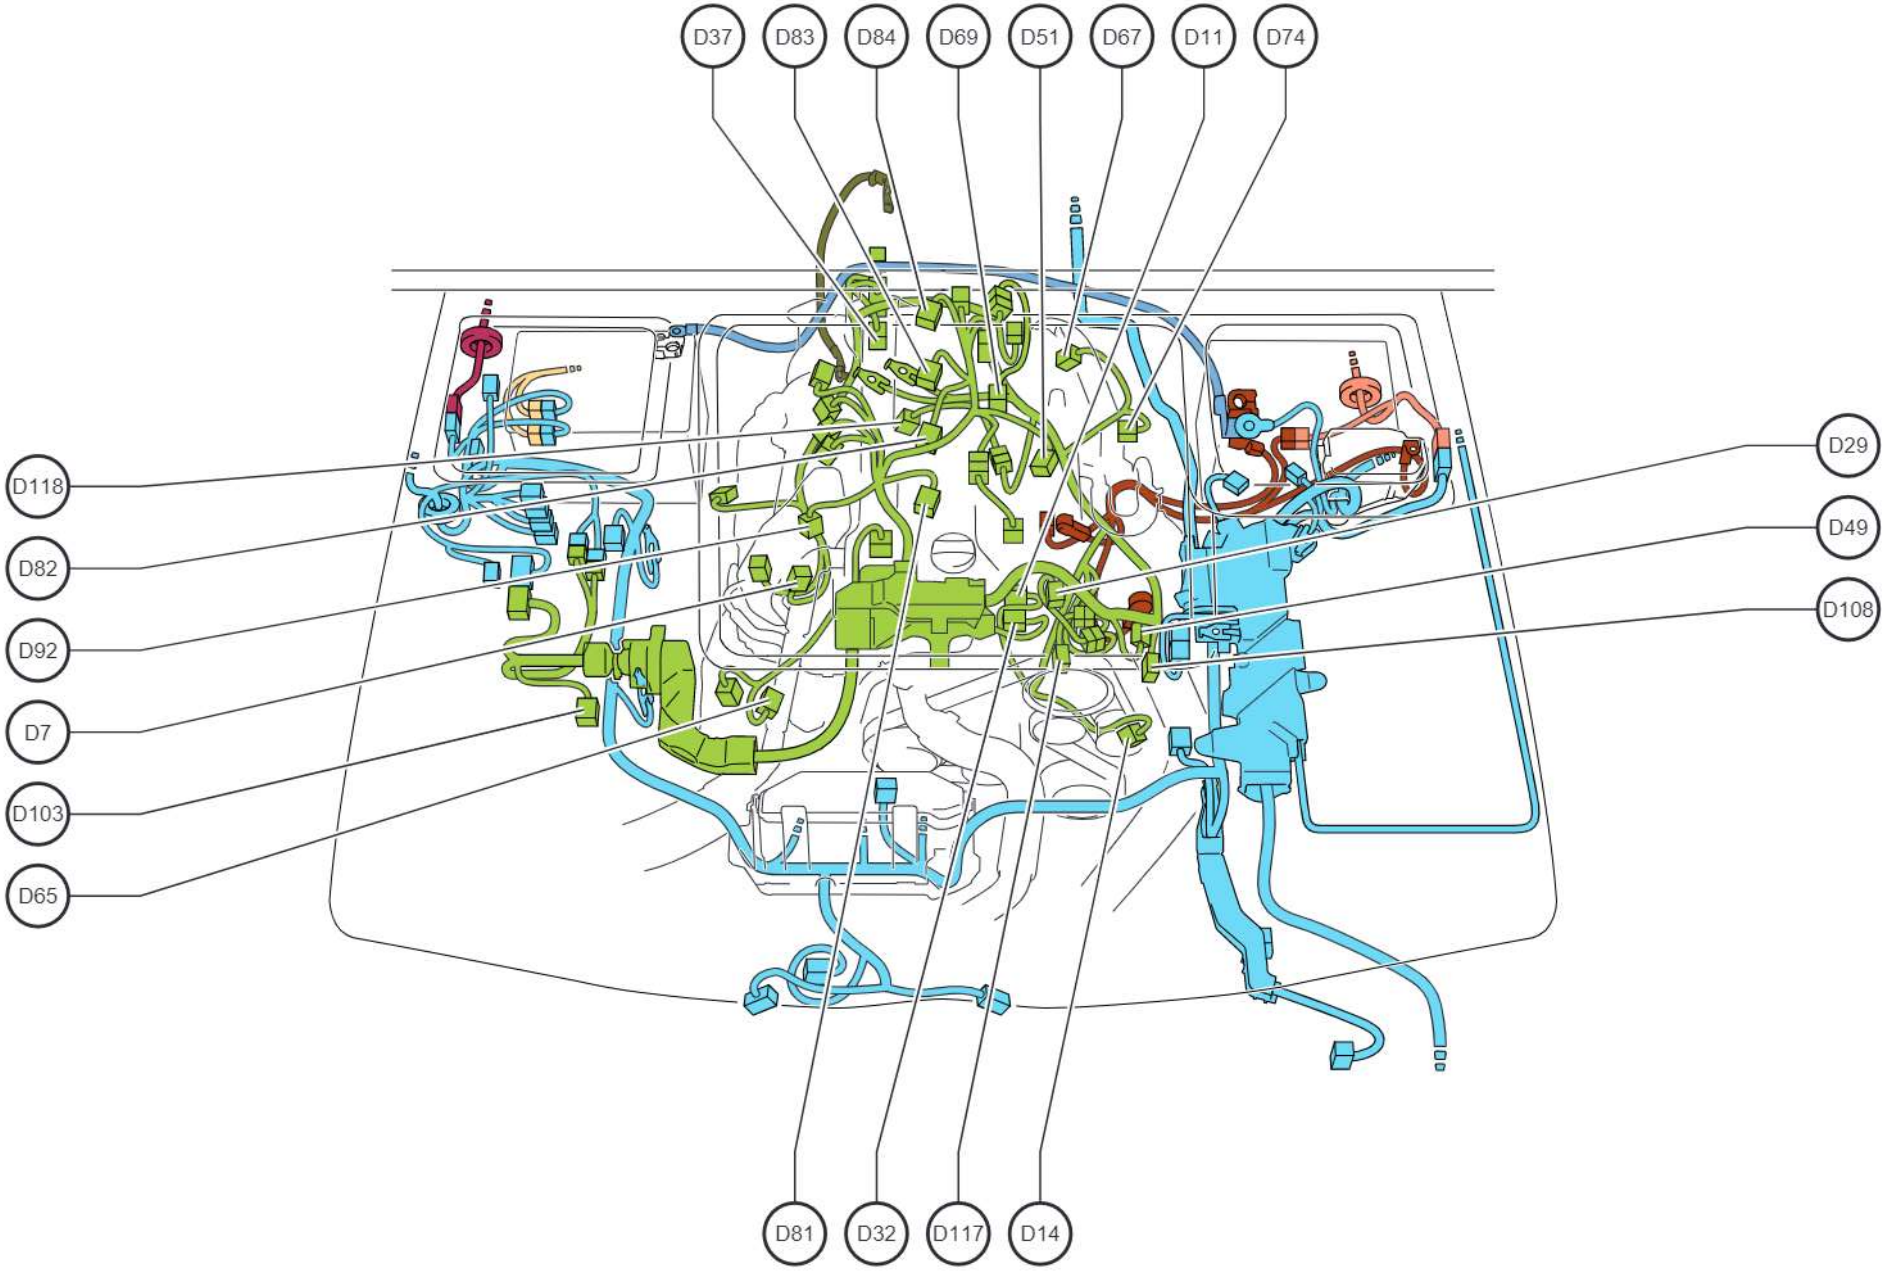
D37
D83
D84
D69
D51
D67
D11
D74
D118
D82
D92
D7
D103
D65
D29
D49
D108
D81
D32
D117
D14

D	7	Engine Oil Pressure SW
D	11	Engine Oil Level Sensor
D	14	A/C Compressor
D	29	Throttle Body Assembly
D	32	Water Temp. Sensor (Engine Coolant)
D	37	Park/Neutral Position SW
D	49	Inlet Air Temp. Sensor (Intake Manifold)
D	51	Turbo Pressure Sensor
D	65	Turbocharger Variable Nozzle Motor Assembly
D	67	Swirl Control Valve
D	69	Fuel Pressure Sensor
D	74	VSV (EGR)
D	81	Fuel Injector Assembly (No.1)
D	82	Fuel Injector Assembly (No.2)
D	83	Fuel Injector Assembly (No.3)
D	84	Fuel Injector Assembly (No.4)
D	92	Exhaust Fuel Addition Injector Assembly
D	103	Junction Connector
D	108	Alternator
D	117	PCV Valve (Injection or Supply Pump Assembly)
D	118	Crankshaft Position Sensor

D7
Black



90980-11363

D11
Gray




90980-11235

D14
Gray



90980-11016

D29
Black

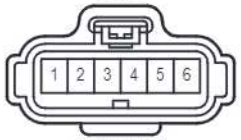


90980-11858

D32
Black



90980-10735

D37
Gray

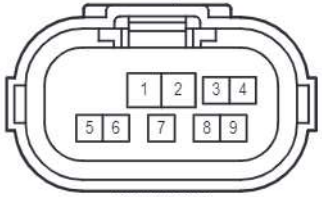

90980-12362
(Before Dec. 2013 Production)

D37
Black



90980-12362
(From Dec. 2013 Production)

D49
Gray



90980-11025

D51
Black




90980-10845

D65
Black



90980-11156

D67
Brown

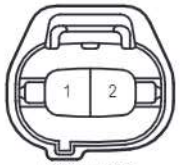

90980-11156
(1GD-FTV)

D69
Black




90980-11194

D74
Blue




90980-11156

D81
Black

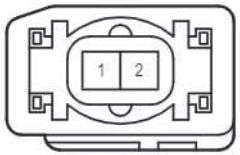


90980-12747

D82
Gray

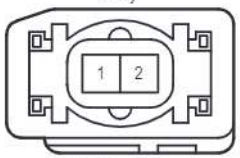


90980-12747

D83
Black

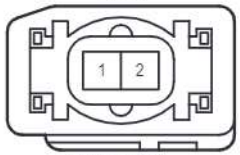

90980-12747

D84
Gray

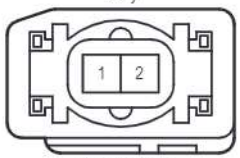

90980-12747

D92
Gray





90980-12117

D103
Gray



D108
Black

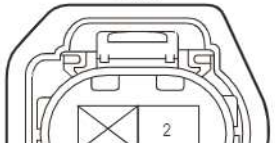

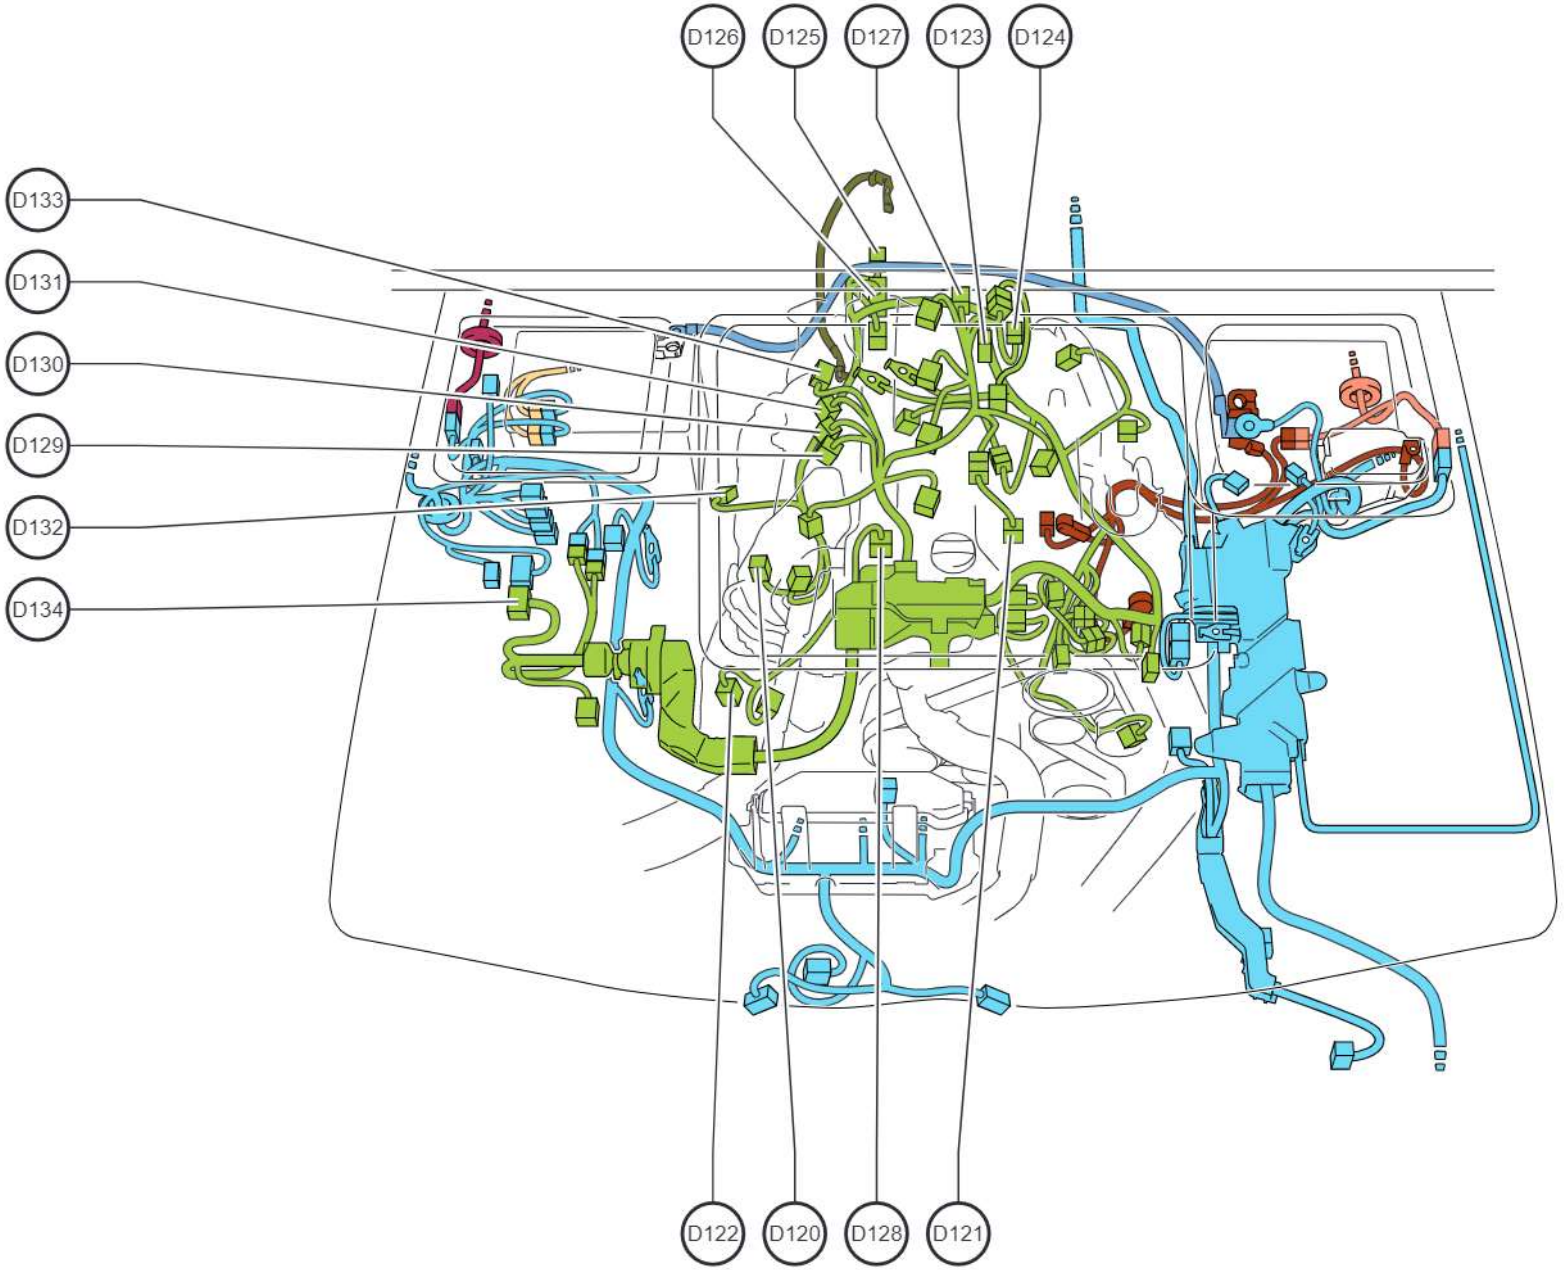
D126
D125
D127
D123
D124
D133
D131
D130
D129
D132
D134
D122
D120
D128
D121


D 120 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
D 121 Fuel Pressure Sensor (Common Rail Assembly)
D 122 Turbocharger Sub-Assembly
D 123 Electric EGR Control Valve Assembly
D 124 Transmission Revolution Sensor (NT)
D 125 Transmission Revolution Sensor (SP2)
D 126 ECT Solenoid (Transmission Wire)
D 127 Glow Plug Assembly
D 128 Cam Position Sensor (Crank Position Sensor)
D 129 Exhaust Gas Temperature Sensor
D 130 No. 2 Exhaust Gas Temperature Sensor
D 131 No. 3 Exhaust Gas Temperature Sensor
D 132 Urea Injector Set
D 133 Differential Pressure Sensor
D 134 Engine ECU

D120
Dark Gray



90980-10869

D121
Black

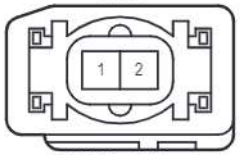


90980-12747

D122
Black



90980-11261

D123
Black

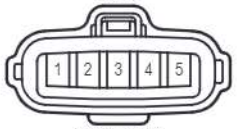

90980-11024

D124
Black




90980-11156

D125
Black



90980-11156

D126
Gray

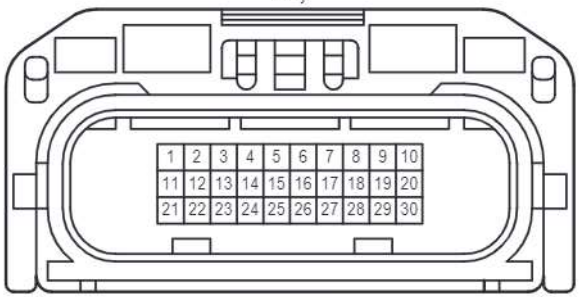

90980-12712

D127
White



90980-10942

D128
Black



90980-12353

D129
White



90980-10899

D130
Black




90980-10949

D131
Gray



90980-10901

D132
Gray




90980-11875


D133
Black



90980-10845

D134
Black

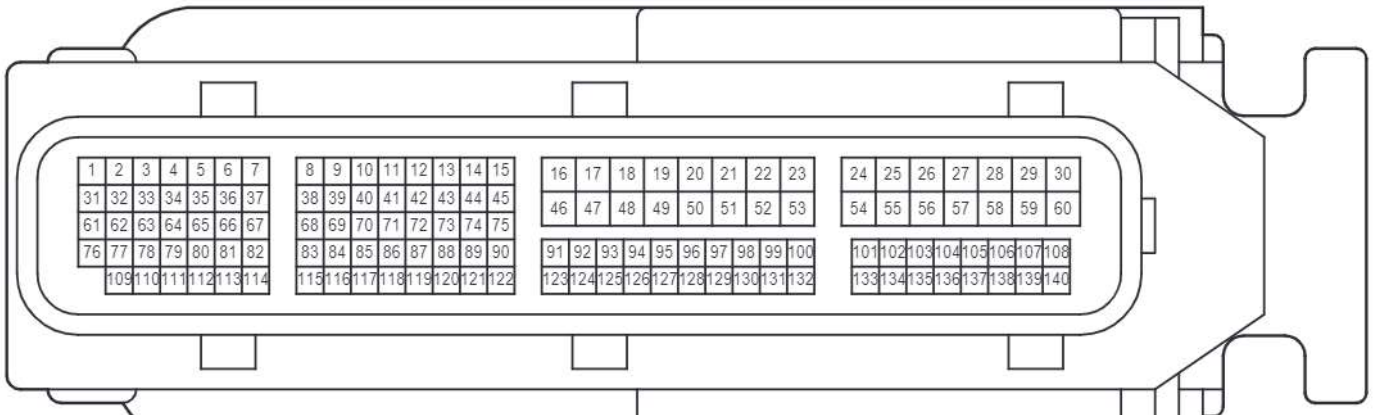

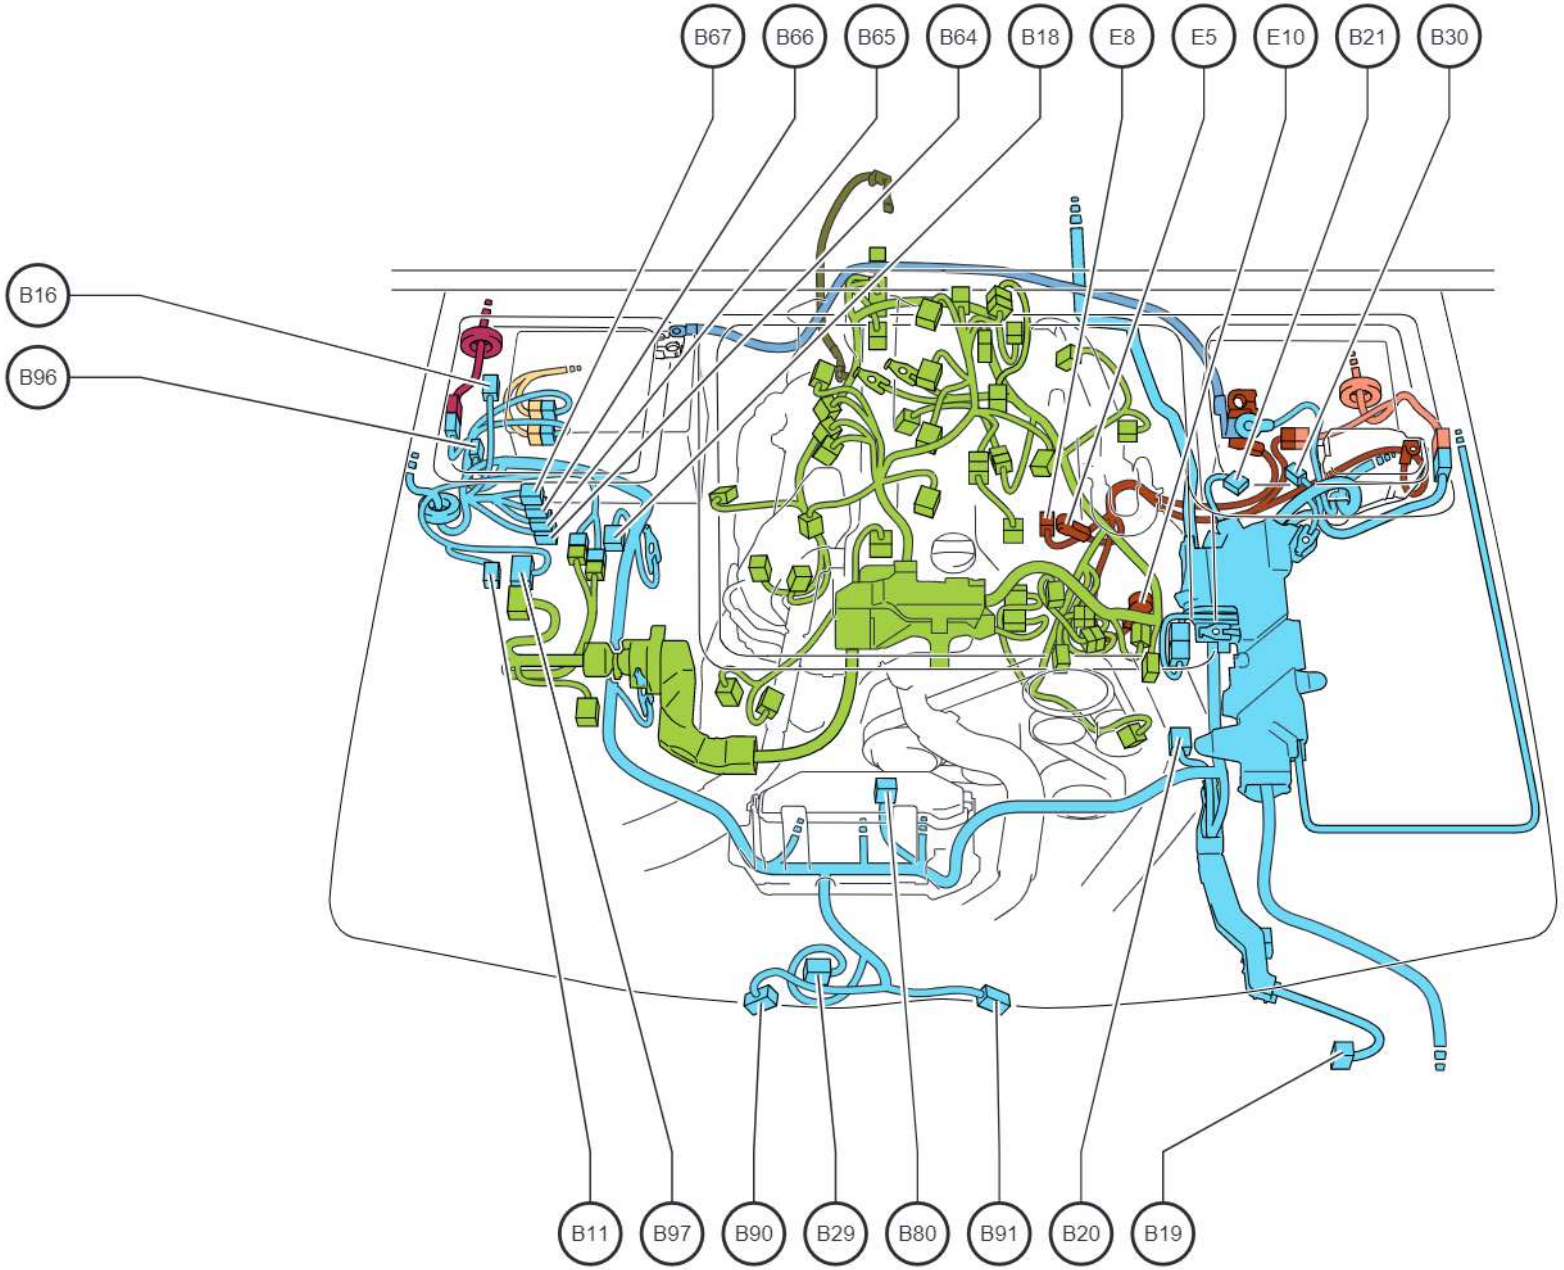
B67
B66
B65
B64
B18
E8
E5
E10
B21
B30
B16
B96
B11
B97
B90
B29
B80
B91
B20
B19

B 11 Front Seat Inner Belt (Driver's Side)
B 16 A/C Magnetic Valve (Rear A/C)
B 18 Speed Sensor (Front RH)
B 19 Skid Control ECU with Actuator
B 20 Speed Sensor (Front LH)
B 21 Fuel Filter Warning SW
B 29 Water Temp. Sensor (Radiator)
B 30 Fuel Sedimentary Level Warning SW
B 64 Glow Plug Controller
B 65 Glow Plug Controller
B 66 Glow Plug Controller
B 67 Glow Plug Controller
B 80 Junction Connector
B 90 Cooling Fan Motor (No.1)
B 91 Cooling Fan Motor (No.2)
B 96 Junction Connector
B 97 Engine ECU

E 5 Starter
E 8 Starter
E 10 Alternator

B11
White



90980-10825

B16
Gray




90980-11003

B18
Black



90980-11003

B19
Black

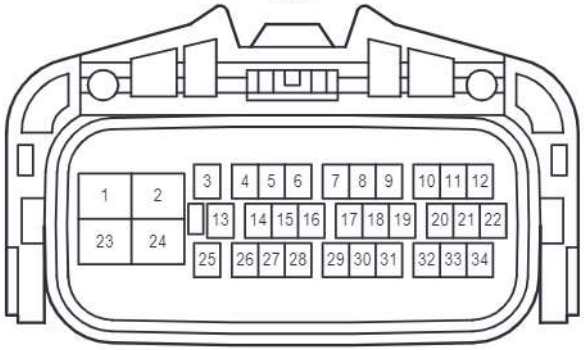

90980-12020

B20
Gray



90980-11075

B21
Black



90980-12416

B29
Black



90980-10735

B30
Gray




90980-11003

B64
White



90980-11184

B65
Gray

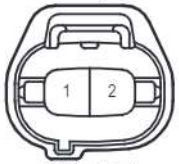

90980-11156

B66
Dark Gray




90980-11162

B67
Black




90980-12292

B80
White

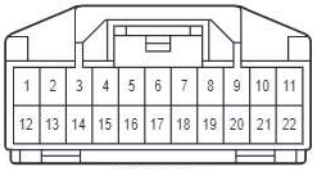


90980-11915

B90
Black

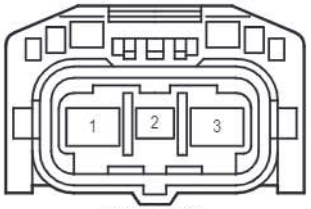

90980-12928

B91
Black

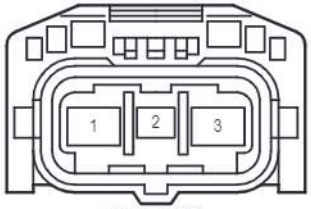

90980-12928


B96
Gray



90980-10891

Position of Parts in Engine Compartment <RHD 1GD-FTV>

B97
Black

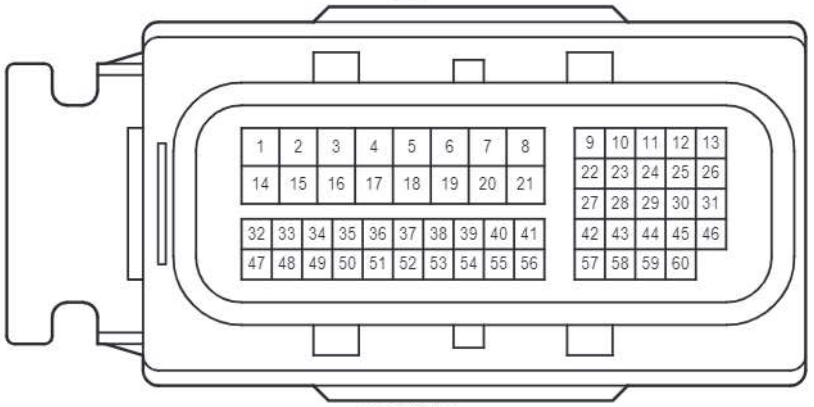

90980-12931

E5



90980-09508

E8
Black




90980-11400


E10





82675-26220


Br1
DD4
DD2
DD5
yE1
yB1
MB1
rB1
BD7
BD8
BB1
DD1
DD3

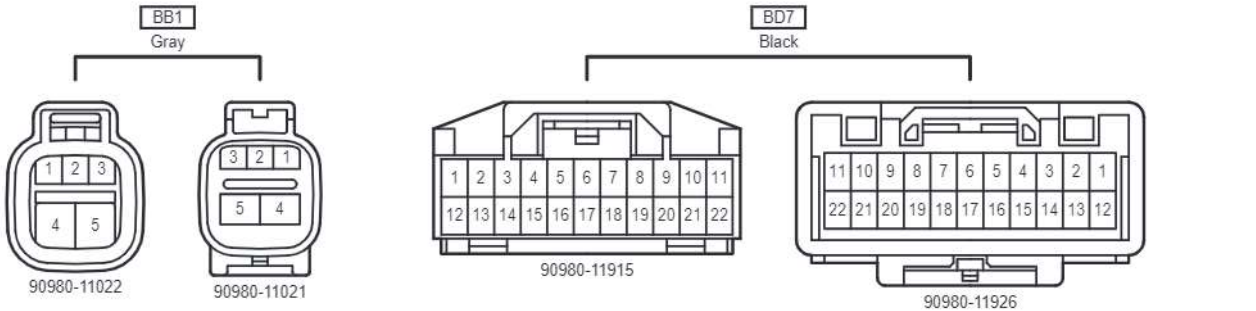

BB1
Gray
90980-11022
90980-11021
BD7
Black
90980-11915
90980-11926

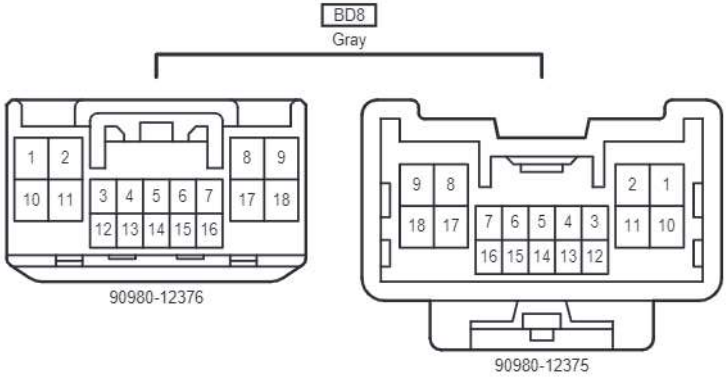

BD8
Gray
90980-12376
90980-12375

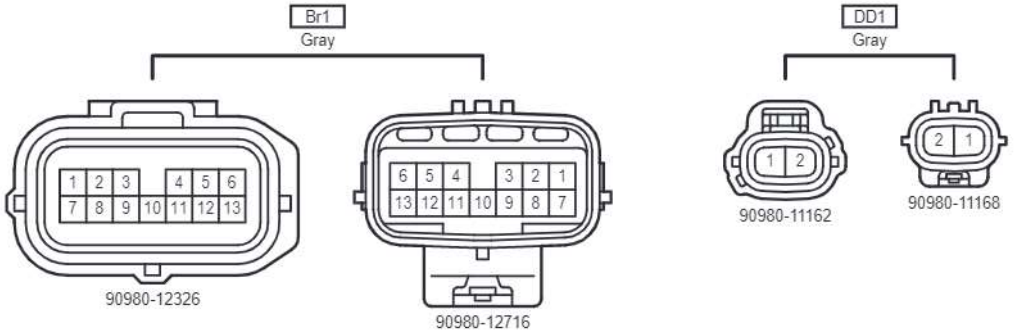
Br1
Gray
90980-12326
90980-12716
DD1
Gray
90980-11162
90980-11168

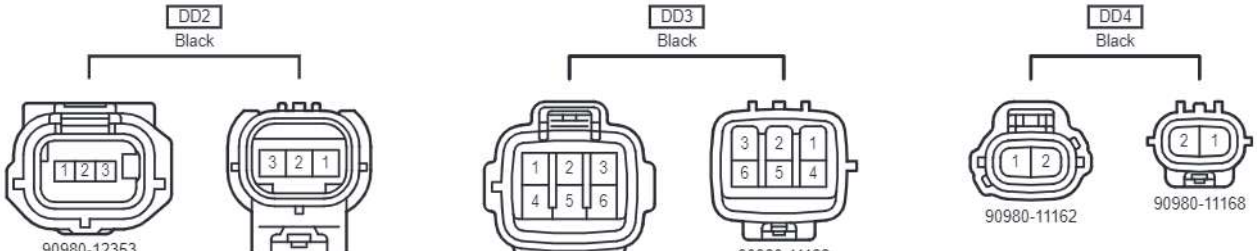
DD2
Black
DD3
Black
DD4
Black
90980-11162
90980-11168


Wire and Wire in Engine Compartment <RHD 1GD-FTV>

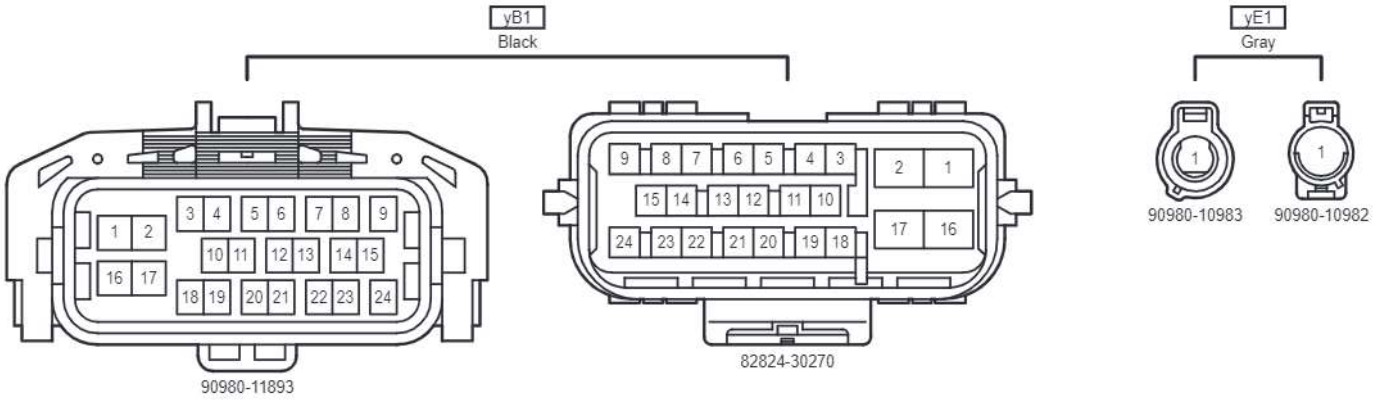

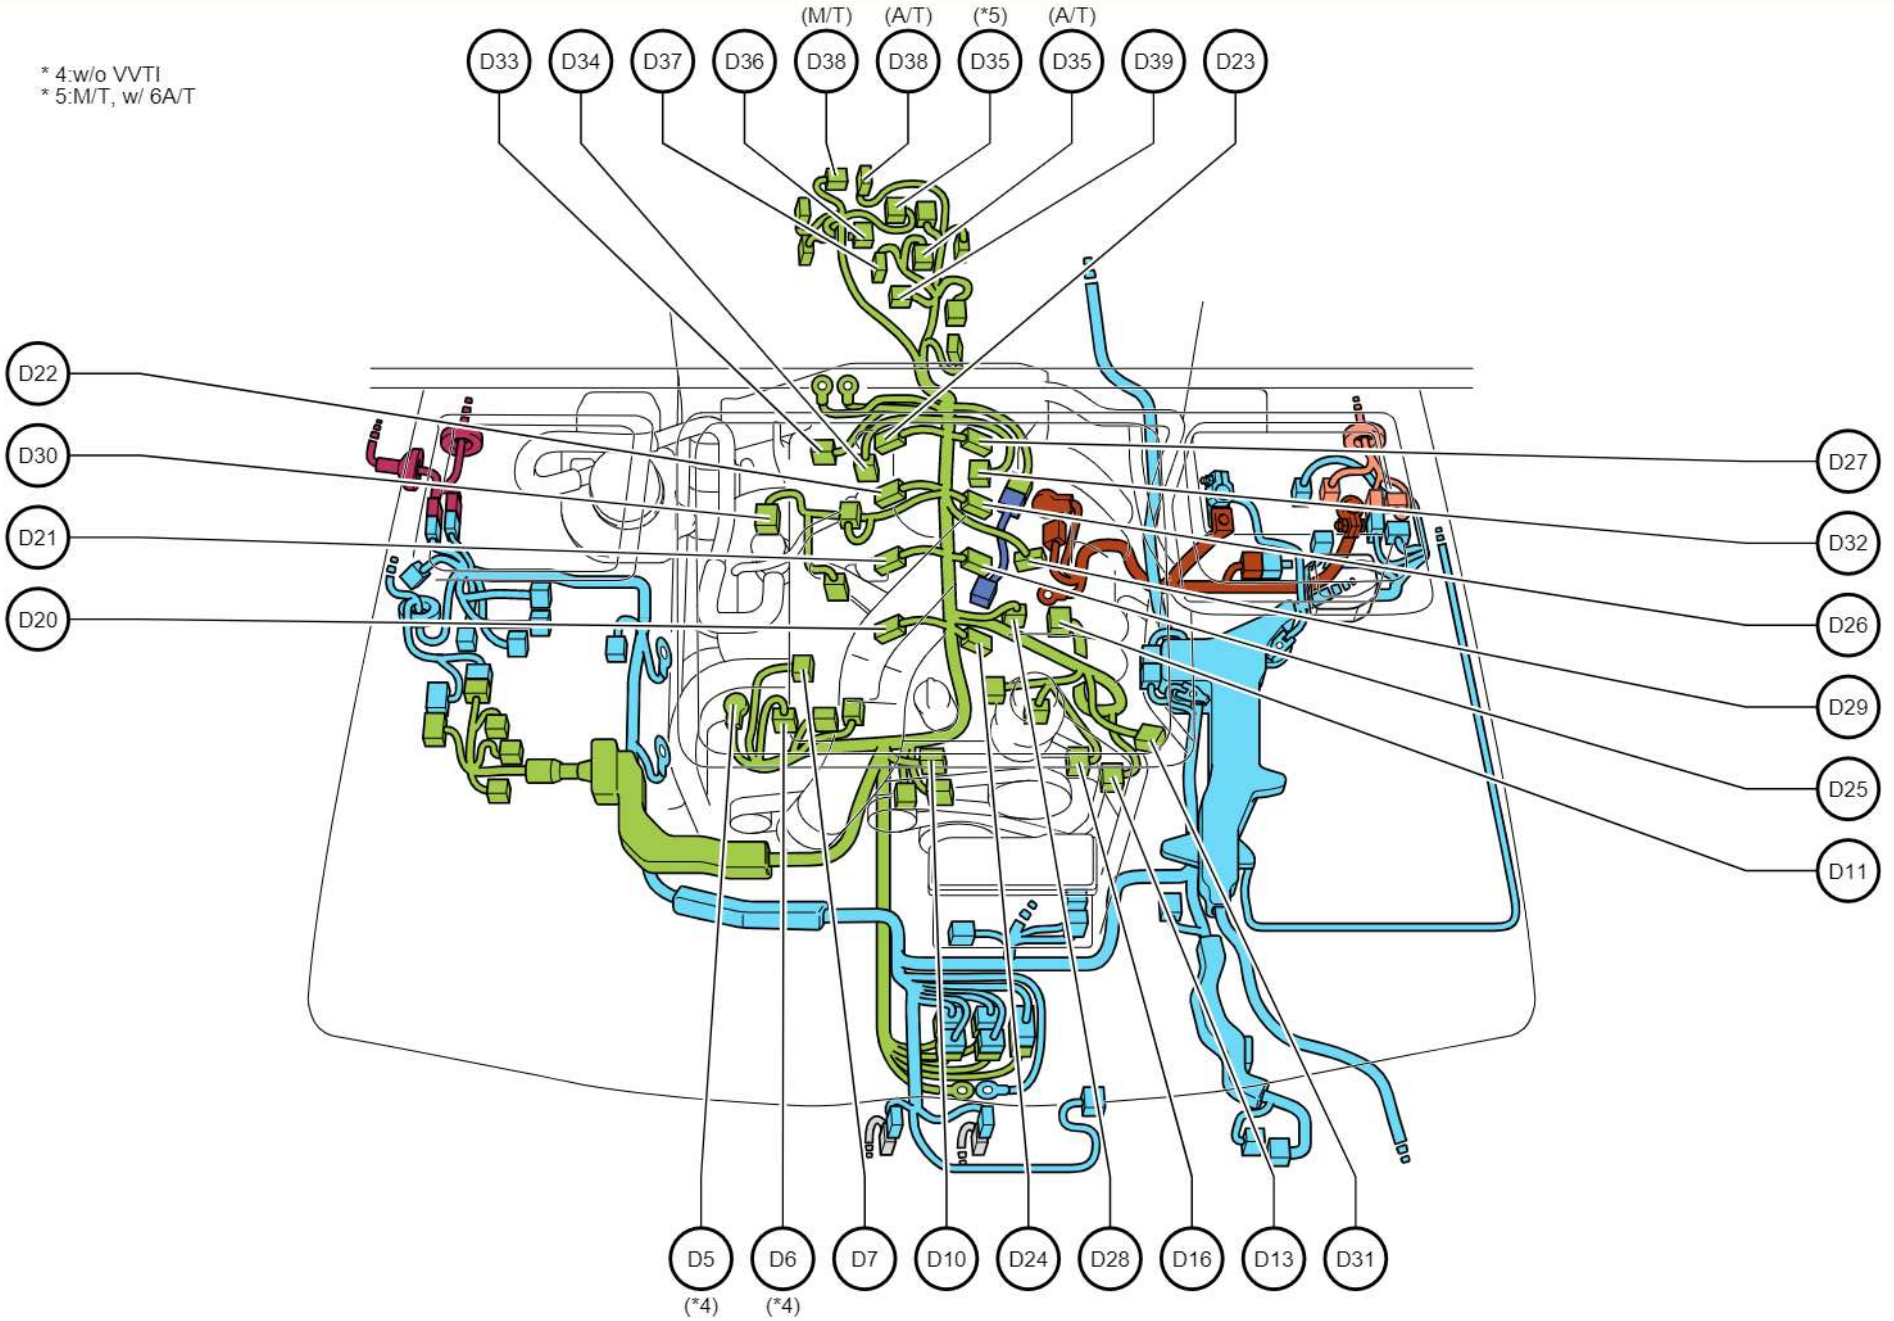
* 4:w/o VVTI
* 5:M/T, w/ 6A/T
(M/T)
(A/T)
(*5)
(A/T)
D33
D34
D37
D36
D38
D38
D35
D35
D39
D23
D22
D30
D21
D20
D27
D32
D26
D29
D25
D11
D5
(*4)
D6
(*4)
D7
D10
D24
D28
D16
D13
D31

D	5	Alternator
D	6	Alternator
D	7	Engine Oil Pressure SW
D	10	Camshaft Position Sensor
D	11	Engine Oil Level Sensor
D	13	A/C Compressor
D	16	Power Steering Oil Pressure SW
D	20	Ignition Coil (No.1)
D	21	Ignition Coil (No.2)
D	22	Ignition Coil (No.3)
D	23	Ignition Coil (No.4)
D	24	Fuel Injector (No.1)
D	25	Fuel Injector (No.2)
D	26	Fuel Injector (No.3)
D	27	Fuel Injector (No.4)
D	28	Purge VSV
D	29	Throttle Body Assembly
D	30	Air Switching Valve
D	31	Variable Resistor
D	32	Water Temp. Sensor (Engine Coolant)
D	33	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
D	34	Heated Oxygen Sensor (Bank 1 Sensor 1)
D	35	Heated Oxygen Sensor (Bank 1 Sensor 2)
D	36	Back-Up Lamp SW
D	37	Park/Neutral Position SW
D	38	Speed Sensor
D	39	A/T Fluid Temp. Sensor

D5



90980-09373/82675-26220

(Before Sep. 2007 Production/From Sep. 2007 Production)

D6
Green



90980-11964

D7
Black



90980-11363

D10
Black



90980-10947

D11
Gray



90980-11235

D13
Gray



90980-11156

(Before Dec. 2013 Production)

D13
Black



90980-11156


(From Dec. 2013 Production)

D16
Black




90980-11428

D20
Black




90980-11885

D21
Black




90980-11885

D22
Black




90980-11885

D23
Black




90980-11885

D24
Brown




90980-11875

D25
Gray




90980-11875

D26
Brown



90980-11875

D27
Gray




90980-11875

D28
Black



90980-11156

D29
Black

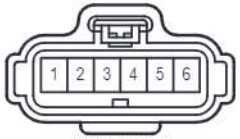

90980-11858

D30
Black



90980-11149

D31
Black



90980-10902

D32
Black



90980-10735

D33
Dark Gray



90980-10869

D34
Dark Gray



90980-10869

D35
Dark Gray




90980-11028

D39
Gray



90980-11162

* 3:w/ VVTI
* 4:w/o VVTI
* 6:w/o VVTI Before Dec. 2016 Production
* 7:w/ VVTI, w/o VVTI From Dec. 2016 Production

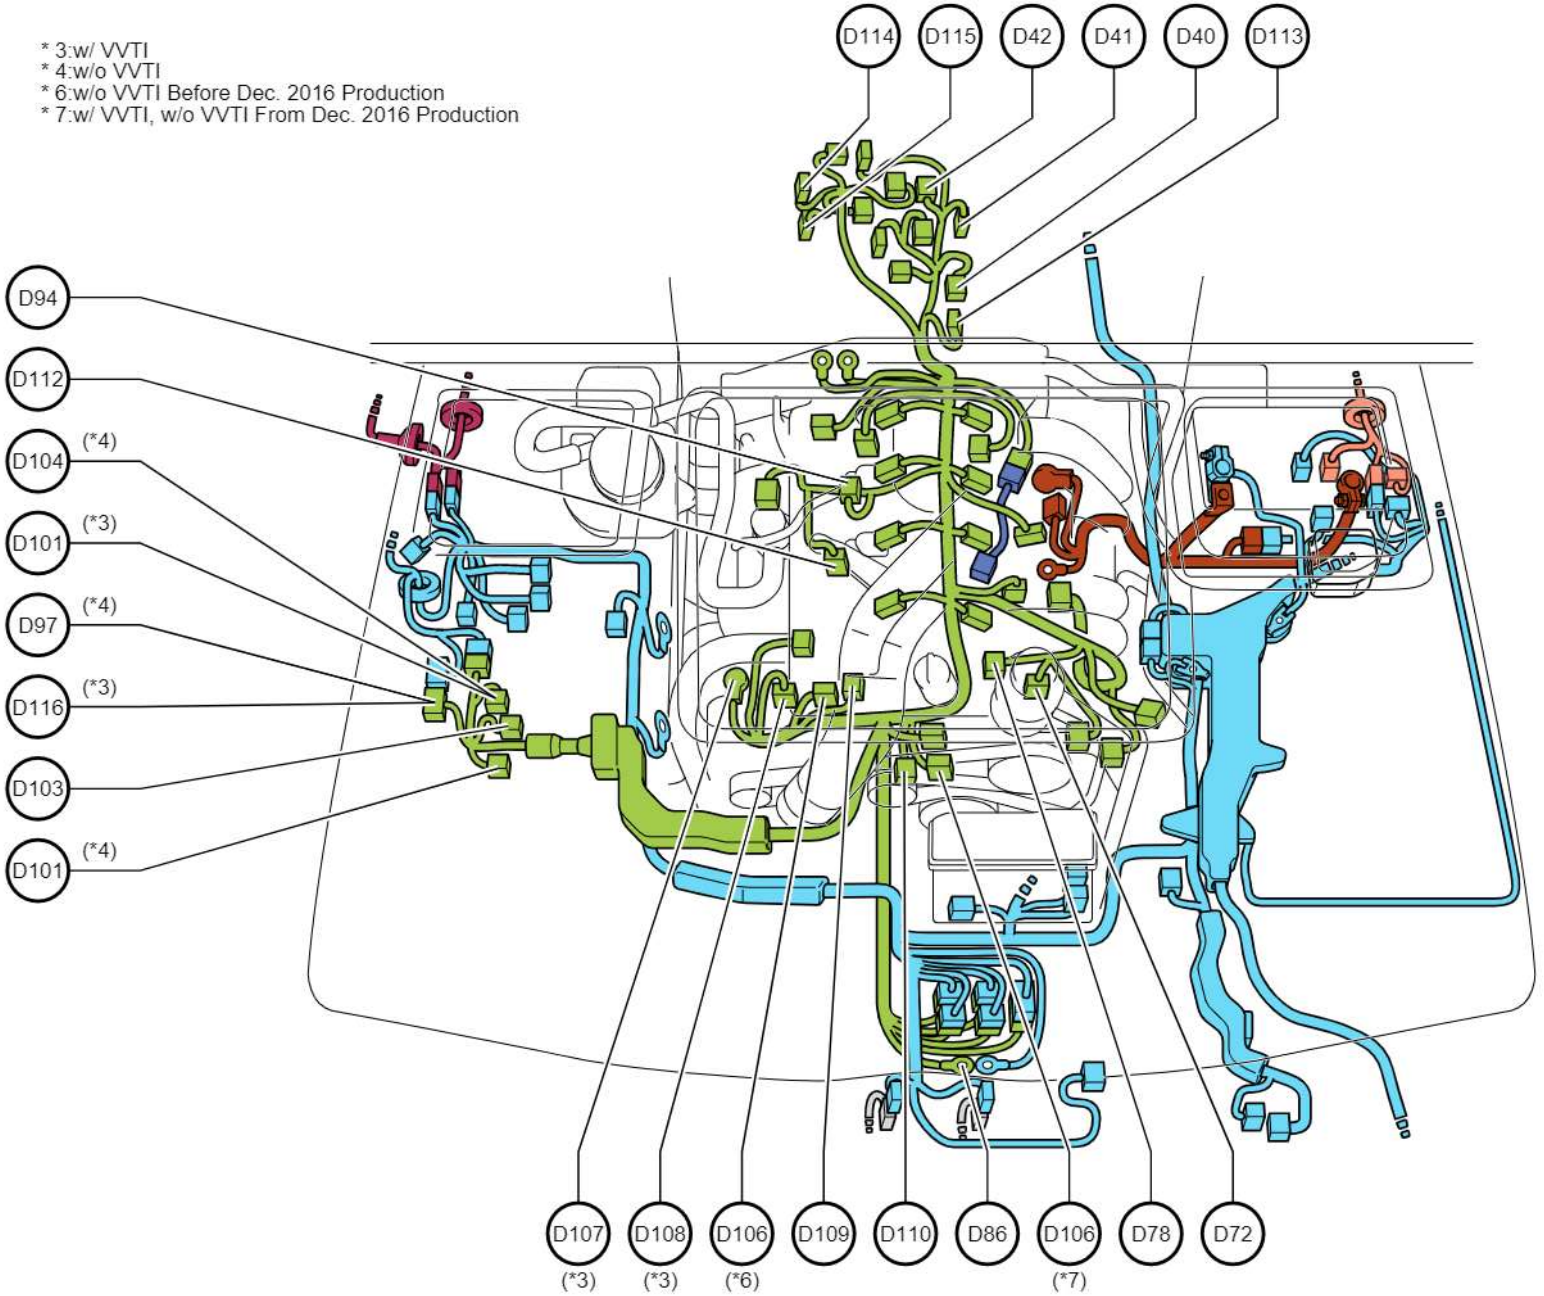

D 40 Transmission Revolution Sensor (Input)
D 41 ECT Solenoid
D 42 Transmission Revolution Sensor (Output)
D 72 Crankshaft Position Sensor
D 78 Camshaft Timing Oil Control Valve
D 86 Connector Holder NO.2
D 94 Air Pressure Sensor
D 97 Engine ECU
D 101 Junction Connector
D 103 Junction Connector
D 104 Junction Connector
D 106 Noise Filter (Ignition)
D 107 Alternator
D 108 Alternator
D 109 Camshaft Timing Oil Control Valve Assembly (EX)
D 110 Cam Position Sensor (IN)
D 112 Cam Position Sensor (EX)
D 113 Trasmission Revolution Sensor
D 114 Speed Sensor
D 115 ECT Solenoid
D 116 Engine ECU

D40
Black




90980-11156

D41
Gray



90980-10891

D42
Black

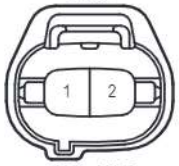

90980-11156

D72
Dark Gray




90980-11016

D78
Black



90980-11162

D86




D94
Black



90980-10845

D97
Black

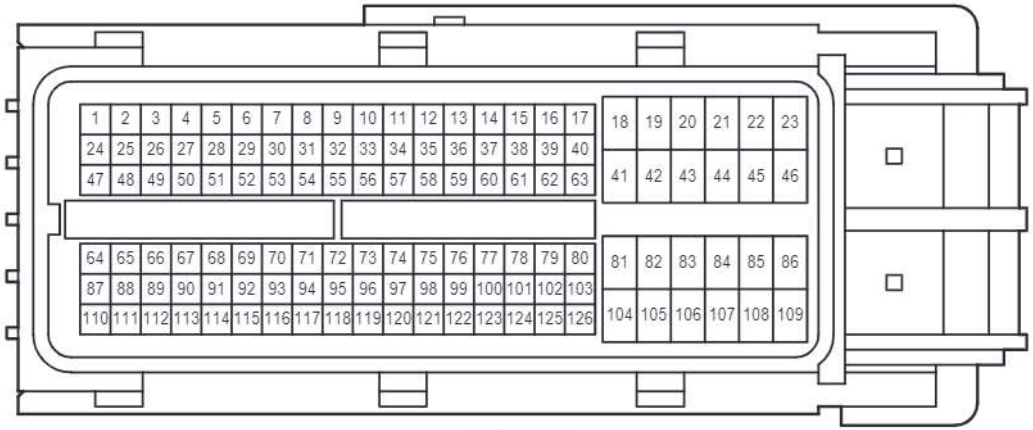

90980-12397

D101
Gray



90980-10891

D103
Gray



90980-10897

D104
Gray




90980-10891

D106
Gray




90980-12792

D107




90980-09372

D114
Black

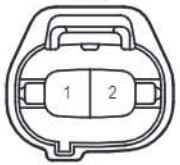


90980-11156

D115
Gray

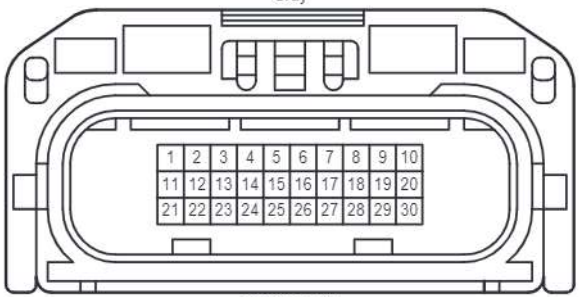


90980-12712

D116
Black

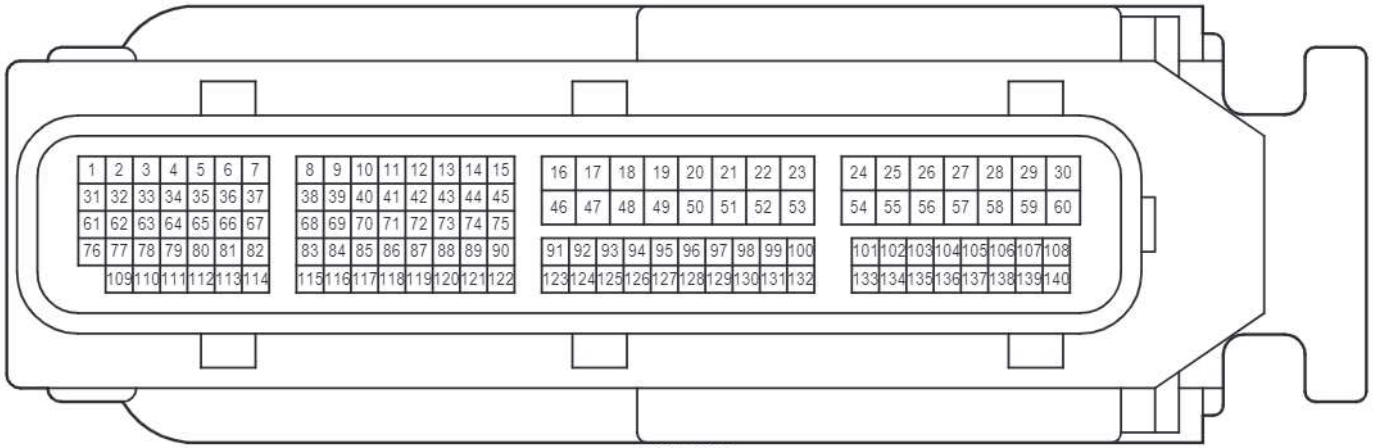

90980-12836

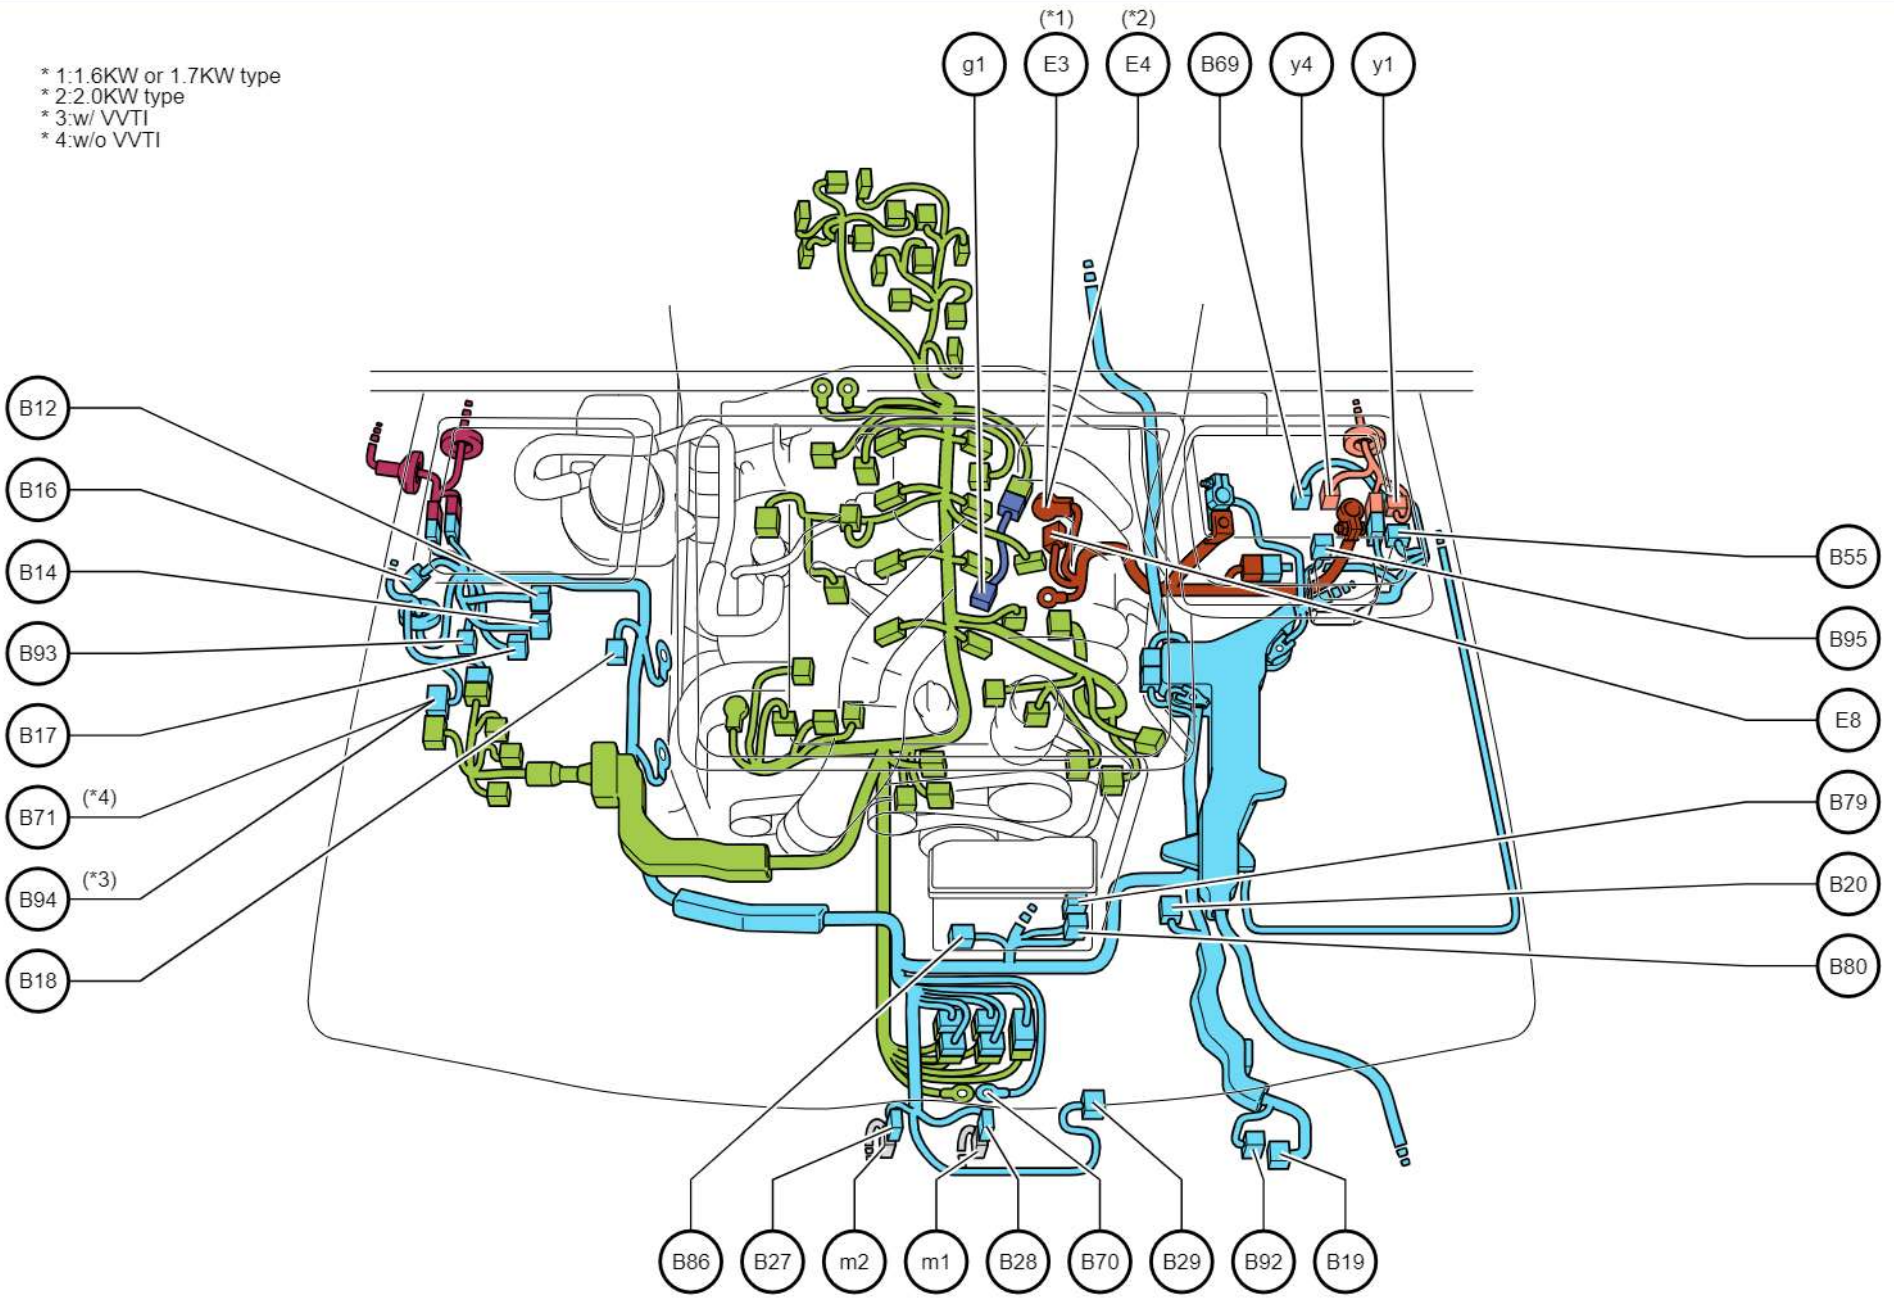
* 1:1.6KW or 1.7KW type
* 2:2.0KW type
* 3:w/ VVTI
* 4:w/o VVTI
(*1)
(*2)
g1
E3
E4
B69
y4
y1
B12
B16
B14
B93
B17
B71
(*4)
B94
(*3)
B18
B55
B95
E8
B79
B20
B80
B86
B27
m2
m1
B28
B70
B29
B92
B19

B 12 Air Injection Control Driver
B 14 Air Injection Control Driver
B 16 A/C Magnetic Valve (Rear A/C)
B 17 Air Pump
B 18 Speed Sensor (Front RH)
B 19 Skid Control ECU with Actuator
B 20 Speed Sensor (Front LH)
B 27 Cooling Fan ECU No.1
B 28 Cooling Fan ECU No.2
B 29 Water Temp. Sensor (Radiator)
B 55 Slide Door Control Junction (Male LH)
B 69 Battery Thermometer Sensor
B 70 Connector Holder NO.2
B 71 Engine ECU
B 79 Junction Connector
B 80 Junction Connector
B 86 Junction Connector
B 92 Brake Actuator Assembly
B 93 Air Pump Assenbly
B 94 Engine ECU
B 95 Battery Current Sensor


E 3 Starter
E 4 Starter
E 8 Starter

g 1 Knock Control Sensor (Bank 1)

m 1 Cooling Fan ECU No.1 , Cooling Fan Motor No.1
m 2 Cooling Fan ECU No.2 , Cooling Fan Motor No.1

y 1 Slide Door Control Junction (Male LH)
y 4 Battery Thermometer Sensor

B12
Black

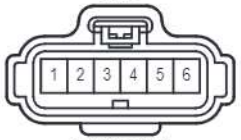

90980-11858

B14
Gray



90980-12068

B16
Gray



90980-11003

B17
Gray




90980-11032

B18
Black



90980-11003

B19
Black

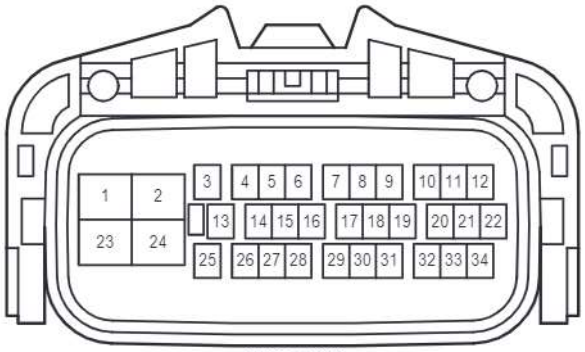


90980-12020

B20
Gray



90980-11075

B27
Gray

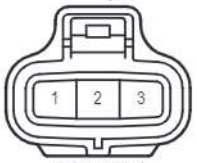

90980-10841

B28
Black



90980-10841

B29
Black



90980-10735

B55
White



90980-11033

B69
White



90980-11156


B70



B71
Black




B79
Black

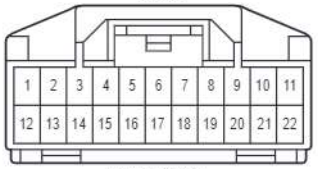


90980-11915

B80
White

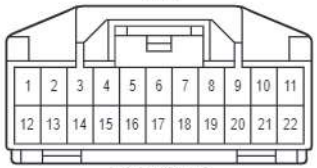


90980-11915

B86
White

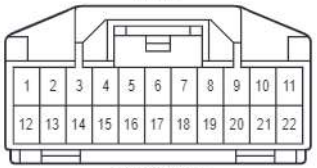


90980-11915

B92
Black

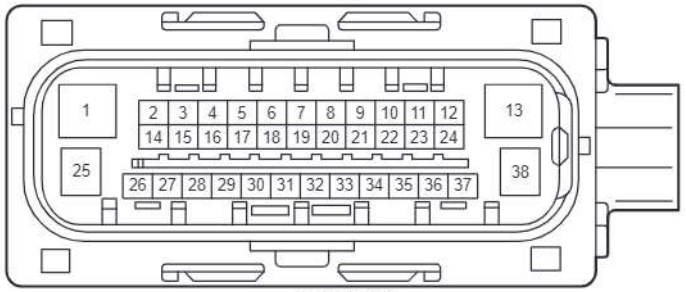


90980-12A99

B93
Black

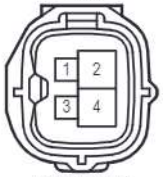


90980-12294

B94

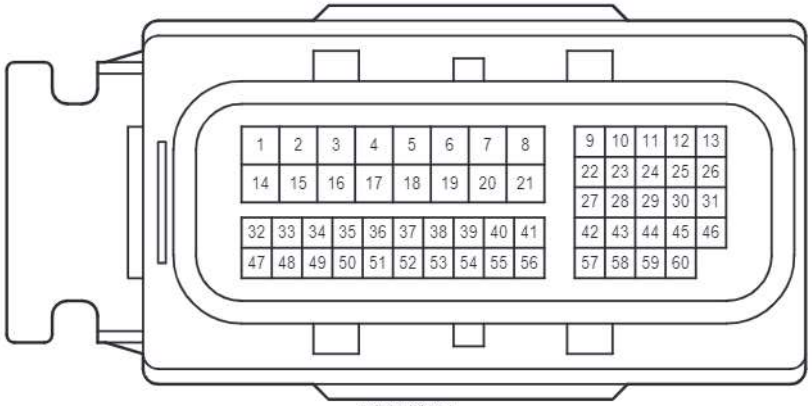


90980-12931

B95
Black

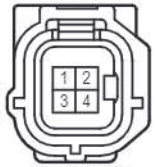


90980-12495

E3



90980-09506

E4




90980-09507

E8
Black




90980-11400

g1
Black




90980-11875


m1
Gray

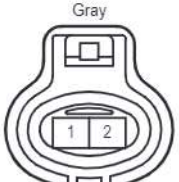



m2
Black

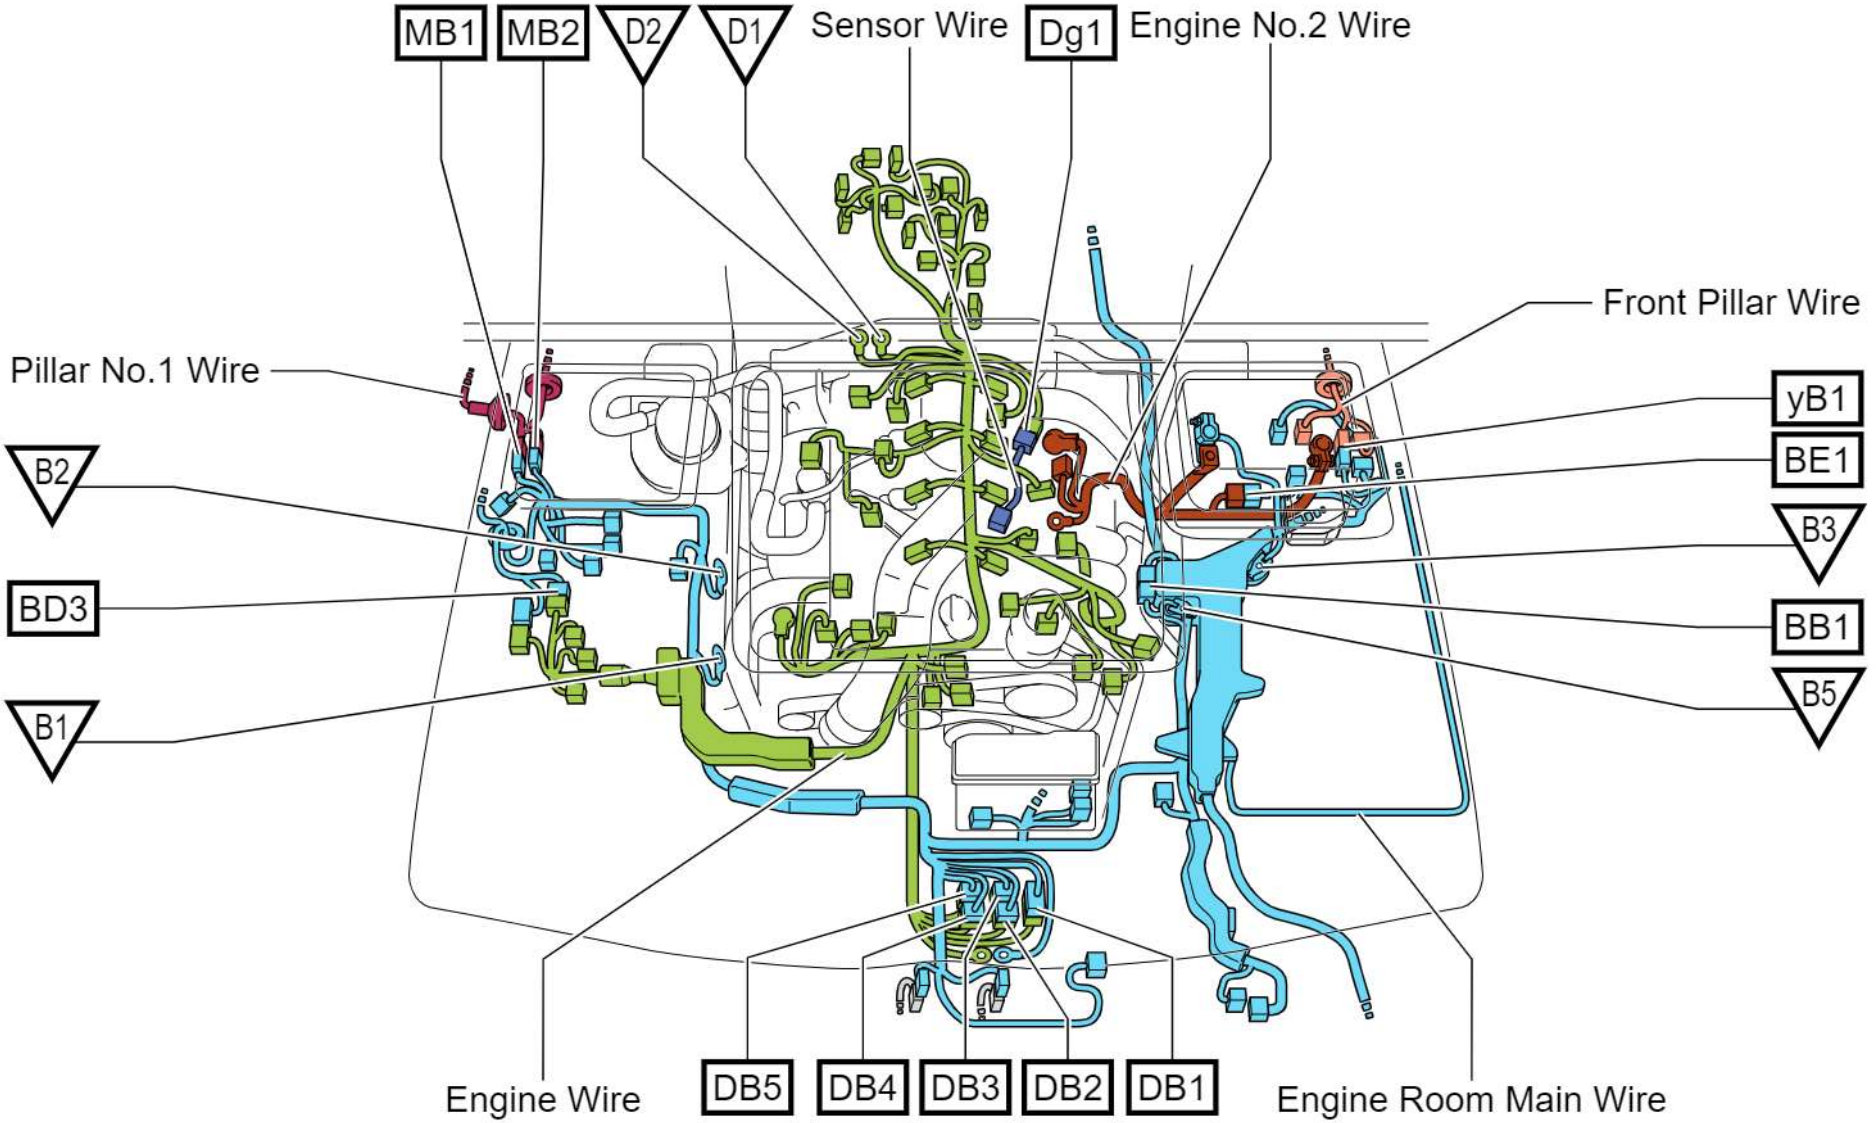


MB1
MB2
D2
D1
Sensor Wire
Dg1
Engine No.2 Wire
Front Pillar Wire
Pillar No.1 Wire
yB1
BE1
B2
B3
BD3
BB1
B5
B1
Engine Wire
DB5
DB4
DB3
DB2
DB1
Engine Room Main Wire

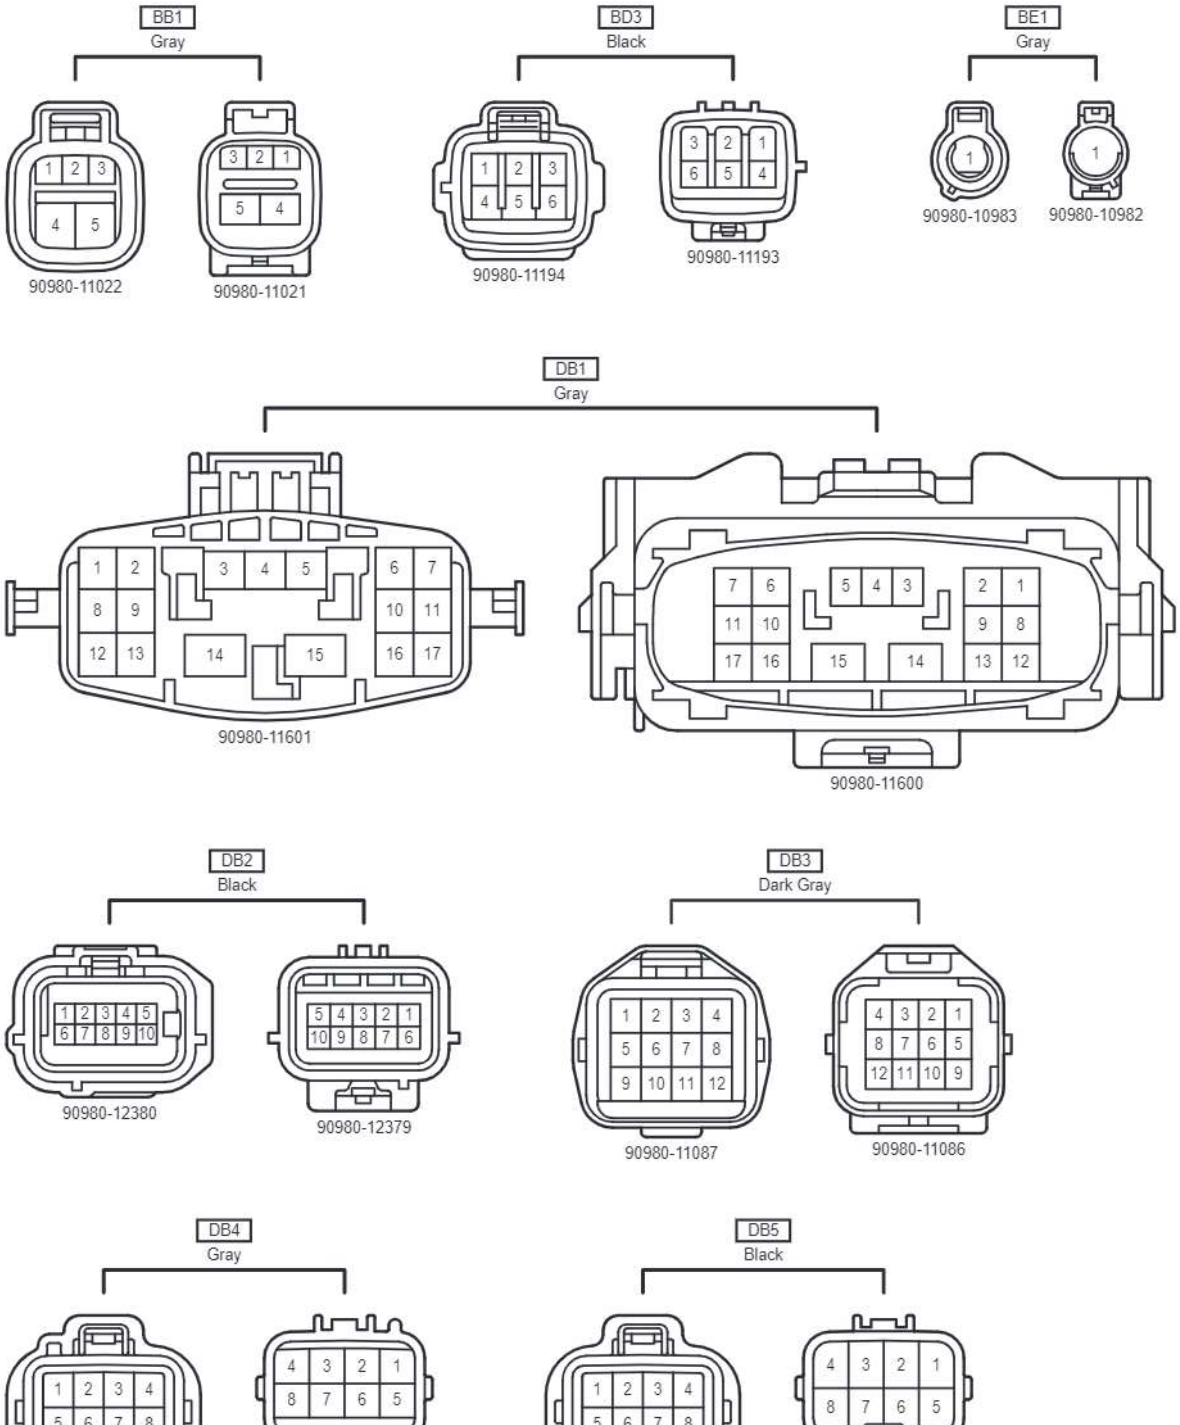
BB1
Gray
90980-11022
90980-11021
BD3
Black
90980-11194
90980-11193
BE1
Gray
90980-10983
90980-10982
DB1
Gray
90980-11601
90980-11600
DB2
Black
90980-12380
90980-12379
DB3
Dark Gray
90980-11087
90980-11086
DB4
Gray
DB5
Black

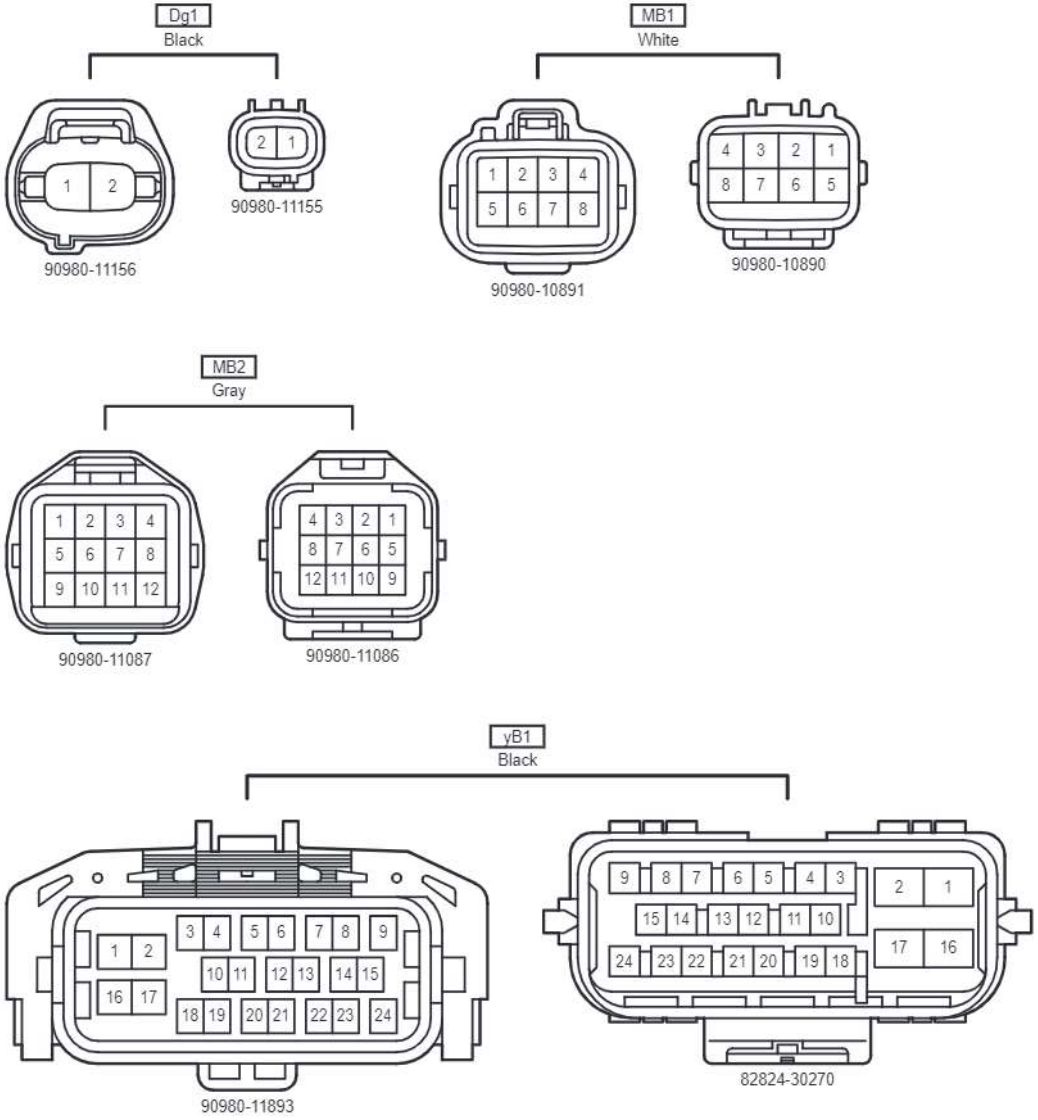
Dg1
Black
1 2
90980-11156
2 1
90980-11155
MB1
White
1 2 3 4
5 6 7 8
90980-10891
4 3 2 1
8 7 6 5
90980-10890
MB2
Gray
1 2 3 4
5 6 7 8
9 10 11 12
90980-11087
4 3 2 1
8 7 6 5
12 11 10 9
90980-11086
yB1
Black
1 2
3 4 5 6 7 8 9
10 11 12 13 14 15
16 17
18 19 20 21 22 23 24
90980-11893
9 8 7 6 5 4 3
15 14 13 12 11 10
24 23 22 21 20 19 18
2 1
17 16
82824-30270

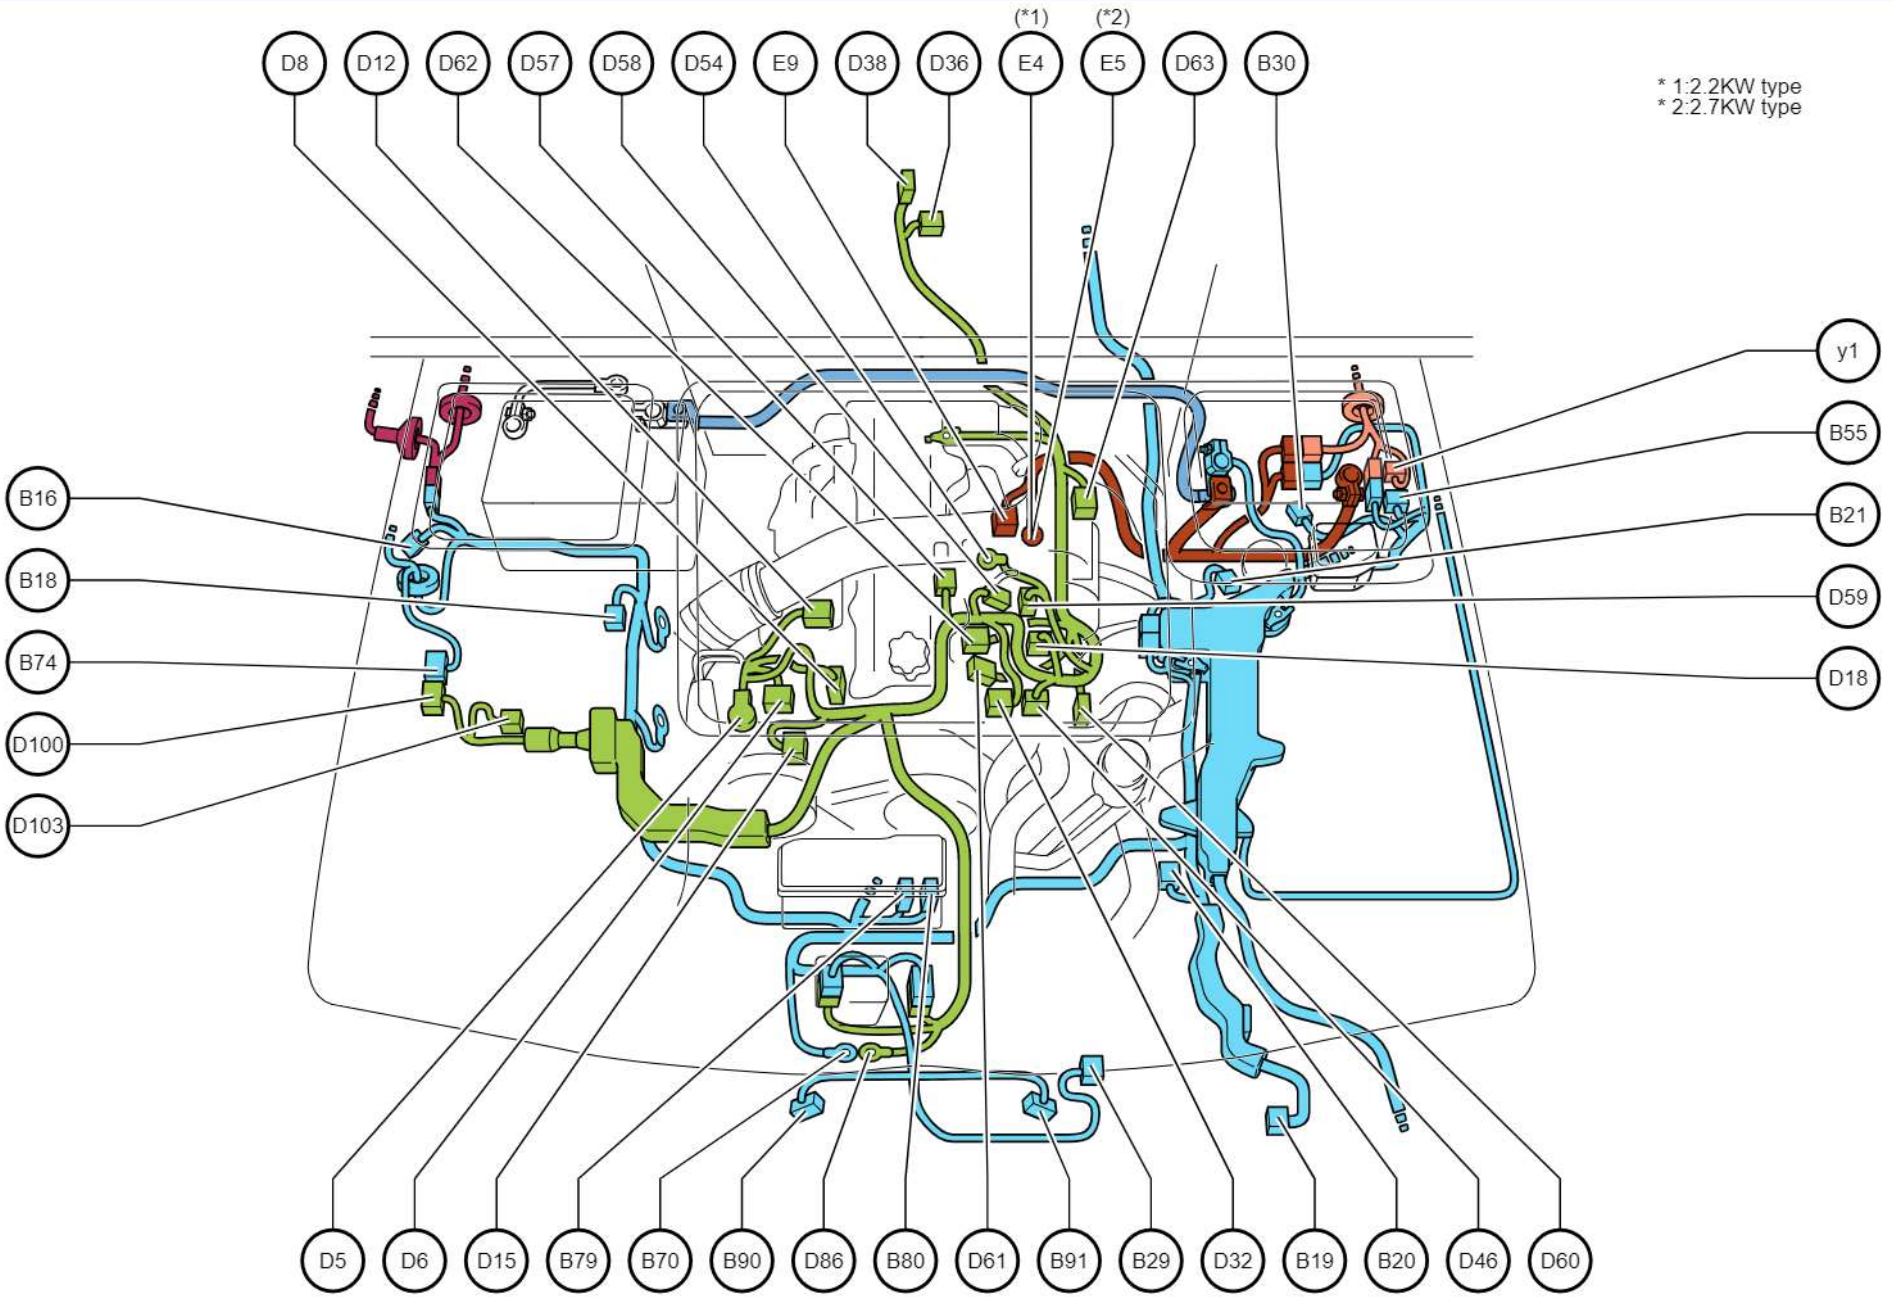
(*1)
(*2)
D8
D12
D62
D57
D58
D54
E9
D38
D36
E4
E5
D63
B30
* 1:2.2KW type
* 2:2.7KW type
y1
B55
B21
D59
D18
B16
B18
B74
D100
D103
D5
D6
D15
B79
B70
B90
D86
B80
D61
B91
B29
D32
B19
B20
D46
D60

B 16 A/C Magnetic Valve (Rear A/C)
B 18 Speed Sensor (Front RH)
B 19 Skid Control ECU with Actuator
B 20 Speed Sensor (Front LH)
B 21 Fuel Filter Warning SW
B 29 Water Temp. Sensor (Radiator)
B 30 Fuel Sedimentary Level Warning SW
B 55 Slide Door Control Junction (Male LH)
B 70 Connector Holder NO.2
B 74 Engine ECU
B 79 Junction Connector
B 80 Junction Connector
B 90 Cooling Fan Motor (No.1)
B 91 Cooling Fan Motor (No.2)

D 5 Alternator
D 6 Alternator
D 8 Engine Oil Pressure SW
D 12 Engine Oil Level Sensor
D 15 A/C Compressor
D 18 Engine Speed Sensor
D 32 Water Temp. Sensor (Engine Coolant)
D 36 Back-Up Lamp SW
D 38 Speed Sensor
D 46 Fuel Temp. Sensor
D 54 Glow Plug
D 57 Manifold Absolute Pressure Sensor
D 58 Throttle Body Assembly
D 59 Spill Control Valve
D 60 Injection Pump Assembly
D 61 Timer Control Valve
D 62 Crankshaft Position Sensor
D 63 Throttle Position SW
D 86 Connector Holder NO.2
D 100 Engine ECU
D 103 Junction Connector

E 4 Starter
E 5 Starter
E 9 Starter

B16
Gray




90980-11003

B18
Black



90980-11003

B19
Black

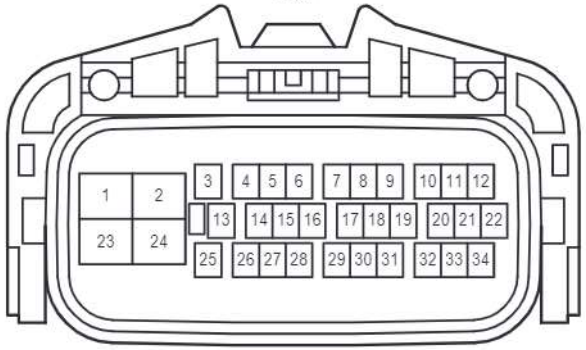

90980-12020

B20
Gray



90980-11075

B21
Black



90980-12416

B29
Black



90980-10735

B30
Gray




90980-11003

B55
White




90980-11033

B70




B74
Black

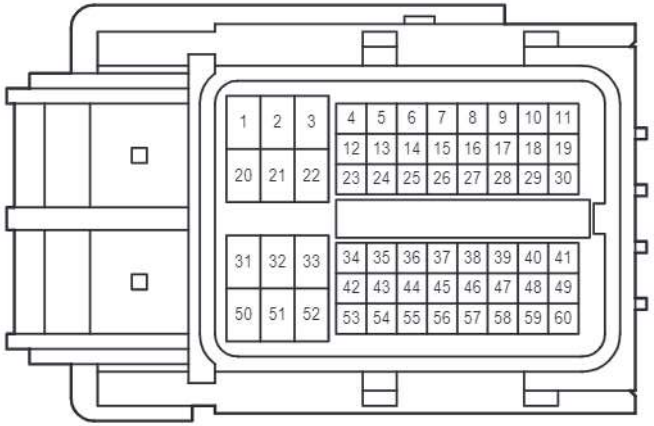


90980-12462

B79
Black

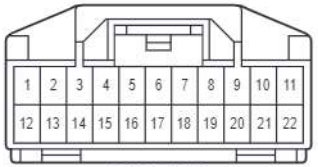

90980-11915

B80
White



B90
Black



B91
Black



D6
Green



90980-11964

D8
White



90980-10703

D12
White



90980-10532

D15
Gray



90980-11271

D18
White




90980-11250

D32
Black



90980-10735

D36
Gray

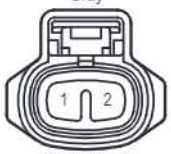

90980-11250

D38
Black



90980-11143

D46
Dark Gray



90980-10737

(1KD-FTV Before Dec. 2013 Production, 2KD-FTV Before Dec. 2013 Production, 5L-E)


D46
Gray



90980-10737

(1KD-FTV From Dec. 2013 Production, 2KD-FTV From Dec. 2013 Production)

D54



90980-09320

D57
Black



90980-10845

D58
Gray



90980-11144

D59
Gray



90980-12117

D60
Black



90980-11028

D61
Brown



90980-11285

D62
Black



90980-11162

D63
Black




90980-11156

D86



D100
Black

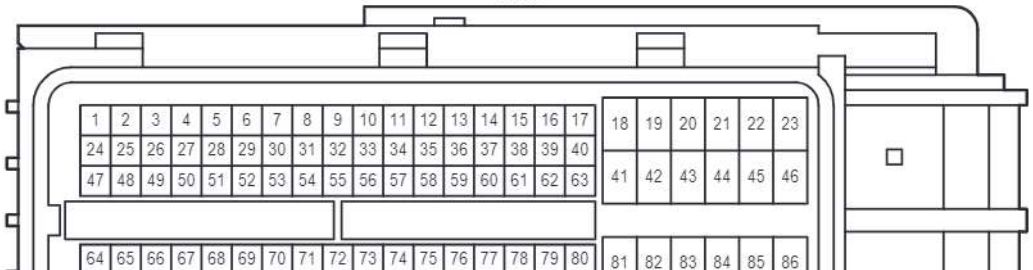

Position of Parts in Engine Compartment <LHD 5L-E>

D103
Gray




90980-10897

E4



90980-09507

E5



90980-09508

E9
Black





90980-11184

y1
White





90980-11033

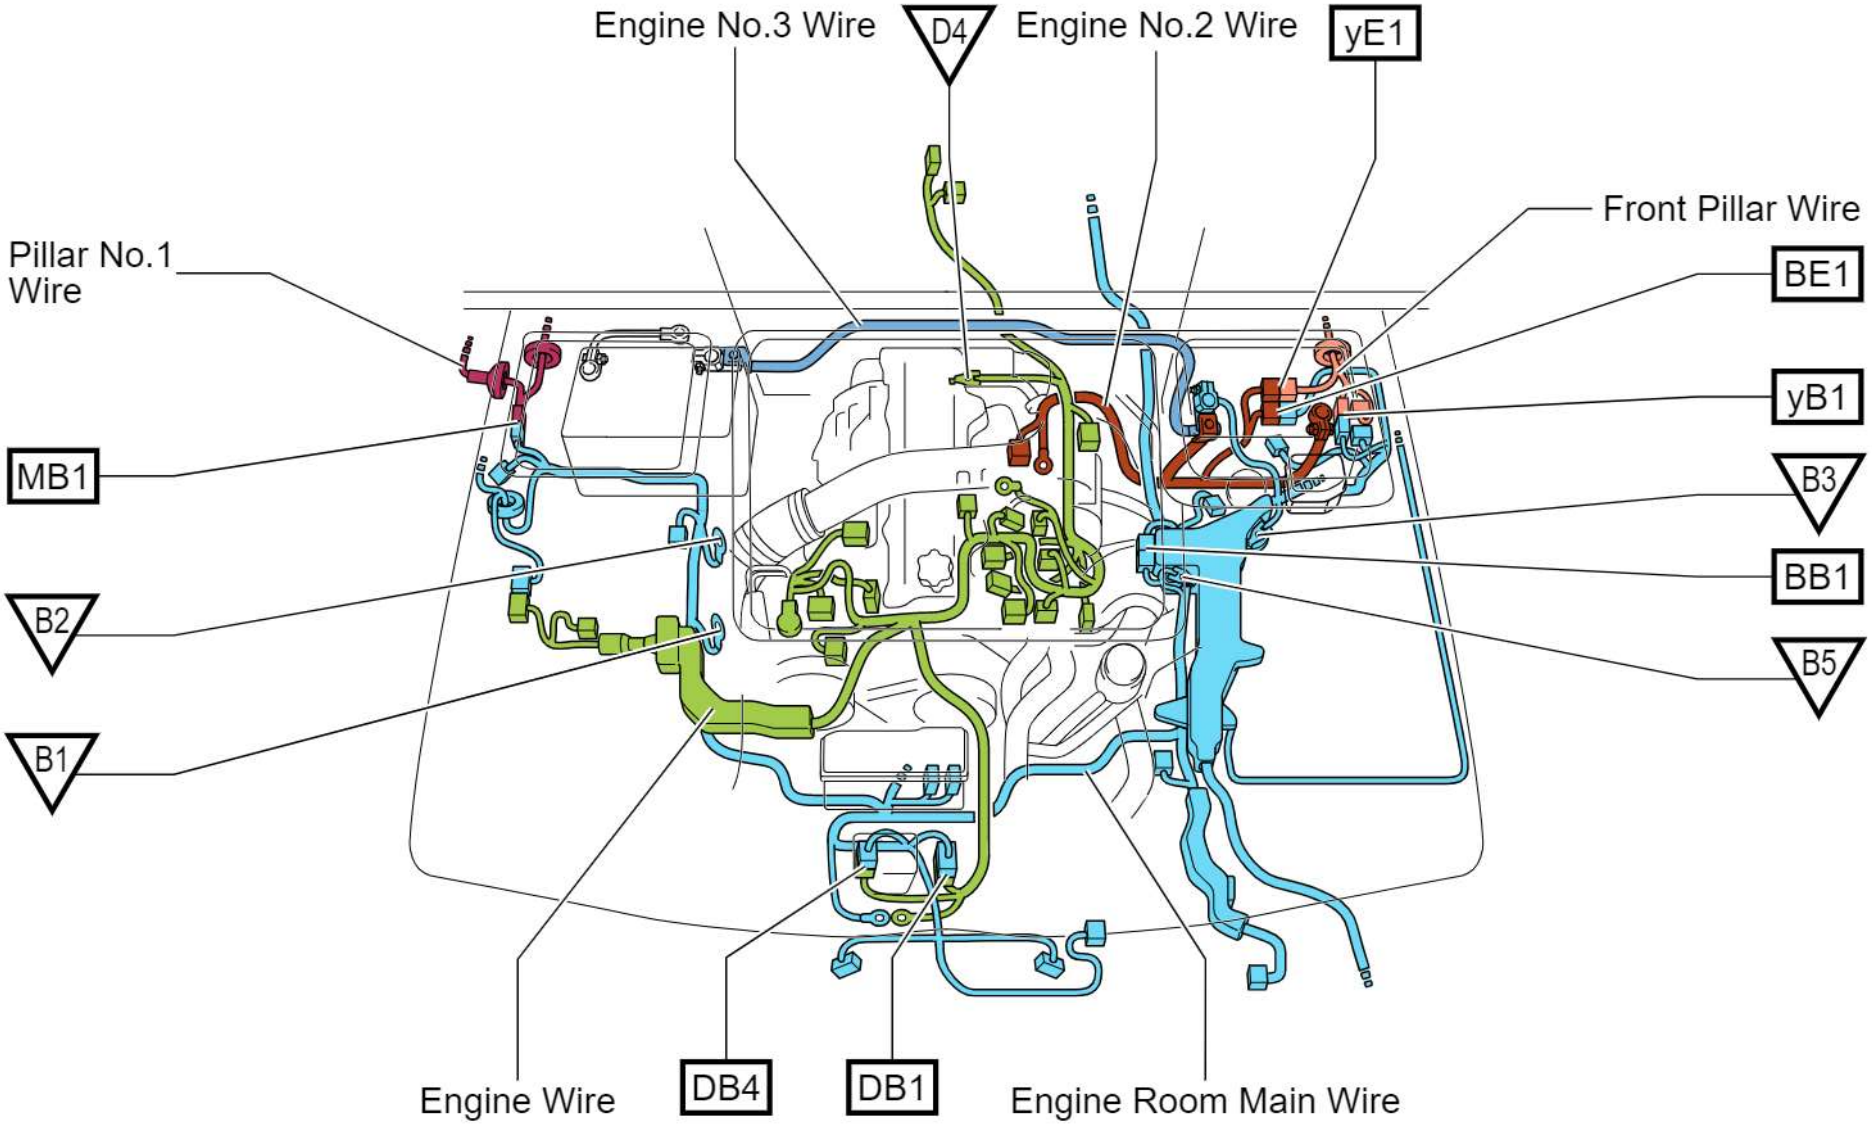

Engine No.3 Wire
D4
Engine No.2 Wire
yE1
Front Pillar Wire
BE1
Pillar No.1 Wire
yB1
MB1
B3
BB1
B2
B5
B1
Engine Wire
DB4
DB1
Engine Room Main Wire

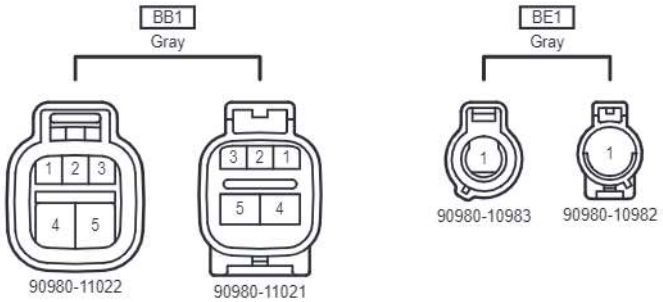
BB1
Gray
1 2 3
4 5
90980-11022
3 2 1
5 4
90980-11021


BE1
Gray
1
90980-10983
1
90980-10982

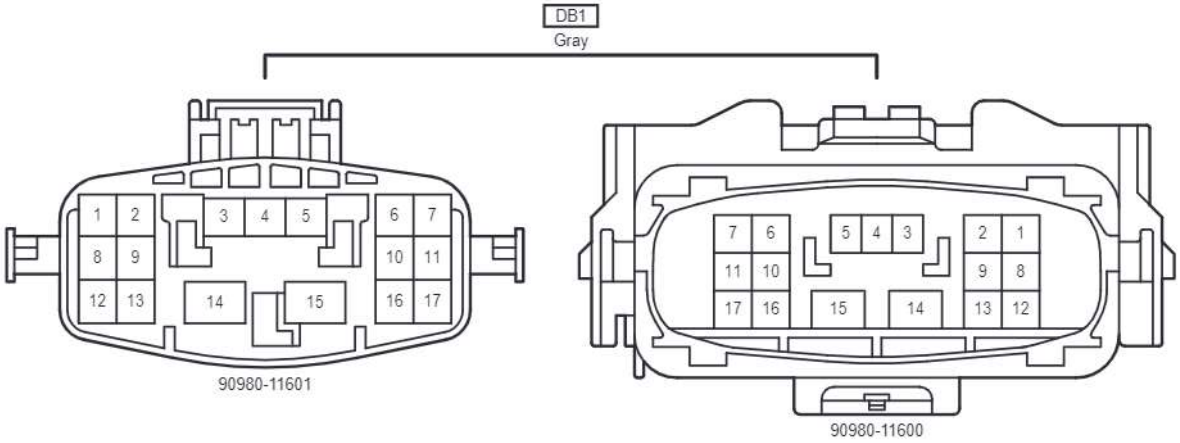
DB1
Gray
1 2 3 4 5 6 7
8 9 10 11
12 13 14 15 16 17
90980-11601
7 6 5 4 3 2 1
11 10 9 8
17 16 15 14 13 12
90980-11600

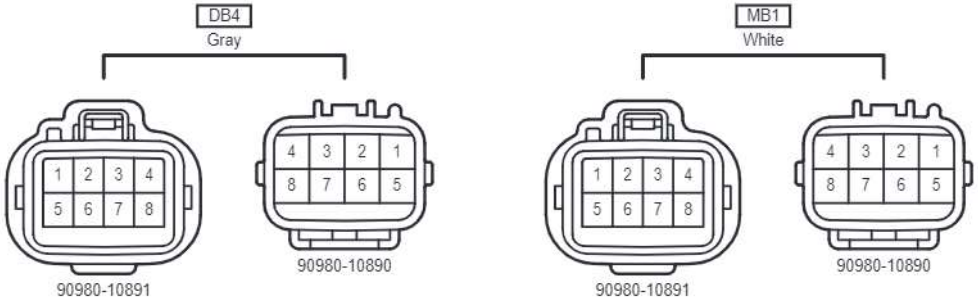
DB4
Gray
1 2 3 4
5 6 7 8
90980-10891
4 3 2 1
8 7 6 5
90980-10890
MB1
White
1 2 3 4
5 6 7 8
90980-10891
4 3 2 1
8 7 6 5
90980-10890

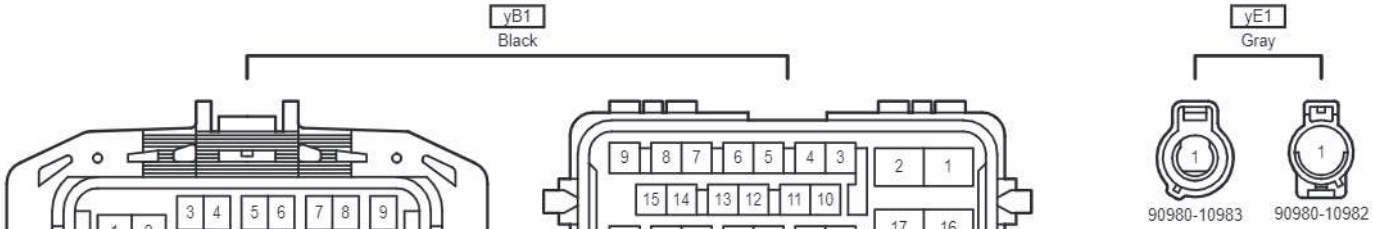
yB1
Black
3 4 5 6 7 8 9
9 8 7 6 5 4 3 2 1
15 14 13 12 11 10

yE1
Gray
1
90980-10983
1
90980-10982

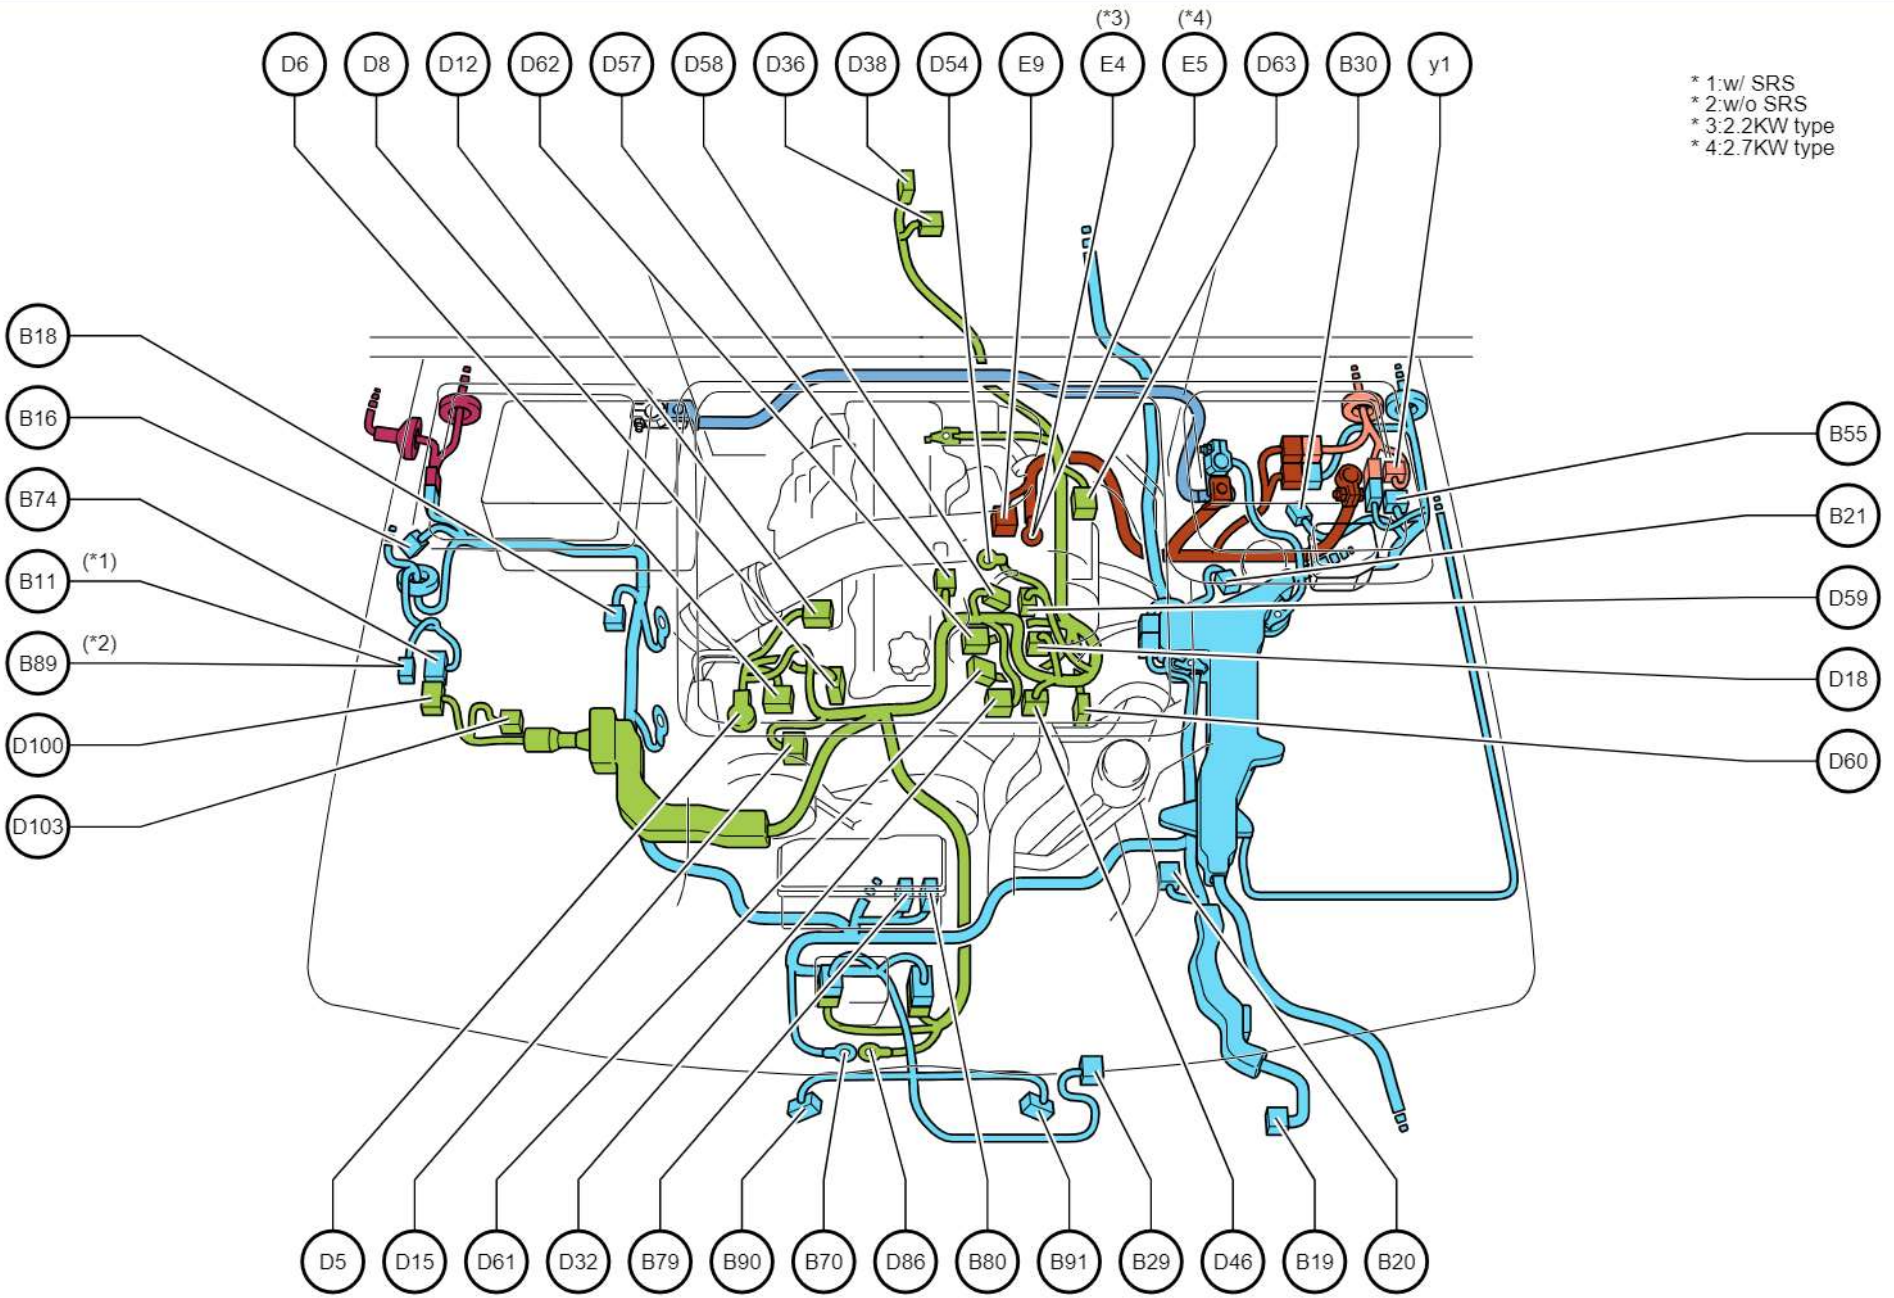
D6
D8
D12
D62
D57
D58
D36
D38
D54
E9
(*3)
E4
(*4)
E5
D63
B30
y1
* 1:w/ SRS
* 2:w/o SRS
* 3:2.2KW type
* 4:2.7KW type
B18
B16
B74
(*1)
B11
(*2)
B89
D100
D103
B55
B21
D59
D18
D60
D5
D15
D61
D32
B79
B90
B70
D86
B80
B91
B29
D46
B19
B20

B 11 Front Seat Inner Belt (Driver's Side)
B 16 A/C Magnetic Valve (Rear A/C)
B 18 Speed Sensor (Front RH)
B 19 Skid Control ECU with Actuator
B 20 Speed Sensor (Front LH)
B 21 Fuel Filter Warning SW
B 29 Water Temp. Sensor (Radiator)
B 30 Fuel Sedimentary Level Warning SW
B 55 Slide Door Control Junction (Male LH)
B 70 Connector Holder NO.2
B 74 Engine ECU
B 79 Junction Connector
B 80 Junction Connector
B 89 Short Pin (Seat Belt SW)
B 90 Cooling Fan Motor (No.1)
B 91 Cooling Fan Motor (No.2)

D 5 Alternator
D 6 Alternator
D 8 Engine Oil Pressure SW
D 12 Engine Oil Level Sensor
D 15 A/C Compressor
D 18 Engine Speed Sensor
D 32 Water Temp. Sensor (Engine Coolant)
D 36 Back-Up Lamp SW
D 38 Speed Sensor
D 46 Fuel Temp. Sensor
D 54 Glow Plug
D 57 Manifold Absolute Pressure Sensor
D 58 Throttle Body Assembly
D 59 Spill Control Valve
D 60 Injection Pump Assembly
D 61 Timer Control Valve
D 62 Crankshaft Position Sensor
D 63 Throttle Position SW
D 86 Connector Holder NO.2
D 100 Engine ECU
D 103 Junction Connector

E 4 Starter
E 5 Starter

B11
White



90980-10825

B16
Gray




90980-11003

B18
Black



90980-11003

B19
Black

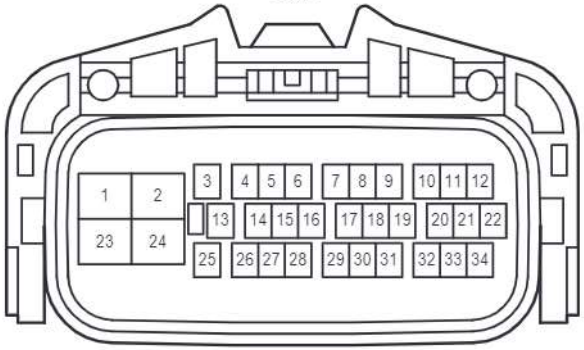

90980-12020

B20
Gray



90980-11075

B21
Black



90980-12416

B29
Black



90980-10735

B30
Gray



90980-11003

B55
White




90980-11033

B70




B74
Black

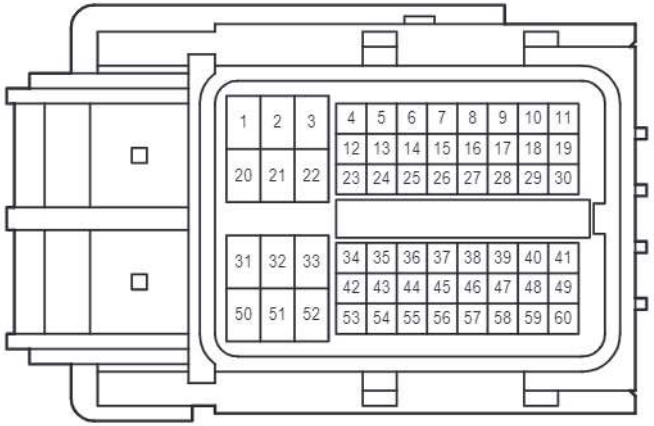


90980-12462

B79
Black

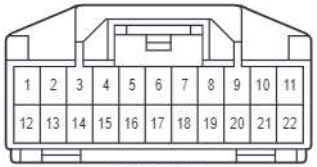


90980-11915

B80
White



B89
White



B90
Black



B91
Black



D6
Green



90980-11964

D8
White



90980-10703

D12
White



90980-10532

D15
Gray



90980-11271

D18
White




90980-11250

D32
Black



90980-10735

D36
Gray

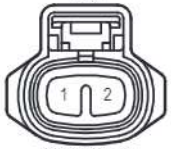

90980-11250

D38
Black



90980-11143

D46
Dark Gray



90980-10737

(1KD-FTV Before Dec. 2013 Production, 2KD-FTV Before Dec. 2013 Production, 5L-E)


D46
Gray



90980-10737

(1KD-FTV From Dec. 2013 Production, 2KD-FTV From Dec. 2013 Production)

D54



90980-09320

D57
Black



90980-10845

D58
Gray



90980-11144

D59
Gray



90980-12117

D60
Black



90980-11028

D61
Brown



90980-11285

D62
Black



90980-11162

D63
Black




90980-11156

D86



D100
Black

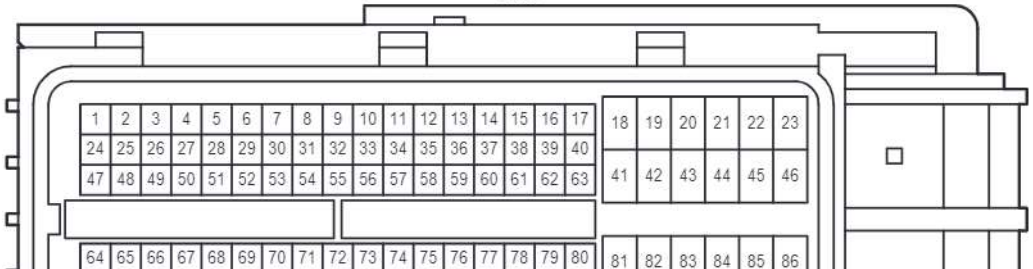

Position of Parts in Engine Compartment <RHD 5L-E>

D103
Gray




90980-10897

E4



90980-09507

E5



90980-09508

E9
Black





90980-11184


y1
White




90980-11033

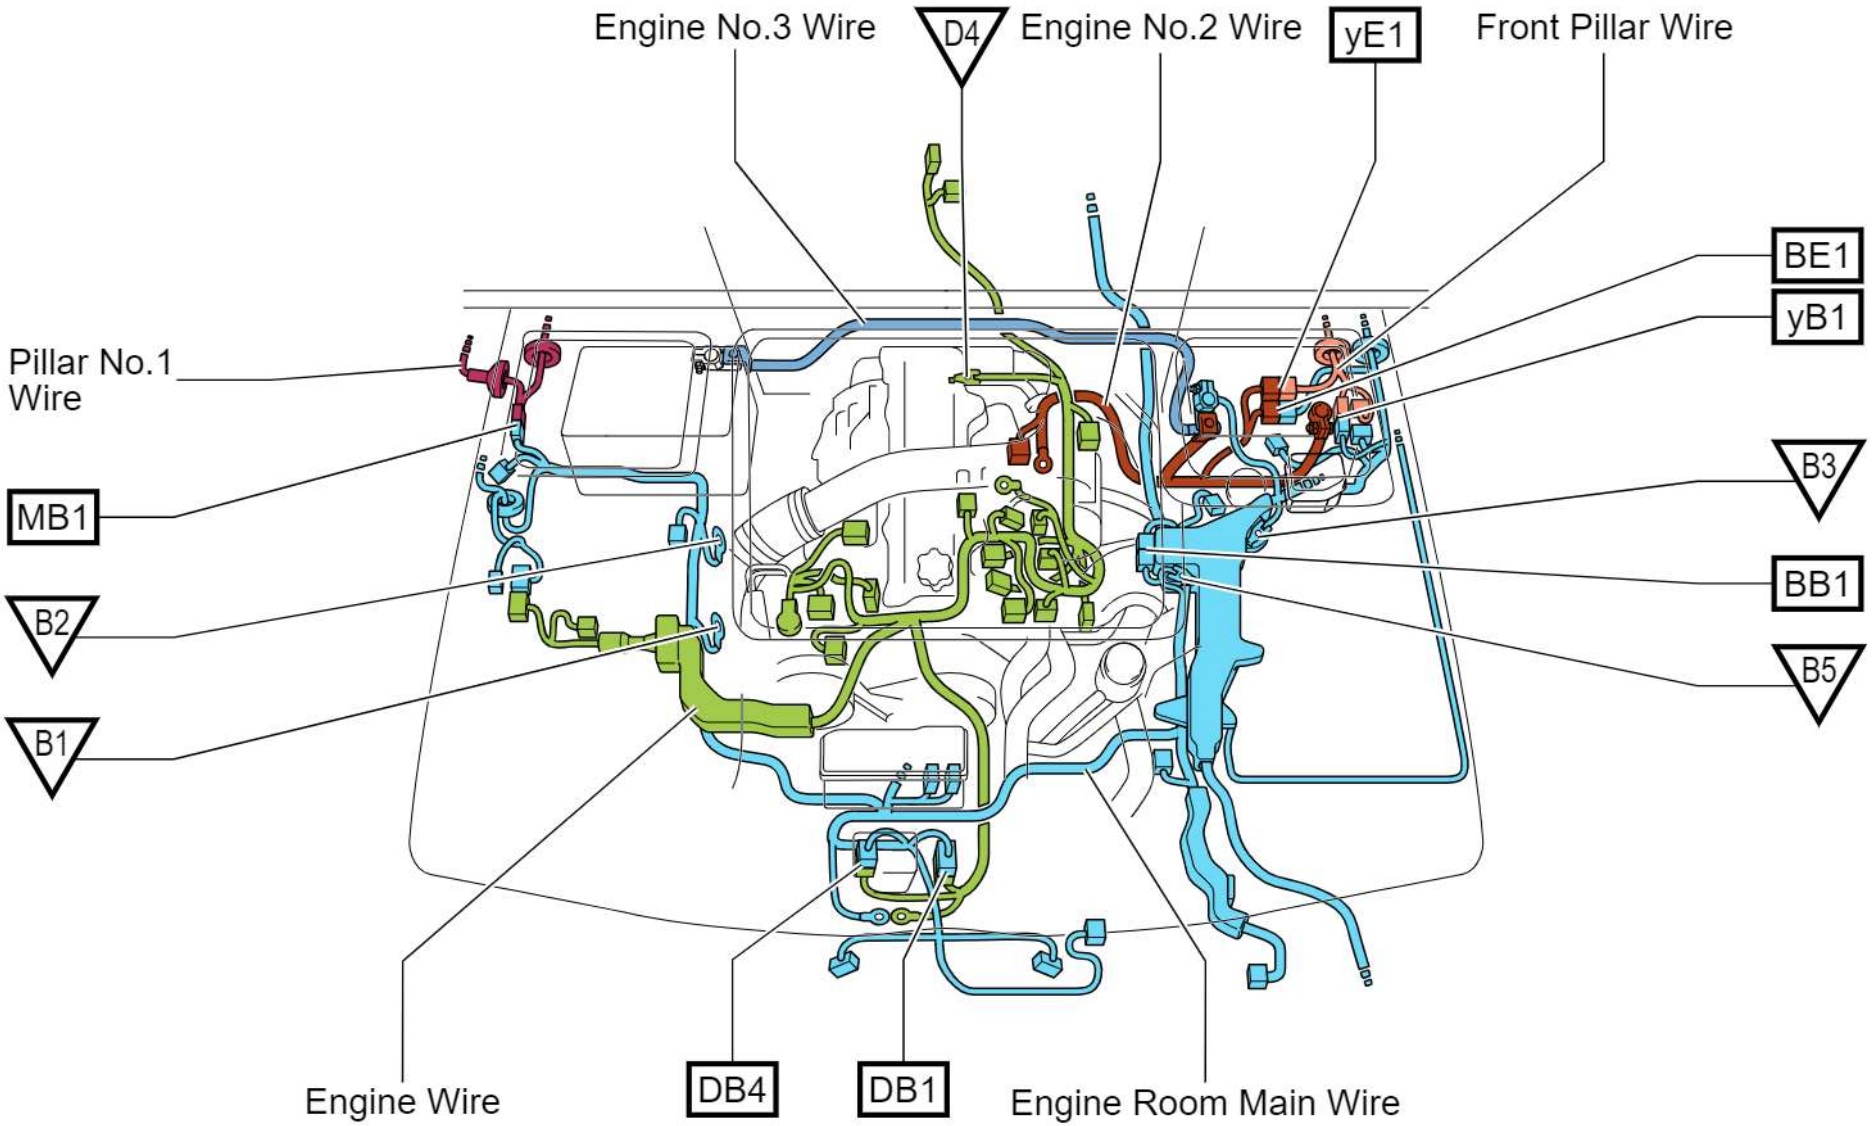
Engine No.3 Wire
D4
Engine No.2 Wire
yE1
Front Pillar Wire
BE1
yB1
Pillar No.1 Wire
MB1
B2
B1
B3
BB1
B5
Engine Wire
DB4
DB1
Engine Room Main Wire

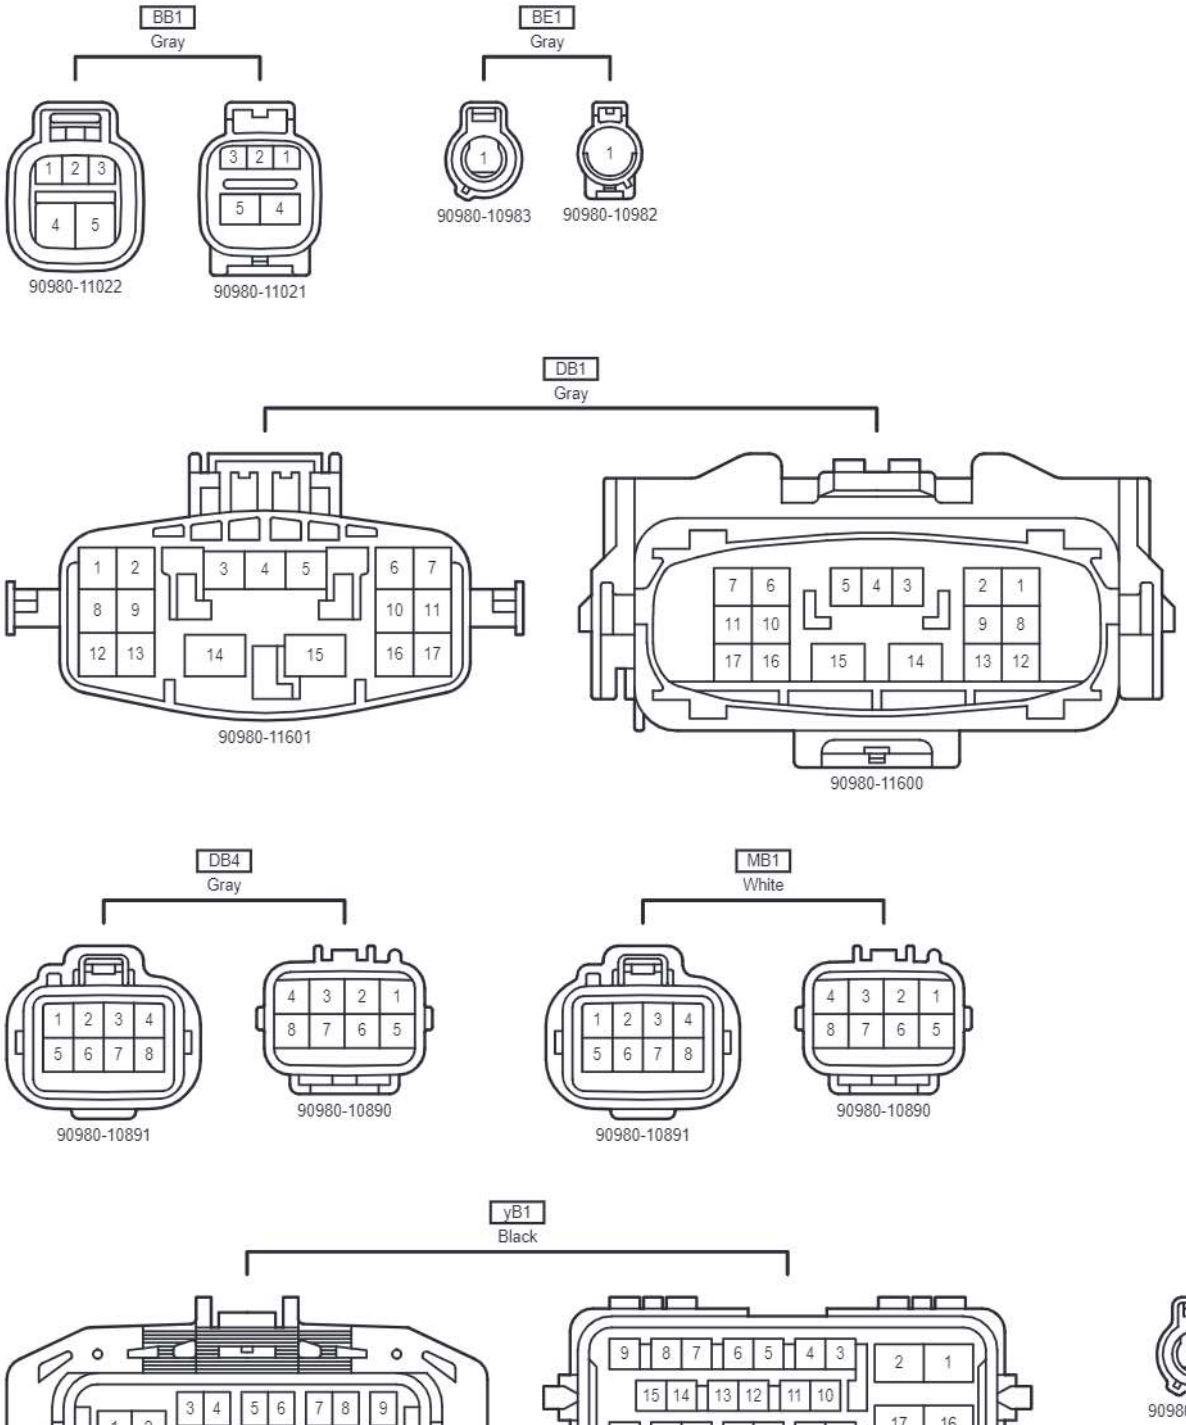

BB1
Gray
90980-11022
90980-11021
BE1
Gray
90980-10983
90980-10982
DB1
Gray
90980-11601
90980-11600
DB4
Gray
90980-10891
90980-10890
MB1
White
90980-10891
90980-10890
yB1
Black
yE1
Gray
90980-10983
90980-10982

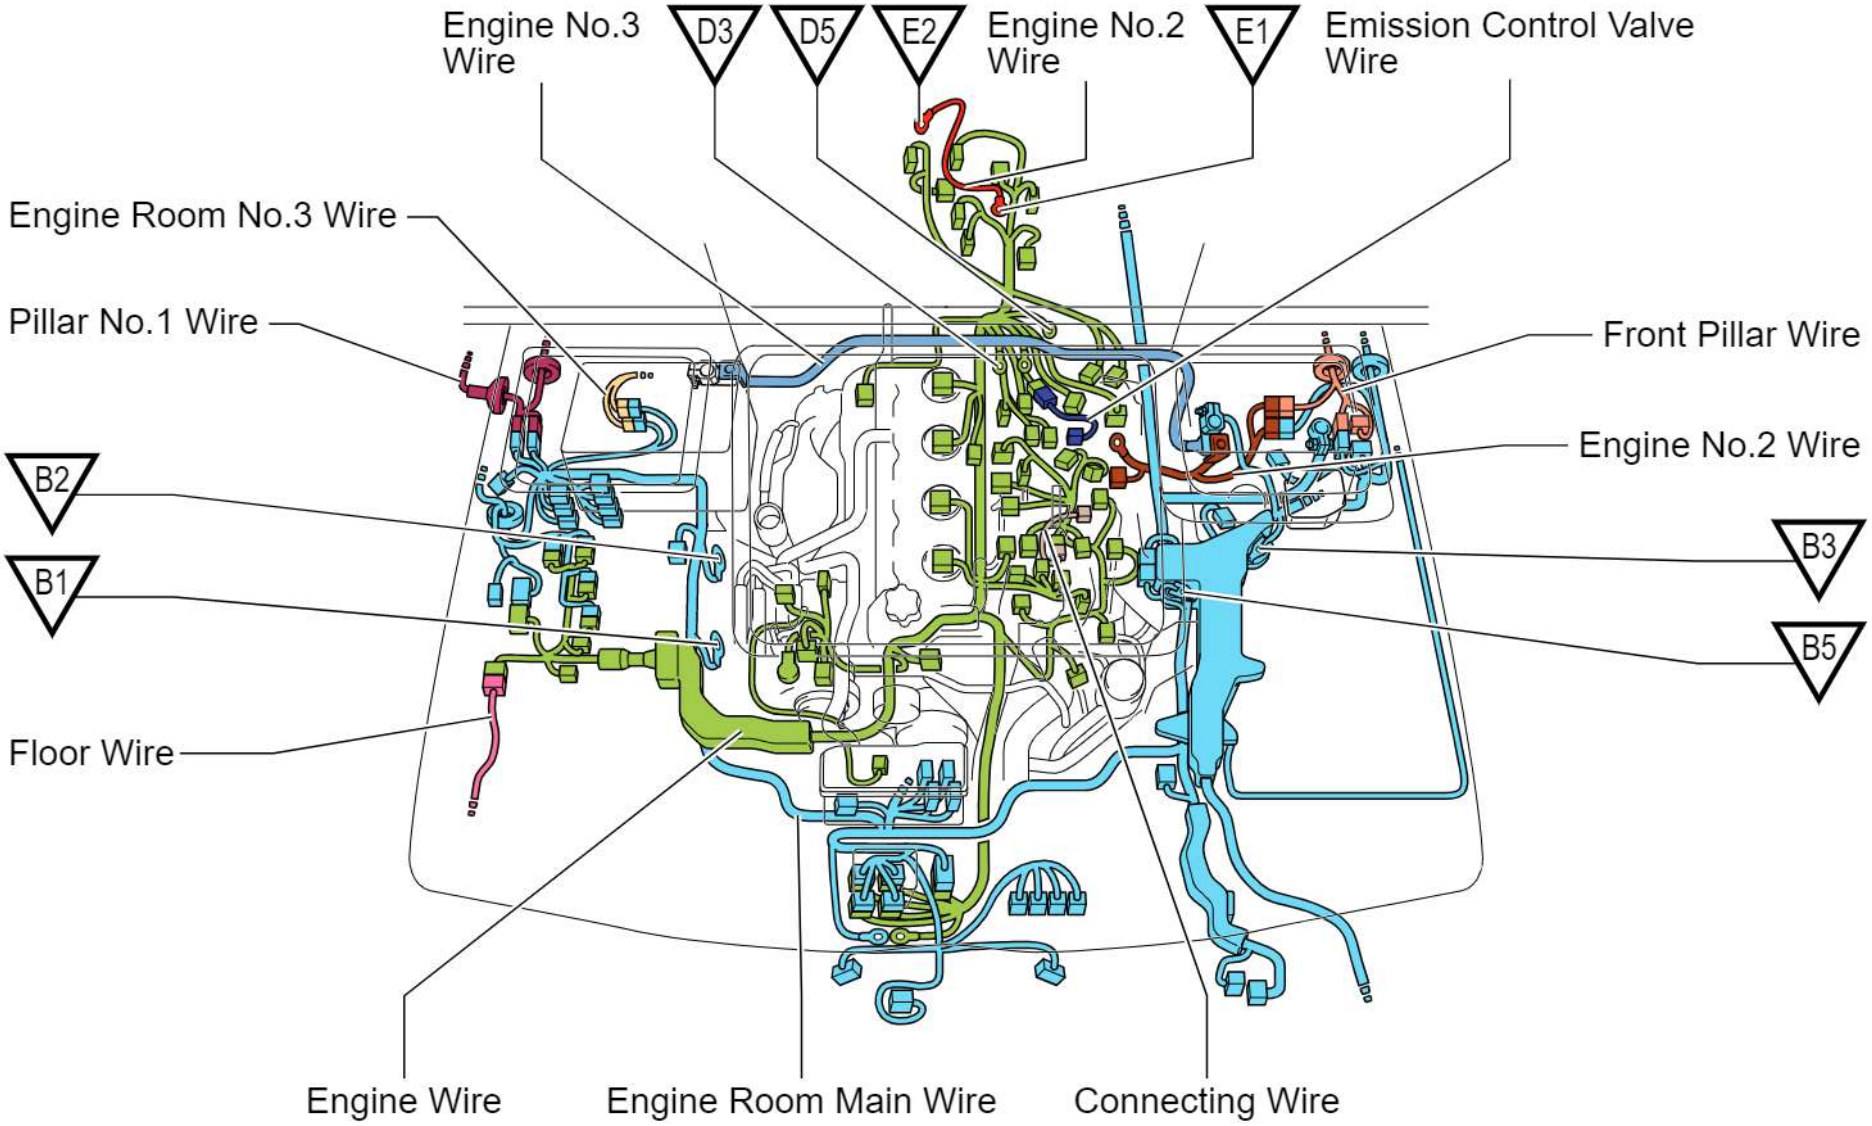
Engine No.3 Wire
D3
D5
E2
Engine No.2 Wire
E1
Emission Control Valve Wire
Engine Room No.3 Wire
Pillar No.1 Wire
Front Pillar Wire
Engine No.2 Wire
B2
B1
B3
B5
Floor Wire
Engine Wire
Engine Room Main Wire
Connecting Wire

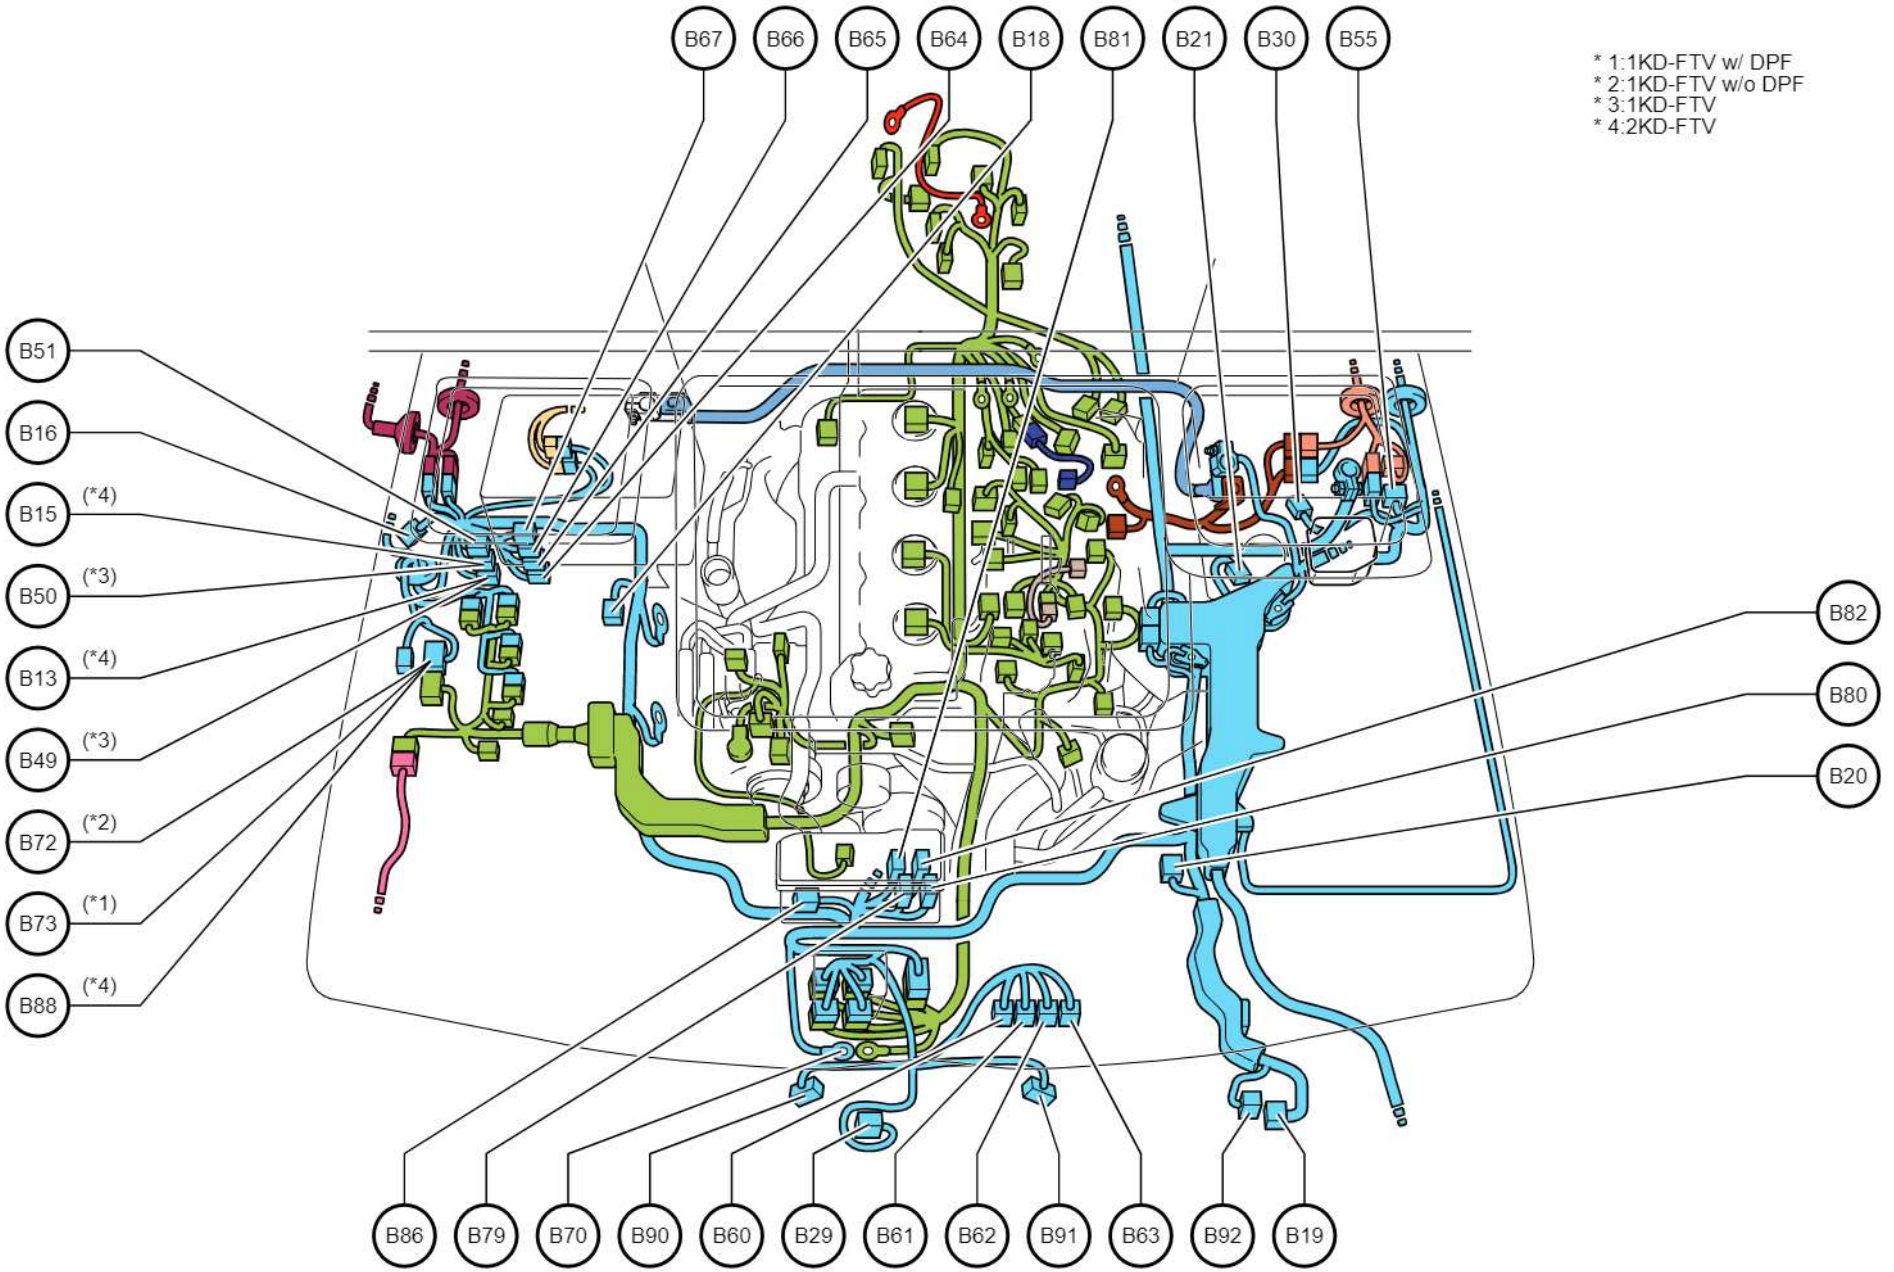

B67
B66
B65
B64
B18
B81
B21
B30
B55
* 1:1KD-FTV w/ DPF
* 2:1KD-FTV w/o DPF
* 3:1KD-FTV
* 4:2KD-FTV
B51
B16
B15
(*4)
B50
(*3)
B13
(*4)
B49
(*3)
B72
(*2)
B73
(*1)
B88
(*4)
B82
B80
B20
B86
B79
B70
B90
B60
B29
B61
B62
B91
B63
B92
B19

B 13 Injector Driver (EDU)
B 15 Injector Driver (EDU)
B 16 A/C Magnetic Valve (Rear A/C)
B 18 Speed Sensor (Front RH)
B 19 Skid Control ECU with Actuator
B 20 Speed Sensor (Front LH)
B 21 Fuel Filter Warning SW
B 29 Water Temp. Sensor (Radiator)
B 30 Fuel Sedimentary Level Warning SW
B 49 Injector Driver (EDU)
B 50 Injector Driver (EDU)
B 51 Injector Driver (EDU)
B 55 Slide Door Control Junction (Male LH)
B 60 Injector Driver (EDU)
B 61 Injector Driver (EDU)
B 62 Injector Driver (EDU)
B 63 Injector Driver (EDU)
B 64 Glow Plug Controller
B 65 Glow Plug Controller
B 66 Glow Plug Controller
B 67 Glow Plug Controller
B 70 Connector Holder NO.2
B 72 Engine ECU
B 73 Engine ECU
B 79 Junction Connector
B 80 Junction Connector
B 81 Junction Connector
B 82 Junction Connector
B 86 Junction Connector
B 88 Engine ECU
B 90 Cooling Fan Motor (No.1)
B 91 Cooling Fan Motor (No.2)
B 92 Brake Actuator Assembly

B13
Black

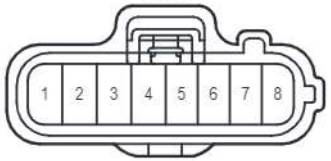

B15
Dark Gray

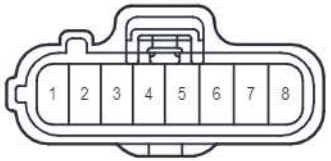


B16
Gray



B18
Black



B19
Black

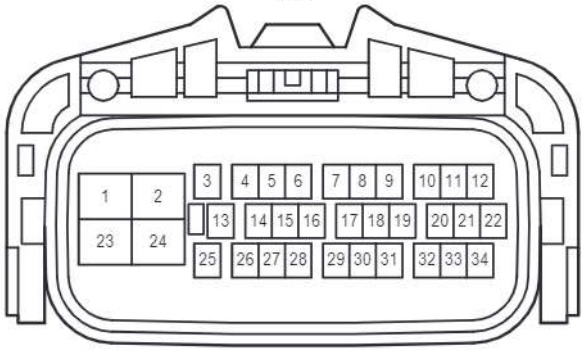

B20
Gray



B21
Black



B29
Black



B30
Gray



B49
Black



B50
White



B51
Gray



B55
White



B60
Dark Gray



B61
Gray



B62
White




B63
Blue



B64
White




B65
Gray



B66
Dark Gray




B67
Black




B70




B72
Black

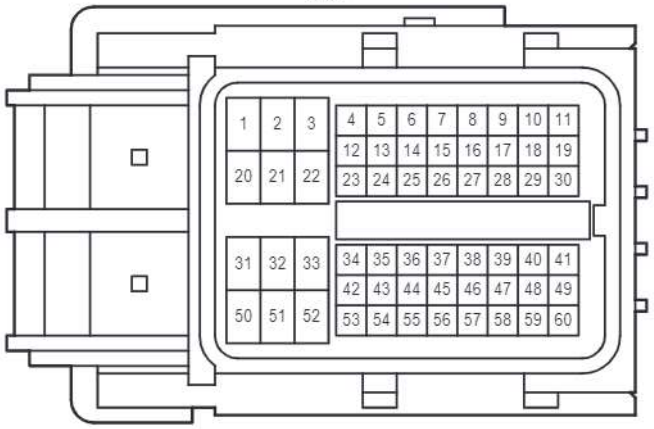


B73
Black

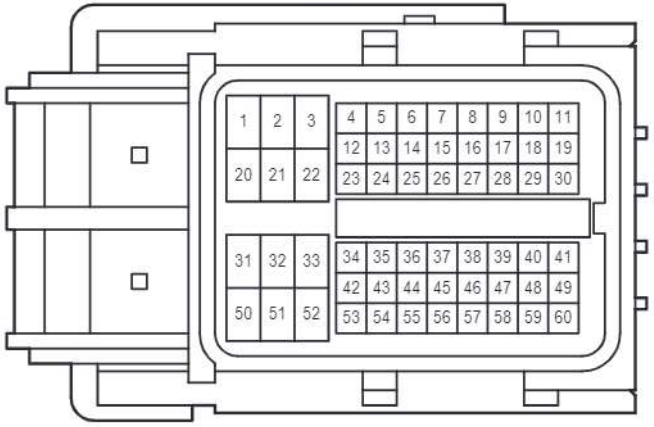


B79
Black

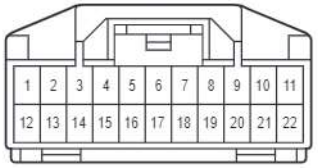


B80
White

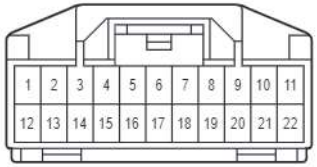


B81
Black




B82
Black




B86
White

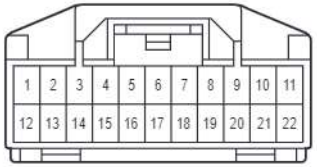


B88
Black

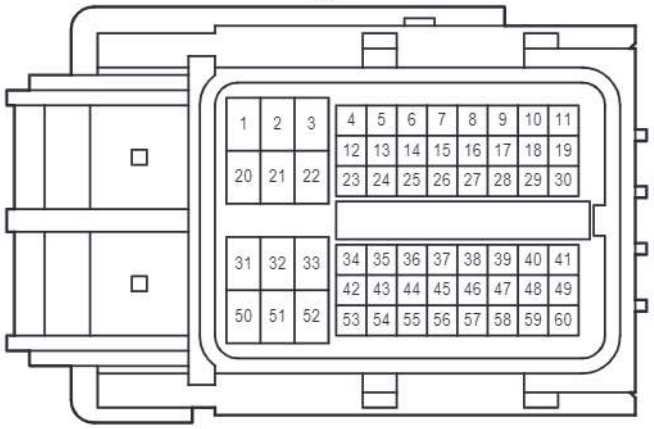


B90
Black

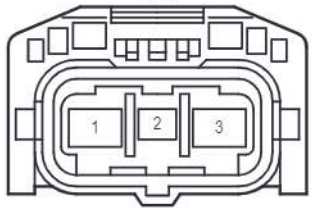


B91
Black

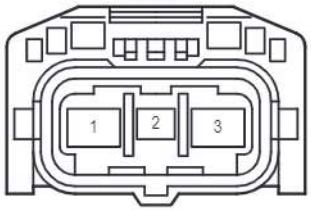


B92
Black

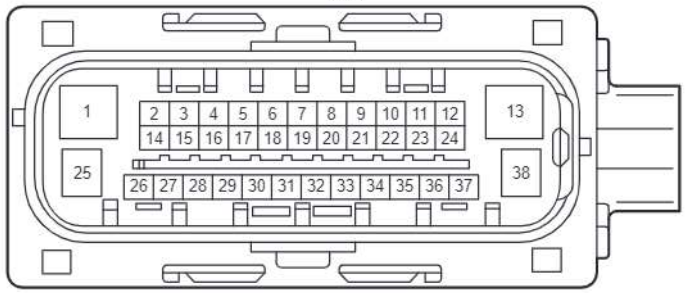

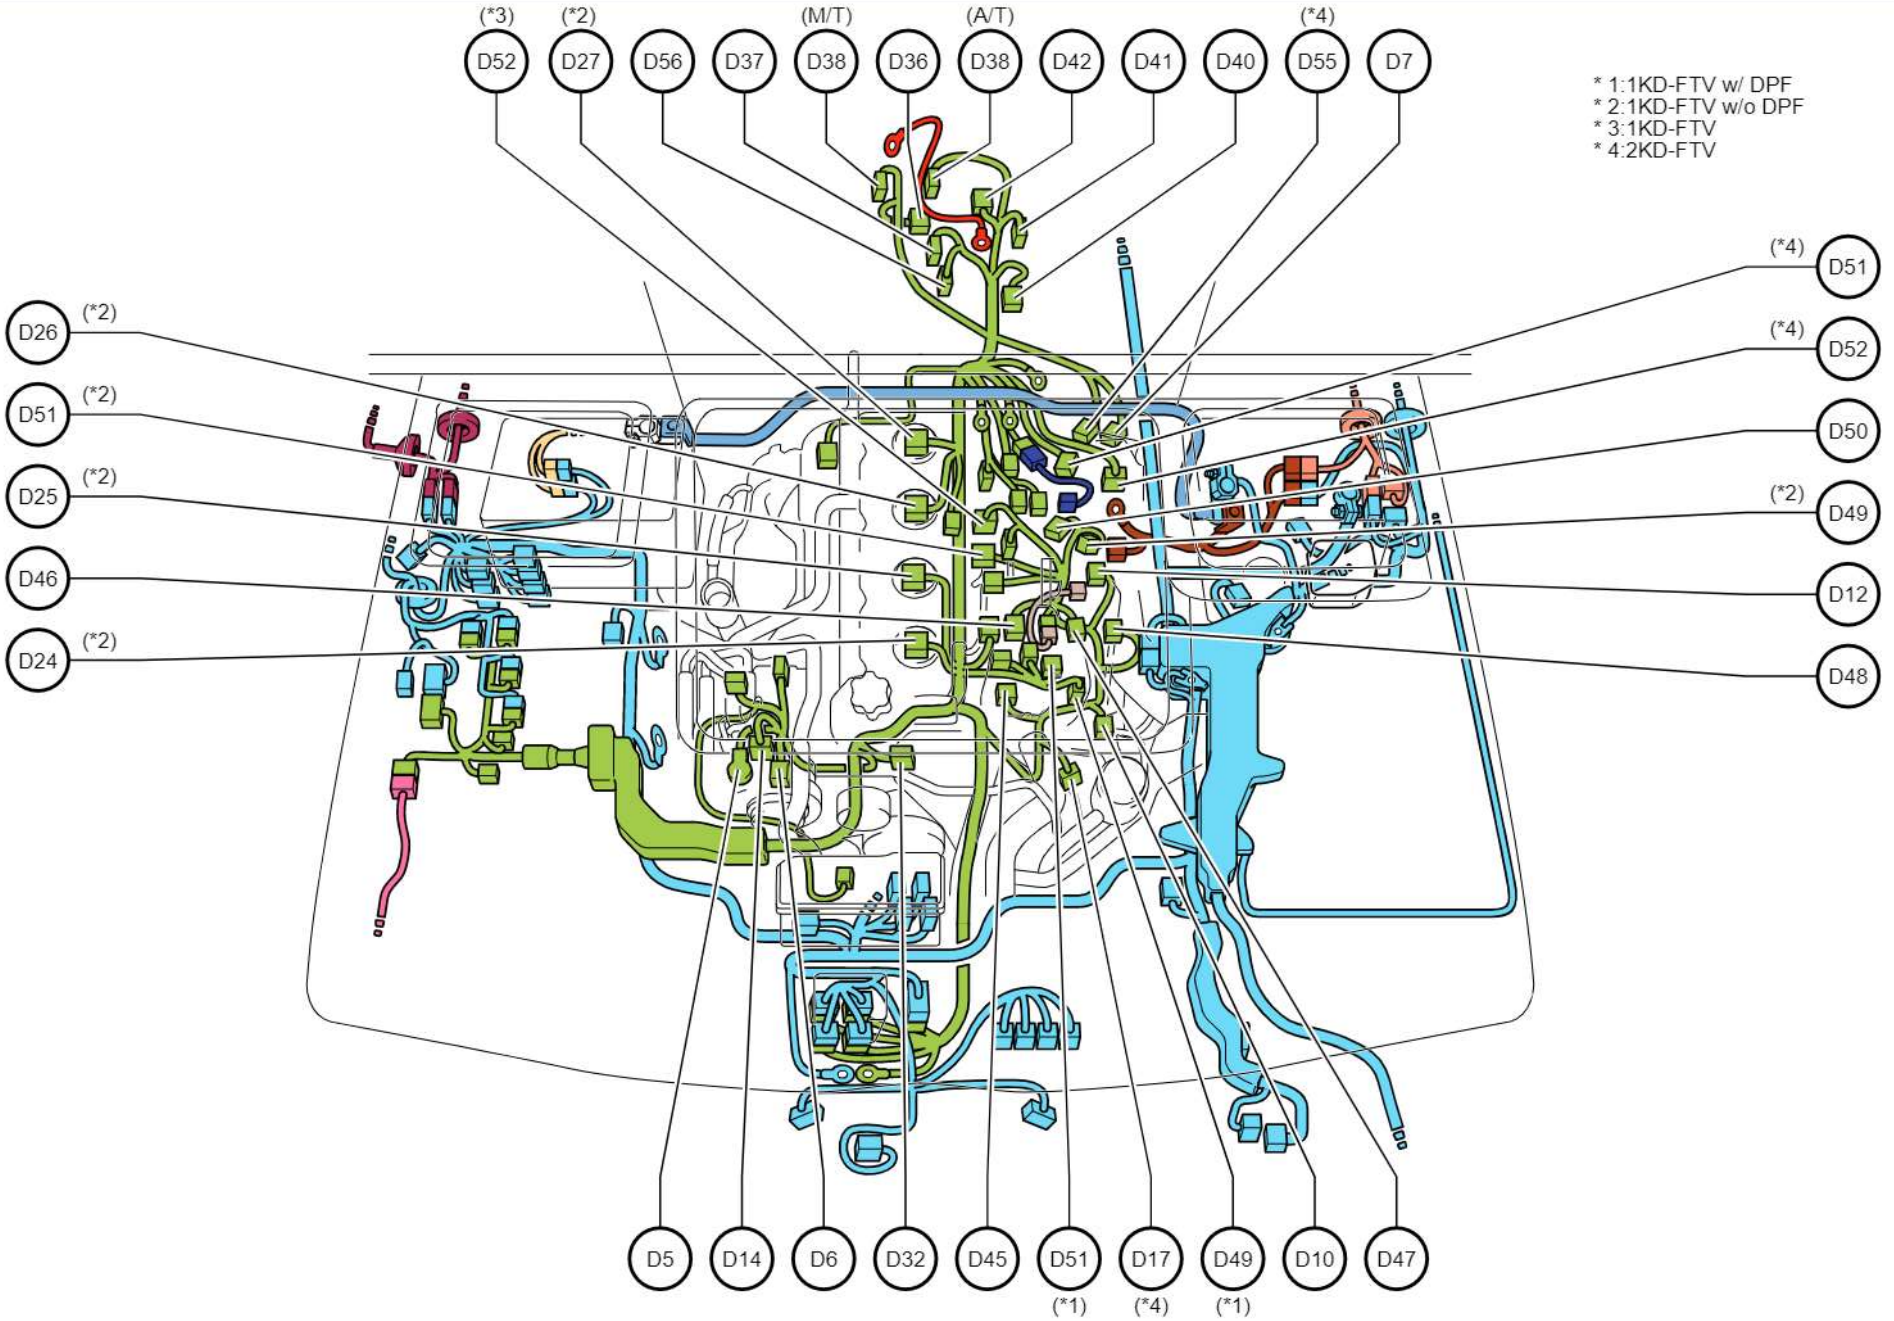
(*3)
(*2)
(M/T)
(A/T)
(*4)
D52
D27
D56
D37
D38
D36
D38
D42
D41
D40
D55
D7
* 1:1KD-FTV w/ DPF
* 2:1KD-FTV w/o DPF
* 3:1KD-FTV
* 4:2KD-FTV
(*4)
D51
(*4)
D52
D50
(*2)
D49
D12
D48
(*2)
D26
(*2)
D51
(*2)
D25
D46
(*2)
D24
D5
D14
D6
D32
D45
D51
(*1)
D17
(*4)
D49
(*1)
D10
D47

D	5	Alternator
D	6	Alternator
D	7	Engine Oil Pressure SW
D	10	Camshaft Position Sensor
D	12	Engine Oil Level Sensor
D	14	A/C Compressor
D	17	Crankshaft Position Sensor
D	24	Fuel Injector (No.1)
D	25	Fuel Injector (No.2)
D	26	Fuel Injector (No.3)
D	27	Fuel Injector (No.4)
D	32	Water Temp. Sensor (Engine Coolant)
D	36	Back-Up Lamp SW
D	37	Park/Neutral Position SW
D	37	Park/Neutral Position SW
D	38	Speed Sensor
D	40	Transmission Revolution Sensor (Input)
D	41	ECT Solenoid
D	42	Transmission Revolution Sensor (Output)
D	45	Fuel Pressure Sensor
D	46	Fuel Temp. Sensor
D	46	Fuel Temp. Sensor
D	47	Suction Control Valve
D	48	Throttle Body Assembly
D	49	Inlet Air Temp. Sensor (Intake Manifold)
D	50	Throttle Body Assembly
D	51	Turbo Pressure Sensor
D	52	EGR Valve Position Sensor
D	55	VRV (EGR)
D	56	A/T Fluid Temp. Sensor

D5



(Before Sep. 2007 Production/From Sep. 2007 Production)

D6
Green



D7
Black



D10
Black



D12
White




D14
Gray




D17
Gray




D24
Brown




D25
Gray



D26
Brown



D27
Gray




D32
Black



D36
Gray




D37
Gray

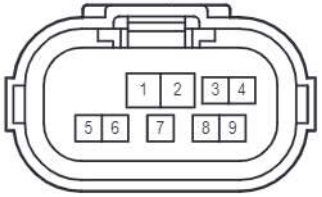

(Before Dec. 2013 Production)

D37
Black

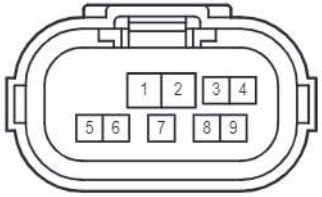

D38
Black



D40
Black



D41
Gray




(From Dec. 2013 Production)

D42
Black



D45
Black



D46
Gray



D47
Gray



D48
Black



(1KD-FTV From Dec. 2013 Production, 2KD-FTV From Dec. 2013 Production)

D49
Gray



D50
Black



D51
Black



D52
Black




D55
Brown



D56
White

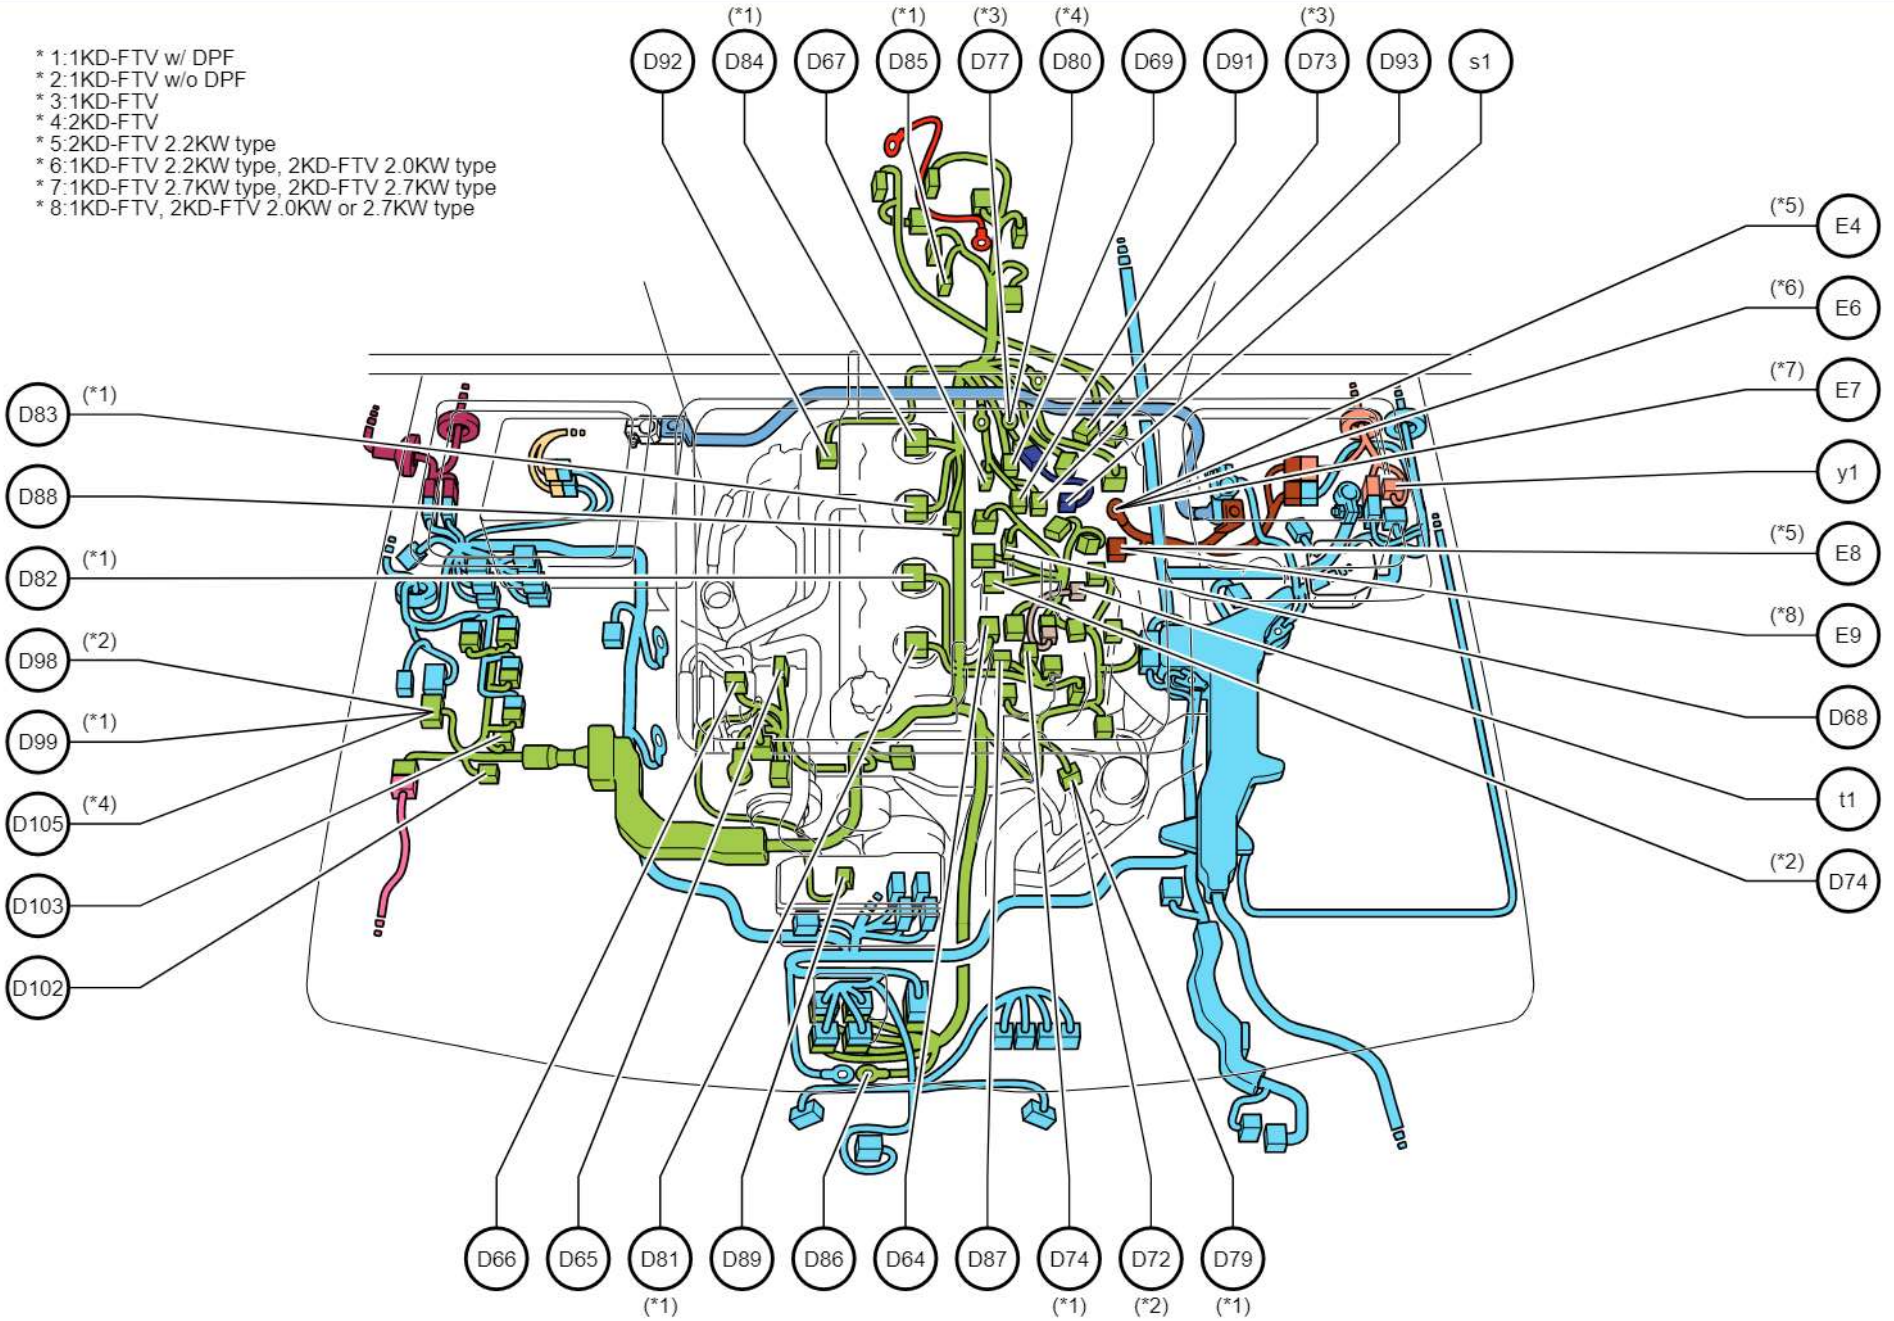


* 1:1KD-FTV w/ DPF
* 2:1KD-FTV w/o DPF
* 3:1KD-FTV
* 4:2KD-FTV
* 5:2KD-FTV 2.2KW type
* 6:1KD-FTV 2.2KW type, 2KD-FTV 2.0KW type
* 7:1KD-FTV 2.7KW type, 2KD-FTV 2.7KW type
* 8:1KD-FTV, 2KD-FTV 2.0KW or 2.7KW type
D92
(*1) D84
D67
(*1) D85
(*3) D77
(*4) D80
D69
D91
(*3) D73
D93
s1
(*5) E4
(*6) E6
(*7) E7
y1
(*5) E8
(*8) E9
D68
t1
(*2) D74
D83 (*1)
D88
D82 (*1)
D98 (*2)
D99 (*1)
D105 (*4)
D103
D102
D66
D65
D81 (*1)
D89
D86
D64
D87
D74 (*1)
D72 (*2)
D79 (*1)

D 64 Pressure Discharge Valve
D 65 Turbocharger Variable Nozzle Motor Assembly
D 66 Turbocharger Variable Nozzle Motor Assembly
D 67 Swirl Control Valve
D 68 VSV (EGR Cut)
D 69 Fuel Pressure Sensor
D 72 Crankshaft Position Sensor
D 73 VRV (EGR)
D 74 VSV (EGR)
D 77 Glow Plug
D 79 Crankshaft Position Sensor
D 80 Glow Plug
D 81 Fuel Injector Assembly (No.1)
D 82 Fuel Injector Assembly (No.2)
D 83 Fuel Injector Assembly (No.3)
D 84 Fuel Injector Assembly (No.4)
D 85 A/T Fluid Temp. Sensor
D 86 Connector Holder NO.2
D 87 Pressure Discharge Valve
D 88 Glow Plug
D 89 Oil Pressure Switching Valve Assembly
D 91 Suction Control Valve Assembly
D 92 Exhaust Fuel Addition Injector Assembly
D 93 Oil Pressure Sender Gauge Assembly
D 98 Engine ECU
D 99 Engine ECU
D 102 Junction Connector
D 103 Junction Connector
D 105 Engine ECU

E 4 Starter
E 6 Starter
E 7 Starter
E 8 Starter
E 9 Starter

s 1 Electric EGR Control Valve Assembly


t 1 Diesel Throttle Body Assembly

y 1 Slide Door Control Junction (Male LH)

D64
Gray



D65
Black

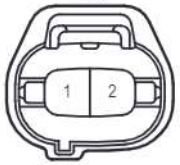

D66
Black



D67
Blue



D68
Brown



D69
Black



D72
Dark Gray



D73
Black



D74
Blue



D77




D79
Dark Gray




D80




D81
Black

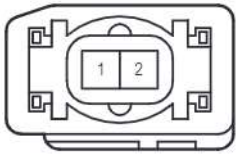


D82
Gray

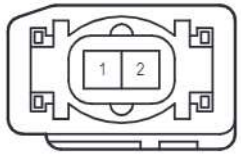

D83
Black

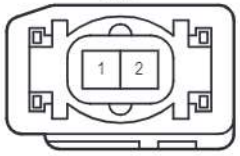

D84
Gray

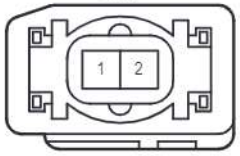


D85
Black



D86



D87
Gray

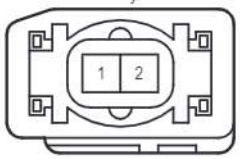

D88
Black



D89
Black




D91
Brown




D92
Black



D98
Black

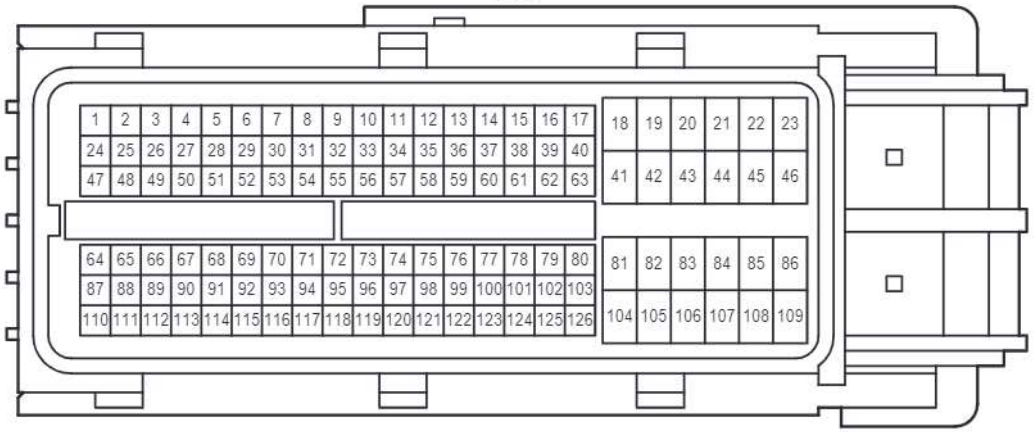

D99
Black

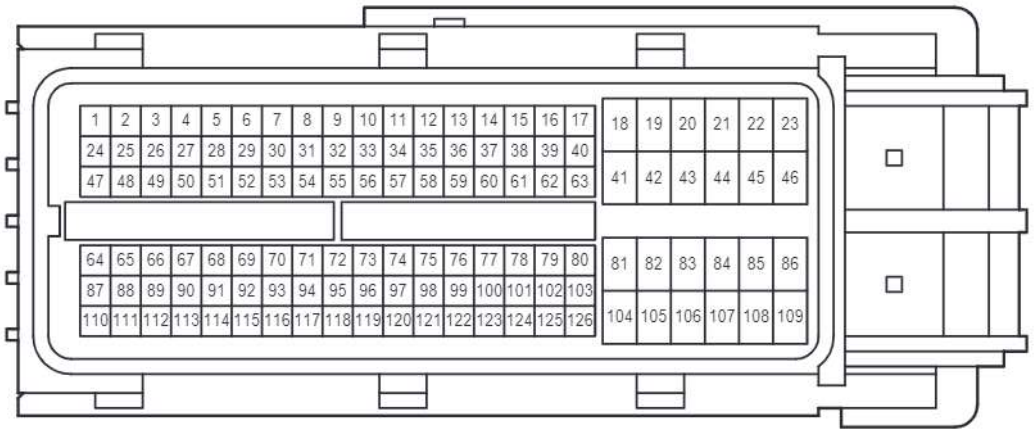


D102
Gray



D103
Gray



D105
Black

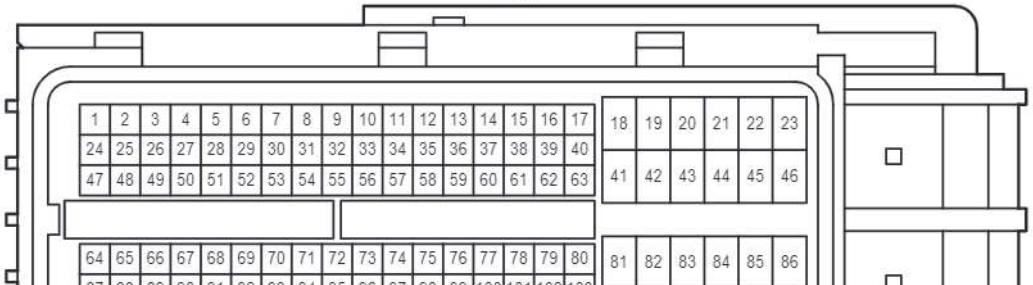

s1
Black





t1
Black




y1
White

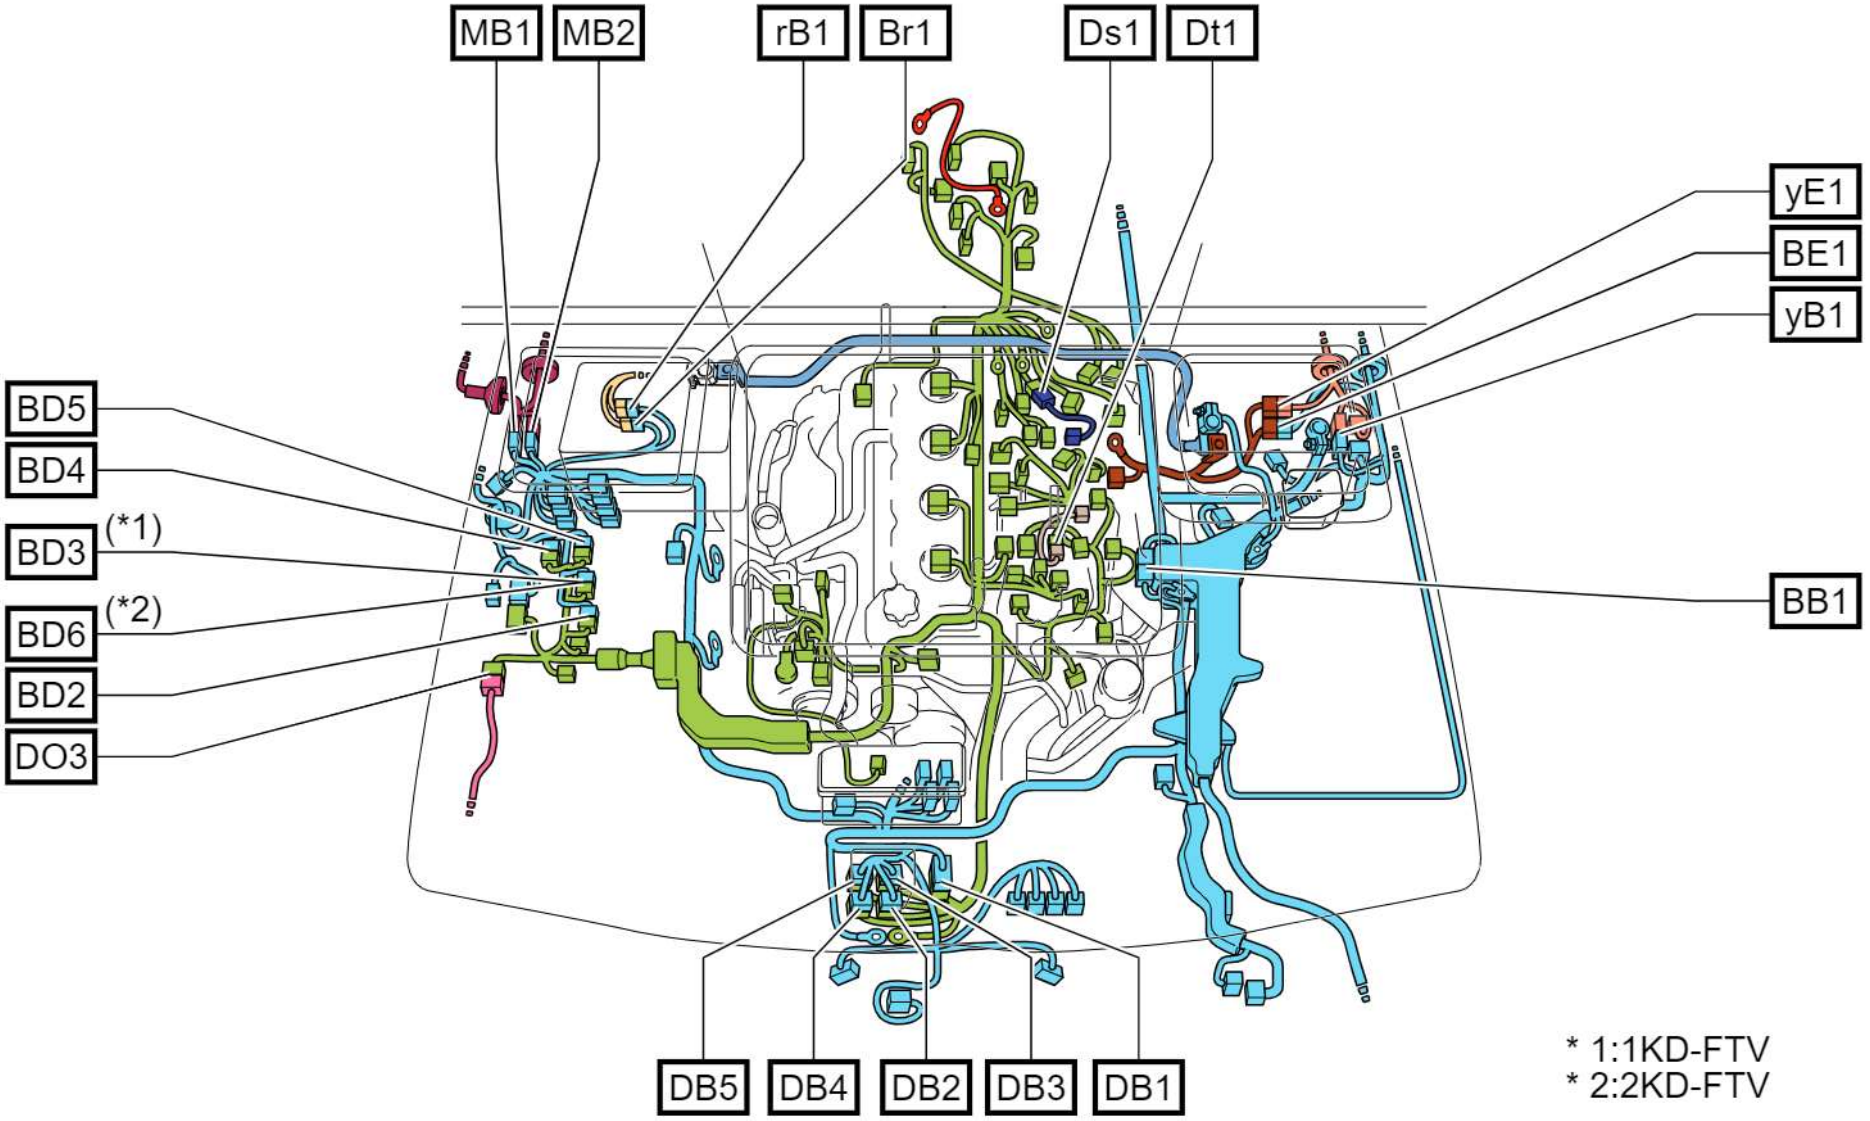



MB1
MB2
rB1
Br1
Ds1
Dt1
yE1
BE1
yB1
BD5
BD4
BD3
(*1)
BD6
(*2)
BD2
DO3
BB1
DB5
DB4
DB2
DB3
DB1
* 1:1KD-FTV
* 2:2KD-FTV

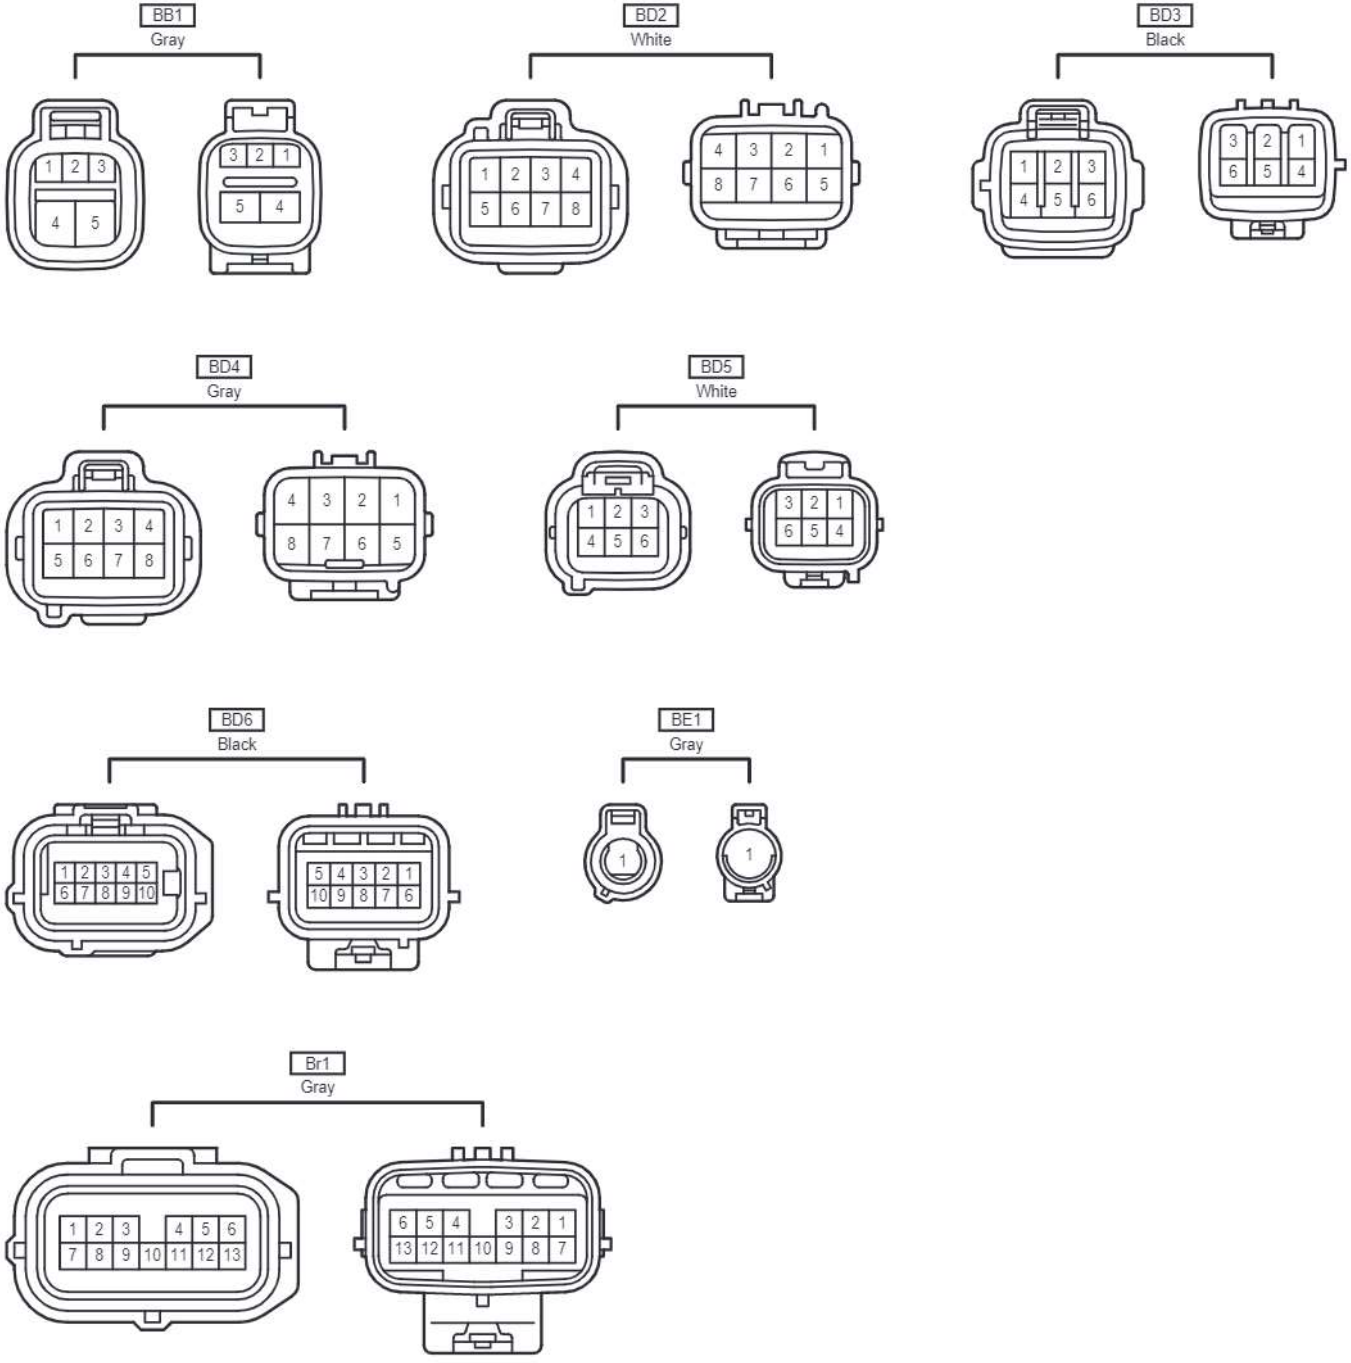
BB1
Gray
1 2 3
4 5
3 2 1
5 4
BD2
White
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
BD3
Black
1 2 3
4 5 6
3 2 1
6 5 4
BD4
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
BD5
White
1 2 3
4 5 6
3 2 1
6 5 4
BD6
Black
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6
BE1
Gray
1
1
Br1
Gray
1 2 3 4 5 6
7 8 9 10 11 12 13
6 5 4 3 2 1
13 12 11 10 9 8 7


DB1
Gray

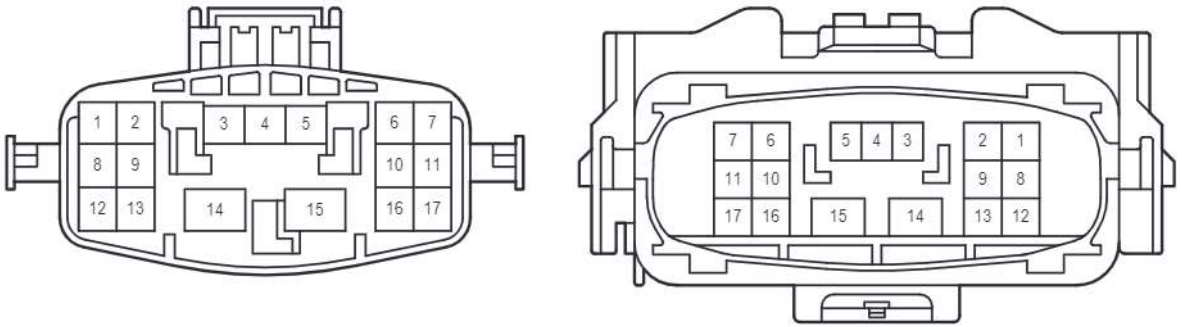


DB2
Black

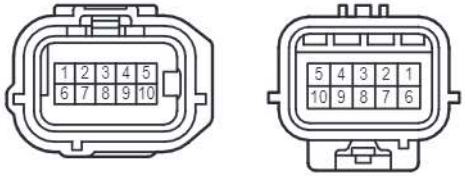


DB3
Dark Gray

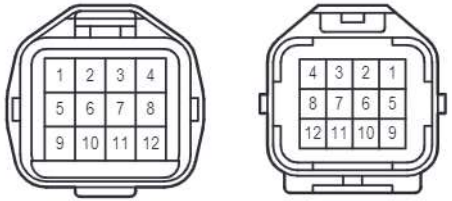

DB4
Gray

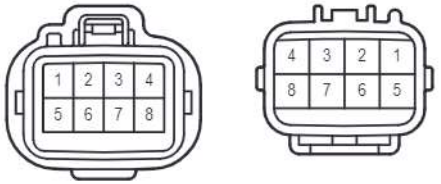


DB5
Black

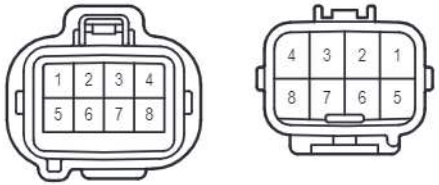



DO3
Black



Wire and Wire in Engine Compartment <LHD 1KD-FTV, 2KD-FTV>

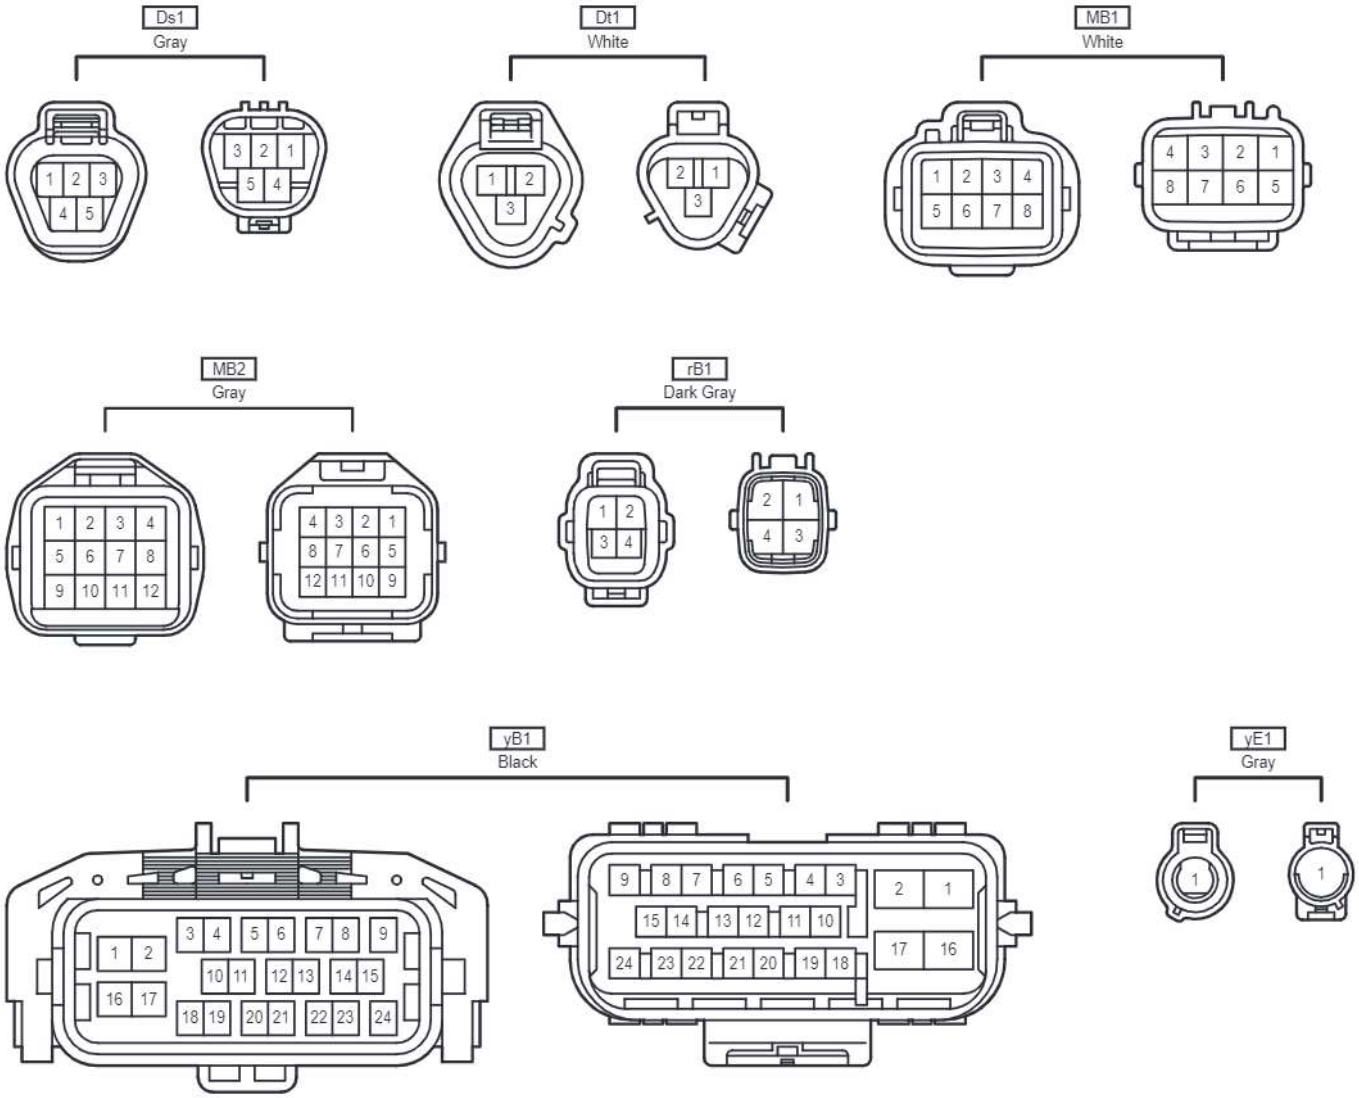

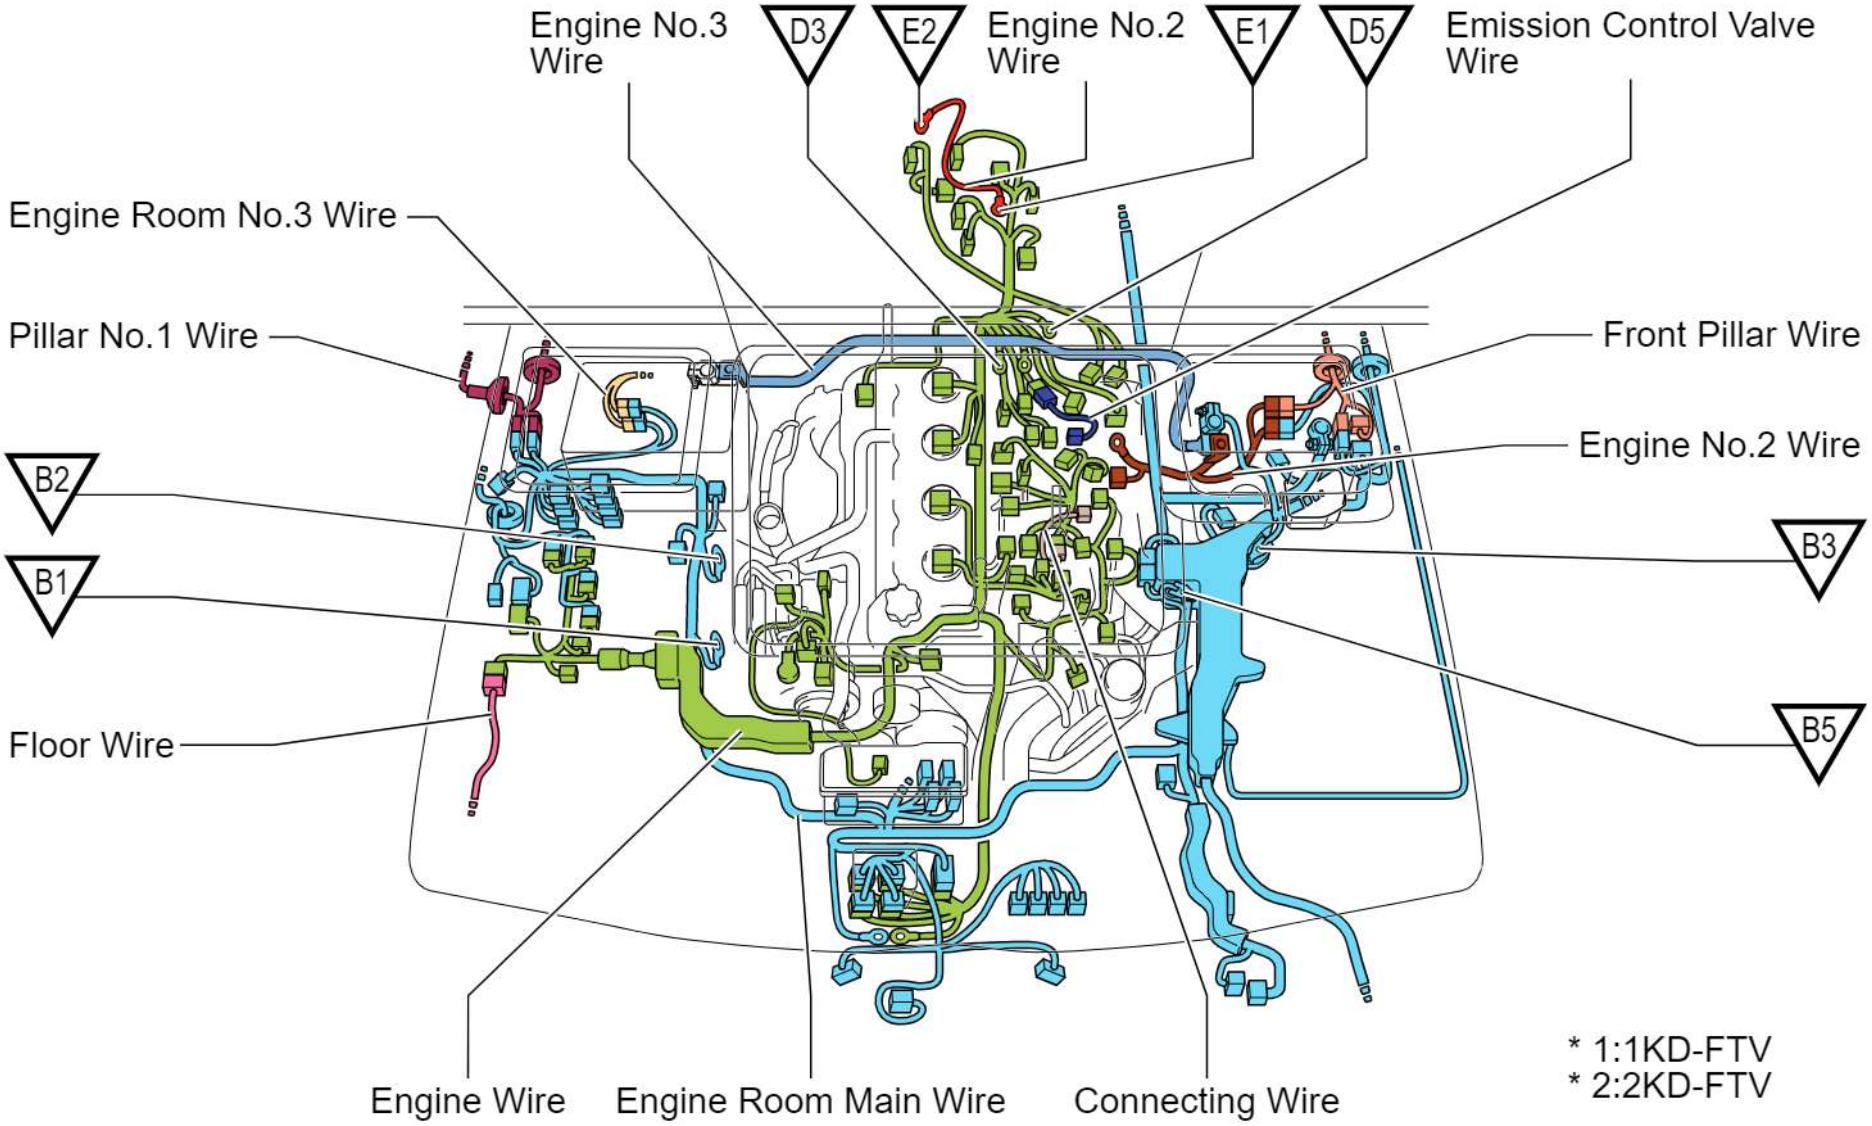
Engine No.3 Wire
D3
E2
Engine No.2 Wire
E1
D5
Emission Control Valve Wire
Engine Room No.3 Wire
Pillar No.1 Wire
Front Pillar Wire
Engine No.2 Wire
B2
B1
B3
B5
Floor Wire
Engine Wire
Engine Room Main Wire
Connecting Wire
* 1:1KD-FTV
* 2:2KD-FTV

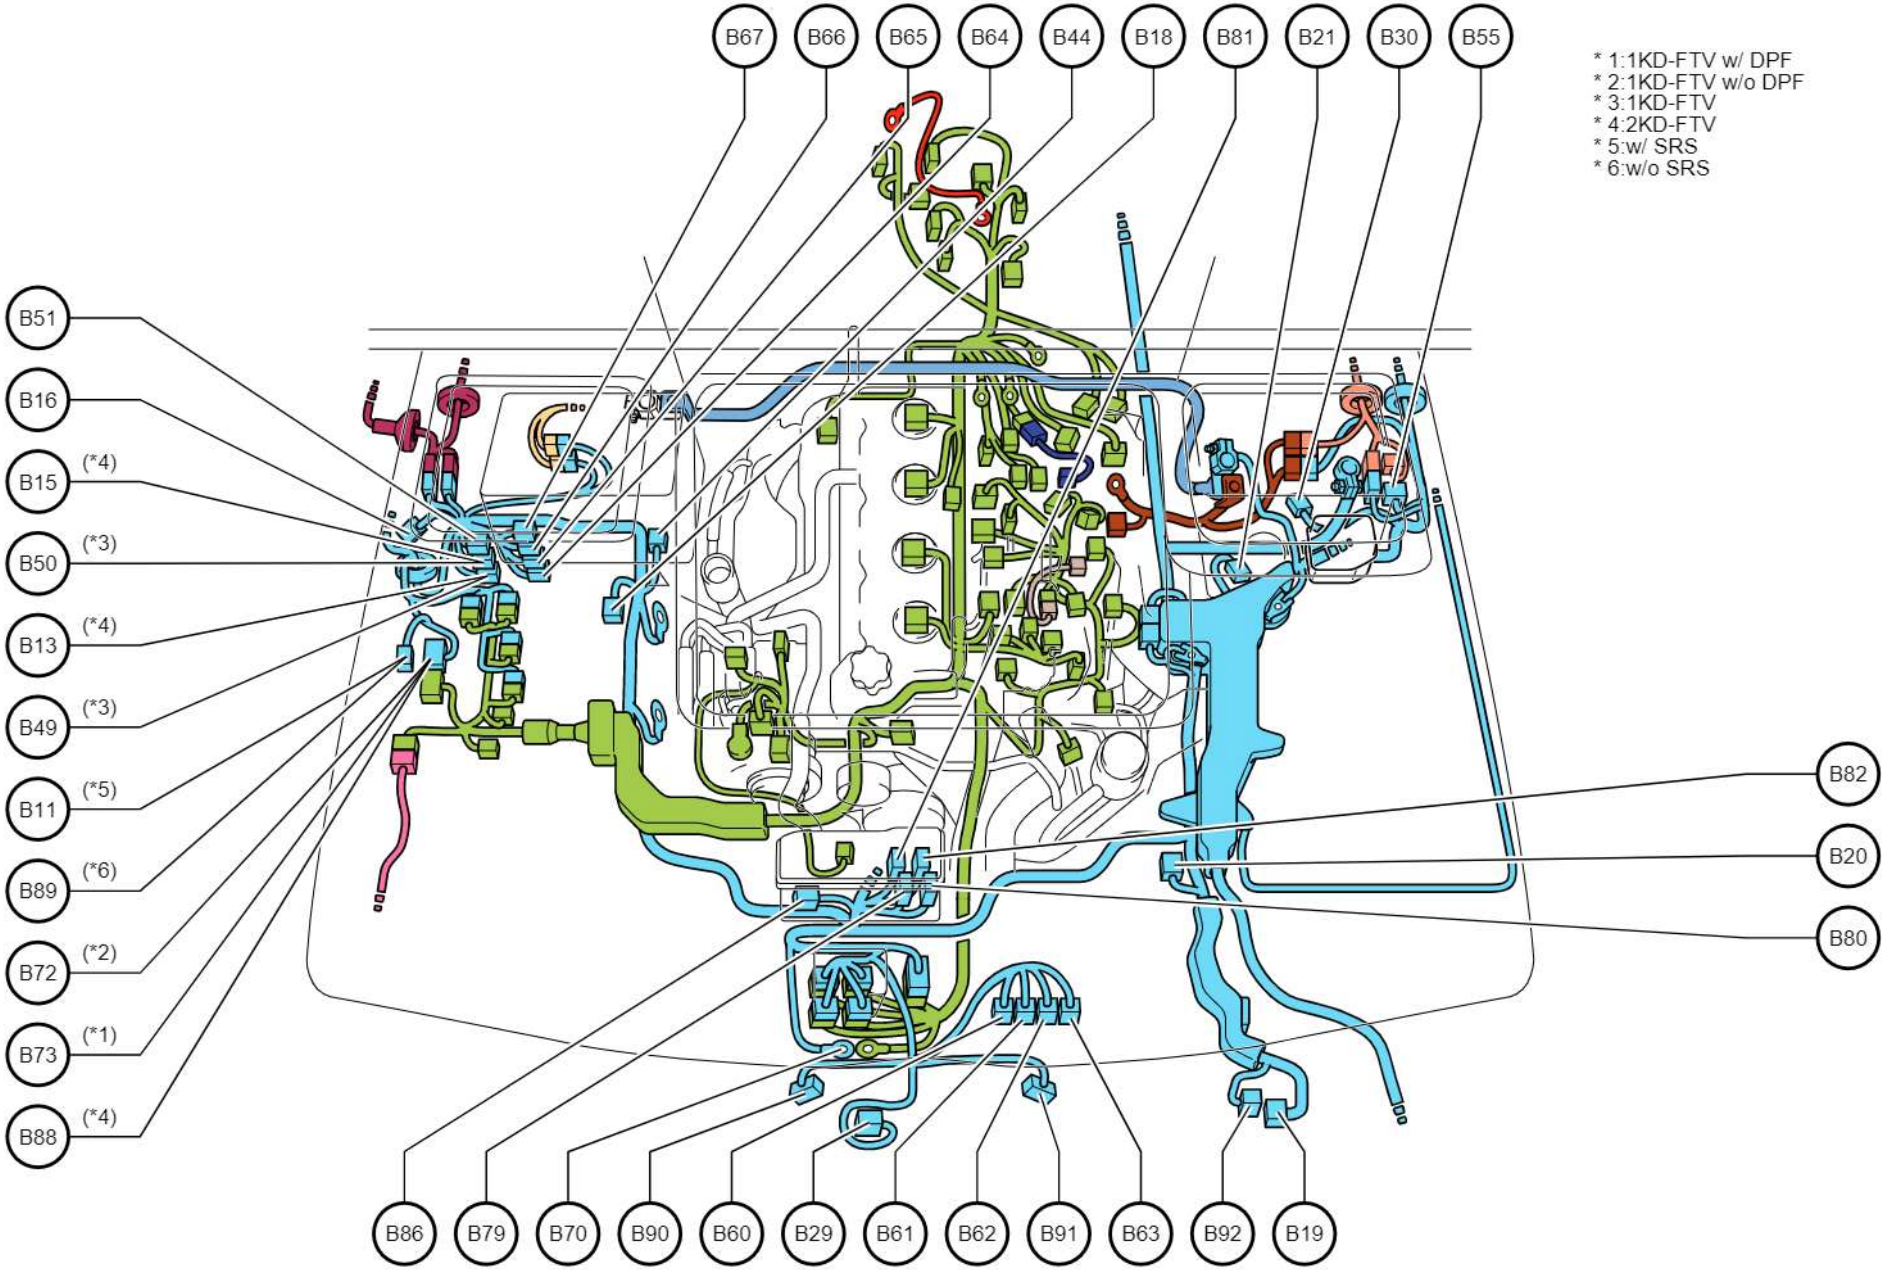

B67
B66
B65
B64
B44
B18
B81
B21
B30
B55
* 1:1KD-FTV w/ DPF
* 2:1KD-FTV w/o DPF
* 3:1KD-FTV
* 4:2KD-FTV
* 5:w/ SRS
* 6:w/o SRS
B51
B16
B15
(*4)
B50
(*3)
B13
(*4)
B49
(*3)
B11
(*5)
B89
(*6)
B72
(*2)
B73
(*1)
B88
(*4)
B82
B20
B80
B86
B79
B70
B90
B60
B29
B61
B62
B91
B63
B92
B19

B 11 Front Seat Inner Belt (Driver's Side)
B 13 Injector Driver (EDU)
B 15 Injector Driver (EDU)
B 16 A/C Magnetic Valve (Rear A/C)
B 18 Speed Sensor (Front RH)
B 19 Skid Control ECU with Actuator
B 20 Speed Sensor (Front LH)
B 21 Fuel Filter Warning SW
B 29 Water Temp. Sensor (Radiator)
B 30 Fuel Sedimentary Level Warning SW
B 44 Option Connector (TVSS Siren)
B 49 Injector Driver (EDU)
B 50 Injector Driver (EDU)
B 51 Injector Driver (EDU)
B 55 Slide Door Control Junction (Male LH)
B 60 Injector Driver (EDU)
B 61 Injector Driver (EDU)
B 62 Injector Driver (EDU)
B 63 Injector Driver (EDU)
B 64 Glow Plug Controller
B 65 Glow Plug Controller
B 66 Glow Plug Controller
B 67 Glow Plug Controller
B 70 Connector Holder NO.2
B 72 Engine ECU
B 73 Engine ECU
B 79 Junction Connector
B 80 Junction Connector
B 81 Junction Connector
B 82 Junction Connector
B 86 Junction Connector
B 88 Engine ECU
B 89 Short Pin (Seat Belt SW)
B 90 Cooling Fan Motor (No.1)
B 91 Cooling Fan Motor (No.2)
B 92 Brake Actuator Assembly


B11
White



B13
Black

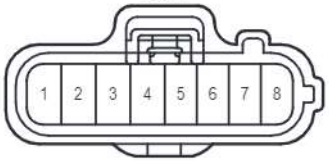

B15
Dark Gray

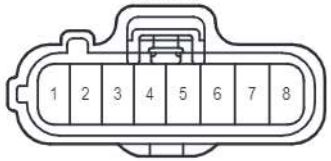


B16
Gray



B18
Black



B19
Black

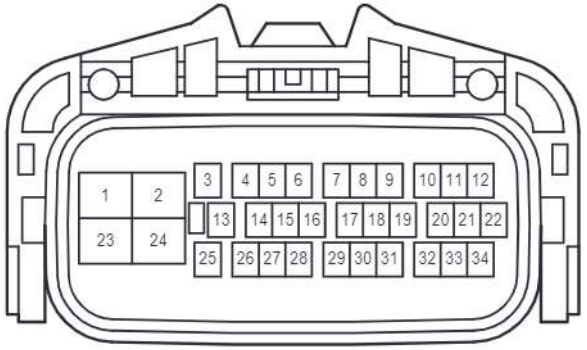

B20
Gray



B21
Black



B29
Black



B30
Gray



B44
Gray




B49
Black



B50
White



B51
Gray

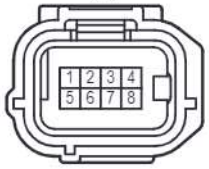

B55
White



B60
Dark Gray



B61
Gray



B62
White




B63
Blue



B64
White




B65
Gray




B66
Dark Gray




B67
Black




B72
Black

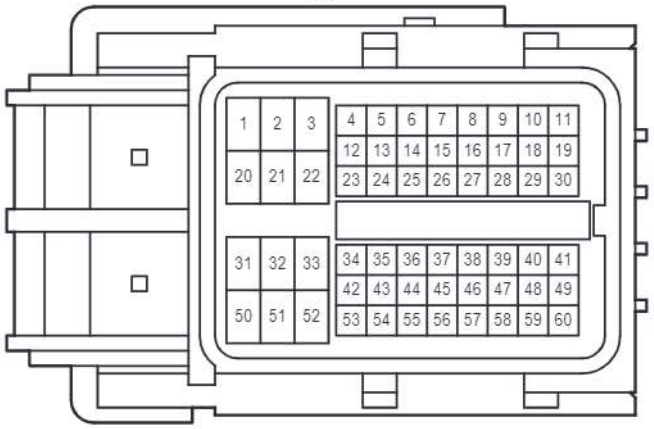


B73
Black

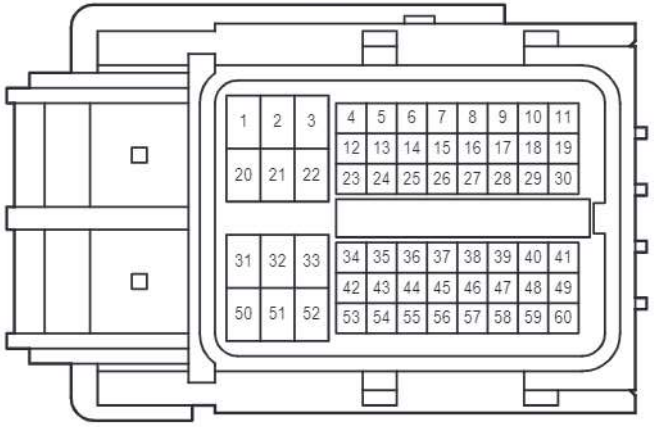


B79
Black

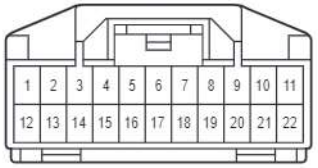


B80
White

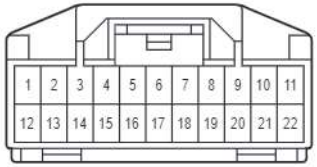


B81
Black




B82
Black



B86
White

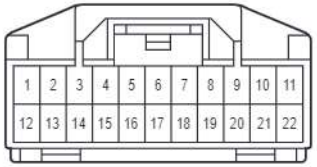


B88
Black

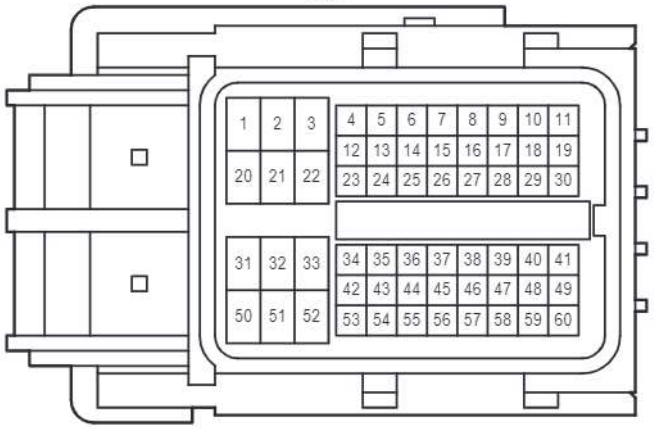


B89
White




B90
Black

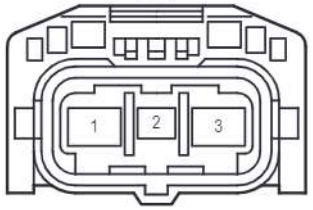


B91
Black

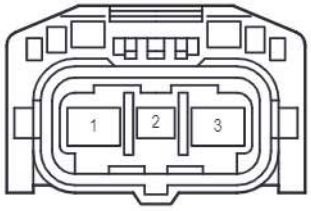


B92
Black

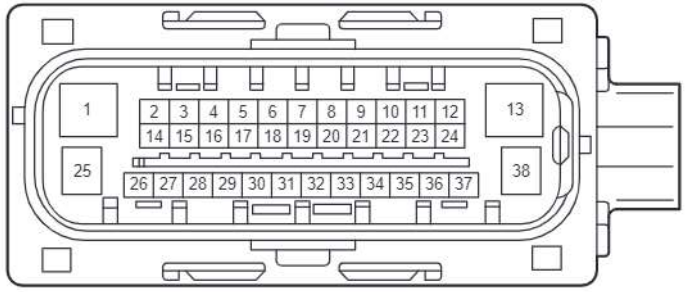

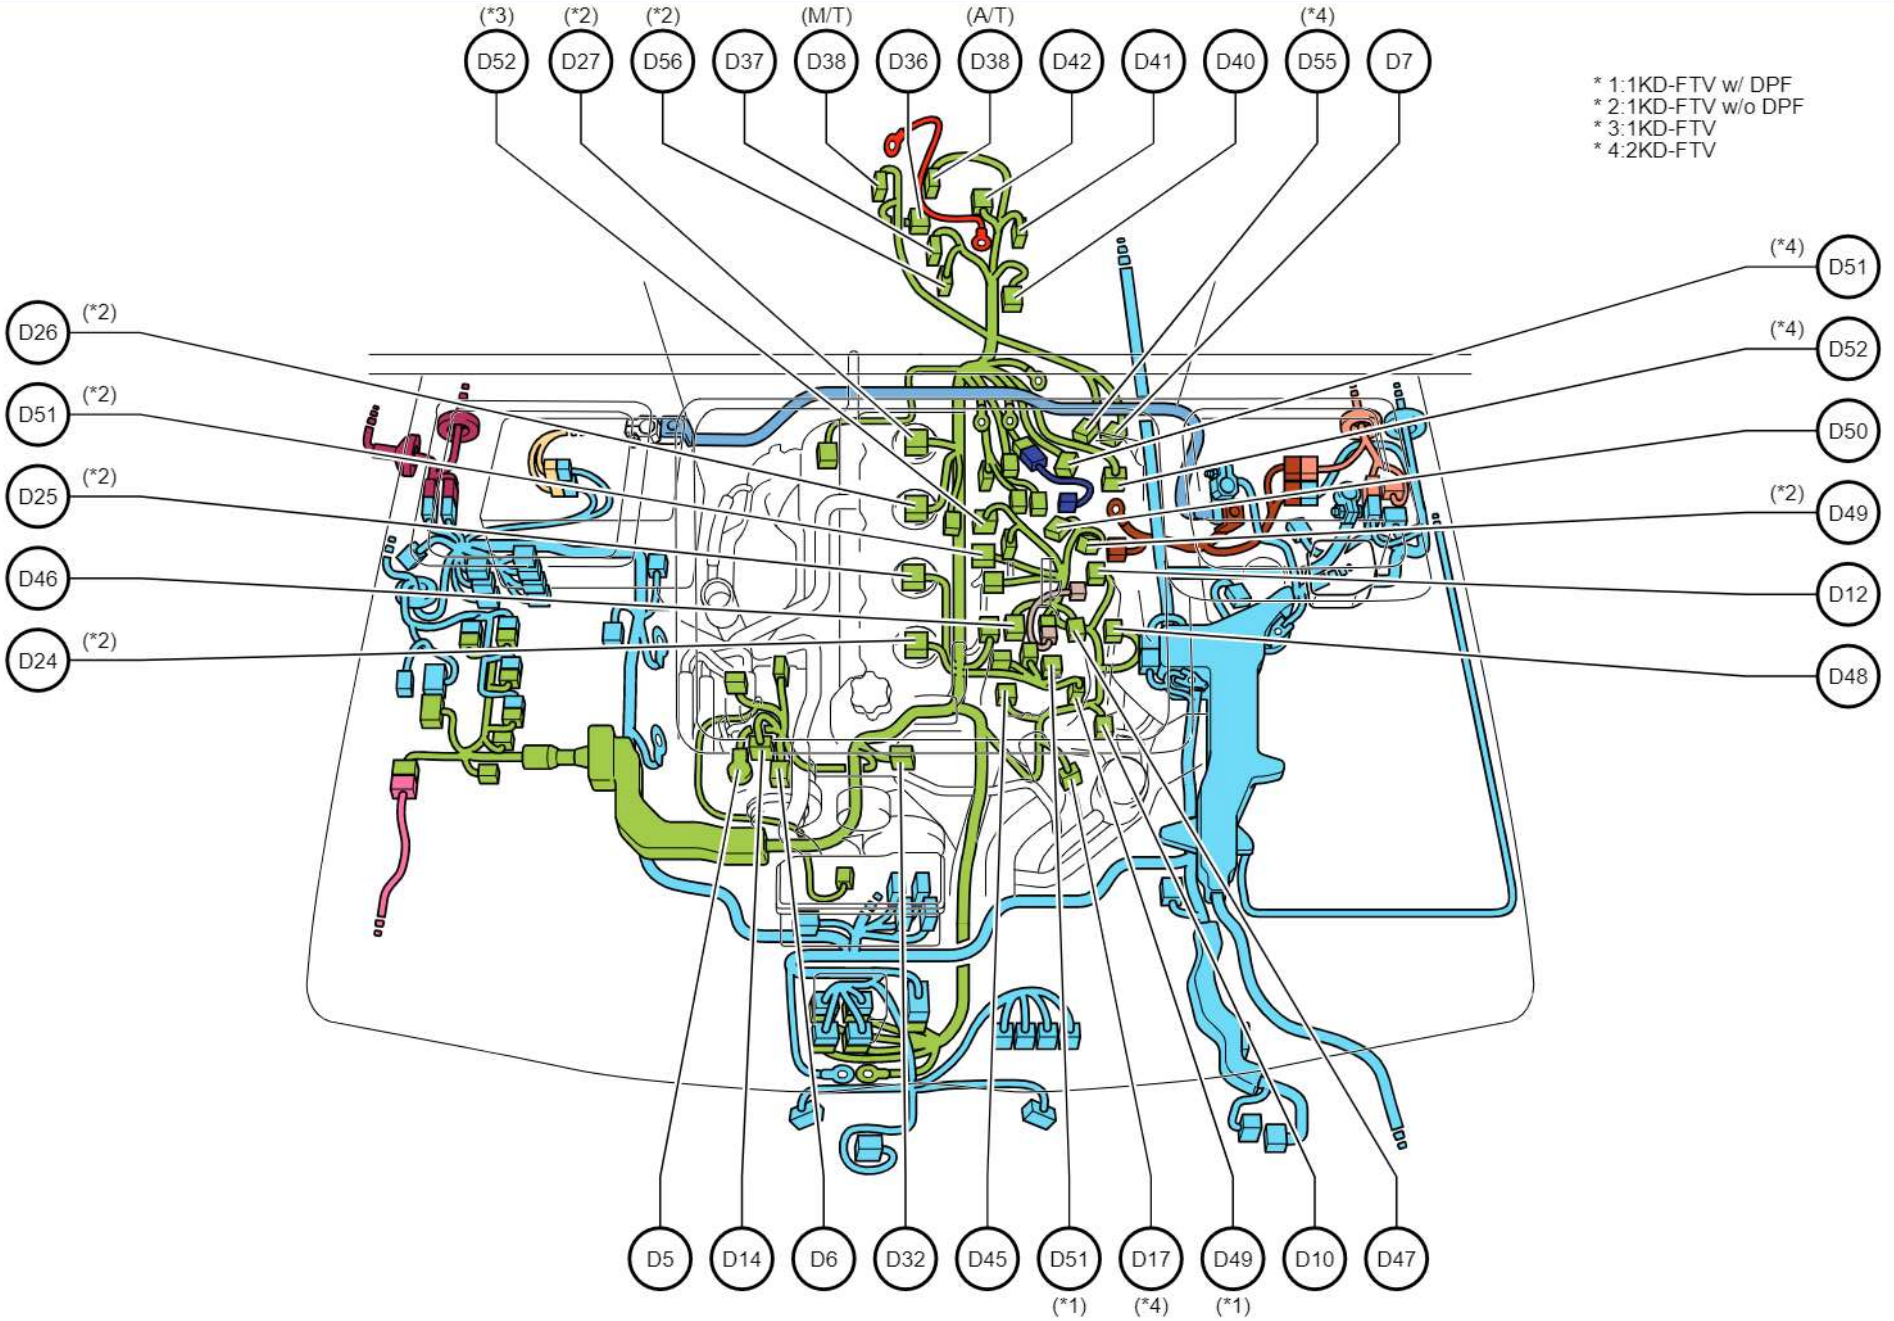
(*3) D52
(*2) D27
(*2) D56
D37
(M/T) D38
D36
(A/T) D38
D42
D41
D40
(*4) D55
D7
* 1:1KD-FTV w/ DPF
* 2:1KD-FTV w/o DPF
* 3:1KD-FTV
* 4:2KD-FTV
(*2) D26
(*2) D51
(*2) D25
D46
(*2) D24
(*4) D51
(*4) D52
D50
(*2) D49
D12
D48
D5
D14
D6
D32
D45
D51 (*1)
D17 (*4)
D49 (*1)
D10
D47

D	5	Alternator
D	6	Alternator
D	7	Engine Oil Pressure SW
D	10	Camshaft Position Sensor
D	12	Engine Oil Level Sensor
D	14	A/C Compressor
D	17	Crankshaft Position Sensor
D	24	Fuel Injector (No.1)
D	25	Fuel Injector (No.2)
D	26	Fuel Injector (No.3)
D	27	Fuel Injector (No.4)
D	32	Water Temp. Sensor (Engine Coolant)
D	36	Back-Up Lamp SW
D	37	Park/Neutral Position SW
D	37	Park/Neutral Position SW
D	38	Speed Sensor
D	40	Transmission Revolution Sensor (Input)
D	41	ECT Solenoid
D	42	Transmission Revolution Sensor (Output)
D	45	Fuel Pressure Sensor
D	46	Fuel Temp. Sensor
D	46	Fuel Temp. Sensor
D	47	Suction Control Valve
D	48	Throttle Body Assembly
D	49	Inlet Air Temp. Sensor (Intake Manifold)
D	50	Throttle Body Assembly
D	51	Turbo Pressure Sensor
D	52	EGR Valve Position Sensor
D	55	VRV (EGR)
D	56	A/T Fluid Temp. Sensor

D5



(Before Sep. 2007 Production/From Sep. 2007 Production)

D6
Green



D7
Black



D10
Black



D12
White




D14
Gray




D17
Gray




D24
Brown




D25
Gray



D26
Brown



D27
Gray




D32
Black



D36
Gray




D37
Gray

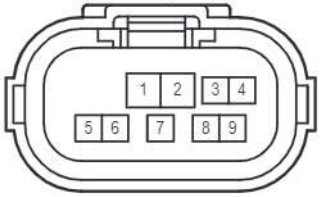

(Before Dec. 2013 Production)

D37
Black

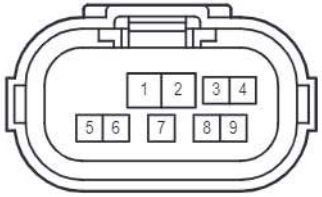

D38
Black



D40
Black



D41
Gray




(From Dec. 2013 Production)

D42
Black



D45
Black



D46
Gray



D47
Gray



D48
Black



(1KD-FTV From Dec. 2013 Production, 2KD-FTV From Dec. 2013 Production)

D49
Gray



D50
Black



D51
Black



D52
Black




D55
Brown



D56
White

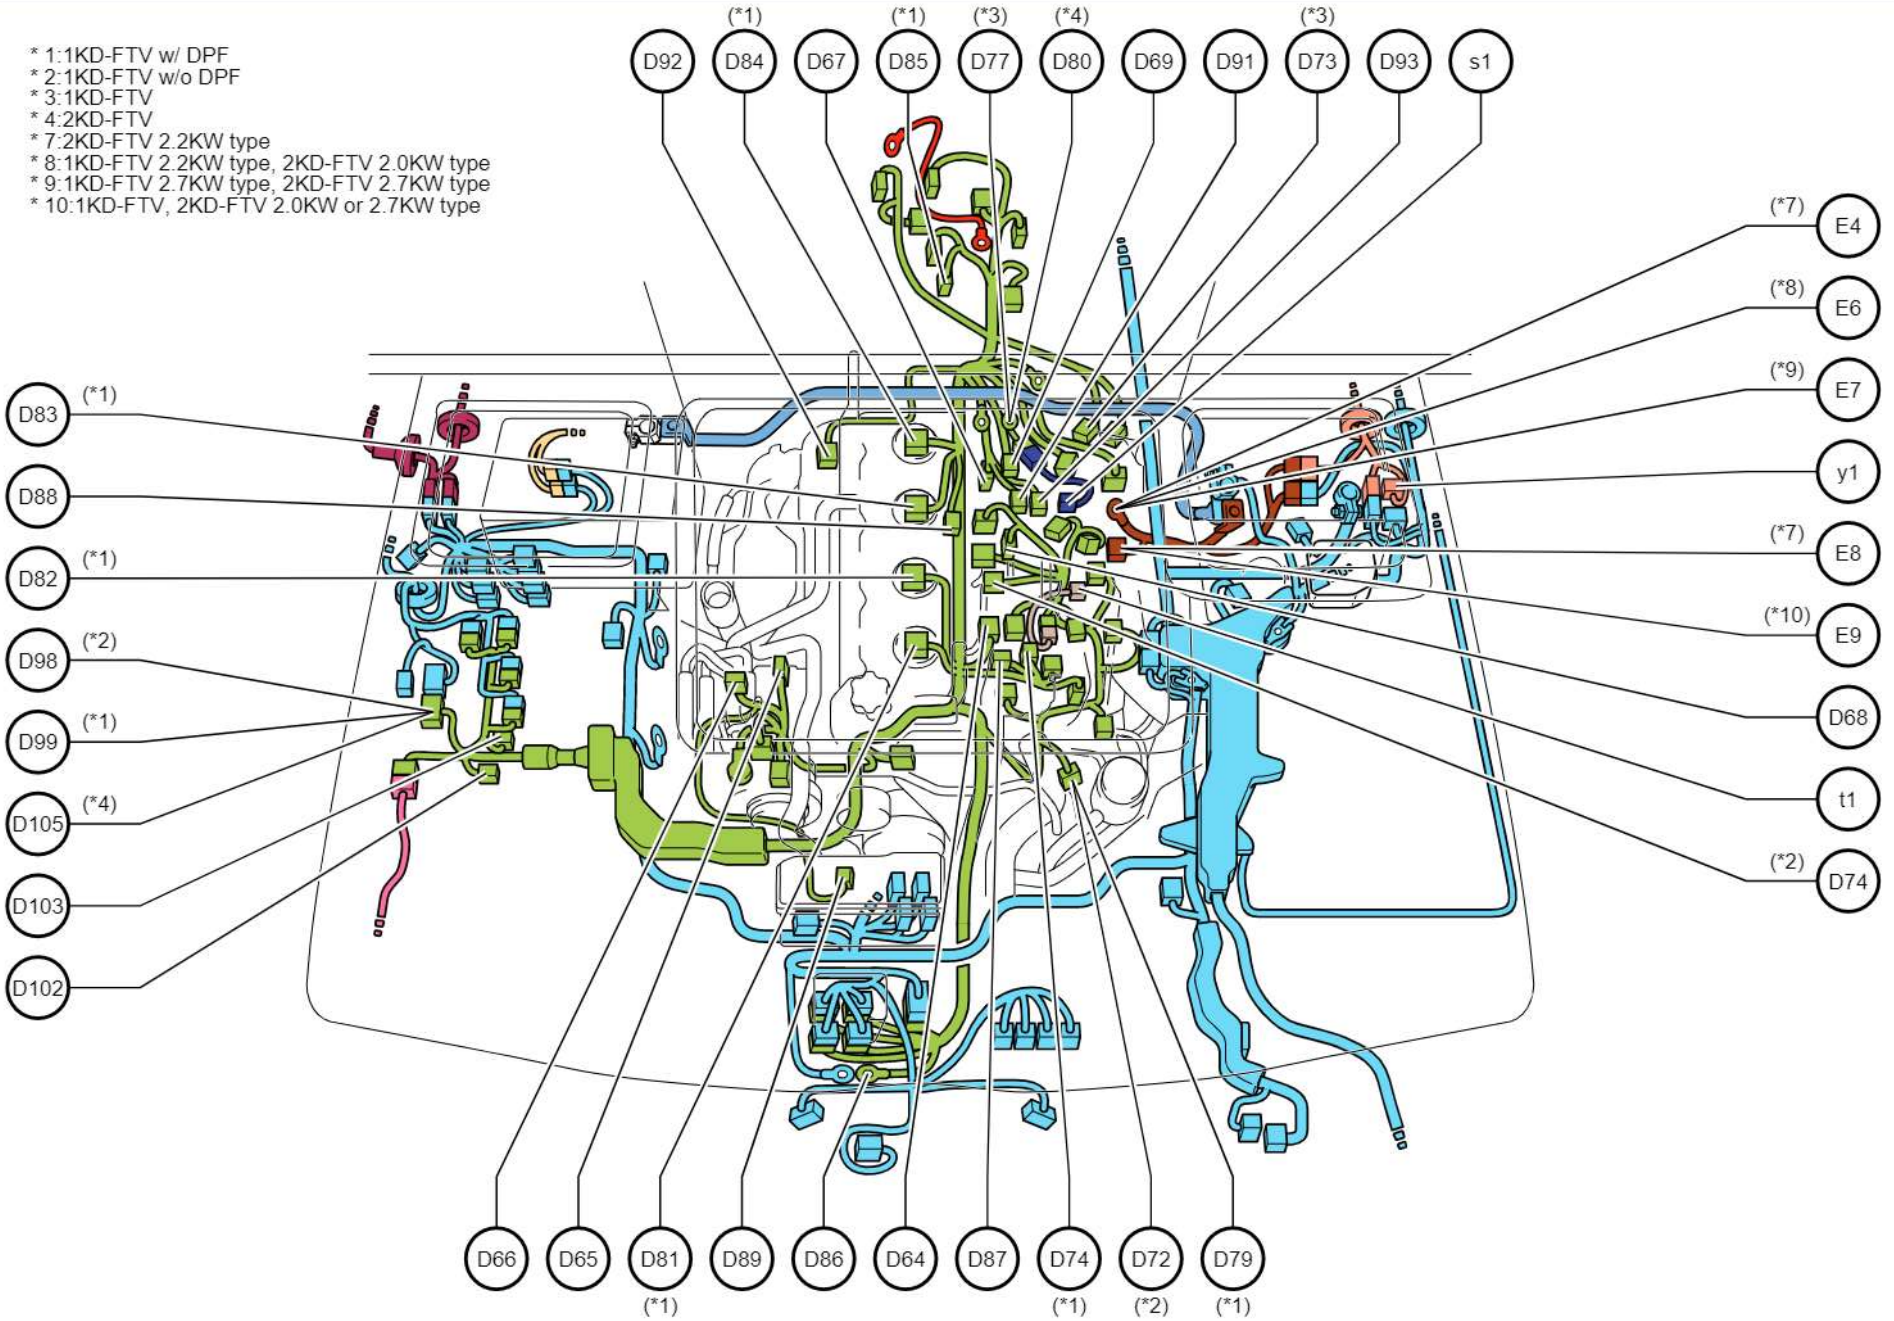


* 1:1KD-FTV w/ DPF
* 2:1KD-FTV w/o DPF
* 3:1KD-FTV
* 4:2KD-FTV
* 7:2KD-FTV 2.2KW type
* 8:1KD-FTV 2.2KW type, 2KD-FTV 2.0KW type
* 9:1KD-FTV 2.7KW type, 2KD-FTV 2.7KW type
* 10:1KD-FTV, 2KD-FTV 2.0KW or 2.7KW type
D92
(*1) D84
D67
(*1) D85
(*3) D77
(*4) D80
D69
D91
(*3) D73
D93
s1
(*7) E4
(*8) E6
(*9) E7
y1
(*7) E8
(*10) E9
D68
t1
(*2) D74
(*1) D83
D88
(*1) D82
(*2) D98
(*1) D99
(*4) D105
D103
D102
D66
D65
(*1) D81
D89
D86
D64
D87
(*1) D74
(*2) D72
(*1) D79

D 64 Pressure Discharge Valve
D 65 Turbocharger Variable Nozzle Motor Assembly
D 66 Turbocharger Variable Nozzle Motor Assembly
D 67 Swirl Control Valve
D 68 VSV (EGR Cut)
D 69 Fuel Pressure Sensor
D 72 Crankshaft Position Sensor
D 73 VRV (EGR)
D 74 VSV (EGR)
D 77 Glow Plug
D 79 Crankshaft Position Sensor
D 80 Glow Plug
D 81 Fuel Injector Assembly (No.1)
D 82 Fuel Injector Assembly (No.2)
D 83 Fuel Injector Assembly (No.3)
D 84 Fuel Injector Assembly (No.4)
D 85 A/T Fluid Temp. Sensor
D 86 Connector Holder NO.2
D 87 Pressure Discharge Valve
D 88 Glow Plug
D 89 Oil Pressure Switching Valve Assembly
D 91 Suction Control Valve Assembly
D 92 Exhaust Fuel Addition Injector Assembly
D 93 Oil Pressure Sender Gauge Assembly
D 98 Engine ECU
D 99 Engine ECU
D 102 Junction Connector
D 103 Junction Connector
D 105 Engine ECU

E 4 Starter
E 6 Starter
E 7 Starter
E 8 Starter
E 9 Starter

s 1 Electric EGR Control Valve Assembly


t 1 Diesel Throttle Body Assembly

y 1 Slide Door Control Junction (Male LH)

D64
Gray



D65
Black

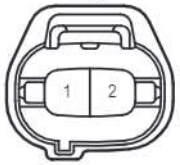

D66
Black



D67
Blue



D68
Brown



D69
Black



D72
Dark Gray



D73
Black



D74
Blue



D77




D79
Dark Gray




D80




D81
Black

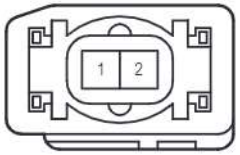


D82
Gray

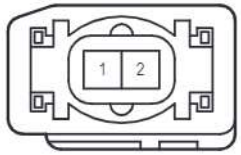

D83
Black

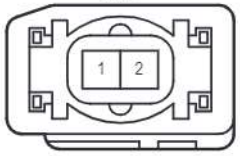

D84
Gray

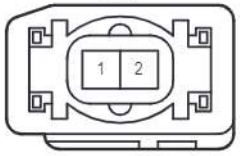


D85
Black



D86



D87
Gray

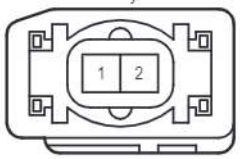

D88
Black



D89
Black




D91
Brown




D92
Black



D98
Black

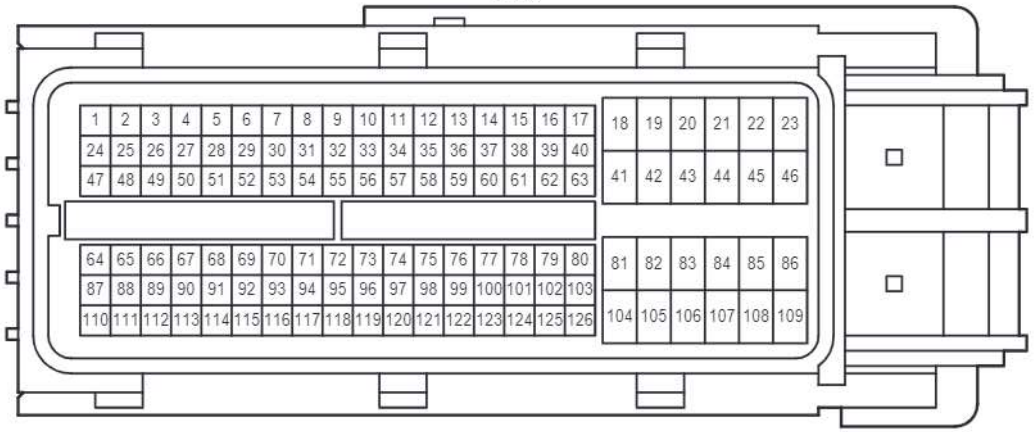

D99
Black

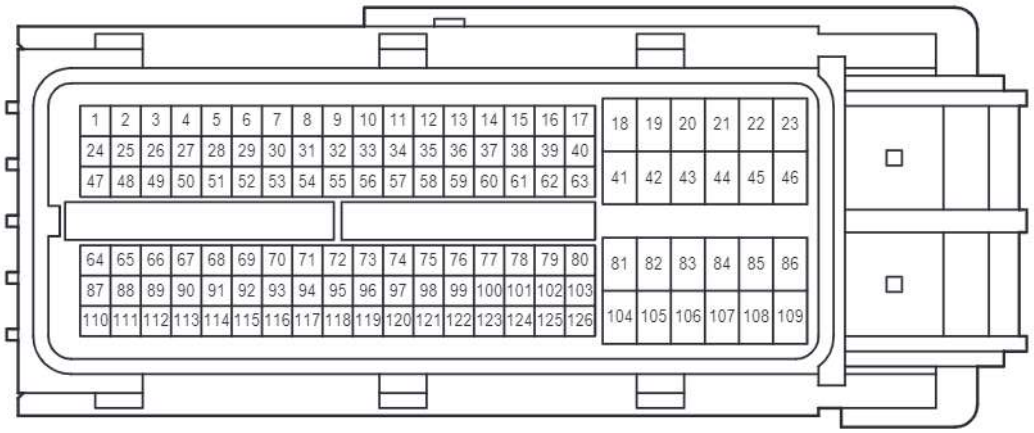


D102
Gray



D103
Gray



D105
Black

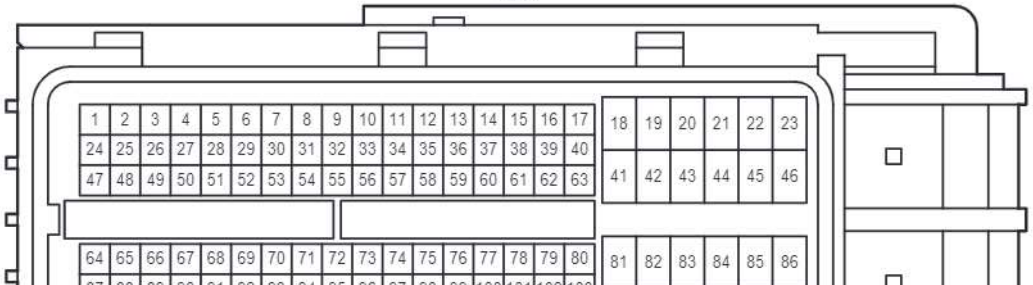

s1
Black





t1
Black





y1
White

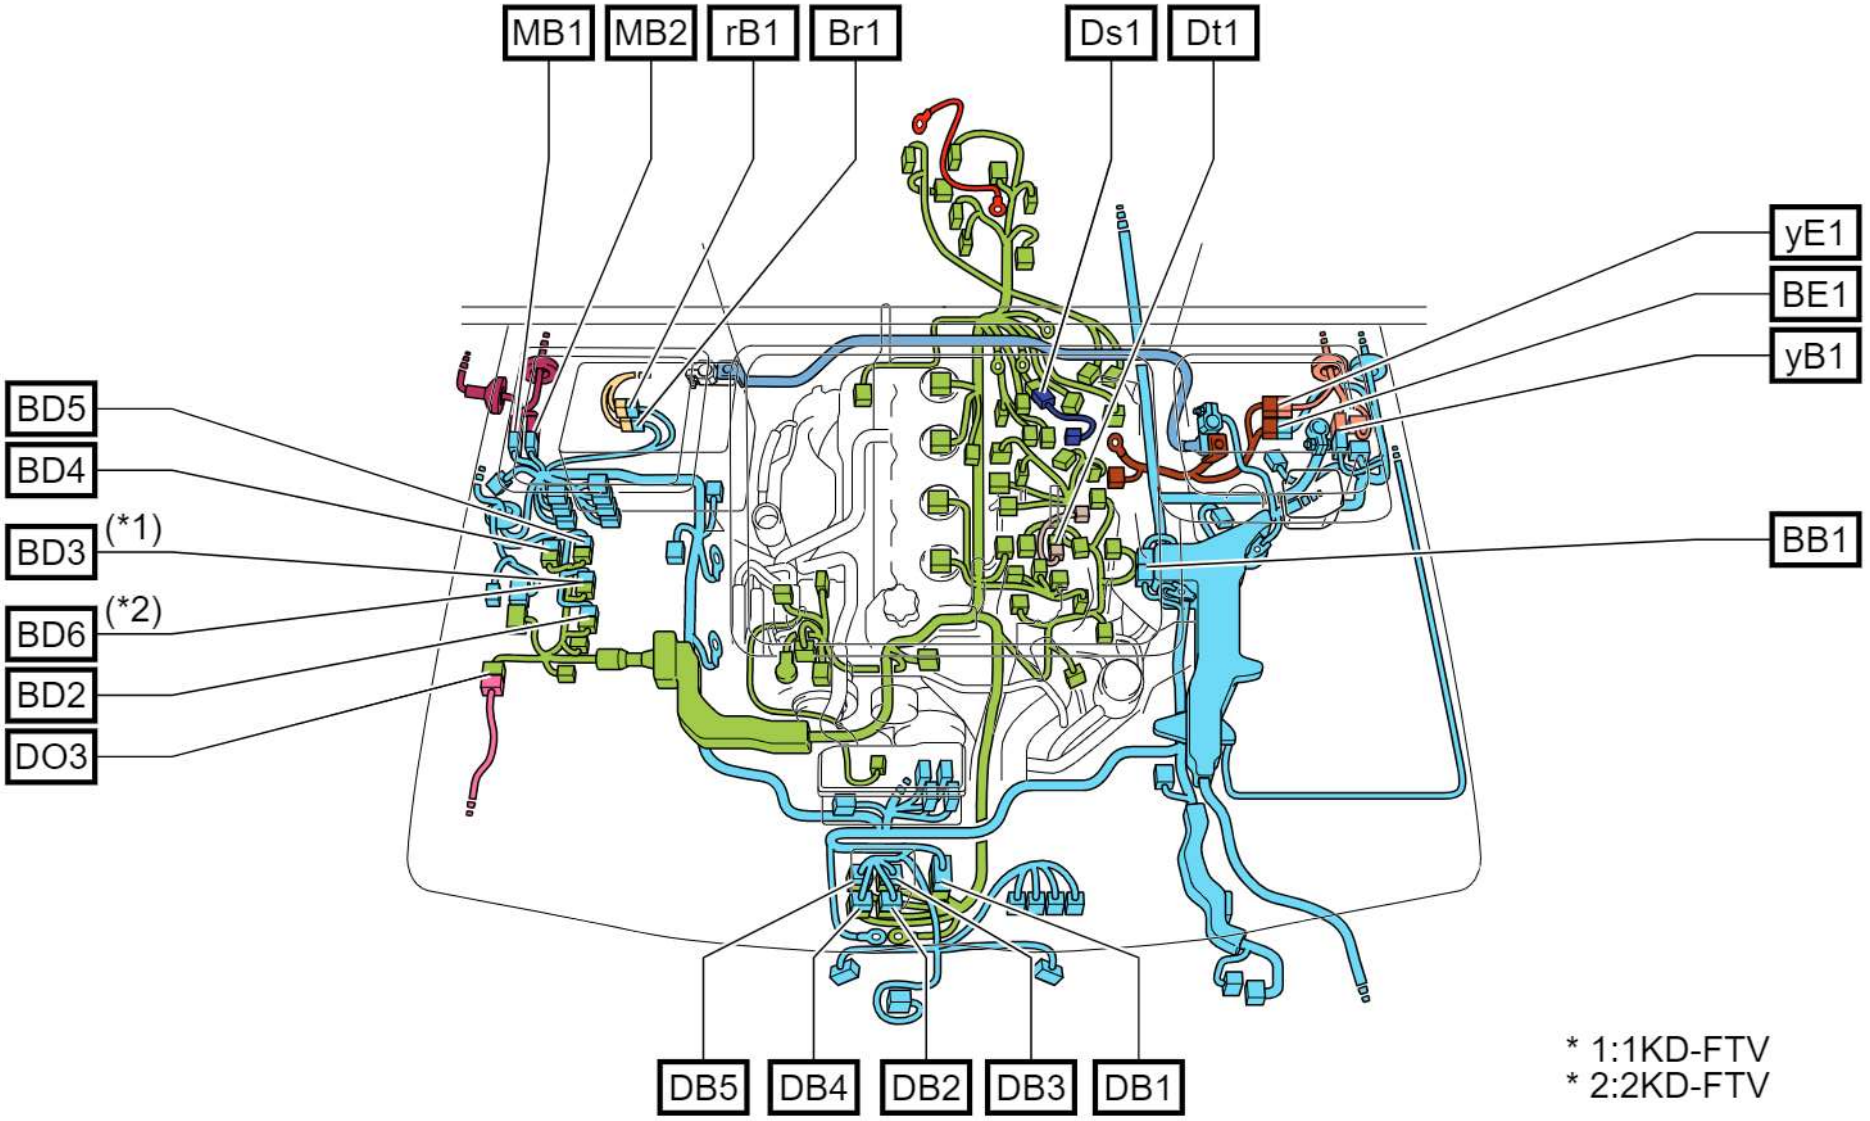




MB1
MB2
rB1
Br1
Ds1
Dt1
yE1
BE1
yB1
BD5
BD4
BD3
(*1)
BD6
(*2)
BD2
DO3
BB1
DB5
DB4
DB2
DB3
DB1
* 1:1KD-FTV
* 2:2KD-FTV

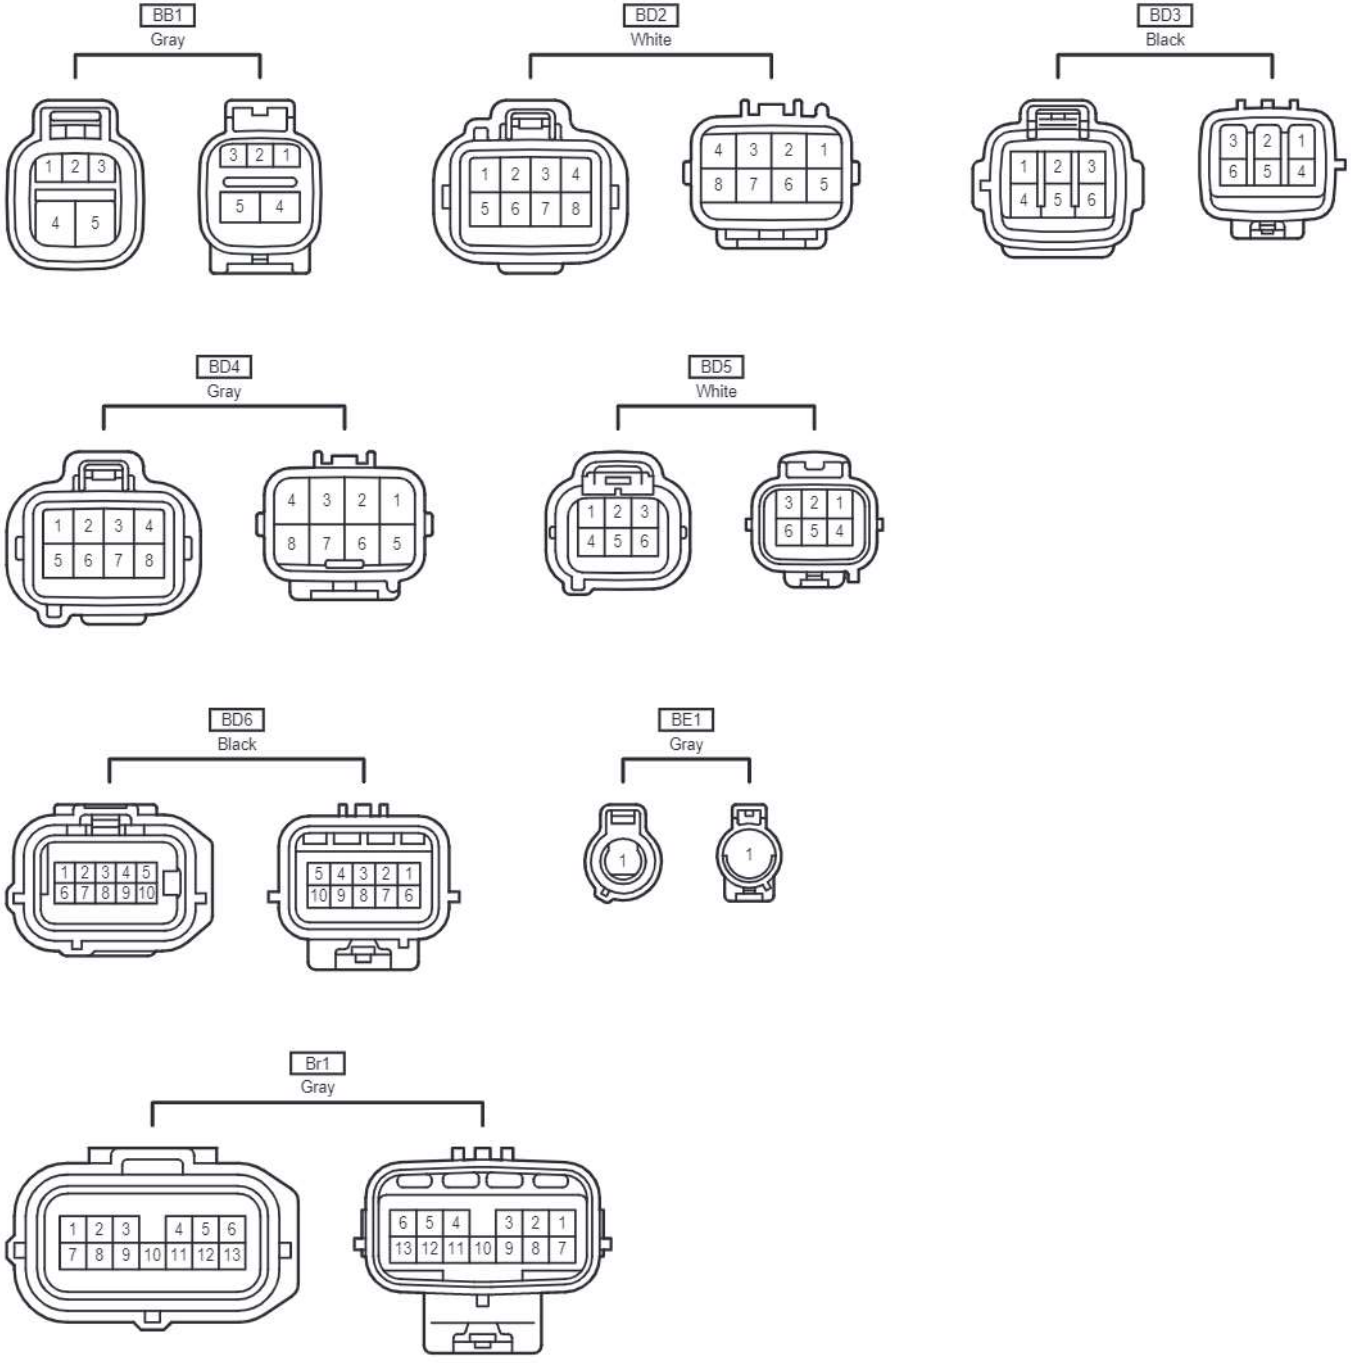

BB1
Gray
1 2 3
4 5
3 2 1
5 4
BD2
White
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
BD3
Black
1 2 3
4 5 6
3 2 1
6 5 4
BD4
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
BD5
White
1 2 3
4 5 6
3 2 1
6 5 4
BD6
Black
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6
BE1
Gray
1
1
Br1
Gray
1 2 3 4 5 6
7 8 9 10 11 12 13
6 5 4 3 2 1
13 12 11 10 9 8 7

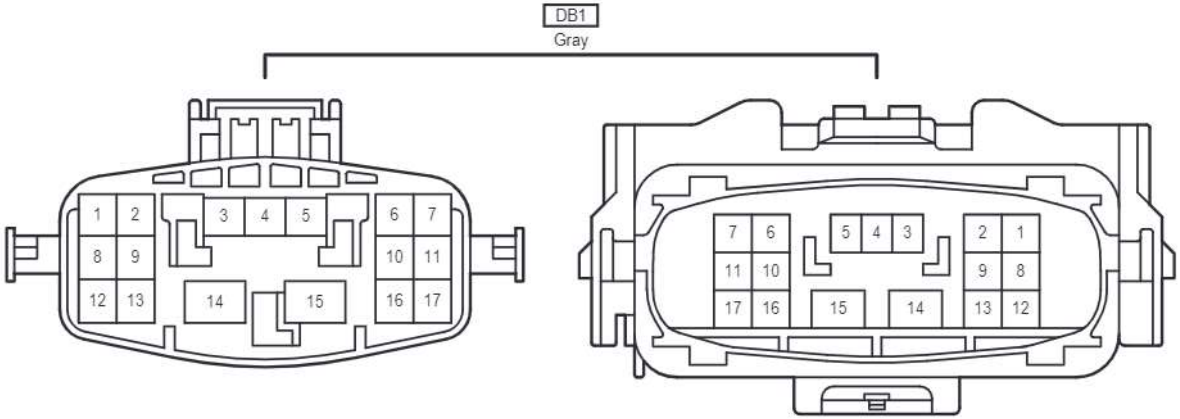

DB1
Gray
1 2 3 4 5 6 7
8 9 10 11
12 13 14 15 16 17
7 6 5 4 3 2 1
11 10 9 8
17 16 15 14 13 12

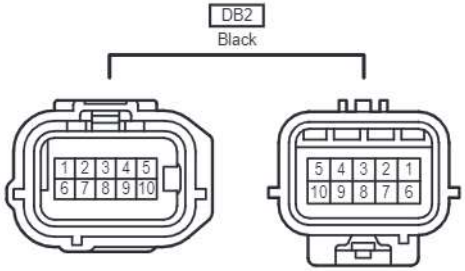
DB2
Black
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6

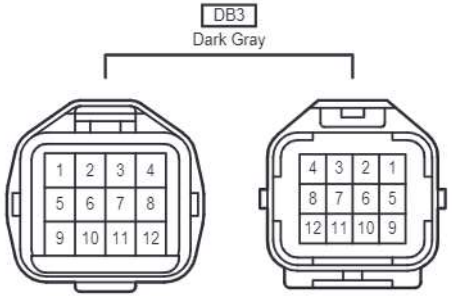

DB3
Dark Gray
1 2 3 4
5 6 7 8
9 10 11 12
4 3 2 1
8 7 6 5
12 11 10 9

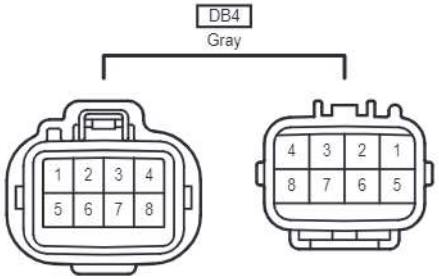

DB4
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5

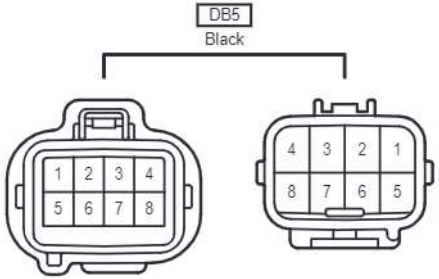
DB5
Black
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5

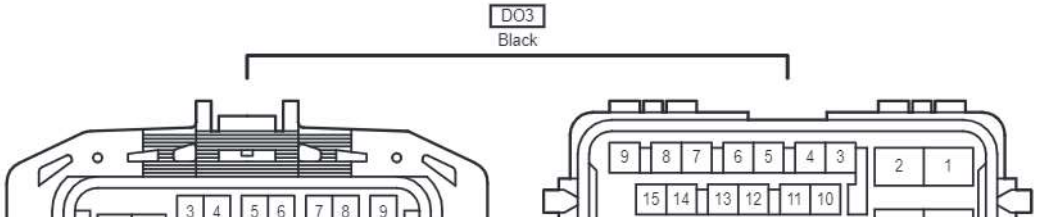
DO3
Black
9 8 7 6 5 4 3 2 1
15 14 13 12 11 10


Wire and Wire in Engine Compartment <RHD 1KD-FTV, 2KD-FTV>

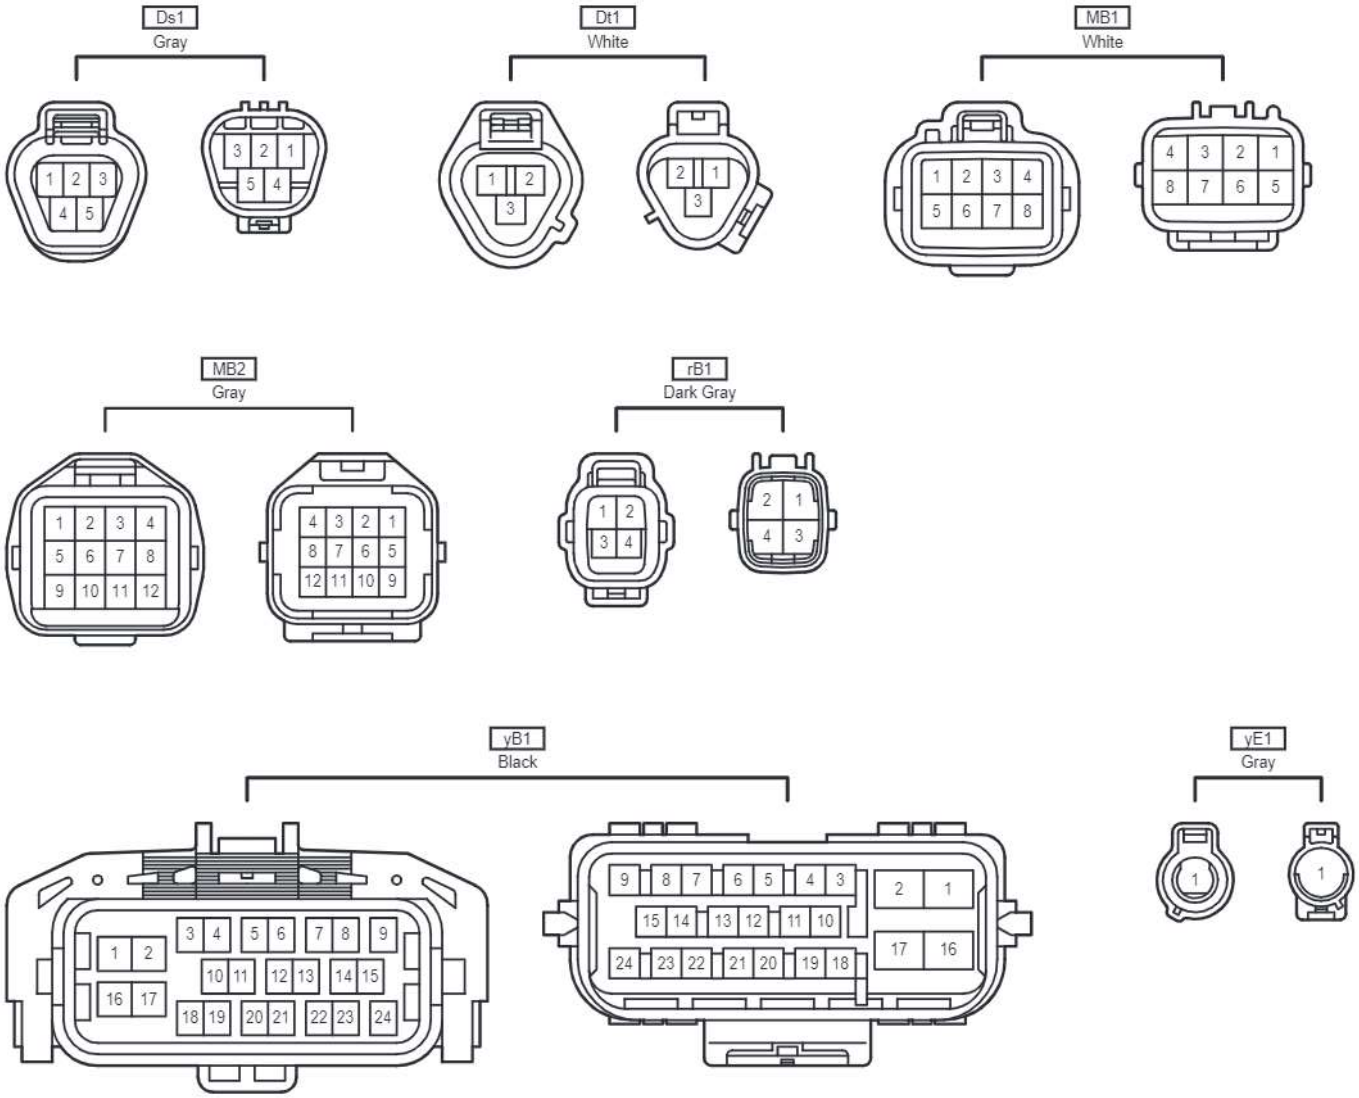

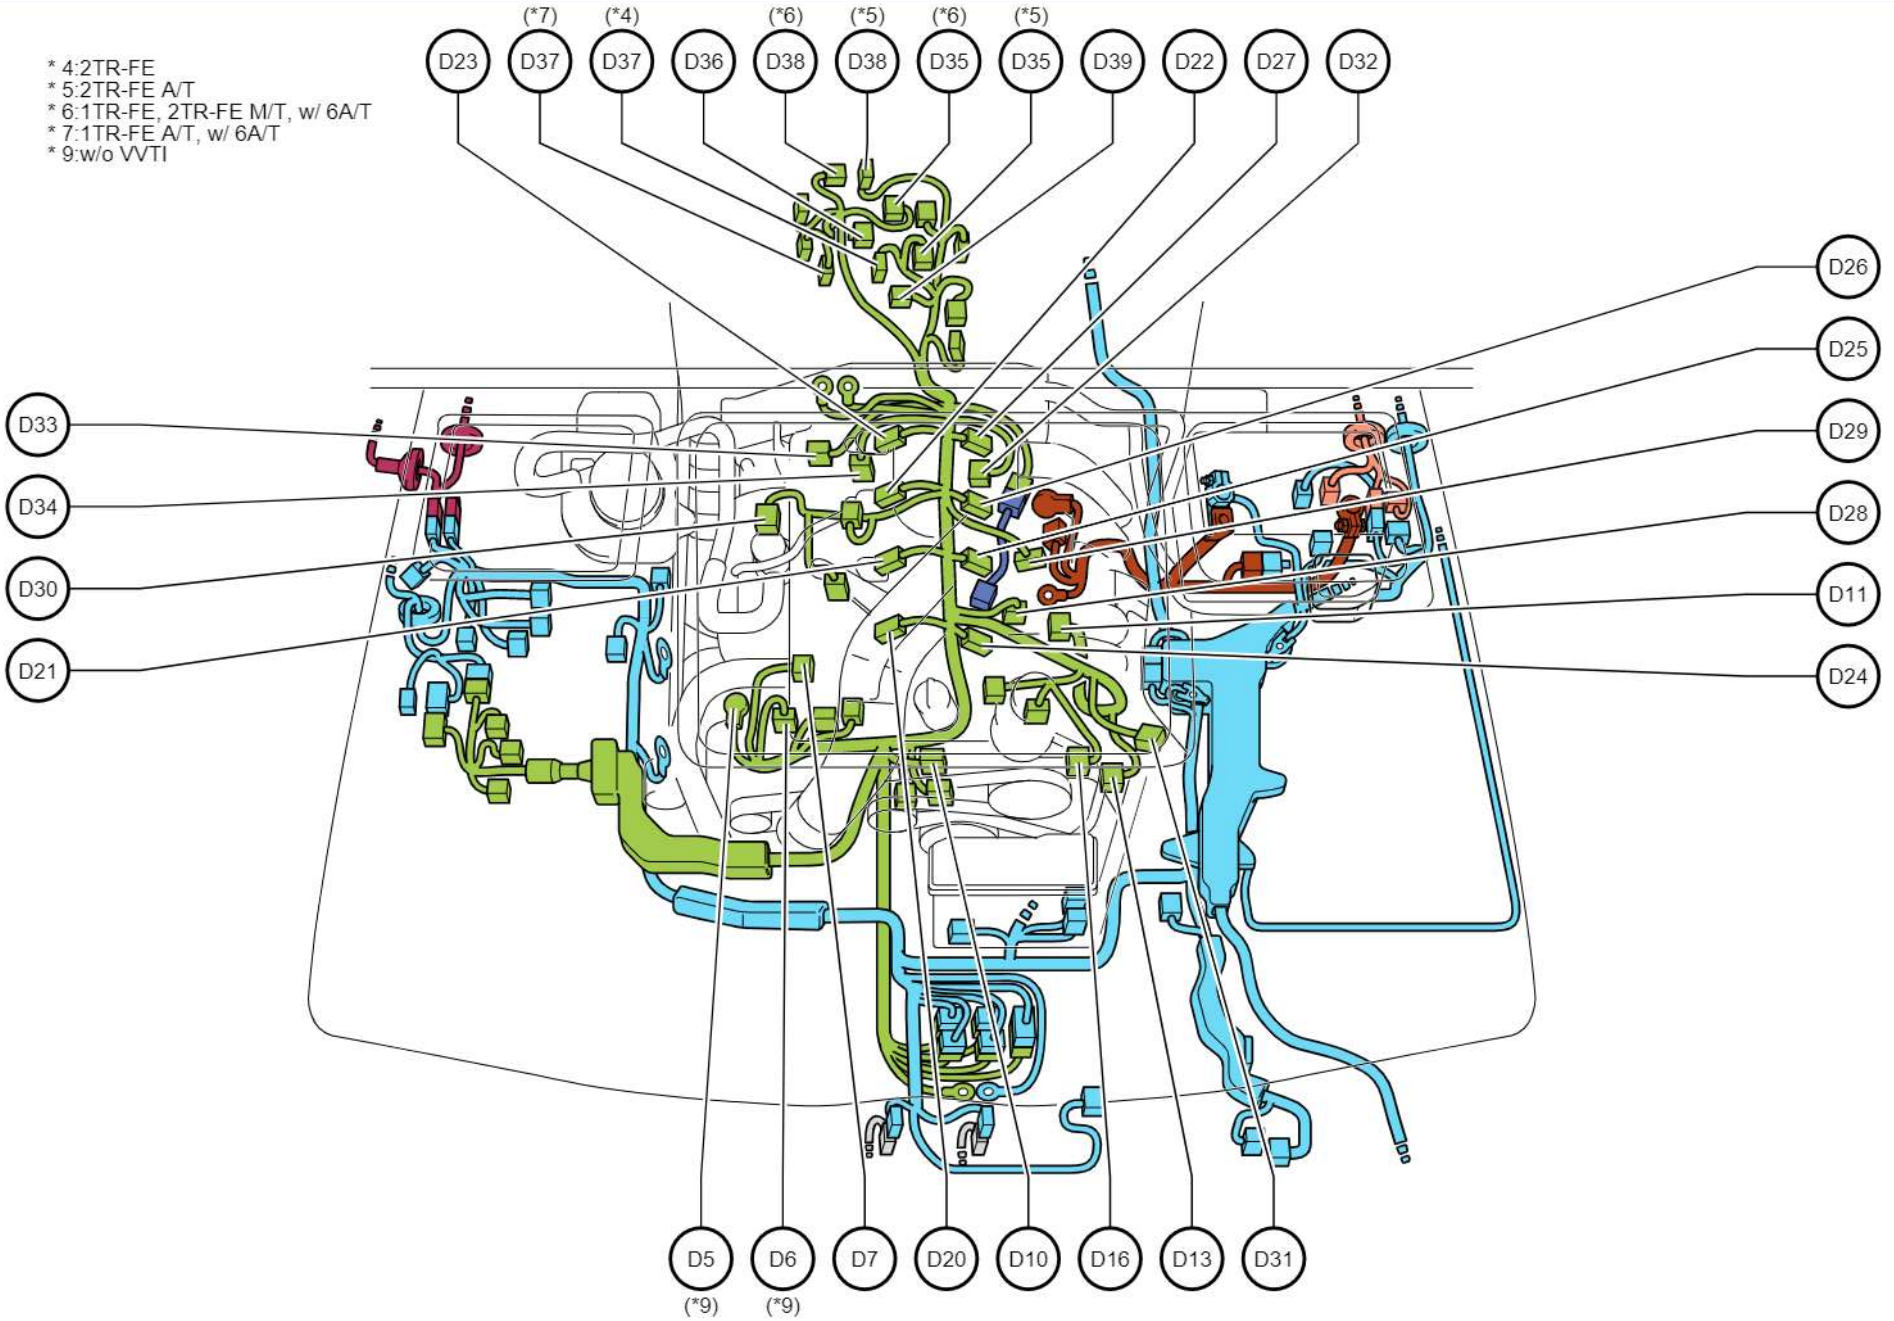
* 4:2TR-FE
* 5:2TR-FE A/T
* 6:1TR-FE, 2TR-FE M/T, w/ 6A/T
* 7:1TR-FE A/T, w/ 6A/T
* 9:w/o VVTI
D23
(*7)
D37
(*4)
D37
D36
(*6)
D38
(*5)
D38
(*6)
D35
(*5)
D35
D39
D22
D27
D32
D26
D25
D29
D28
D11
D24
D33
D34
D30
D21
D5
(*9)
D6
(*9)
D7
D20
D10
D16
D13
D31

D	5	Alternator
D	6	Alternator
D	7	Engine Oil Pressure SW
D	10	Camshaft Position Sensor
D	11	Engine Oil Level Sensor
D	13	A/C Compressor
D	16	Power Steering Oil Pressure SW
D	20	Ignition Coil (No.1)
D	21	Ignition Coil (No.2)
D	22	Ignition Coil (No.3)
D	23	Ignition Coil (No.4)
D	24	Fuel Injector (No.1)
D	25	Fuel Injector (No.2)
D	26	Fuel Injector (No.3)
D	27	Fuel Injector (No.4)
D	28	Purge VSV
D	29	Throttle Body Assembly
D	30	Air Switching Valve
D	31	Variable Resistor
D	32	Water Temp. Sensor (Engine Coolant)
D	33	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
D	34	Heated Oxygen Sensor (Bank 1 Sensor 1)
D	35	Heated Oxygen Sensor (Bank 1 Sensor 2)
D	36	Back-Up Lamp SW
D	37	Park/Neutral Position SW
D	38	Speed Sensor
D	39	A/T Fluid Temp. Sensor

D5



90980-09373/82675-26220

(Before Sep. 2007 Production/From Sep. 2007 Production)

D6
Green



90980-11964

D7
Black



90980-11363

D10
Black



90980-10947

D11
Gray



90980-11235

D13
Gray



90980-11156

(Before Dec. 2013 Production)

D13
Black



90980-11156


(From Dec. 2013 Production)

D16
Black




90980-11428

D20
Black




90980-11885

D21
Black




90980-11885

D22
Black




90980-11885

D23
Black




90980-11885

D24
Brown




90980-11875

D25
Gray




90980-11875

D26
Brown



90980-11875

D27
Gray




90980-11875

D28
Black



90980-11156

D29
Black

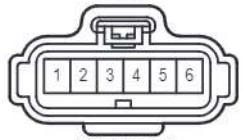

90980-11858

D30
Black



90980-11149

D31
Black



90980-10902

D32
Black



90980-10735

D33
Dark Gray



90980-10869

D34
Dark Gray



90980-10869

D35
Dark Gray




90980-11028

D39
Gray



90980-11162

* 3:1TR-FE
* 4:2TR-FE
* 8:w/ VVTI
* 9:w/o VVTI
* 10:w/ 6A/T
* 11:w/o VVTI Before Dec. 2016 Production
* 12:w/ VVTI, w/o VVTI From Dec. 2016 Production

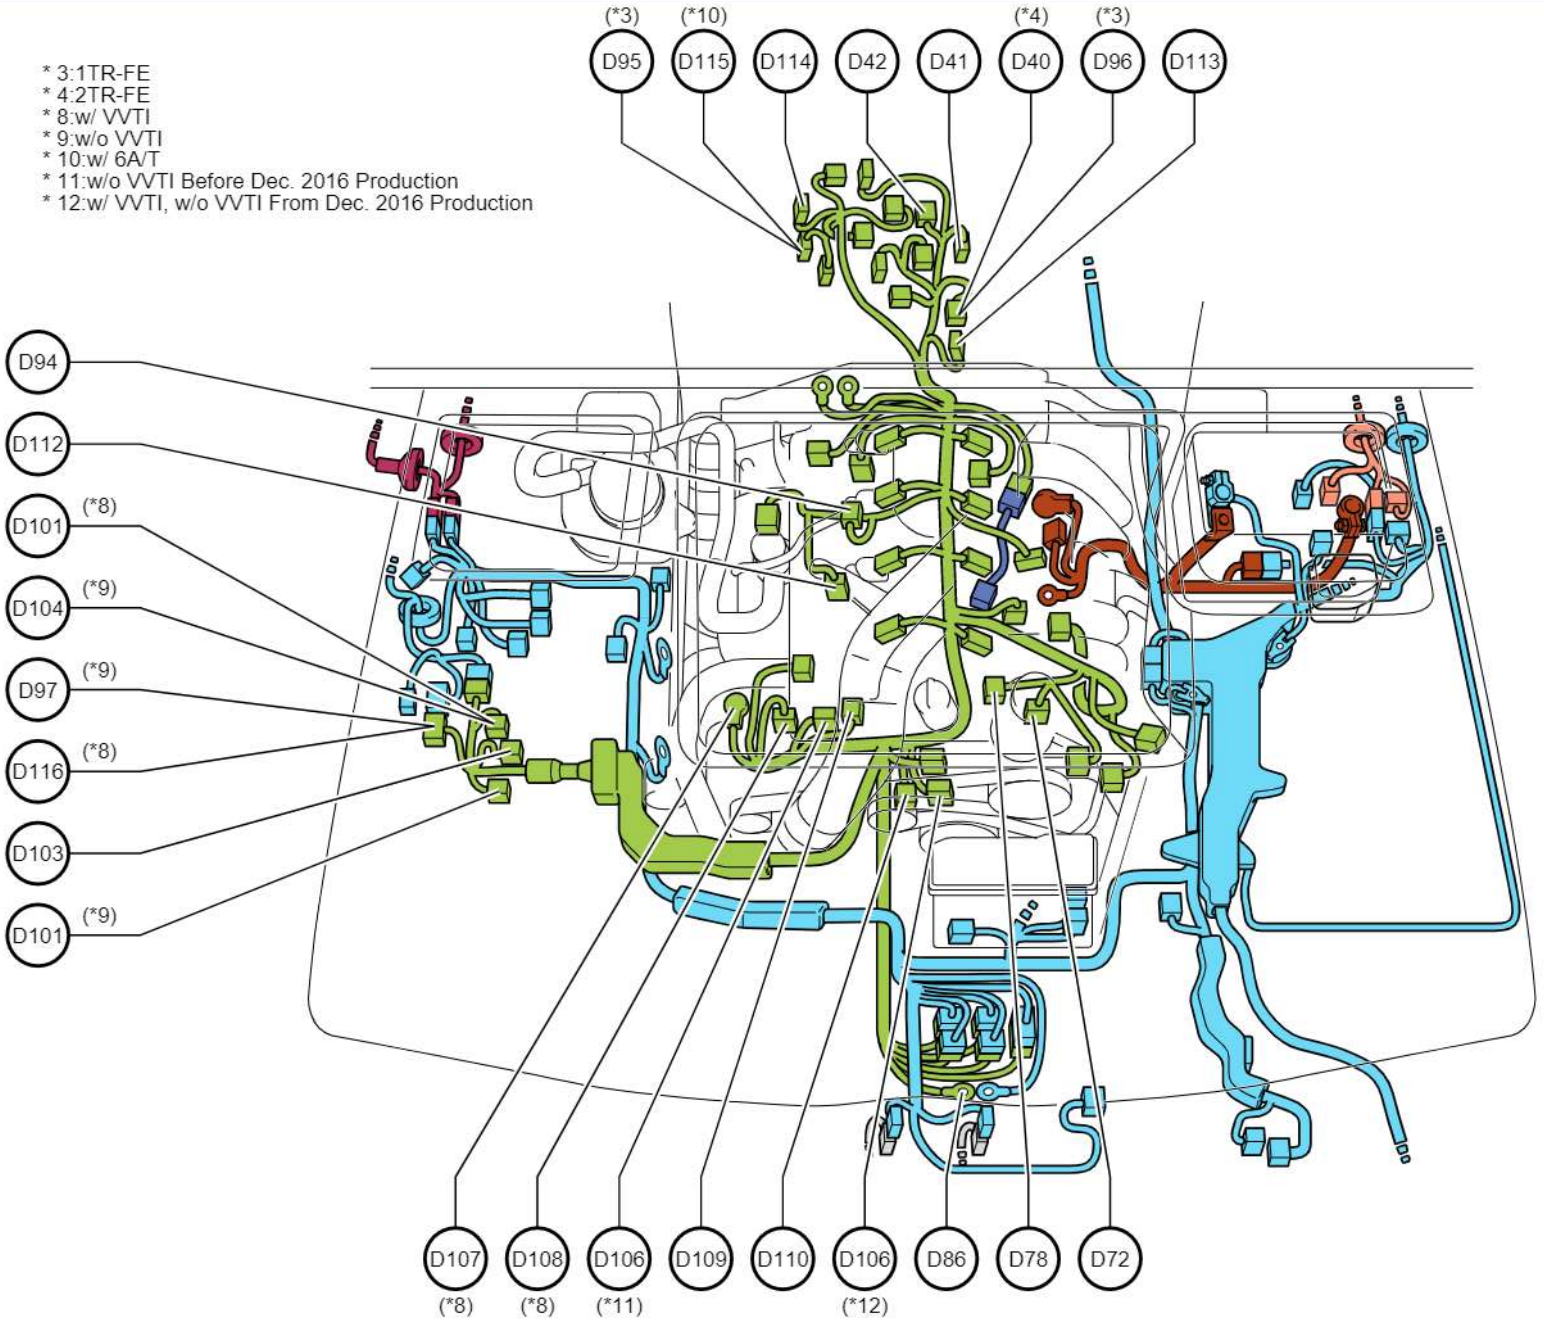

D 40 Transmission Revolution Sensor (Input)
D 41 ECT Solenoid
D 42 Transmission Revolution Sensor (Output)
D 72 Crankshaft Position Sensor
D 78 Camshaft Timing Oil Control Valve
D 86 Connector Holder NO.2
D 94 Air Pressure Sensor
D 95 A/T Fluid Temp. Sensor
D 96 Transmission Revolution Sensor (Input)
D 97 Engine ECU
D 101 Junction Connector
D 103 Junction Connector
D 104 Junction Connector
D 106 Noise Filter (Ignition)
D 107 Alternator
D 108 Alternator
D 109 Camshaft Timing Oil Control Valve Assembly (EX)
D 110 Cam Position Sensor (IN)
D 112 Cam Position Sensor (EX)
D 113 Trasmission Revolution Sensor
D 114 Speed Sensor
D 115 ECT Solenoid
D 116 Engine ECU

D40
Black




90980-11156

D41
Gray



90980-10891

D42
Black

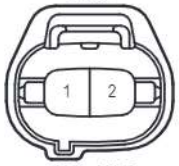

90980-11156

D72
Dark Gray




90980-11016

D78
Black



90980-11162

D86




D94
Black



90980-10845

D95
White

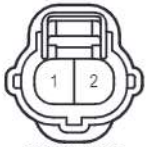


90980-11025

D96
Gray



90980-11156

D97
Black

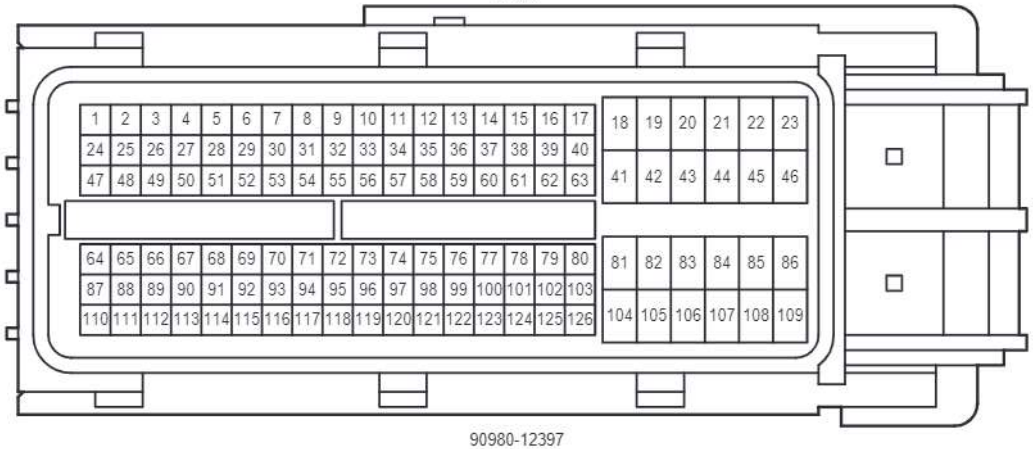

90980-12397

D101
Gray



90980-10891

D103
Gray




90980-10897

D104
Gray




90980-10891

D106
Gray

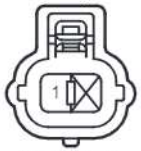


90980-12792

D107




90980-09372

D114
Black

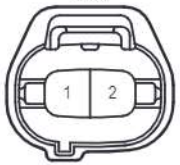


90980-11156

D115
Gray

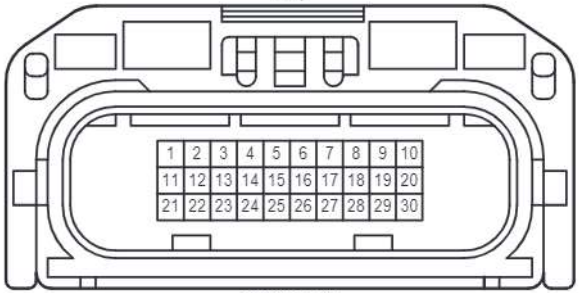


90980-12712

D116
Black

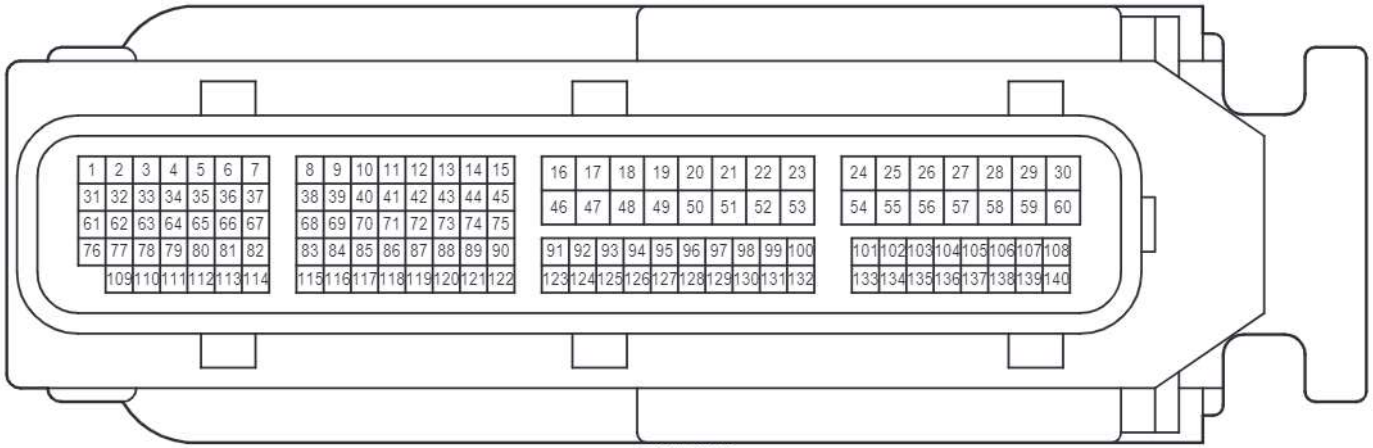

90980-12836

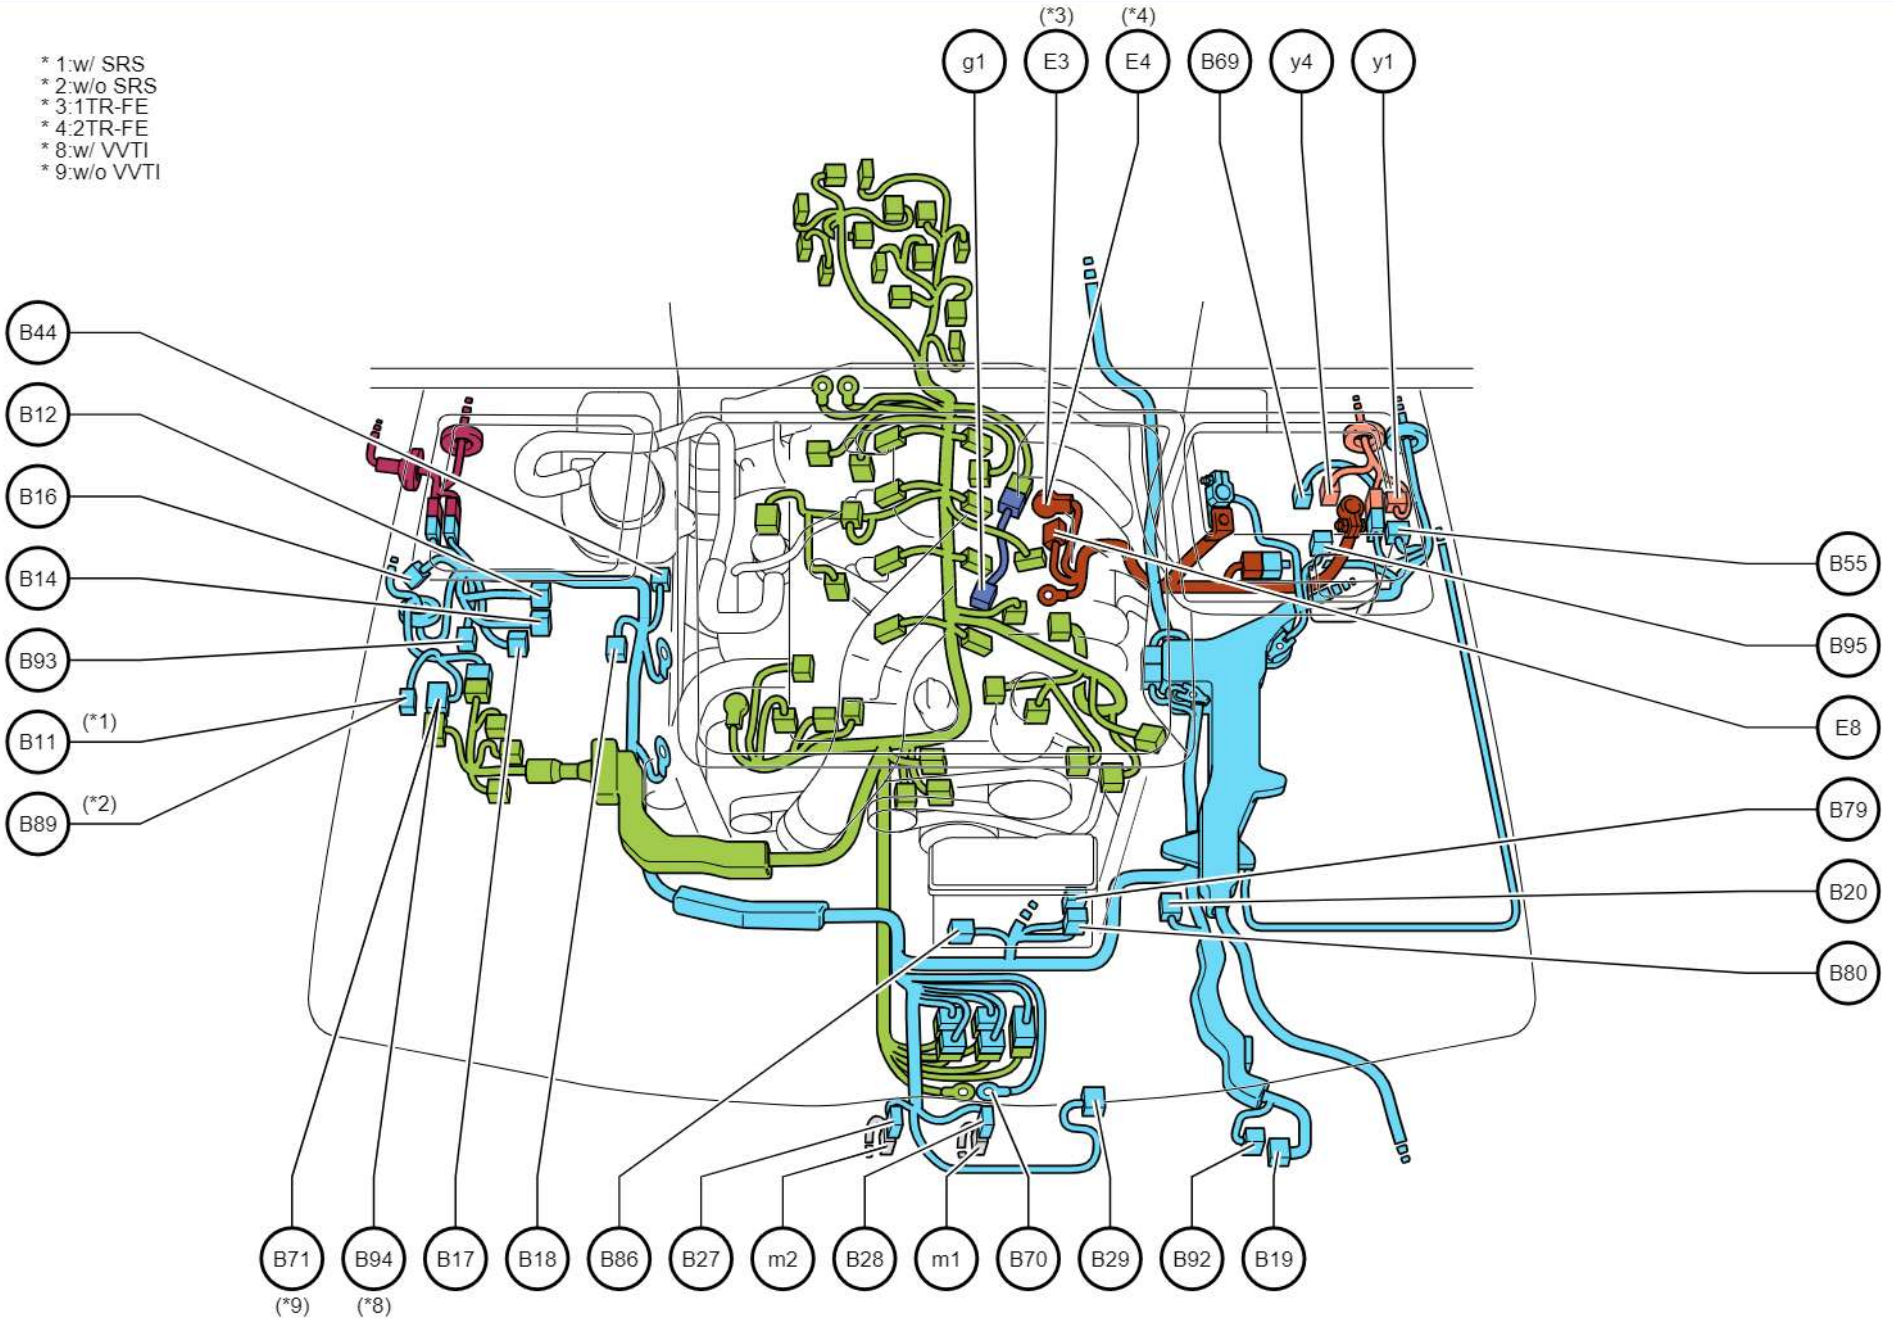
* 1:w/ SRS
* 2:w/o SRS
* 3:1TR-FE
* 4:2TR-FE
* 8:w/ VVTI
* 9:w/o VVTI
(*3)
(*4)
g1
E3
E4
B69
y4
y1
B44
B12
B16
B14
B93
B11
(*1)
B89
(*2)
B55
B95
E8
B79
B20
B80
B71
(*9)
B94
(*8)
B17
B18
B86
B27
m2
B28
m1
B70
B29
B92
B19


B	11	Front Seat Inner Belt (Driver's Side)
B	12	Air Injection Control Driver
B	14	Air Injection Control Driver
B	16	A/C Magnetic Valve (Rear A/C)
B	17	Air Pump
B	18	Speed Sensor (Front RH)
B	19	Skid Control ECU with Actuator
B	20	Speed Sensor (Front LH)
B	27	Cooling Fan ECU No.1
B	28	Cooling Fan ECU No.2
B	29	Water Temp. Sensor (Radiator)
B	44	Option Connector (TVSS Siren)
B	55	Slide Door Control Junction (Male LH)
B	69	Battery Thermometer Sensor
B	70	Connector Holder NO.2
B	71	Engine ECU
B	79	Junction Connector
B	80	Junction Connector
B	86	Junction Connector
B	89	Short Pin (Seat Belt SW)
B	92	Brake Actuator Assembly
B	93	Air Pump Assenbly
B	94	Engine ECU
B	95	Battery Current Sensor
E	3	Starter
E	4	Starter
E	8	Starter
g	1	Knock Control Sensor (Bank 1)
m	1	Cooling Fan ECU No.1 , Cooling Fan Motor No.1
m	2	Cooling Fan ECU No.2 , Cooling Fan Motor No.1
y	1	Slide Door Control Junction (Male LH)
y	4	Battery Thermometer Sensor

B11
White




90980-10825

B12
Black

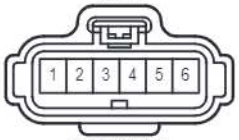

90980-11858

B14
Gray

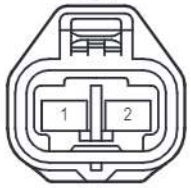

90980-12068

B16
Gray



90980-11003

B17
Gray




90980-11032

B18
Black



90980-11003

B19
Black

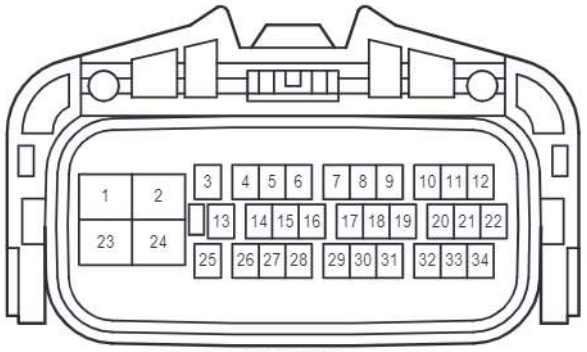


90980-12020

B20
Gray



90980-11075

B27
Gray

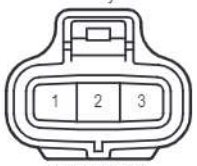

90980-10841

B28
Black



90980-10841

B29
Black



90980-10735

B44
Gray




90980-10942

B55
White




90980-11033

B69
White

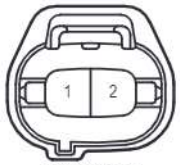

90980-11156


B70



B71
Black




B79
Black

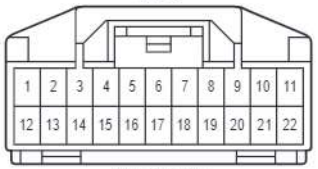


90980-11915

B80
White

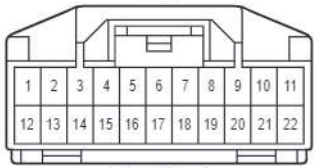


90980-11915

B86
White

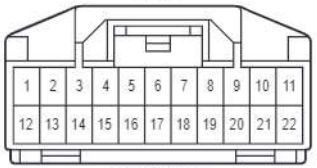


90980-11915

B89
White




90980-10825

B92
Black

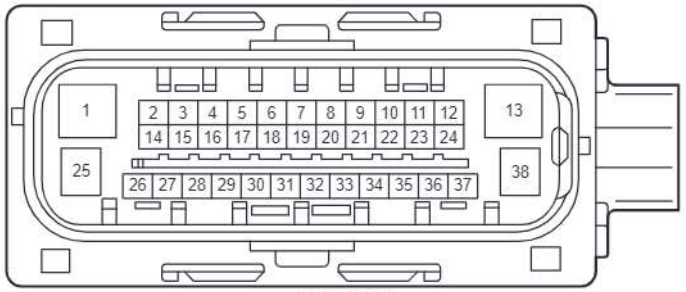


90980-12A99

B93
Black

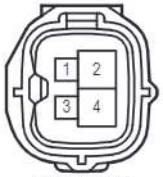


90980-12294

B94

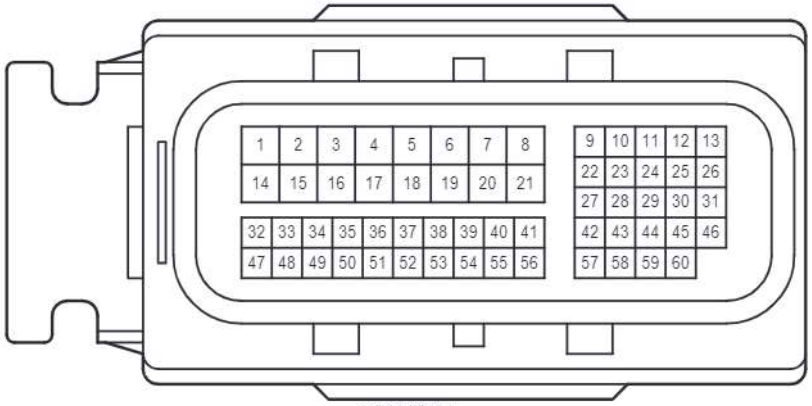

90980-12931

B95
Black

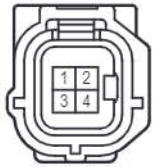


90980-12495

E3



90980-09506

E4




90980-09507

E8
Black



90980-11400

g1
Black




90980-11875


m1
Gray





m2
Black

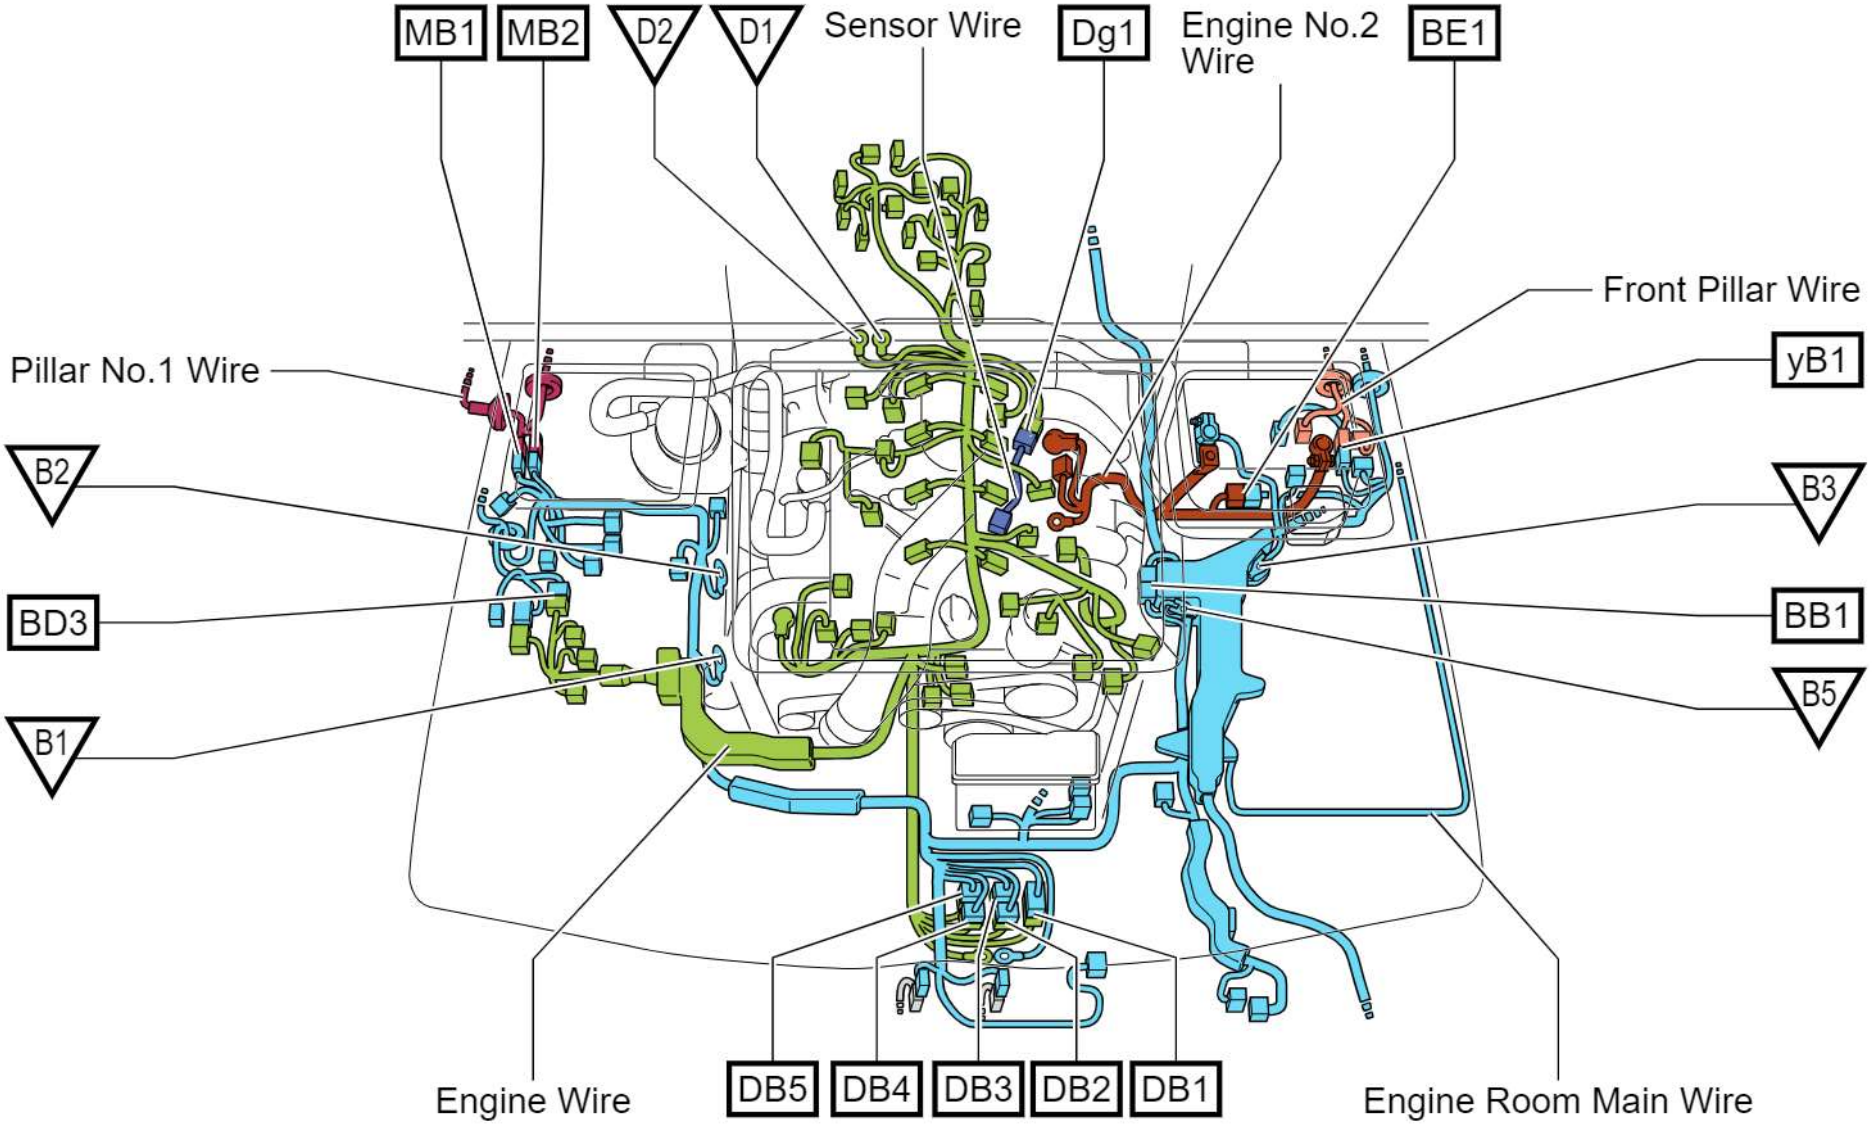




MB1
MB2
D2
D1
Sensor Wire
Dg1
Engine No.2 Wire
BE1
Front Pillar Wire
yB1
Pillar No.1 Wire
B2
B3
BD3
BB1
B5
B1
Engine Wire
DB5
DB4
DB3
DB2
DB1
Engine Room Main Wire

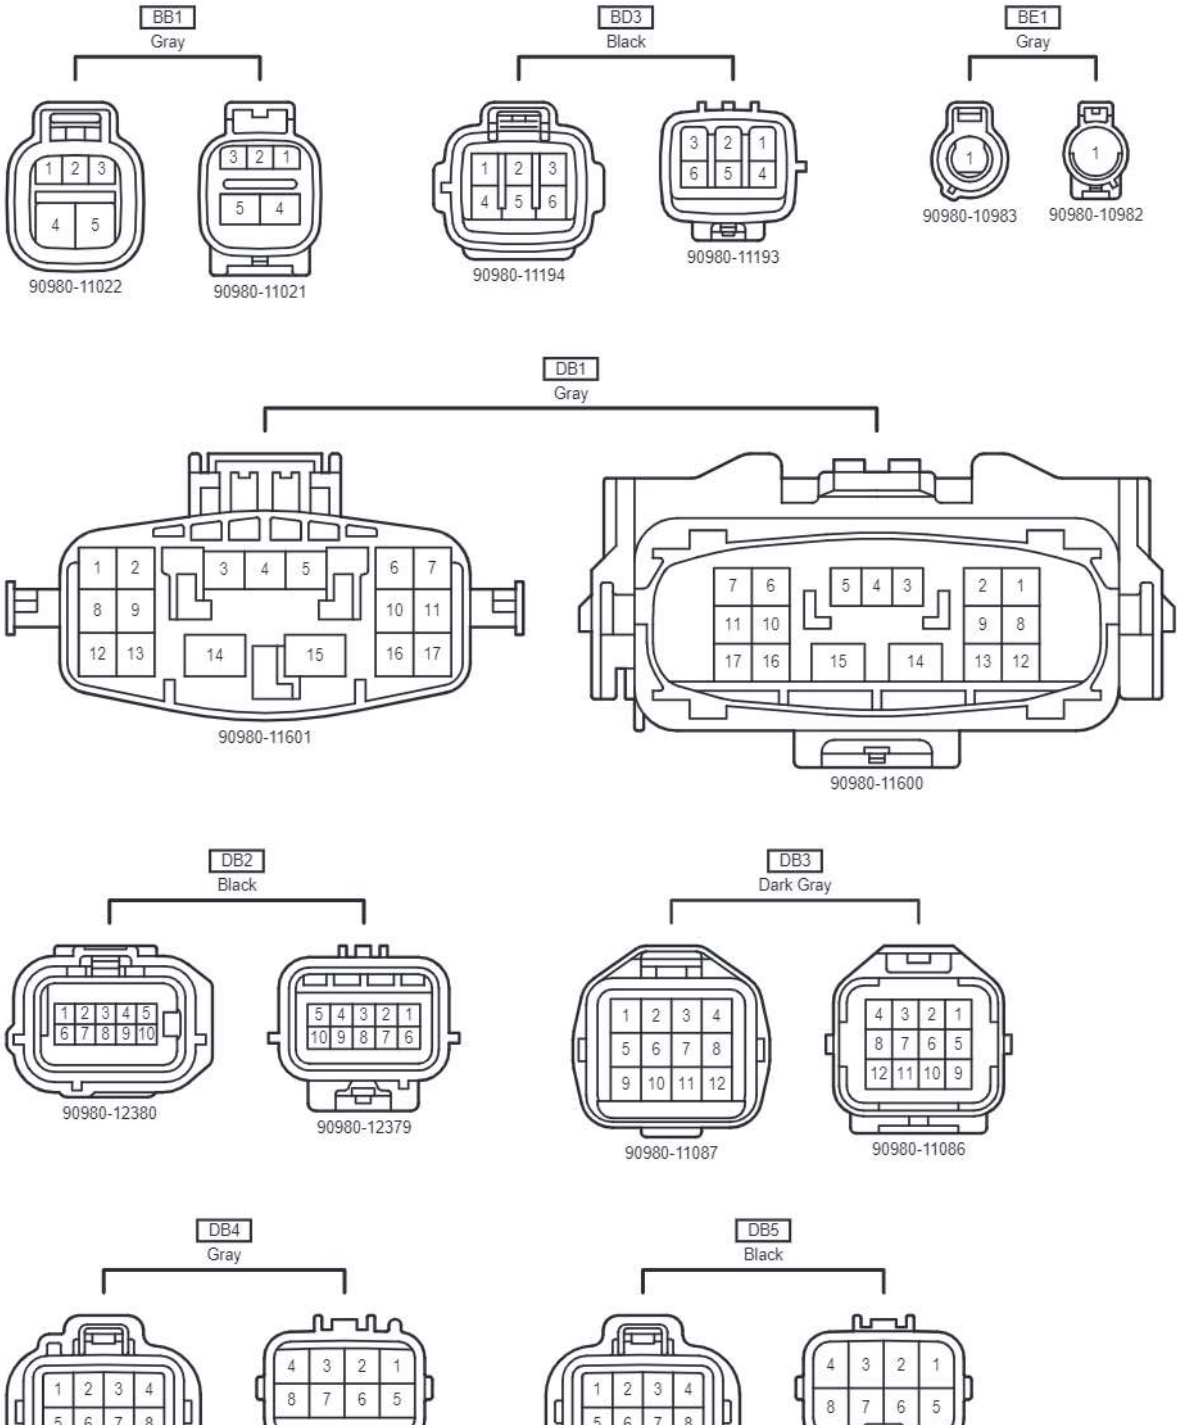

BB1
Gray
90980-11022
90980-11021
BD3
Black
90980-11194
90980-11193
BE1
Gray
90980-10983
90980-10982
DB1
Gray
90980-11601
90980-11600
DB2
Black
90980-12380
90980-12379
DB3
Dark Gray
90980-11087
90980-11086
DB4
Gray
DB5
Black

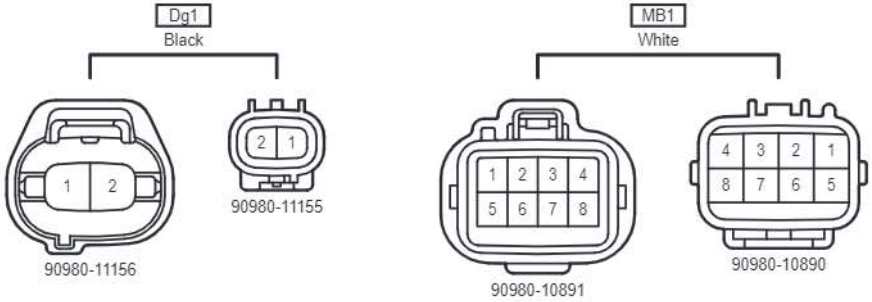

Dg1
Black
1 2
90980-11156
2 1
90980-11155
MB1
White
1 2 3 4
5 6 7 8
90980-10891
4 3 2 1
8 7 6 5
90980-10890

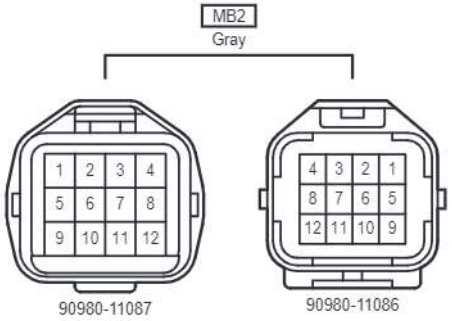
MB2
Gray
1 2 3 4
5 6 7 8
9 10 11 12
90980-11087
4 3 2 1
8 7 6 5
12 11 10 9
90980-11086

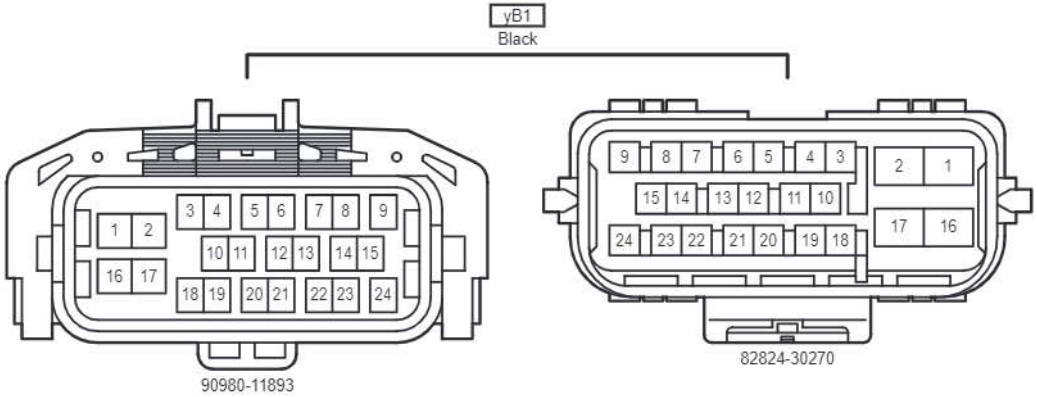

yB1
Black
1 2
3 4 5 6 7 8 9
10 11 12 13 14 15
16 17
18 19 20 21 22 23 24
90980-11893
9 8 7 6 5 4 3
15 14 13 12 11 10
24 23 22 21 20 19 18
2 1
17 16
82824-30270

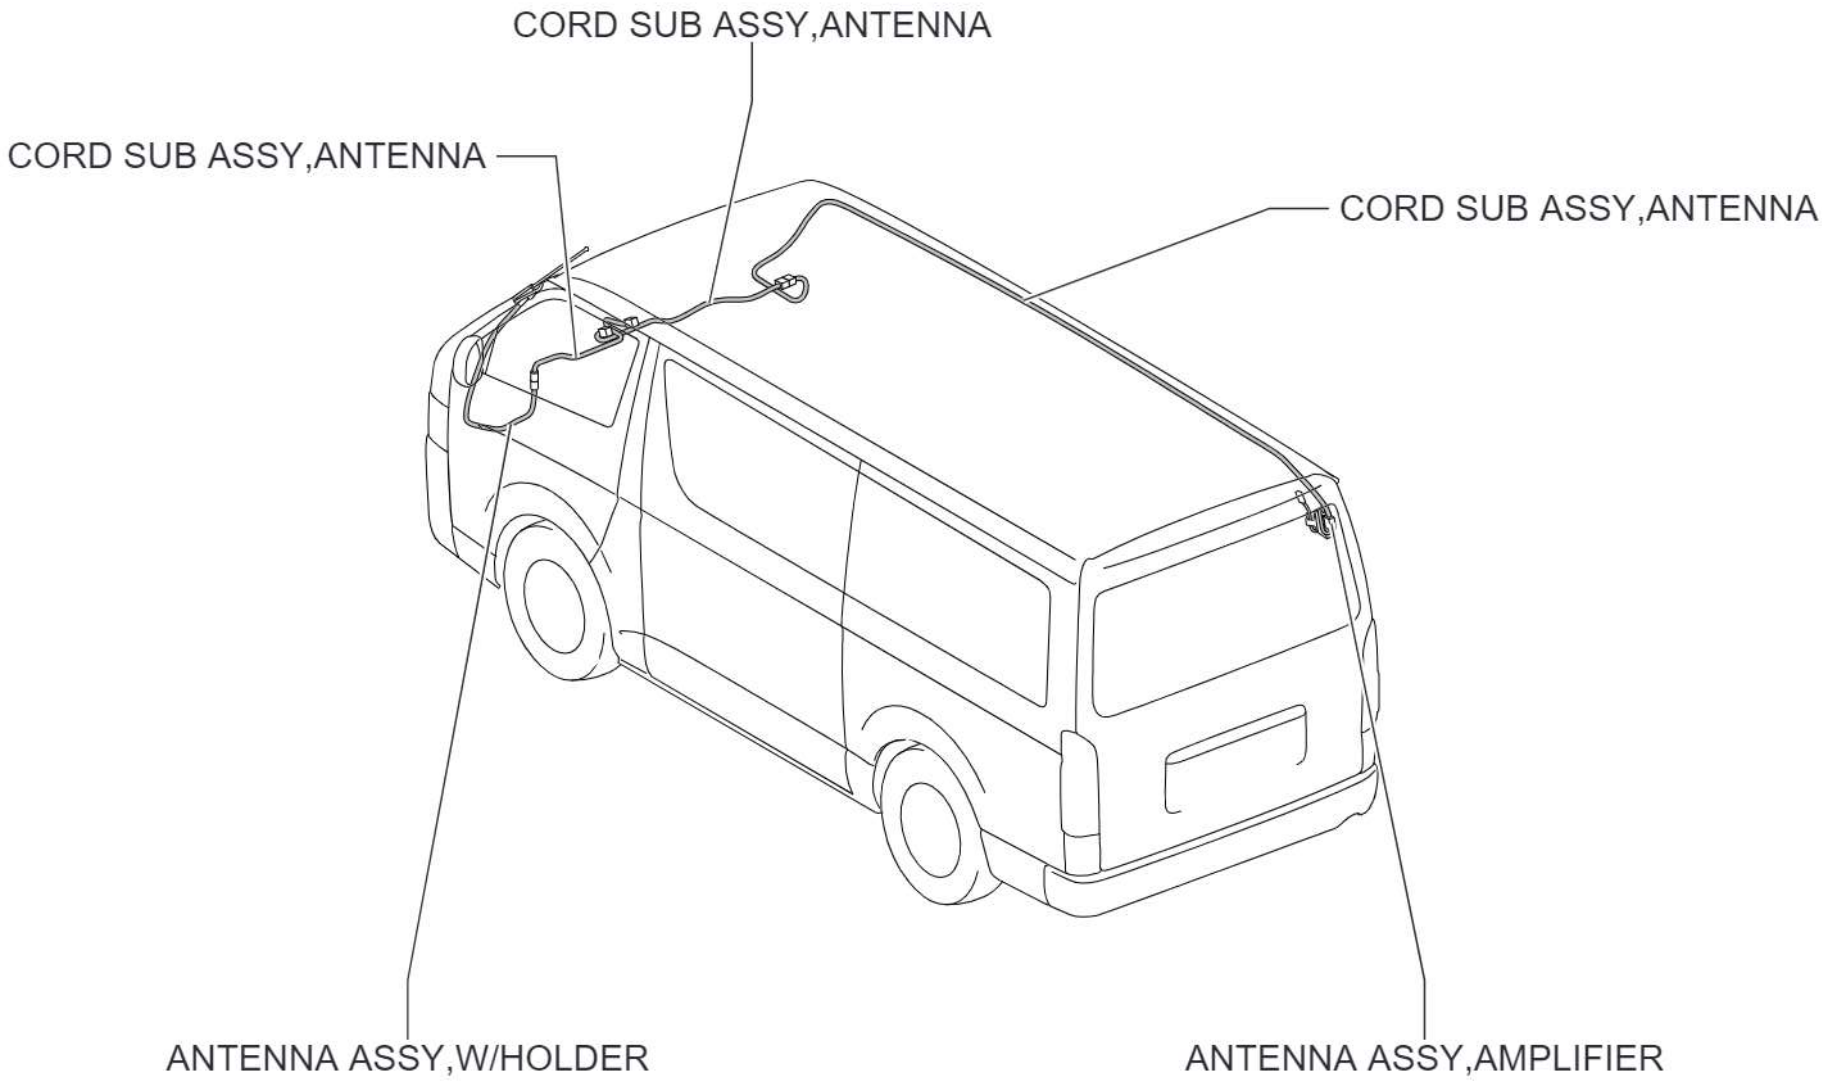
CORD SUB ASSY,ANTENNA
CORD SUB ASSY,ANTENNA
CORD SUB ASSY,ANTENNA
ANTENNA ASSY,W/HOLDER
ANTENNA ASSY,AMPLIFIER

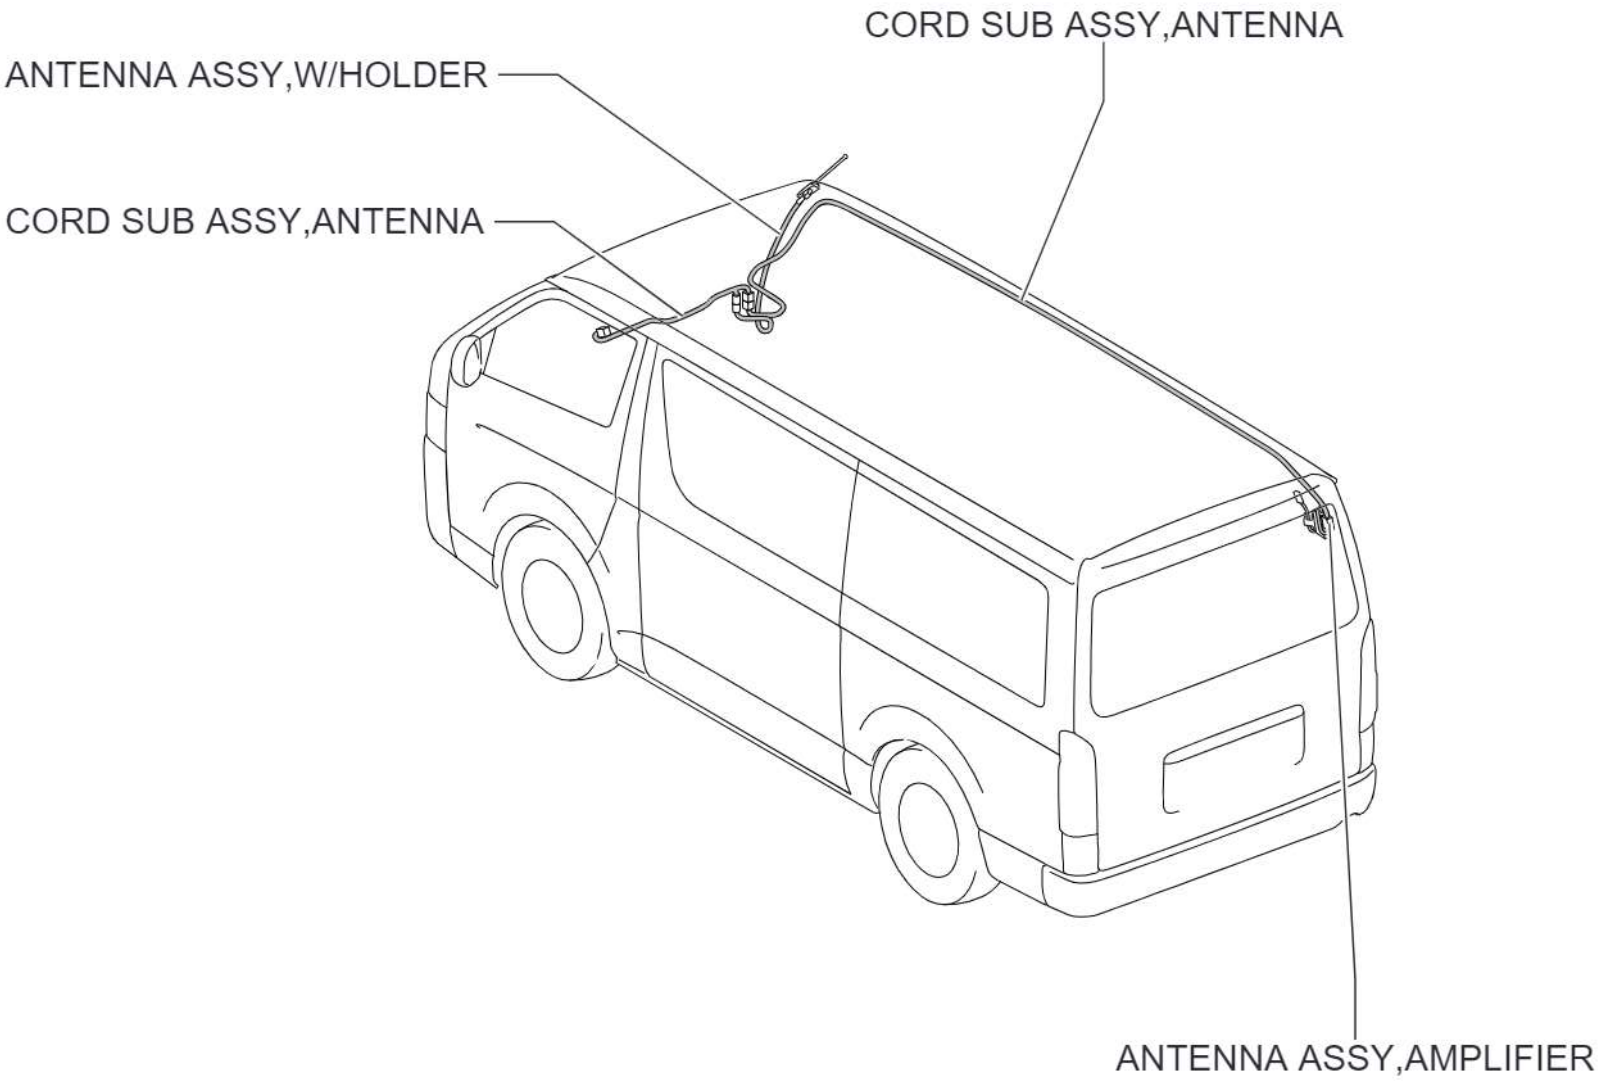
CORD SUB ASSY,ANTENNA
ANTENNA ASSY,W/HOLDER
CORD SUB ASSY,ANTENNA
ANTENNA ASSY,AMPLIFIER

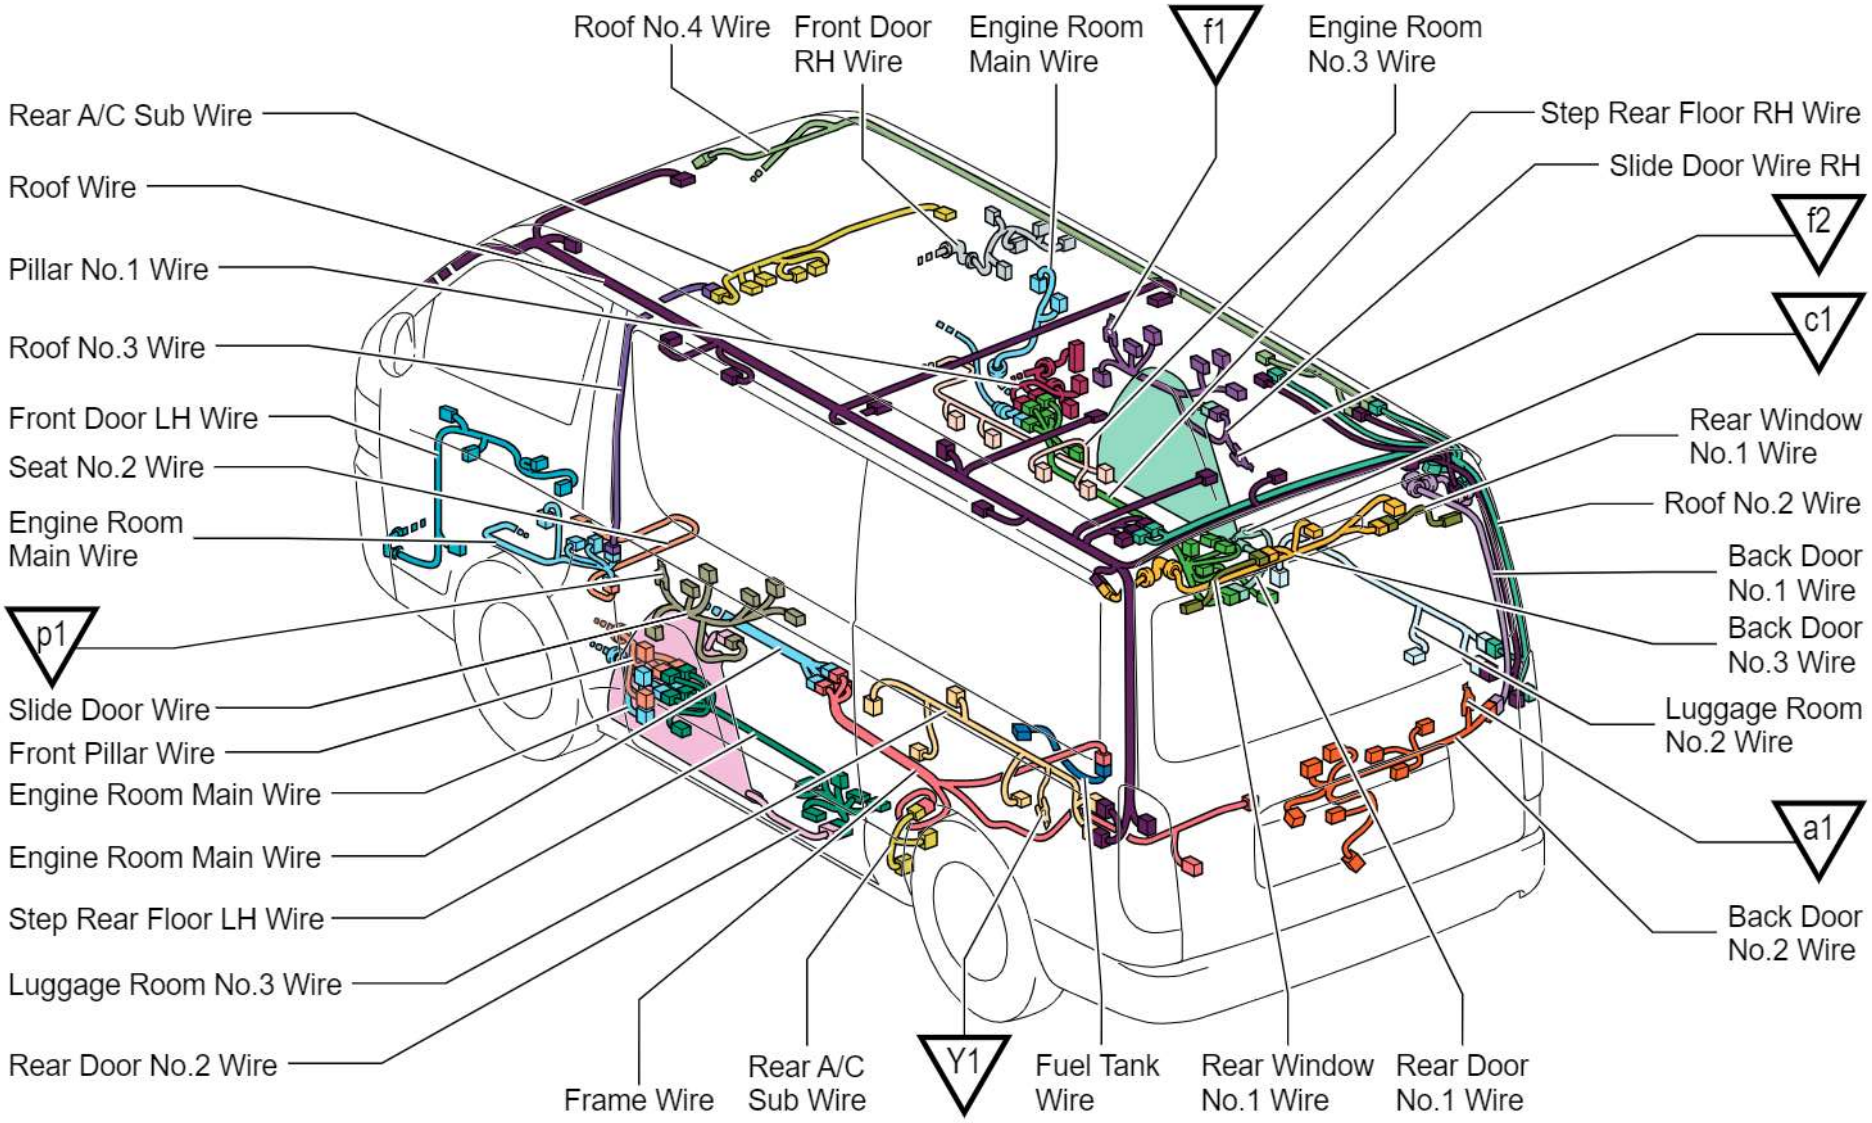
Roof No.4 Wire
Front Door RH Wire
Engine Room Main Wire
f1
Engine Room No.3 Wire
Rear A/C Sub Wire
Roof Wire
Pillar No.1 Wire
Roof No.3 Wire
Front Door LH Wire
Seat No.2 Wire
Engine Room Main Wire
p1
Slide Door Wire
Front Pillar Wire
Engine Room Main Wire
Engine Room Main Wire
Step Rear Floor LH Wire
Luggage Room No.3 Wire
Rear Door No.2 Wire
Step Rear Floor RH Wire
Slide Door Wire RH
f2
c1
Rear Window No.1 Wire
Roof No.2 Wire
Back Door No.1 Wire
Back Door No.3 Wire
Luggage Room No.2 Wire
a1
Back Door No.2 Wire
Frame Wire
Rear A/C Sub Wire
Y1
Fuel Tank Wire
Rear Window No.1 Wire
Rear Door No.1 Wire


* 9:Morocco From Jan. 2015 Production
* 10:Except Morocco From Jan. 2015 Production

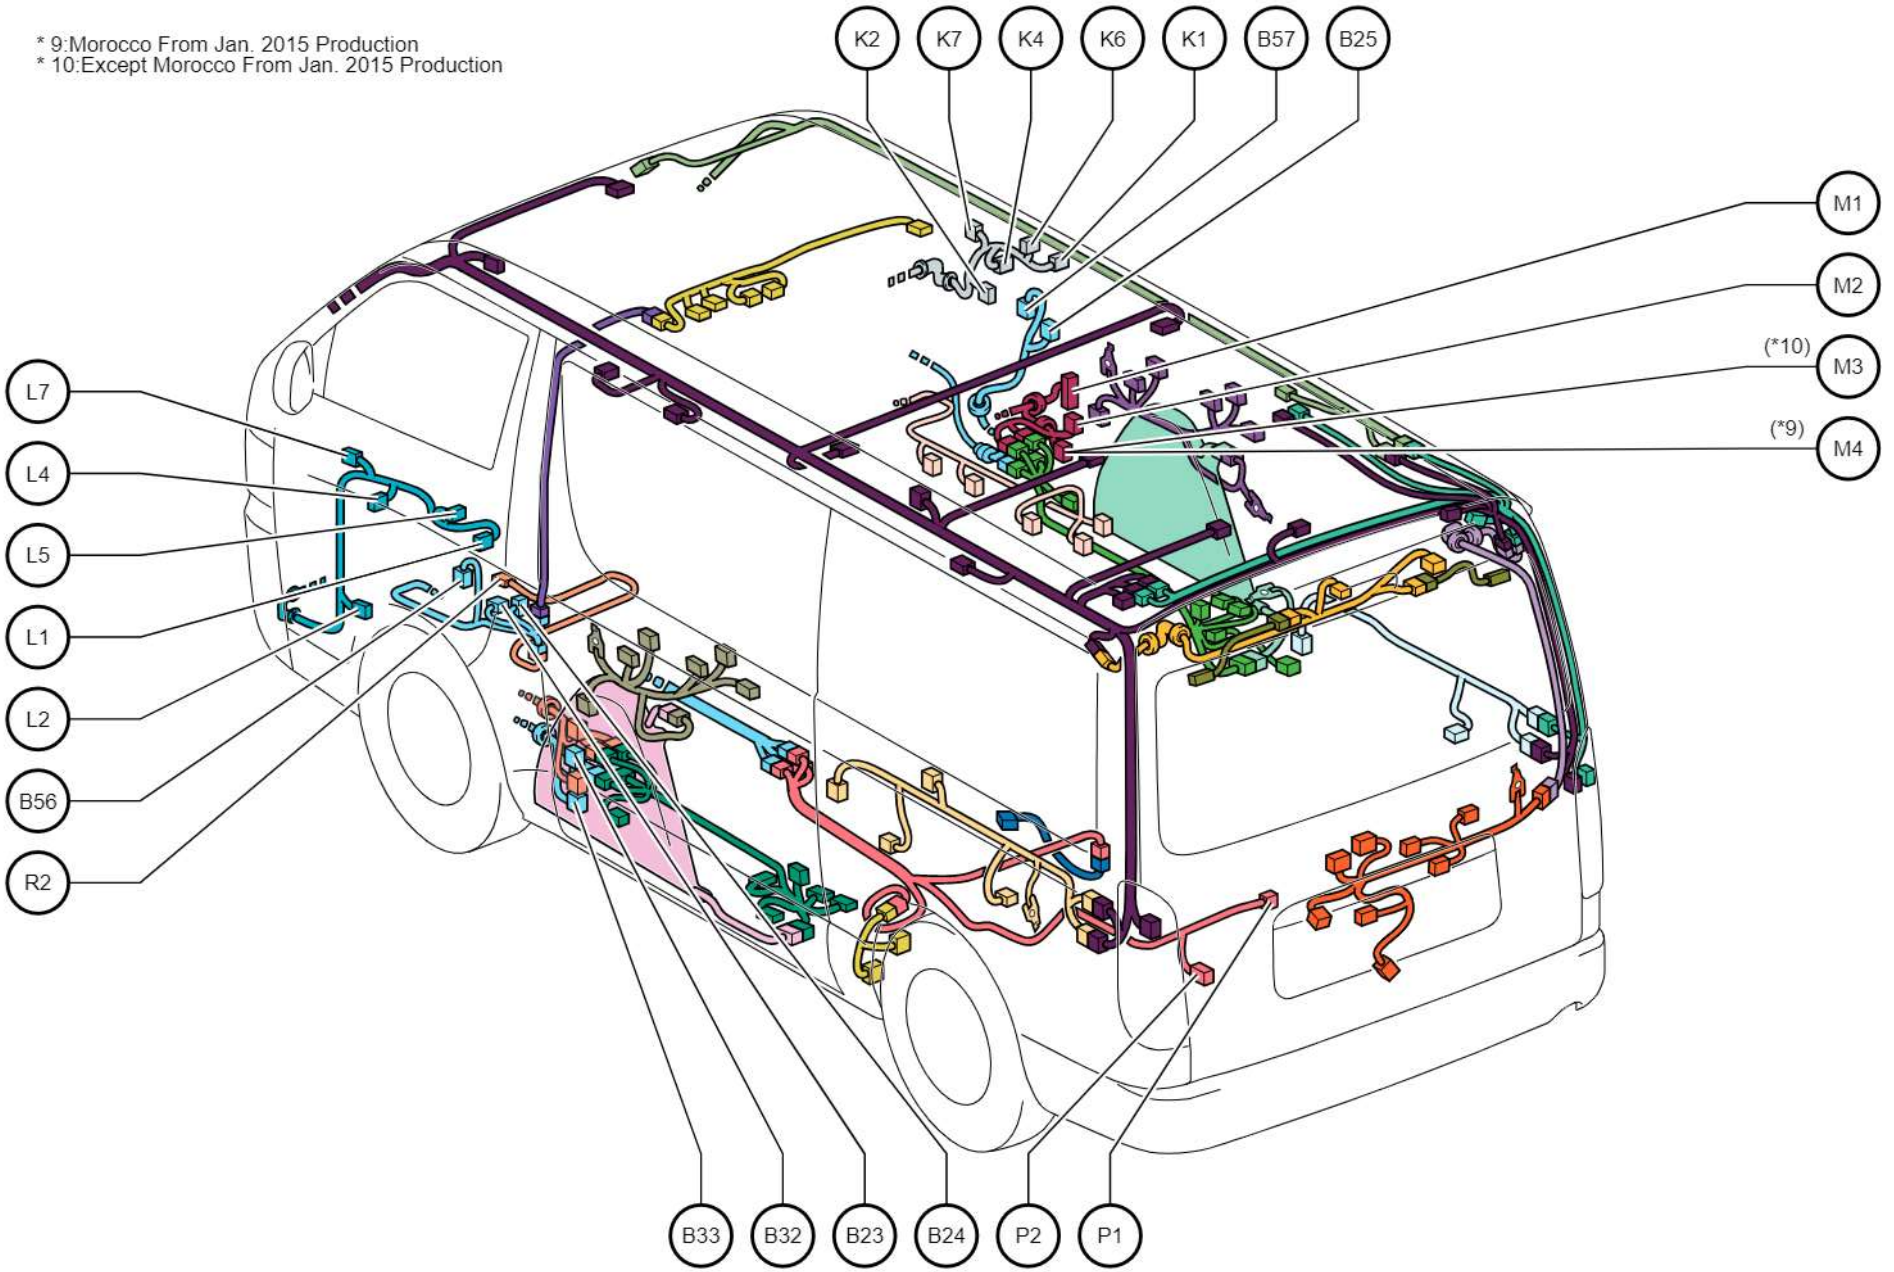


B	23	Front Seat Outer Belt (LH)
B	24	Blower SW (Rear Heater)
B	25	Front Seat Outer Belt (RH)
B	32	Door Control Relay (LH)
B	33	Step Lamp (LH)
B	56	Door Courtesy SW (Front LH)
B	57	Door Courtesy SW (Front RH)
K	1	Door Lock Assembly (Front RH)
K	2	Speaker (Front Door RH)
K	4	Power Window Regulator Motor (Front RH)
K	6	Power Window SW (Front RH)
K	7	Outer Rear View Mirror (RH)
L	1	Door Lock Assembly (Front LH)
L	2	Speaker (Front Door LH)
L	4	Power Window Regulator Motor (Front LH)
L	5	Power Window Master SW
L	7	Outer Rear View Mirror (LH)
M	1	Slide Door Control Junction (Male RH)
M	2	Door Control Relay (RH)
M	3	Step Lamp (RH)
M	4	Step Lamp (RH)
P	1	Rear Speed Sensor (Rear Speed Sensor RH)
P	2	Rear Height Control Sensor Sub-Assembly LH
R	2	Front Seat Inner Belt (Driver's Side)

Position of Parts in Body <LHD>


B23
Yellow

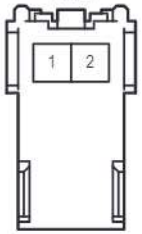

B24
Blue

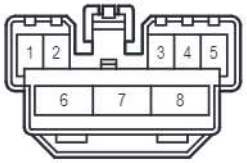


B25
Yellow

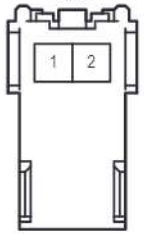

B32
Gray



B33
White




B56
Black




B57
Black



K1
White

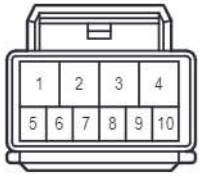


K2
White




K4
Black




K6
White

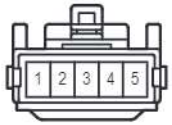

K7
White

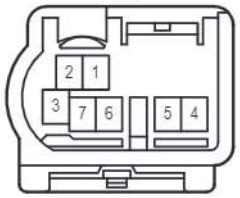

L1
White

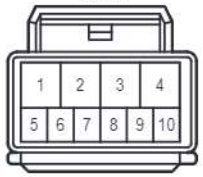


L2
White




L4
Black



L5
White

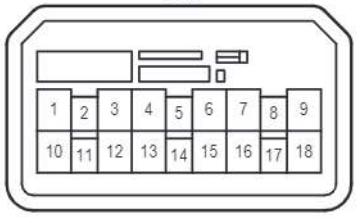

L7
White

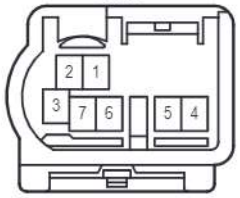

M1
White



M2
Gray



M3
White




M4
White



P1
Black




P2
Black



R2
Blue



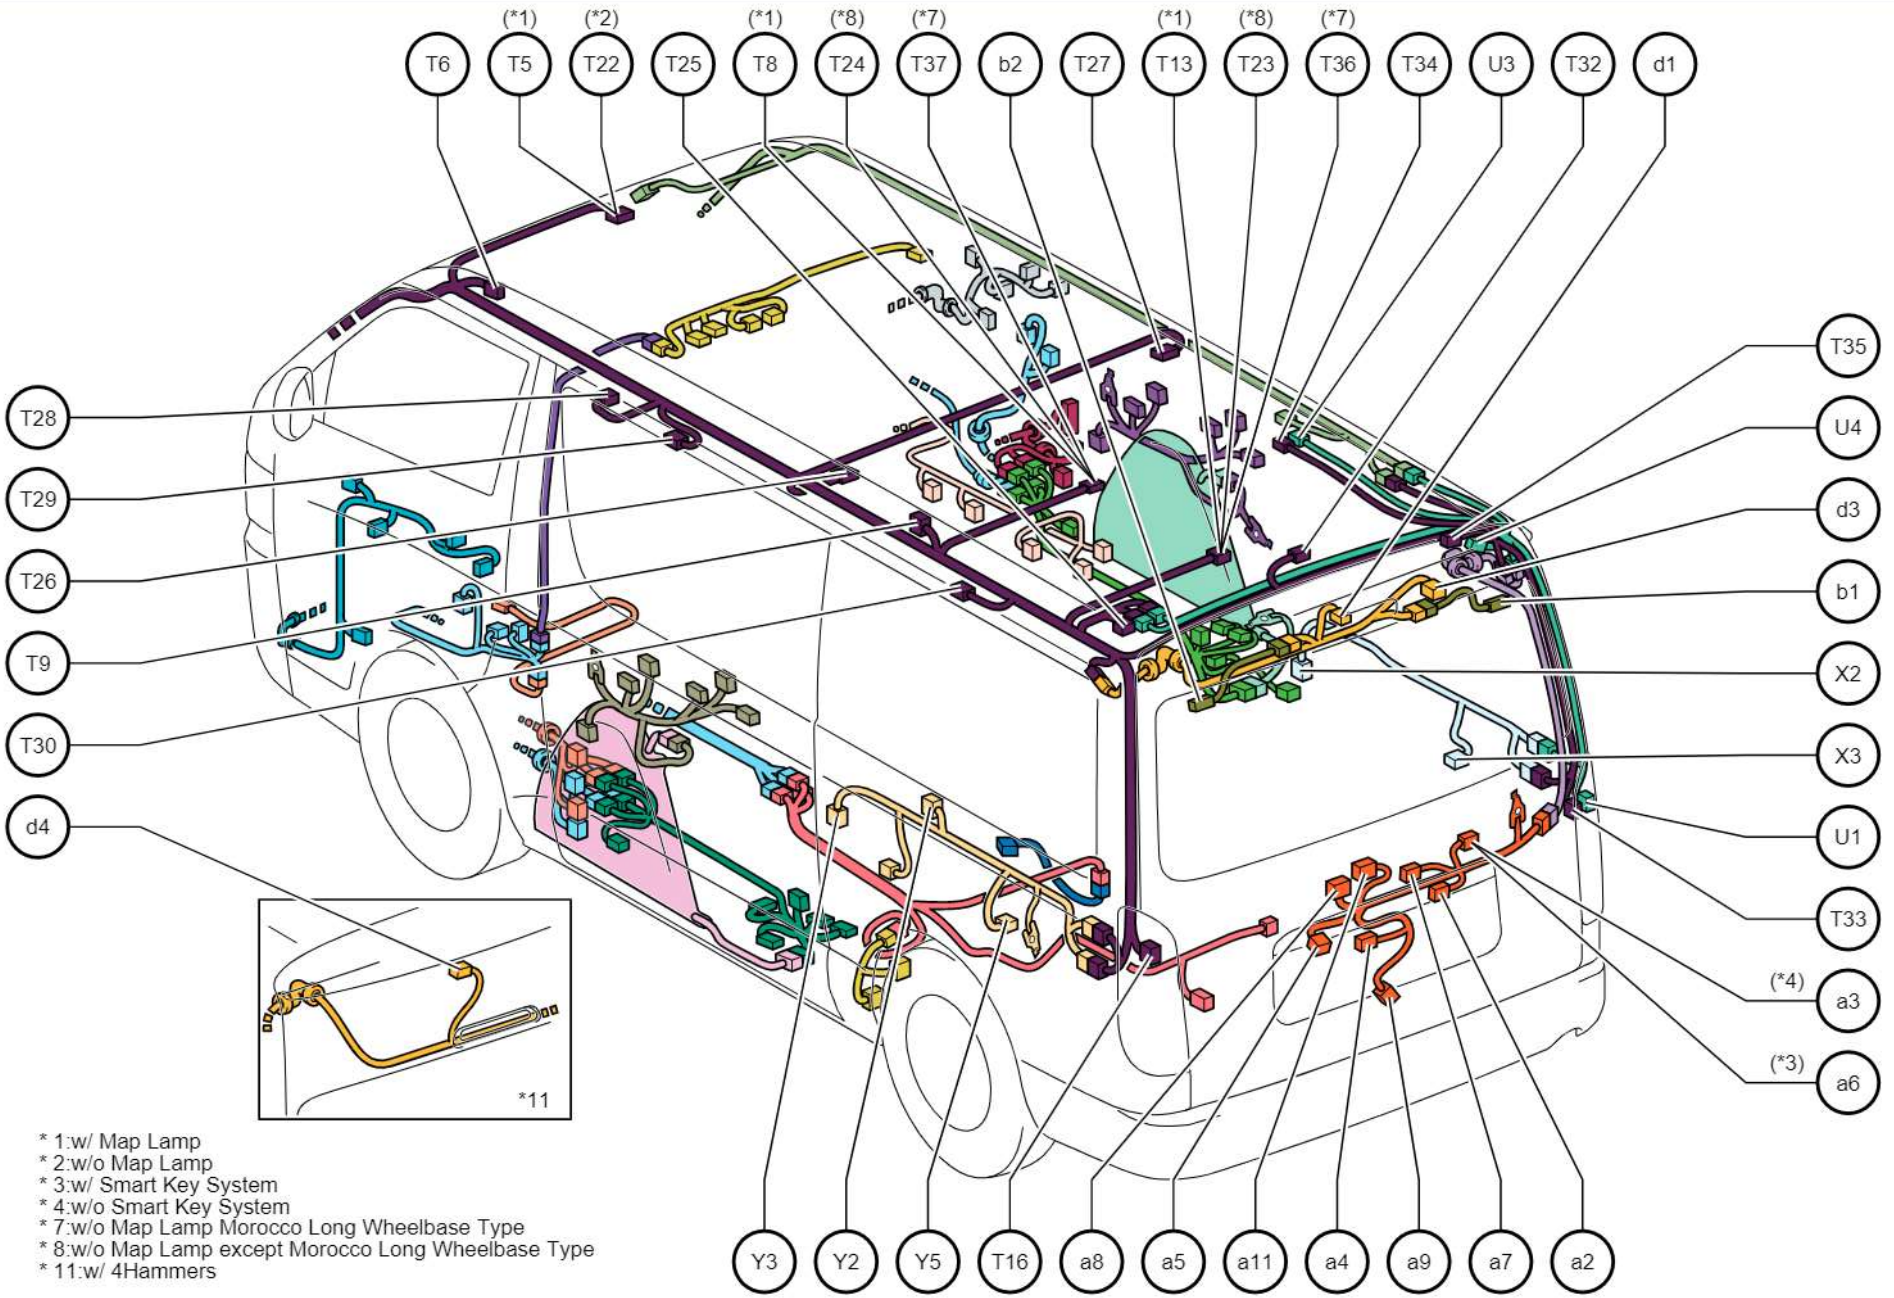

* 1:w/ Map Lamp
* 2:w/o Map Lamp
* 3:w/ Smart Key System
* 4:w/o Smart Key System
* 7:w/o Map Lamp Morocco Long Wheelbase Type
* 8:w/o Map Lamp except Morocco Long Wheelbase Type
* 11:w/ 4Hammers

T 5 Map Lamp
T 6 Diode (Door Courtesy No.4)
T 8 Room Lamp (Center)
T 9 Diode (Door Courtesy No.5)
T 13 Room Lamp (Rear)
T 16 Rear Combination Lamp (LH)
T 22 Room Lamp (Front)
T 23 Room Lamp (Rear)
T 24 Room Lamp (Center)
T 25 Junction Connector
T 26 Speaker (Roof LH)
T 27 Speaker (Roof RH)
T 28 Hammer Buzzer (Buzzer Assembly)
T 29 Front Hammer Switch LH
T 30 Rear Hammer Switch LH
T 32 Room Lamp (Luggage compartment)
T 33 Rear Combination Lamp (RH)
T 34 Rear Hammer Switch RH
T 35 Junction Connector
T 36 Room Lamp (Rear)
T 37 Room Lamp (Center)

U 1 Rear Combination Lamp (RH)
U 3 Rear Hammer Switch RH
U 4 Junction Connector

X 2 Door Courtesy SW (Slide Door RH)
X 3 Speaker (Rear RH)

Y 2 Door Control Receiver
Y 3 Door Courtesy SW (Slide Door LH)
Y 5 Speaker (Rear LH)


a 2 Back Door Courtesy SW
a 3 Back Door Lock Assembly
a 4 License Plate Lamp
a 5 Television Camera Assembly
a 6 Back Door Lock Assembly
a 7 Back Door Lock Assembly (Door Control Switch)
a 8 Back Door Closer Relay
a 9 Back Door Closer Motor Assembly

Position of Parts in Body <LHD>

T5
White




T6
White



T8
White




T9
White



T13
White



T16
White



T22
White




T23
White



T24
White



T25
Blue

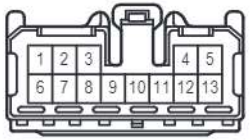


T26
White



T27
White



T28
Blue



T29
Black




T30
Black



T32
White




T33
White




T34
Black



T35
Black




T36
White



T37
White




U1
White




U3
Black



U4
Black




X2
White

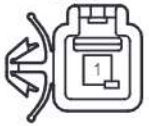


X3
White



Y2
White

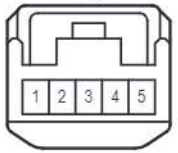

Y3
White

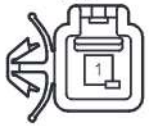

Y5
White



a2


a3

a4


a5

Position of Parts in Body <LHD>


a6
White

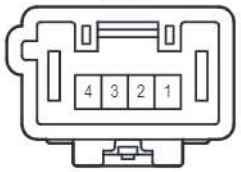


a7
White

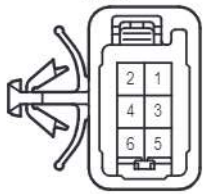


a8
White

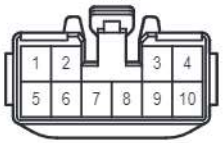

a9
Gray

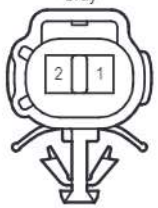

a11
White

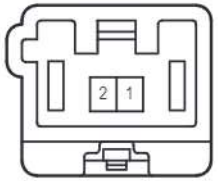

b1
Black



b2
Black



d1
White




d3
White



d4
Black

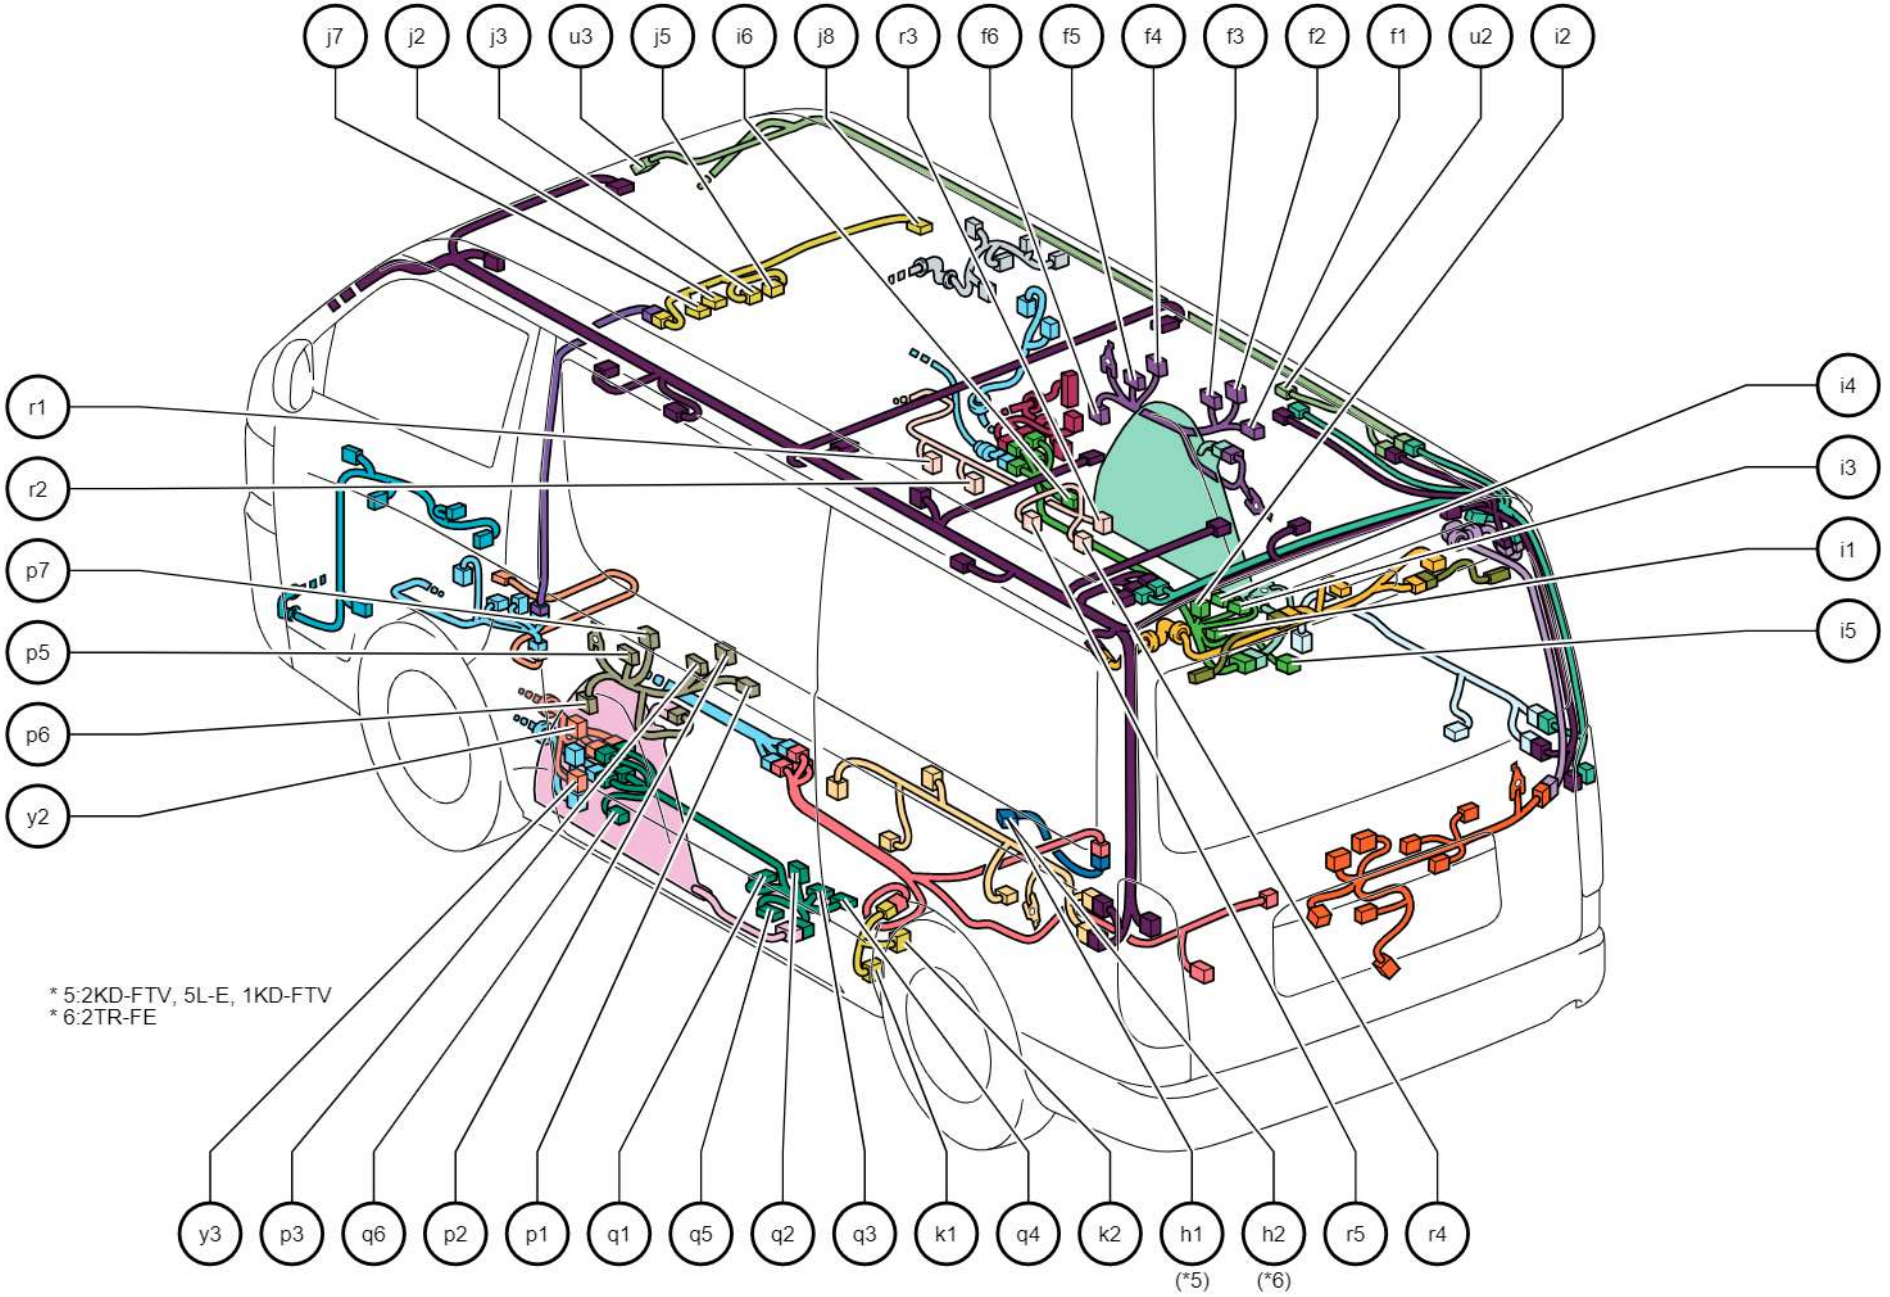



j7
j2
j3
u3
j5
i6
j8
r3
f6
f5
f4
f3
f2
f1
u2
i2
r1
r2
p7
p5
p6
y2
i4
i3
i1
i5
* 5:2KD-FTV, 5L-E, 1KD-FTV
* 6:2TR-FE
y3
p3
q6
p2
p1
q1
q5
q2
q3
k1
q4
k2
h1
(*5)
h2
(*6)
r5
r4


f	1	Slide Door Lock Assembly (RH)
f	2	Door Opening Relay (RH)
f	3	Door Control SW (RH)
f	4	Slide Door Handle SW (RH)
f	5	Slide Door Lock Remote Control Assembly (RH)
f	6	Power Slide Door Sensor (RH)
h	1	Fuel Sender Gage
h	2	Fuel Suction Pump and Gage Assembly
i	1	Slide Door Motor Assembly (RH)
i	2	Slide Door Warning Buzzer (RH)
i	3	Door Control Relay (Power Slide Door RH)
i	4	Door Control Relay (Power Slide Door RH)
i	5	Slide Door Motor Assembly (RH)
i	6	Step Lamp (RH)
j	2	Blower Resistor (Rear A/C)
j	3	Blower SW (Rear A/C)
j	5	A/C Evaporator Temp. Sensor (Rear A/C)
j	7	Blower Motor (Rear A/C LH)
j	8	Blower Motor (Rear A/C RH)
k	1	Blower Motor (Rear Heater)
k	2	Blower Resistor (Rear Heater)
p	1	Slide Door Lock Assembly (LH)
p	2	Door Opening Relay (LH)
p	3	Door Control SW (LH)
p	5	Slide Door Lock Remote Control Assembly (LH)
p	6	Power Slide Door Sensor (LH)
p	7	Slide Door Handle SW (LH)
q	1	Slide Door Motor Assembly (LH)
q	2	Slide Door Warning Buzzer (LH)
q	3	Door Control Relay (Power Slide Door LH)
q	4	Door Control Relay (Power Slide Door LH)
q	5	Slide Door Motor Assembly (LH)
q	6	Step Lamp (LH)
r	1	Exhaust Gas Temperature Sensor

Position of Parts in Body <LHD>


f1
White

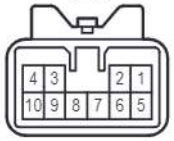


f2
White



f3
White




f4
White



f5
Black



f6
Gray

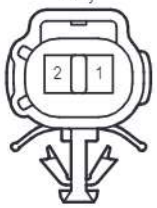

h1
Dark Gray



h2
Dark Gray




i1
Gray




i2
Black



i3
Blue

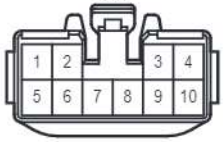


i4
White

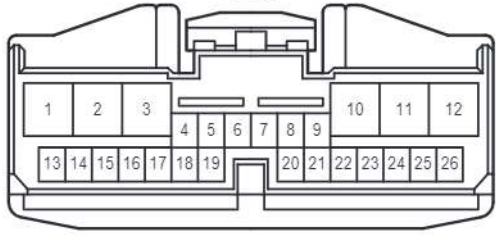


i5
Gray




i6
White



j2
Black

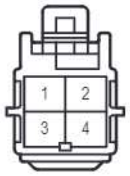

j3
Black

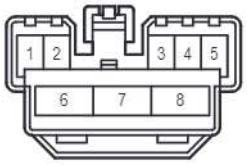

j5
White




j7
Black



j8
Black




k1
Black




k2
Black




p1
White

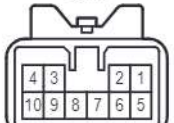

p2
White



p3
White




p5
Black



Position of Parts in Body <LHD>

q4
White

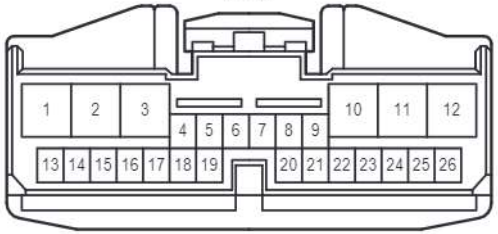

q5
Gray



q6
White



r1
Dark Gray



r2
Black



r3
Black



r4
Dark Gray



(Before Dec. 2013 Production)

r4
Gray



(From Dec. 2013 Production)

r5
Black



u2
Black



u3
Black




y2
Gray




y3
White

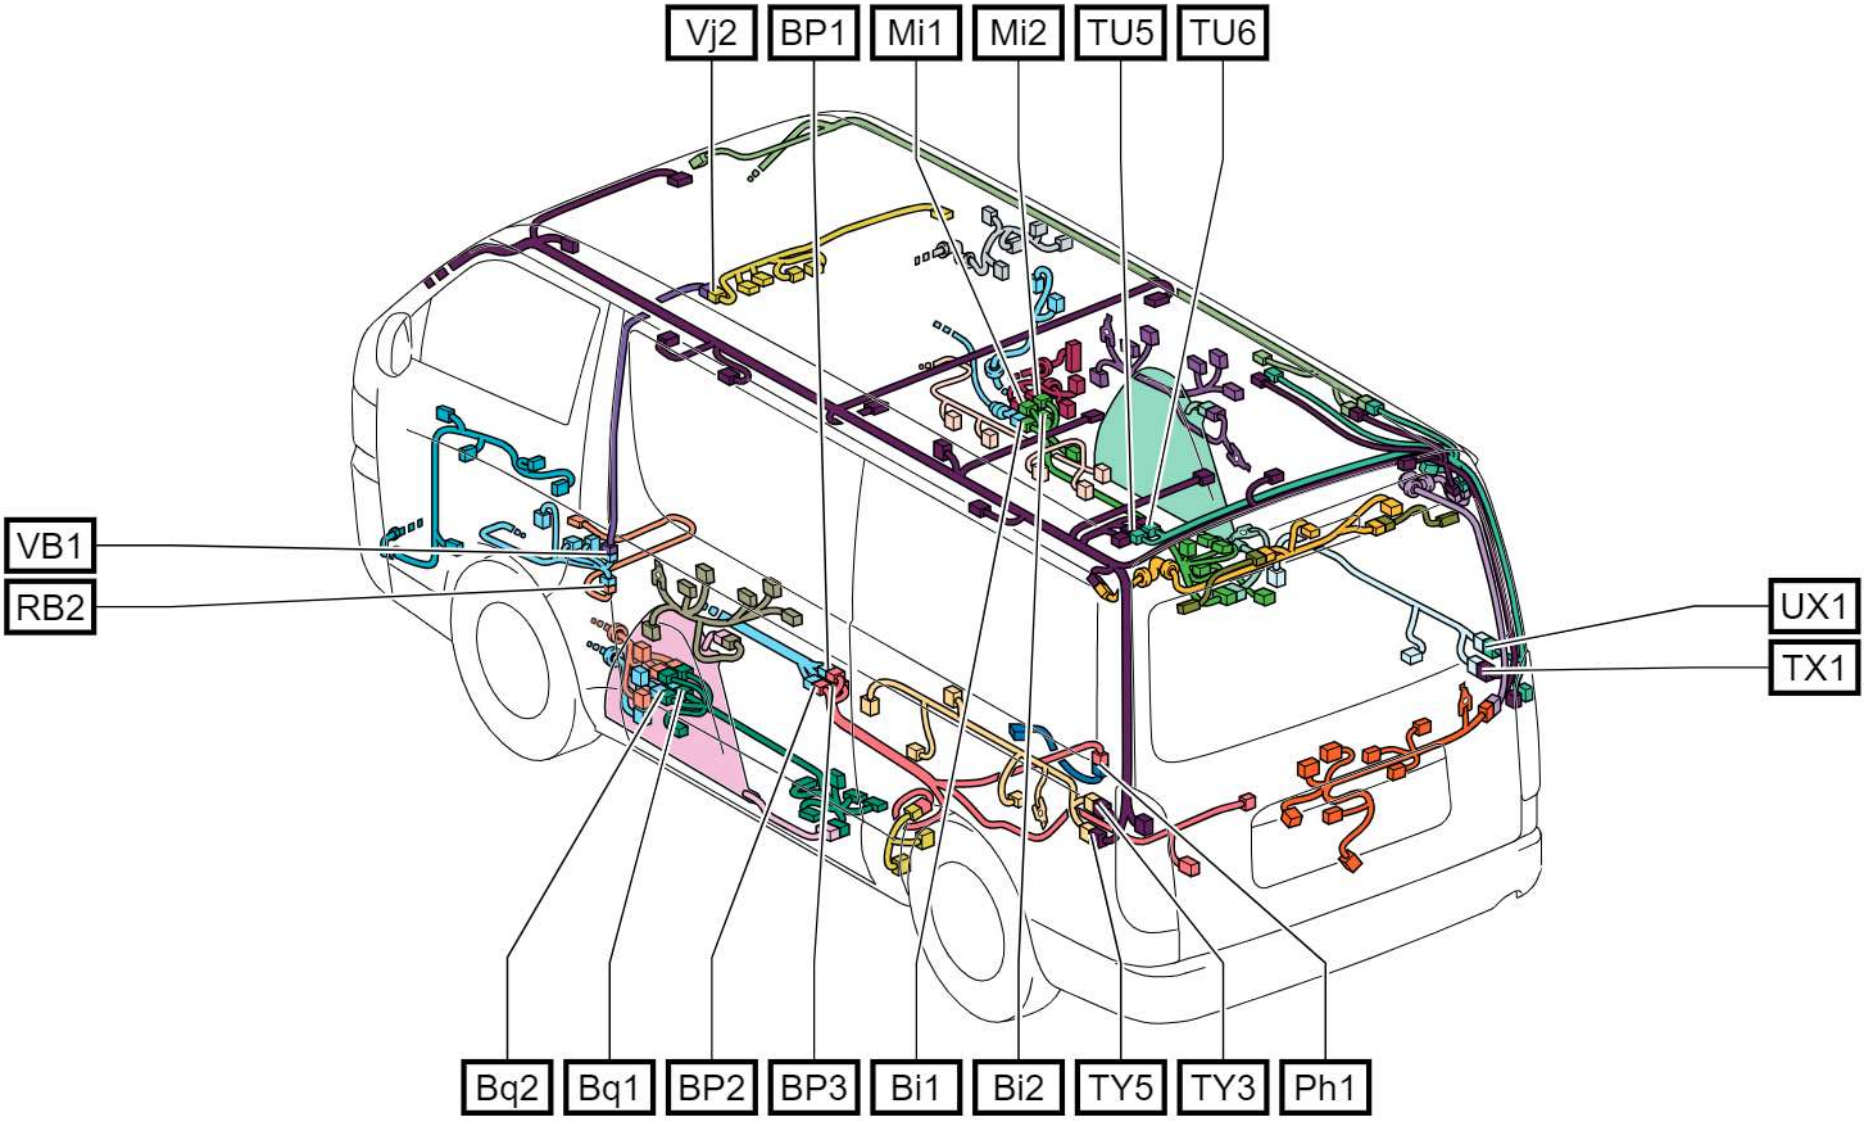



Vj2
BP1
Mi1
Mi2
TU5
TU6
VB1
RB2
UX1
TX1
Bq2
Bq1
BP2
BP3
Bi1
Bi2
TY5
TY3
Ph1


BP1
Black

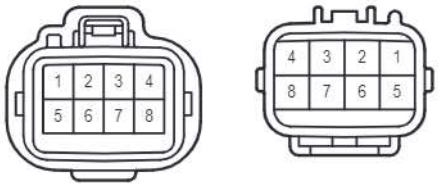


BP2
Dark Gray

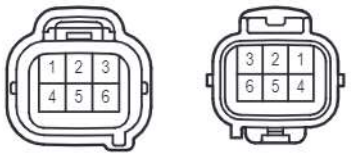


BP3
Black

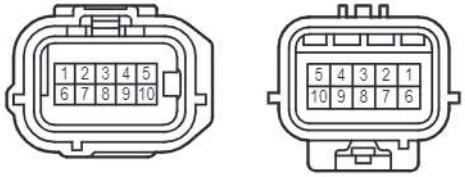


Bi1
White

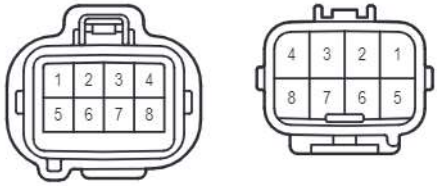


Bi2
Black

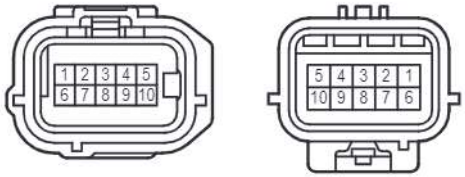


Bq1
White

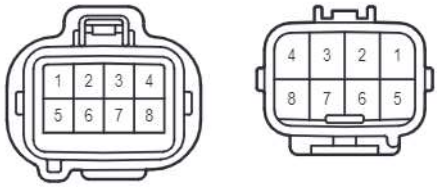


Bq2
Black

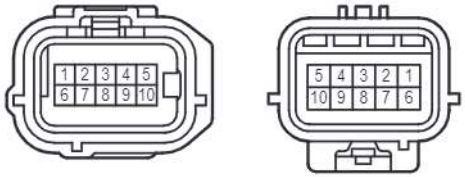


Mi1
White

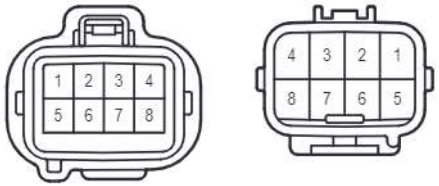


TU5
White

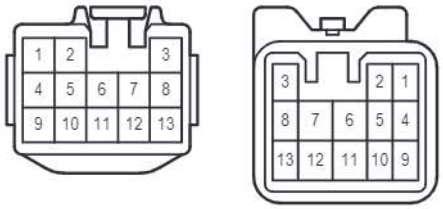


TU6
White

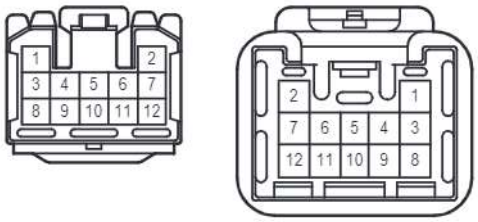


TX1
White

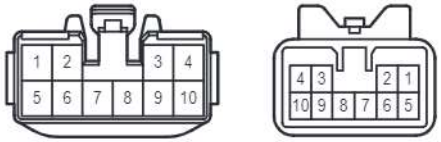


TY3
White

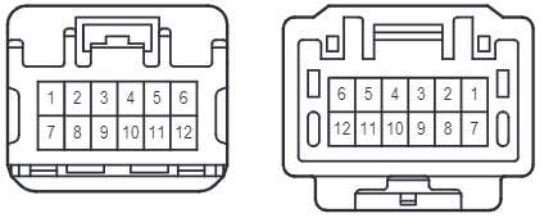


TY5
White

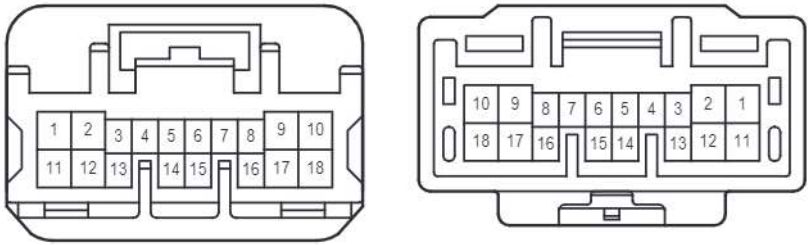


UX1
White

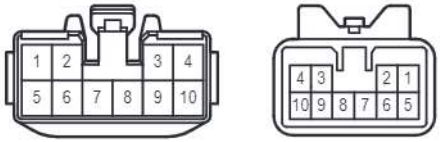


VB1
White

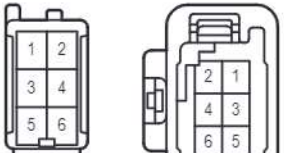


Vj2
White

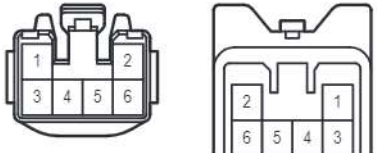


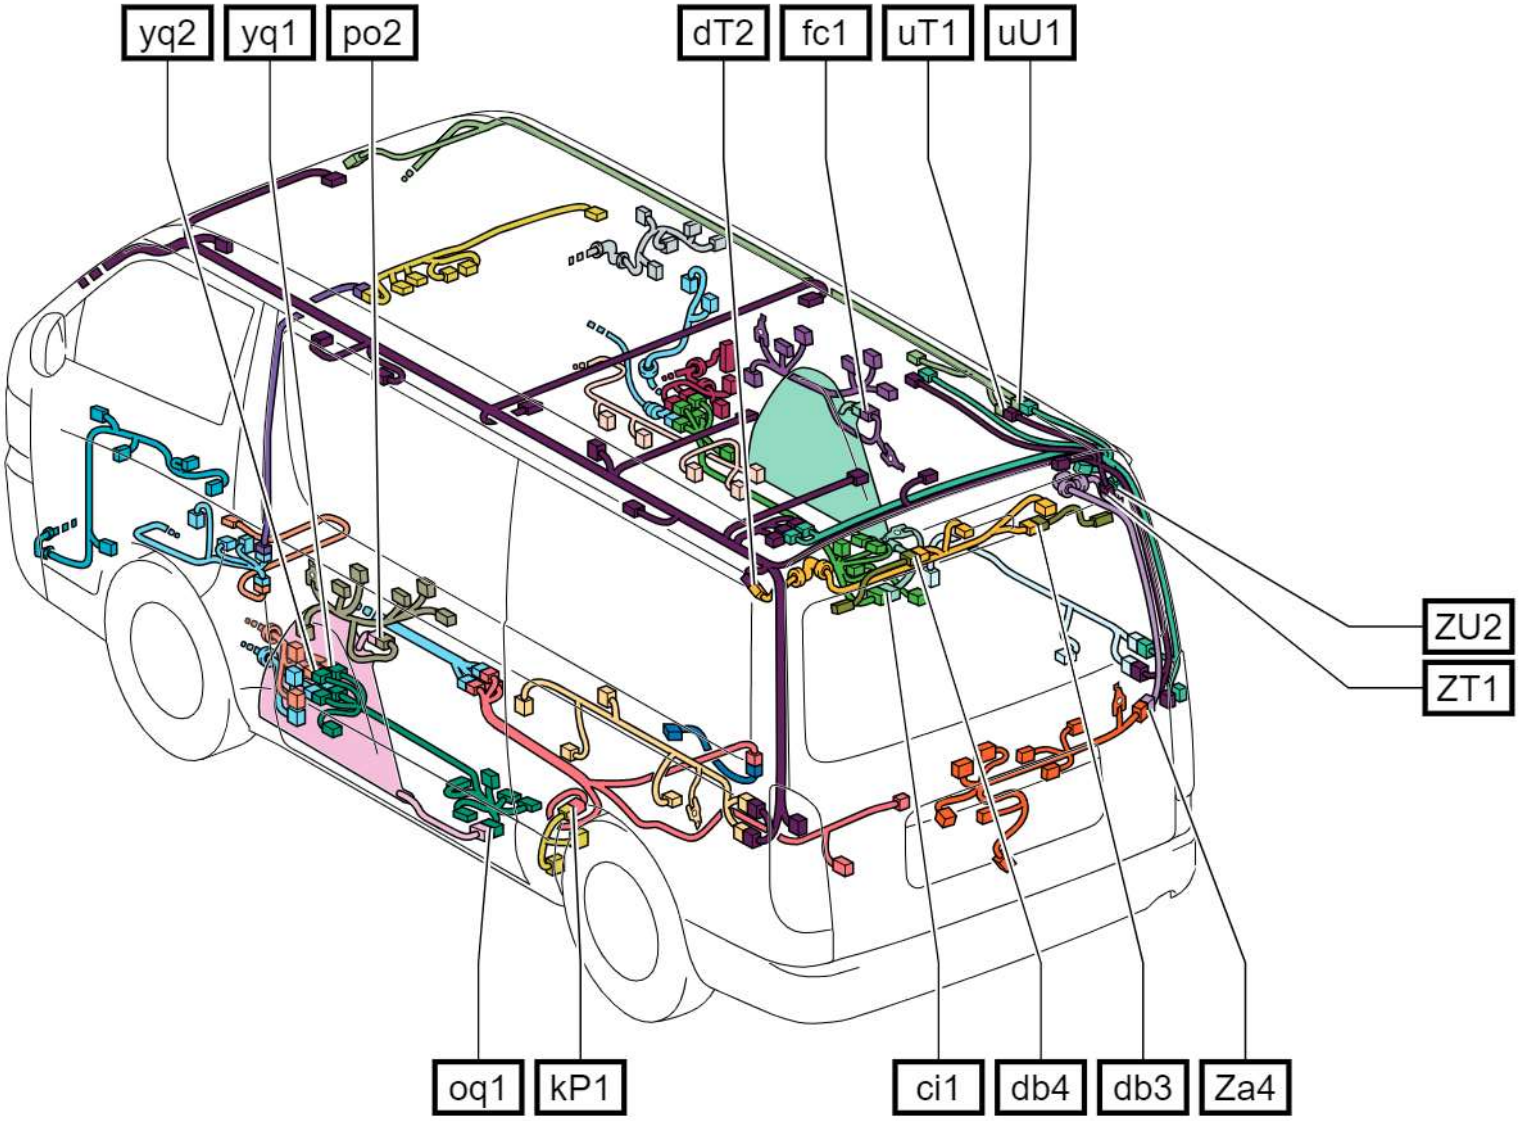
yq2
yq1
po2
dT2
fc1
uT1
uU1
ZU2
ZT1
oq1
kP1
ci1
db4
db3
Za4


ZT1
White

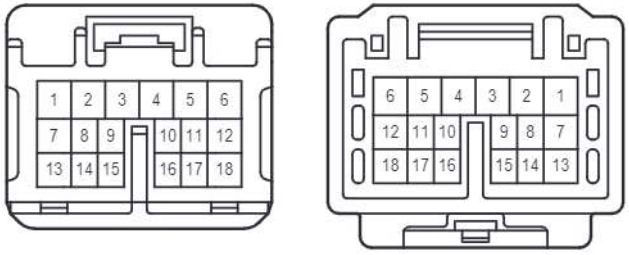


ZU2
White

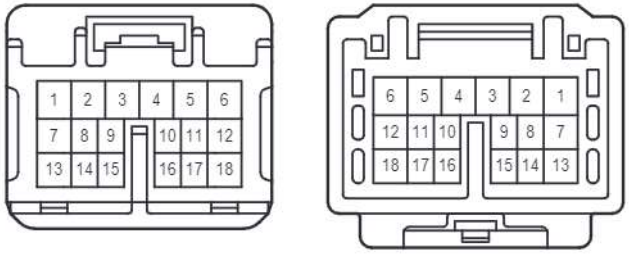

Za4
White

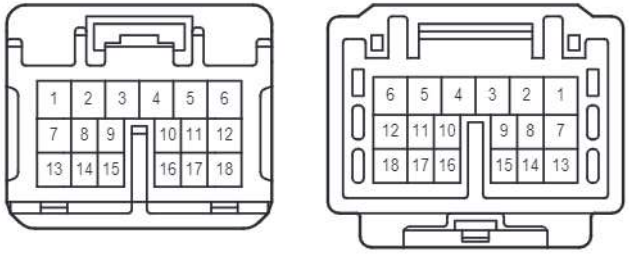

ci1
Gray

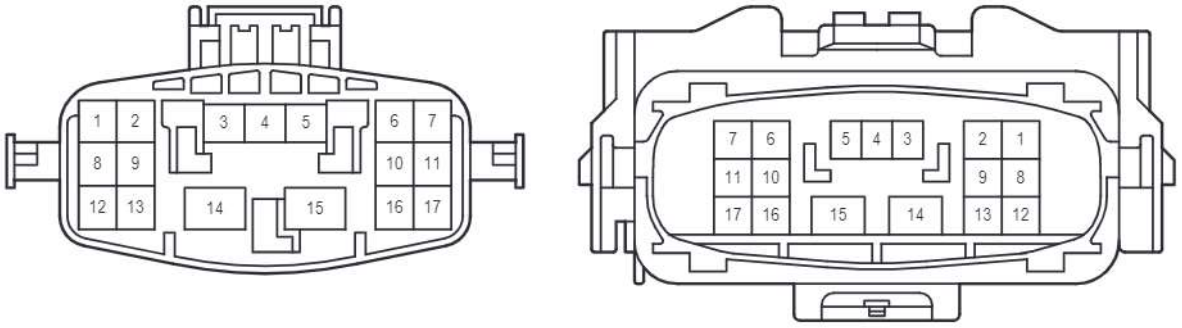


dT2
White

db3
White

db4
White


fc1
White

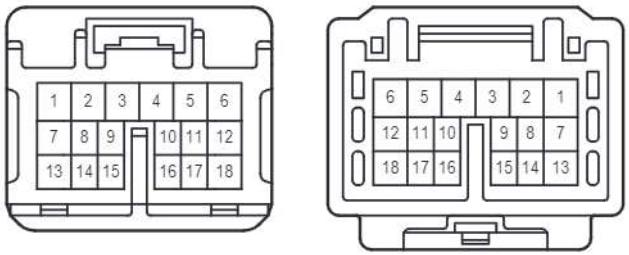


kP1
Black




oq1
Gray

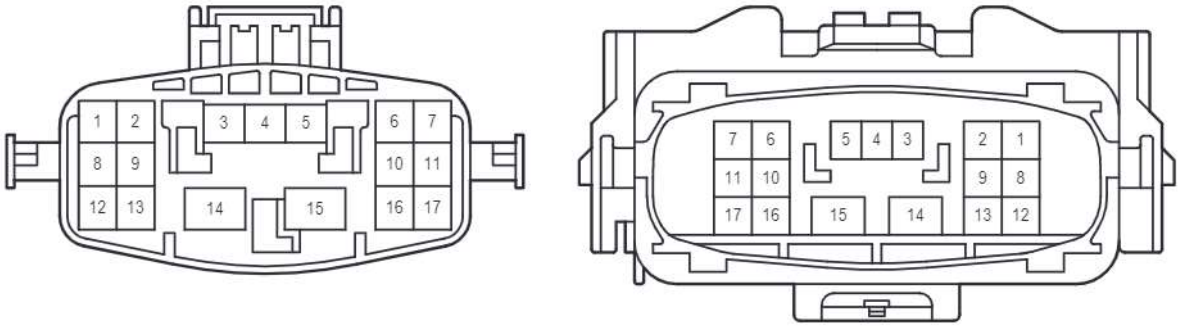

po2
White

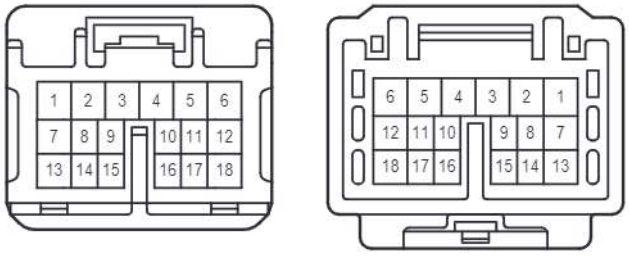



uT1
White

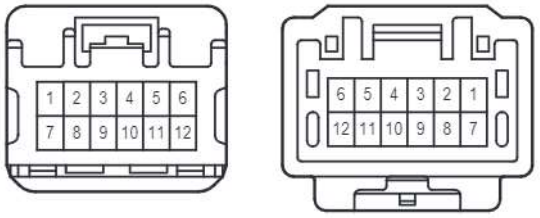


uU1
White

yq1
White

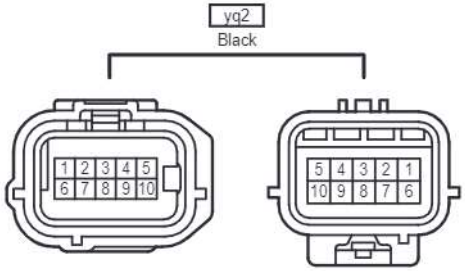
yq2
Black
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6

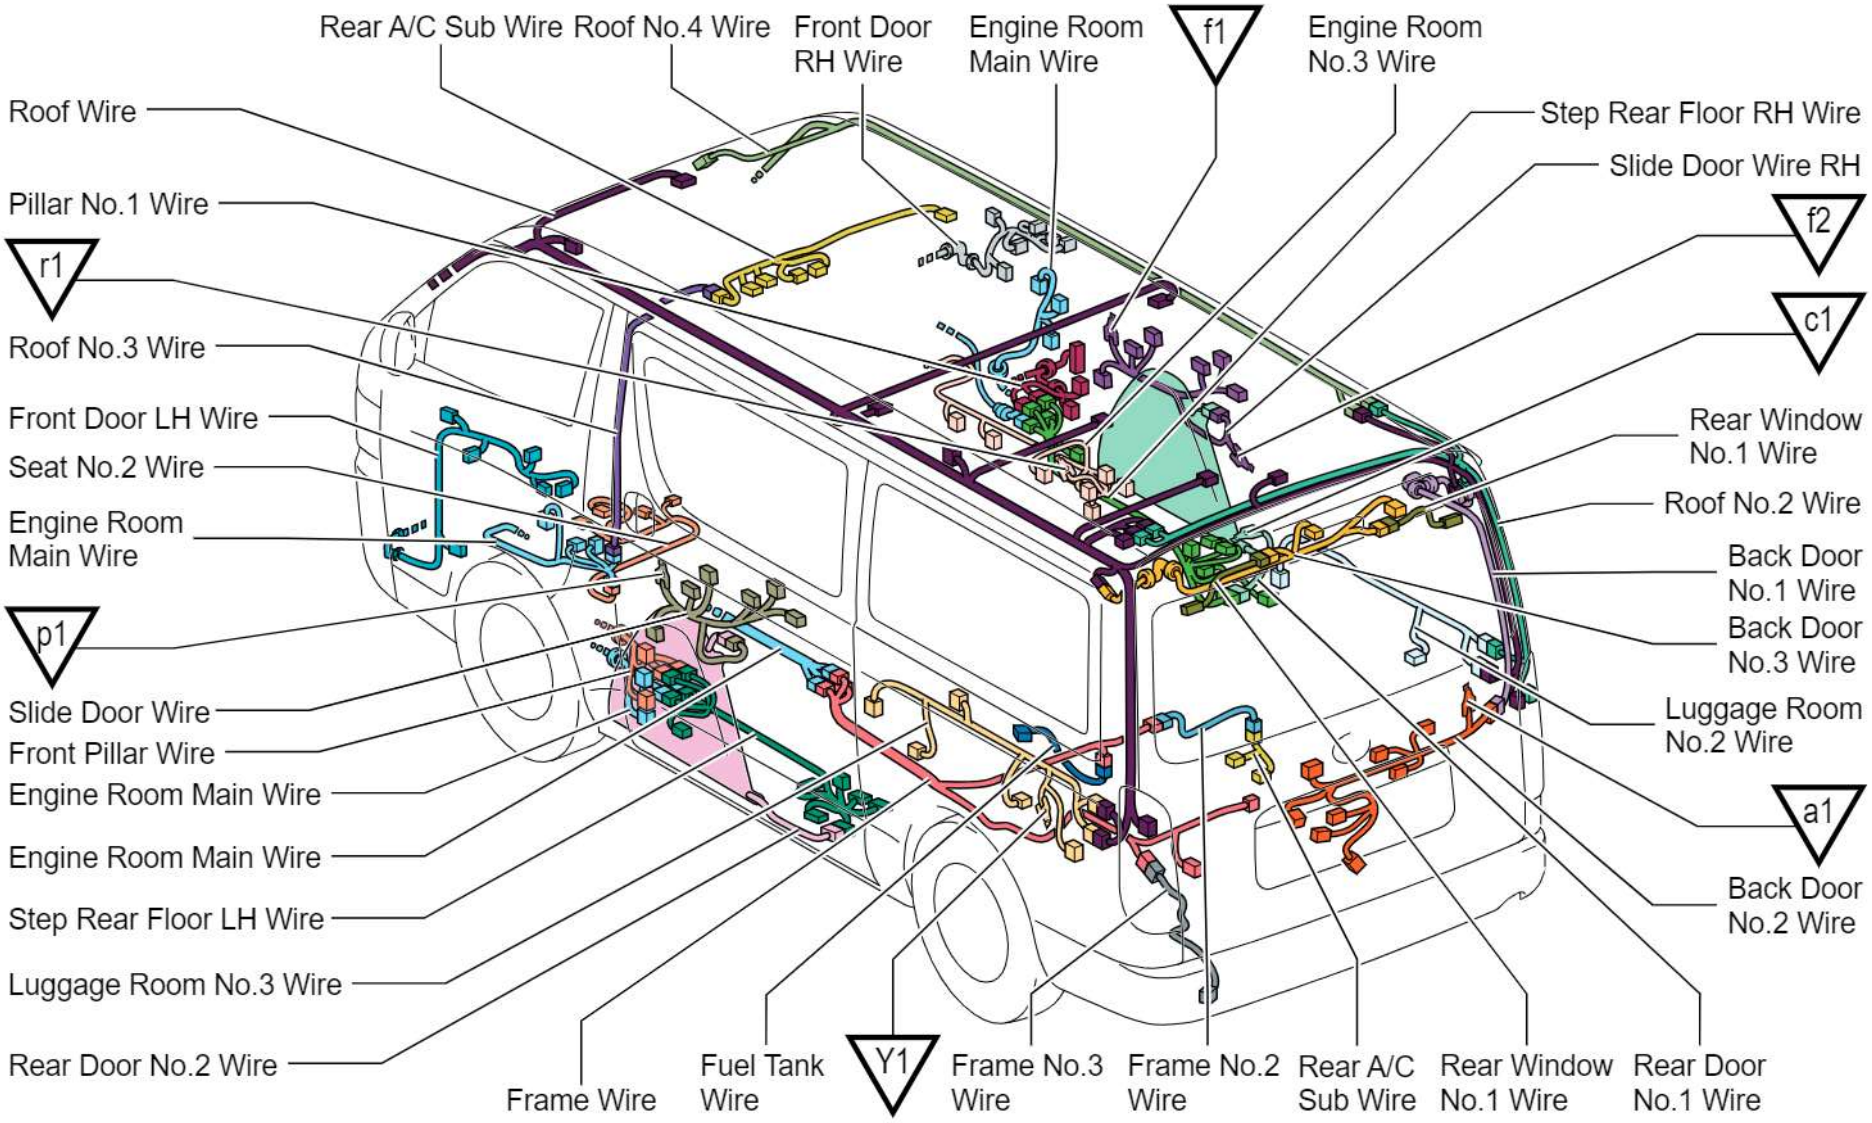

Rear A/C Sub Wire
Roof No.4 Wire
Front Door RH Wire
Engine Room Main Wire
f1
Engine Room No.3 Wire
Roof Wire
Step Rear Floor RH Wire
Slide Door Wire RH
Pillar No.1 Wire
f2
r1
c1
Roof No.3 Wire
Front Door LH Wire
Rear Window No.1 Wire
Seat No.2 Wire
Roof No.2 Wire
Engine Room Main Wire
Back Door No.1 Wire
Back Door No.3 Wire
p1
Luggage Room No.2 Wire
Slide Door Wire
Front Pillar Wire
Engine Room Main Wire
a1
Engine Room Main Wire
Back Door No.2 Wire
Step Rear Floor LH Wire
Luggage Room No.3 Wire
Rear Door No.2 Wire
Frame Wire
Fuel Tank Wire
Y1
Frame No.3 Wire
Frame No.2 Wire
Rear A/C Sub Wire
Rear Window No.1 Wire
Rear Door No.1 Wire

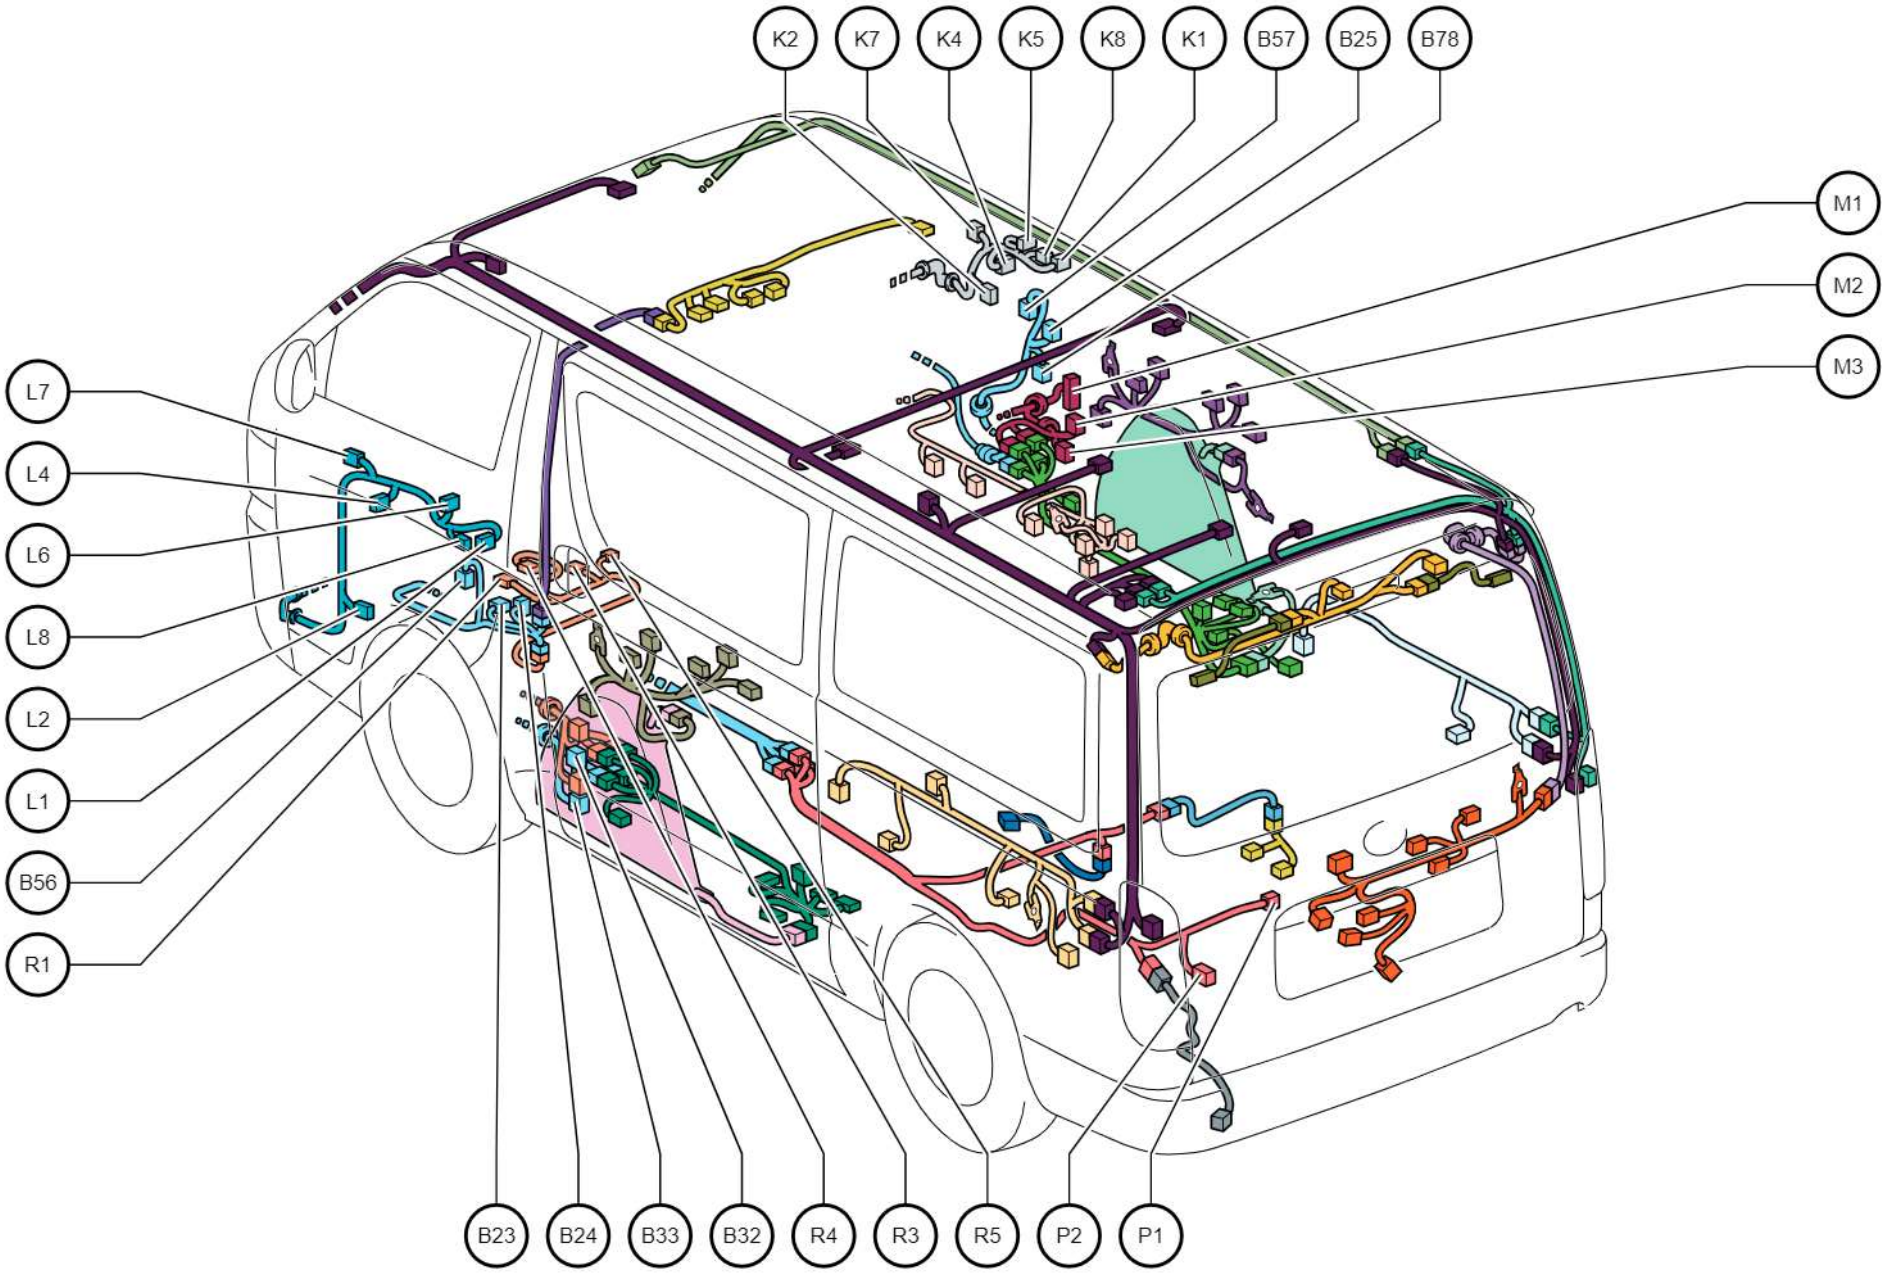
K2
K7
K4
K5
K8
K1
B57
B25
B78
M1
M2
M3
L7
L4
L6
L8
L2
L1
B56
R1
B23
B24
B33
B32
R4
R3
R5
P2
P1

B	23	Front Seat Outer Belt (LH)
B	24	Blower SW (Rear Heater)
B	25	Front Seat Outer Belt (RH)
B	32	Door Control Relay (LH)
B	33	Step Lamp (LH)
B	56	Door Courtesy SW (Front LH)
B	57	Door Courtesy SW (Front RH)
B	78	Option Connector
K	1	Door Lock Assembly (Front RH)
K	2	Speaker (Front Door RH)
K	4	Power Window Regulator Motor (Front RH)
K	5	Power Window Master SW
K	7	Outer Rear View Mirror (RH)
K	8	FR Door Outside Handle Assembly RH
L	1	Door Lock Assembly (Front LH)
L	2	Speaker (Front Door LH)
L	4	Power Window Regulator Motor (Front LH)
L	6	Power Window SW (Front LH)
L	7	Outer Rear View Mirror (LH)
L	8	FR Door Outside Handle Assembly LH
M	1	Slide Door Control Junction (Male RH)
M	2	Door Control Relay (RH)
M	3	Step Lamp (RH)
P	1	Rear Speed Sensor (Rear Speed Sensor RH)
P	2	Rear Height Control Sensor Sub-Assembly LH
R	1	Front Seat Inner Belt (Front Passenger's Side)
R	3	Front Seat Inner Belt (Front Passenger's Side)
R	4	Belt Warning Occupant Detection Sensor
R	5	Indoor Electrical Key Antenna Assembly (FR)


Position of Parts in Body <RHD>

B23
Yellow

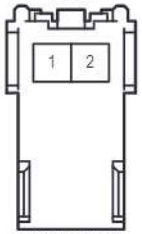


90980-12253

B24
Blue

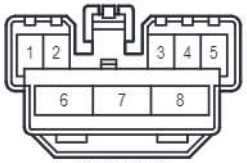

90980-10463

B25
Yellow

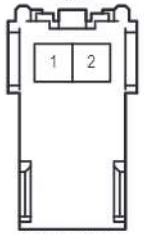


90980-12253

B32
Gray



90980-10789

B33
White



90980-10121

B56
Black



90980-10871

B57
Black




90980-10871

B78
White



90980-10908

K1
White

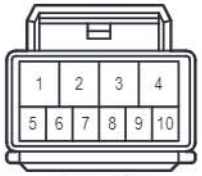

90980-12226

K2
White




90980-10935

K4
Black




90980-10797

K5
White

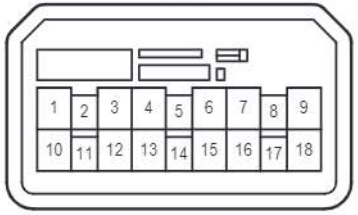


90980-12122

K7
White

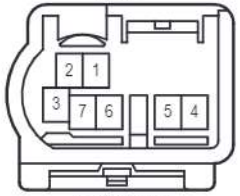


90980-12059

K8
Gray

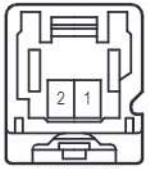

90980-12936

L1
White

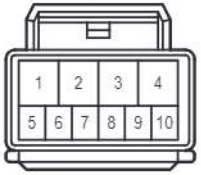

90980-12226

L2
White




90980-10935

L4
Black




90980-10797

L6
White

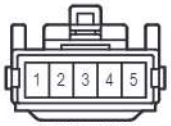


90980-10789

L7
White

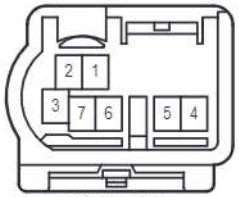

90980-12059

L8
Gray

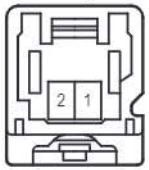

90980-12936

M1
White



M2
Gray




M3
White



P1
Black




P2
Black



R1
Blue

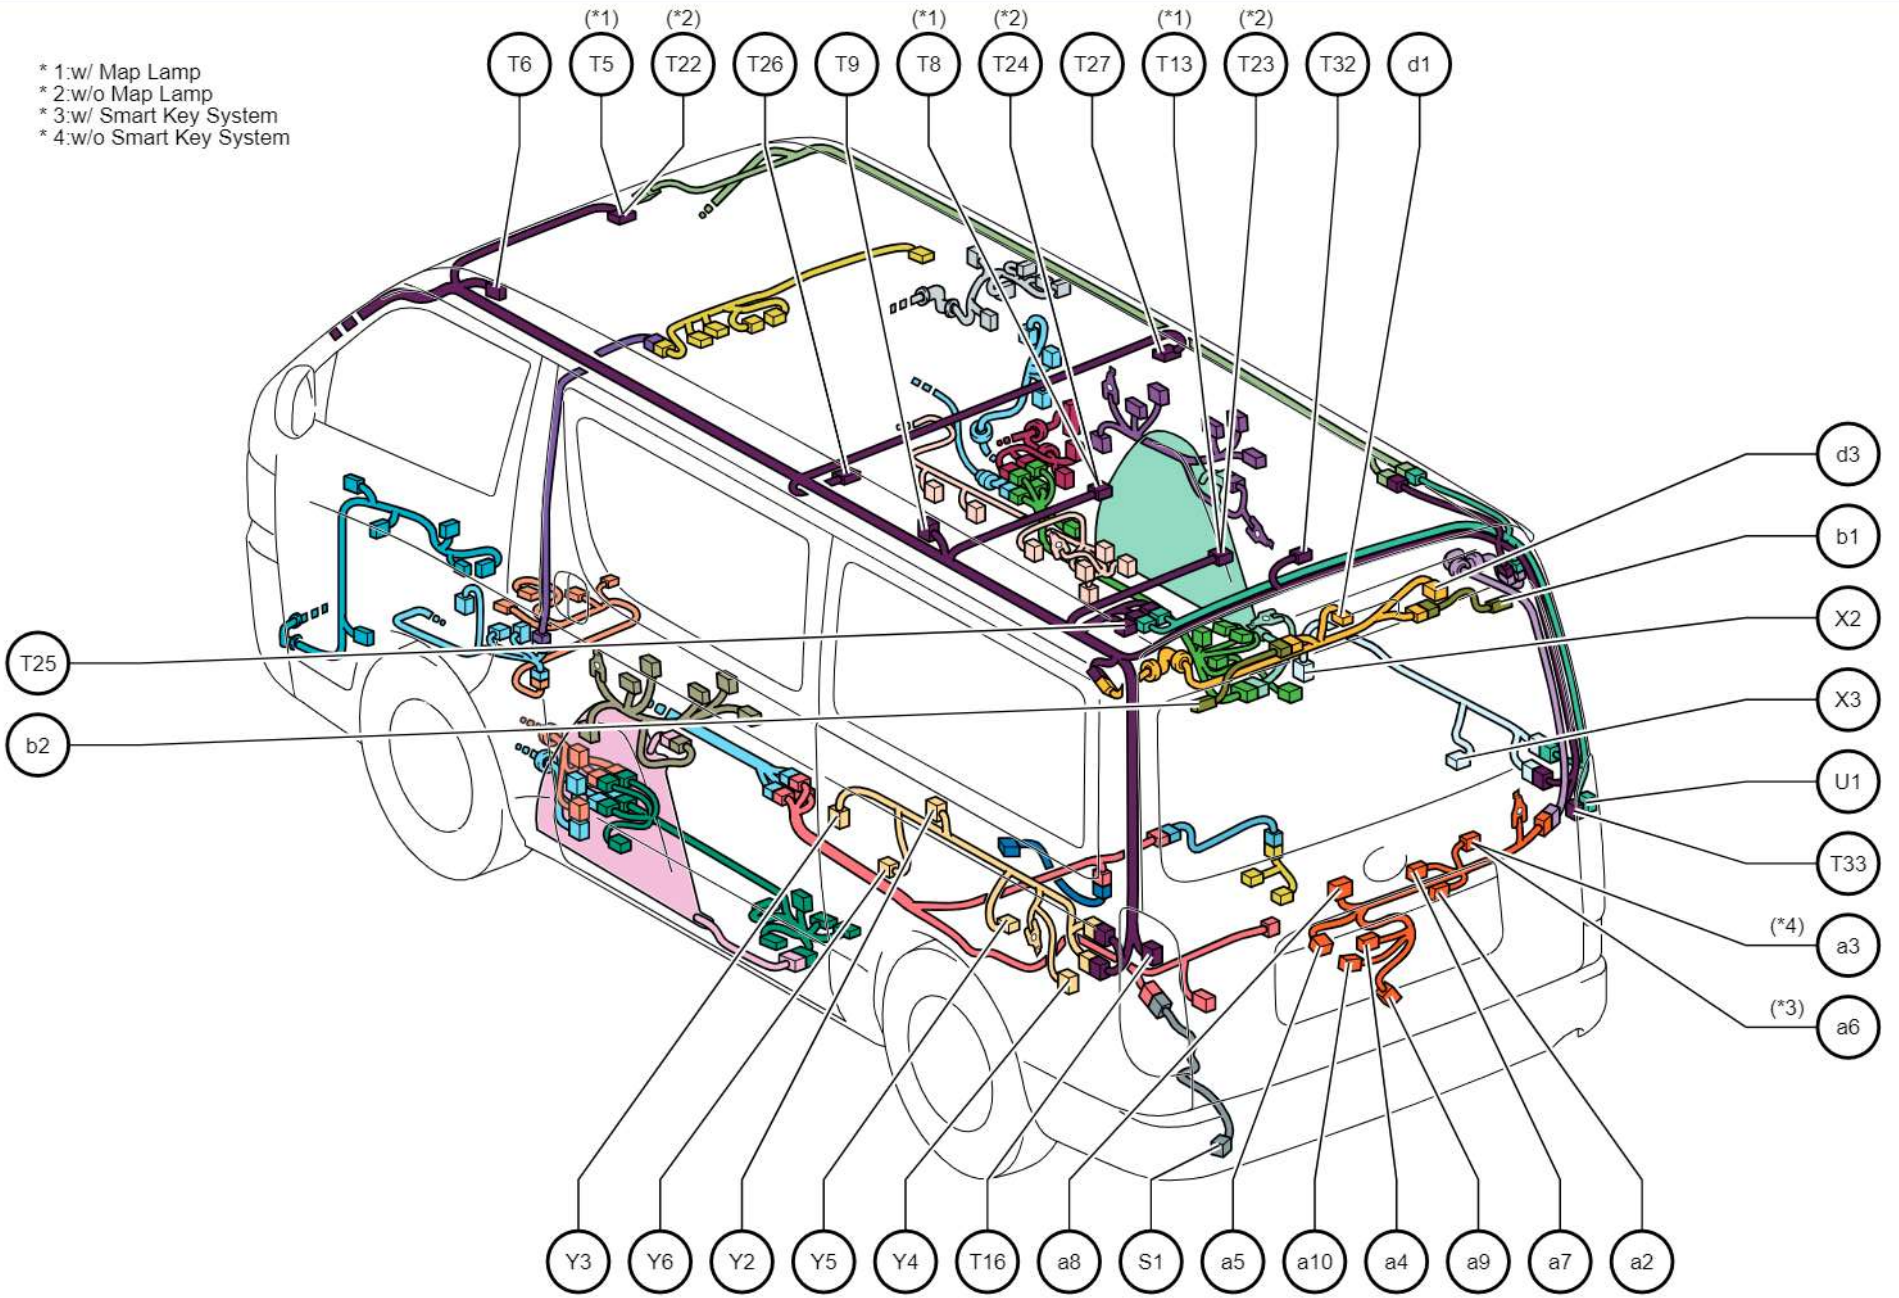


* 1:w/ Map Lamp
* 2:w/o Map Lamp
* 3:w/ Smart Key System
* 4:w/o Smart Key System
(*1)
(*2)
(*1)
(*2)
(*1)
(*2)
T6
T5
T22
T26
T9
T8
T24
T27
T13
T23
T32
d1
d3
b1
X2
X3
U1
T33
(*4)
a3
(*3)
a6
T25
b2
Y3
Y6
Y2
Y5
Y4
T16
a8
S1
a5
a10
a4
a9
a7
a2

S 1 Electrical Key Antenna

T 5 Map Lamp
T 6 Diode (Door Courtesy No.4)
T 8 Room Lamp (Center)
T 9 Diode (Door Courtesy No.5)
T 13 Room Lamp (Rear)
T 16 Rear Combination Lamp (LH)
T 22 Room Lamp (Front)
T 23 Room Lamp (Rear)
T 24 Room Lamp (Center)
T 25 Junction Connector
T 26 Speaker (Roof LH)
T 27 Speaker (Roof RH)
T 32 Room Lamp (Luggage compartment)
T 33 Rear Combination Lamp (RH)

U 1 Rear Combination Lamp (RH)

X 2 Door Courtesy SW (Slide Door RH)
X 3 Speaker (Rear RH)

Y 2 Door Control Receiver
Y 3 Door Courtesy SW (Slide Door LH)
Y 4 Option Connector (Clearance Warning ECU)
Y 5 Speaker (Rear LH)
Y 6 Indoor Electrical Key Antenna Assembly (RR)

a 2 Back Door Courtesy SW
a 3 Back Door Lock Assembly
a 4 License Plate Lamp
a 5 Television Camera Assembly
a 6 Back Door Lock Assembly
a 7 Back Door Lock Assembly (Door Control Switch)
a 8 Back Door Closer Relay
a 9 Back Door Closer Motor Assembly
a 10 License Plate Lamp (Door Electrical Key Switch)

b 1 Rear Window Defogger
b 2 Rear Window Defogger


Position of Parts in Body <RHD>

S1
Black


90980-12416

T5
White



90980-10365

T6
White


90980-11071

T8
White



90980-11987

T9
White


90980-11071

T13
White


90980-11987

T16
White



90980-11011

T22
White



90980-10935

T23
White



90980-10935

T24
White


90980-10935

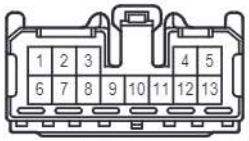T25
Blue


90980-11542

T26
White



90980-10935

T27
White



90980-10935

T32
White


90980-10935

T33
White



90980-11011

U1
White


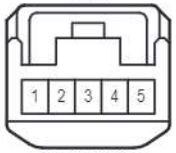
90980-11011

X2
White



90980-11097

X3
White


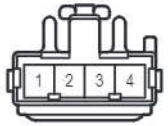
90980-10935

Y2
White


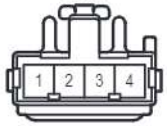
90980-12366

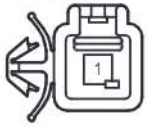Y3
White


90980-11097

Y4
White


90980-11013
(Before Apr. 2009 Production)

Y4
Black


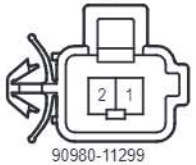
90980-11013
(From Apr. 2009 Production)

Y5
White



90980-10935

Y6
Gray



90980-12572

a2
White


90980-11299

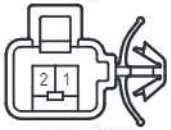a3
Gray


90980-11300

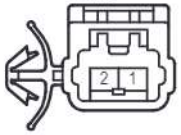a4
White


90980-11395

a5
Gray


a6
White

a7
White

a8
White


Position of Parts in Body <RHD>

a9
Gray

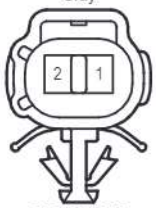

90980-11002

a10
Gray

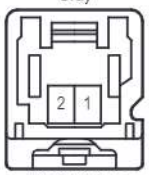

90980-12936

b1
Black



90980-11853

b2
Black



90980-11853

d1
White




90980-11918

d3
White




90980-10908

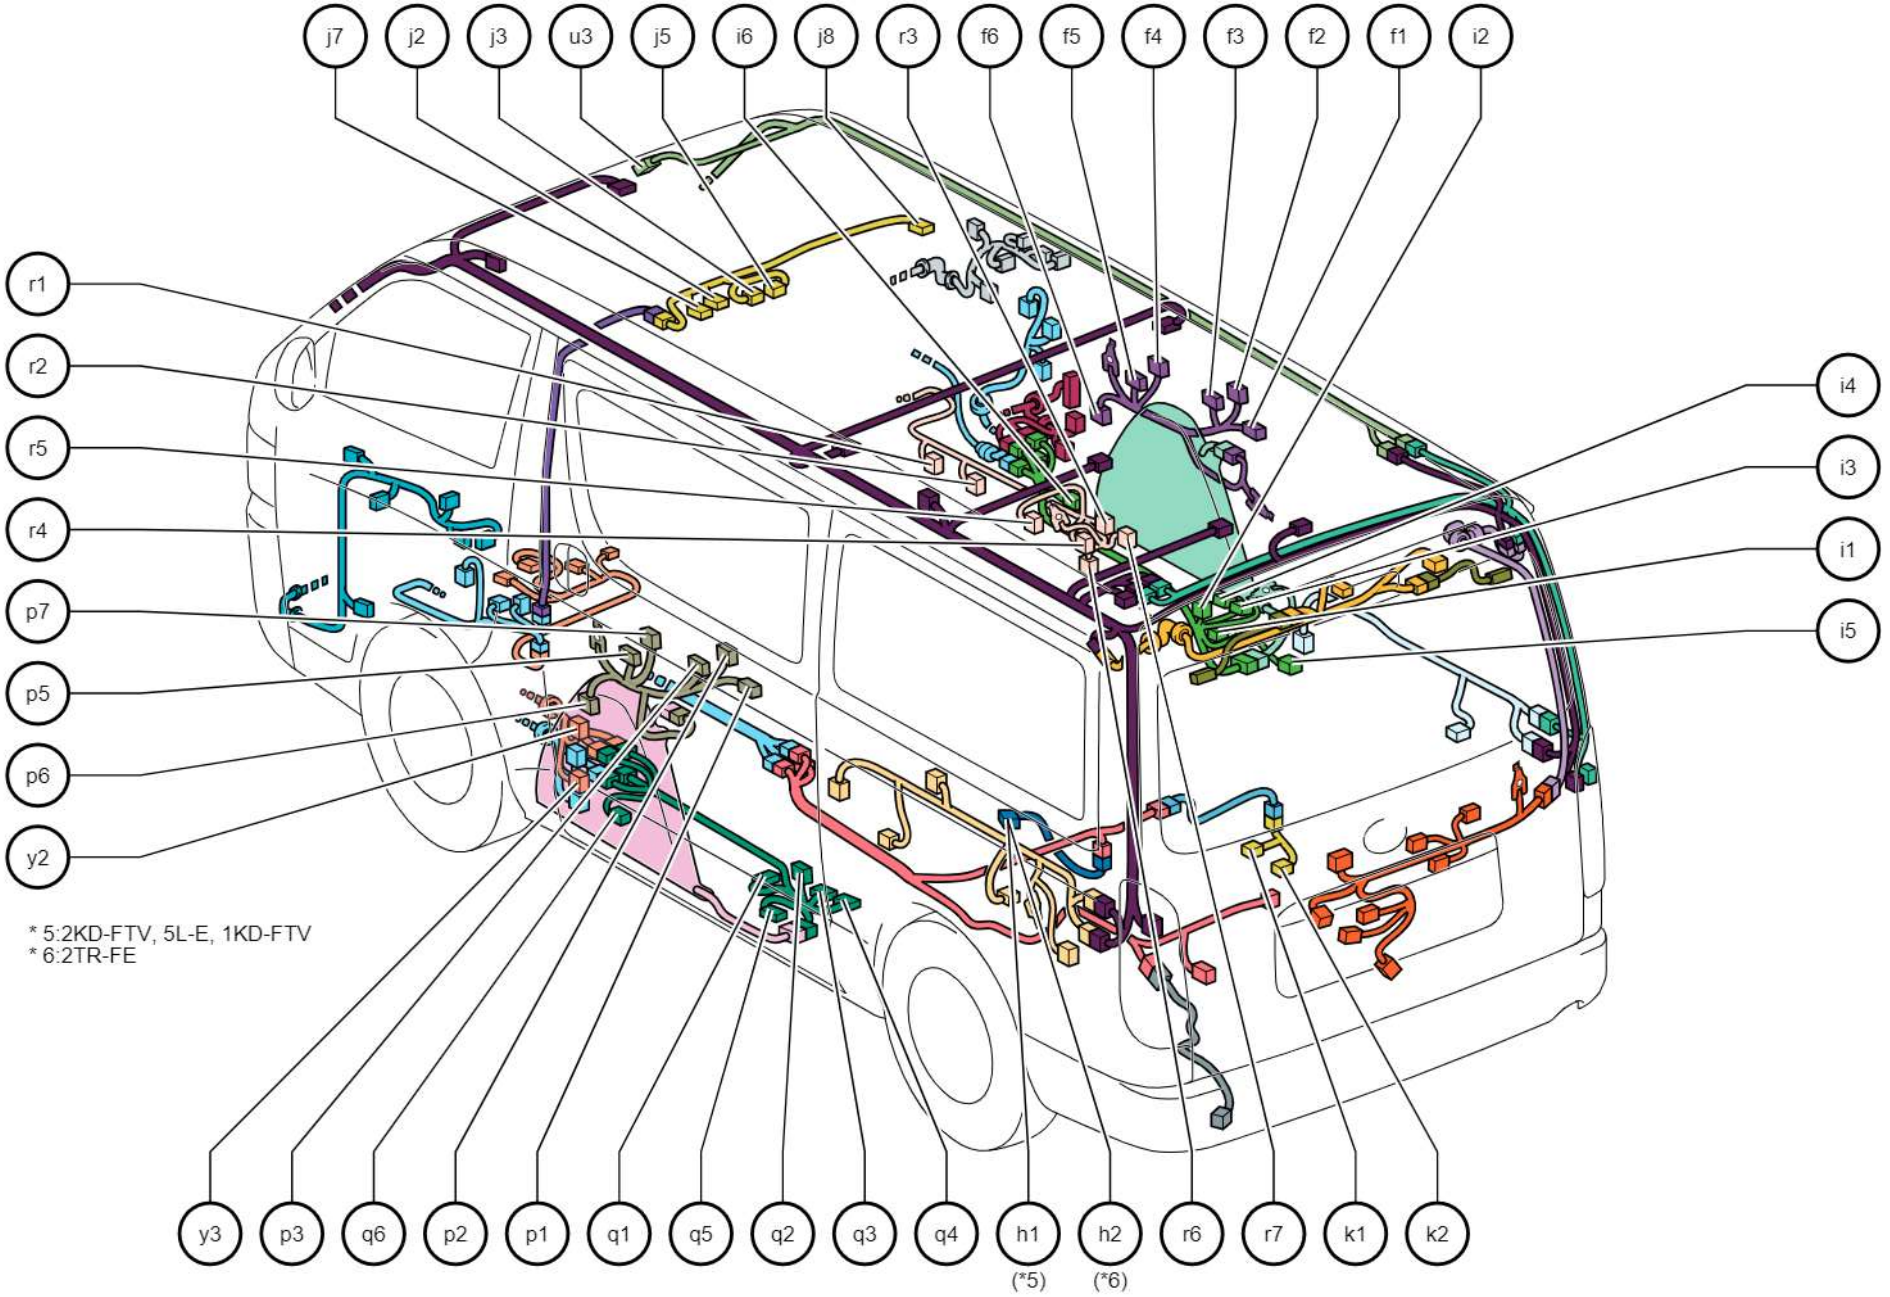
j7
j2
j3
u3
j5
i6
j8
r3
f6
f5
f4
f3
f2
f1
i2
r1
r2
r5
r4
p7
p5
p6
y2
i4
i3
i1
i5
* 5:2KD-FTV, 5L-E, 1KD-FTV
* 6:2TR-FE
y3
p3
q6
p2
p1
q1
q5
q2
q3
q4
h1
(*5)
h2
(*6)
r6
r7
k1
k2

f	1	Slide Door Lock Assembly (RH)
f	2	Door Opening Relay (RH)
f	3	Door Control SW (RH)
f	4	Slide Door Handle SW (RH)
f	5	Slide Door Lock Remote Control Assembly (RH)
f	6	Power Slide Door Sensor (RH)
h	1	Fuel Sender Gage
h	2	Fuel Suction Pump and Gage Assembly
i	1	Slide Door Motor Assembly (RH)
i	2	Slide Door Warning Buzzer (RH)
i	3	Door Control Relay (Power Slide Door RH)
i	4	Door Control Relay (Power Slide Door RH)
i	5	Slide Door Motor Assembly (RH)
i	6	Step Lamp (RH)
j	2	Blower Resistor (Rear A/C)
j	3	Blower SW (Rear A/C)
j	5	A/C Evaporator Temp. Sensor (Rear A/C)
j	7	Blower Motor (Rear A/C LH)
j	8	Blower Motor (Rear A/C RH)
k	1	Blower Motor (Rear Heater)
k	2	Blower Resistor (Rear Heater)
p	1	Slide Door Lock Assembly (LH)
p	2	Door Opening Relay (LH)
p	3	Door Control SW (LH)
p	5	Slide Door Lock Remote Control Assembly (LH)
p	6	Power Slide Door Sensor (LH)
p	7	Slide Door Handle SW (LH)
q	1	Slide Door Motor Assembly (LH)
q	2	Slide Door Warning Buzzer (LH)
q	3	Door Control Relay (Power Slide Door LH)
q	4	Door Control Relay (Power Slide Door LH)
q	5	Slide Door Motor Assembly (LH)
q	6	Step Lamp (LH)
r	1	Exhaust Gas Temperature Sensor


Position of Parts in Body <RHD>

f1
White

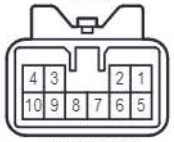


90980-10800

f2
White




90980-10803

f3
White



90980-11011

f4
White




90980-10795

f5
Black



90980-11150

f6
Gray

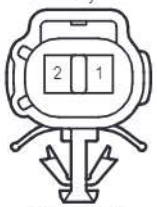

90980-11002

h1
Dark Gray



90980-11077

h2
Dark Gray



90980-11077

i1
Gray




90980-10942

i2
Black




90980-11142

i3
Blue

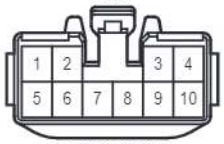

90980-10801

i4
White

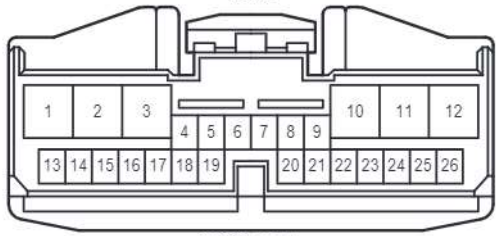


90980-12444

i5
Gray




90980-11599

i6
White




90980-10121

j2
Black

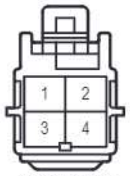

90980-11136

j3
Black

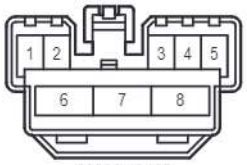

90980-10463

j5
White



90980-10825

j7
Black




90980-10916

j8
Black



90980-10916

k1
Black




90980-10214


k2
Black



p1
White

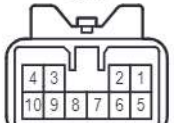


p2
White



90980-10803

p3
White




p5
Black



Position of Parts in Body <RHD>

q4
White

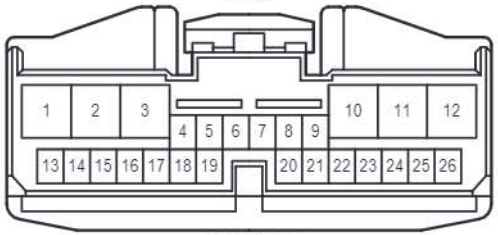

90980-12444

q5
Gray



90980-11599

q6
White



90980-10121

r1
Dark Gray



90980-10898

r2
Black



90980-10948

r3
Black



90980-11030

r4
Dark Gray



90980-11178

(Before Dec. 2013 Production)

r4
Gray



90980-11178

(From Dec. 2013 Production)

r5
Black




90980-10845

r6
Green



90980-11030

r7
Black

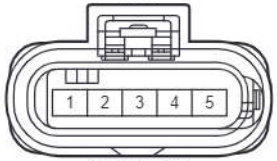

82824-60B00

u3
Black




90980-12183

y2
Gray




90980-10789


y3
White



90980-10121

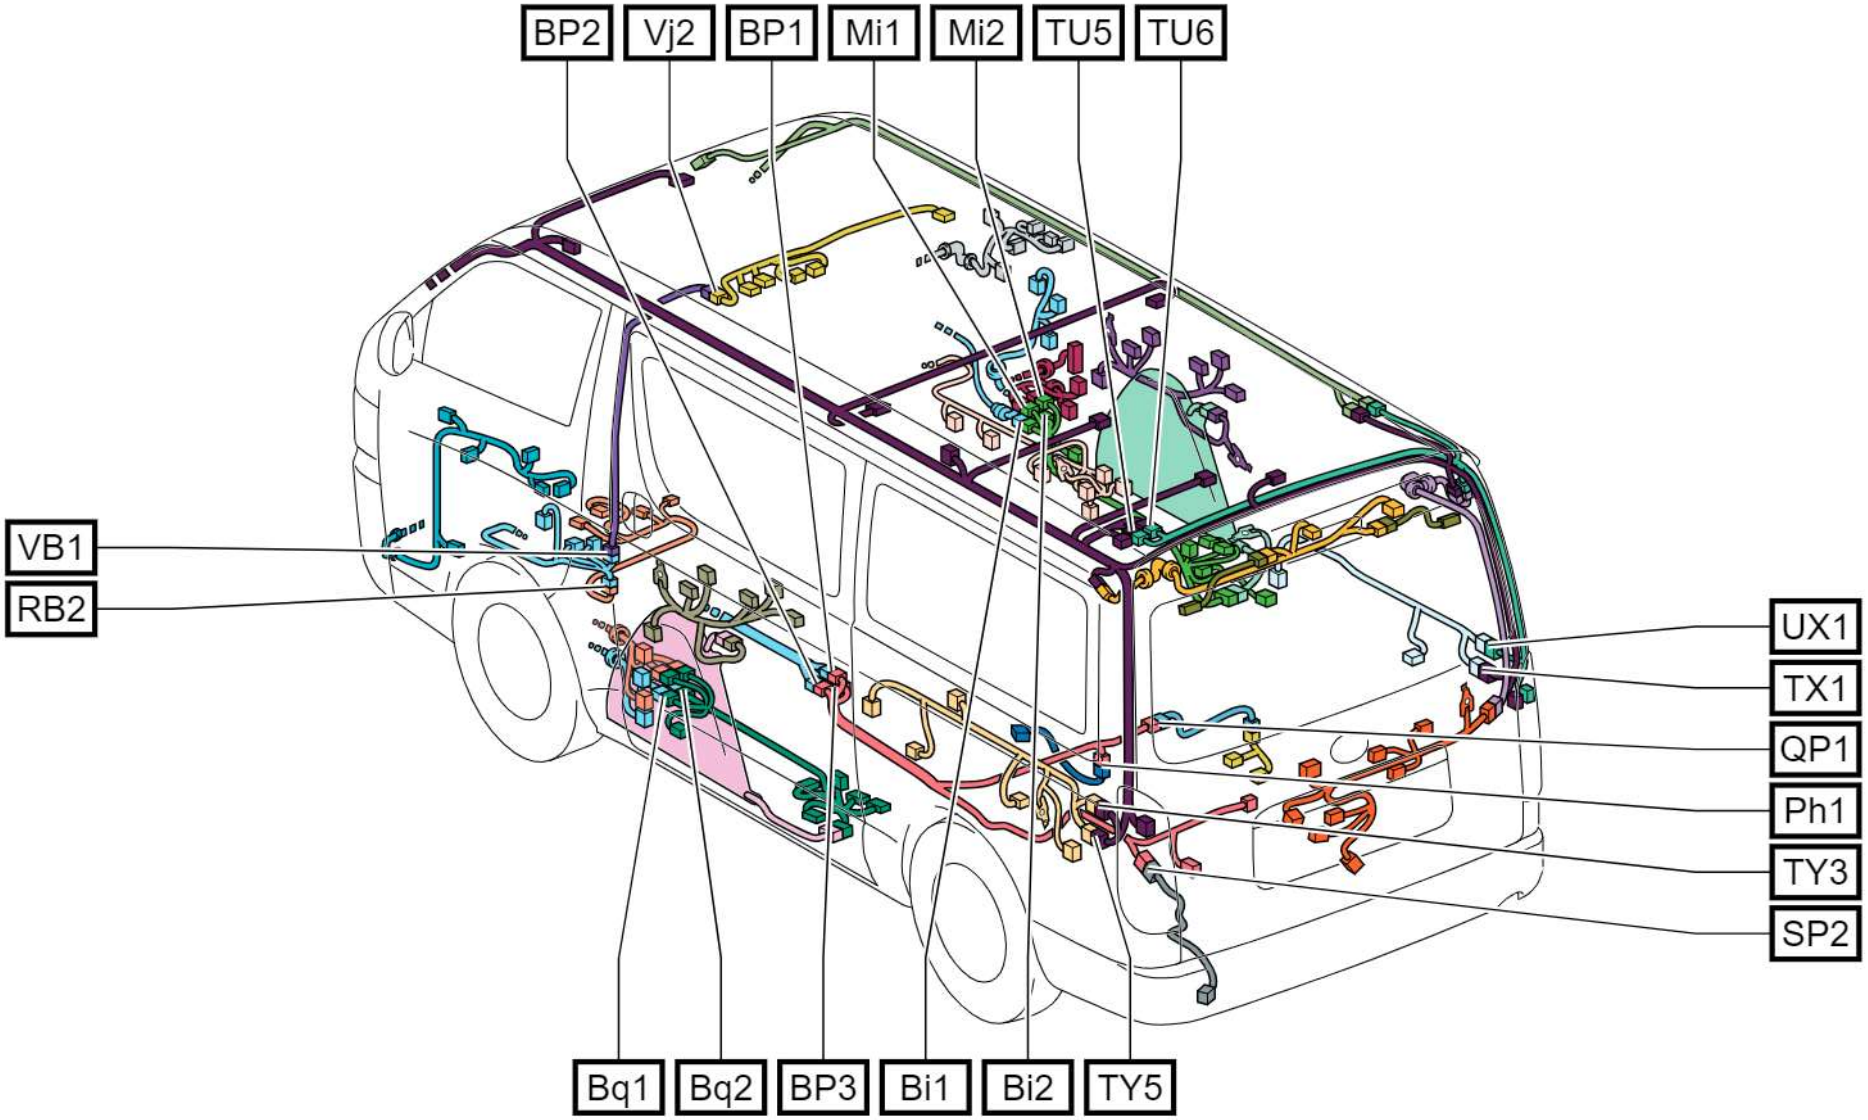

BP2
Vj2
BP1
Mi1
Mi2
TU5
TU6
VB1
RB2
UX1
TX1
QP1
Ph1
TY3
SP2
Bq1
Bq2
BP3
Bi1
Bi2
TY5

BP1
Black

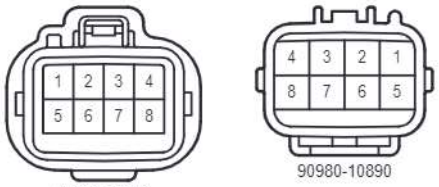


90980-10891
90980-10890

BP2
Dark Gray

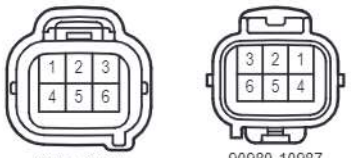


90980-10988
90980-10987

BP3
Black

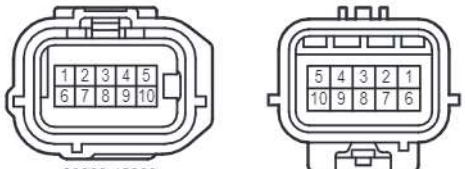


90980-12380
90980-12379

Bi1
White

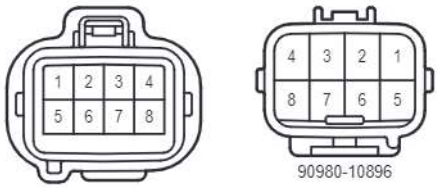


90980-10897
90980-10896

Bi2
Black

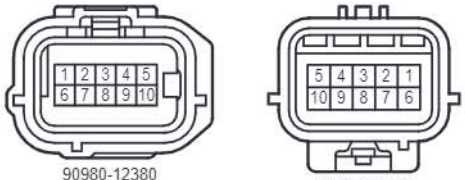


90980-12380
90980-12379

Bq1
White

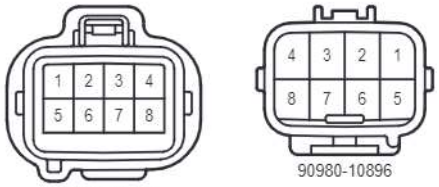


90980-10897
90980-10896

Bq2
Black

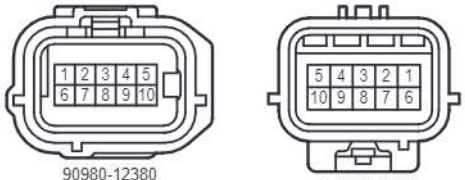


90980-12380
90980-12379

Mi1
White

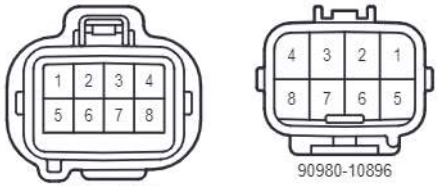

90980-10897
90980-10896

RB2
White

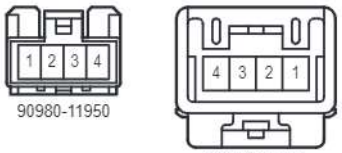


90980-11950
90980-12123

SP2
White




90980-10942
90980-10941

TU5
White

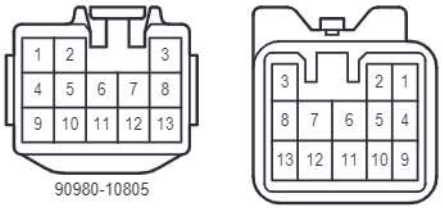


90980-10805
90980-10804

TU6
White

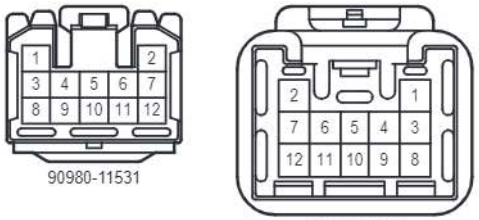


90980-11531
90980-11530

TX1
White

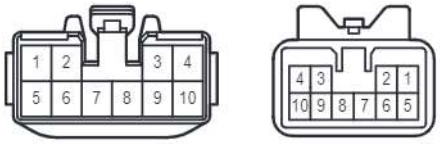


90980-10801
90980-10800

TY3
White

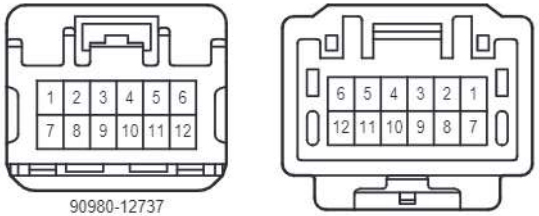


90980-12737
90980-12736

TY5
White

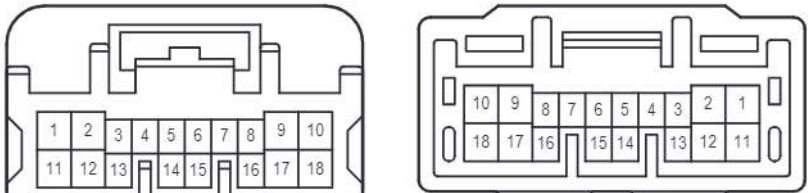



UX1
White

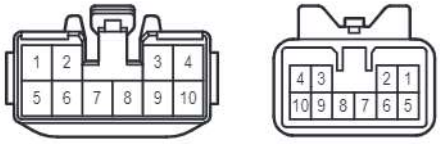


90980-10801
90980-10800

Wire and Wire in Body <RHD>

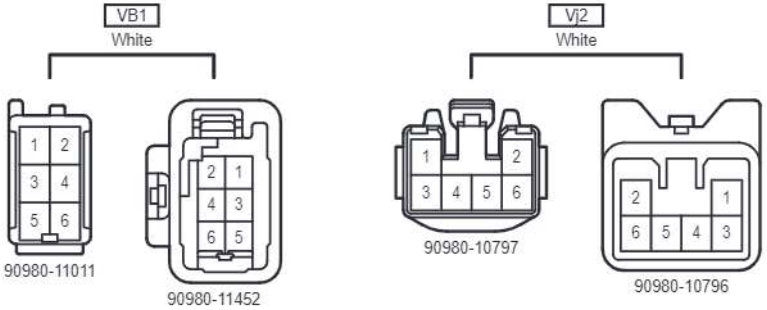


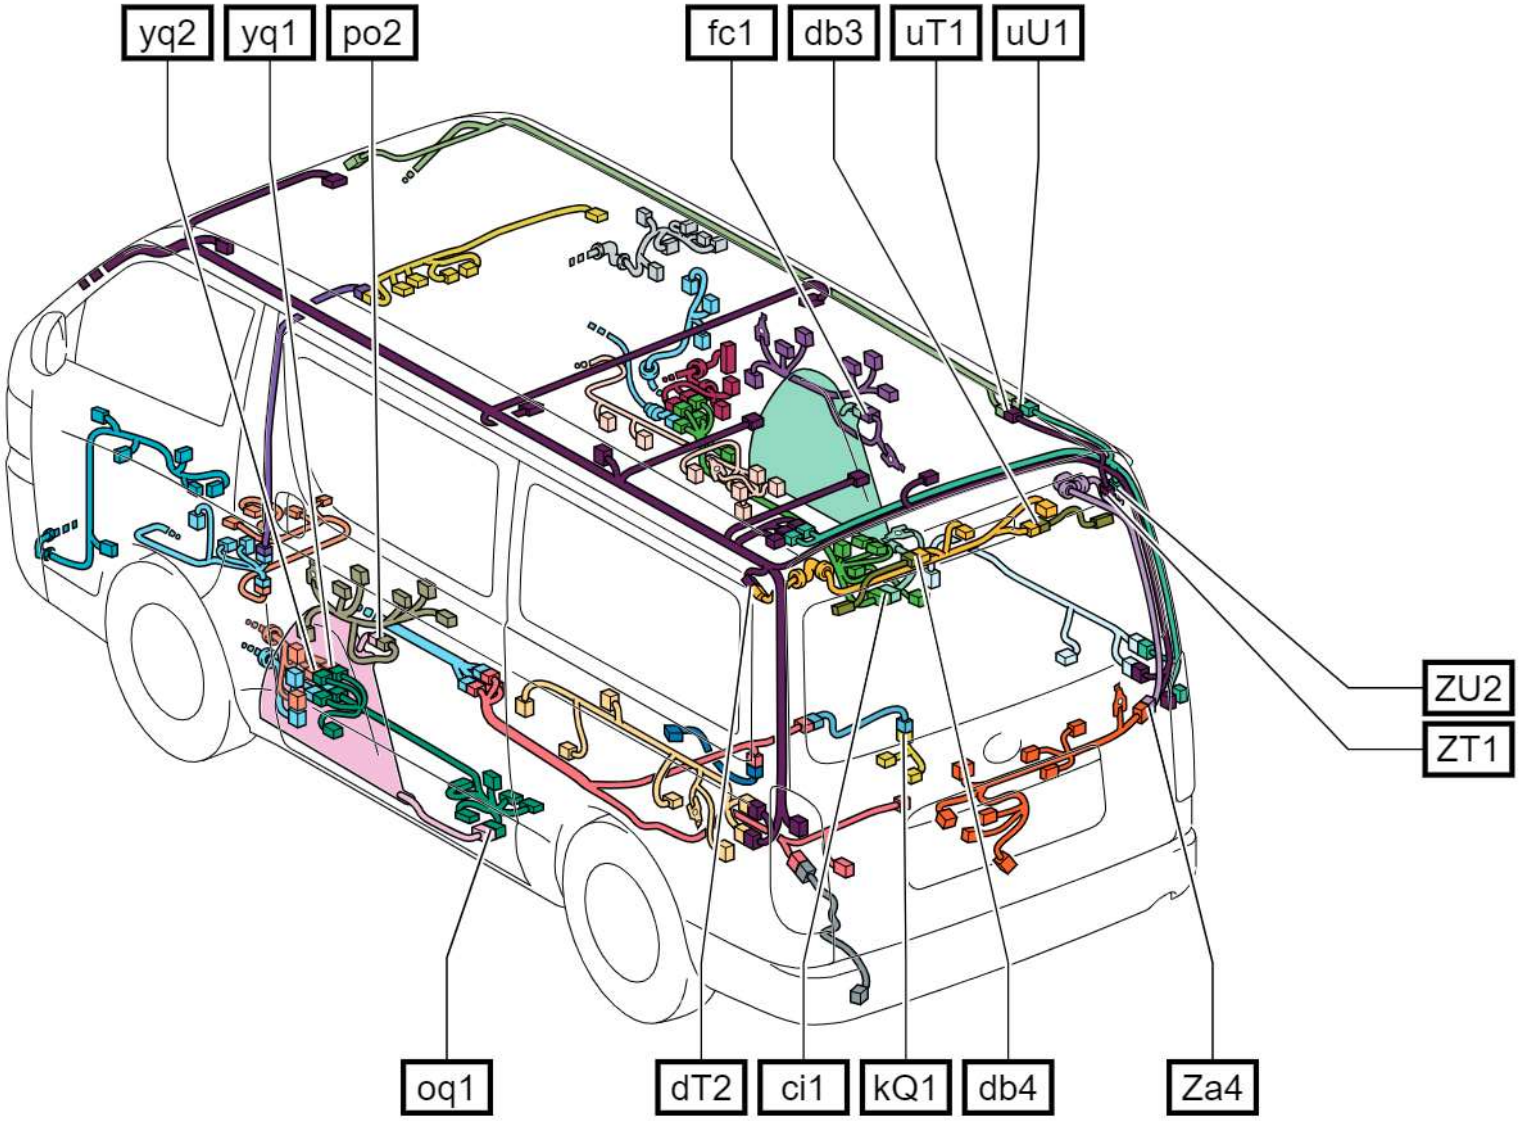
yq2
yq1
po2
fc1
db3
uT1
uU1
ZU2
ZT1
oq1
dT2
ci1
kQ1
db4
Za4

ZT1
White

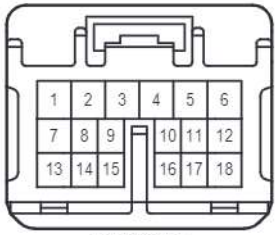


90980-12745

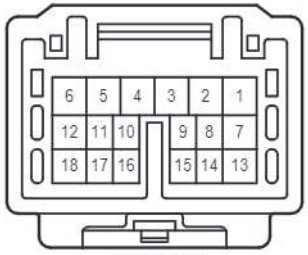


90980-12744

ZU2
White

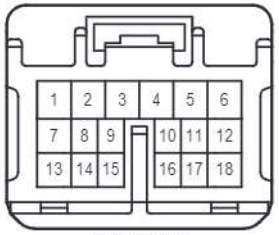


90980-12745

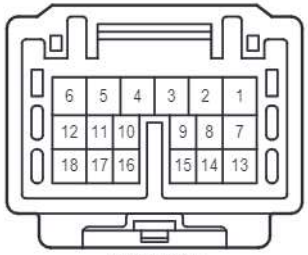


90980-12744

Za4
White

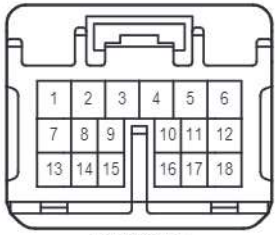


90980-12745

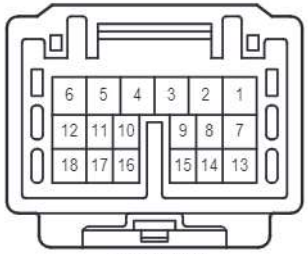


90980-12744

ci1
Gray

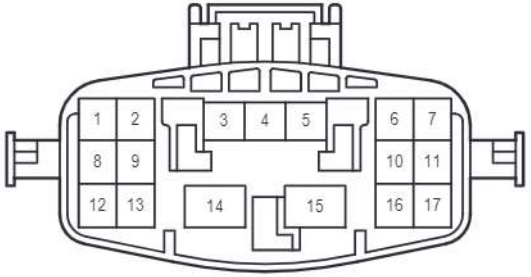

90980-11601

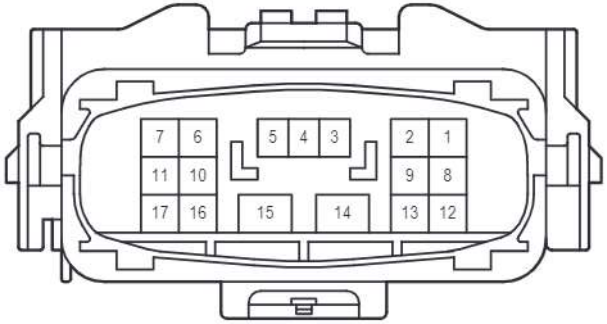


90980-11600

dT2
White


db3
White

db4
White

fc1
White

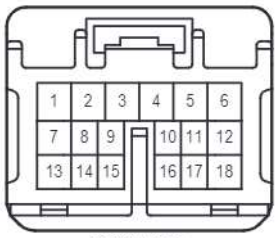

90980-12745

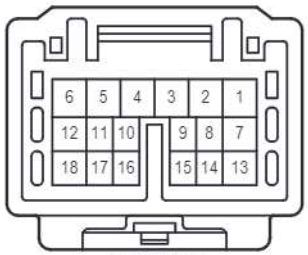

90980-12744

kQ1
Black




90980-10942




90980-10941

oq1
Gray

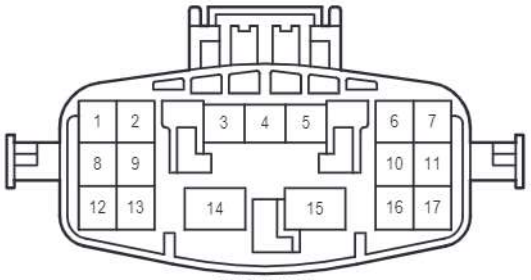


90980-11601

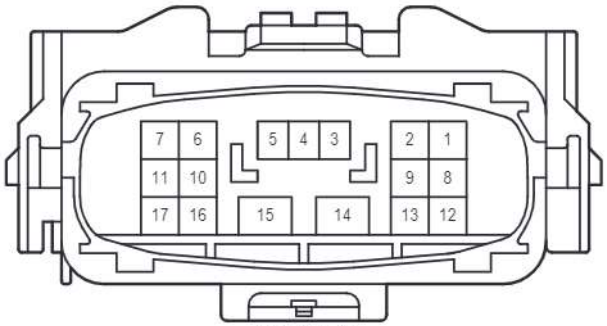


90980-11600

po2
White

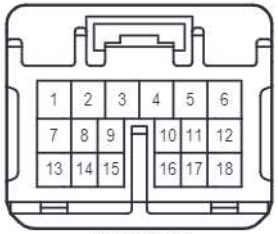


90980-12745

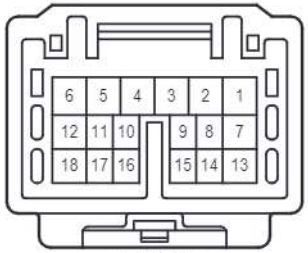


90980-12744

uT1
White

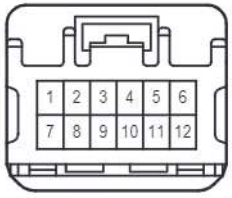

90980-12737

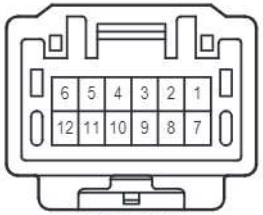



90980-12736


uU1
White

yq1
White

Wire and Wire in Body <RHD>

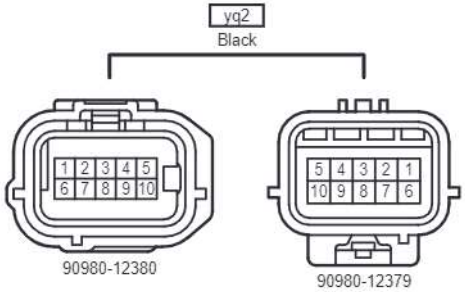

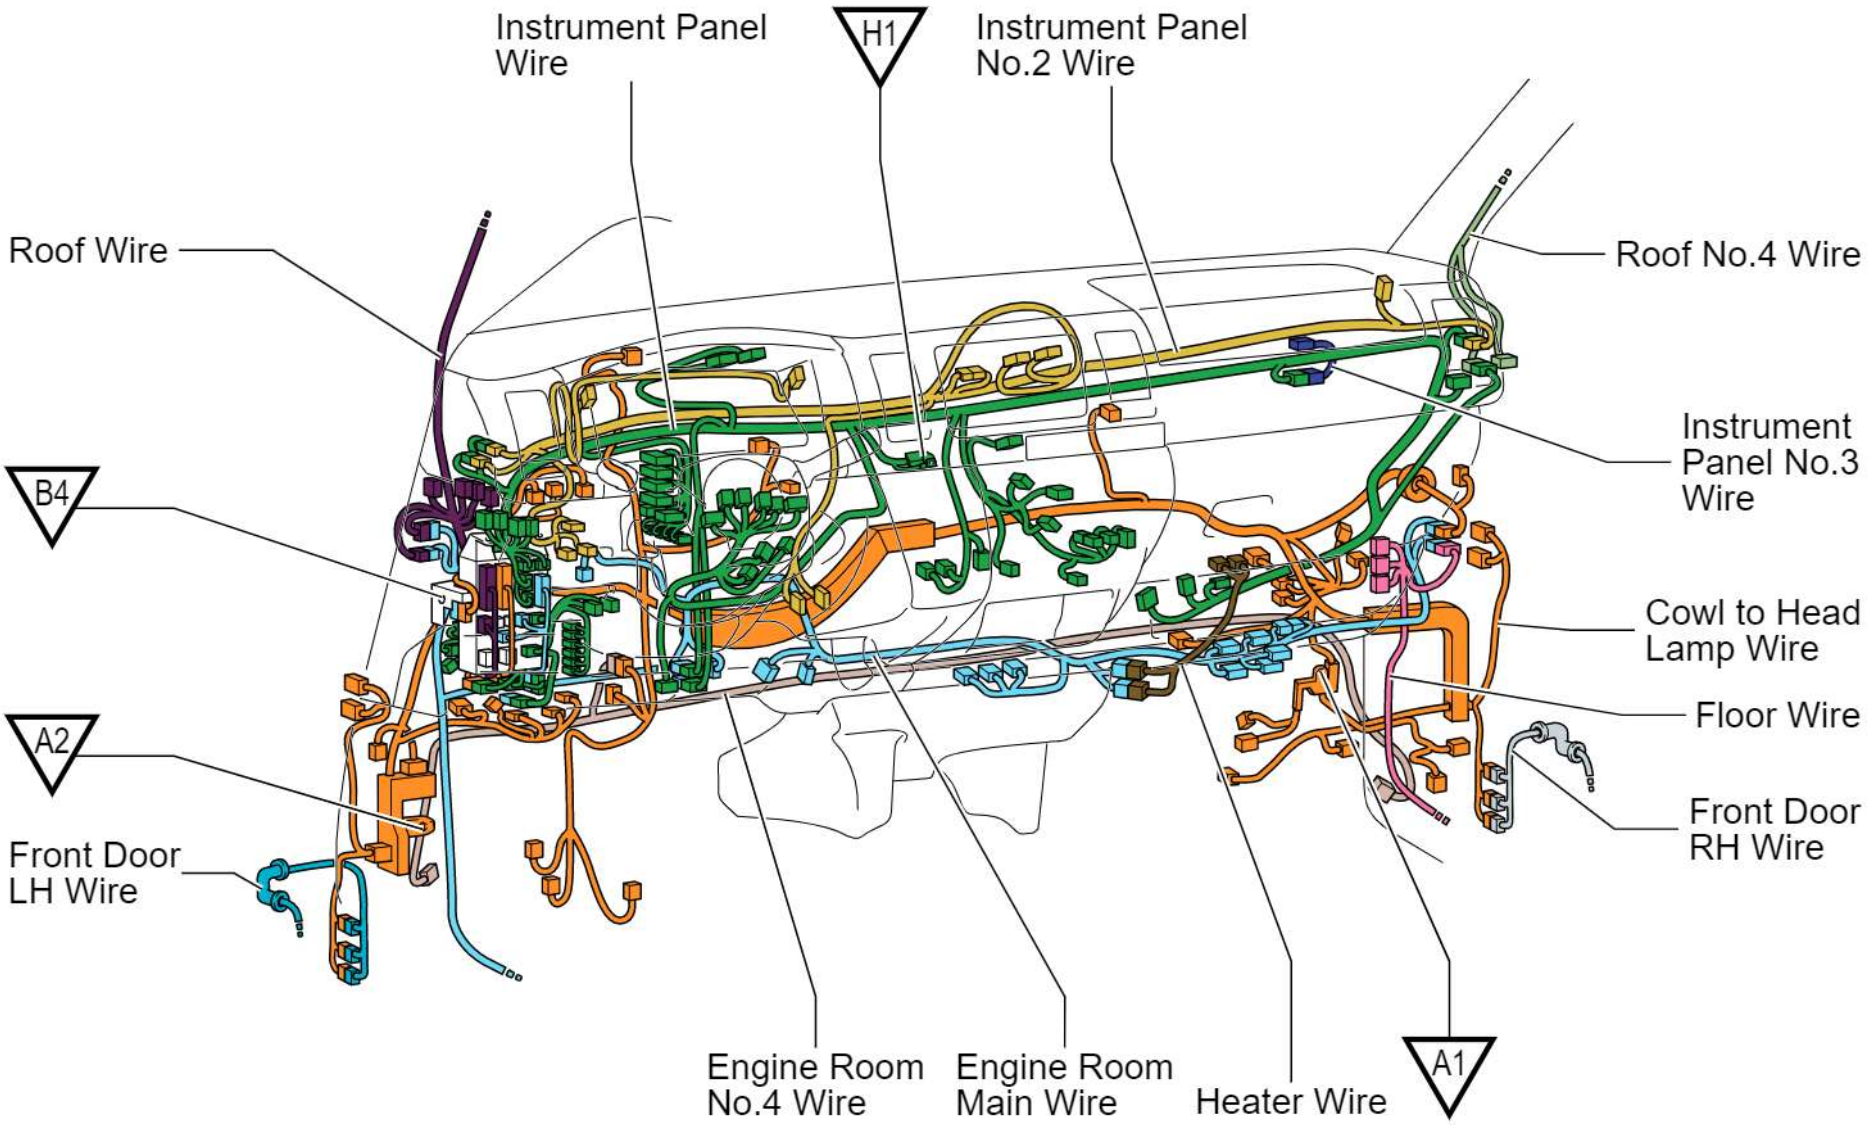

Instrument Panel Wire
H1
Instrument Panel No.2 Wire
Roof Wire
Roof No.4 Wire
Instrument Panel No.3 Wire
B4
Cowl to Head Lamp Wire
Floor Wire
A2
Front Door RH Wire
Front Door LH Wire
Engine Room No.4 Wire
Engine Room Main Wire
Heater Wire
A1

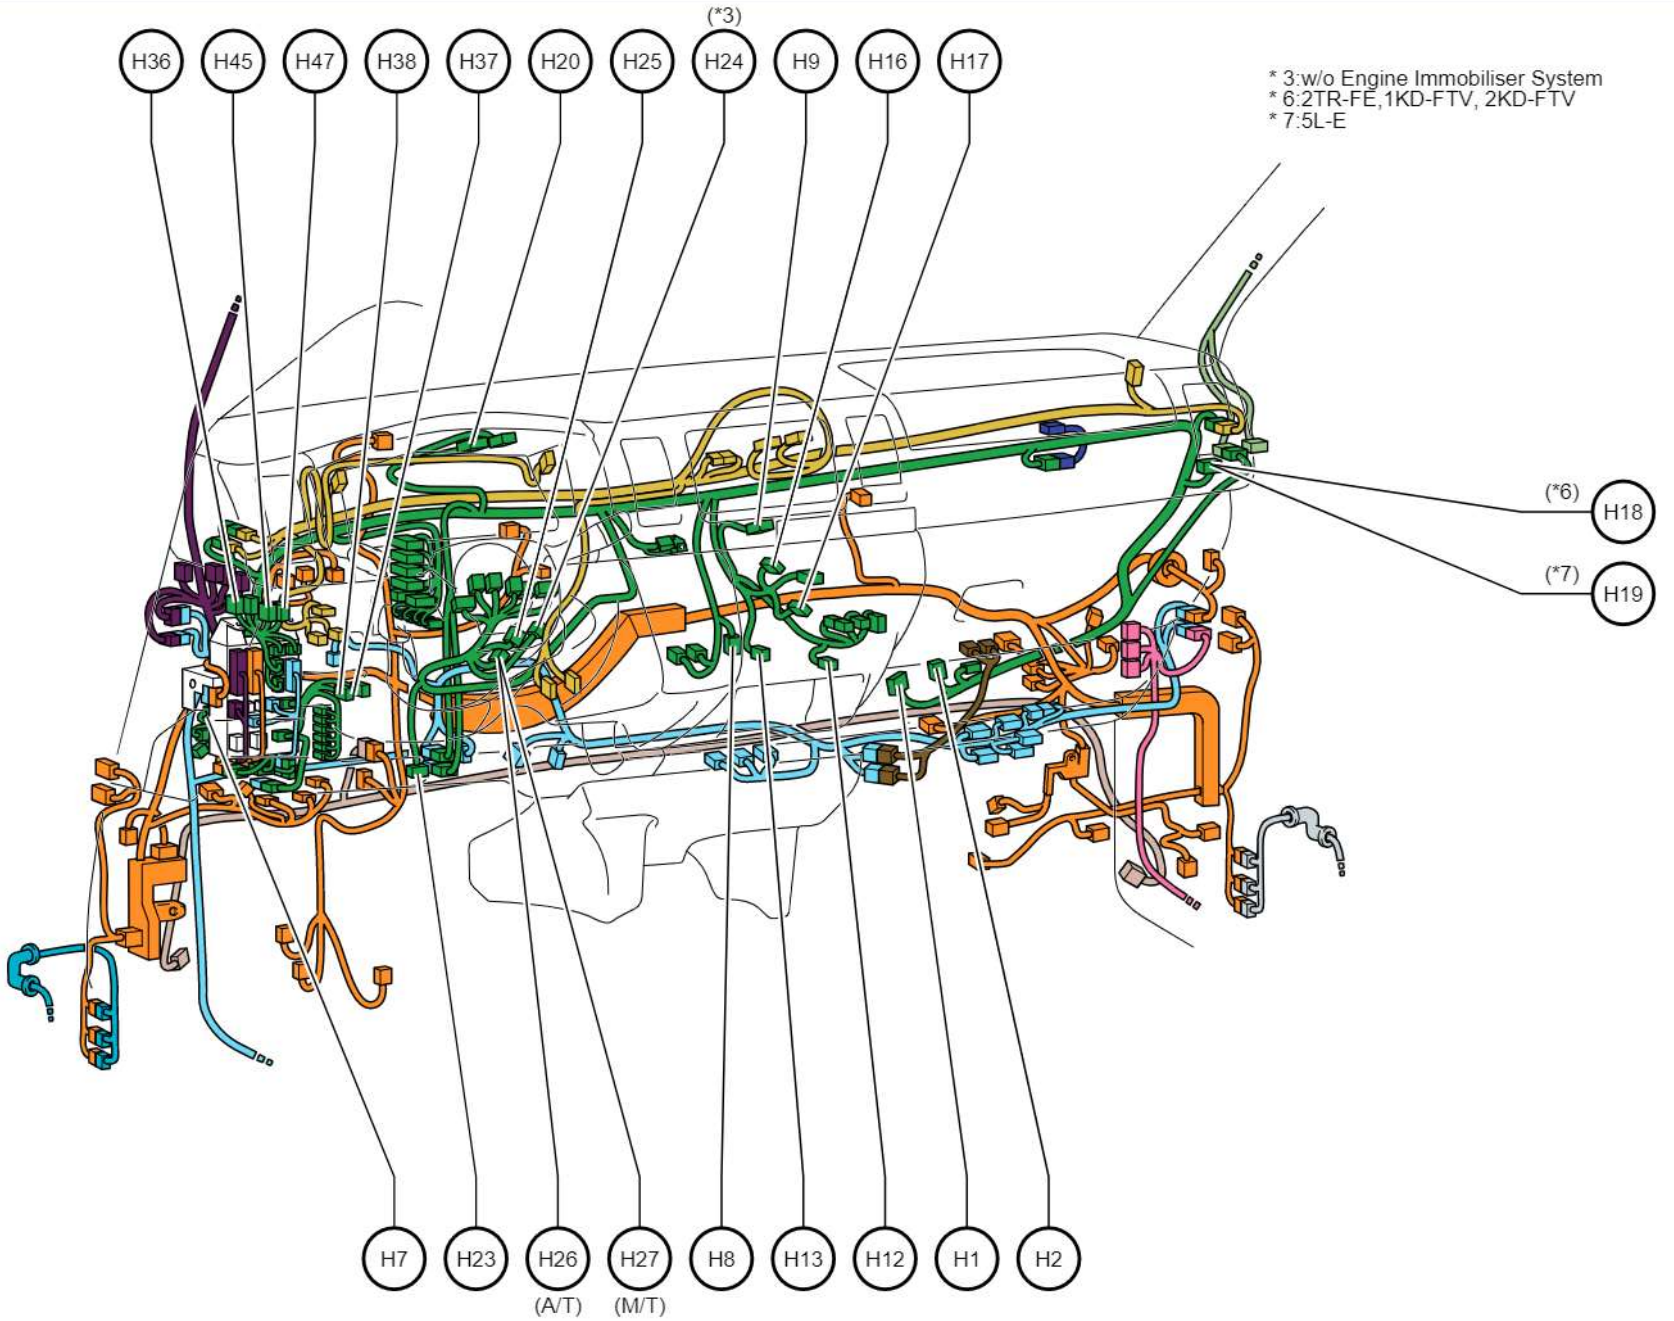
(*3)
H36
H45
H47
H38
H37
H20
H25
H24
H9
H16
H17
* 3:w/o Engine Immobiliser System
* 6:2TR-FE,1KD-FTV, 2KD-FTV
* 7:5L-E
(*6)
H18
(*7)
H19
H7
H23
H26
(A/T)
H27
(M/T)
H8
H13
H12
H1
H2

H	1	Blower Resistor (Front A/C)
H	2	Blower Motor (Front A/C)
H	7	Integration Relay
H	8	A/C Evaporator Temp. Sensor (Front A/C)
H	9	Hazard Warning Signal SW
H	12	Cigarette Lighter
H	13	Ashtray Illumination
H	16	A/C SW
H	17	Rear Window Defogger SW
H	18	A/C Amplifier
H	19	A/C Amplifier
H	20	Combination Meter
H	23	DLC3
H	24	Ignition Key Cylinder Lamp
H	25	Ignition SW
H	26	Unlock Warning SW
H	27	Unlock Warning SW
H	36	Diode (Door Courtesy No.2)
H	37	Diode (Door Courtesy No.3)
H	38	Diode (Headlight)
H	45	Diode (Door Courtesy No.8)
H	47	Diode (Power Slide Door)


Position of Parts in Instrument Panel <LHD>

H1
Black

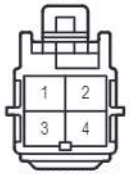


90980-11136

H2
Black

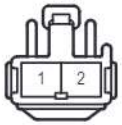

90980-10916

H7
White

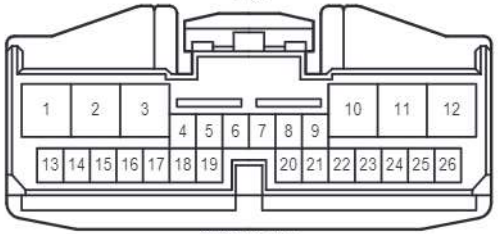


90980-12444

H8
White




90980-11918

H9
Black




90980-10957
(Before Dec. 2013 Production)

H9
White




90980-10957
(From Dec. 2013 Production)

H12
White




90980-12498

H13
Gray




90980-10825

H16
Gray

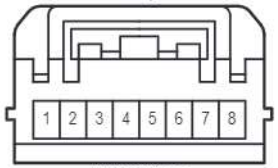


90980-12550

H17
Black

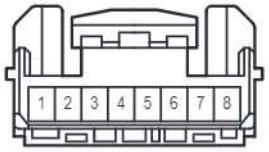


90980-12558

H18
Black

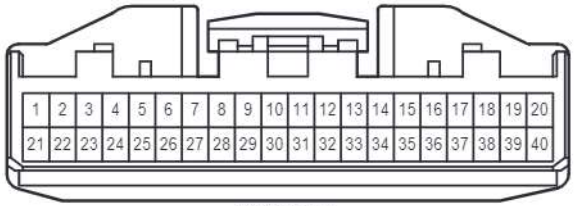


90980-12557

H19
Black

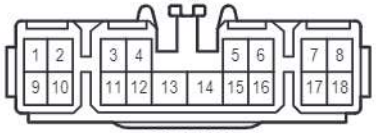


90980-10819

H20
White

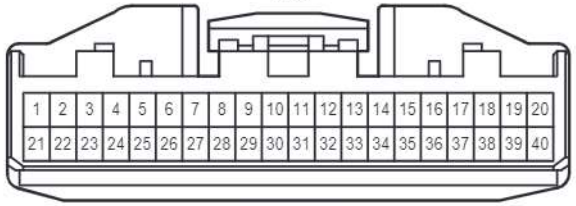

90980-12557

H23
White



H24
Gray




90980-11148

H25
White



Position of Parts in Instrument Panel <LHD>


H26
White



90980-10795

(For production through approximately Feb. 2014)


H26
Black



90980-10795

(For production from approximately Feb. 2014)


H27
White



90980-10860

(For production through approximately Feb. 2014)

H27
Blue



90980-10860


(For production from approximately Feb. 2014)

H36
Black



90980-10962

H37
Black



90980-11251

H38
Black




90980-10962

H45
Black




90980-10962

H47
Gray



90980-11071

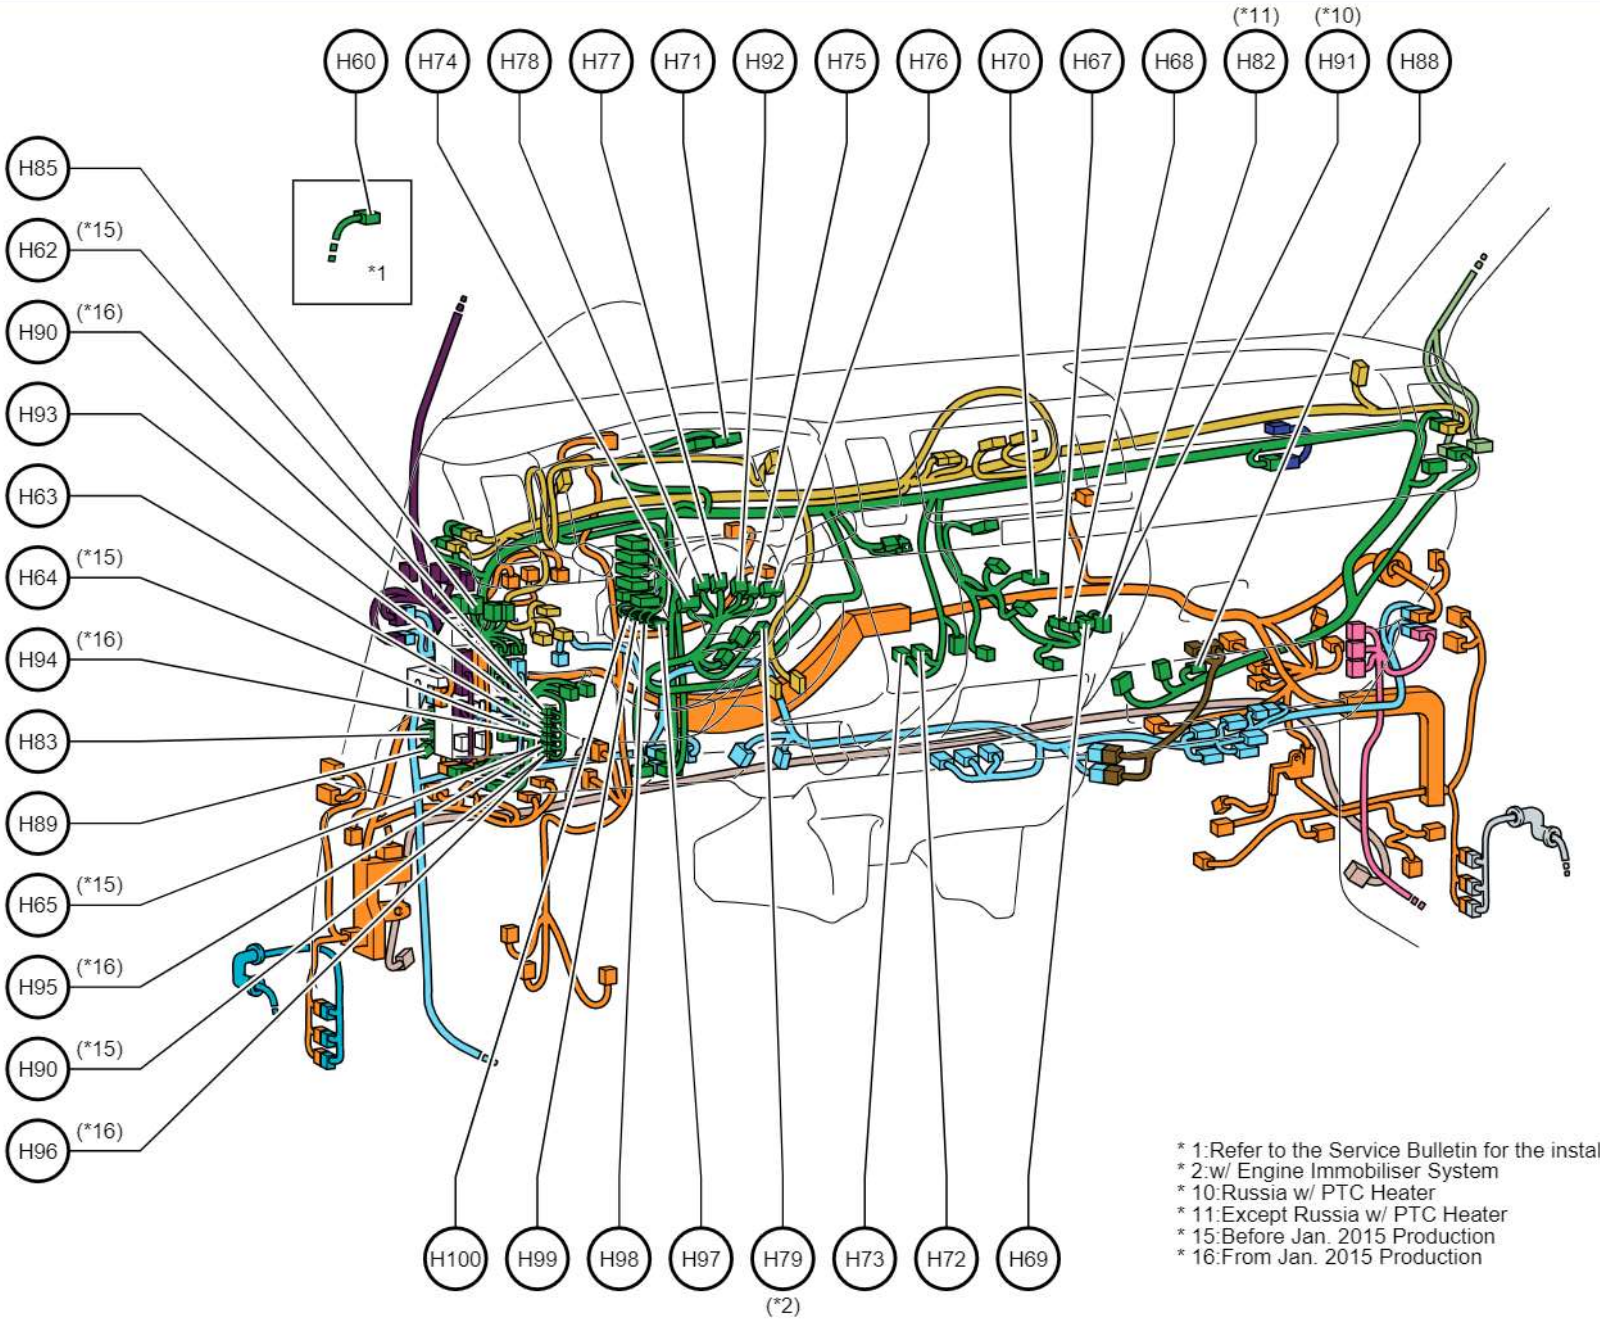


* 1:Refer to the Service Bulletin for the installation position of the parts.
* 2:w/ Engine Immobiliser System
* 10:Russia w/ PTC Heater
* 11:Except Russia w/ PTC Heater
* 15:Before Jan. 2015 Production
* 16:From Jan. 2015 Production

H 60 Transponder Key ECU
H 62 Junction Connector
H 63 Junction Connector
H 64 Junction Connector
H 65 Junction Connector
H 67 Room Lamp SW
H 68 Short Pin (Room Lamp SW)
H 69 Rear Blower SW (Main)
H 70 Blower SW (Front A/C)
H 71 Combination Meter
H 72 Transmission Control Switch and A/T Shift Lever Illumination (Shift Lock Control Unit Assembly)
H 73 Shift Lock Control ECU
H 74 Headlamp Dimmer Switch Assembly
H 75 Windshield Wiper Switch
H 76 Windshield Wiper Switch
H 77 Spiral Cable
H 78 Airbag Squib (Steering Wheel Pad)
H 79 Transponder Key Coil
H 82 Idle-Up SW
H 83 Option Connector (Car Finder In)
H 85 Diode (Room Lamp)
H 88 Junction Connector
H 89 Junction Connector
H 90 Junction Connector
H 91 Heater Switch Assembly
H 92 Spiral Cable Sub Assembly (Steering Sensor)
H 93 Junction Connector
H 94 Junction Connector
H 95 Junction Connector
H 96 Junction Connector
H 97 Junction Connector
H 98 Junction Connector
H 99 Junction Connector
H 100 Junction Connector


Position of Parts in Instrument Panel <LHD>

H60
Black

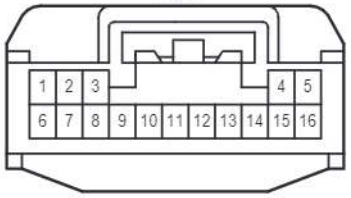


90980-12423

H62
White



90980-12827

H63
White




90980-12827

H64
White




90980-12827

H65
White




90980-12827

H67
Black

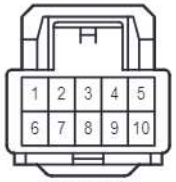


90980-12135

H68
Black

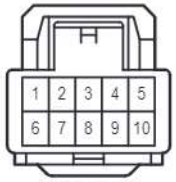


90980-12135

H69
Gray

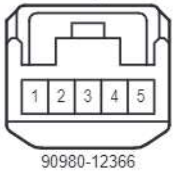


90980-12366

H70
Black

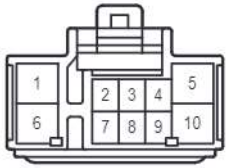


90980-10993

H71
White

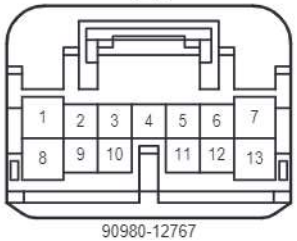


90980-12767

H72
White

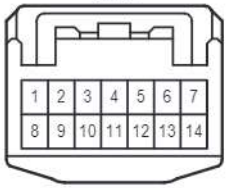

90980-12370


H73
White

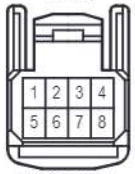

90980-12551

(For production through approximately Feb. 2014)


H73
Black

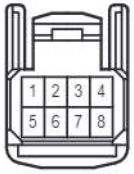

90980-12551

(For production from approximately Feb. 2014)

H74
Black

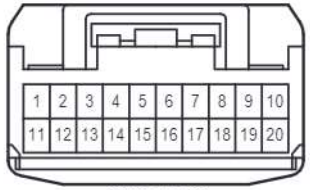


90980-12460

H75
White




90980-12359


H76
White




H77
Black



H78
Yellow



H79
Black




Position of Parts in Instrument Panel <LHD>

H83
White




90980-12367

H85
Black




90980-11251

H88
Black

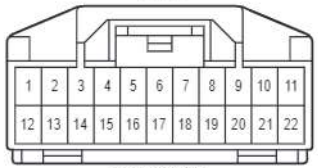


90980-11915

H89
White

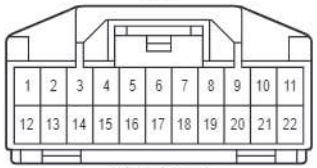


90980-11915

H90
White




90980-12827

H91
White

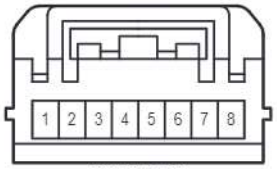


90980-12550

H92
Black

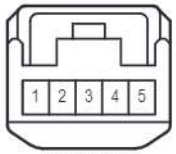


90980-12366

H93
White




90980-12827

H94
White




90980-12827

H95
White




90980-12827

H96
White




90980-12827

H97
White




90980-12827

H98
White




90980-12827

H99
White




90980-12827

H100
White



90980-12827

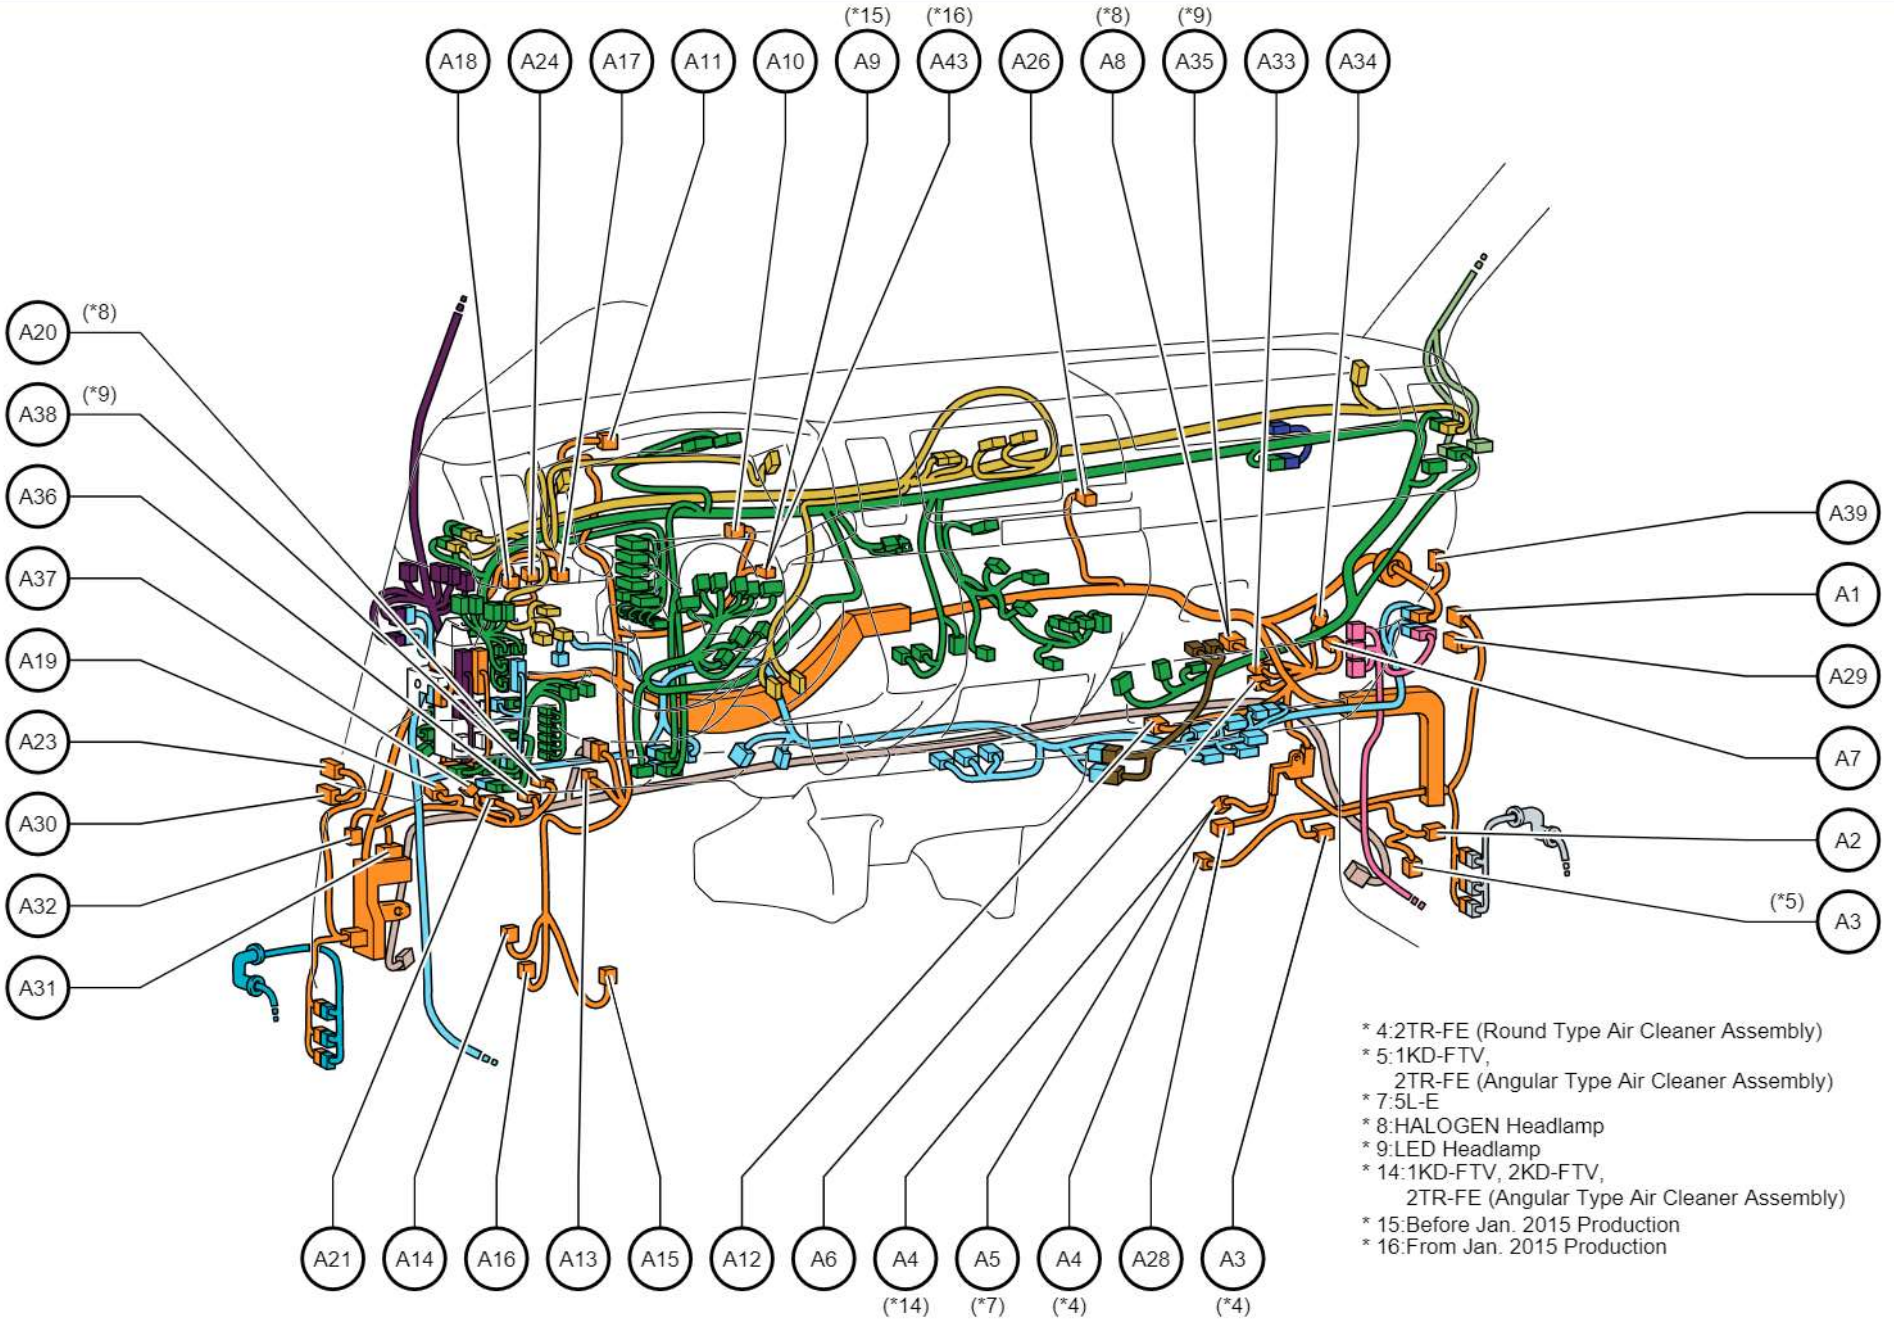


* 4:2TR-FE (Round Type Air Cleaner Assembly)
* 5:1KD-FTV,
  2TR-FE (Angular Type Air Cleaner Assembly)
* 7:5L-E
* 8:HALOGEN Headlamp
* 9:LED Headlamp
* 14:1KD-FTV, 2KD-FTV,
  2TR-FE (Angular Type Air Cleaner Assembly)
* 15:Before Jan. 2015 Production
* 16:From Jan. 2015 Production

Position of Parts in Instrument Panel <LHD>

A	1	Turn Signal Lamp (Front RH)
A	2	Inlet Air Temp. Sensor (Air Cleaner)
A	3	Air Flow Meter
A	4	A/C Pressure Sensor No.1
A	5	Pressure SW
A	6	Clearance Lamp (Front RH)
A	7	Headlamp (RH)
A	8	Headlamp Leveling Motor (RH)
A	9	Brake Vacuum Warning SW
A	10	Brake Fluid Level Warning SW
A	11	Windshield Wiper Motor
A	12	Airbag Sensor (Front RH)
A	13	Airbag Sensor (Front LH)
A	14	Ambient Temp. Sensor
A	15	Horn (Low)
A	16	Horn (High)
A	17	Windshield Washer Motor
A	18	Rear Washer Motor
A	19	Headlamp (LH)
A	20	Headlamp Leveling Motor (LH)
A	21	Clearance Lamp (Front LH)
A	23	Turn Signal Lamp (Front LH)
A	24	Short Pin (Vacuum)
A	26	A/C Pressure Sensor No.2
A	28	Magnet Valve
A	29	Daytime Running Light (Headlamp Assembly RH)
A	30	Daytime Running Light (Headlamp Assembly LH)
A	31	Junction Connector
A	32	Option Connector (Car Finder Out)
A	33	Headlamp Assembly RH
A	34	Headlamp Assembly RH
A	35	Headlamp Leveling Motor (RH)
A	36	Headlamp Assembly LH
A	37	Headlamp Assembly LH
A	38	Headlamp Leveling Motor (LH)
A	39	Headlamp Leveling Computer Assembly
A	43	Brake Vacuum Warning SW

Position of Parts in Instrument Panel <LHD>

A1
Gray

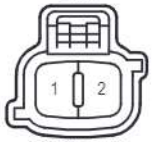

90980-11019

A2
Black



90980-11163

A3
Black



90980-12292

A4
Black



90980-10845

A5
Dark Gray




90980-10943

A6
Black



90980-11156

A7
White

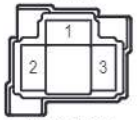

90980-11314

A8
Black



90980-11016

A9
Gray



90980-11252

A10
Gray



90980-11207

A11
Black



90980-11599

A12
Yellow



90980-12490

A13
Yellow



90980-12490

A14
Black



90980-11070

(Before Jan. 2017 Production)

A15
Black




90980-10619

A16
Black




90980-10619

A17
Black

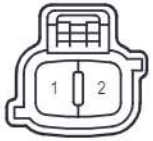

90980-11019

A18
Gray

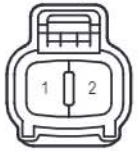

90980-11051

(Before Dec. 2013 Production)


A18
Black



90980-11051

(From Dec. 2013 Production)

A19
White

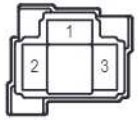

90980-11314

A20
Black




90980-11016

A21
Black



90980-11156

A23
Gray

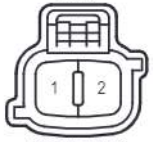

90980-11019

A24
White



90980-10987

A26
Black



90980-10845


Position of Parts in Instrument Panel <LHD>

A33
Gray



90980-11194

A34
Black

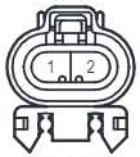

90980-11659

A35
Gray




90980-11016

A36
Gray



90980-11194

A37
Black

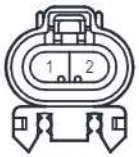


90980-11659

A38
Gray




90980-11016

A39
White

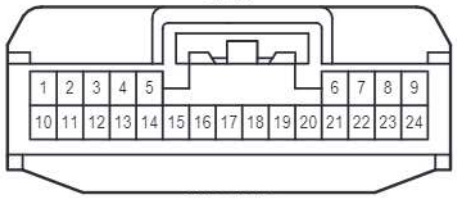


90980-12404

A43
Black

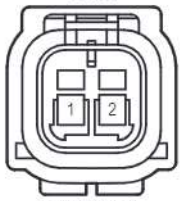


90980-12195

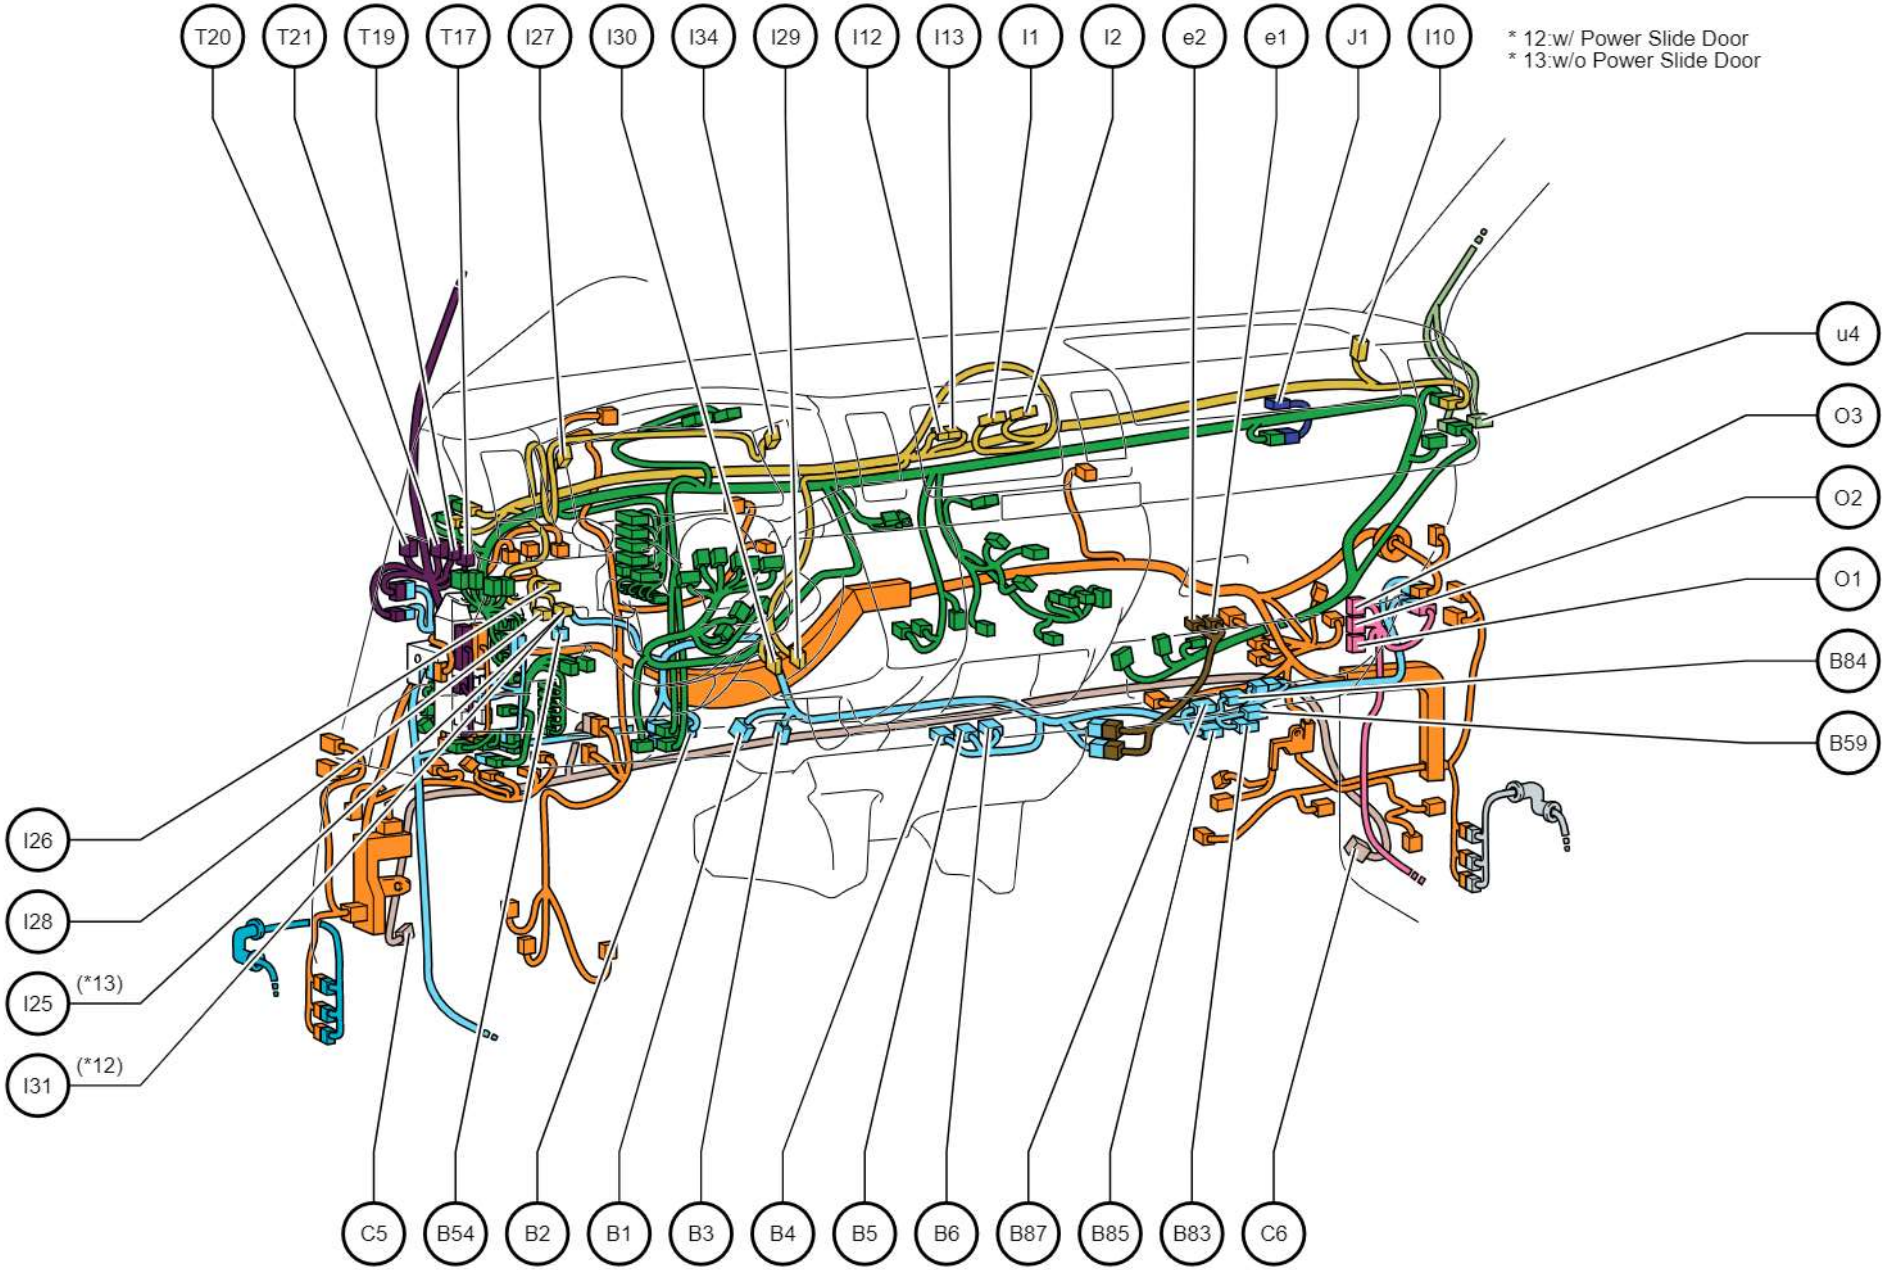
T20
T21
T19
T17
I27
I30
I34
I29
I12
I13
I1
I2
e2
e1
J1
I10
* 12:w/ Power Slide Door
* 13:w/o Power Slide Door
u4
O3
O2
O1
B84
B59
I26
I28
I25
(*13)
I31
(*12)
C5
B54
B2
B1
B3
B4
B5
B6
B87
B85
B83
C6

B	1	Accelerator Position Sensor
B	2	Stop Lamp SW
B	3	Parking Brake SW
B	4	Airbag Sensor Assembly Center
B	5	Airbag Sensor Assembly Center
B	6	Airbag Sensor Assembly Center
B	54	Clutch Switch Assembly
B	59	Diode (Magnet Clutch)
B	83	Junction Connector
B	84	Junction Connector
B	85	Junction Connector
B	87	Junction Connector
C	5	Fog Lamp (Front LH)
C	6	Fog Lamp (Front RH)
I	1	Radio Receiver Assembly
I	2	Radio Receiver Assembly
I	10	Automatic Light Control Sensor
I	12	Junction Connector
I	13	Junction Connector
I	25	Door Lock Control SW
I	26	Outer Mirror SW
I	27	Headlamp Leveling SW
I	28	Power Slide Door Control SW (LH)
I	29	Power Slide Door Main SW
I	30	DPF Switch Assembly
I	31	Power Slide Door Control SW (RH)
I	34	VSC Off Switch
J	1	Airbag Squib (Front Passenger's Airbag Assembly)
O	1	Transmission Control ECU
O	2	Transmission Control ECU
O	3	Transmission Control ECU
T	17	Diode (Door Courtesy No.6)
T	19	Diode (Door Courtesy No.9)
T	20	Diode (Door Courtesy No.10)
T	21	Diode (Door Courtesy No.11)


Position of Parts in Instrument Panel <LHD>

B1
Black

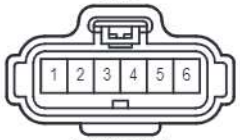

90980-11858

B2
White

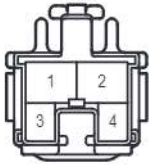


90980-11118

B3
White




90980-10182

B4
Yellow

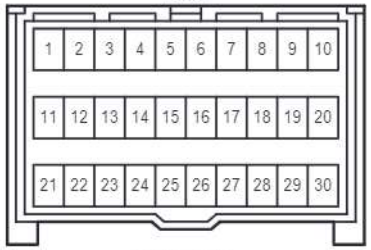


90980-12391

B5
Yellow

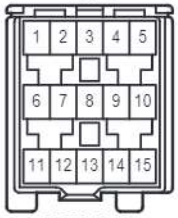

90980-12449

B6
Yellow

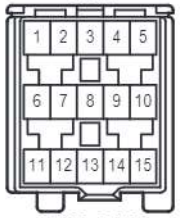

90980-12450

B54
White




90980-10906

B59
White




90980-11608

B83
White

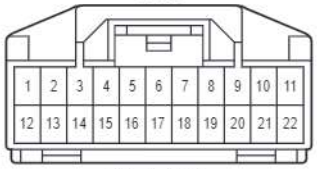


90980-11915

B84
Black




90980-11398

B85
White

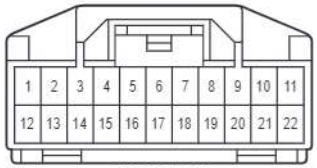


90980-11915

B87
Black




90980-11398

C5
Black

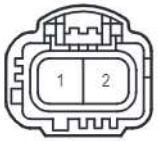

82824-48450

C6
Black

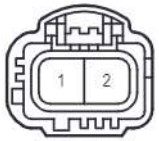


82824-48450

I1
White



90980-10996

I2
Blue

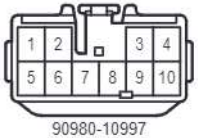


90980-10997

I10
Black




90980-11107

I12
Blue

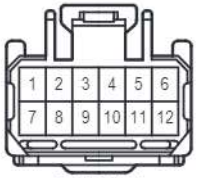


90980-11661

I13
Blue

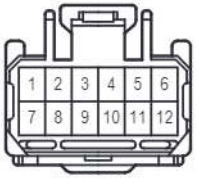


90980-11661


I25
White




I26
White



I27
Black



I28
Blue




Position of Parts in Instrument Panel <LHD>

I29
Gray




90980-12368

I30
Black

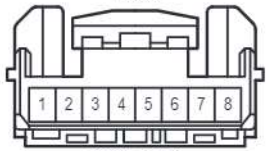


90980-12558

I31
Black

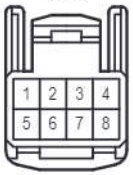


90980-12221

I34
Black

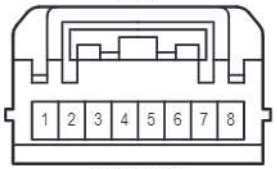


90980-12550

J1
Orange




90980-12224

O1
White

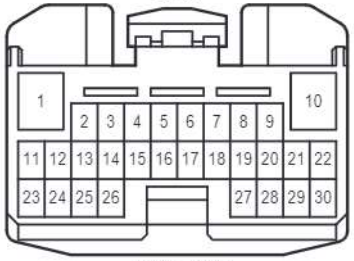


90980-12562

O2
White

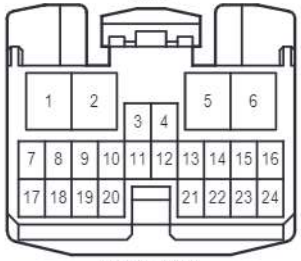

90980-12560

O3
White

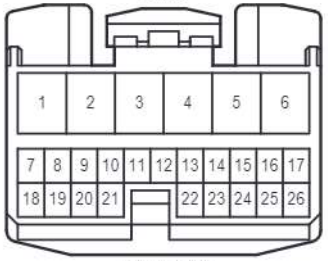

90980-12561

T17
White



90980-11608

T19
White




90980-11608

T20
White




90980-11608

T21
White




90980-11071

e1
White

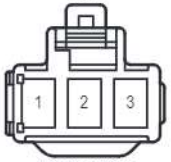

90980-10956

e2
White

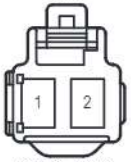


90980-10903


u4
White



90980-10798

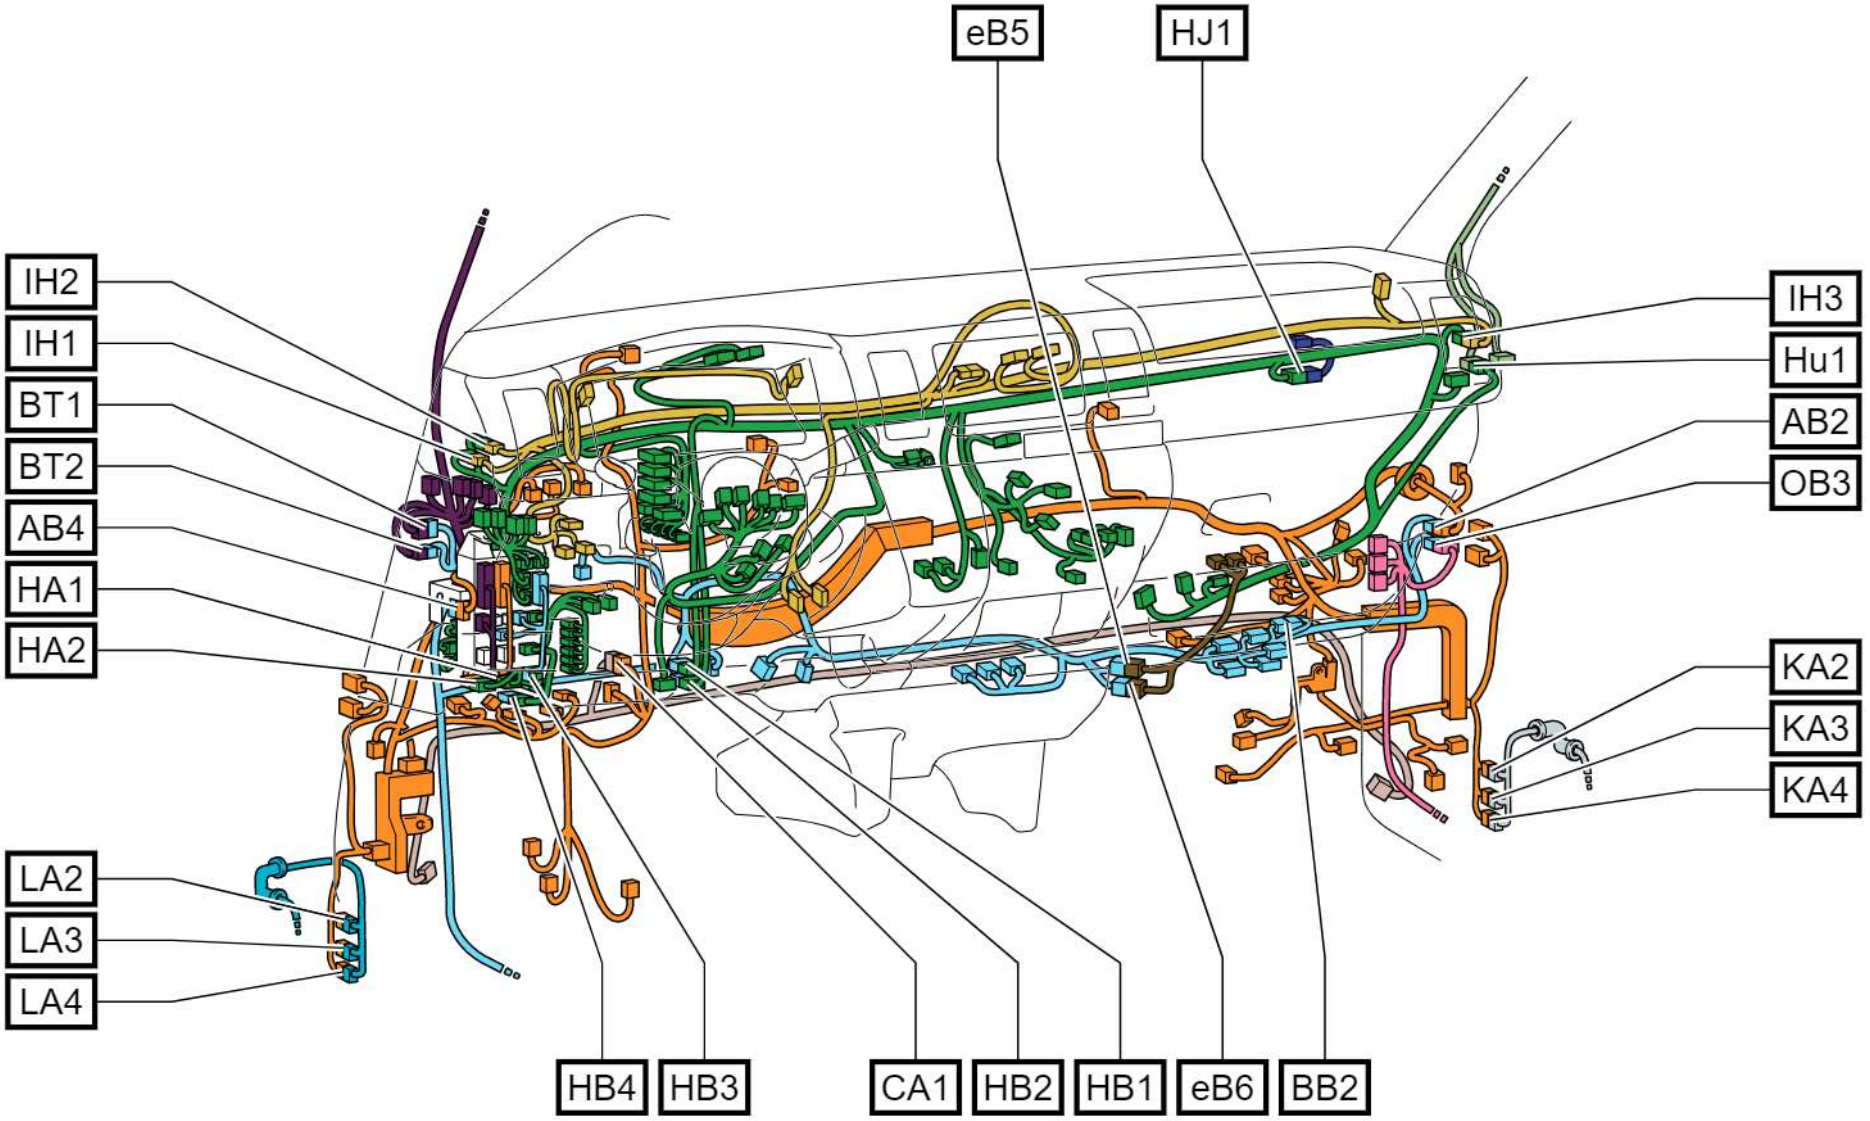

eB5
HJ1
IH2
IH1
BT1
BT2
AB4
HA1
HA2
IH3
Hu1
AB2
OB3
KA2
KA3
KA4
LA2
LA3
LA4
HB4
HB3
CA1
HB2
HB1
eB6
BB2

AB2
Yellow

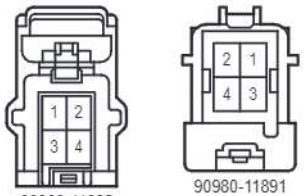


90980-11892
90980-11891

AB4
White

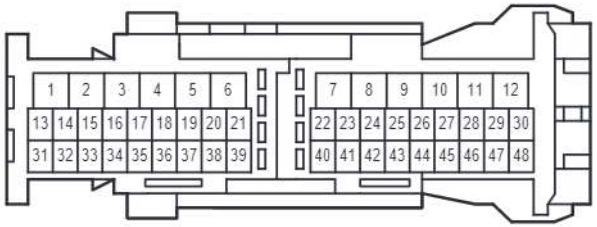


90980-12779

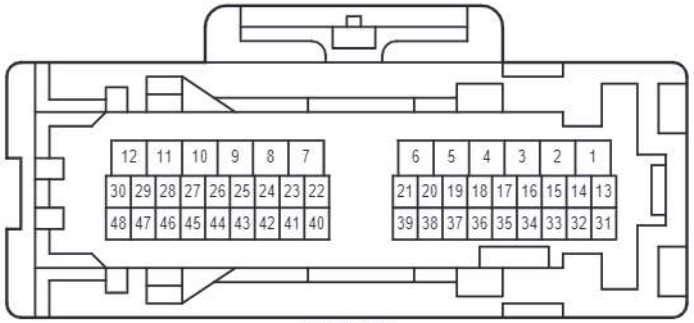


90980-12799

BB2
White

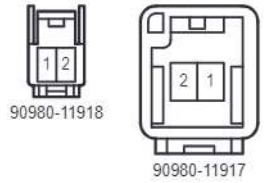


90980-11918
90980-11917

BT1
White

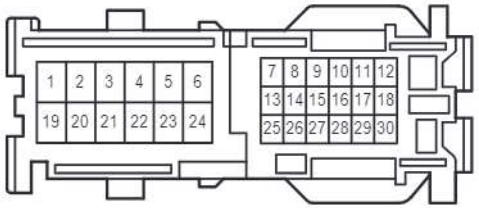

90980-12503

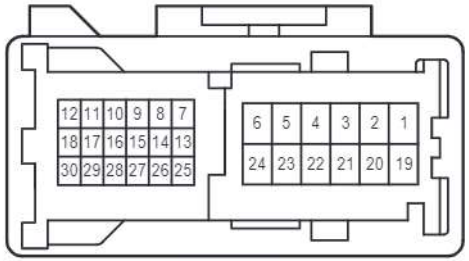


90980-12516


BT2
White

CA1
Black

HA1
White

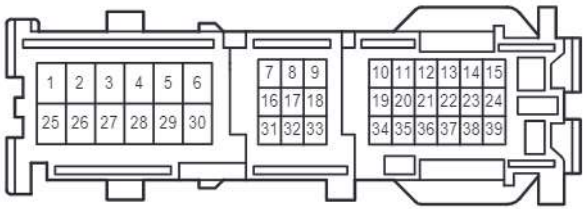


90980-12502

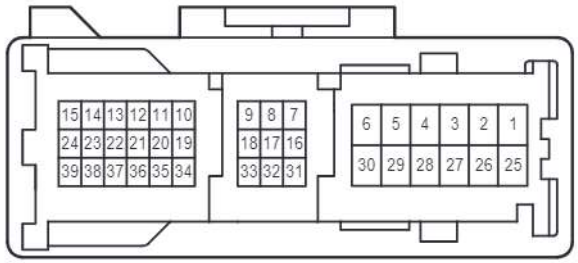


90980-12515

HA2
Blue

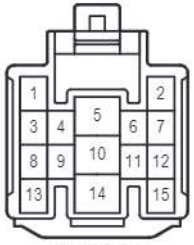


90980-10815

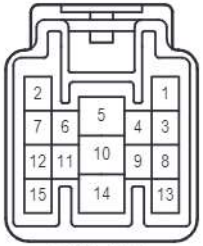


90980-10814

HB1
White

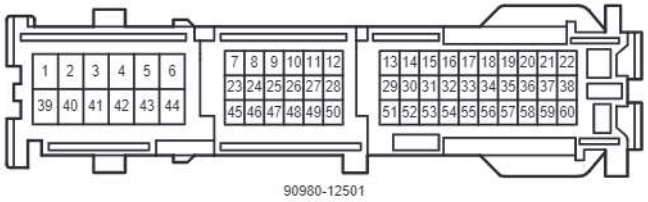



90980-12501

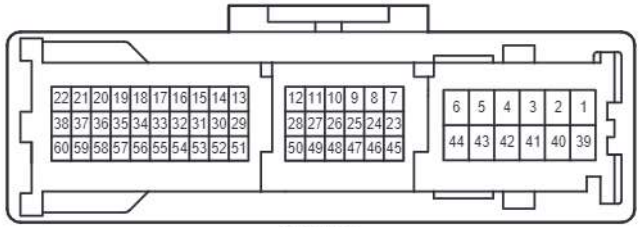


90980-12514

HB2
White






HB3
Yellow




Wire and Wire in Instrument Panel <LHD>

HB4
Gray

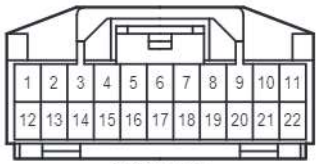


90980-11915

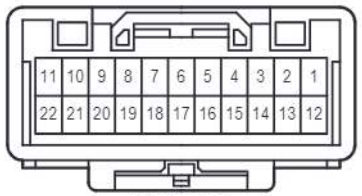


90980-11926

HJ1
Yellow




90980-11886




90980-11883

Hu1
White

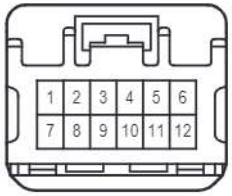


90980-12737

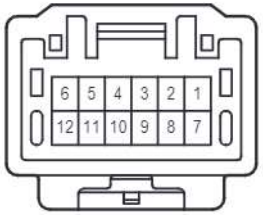


90980-12736

IH1
White

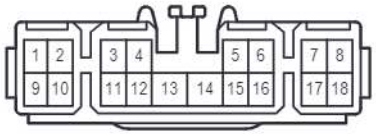


90980-10819

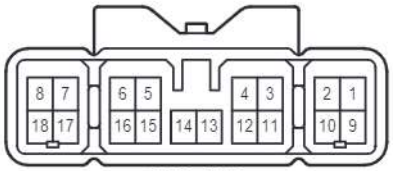


90980-10818

IH2
White

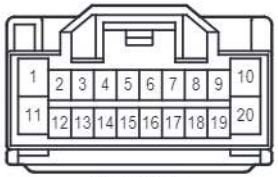


90980-11971

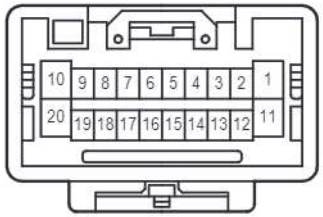

90980-12025


Wire and Wire in Instrument Panel <LHD>

KA3
Gray

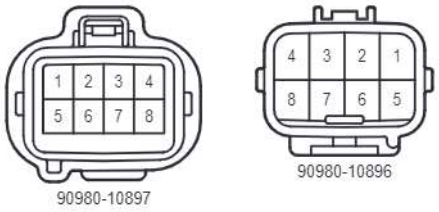


90980-10897
90980-10896

KA4
White

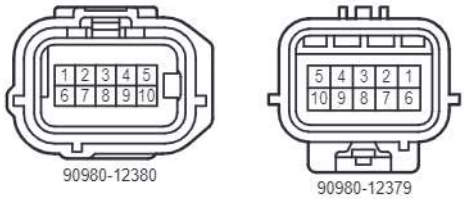

90980-12380
90980-12379

LA2
Black

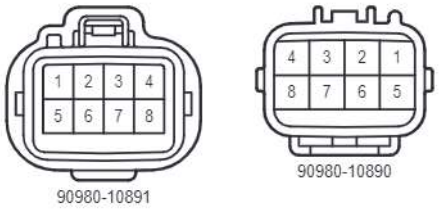


90980-10891
90980-10890

LA3
Gray




90980-10897
90980-10896

LA4
White

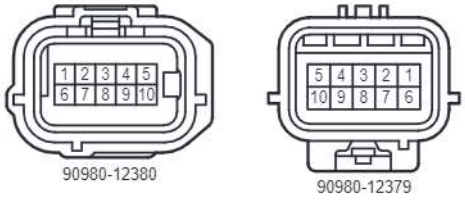


90980-12380
90980-12379

OB3
White

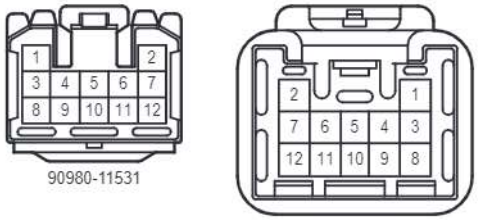


90980-11531
90980-11530

eB5
Black

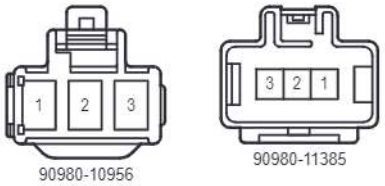



90980-10956
90980-11385

eB6
Black

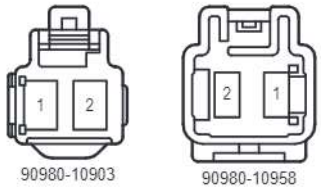

90980-10903
90980-10958

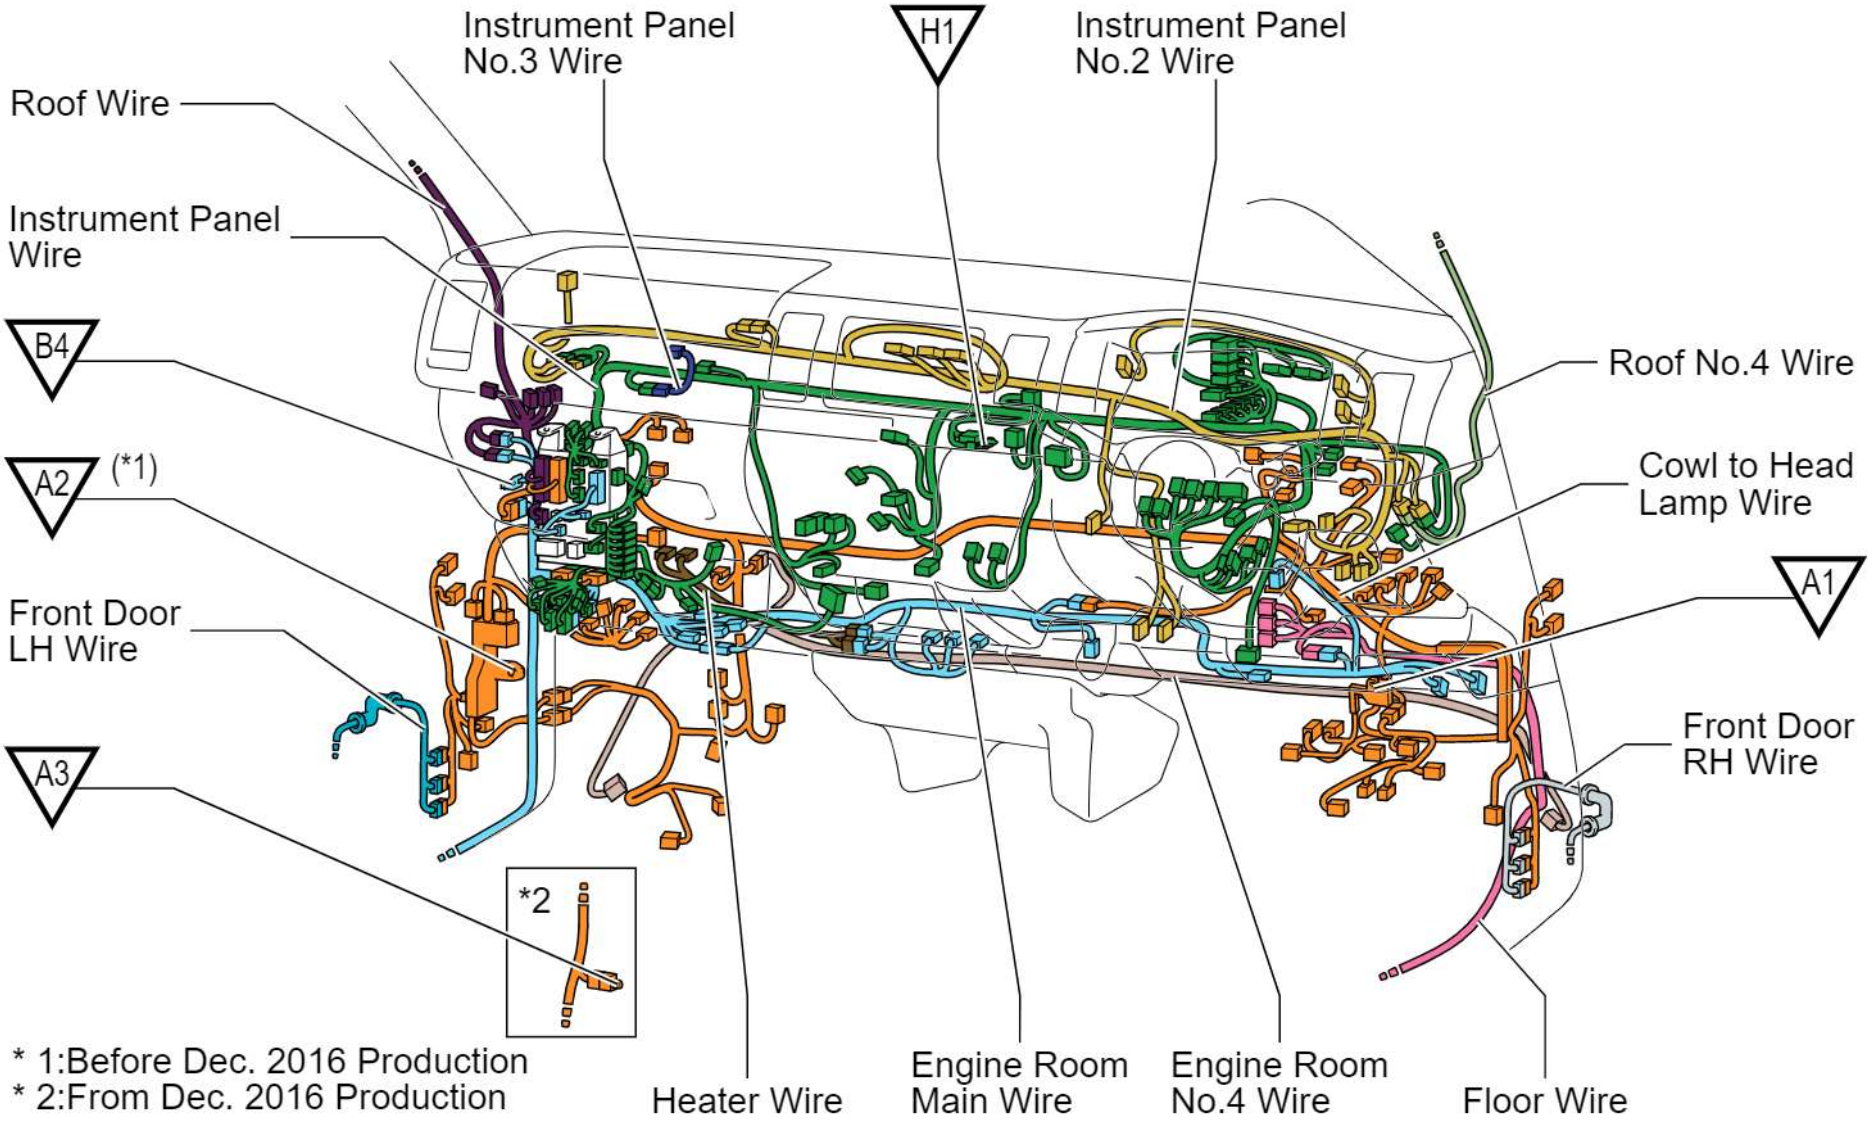

Instrument Panel
No.3 Wire
H1
Instrument Panel
No.2 Wire
Roof Wire
Instrument Panel
Wire
B4
Roof No.4 Wire
A2
(*1)
Cowl to Head
Lamp Wire
A1
Front Door
LH Wire
Front Door
RH Wire
A3
*2
* 1:Before Dec. 2016 Production
* 2:From Dec. 2016 Production
Heater Wire
Engine Room
Main Wire
Engine Room
No.4 Wire
Floor Wire

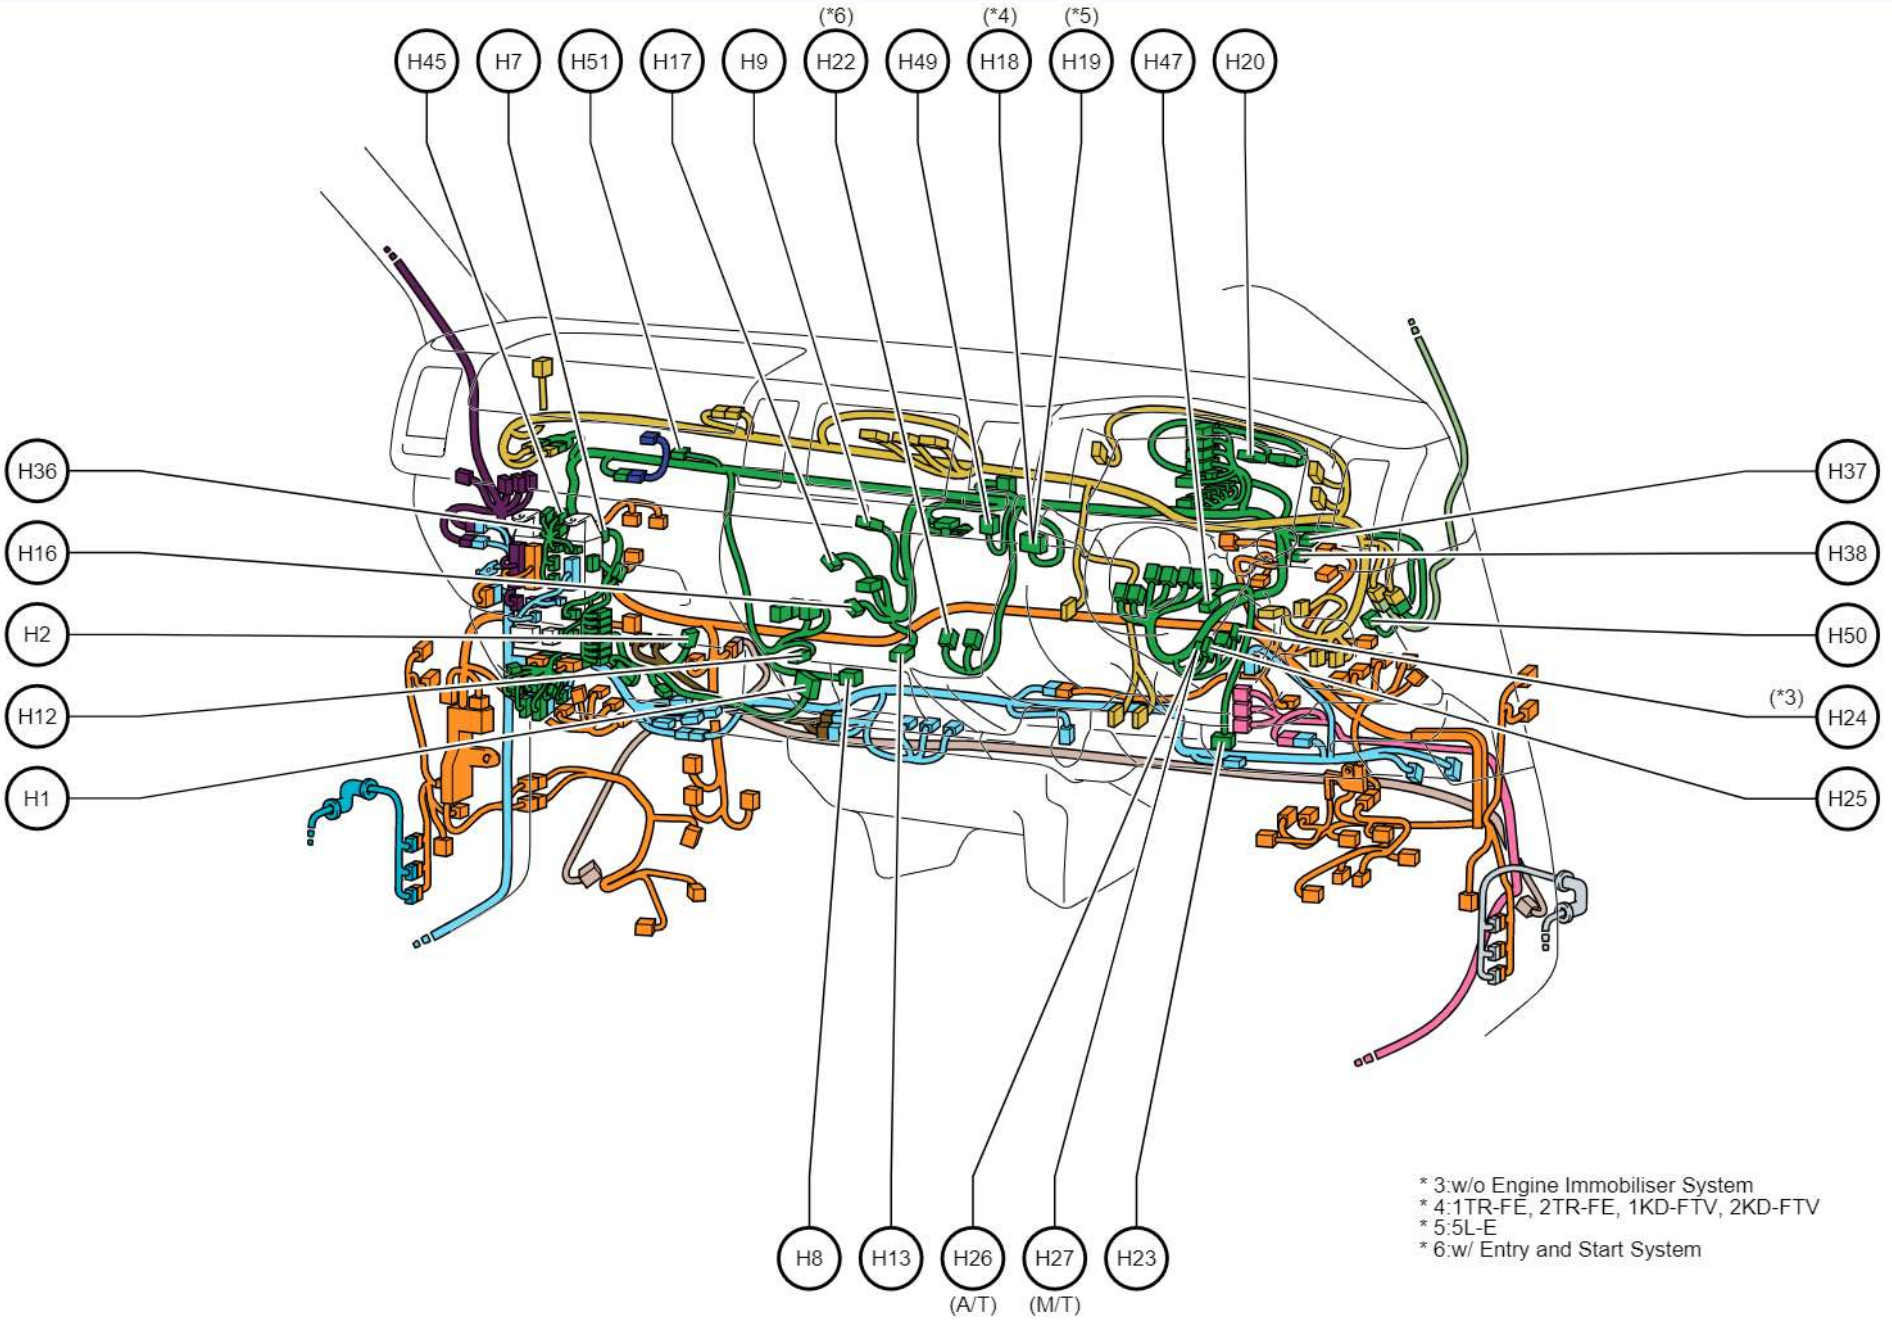
H45
H7
H51
H17
H9
(*6)
H22
H49
(*4)
H18
(*5)
H19
H47
H20
H36
H16
H2
H12
H1
H37
H38
H50
(*3)
H24
H25
H8
H13
H26
(A/T)
H27
(M/T)
H23
* 3:w/o Engine Immobiliser System
* 4:1TR-FE, 2TR-FE, 1KD-FTV, 2KD-FTV
* 5:5L-E
* 6:w/ Entry and Start System

H	1	Blower Resistor (Front A/C)
H	2	Blower Motor (Front A/C)
H	7	Integration Relay
H	8	A/C Evaporator Temp. Sensor (Front A/C)
H	9	Hazard Warning Signal SW
H	12	Cigarette Lighter
H	13	Ashtray Illumination
H	16	A/C SW
H	17	Rear Window Defogger SW
H	18	A/C Amplifier
H	19	A/C Amplifier
H	20	Combination Meter
H	22	Shift Lock Control ECU
H	23	DLC3
H	24	Ignition Key Cylinder Lamp
H	25	Ignition SW
H	26	Unlock Warning SW
H	27	Unlock Warning SW
H	36	Diode (Door Courtesy No.2)
H	37	Diode (Door Courtesy No.3)
H	38	Diode (Headlight)
H	45	Diode (Door Courtesy No.8)
H	47	Diode (Power Slide Door)
H	49	Option Connector (TVSS ECU)
H	50	Option Connector (Clearance Warning Buzzer)
H	51	Option Connector (Fuse Box)


Position of Parts in Instrument Panel <RHD>

H1
Black

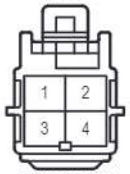


90980-11136

H2
Black

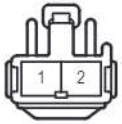

90980-10916

H7
White

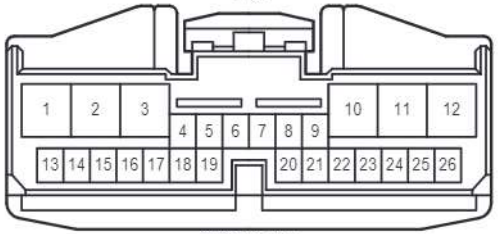


90980-12444

H8
White




90980-11918

H9
Black




90980-10957
(Before Dec. 2013 Production)

H9
White




90980-10957
(From Dec. 2013 Production)

H12
White




90980-12498

H13
Gray




90980-10825

H16
Gray

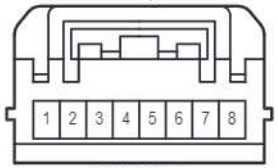


90980-12550

H17
Black

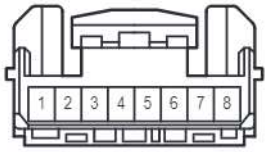


90980-12558

H18
Black

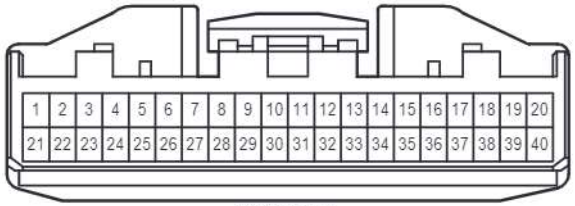


90980-12557

H19
Black

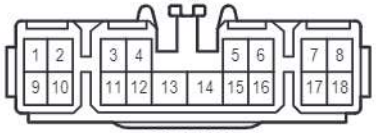


90980-10819

H20
White

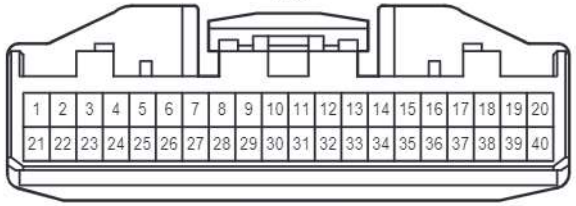


90980-12557

H22
White




H22
Gray



Position of Parts in Instrument Panel <RHD>

H23
White

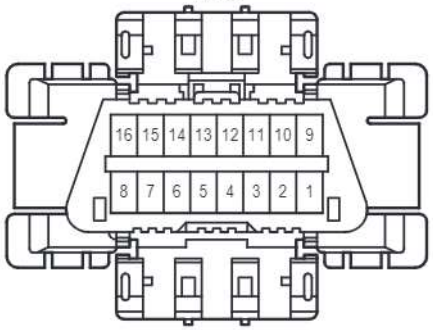


90980-11665

H24
Gray




90980-11148

H25
White

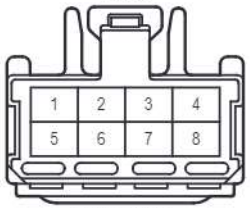

90980-11615


H26
White



90980-10795

(For production through approximately Feb. 2014)


H26
Black



90980-10795

(For production from approximately Feb. 2014)


H27
White



90980-10860

(For production through approximately Feb. 2014)

H27
Blue



90980-10860

(For production from approximately Feb. 2014)

H36
Black



90980-10962

H37
Black



90980-11251

H38
Black




90980-10962

H45
Black




90980-10962

H47
Gray




90980-11071

H49
White

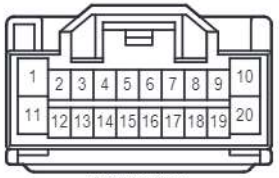

90980-11971


H50
Black



90980-10860

H51
White

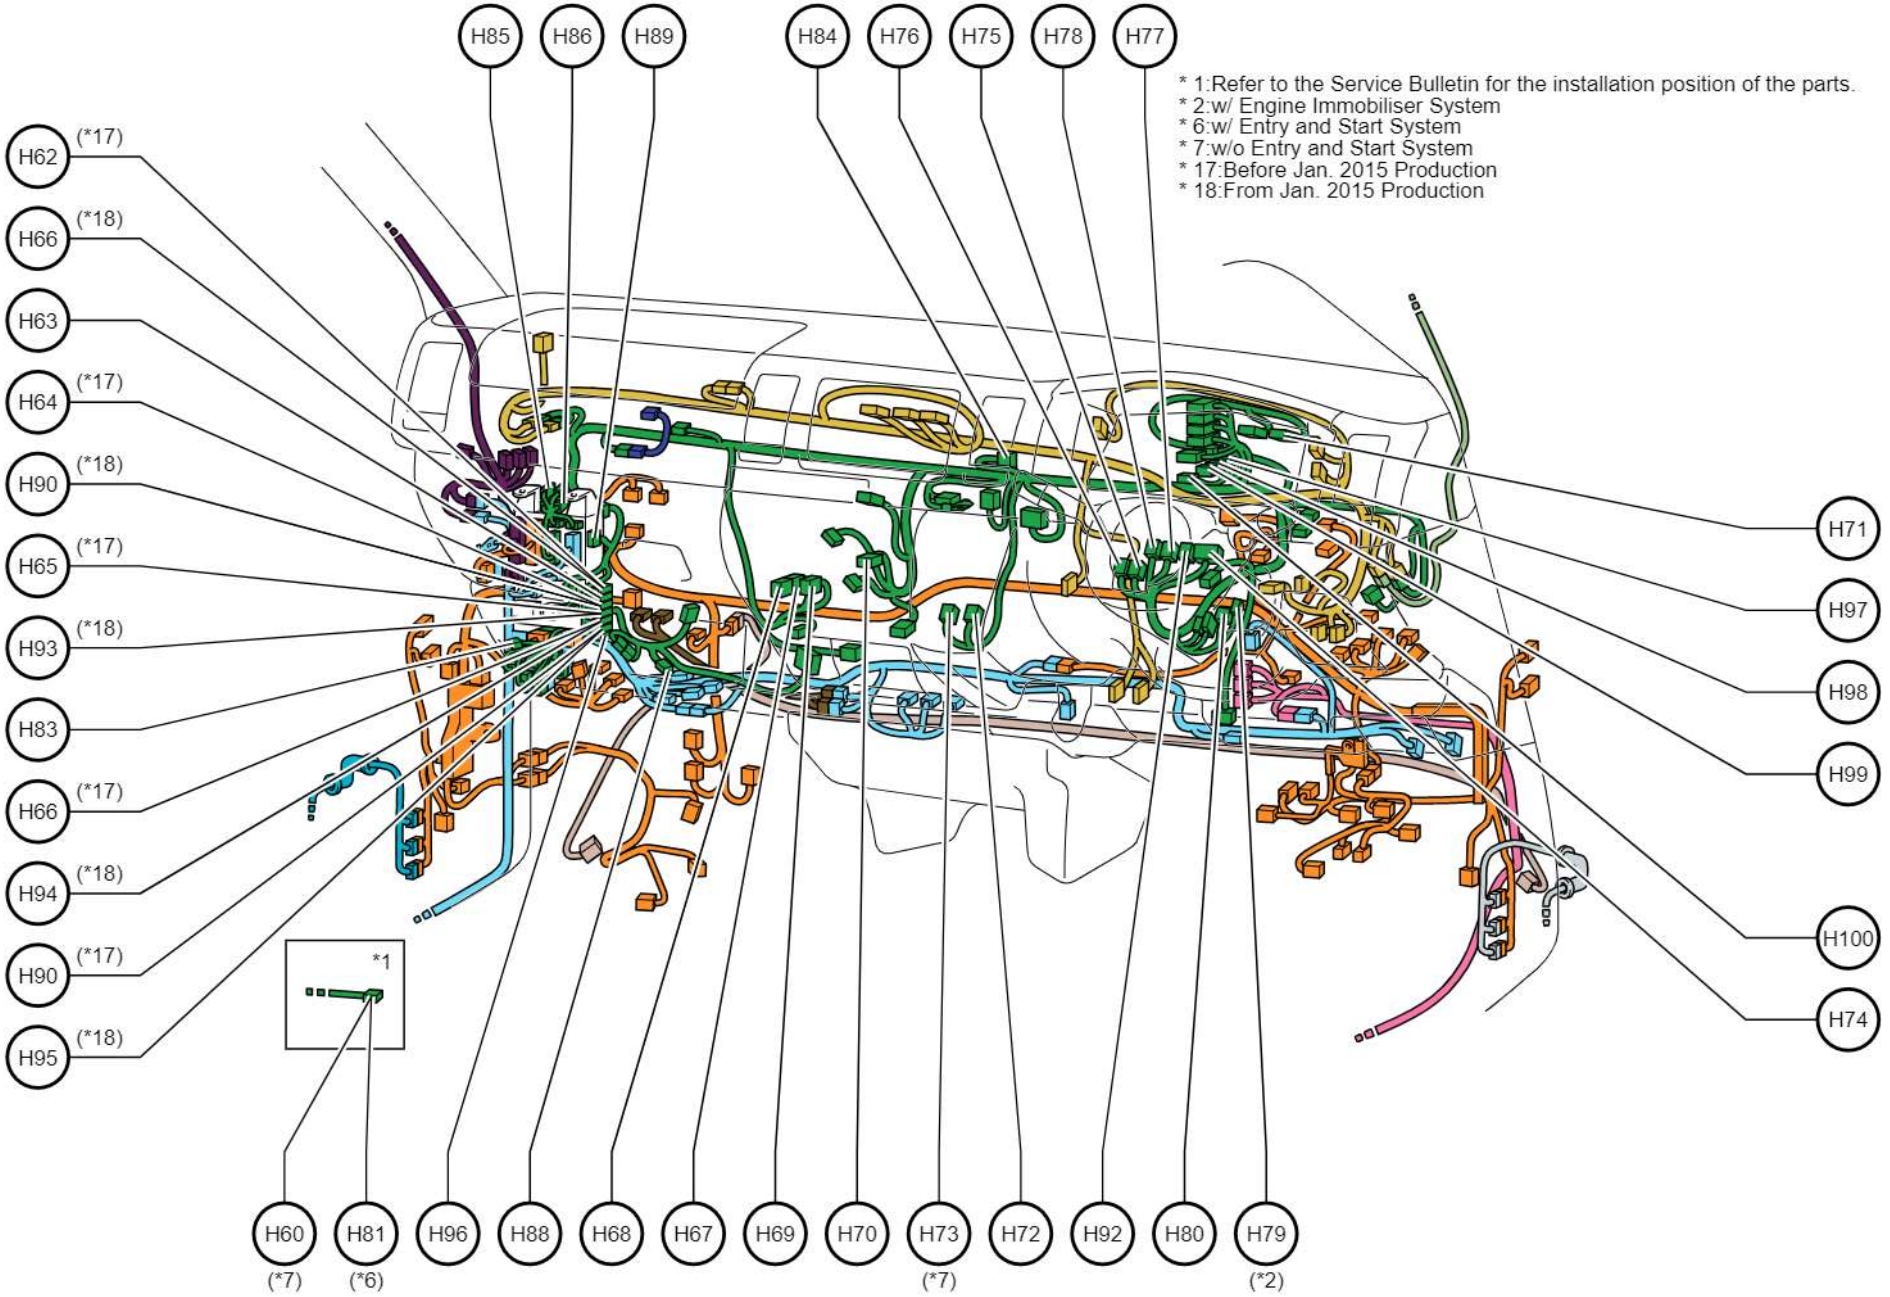



H85
H86
H89
H84
H76
H75
H78
H77
* 1:Refer to the Service Bulletin for the installation position of the parts.
* 2:w/ Engine Immobiliser System
* 6:w/ Entry and Start System
* 7:w/o Entry and Start System
* 17:Before Jan. 2015 Production
* 18:From Jan. 2015 Production
H62 (*17)
H66 (*18)
H63
H64 (*17)
H90 (*18)
H65 (*17)
H93 (*18)
H83
H66 (*17)
H94 (*18)
H90 (*17)
H95 (*18)
H71
H97
H98
H99
H100
H74
*1
H60 (*7)
H81 (*6)
H96
H88
H68
H67
H69
H70
H73 (*7)
H72
H92
H80
H79 (*2)

H 60 Transponder Key ECU
H 62 Junction Connector
H 63 Junction Connector
H 64 Junction Connector
H 65 Junction Connector
H 66 Junction Connector
H 67 Room Lamp SW
H 68 Short Pin (Room Lamp SW)
H 69 Rear Blower SW (Main)
H 70 Blower SW (Front A/C)
H 71 Combination Meter
H 72 Transmission Control Switch and A/T Shift Lever Illumination (Shift Lock Control Unit Assembly)
H 73 Shift Lock Control ECU
H 74 Headlamp Dimmer Switch Assembly
H 75 Windshield Wiper Switch
H 76 Windshield Wiper Switch
H 77 Spiral Cable
H 78 Airbag Squib (Steering Wheel Pad)
H 79 Transponder Key Coil
H 80 Steering Lock Actuator Assembly
H 81 Immobiliser Code Computer
H 83 Option Connector (Car Finder In)
H 84 Option Connector
H 85 Diode (Room Lamp)
H 86 Diode (Door Lock)
H 88 Junction Connector
H 89 Junction Connector
H 90 Junction Connector
H 92 Spiral Cable Sub Assembly (Steering Sensor)
H 93 Junction Connector
H 94 Junction Connector
H 95 Junction Connector
H 96 Junction Connector
H 97 Junction Connector
H 98 Junction Connector
H 99 Junction Connector
H 100 Junction Connector


Position of Parts in Instrument Panel <RHD>

H60
Black

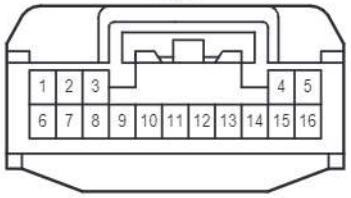


90980-12423

H62
White



90980-12827

H63
White




90980-12827

H64
White




90980-12827

H65
White



90980-12827

H66
White



90980-12827

H67
Black



90980-12135

H68
Black




90980-12135

H69
Gray




90980-12366

H70
Black

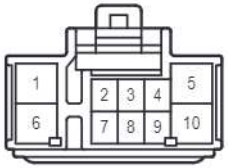


90980-10993

H71
White

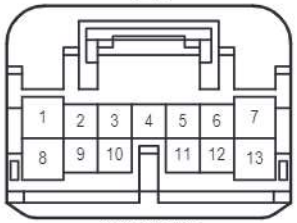


90980-12767

H72
White

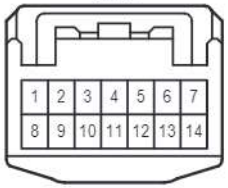

90980-12370


H73
White

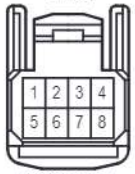

90980-12551

(For production through approximately Feb. 2014)


H73
Black

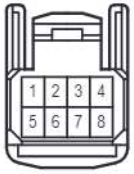

90980-12551

(For production from approximately Feb. 2014)

H74
Black

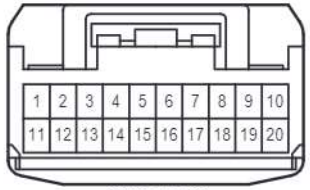


90980-12460

H75
White




90980-12359


H76
White




H77
Black



H78
Yellow




H79
Black




Position of Parts in Instrument Panel <RHD>

H80
Black

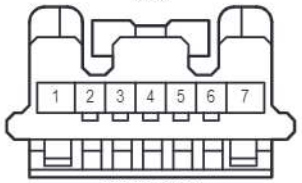

90980-12092

H81
White

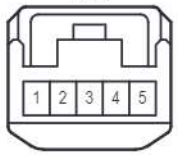

90980-12366

H83
White




90980-12367

H84
White



90980-10871

H85
Black




90980-11251

H86
Black




90980-11251

H88
Black

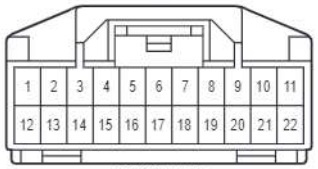


90980-11915

H89
White

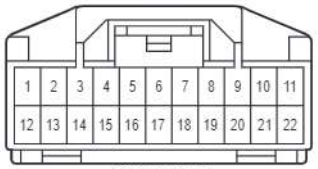


90980-11915

H90
White




90980-12827

H92
Black

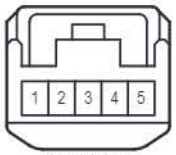


90980-12366

H93
White




90980-12827

H94
White




90980-12827

H95
White




90980-12827

H96
White




90980-12827

H97
White




90980-12827

H98
White



90980-12827

H99
White




90980-12827

H100
White



90980-12827

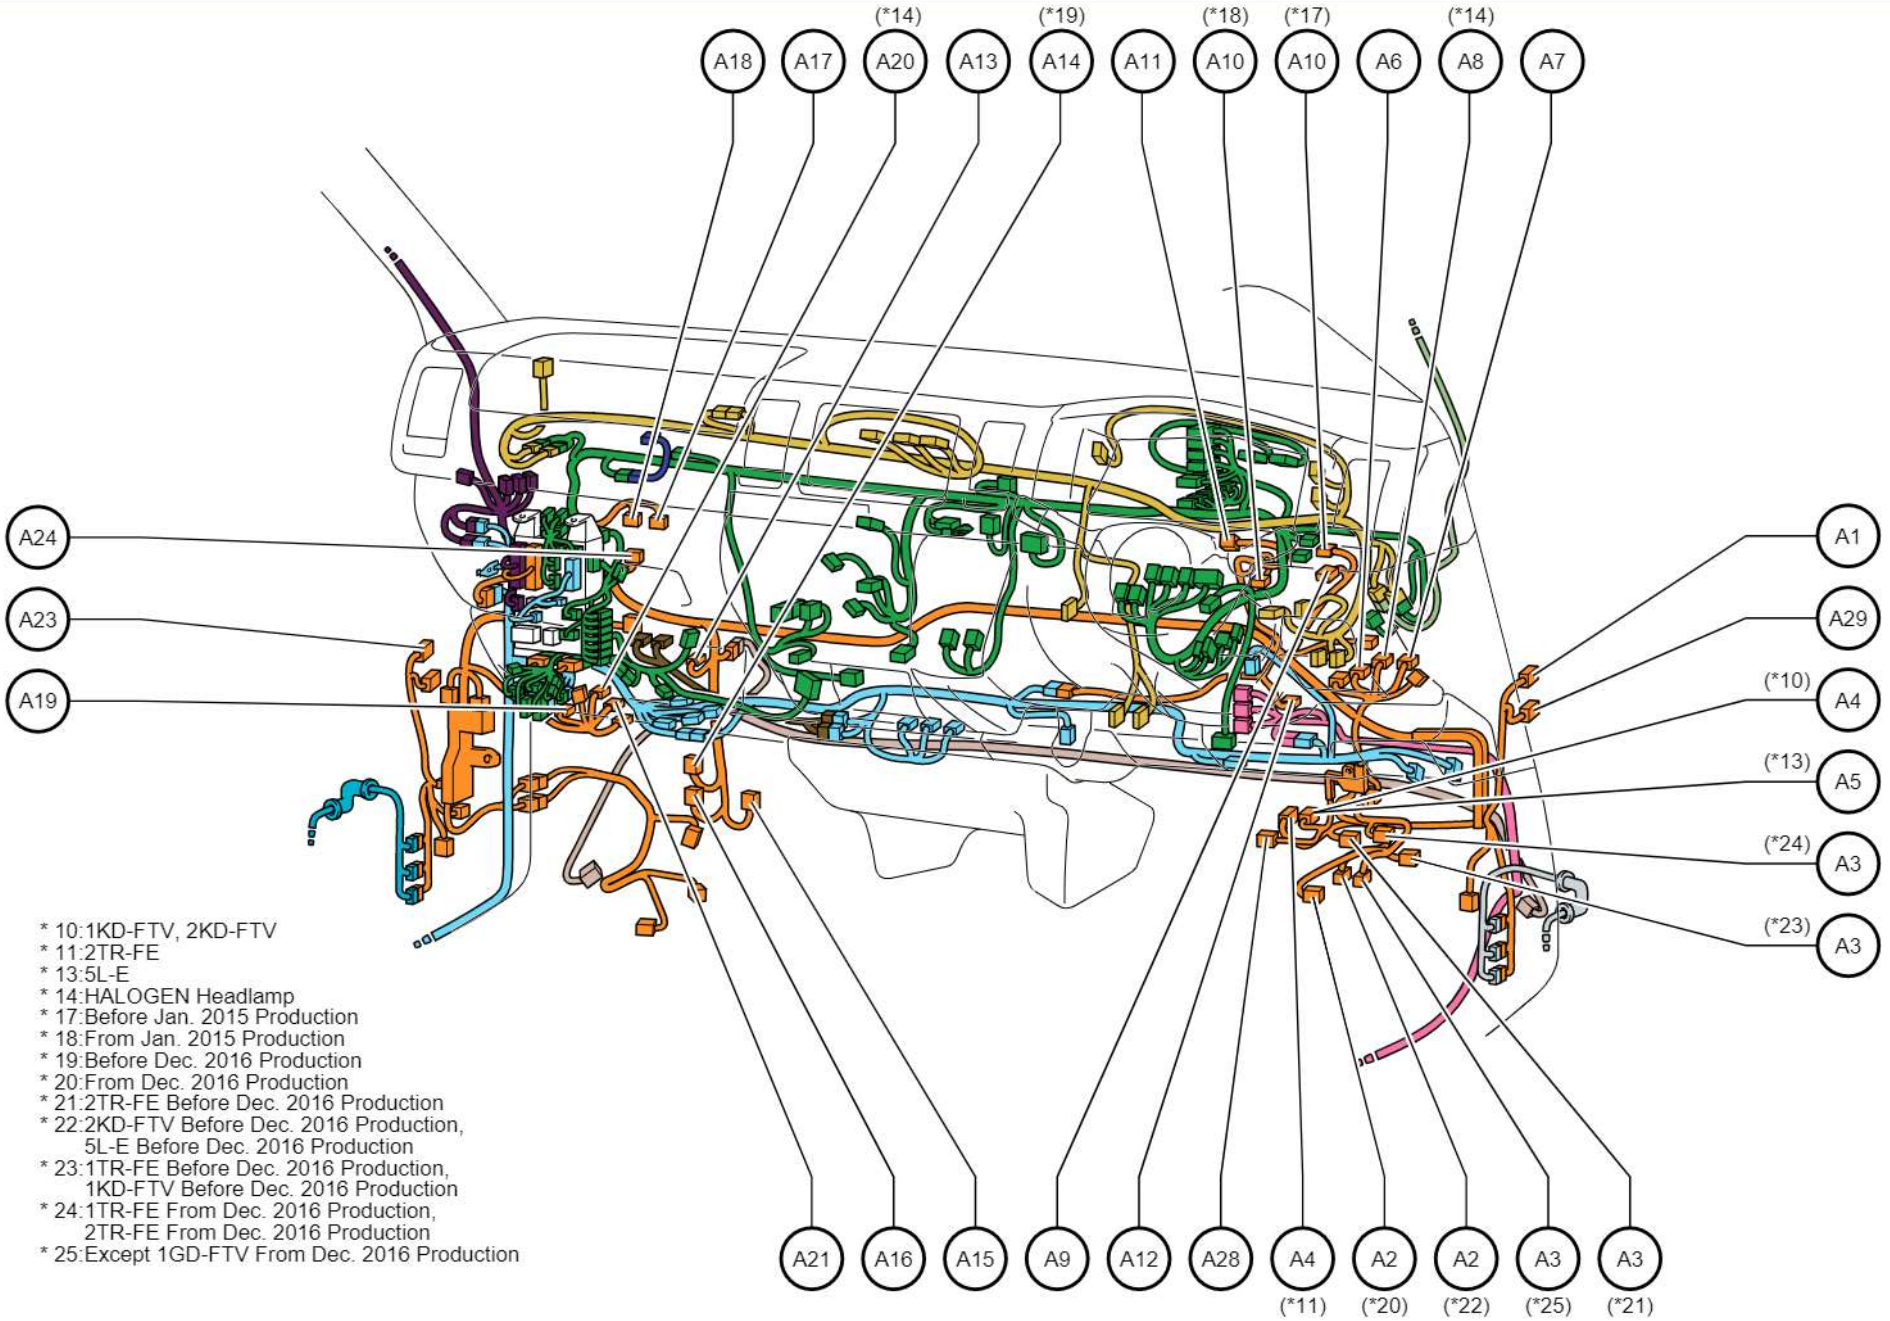


* 10:1KD-FTV, 2KD-FTV
* 11:2TR-FE
* 13:5L-E
* 14:HALOGEN Headlamp
* 17:Before Jan. 2015 Production
* 18:From Jan. 2015 Production
* 19:Before Dec. 2016 Production
* 20:From Dec. 2016 Production
* 21:2TR-FE Before Dec. 2016 Production
* 22:2KD-FTV Before Dec. 2016 Production, 5L-E Before Dec. 2016 Production
* 23:1TR-FE Before Dec. 2016 Production, 1KD-FTV Before Dec. 2016 Production
* 24:1TR-FE From Dec. 2016 Production, 2TR-FE From Dec. 2016 Production
* 25:Except 1GD-FTV From Dec. 2016 Production

Position of Parts in Instrument Panel <RHD>

A	1	Turn Signal Lamp (Front RH)
A	2	Inlet Air Temp. Sensor (Air Cleaner)
A	3	Air Flow Meter
A	4	A/C Pressure Sensor No.1
A	5	Pressure SW
A	6	Clearance Lamp (Front RH)
A	7	Headlamp (RH)
A	8	Headlamp Leveling Motor (RH)
A	9	Brake Vacuum Warning SW
A	10	Brake Fluid Level Warning SW
A	11	Windshield Wiper Motor
A	12	Airbag Sensor (Front RH)
A	13	Airbag Sensor (Front LH)
A	14	Ambient Temp. Sensor
A	15	Horn (Low)
A	16	Horn (High)
A	17	Windshield Washer Motor
A	18	Rear Washer Motor
A	19	Headlamp (LH)
A	20	Headlamp Leveling Motor (LH)
A	21	Clearance Lamp (Front LH)
A	23	Turn Signal Lamp (Front LH)
A	24	Short Pin (Vacuum)
A	28	Magnet Valve
A	29	Daytime Running Light (Headlamp Assembly RH)

Position of Parts in Instrument Panel <RHD>

A1
Gray

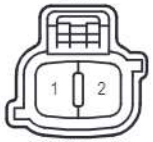

90980-11019

A2
Black



90980-11163

A3
Black



90980-12292

A4
Black



90980-10845

A5
Dark Gray




90980-10943

A6
Black



90980-11156

A7
White

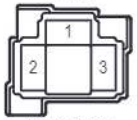

90980-11314

A8
Black



90980-11016

A9
Gray



90980-11252

A10
Gray



90980-11207

A11
Black



90980-11599

A12
Yellow



90980-12490

A13
Yellow



90980-12490

A14
Black



90980-11070

(Before Jan. 2017 Production)

A15
Black




90980-10619

A16
Black




90980-10619

A17
Black

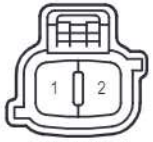

90980-11019

A18
Gray

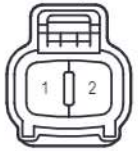

90980-11051

(Before Dec. 2013 Production)


A18
Black



90980-11051

(From Dec. 2013 Production)

A19
White

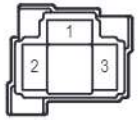

90980-11314

A20
Black




90980-11016

A21
Black



90980-11156

A23
Gray

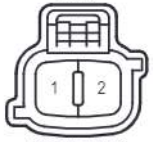

90980-11019

A24
White




90980-10987

A28
White



90980-11003

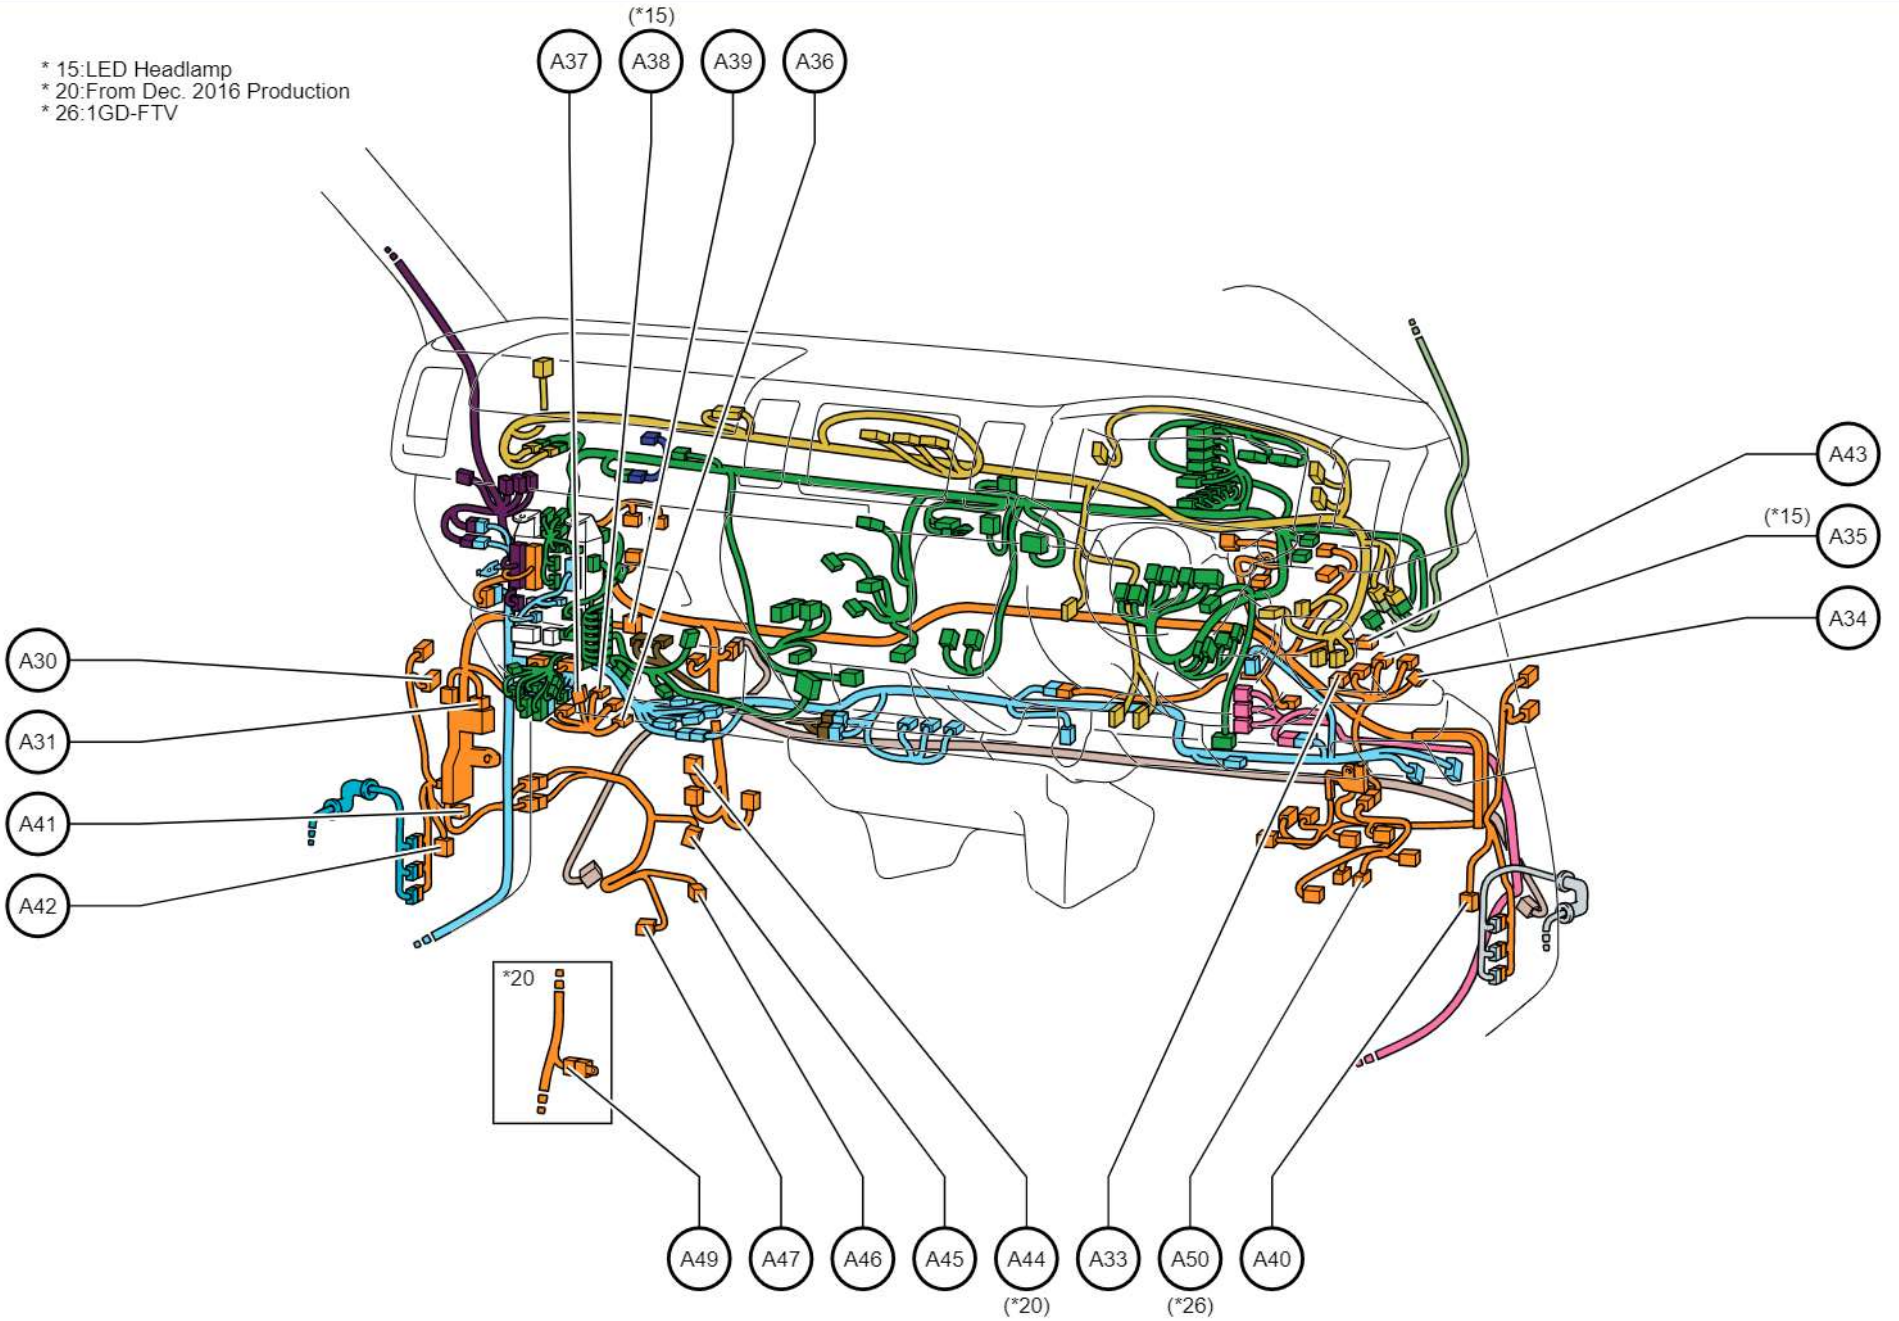
* 15:LED Headlamp
* 20:From Dec. 2016 Production
* 26:1GD-FTV
(*15)
A37
A38
A39
A36
A43
(*15)
A35
A34
A30
A31
A41
A42
*20
A49
A47
A46
A45
A44
(*20)
A33
A50
(*26)
A40

A 30 Daytime Running Light (Headlamp Assembly LH)
A 31 Junction Connector
A 33 Headlamp Assembly RH
A 34 Headlamp Assembly RH
A 35 Headlamp Leveling Motor (RH)
A 36 Headlamp Assembly LH
A 37 Headlamp Assembly LH
A 38 Headlamp Leveling Motor (LH)
A 39 Headlamp Leveling Computer Assembly
A 40 Indoor Electrical Key Antenna Assembly (FR RH)
A 41 Indoor Electrical Key Antenna Assembly (FR LH)
A 42 Wireless Door Lock Buzzer
A 43 Brake Vacuum Warning SW
A 44 Ambient Temp. Sensor
A 45 Urea Pump Control ECU
A 46 Urea Tube with Heater Assembly
A 47 Urea Pump
A 49 Junction Connector
A 50 Air Flow Meter

Position of Parts in Instrument Panel <RHD>

A30
Black



90980-11020

A31
Gray




90980-10897

A33
Gray



90980-11194

A34
Black

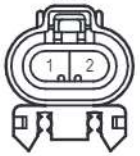

90980-11659

A35
Gray




90980-11016

A36
Gray



90980-11194

A37
Black

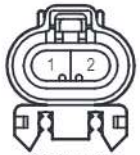


90980-11659

A38
Gray



90980-11016

A39
White

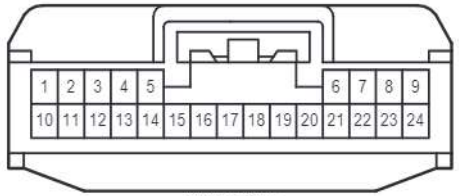

90980-12404

A40
Gray



90980-12572

A41
Gray




90980-12572

A42
Black



90980-11142

A43
Black

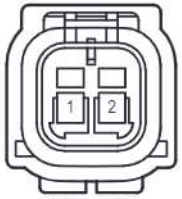


90980-12195

A44
Black



90980-12416
(From Jan. 2017 Production)

A45
Black

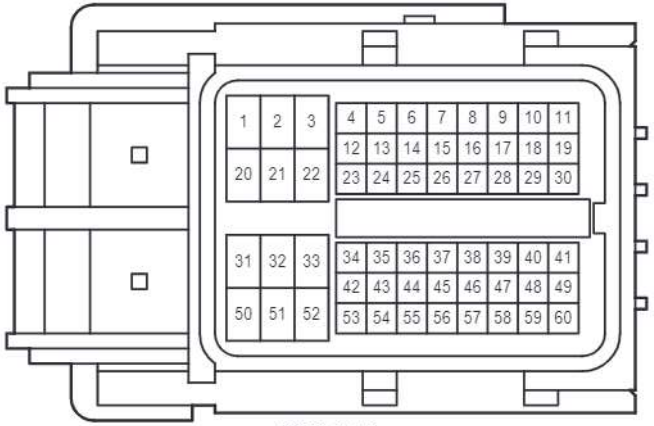


90980-12462

A46
Blue




90980-11156

A47
Black

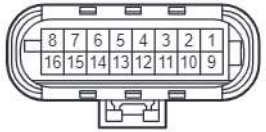

90980-12A18

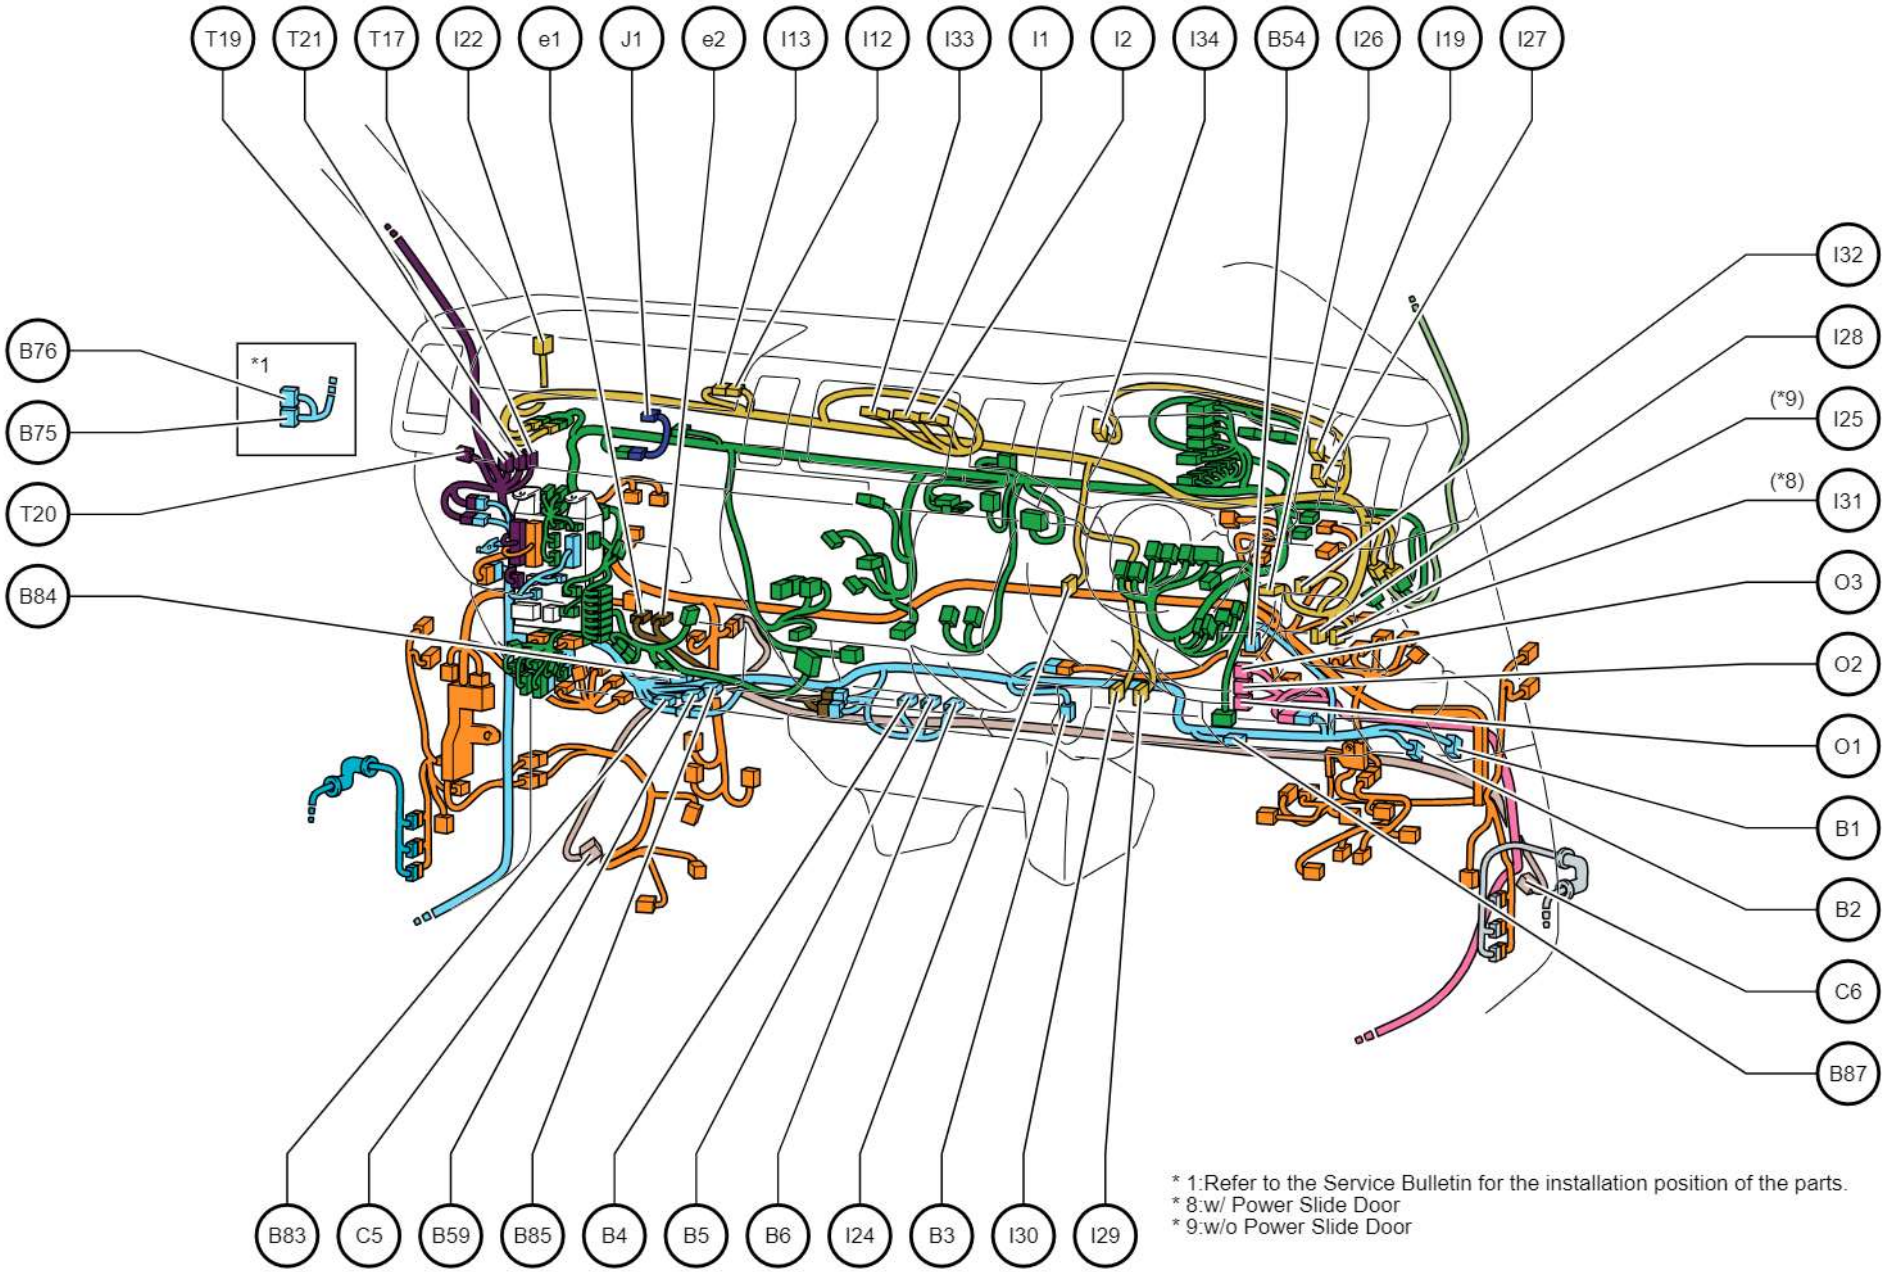


* 1:Refer to the Service Bulletin for the installation position of the parts.
* 8:w/ Power Slide Door
* 9:w/o Power Slide Door

B	1	Accelerator Position Sensor
B	2	Stop Lamp SW
B	3	Parking Brake SW
B	4	Airbag Sensor Assembly Center
B	5	Airbag Sensor Assembly Center
B	6	Airbag Sensor Assembly Center
B	54	Clutch Switch Assembly
B	59	Diode (Magnet Clutch)
B	75	Smart Key Computer Assembly
B	76	Smart Key Computer Assembly
B	83	Junction Connector
B	84	Junction Connector
B	85	Junction Connector
B	87	Junction Connector
C	5	Fog Lamp (Front LH)
C	6	Fog Lamp (Front RH)
I	1	Radio Receiver Assembly
I	2	Radio Receiver Assembly
I	12	Junction Connector
I	13	Junction Connector
I	19	Option Connector (TVSS Indicator Lamp)
I	22	Automatic Light Control Sensor
I	24	Idle-Up SW
I	25	Door Lock Control SW
I	26	Outer Mirror SW
I	27	Headlamp Leveling SW
I	28	Power Slide Door Control SW (LH)
I	29	Power Slide Door Main SW
I	30	DPF Switch Assembly
I	31	Power Slide Door Control SW (RH)
I	32	Push Start Switch
I	33	Option Connector
I	34	VSC Off Switch
J	1	Airbag Squib (Front Passenger's Airbag Assembly)
O	1	Transmission Control ECU
O	2	Transmission Control ECU
O	3	Transmission Control ECU


Position of Parts in Instrument Panel <RHD>

B1
Black

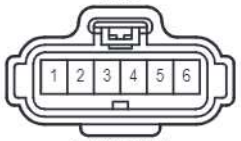

90980-11858

B2
White

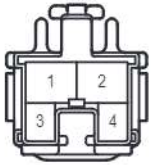


90980-11118

B3
White




90980-10182

B4
Yellow

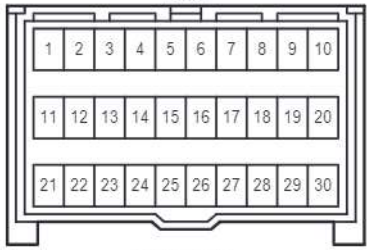


90980-12391

B5
Yellow

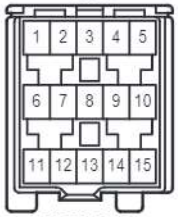

90980-12449

B6
Yellow

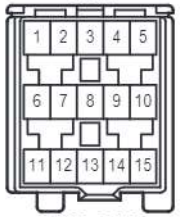

90980-12450

B54
White




90980-10906

B59
White




90980-11608

B75
Black

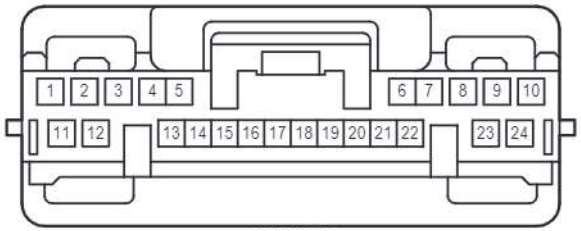


90980-12912

B76
White

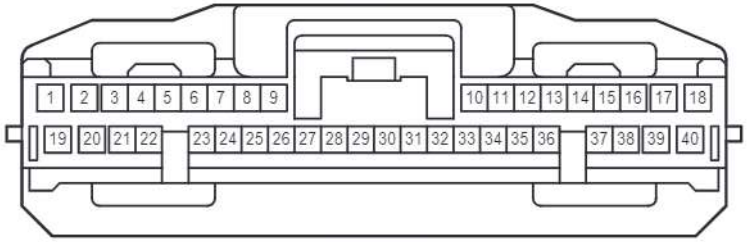


90980-12708

B83
White

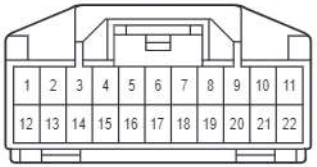

90980-11915


B84
Black



90980-11398


Position of Parts in Instrument Panel <RHD>

I2
Blue

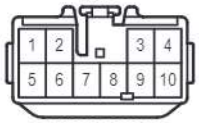


90980-10997

I12
Blue

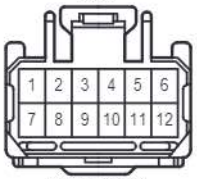


90980-11661

I13
Blue

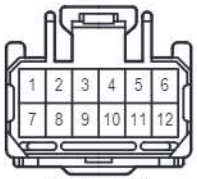


90980-11661

I19
White




90980-12012

I22
Black

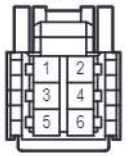


90980-12056

I24
White

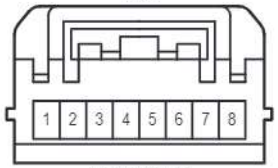


90980-12550

I25
White

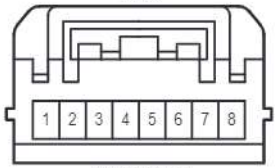


90980-12550

I26
White

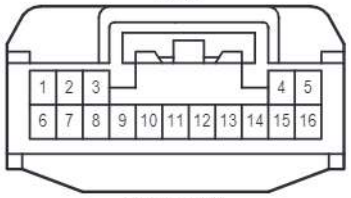


90980-12423

I27
Black

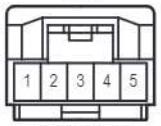


90980-11909

I28
Blue

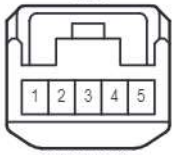


90980-12366

I29
Gray

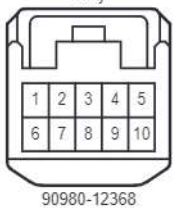


90980-12368

I30
Black

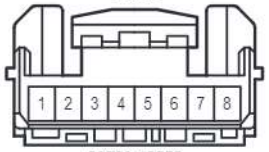


90980-12558

I31
Black

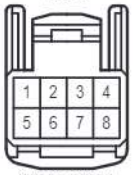


90980-12221

I32
Black

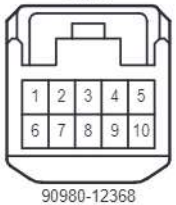


90980-12368

I33
White

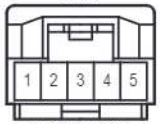


90980-11909

I34
Black

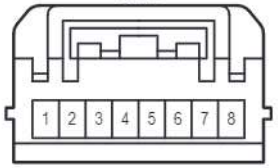


90980-12550

J1
Orange




90980-12224

O1
White

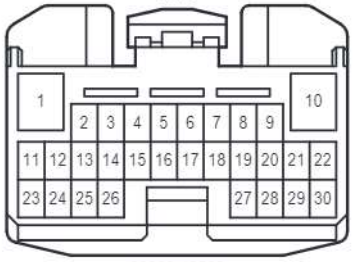


90980-12562

O2
White



O3
White



T17
White



T19
White




T20
White




Position of Parts in Instrument Panel <RHD>

e1
White

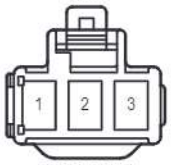


90980-10956


e2
White

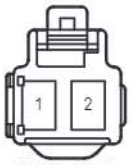



90980-10903

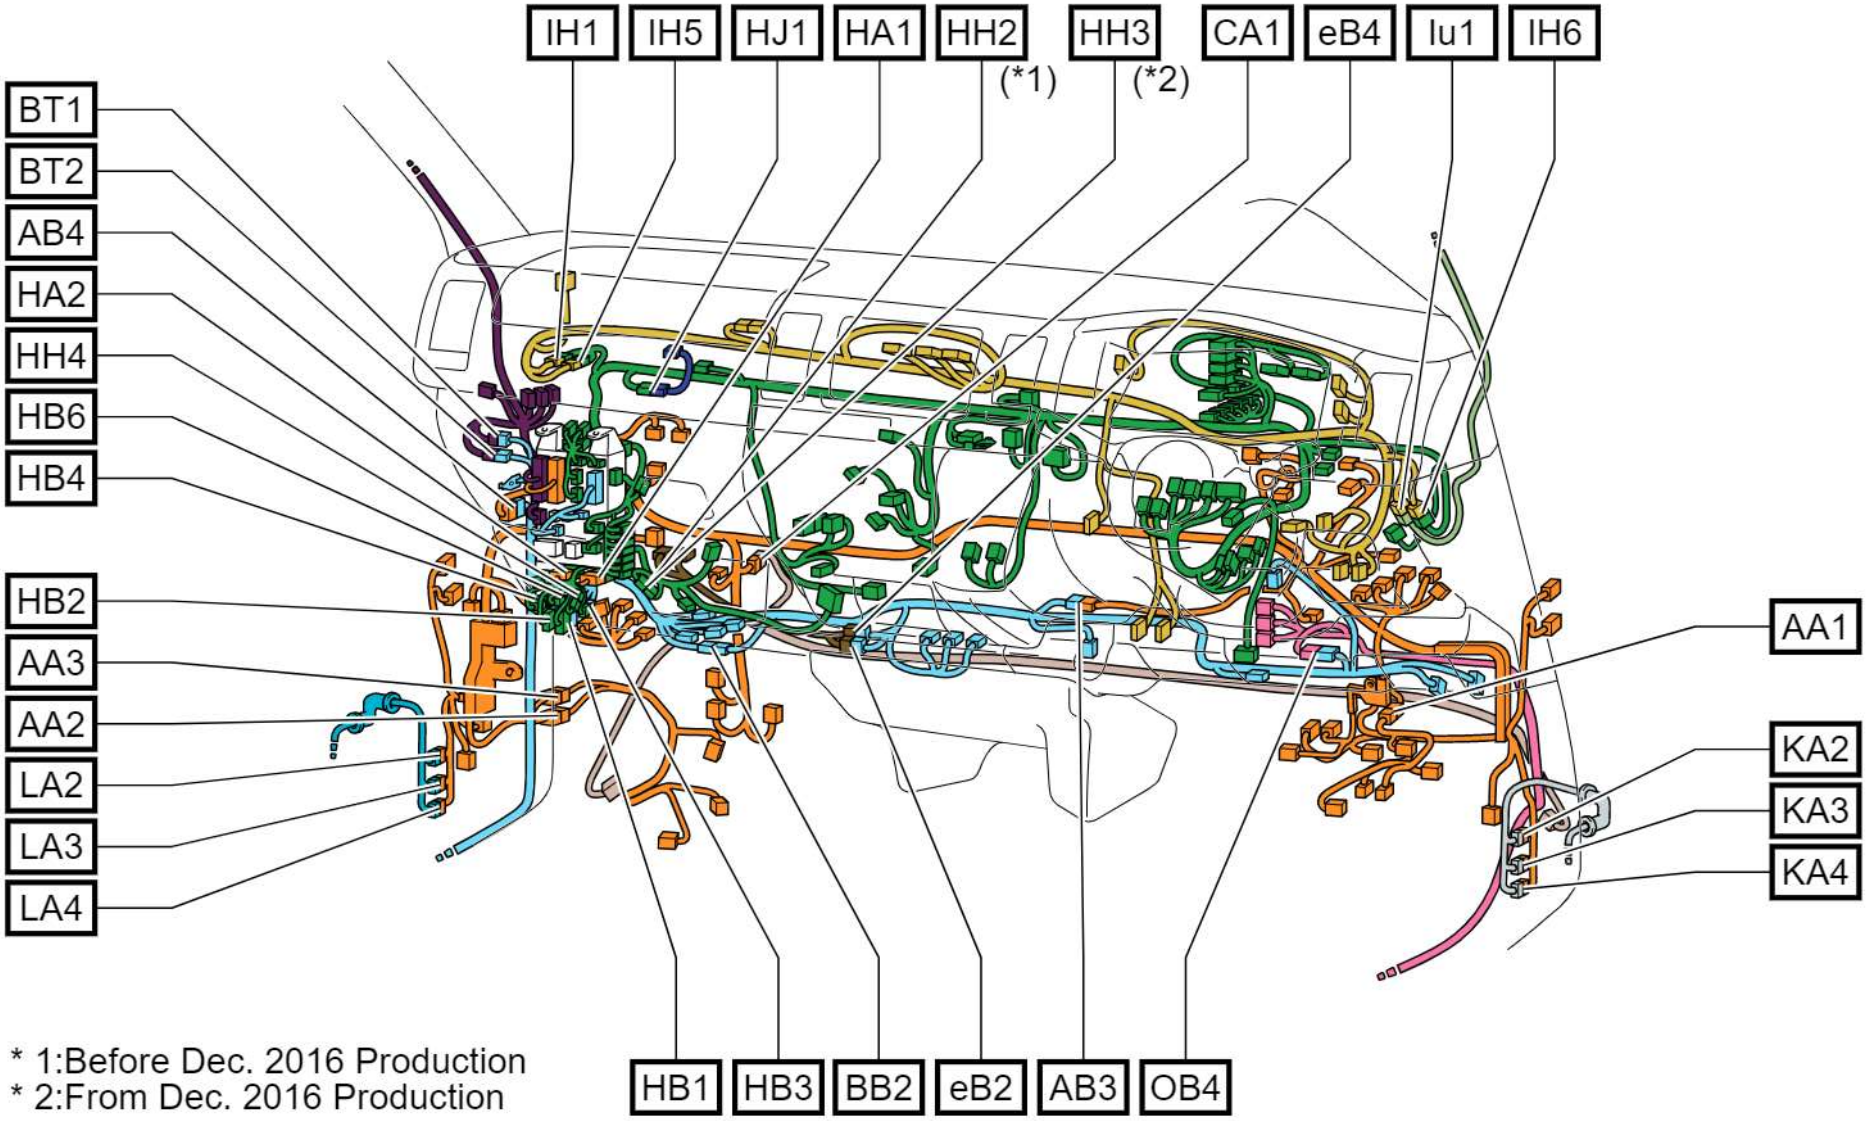


* 1:Before Dec. 2016 Production
* 2:From Dec. 2016 Production

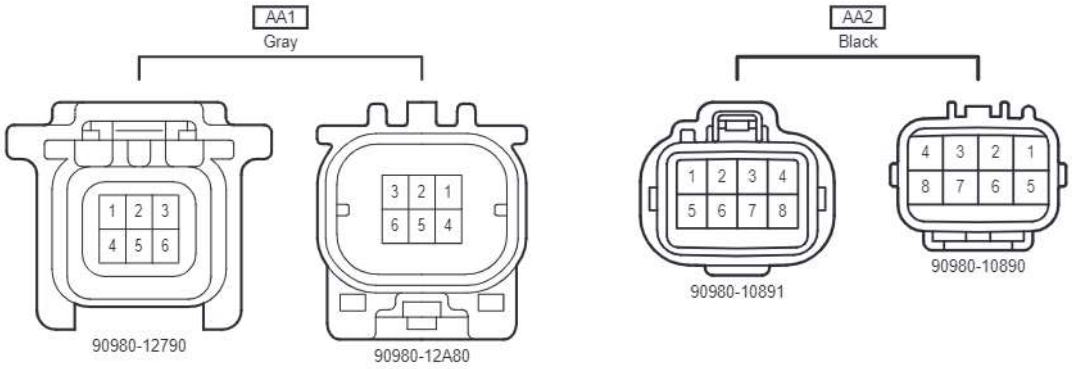

AA1
Gray
1 2 3
4 5 6
3 2 1
6 5 4
90980-12790
90980-12A80
AA2
Black
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
90980-10891
90980-10890

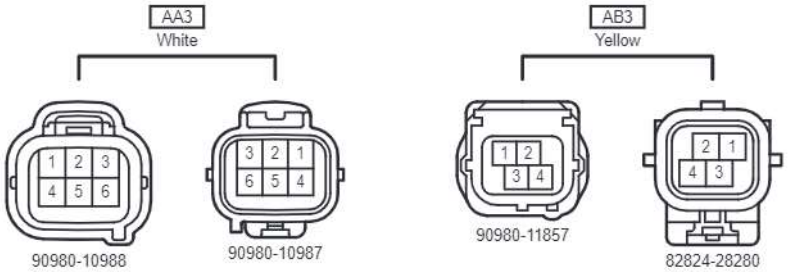
AA3
White
1 2 3
4 5 6
3 2 1
6 5 4
90980-10988
90980-10987
AB3
Yellow
1 2
3 4
2 1
4 3
90980-11857
82824-28280

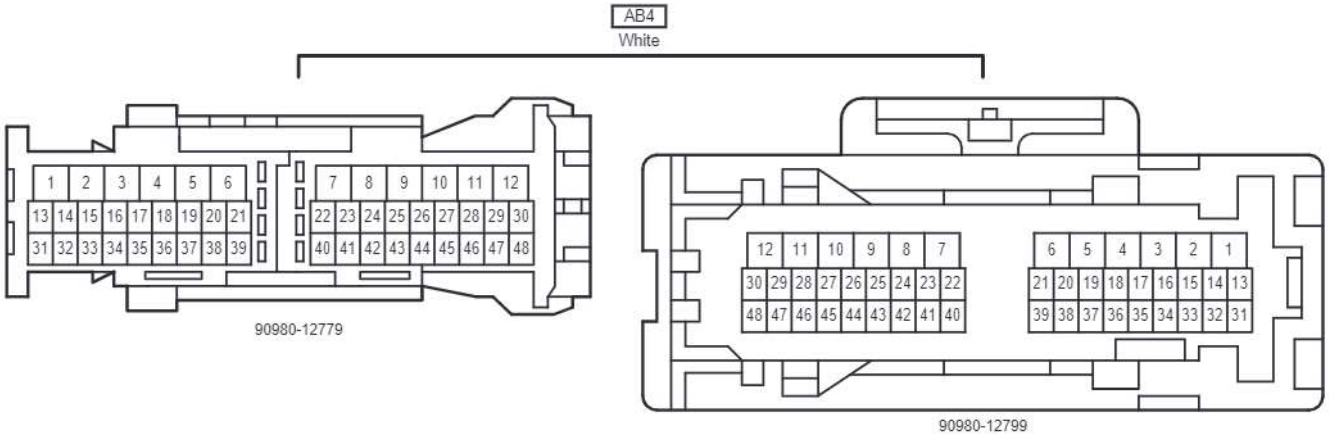

AB4
White
1 2 3 4 5 6 7 8 9 10 11 12
13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30
31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48
90980-12779
12 11 10 9 8 7 6 5 4 3 2 1
30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13
48 47 46 45 44 43 42 41 40 39 38 37 36 35 34 33 32 31
90980-12799

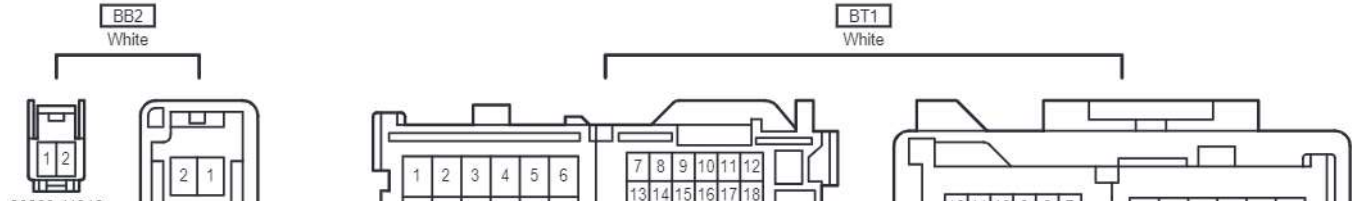
BB2
White
1 2
2 1
BT1
White
1 2 3 4 5 6 7 8 9 10 11 12
13 14 15 16 17 18

BT2
White

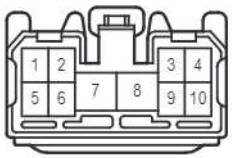

90980-11527

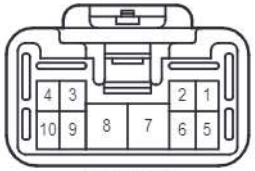


90980-11596

CA1
Black




90980-11194

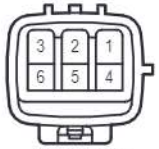


90980-11193

HA1
White

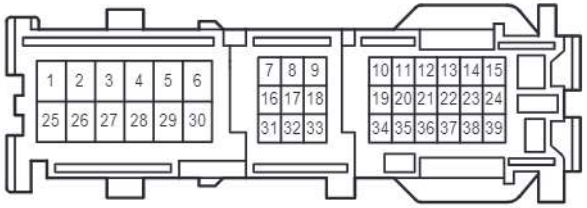


90980-12502

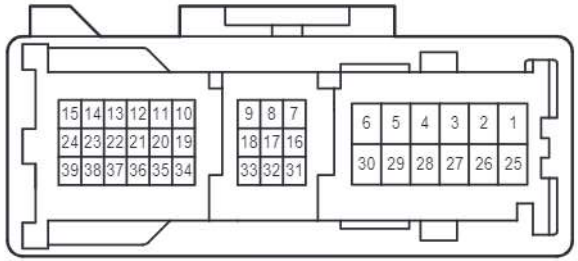


90980-12515

HA2
Blue

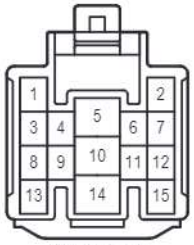



90980-10815

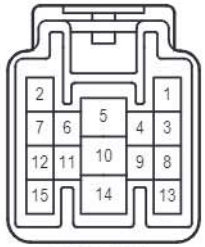

90980-10814


HB1
White

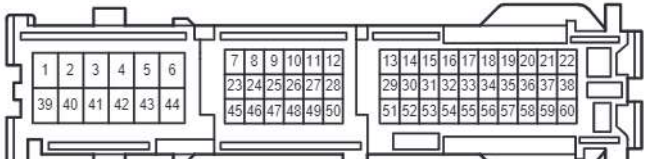

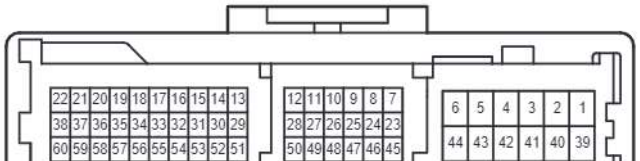


Wire and Wire in Instrument Panel <RHD>

HB2
White

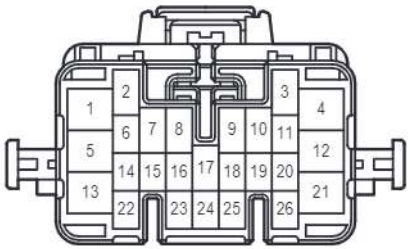


90980-11632

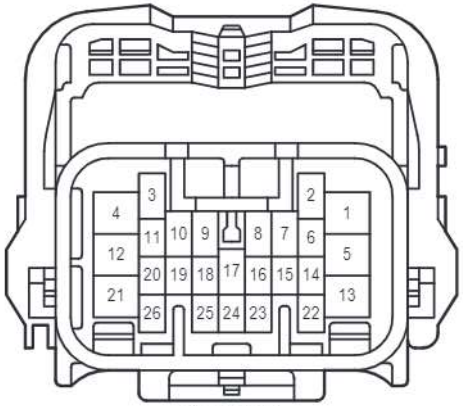


90980-11631

HB3
Yellow

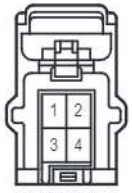


90980-11892

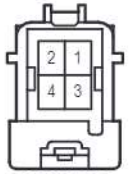


90980-11891

HB4
Gray

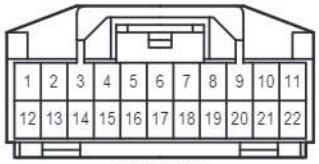


90980-11915

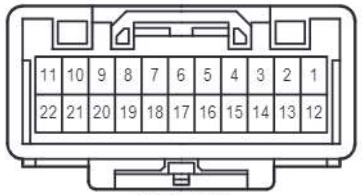


90980-11926

HB6
White

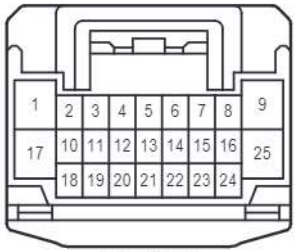

90980-12414

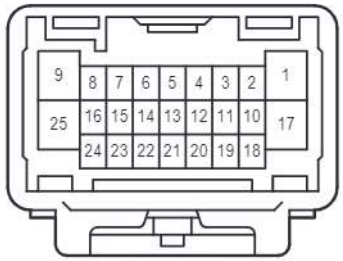

90980-12413

HH2
White



90980-10825




90980-10824

HH3
Whine

HH4
Whine

HJ1
Yellow


IH1
White

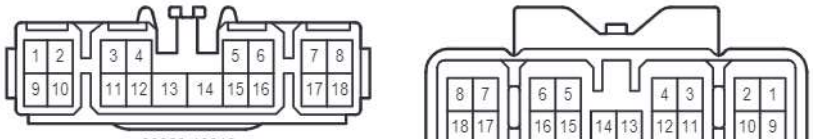


90980-10819

90980-10818

IH5
Gray

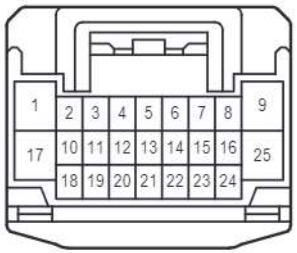


90980-12414

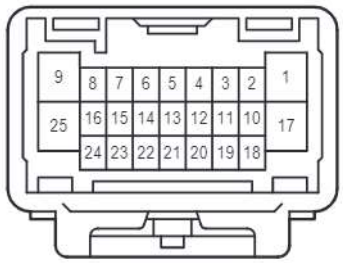


90980-12413

IH6
Gray

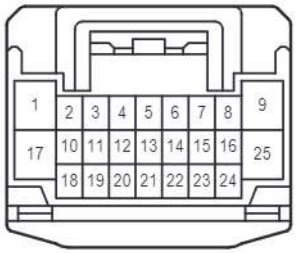


90980-12414

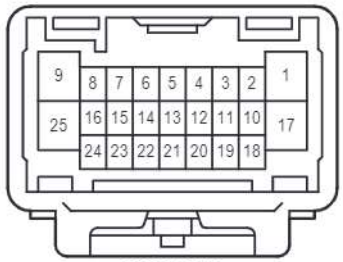


90980-12413

Iu1
White

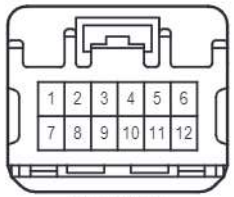


90980-12737

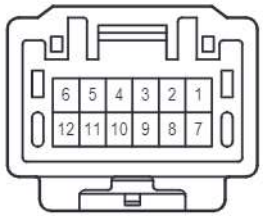

90980-12736


KA2
Black



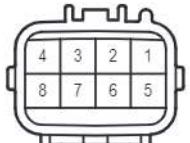



KA3
Gray




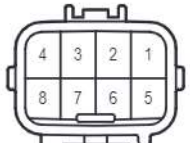

Wire and Wire in Instrument Panel <RHD>

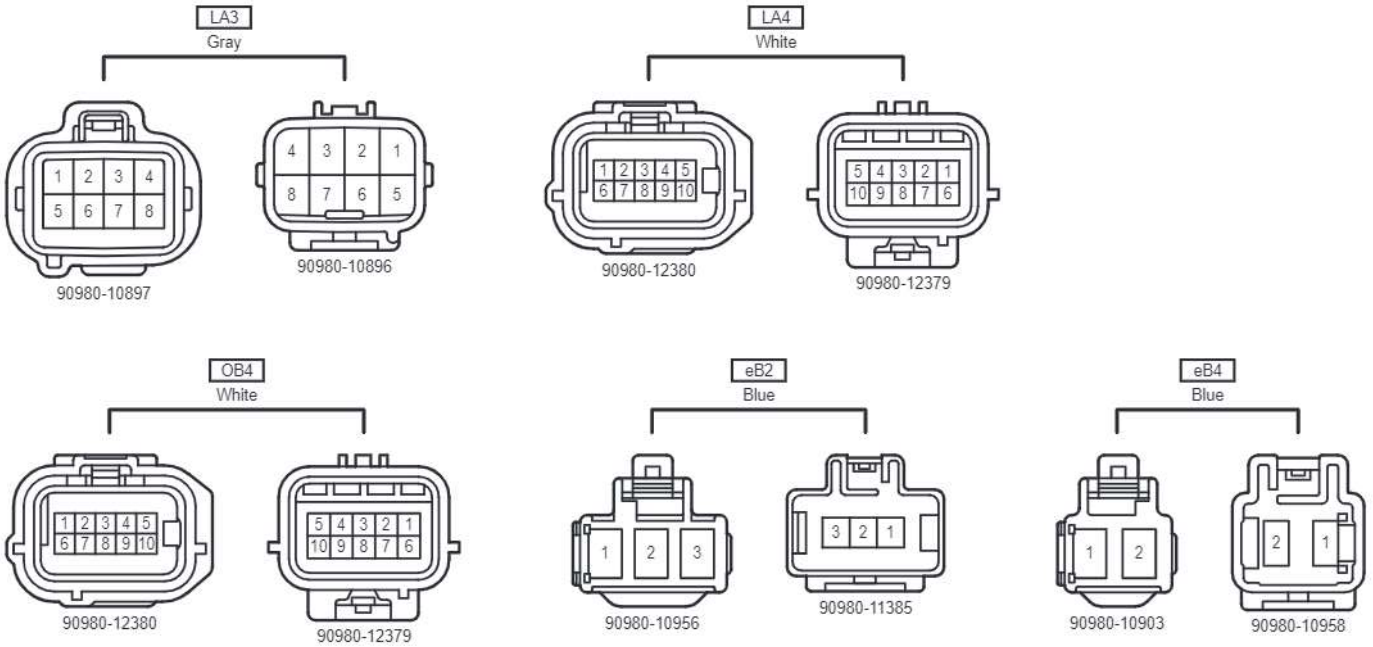

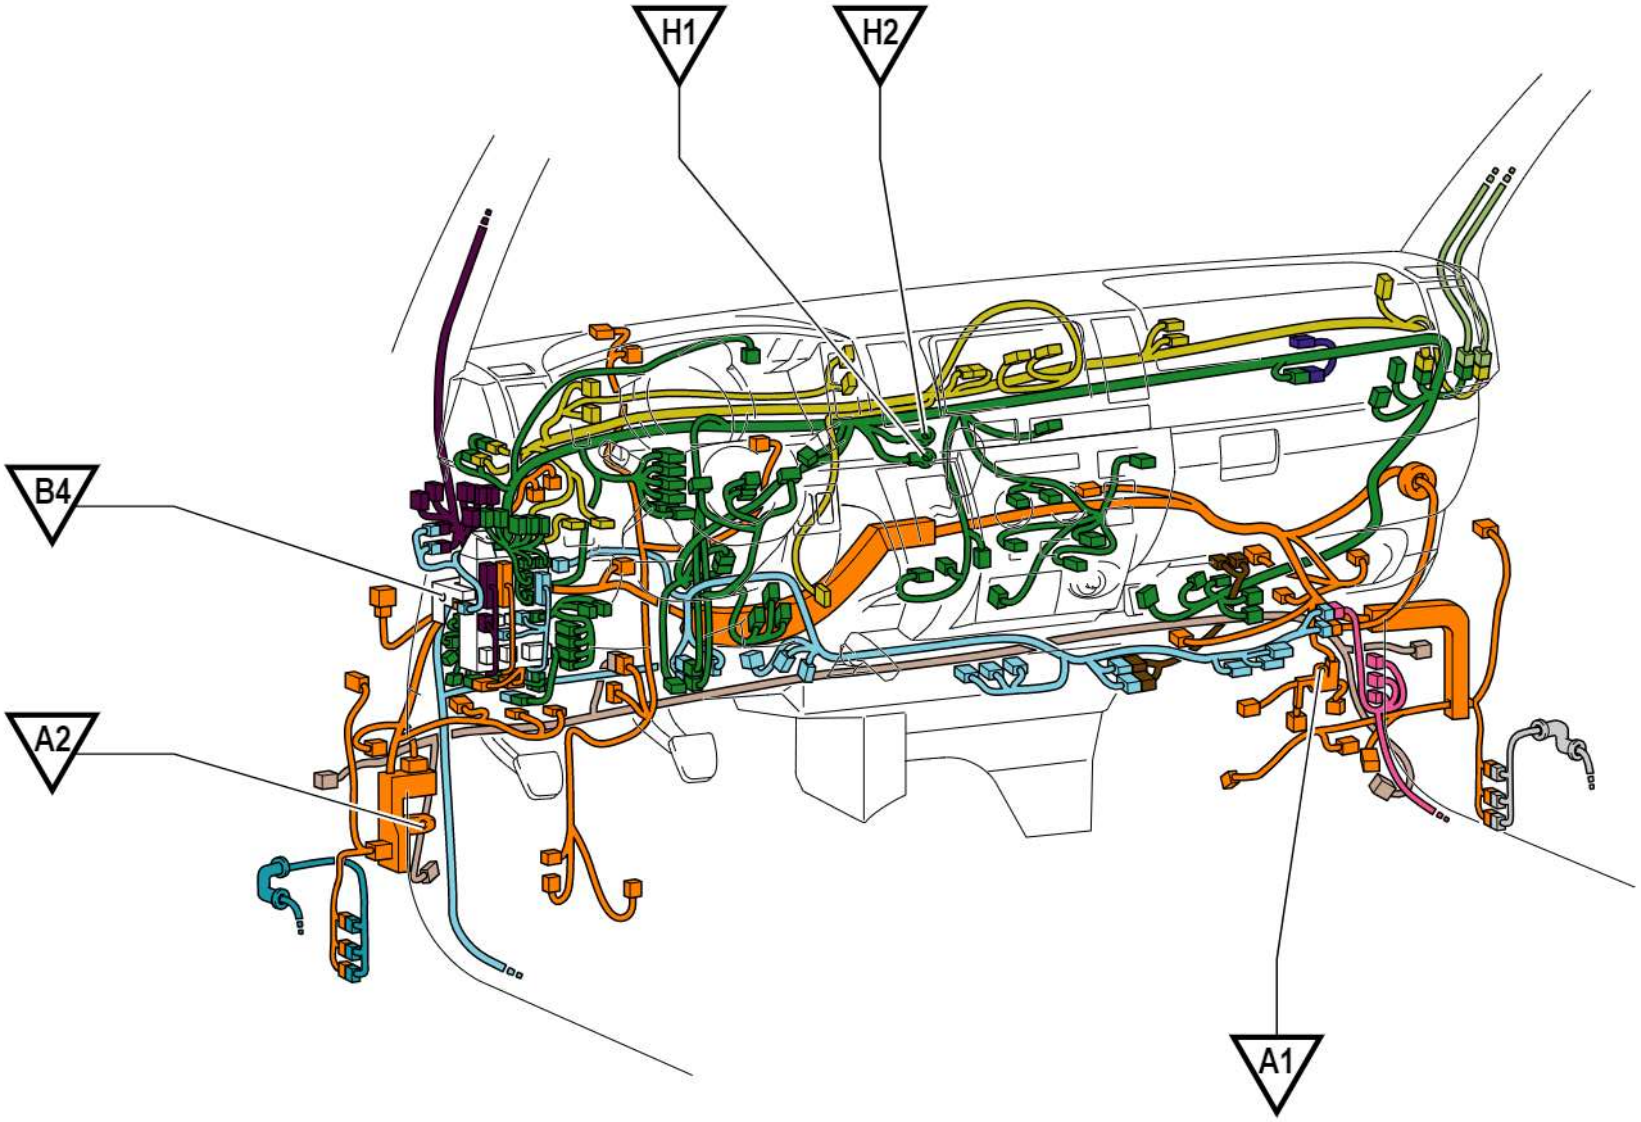

H1
H2
B4
A2
A1

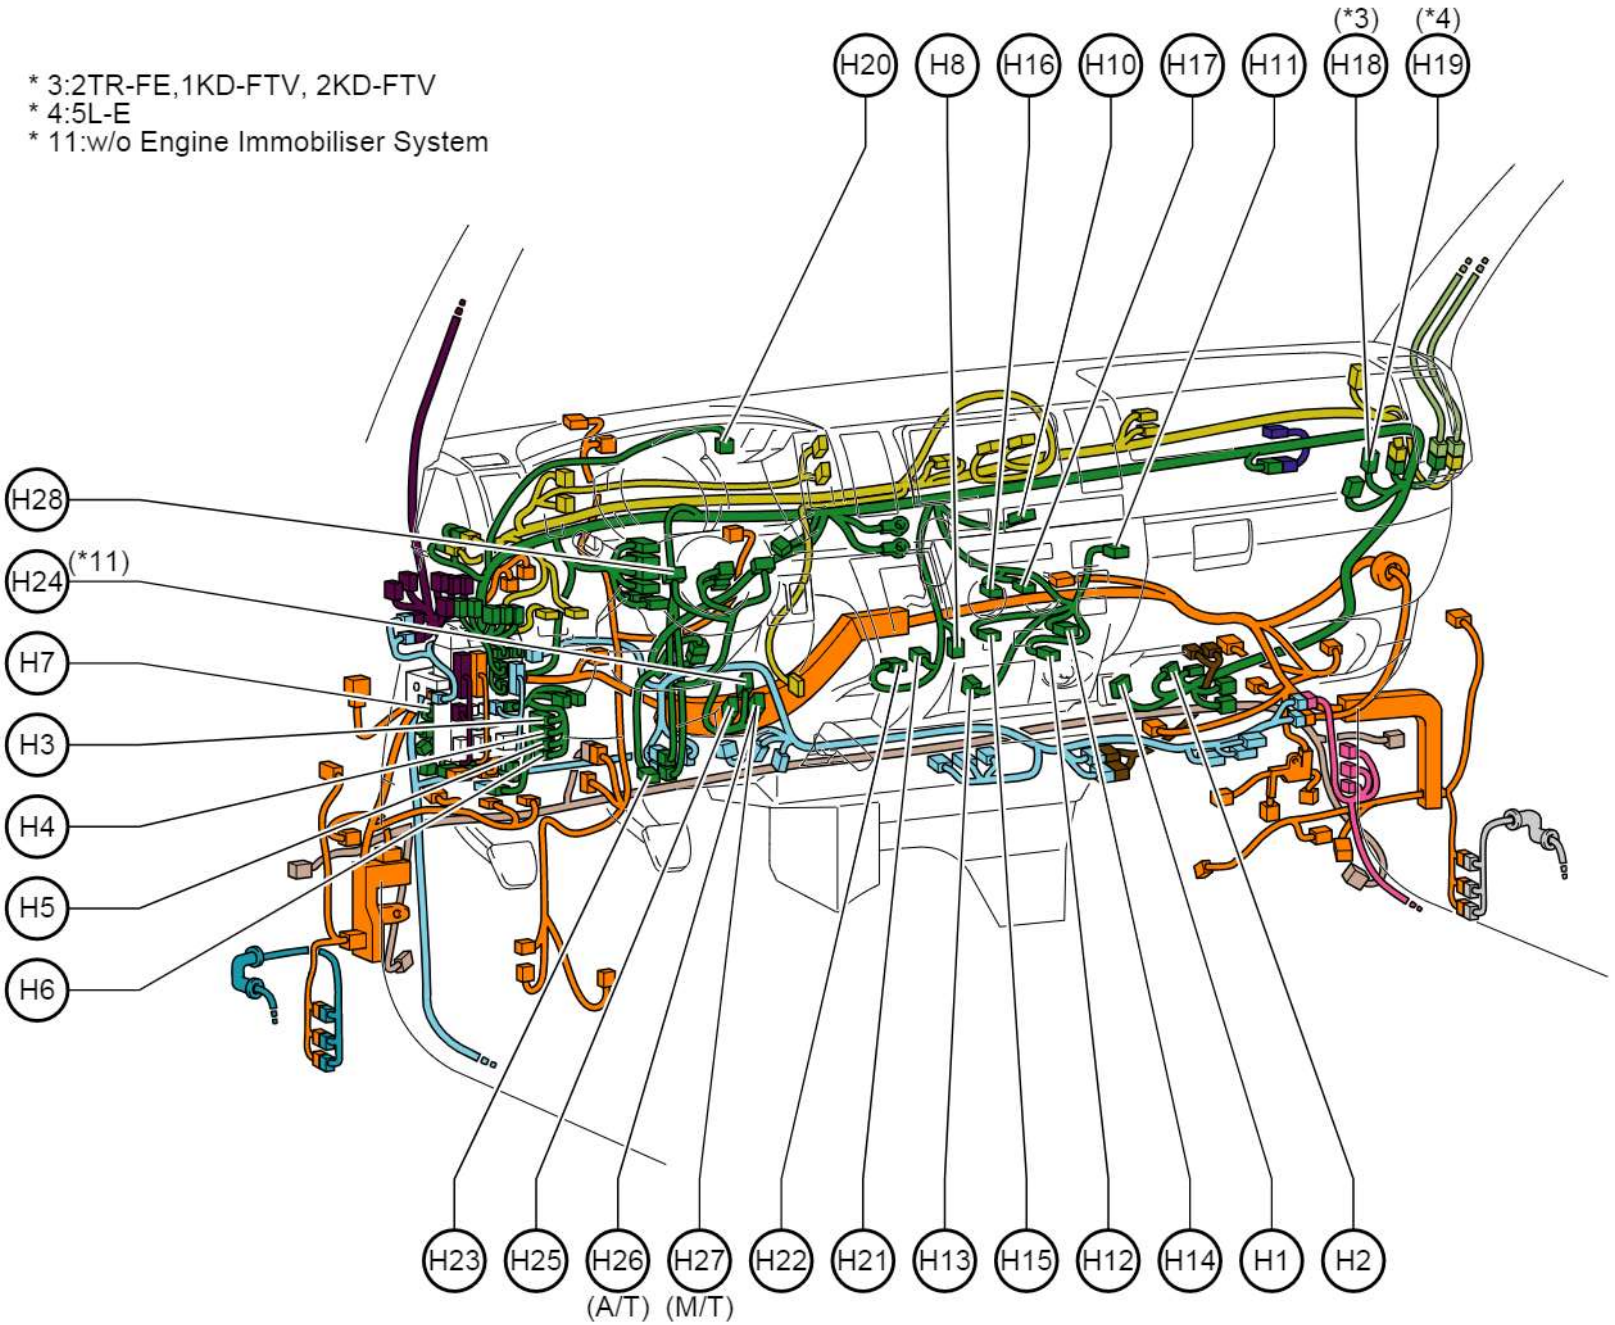
* 3:2TR-FE,1KD-FTV, 2KD-FTV
* 4:5L-E
* 11:w/o Engine Immobiliser System
H20
H8
H16
H10
H17
H11
(*3)
H18
(*4)
H19
H28
H24
(*11)
H7
H3
H4
H5
H6
H23
H25
H26
(A/T)
H27
(M/T)
H22
H21
H13
H15
H12
H14
H1
H2

H	1	Blower Resistor (Front A/C)
H	2	Blower Motor (Front A/C)
H	3	Junction Connector
H	4	Junction Connector
H	5	Junction Connector
H	6	Junction Connector
H	7	Integration Relay
H	8	A/C Evaporator Temp. Sensor (Front A/C)
H	10	Room Lamp SW , Short Pin (Room Lamp SW)
H	11	Rear Blower SW (Main)
H	12	Cigarette Lighter
H	13	Ashtray Illumination
H	14	Blower SW (Front A/C)
H	15	Clearance Warning Indicator
H	16	A/C SW
H	17	Rear Window Defogger SW
H	18	A/C Amplifier
H	19	A/C Amplifier
H	20	Combination Meter
H	21	A/T Shift Lever Illumination
H	22	Shift Lock Control ECU
H	23	DLC3
H	24	Ignition Key Cylinder Lamp
H	25	Ignition SW
H	26	Unlock Warning SW
H	27	Unlock Warning SW
H	28	Combination SW

Position of Parts in Instrument Panel <LHD>


H 1
Black

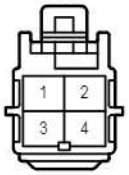


H 2
Black




H 3
White



H 4
White




H 5
White



H 6
White




H 7
White

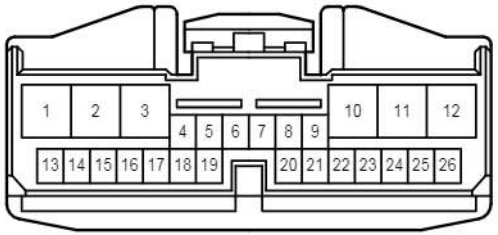

H 8
White




H 10
Gray




H 11
Black




H 12
White




H 13
Gray




H 14
Black

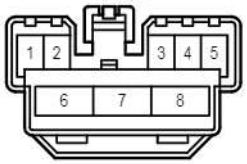


H 15
White

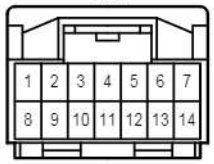


H 16
Gray

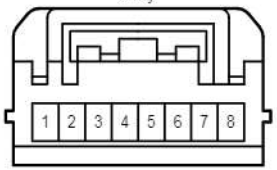


H 17
Black

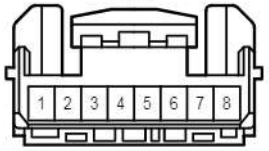

H 18
Black

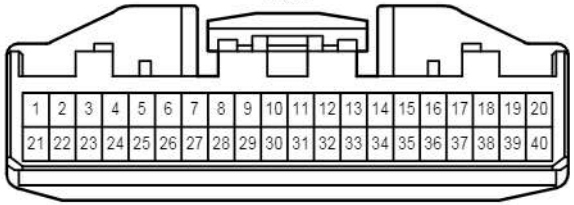

H 19
Black

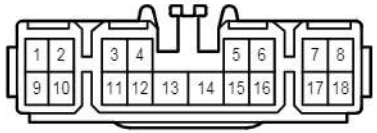


H 20

H 21

H 22

Position of Parts in Instrument Panel <LHD>


H 23
White

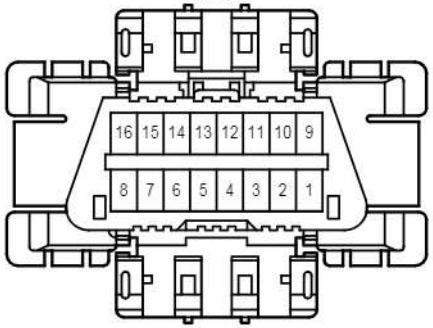


H 24
Gray




H 25
White

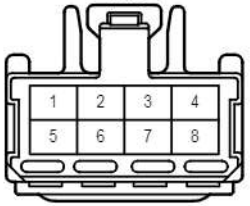


H 26
White




H 27
White



H 28
Gray

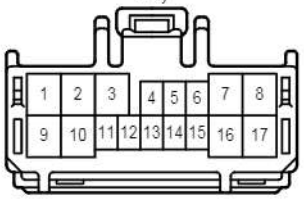

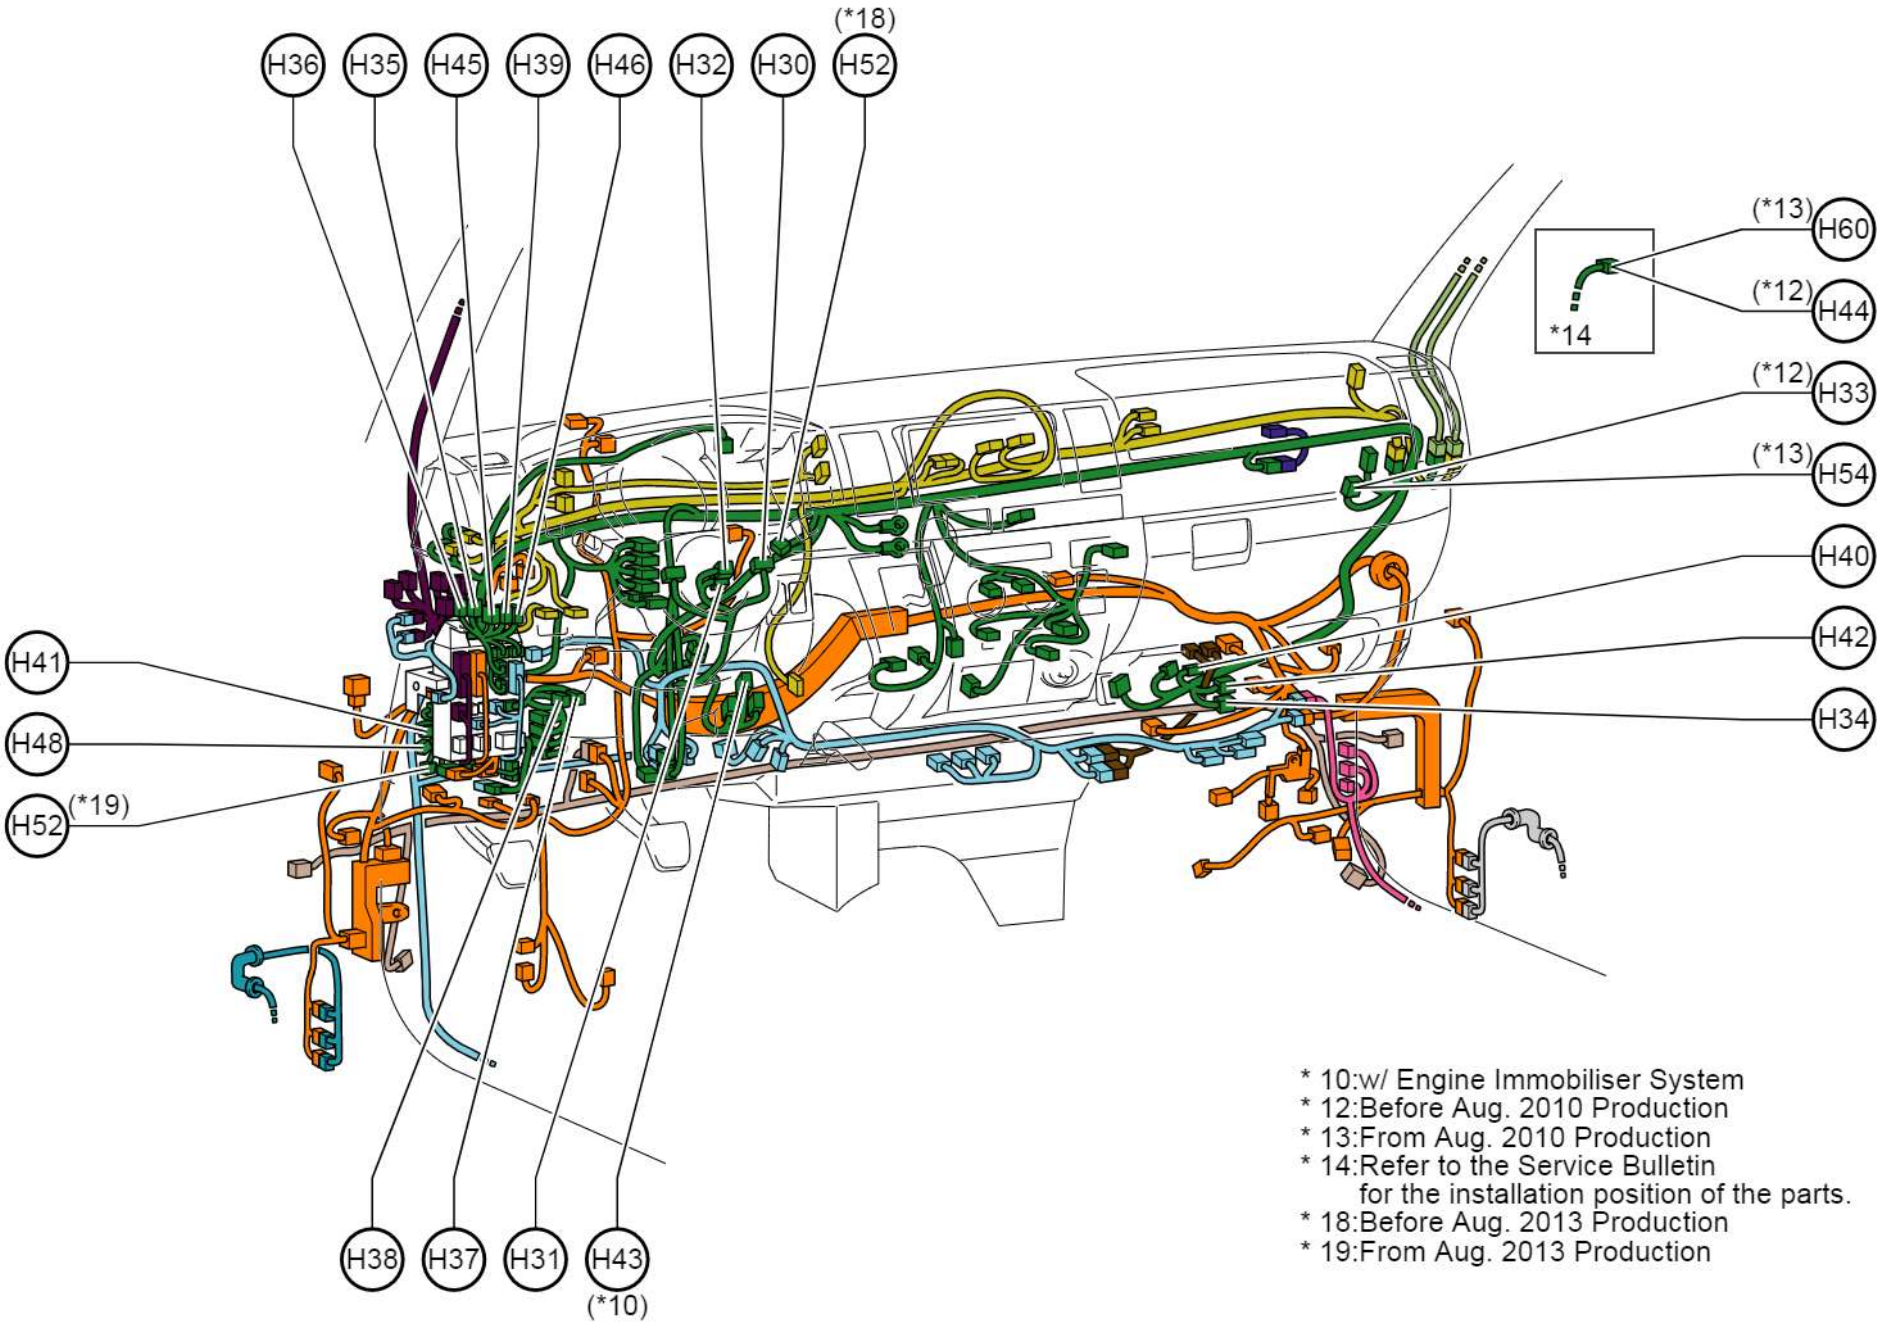


* 10:w/ Engine Immobiliser System
* 12:Before Aug. 2010 Production
* 13:From Aug. 2010 Production
* 14:Refer to the Service Bulletin for the installation position of the parts.
* 18:Before Aug. 2013 Production
* 19:From Aug. 2013 Production


H 30 Combination SW
H 31 Spiral Cable
H 32 Airbag Squib (Steering Wheel Pad)
H 33 Clearance Warning ECU
H 34 Fuse Box
H 35 Diode (Door Courtesy No.1)
H 36 Diode (Door Courtesy No.2)
H 37 Diode (Door Courtesy No.3)
H 38 Diode (Headlight)
H 39 Diode (Automatic Light Control No.1)
H 40 Diode (Automatic Light Control No.2)
H 41 Junction Connector
H 42 Junction Connector
H 43 Transponder Key Amplifier
H 44 Transponder Key ECU
H 45 Diode (Door Courtesy No.8)
H 46 Junction Connector
H 48 Junction Connector
H 52 Junction Connector
H 54 Clearance Warning ECU
H 60 Transponder Key ECU

Position of Parts in Instrument Panel <LHD>

H 30
Black

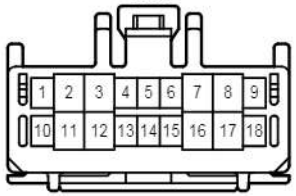


H 31
Black

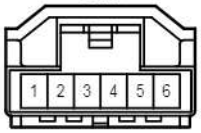


H 32
Yellow



H 33
Blue

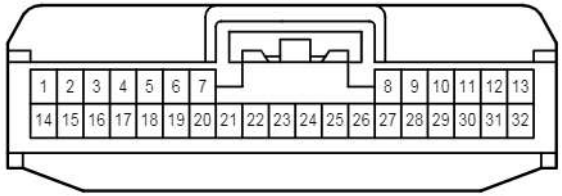

H 34
White




H 35
Black



H 36
Black



H 37
Black



H 38
Black




H 39
Black




H 40
Black




H 41
Black

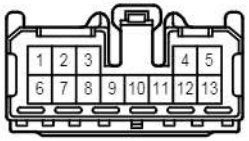


H 42
Black

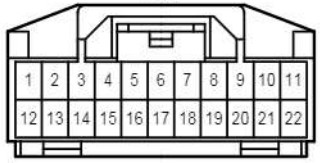

H 43
Black

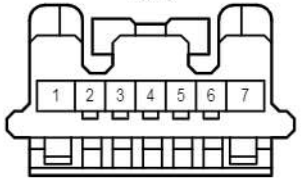


H 44
White

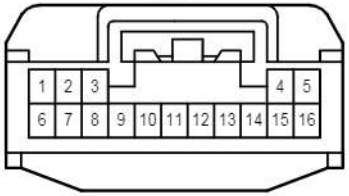


H 45
Black




H 46
Black




H 48
Black




H 52
White

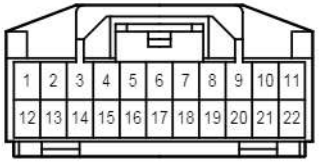


H 54
White



H 60
Black



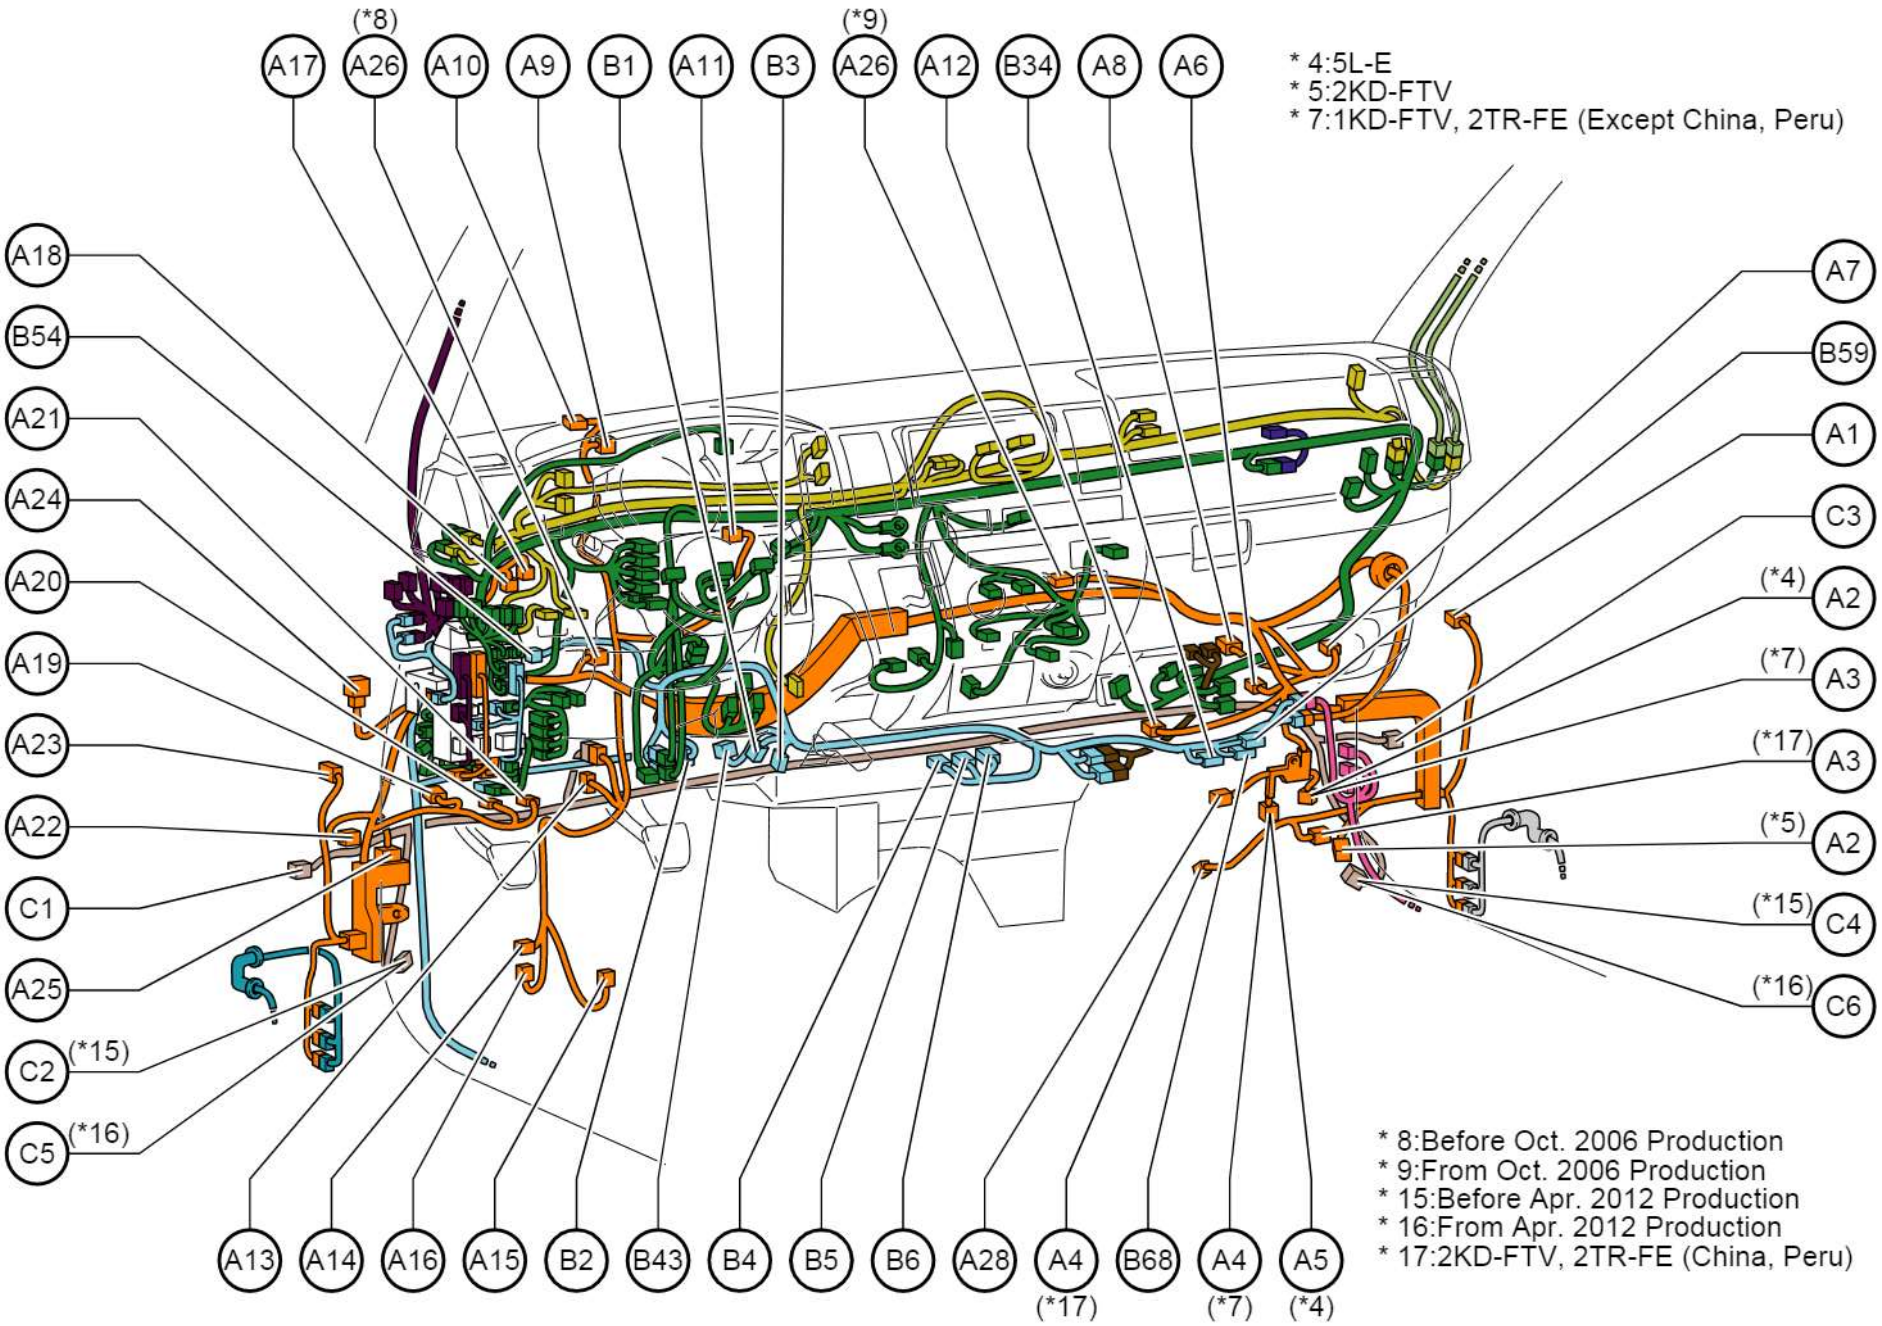
(*8)
(*9)
A17
A26
A10
A9
B1
A11
B3
A26
A12
B34
A8
A6
* 4:5L-E
* 5:2KD-FTV
* 7:1KD-FTV, 2TR-FE (Except China, Peru)
A18
B54
A21
A24
A20
A19
A23
A22
C1
A25
(*15)
C2
(*16)
C5
A7
B59
A1
C3
(*4)
A2
(*7)
A3
(*17)
A3
(*5)
A2
(*15)
C4
(*16)
C6
A13
A14
A16
A15
B2
B43
B4
B5
B6
A28
A4
(*17)
B68
A4
(*7)
A5
(*4)
* 8:Before Oct. 2006 Production
* 9:From Oct. 2006 Production
* 15:Before Apr. 2012 Production
* 16:From Apr. 2012 Production
* 17:2KD-FTV, 2TR-FE (China, Peru)

Position of Parts in Instrument Panel <LHD>

A	1	Turn Signal Lamp (Front RH)
A	2	Inlet Air Temp. Sensor (Air Cleaner)
A	3	Air Flow Meter
A	4	A/C Pressure Sensor No.1
A	5	Pressure SW
A	6	Clearance Lamp (Front RH)
A	7	Headlamp (RH)
A	8	Headlamp Leveling Motor (RH)
A	9	Brake Vacuum Warning SW
A	10	Brake Fluid Level Warning SW
A	11	Windshield Wiper Motor
A	12	Airbag Sensor (Front RH)
A	13	Airbag Sensor (Front LH)
A	14	Ambient Temp. Sensor
A	15	Horn (Low)
A	16	Horn (High)
A	17	Windshield Washer Motor
A	18	Rear Washer Motor
A	19	Headlamp (LH)
A	20	Headlamp Leveling Motor (LH)
A	21	Clearance Lamp (Front LH)
A	22	Cooling Fan Motor No.2
A	23	Turn Signal Lamp (Front LH)
A	24	Short Pin (Vacuum)
A	25	Junction Connector
A	26	A/C Pressure Sensor No.2
A	28	Magnet Valve

B	1	Accelerator Position Sensor
B	2	Stop Lamp SW
B	3	Parking Brake SW
B	4	Airbag Sensor Assembly Center
B	5	Airbag Sensor Assembly Center
B	6	Airbag Sensor Assembly Center
B	34	Junction Connector
B	43	Turbo Motor Driver
B	54	Clutch Switch Assembly
B	59	Diode (Magnet Clutch)
B	68	Diode (Oil Pressure)

C	1	Ultrasonic Sensor No.1 (Front LH)
C	2	Fog Lamp (Front LH)
C	3	Ultrasonic Sensor No.1 (Front RH)
C	4	Fog Lamp (Front RH)

Position of Parts in Instrument Panel <LHD>

A 1
Gray



A 2
Black



A 3
Black



A 4
Black




A 5
Dark Gray



A 6
Black



A 7
White

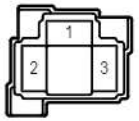

A 8
Black



A 9
Gray



A 10
Gray



A 11
Black



A 12
Yellow



A 13
Yellow



A 14
Black




A 15
Black



A 16
Black




A 17
Black

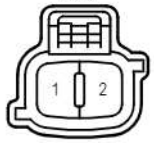

A 18
Gray



A 19
White

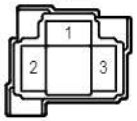

A 20
Black



A 21
Black



A 22
Black



A 23
Gray



A 24
White



A 25
Dark Gray



A 26
Black




A 28
White



B 1
Black



B 2
White




B 3
White




Position of Parts in Instrument Panel <LHD>

B 34
White

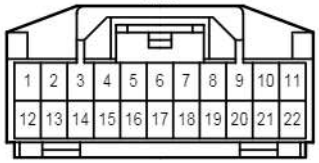

B 43
White



B 54
White




B 59
White



B 68
Black




C 1
Black



C 2
Brown



C 3
Black



C 4
Brown




C 5
Black



C 6
Black

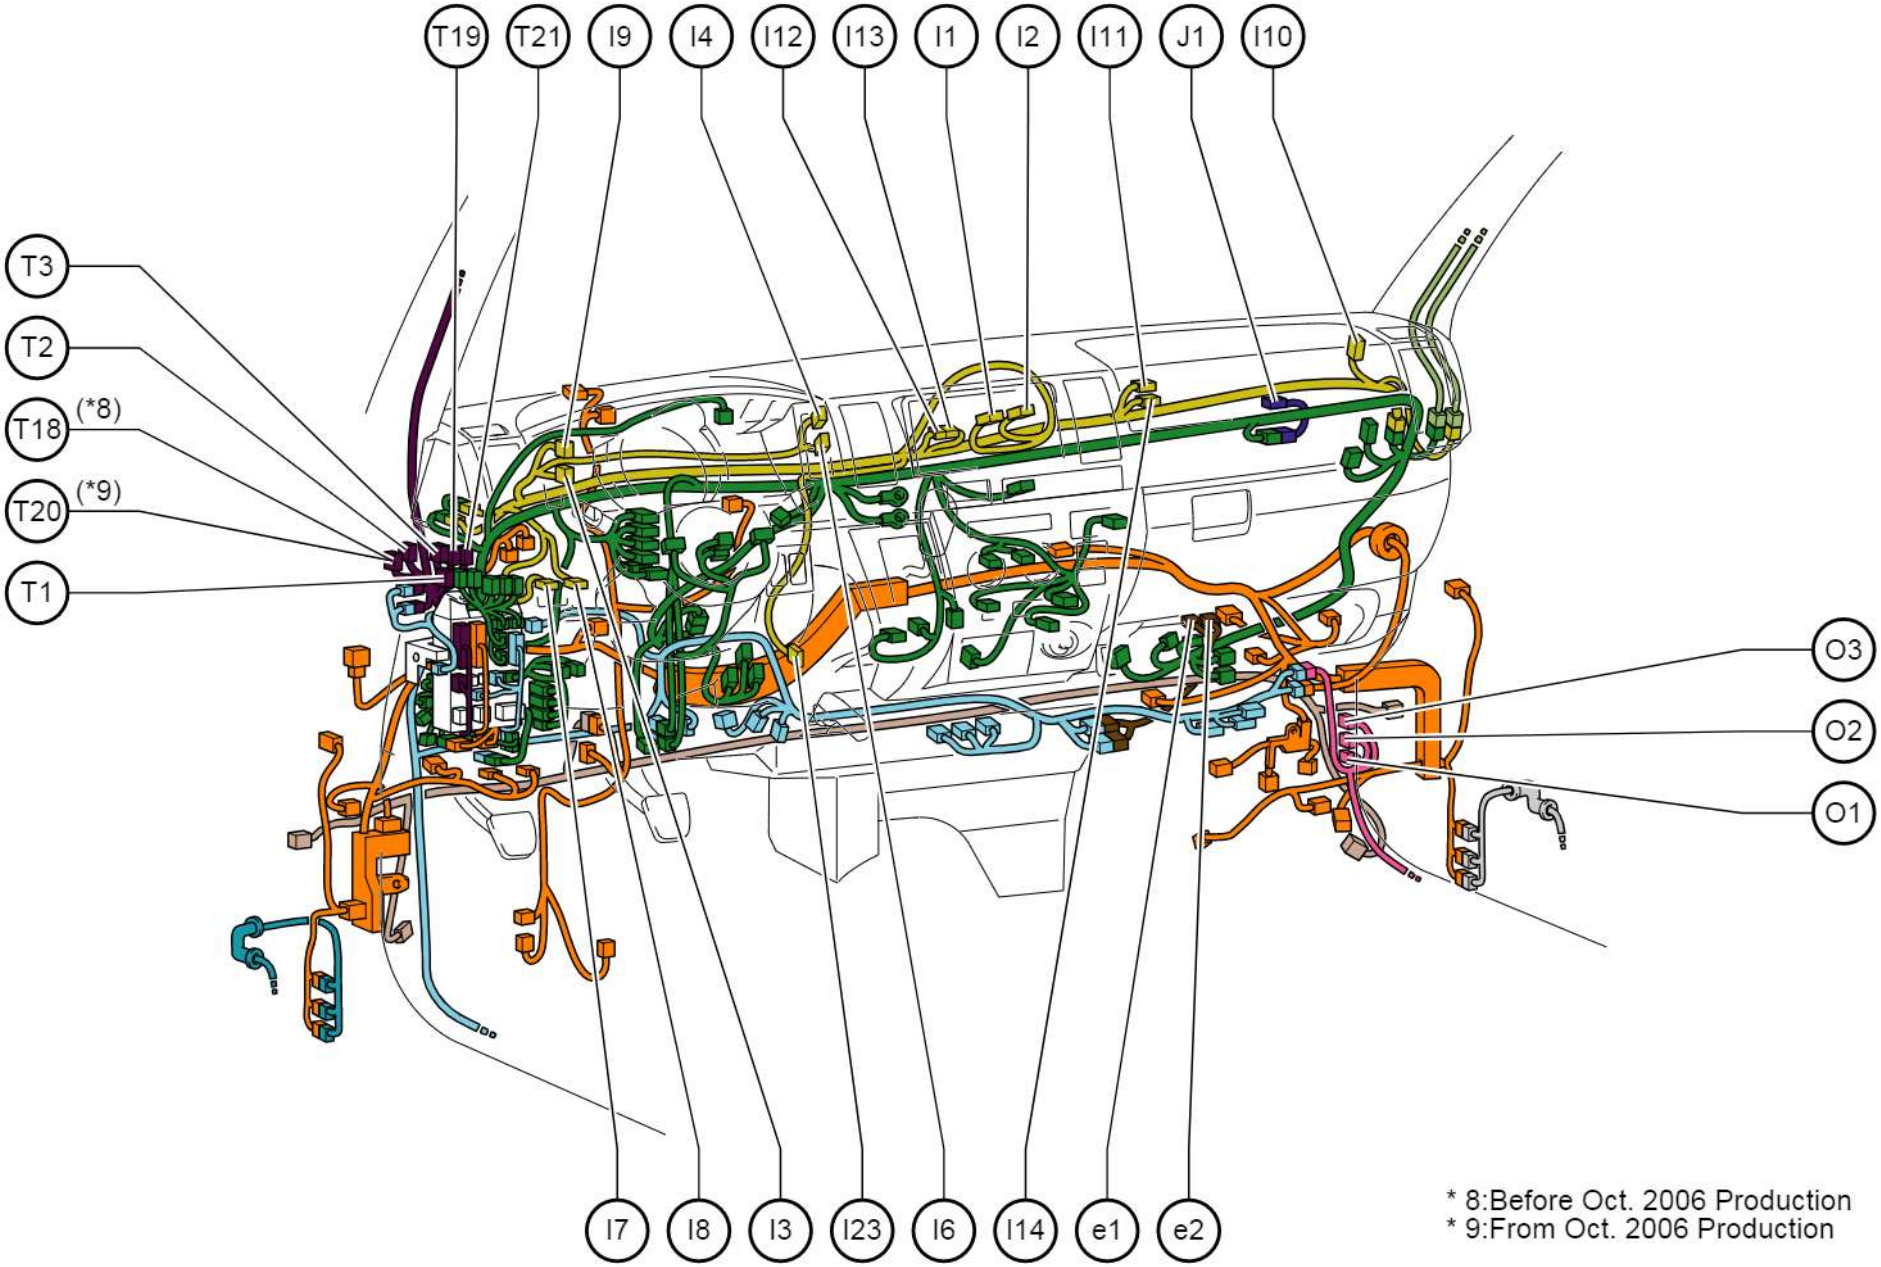


T19
T21
I9
I4
I12
I13
I1
I2
I11
J1
I10
T3
T2
T18
(*8)
T20
(*9)
T1
O3
O2
O1
I7
I8
I3
I23
I6
I14
e1
e2
* 8:Before Oct. 2006 Production
* 9:From Oct. 2006 Production

Position of Parts in Instrument Panel <LHD>


I	1	Radio Receiver Assembly
I	2	Radio Receiver Assembly
I	3	Rear Fog Lamp SW
I	4	Hazard Warning Signal SW
I	6	Idle-Up SW
I	7	Door Lock Control SW
I	8	Outer Mirror SW
I	9	Headlamp Leveling SW
I	10	Automatic Light Control Sensor
I	11	Junction Connector
I	12	Junction Connector
I	13	Junction Connector
I	14	Junction Connector
I	23	DPF Switch Assembly
J	1	Airbag Squib (Front Passenger's Airbag Assembly)
O	1	Transmission Control ECU
O	2	Transmission Control ECU
O	3	Transmission Control ECU
T	1	Junction Connector
T	2	Junction Connector
T	3	Junction Connector
T	18	Diode (Door Courtesy No.7)
T	19	Diode (Door Courtesy No.9)
T	20	Diode (Door Courtesy No.10)
T	21	Diode (Door Courtesy No.11)
e	1	PTC Heater
e	2	PTC Heater

Position of Parts in Instrument Panel <LHD>


I 1
White




I 2
Blue

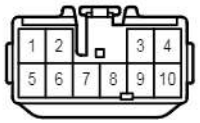

I 3
White

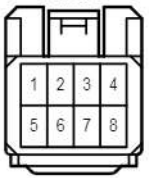


I 4
Black




(Before Oct. 2006 Production)

I 4
Gray



(From Oct. 2006 Production)


I 6
Black



I 7
Black



I 8
White

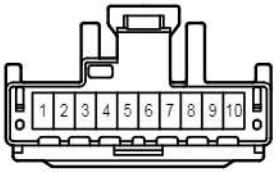


I 9
Gray




I 10
Black



I 11
Black




I 12
Blue

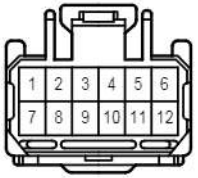

I 13
Blue




I 14
Black




I 23
Black




J 1
Orange




O 1
White

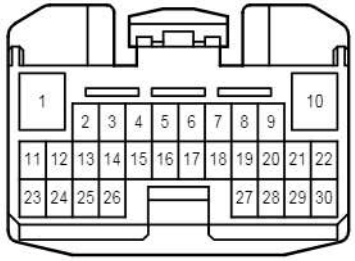


O 2
White

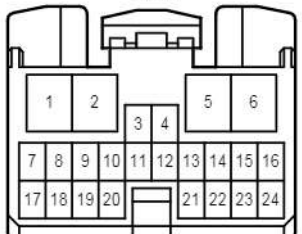


O 3
White

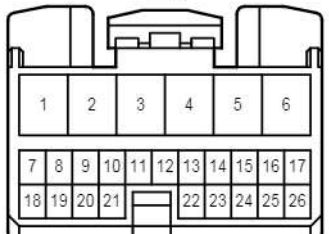


T 1
Black




T 2
Black




e 2
White

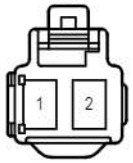

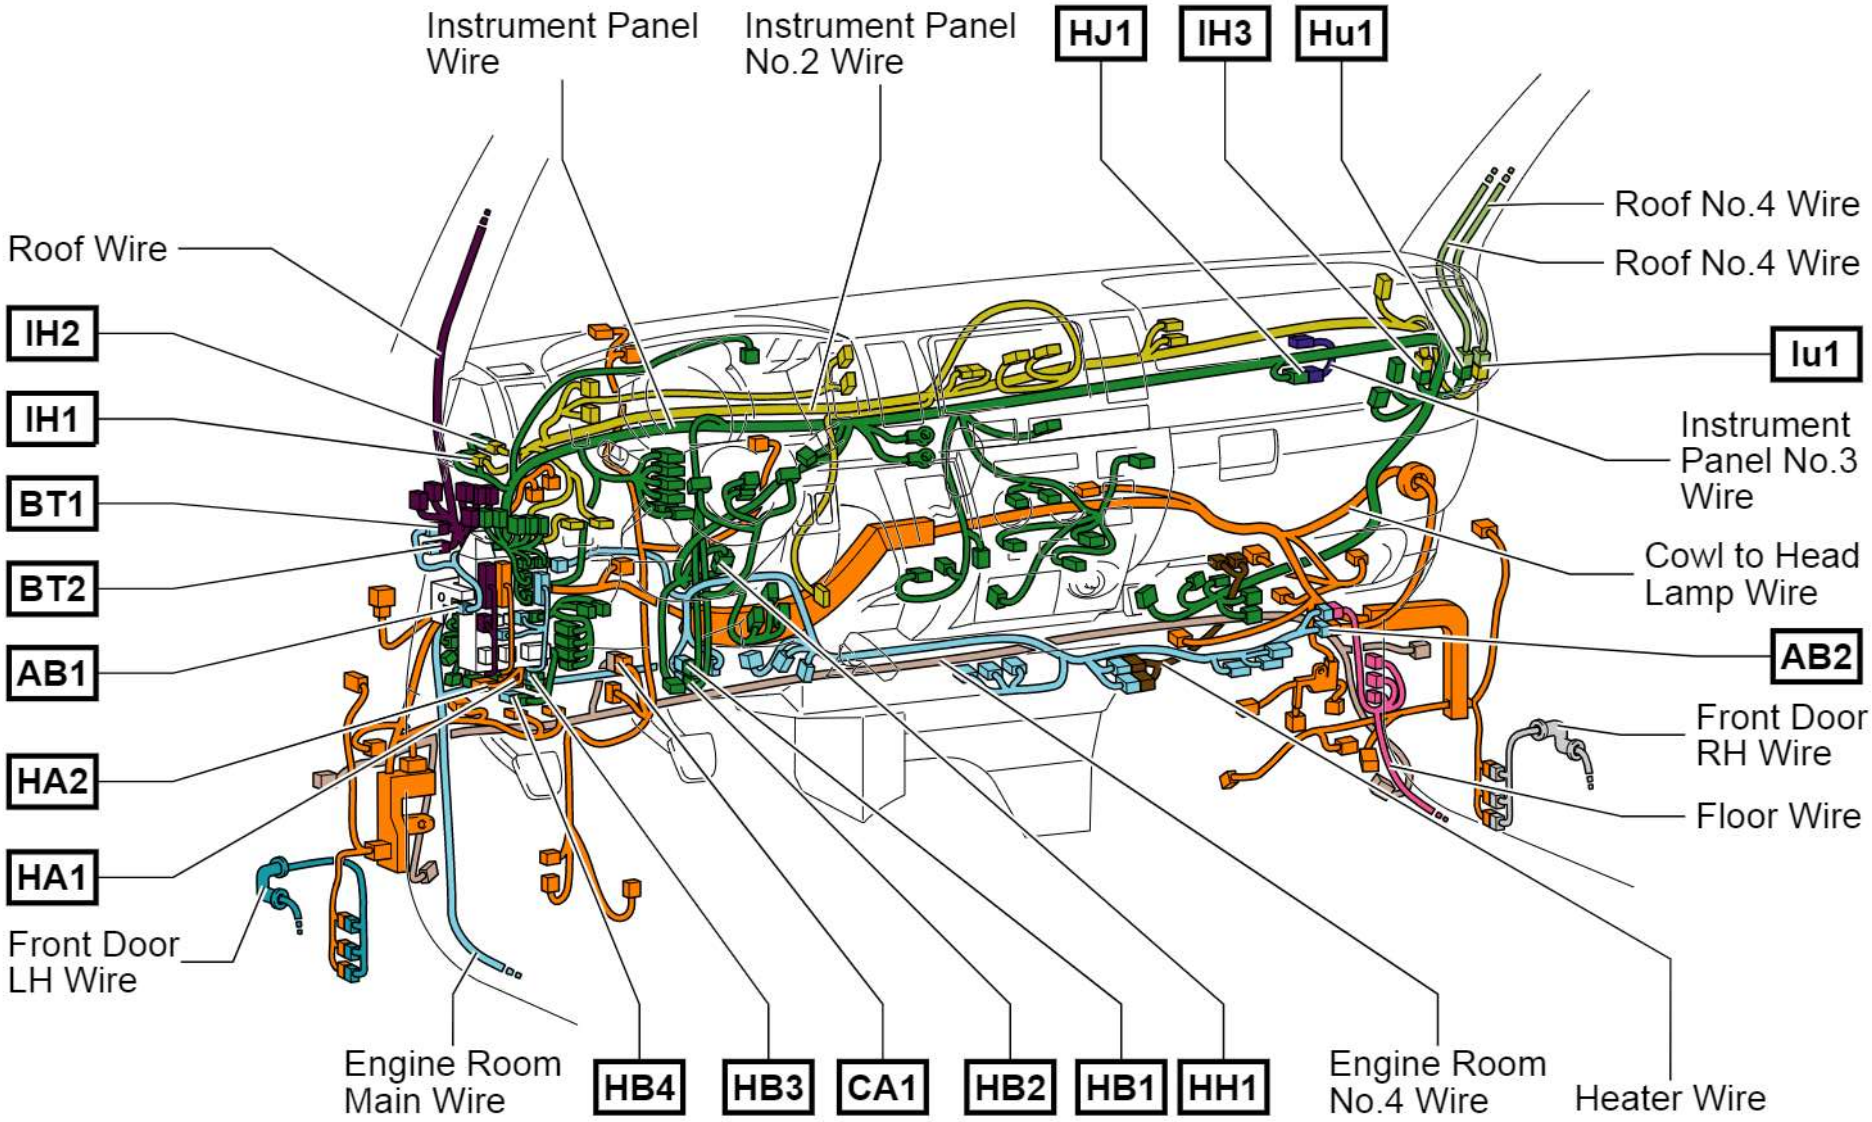

Instrument Panel Wire
Instrument Panel No.2 Wire
HJ1
IH3
Hu1
Roof No.4 Wire
Roof No.4 Wire
Roof Wire
IH2
Iu1
IH1
Instrument Panel No.3 Wire
BT1
Cowl to Head Lamp Wire
BT2
AB2
AB1
Front Door RH Wire
HA2
Floor Wire
HA1
Front Door LH Wire
Engine Room Main Wire
HB4
HB3
CA1
HB2
HB1
HH1
Engine Room No.4 Wire
Heater Wire

Wire and Wire in Instrument Panel <LHD>


AB1
Gray

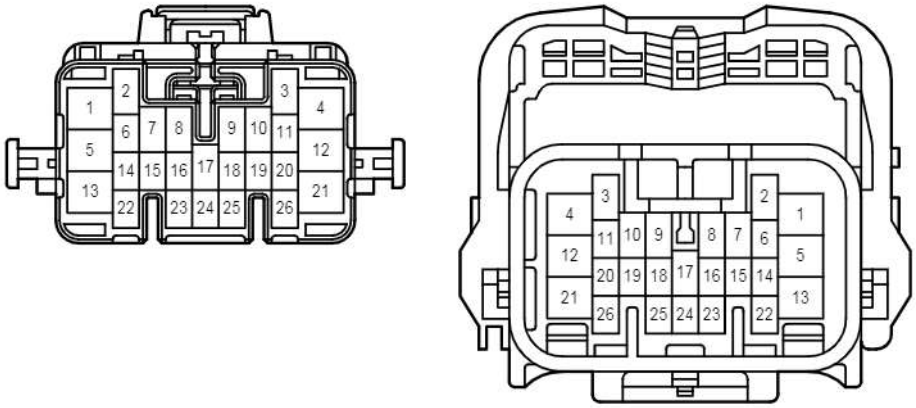

AB2
Yellow

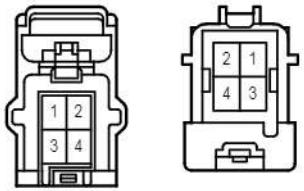

BT1
White

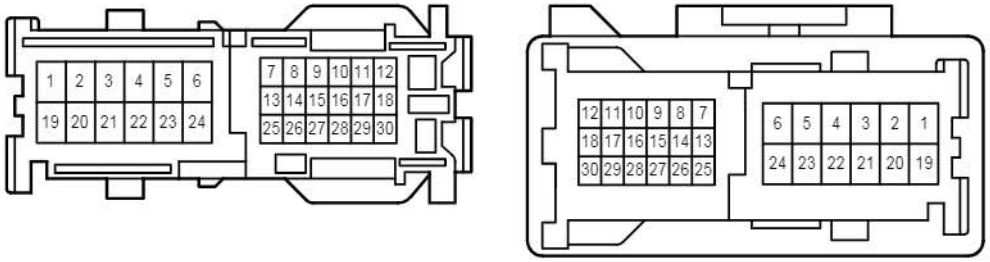

BT2
White




CA1
Black




Wire and Wire in Instrument Panel <LHD>


HA1
White

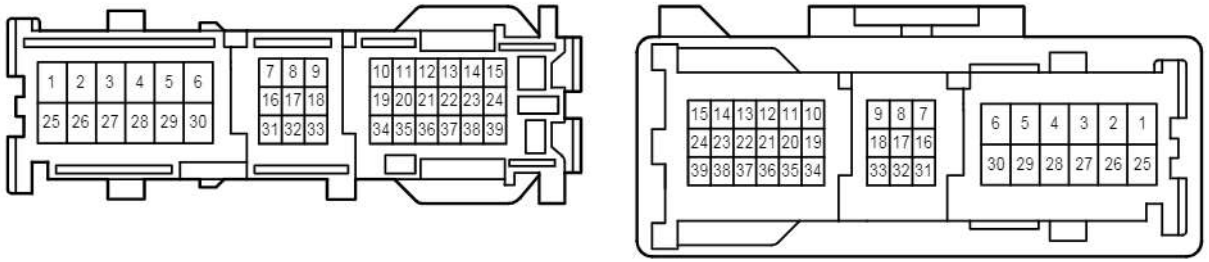


HA2
Blue

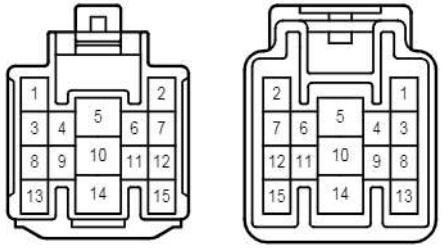

HB1
White

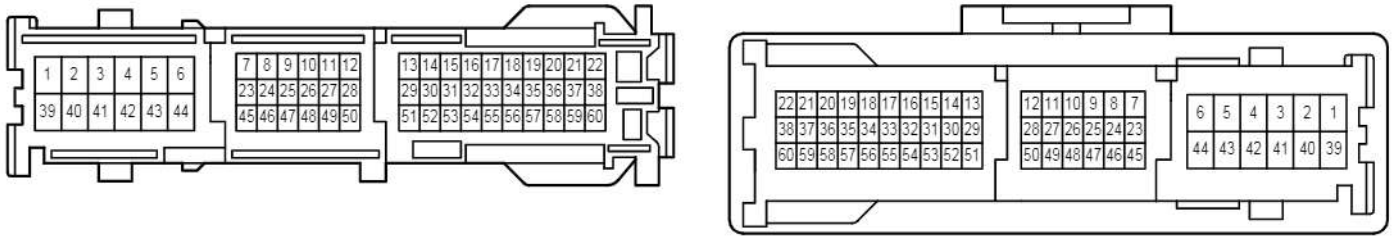


HB2
White

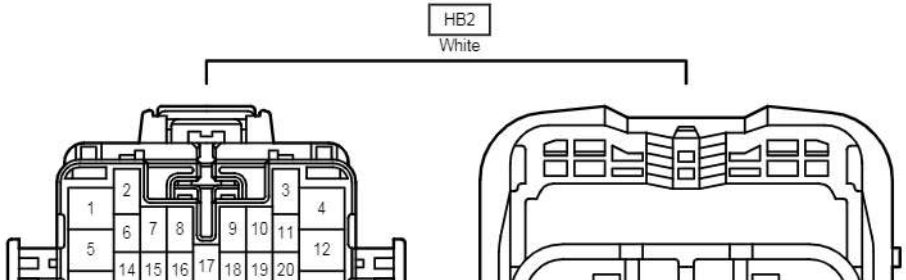


Wire and Wire in Instrument Panel <LHD>


HB3
Yellow

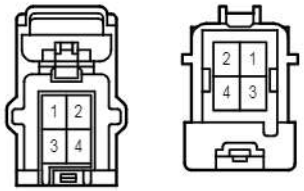


HB4
Gray

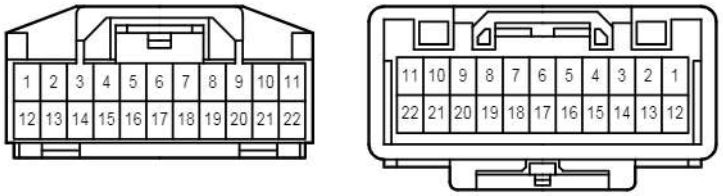


HH1
White

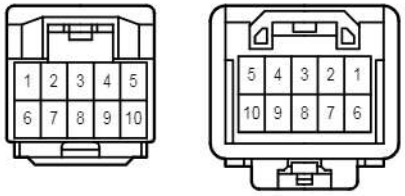


HJ1
Yellow

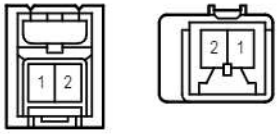

Hu1
White

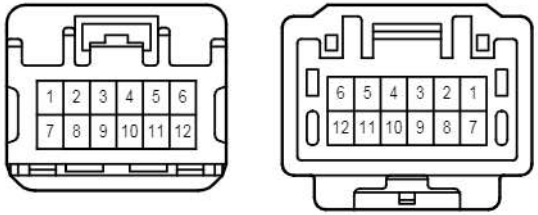


IH1
White

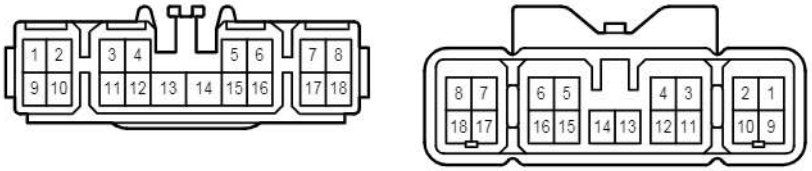



IH2
White





Wire and Wire in Instrument Panel <LHD>

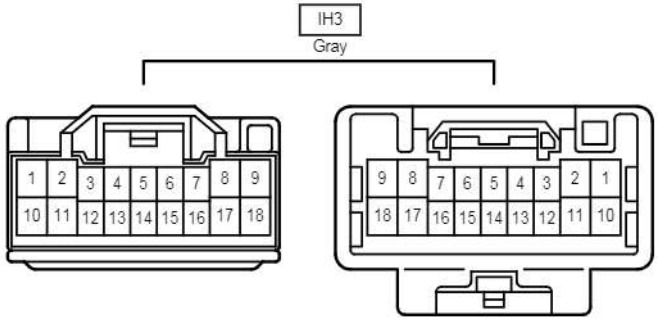


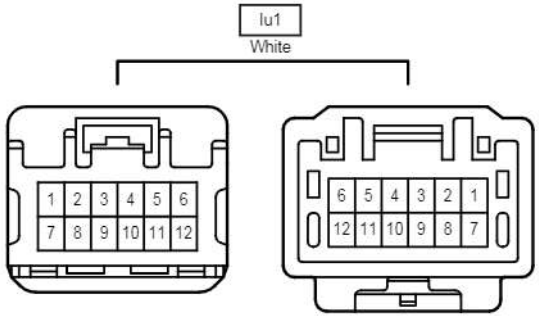


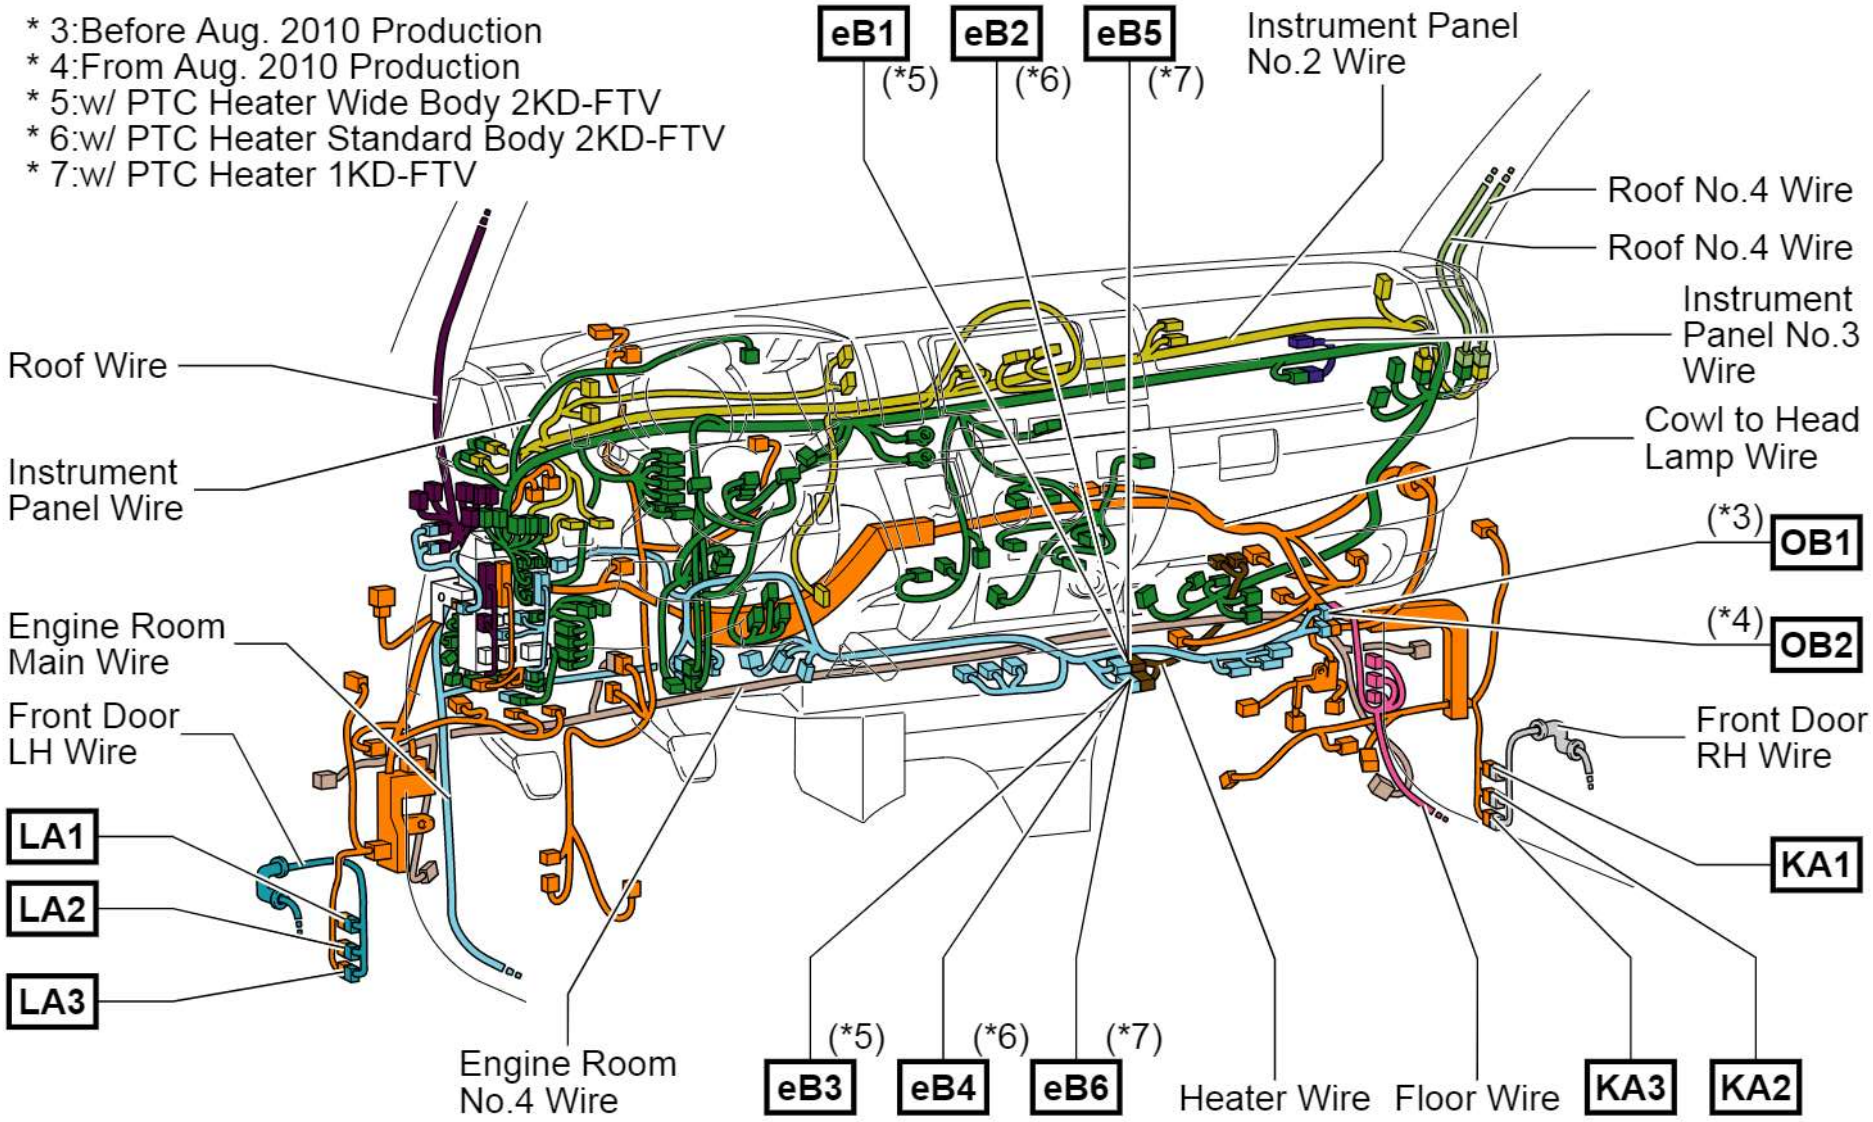
* 3:Before Aug. 2010 Production
* 4:From Aug. 2010 Production
* 5:w/ PTC Heater Wide Body 2KD-FTV
* 6:w/ PTC Heater Standard Body 2KD-FTV
* 7:w/ PTC Heater 1KD-FTV
eB1
(*5)
eB2
(*6)
eB5
(*7)
Instrument Panel No.2 Wire
Roof No.4 Wire
Roof No.4 Wire
Instrument Panel No.3 Wire
Cowl to Head Lamp Wire
(*3)
OB1
(*4)
OB2
Front Door RH Wire
KA1
KA2
KA3
Floor Wire
Heater Wire
eB3
eB4
eB6
(*5)
(*6)
(*7)
Engine Room No.4 Wire
Roof Wire
Instrument Panel Wire
Engine Room Main Wire
Front Door LH Wire
LA1
LA2
LA3

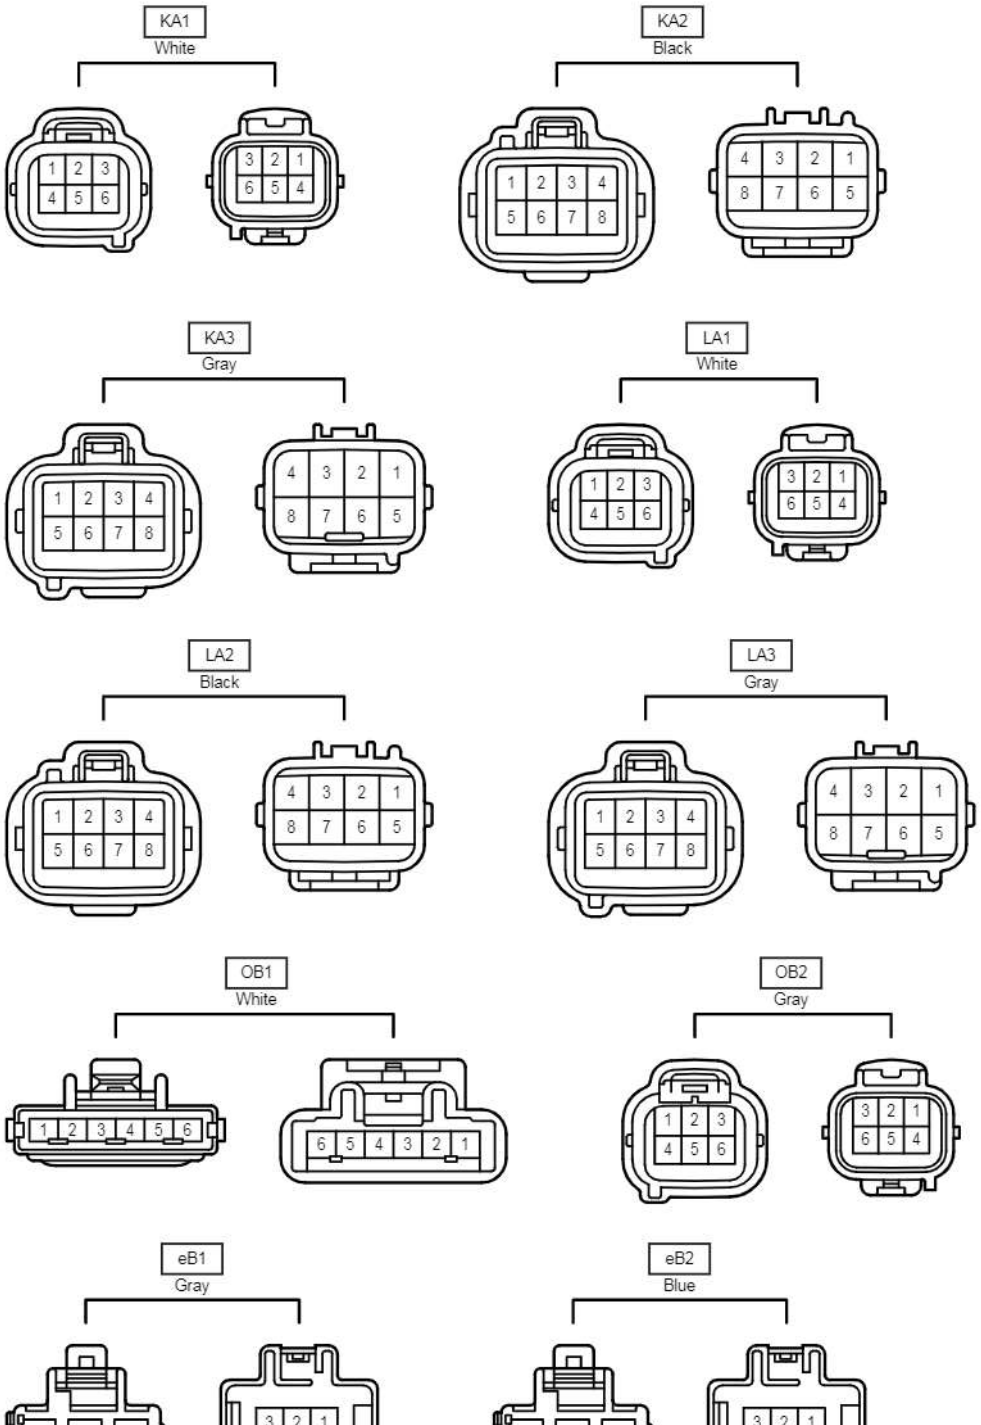
KA1
White
1 2 3
4 5 6
3 2 1
6 5 4
KA2
Black
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
KA3
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
LA1
White
1 2 3
4 5 6
3 2 1
6 5 4
LA2
Black
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
LA3
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
OB1
White
1 2 3 4 5 6
6 5 4 3 2 1
OB2
Gray
1 2 3
4 5 6
3 2 1
6 5 4
eB1
Gray
eB2
Blue

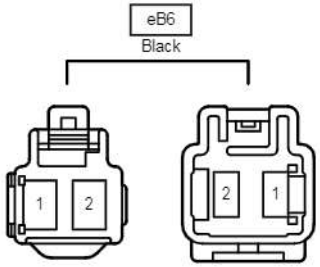
eB6
Black
1
2
2
1

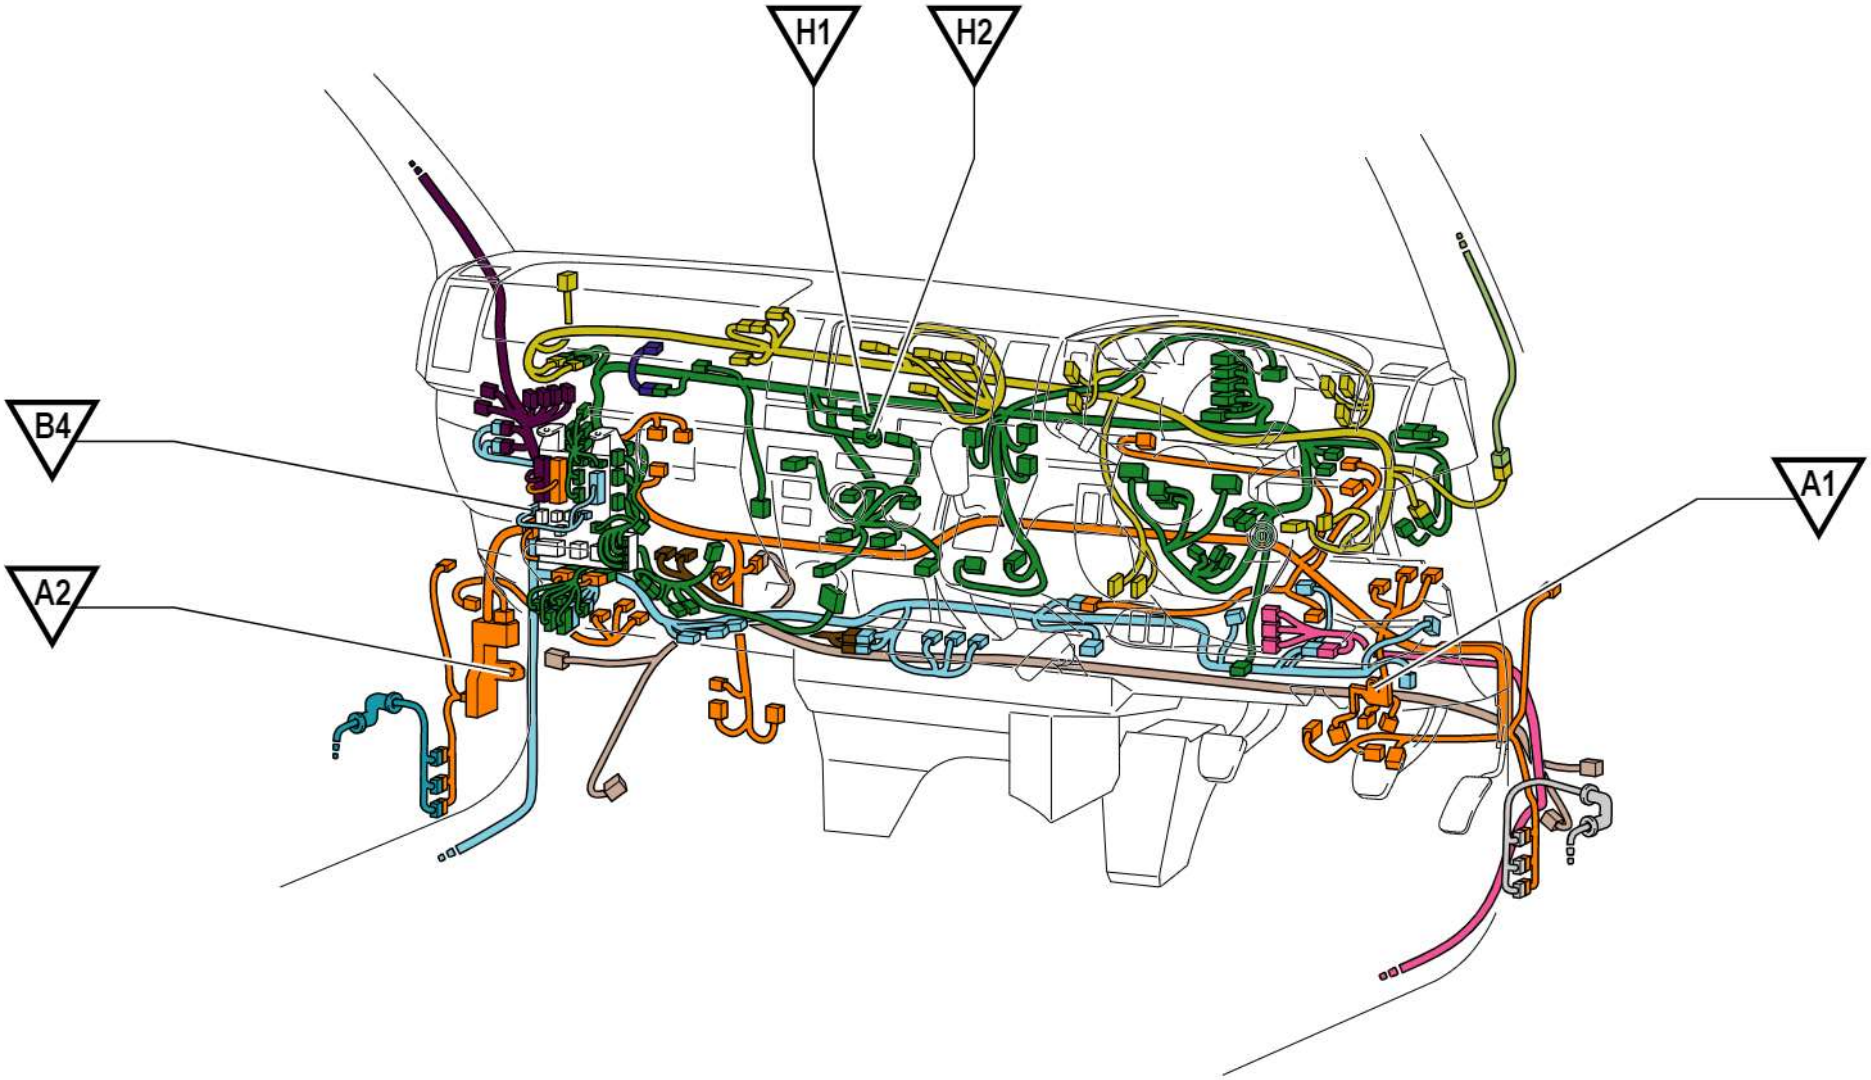

H1
H2
B4
A2
A1

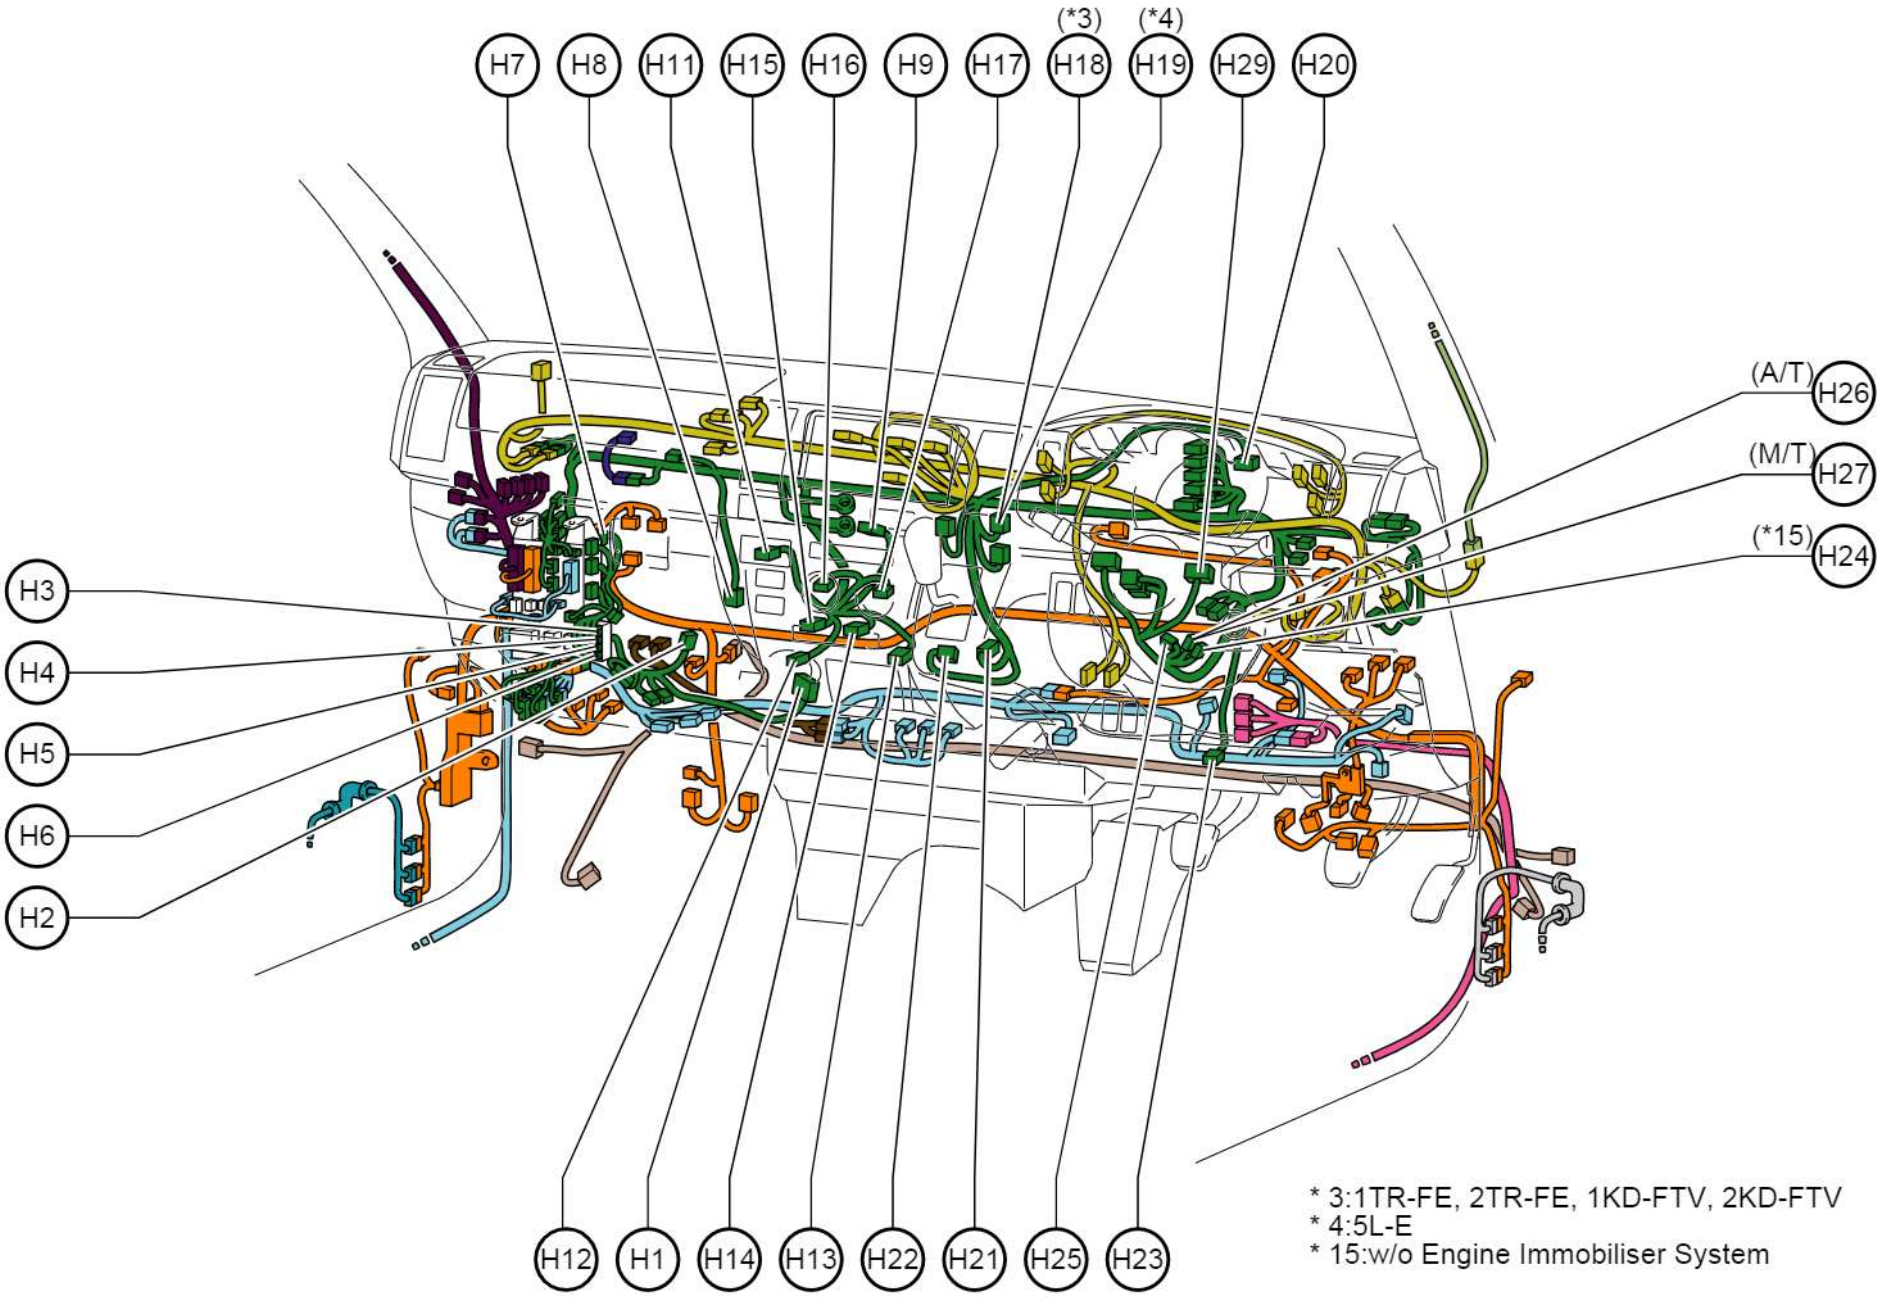
H7
H8
H11
H15
H16
H9
H17
(*3)
H18
(*4)
H19
H29
H20
(A/T)
H26
(M/T)
H27
(*15)
H24
H3
H4
H5
H6
H2
H12
H1
H14
H13
H22
H21
H25
H23
* 3:1TR-FE, 2TR-FE, 1KD-FTV, 2KD-FTV
* 4:5L-E
* 15:w/o Engine Immobiliser System

H	1	Blower Resistor (Front A/C)
H	2	Blower Motor (Front A/C)
H	3	Junction Connector
H	4	Junction Connector
H	5	Junction Connector
H	6	Junction Connector
H	7	Integration Relay
H	8	A/C Evaporator Temp. Sensor (Front A/C)
H	9	Hazard Warning Signal SW
H	11	Rear Blower SW (Main)
H	12	Cigarette Lighter
H	13	Ashtray Illumination
H	14	Blower SW (Front A/C)
H	15	Clearance Warning Indicator
H	16	A/C SW
H	17	Rear Window Defogger SW
H	18	A/C Amplifier
H	19	A/C Amplifier
H	20	Combination Meter
H	21	A/T Shift Lever Illumination
H	22	Shift Lock Control ECU
H	23	DLC3
H	24	Ignition Key Cylinder Lamp
H	25	Ignition SW
H	26	Unlock Warning SW
H	27	Unlock Warning SW
H	29	Combination SW

Position of Parts in Instrument Panel <RHD>


H 1
Black

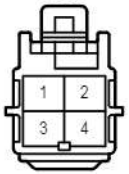


H 2
Black




H 3
White



H 4
White




H 5
White



H 6
White




H 7
White

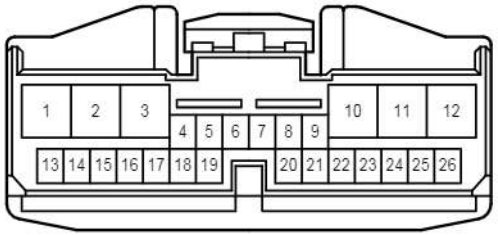

H 8
White




H 9
Black




H 11
Black




H 12
White




H 13
Gray




H 14
Black

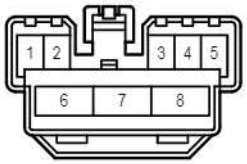


H 15
White

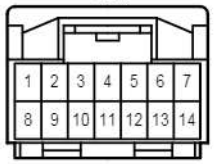


H 16
Gray

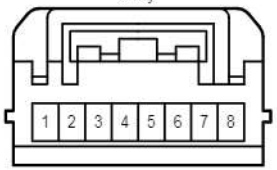


H 17
Black

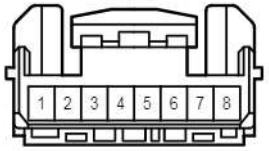

H 18
Black

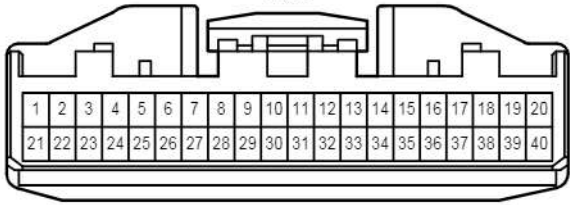

H 19
Black

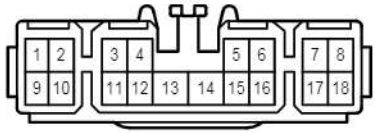


H 20

H 21

H 22

Position of Parts in Instrument Panel <RHD>


H 23
White

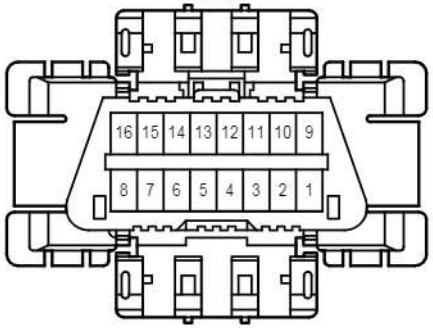


H 24
Gray




H 25
White

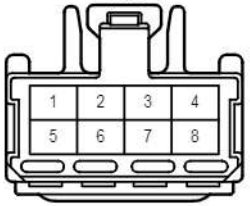


H 26
White




H 27
White



H 29
White

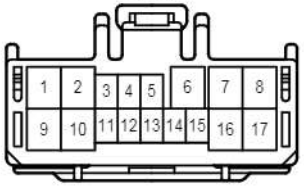

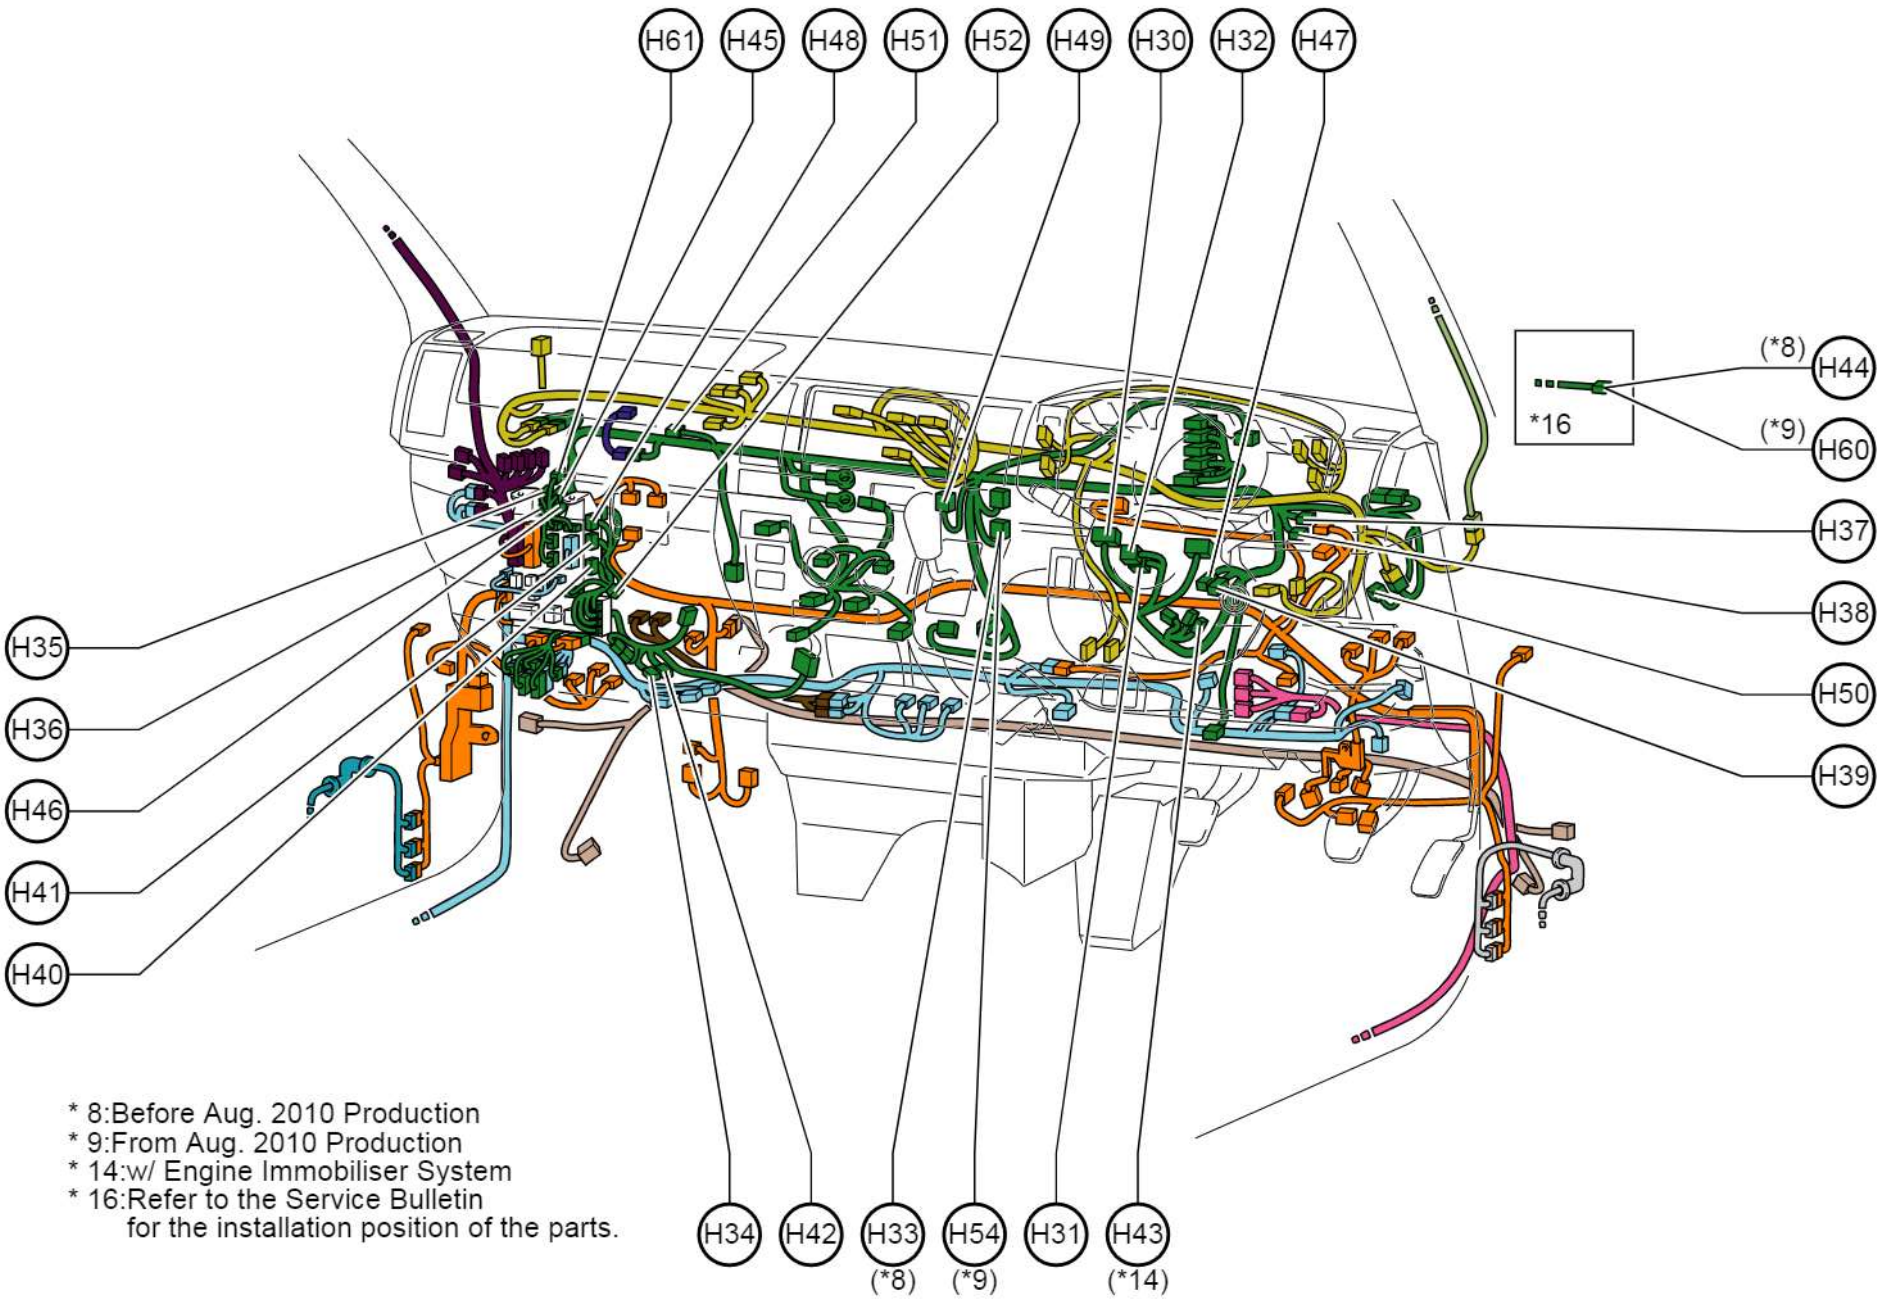


* 8:Before Aug. 2010 Production
* 9:From Aug. 2010 Production
* 14:w/ Engine Immobiliser System
* 16:Refer to the Service Bulletin
for the installation position of the parts.


H 30 Combination SW
H 31 Spiral Cable
H 32 Airbag Squib (Steering Wheel Pad)
H 33 Clearance Warning ECU
H 34 Fuse Box
H 35 Diode (Door Courtesy No.1)
H 36 Diode (Door Courtesy No.2)
H 37 Diode (Door Courtesy No.3)
H 38 Diode (Headlight)
H 39 Diode (Automatic Light Control No.1)
H 40 Diode (Automatic Light Control No.2)
H 41 Junction Connector
H 42 Junction Connector
H 43 Transponder Key Amplifier
H 44 Transponder Key ECU
H 45 Diode (Door Courtesy No.8)
H 46 Junction Connector
H 47 Diode (Power Slide Door)
H 48 Junction Connector
H 49 Option Connector (TVSS ECU)
H 50 Option Connector (Clearance Warning Buzzer)
H 51 Option Connector (Fuse Box)
H 52 Junction Connector
H 54 Clearance Warning ECU
H 60 Transponder Key ECU
H 61 Diode (Parking Brake SW)

Position of Parts in Instrument Panel <RHD>

H 30
Black

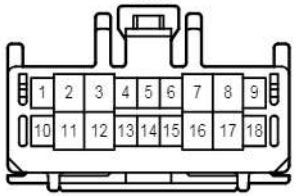


H 31
Black

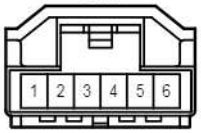


H 32
Yellow



H 33
Blue

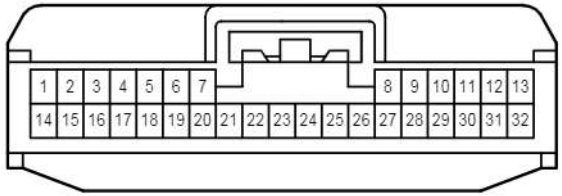

H 34
White




H 35
Black



H 36
Black



H 37
Black



H 38
Black




H 39
Black




H 40
Black




H 41
Black

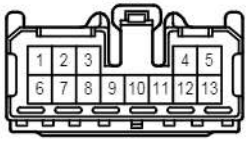


H 42
Black

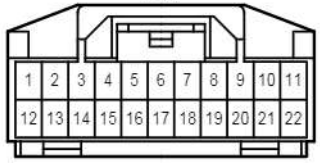

H 43
Black

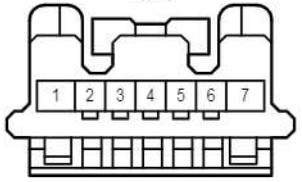


H 44
White

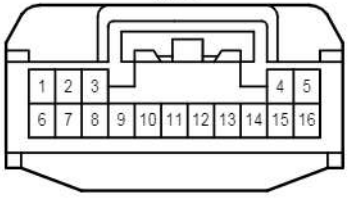


H 45
Black




H 46
Black




H 47
Gray



H 48
Black




H 49
White

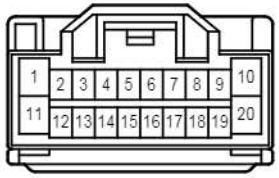

H 50
Black



H 51
White




H 52
White




Position of Parts in Instrument Panel <RHD>


H 54
White

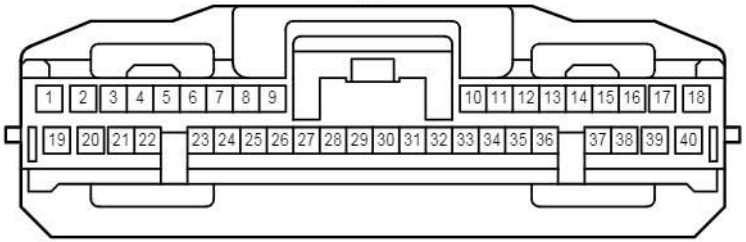


H 60
Black

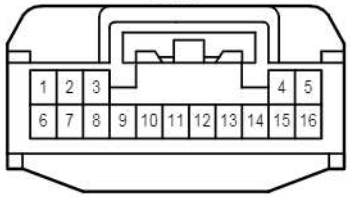

H 61
Gray



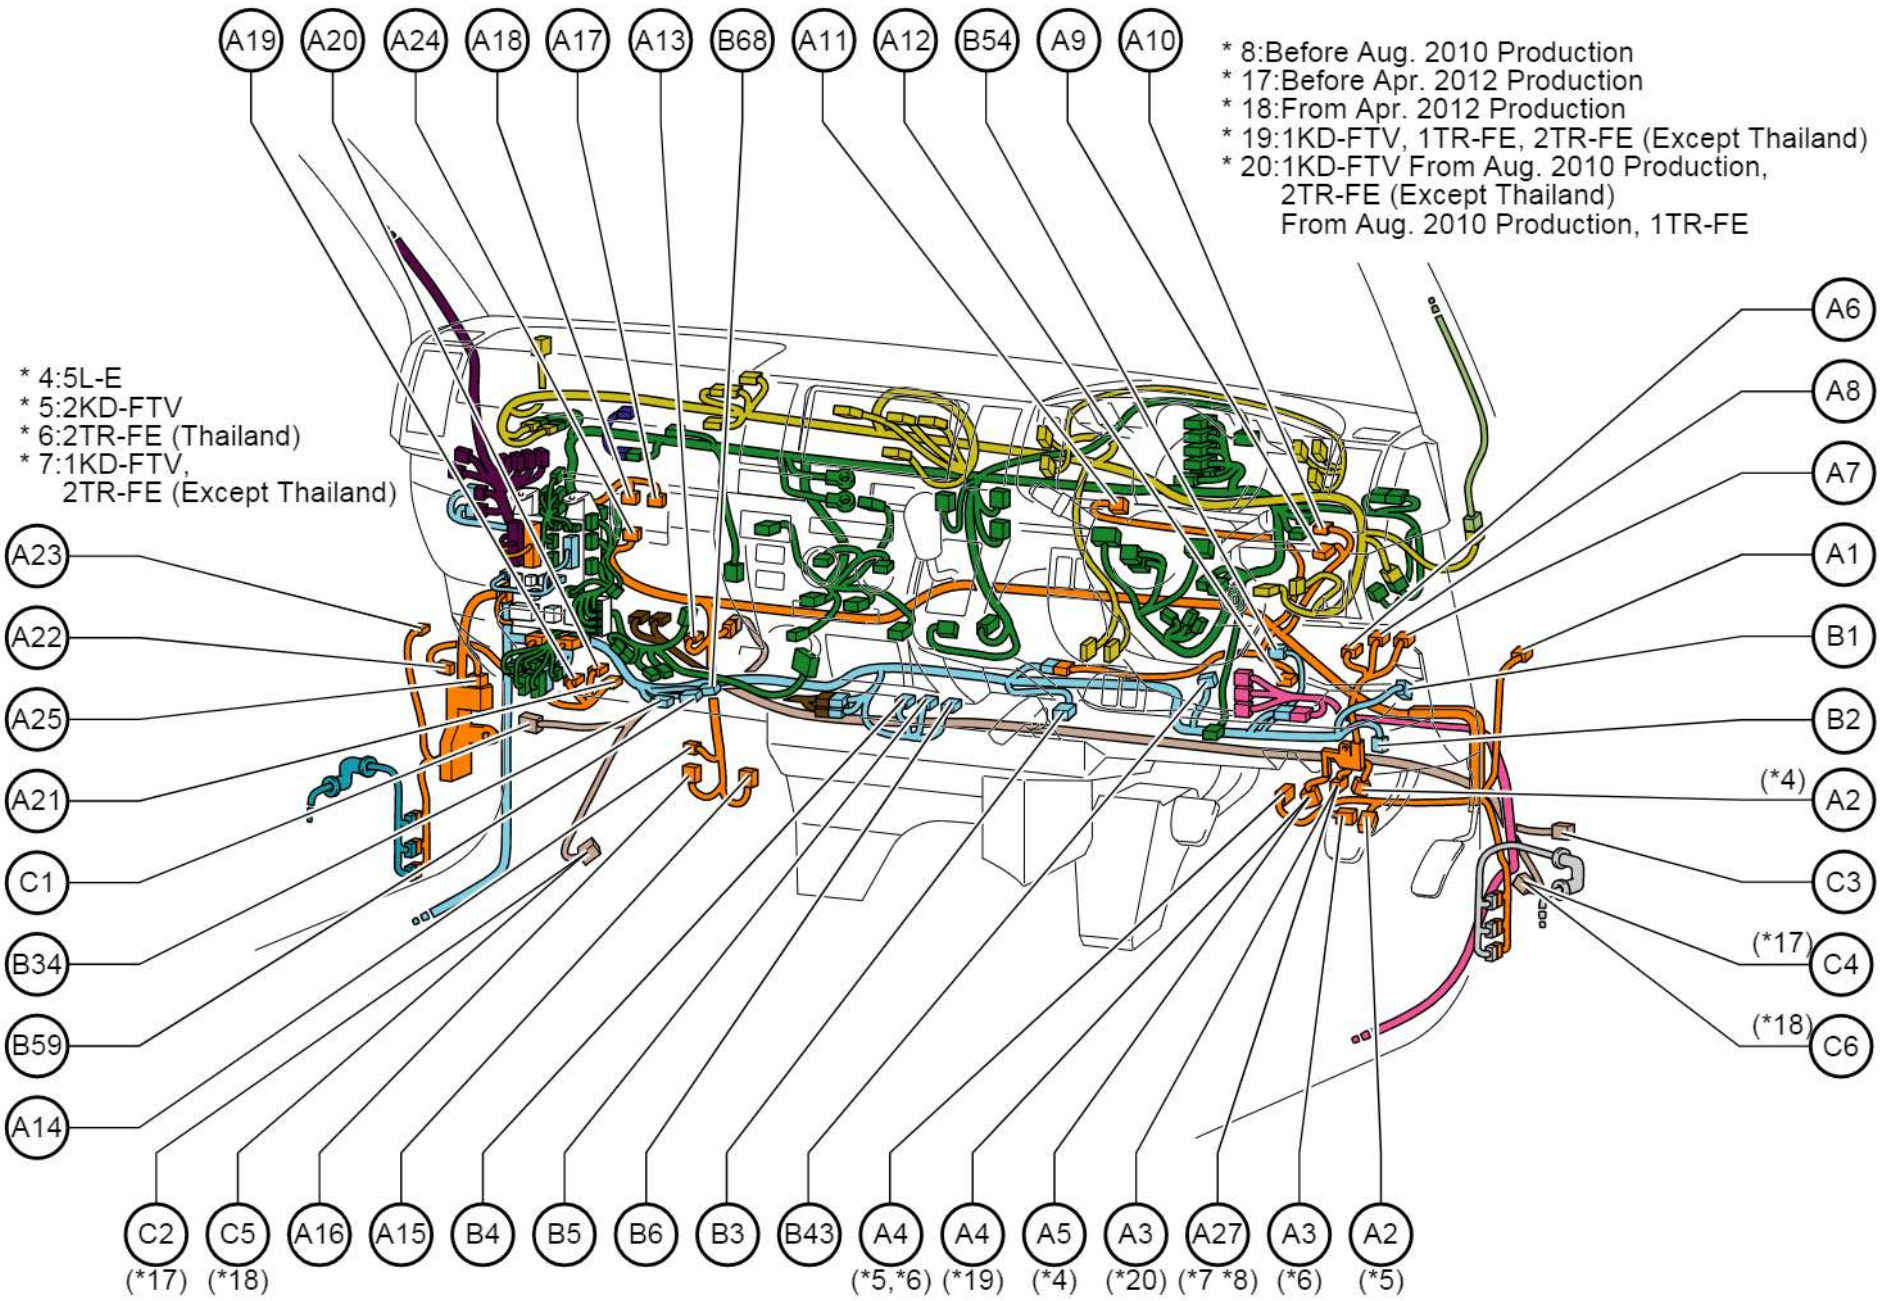
A19
A20
A24
A18
A17
A13
B68
A11
A12
B54
A9
A10
* 8:Before Aug. 2010 Production
* 17:Before Apr. 2012 Production
* 18:From Apr. 2012 Production
* 19:1KD-FTV, 1TR-FE, 2TR-FE (Except Thailand)
* 20:1KD-FTV From Aug. 2010 Production,
2TR-FE (Except Thailand)
From Aug. 2010 Production, 1TR-FE
* 4:5L-E
* 5:2KD-FTV
* 6:2TR-FE (Thailand)
* 7:1KD-FTV,
2TR-FE (Except Thailand)
A23
A22
A25
A21
C1
B34
B59
A14
A6
A8
A7
A1
B1
B2
(*4)
A2
C3
(*17)
C4
(*18)
C6
C2 (*17)
C5 (*18)
A16
A15
B4
B5
B6
B3
B43
A4 (*5,*6)
A4 (*19)
A5 (*4)
A3 (*20)
A27 (*7 *8)
A3 (*6)
A2 (*5)

Position of Parts in Instrument Panel <RHD>

A	1	Turn Signal Lamp (Front RH)
A	2	Inlet Air Temp. Sensor (Air Cleaner)
A	3	Air Flow Meter
A	4	A/C Pressure Sensor No.1
A	5	Pressure SW
A	6	Clearance Lamp (Front RH)
A	7	Headlamp (RH)
A	8	Headlamp Leveling Motor (RH)
A	9	Brake Vacuum Warning SW
A	10	Brake Fluid Level Warning SW
A	11	Windshield Wiper Motor
A	12	Airbag Sensor (Front RH)
A	13	Airbag Sensor (Front LH)
A	14	Ambient Temp. Sensor
A	15	Horn (Low)
A	16	Horn (High)
A	17	Windshield Washer Motor
A	18	Rear Washer Motor
A	19	Headlamp (LH)
A	20	Headlamp Leveling Motor (LH)
A	21	Clearance Lamp (Front LH)
A	22	Cooling Fan Motor No.2
A	23	Turn Signal Lamp (Front LH)
A	24	Short Pin (Vacuum)
A	25	Junction Connector
A	27	Air Flow Meter

B	1	Accelerator Position Sensor
B	2	Stop Lamp SW
B	3	Parking Brake SW
B	4	Airbag Sensor Assembly Center
B	5	Airbag Sensor Assembly Center
B	6	Airbag Sensor Assembly Center
B	34	Junction Connector
B	43	Turbo Motor Driver
B	54	Clutch Switch Assembly
B	59	Diode (Magnet Clutch)
B	68	Diode (Oil Pressure)

C	1	Ultrasonic Sensor No.1 (Front LH)
C	2	Fog Lamp (Front LH)
C	3	Ultrasonic Sensor No.1 (Front RH)
C	4	Fog Lamp (Front RH)
C	5	Fog Lamp (Front LH)

Position of Parts in Instrument Panel <RHD>

A 1
Gray



A 2
Black



A 3
Black



A 4
Black




A 5
Dark Gray



A 6
Black



A 7
White

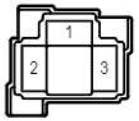

A 8
Black



A 9
Gray



A 10
Gray



A 11
Black



A 12
Yellow



A 13
Yellow



A 14
Black




A 15
Black



A 16
Black




A 17
Black

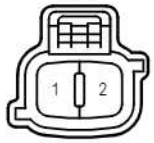

A 18
Gray



A 19
White

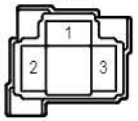

A 20
Black



A 21
Black



A 22
Black



A 23
Gray



A 24
White



A 25
Dark Gray




A 27
Black



B 1
Black



B 2
White




B 3
White




Position of Parts in Instrument Panel <RHD>

B 34
White

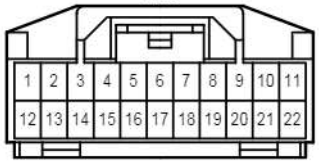

B 43
White



B 54
White




B 59
White



B 68
Black




C 1
Black



C 2
Brown



C 3
Black



C 4
Brown




C 5
Black



C 6
Black

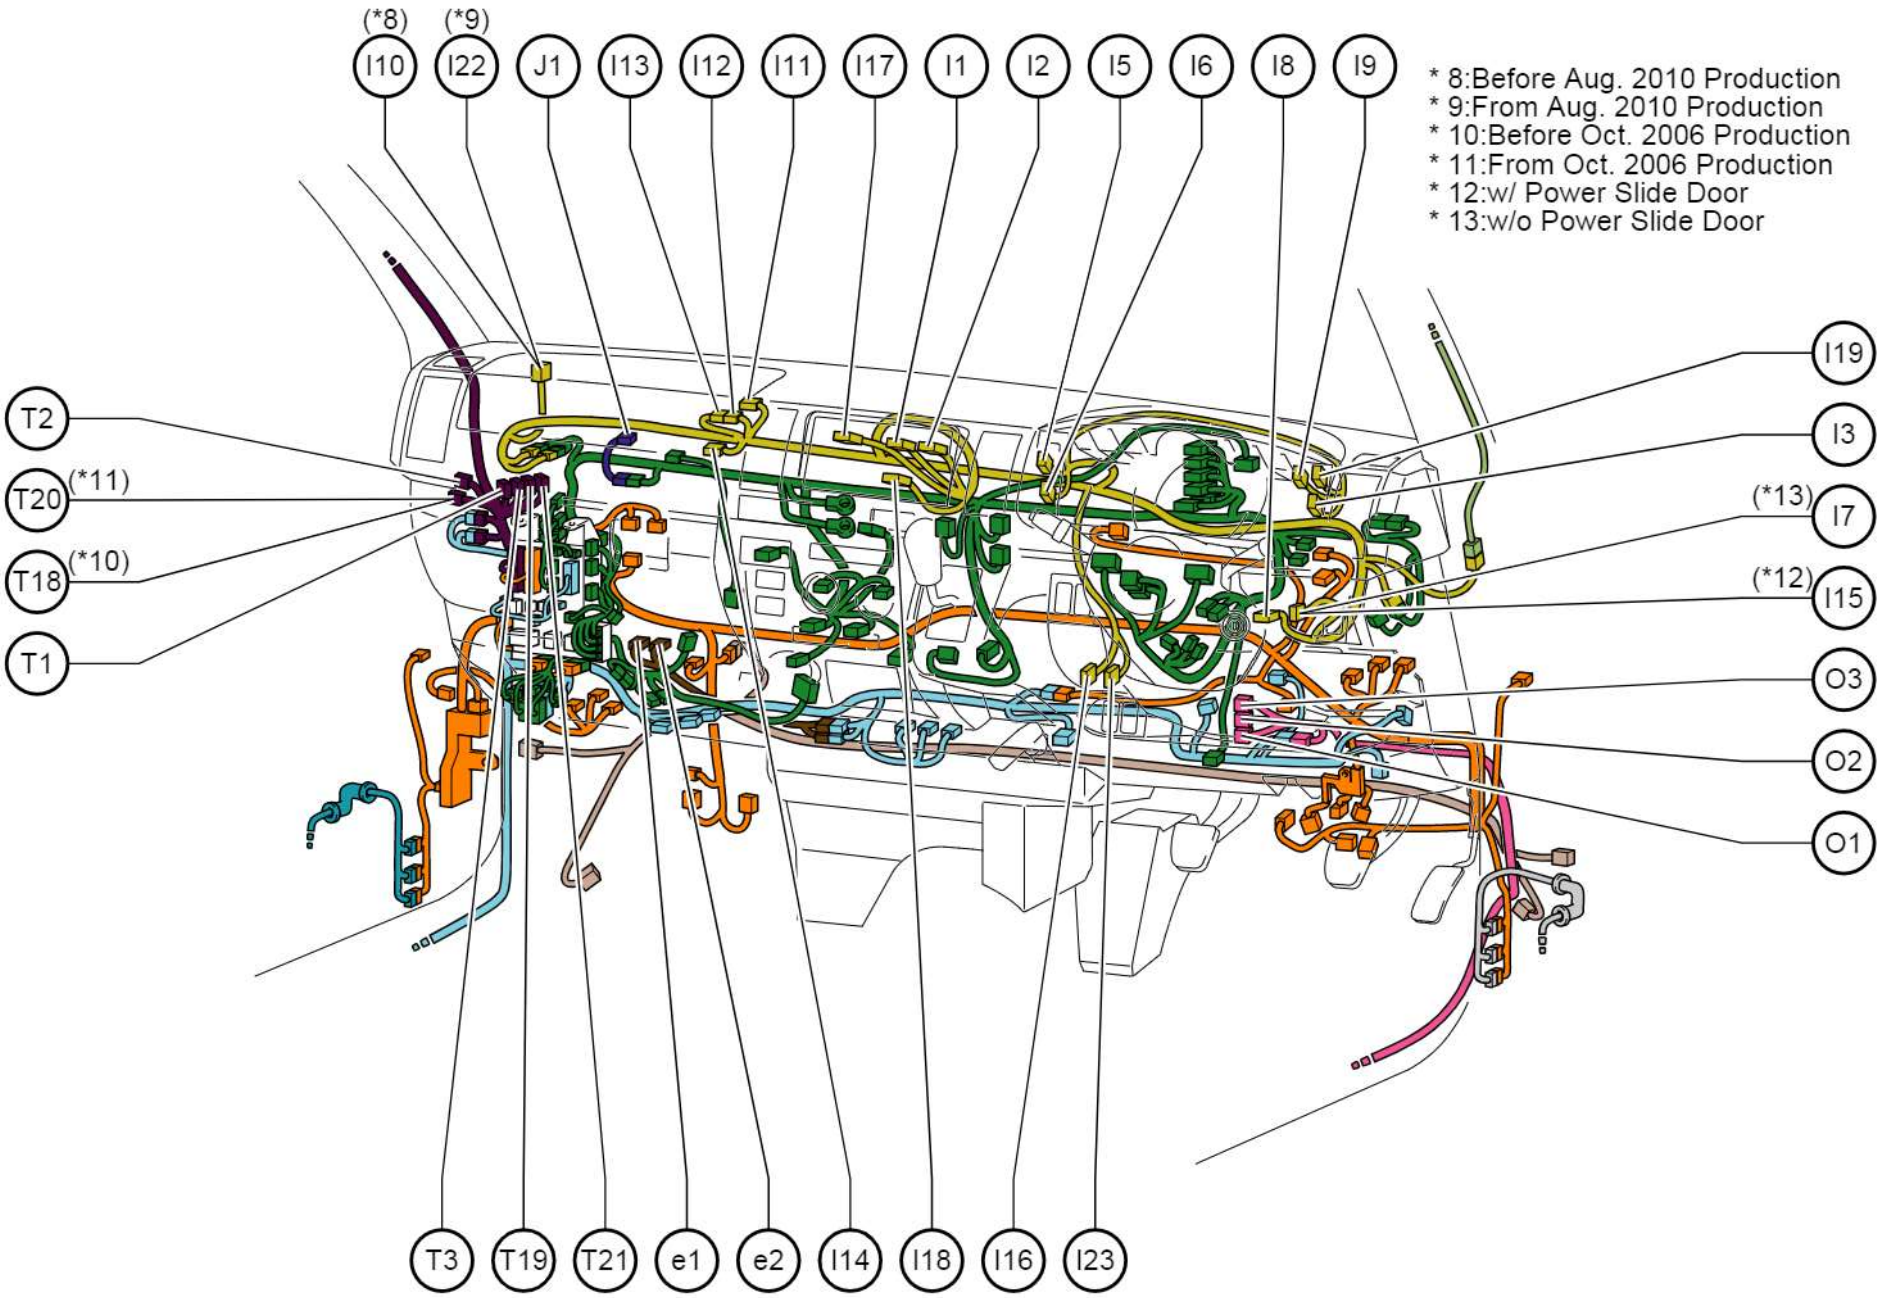


(*8)
(*9)
I10
I22
J1
I13
I12
I11
I17
I1
I2
I5
I6
I8
I9
* 8:Before Aug. 2010 Production
* 9:From Aug. 2010 Production
* 10:Before Oct. 2006 Production
* 11:From Oct. 2006 Production
* 12:w/ Power Slide Door
* 13:w/o Power Slide Door
T2
T20
(*11)
T18
(*10)
T1
I19
I3
(*13)
I7
(*12)
I15
O3
O2
O1
T3
T19
T21
e1
e2
I14
I18
I16
I23

Position of Parts in Instrument Panel <RHD>


I	1	Radio Receiver Assembly
I	2	Radio Receiver Assembly
I	3	Rear Fog Lamp SW
I	5	Room Lamp SW , Short Pin (Room Lamp SW)
I	6	Idle-Up SW
I	7	Door Lock Control SW
I	8	Outer Mirror SW
I	9	Headlamp Leveling SW
I	10	Automatic Light Control Sensor
I	11	Junction Connector
I	12	Junction Connector
I	13	Junction Connector
I	14	Junction Connector
I	15	Power Slide Door Control SW
I	16	Power Slide Door Main SW
I	17	Radio Receiver Assembly
I	18	Radio Receiver Assembly
I	19	Option Connector (TVSS Indicator Lamp)
I	22	Automatic Light Control Sensor
I	23	DPF Switch Assembly
J	1	Airbag Squib (Front Passenger's Airbag Assembly)
O	1	Transmission Control ECU
O	2	Transmission Control ECU
O	3	Transmission Control ECU
T	1	Junction Connector
T	2	Junction Connector
T	3	Junction Connector
T	18	Diode (Door Courtesy No.7)
T	19	Diode (Door Courtesy No.9)
T	20	Diode (Door Courtesy No.10)
T	21	Diode (Door Courtesy No.11)
e	1	PTC Heater
e	2	PTC Heater

Position of Parts in Instrument Panel <RHD>


I 1
White




I 2
Blue

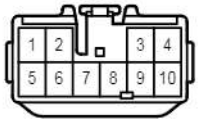


I 3
White

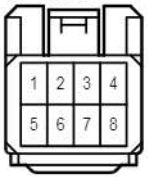

I 5
Gray




I 6
Black



I 7
Black



I 8
White

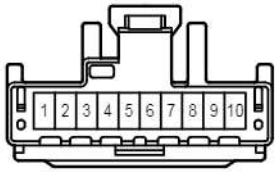


I 9
Gray



I 10
Black



I 11
Black




I 12
Blue




I 13
Blue




I 14
Black




I 15
Green

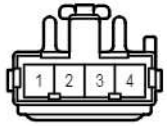


I 16
Gray

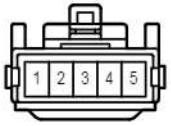


I 17
White




I 18
White

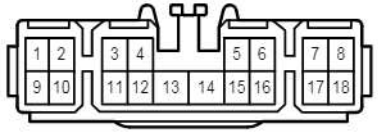


I 19
White




I 22
Black

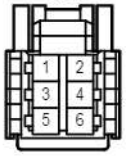


I 23
Black




J 1
Orange




O 1
White



O 2
White




O 3
White




Position of Parts in Instrument Panel <RHD>


T 21
White




e 1
White

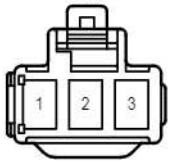


e 2
White

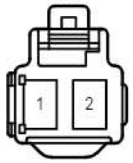


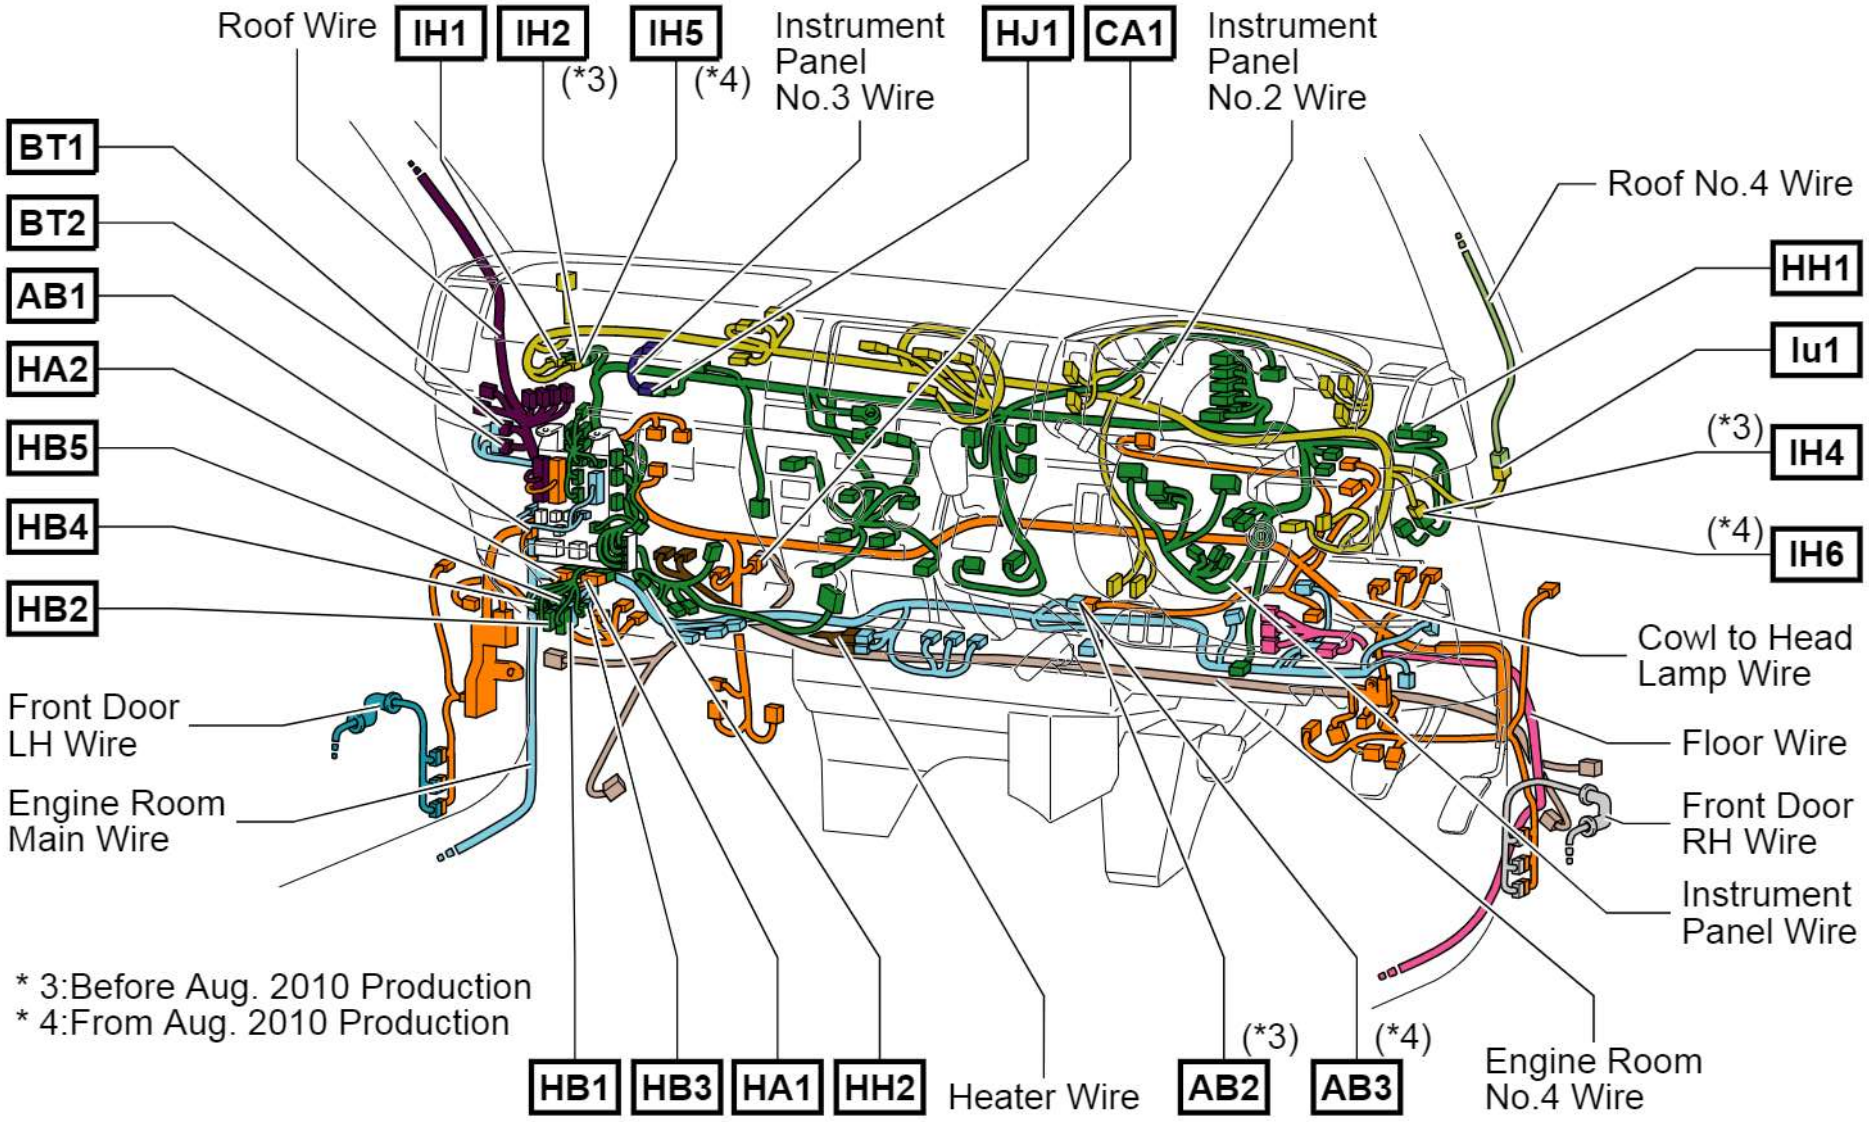
Roof Wire
IH1
IH2
(*3)
IH5
(*4)
Instrument Panel No.3 Wire
HJ1
CA1
Instrument Panel No.2 Wire
Roof No.4 Wire
BT1
BT2
AB1
HA2
HB5
HB4
HB2
HH1
Iu1
(*3)
IH4
(*4)
IH6
Cowl to Head Lamp Wire
Front Door LH Wire
Engine Room Main Wire
Floor Wire
Front Door RH Wire
Instrument Panel Wire
* 3:Before Aug. 2010 Production
* 4:From Aug. 2010 Production
HB1
HB3
HA1
HH2
Heater Wire
(*3)
AB2
(*4)
AB3
Engine Room No.4 Wire


AB1
Gray

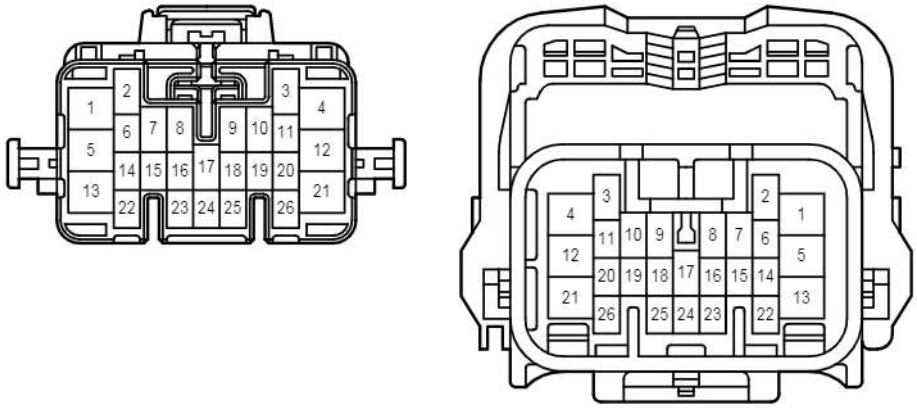


AB2
Yellow

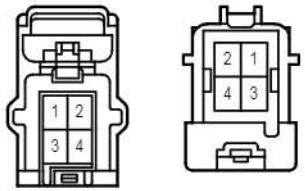

AB3
Yellow

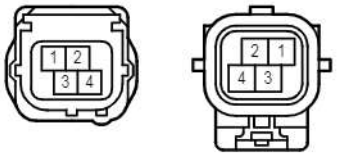

BT1
White

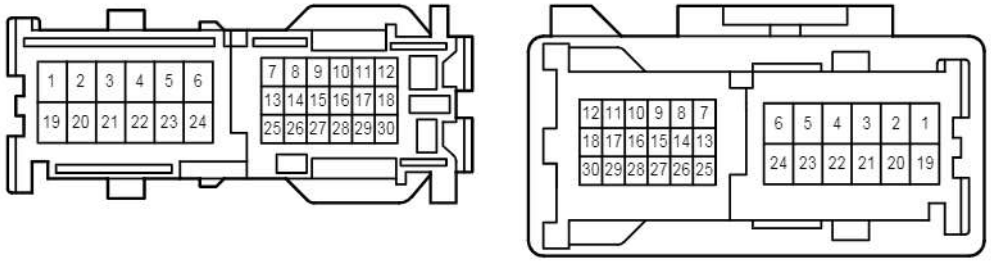

BT2
White




CA1
Black




Wire and Wire in Instrument Panel <RHD>


HA1
White

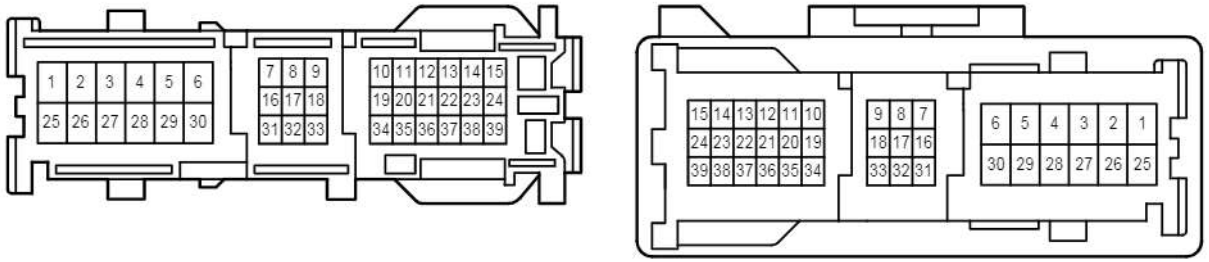

HA2
Blue

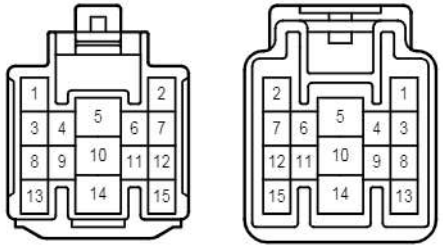


HB1
White

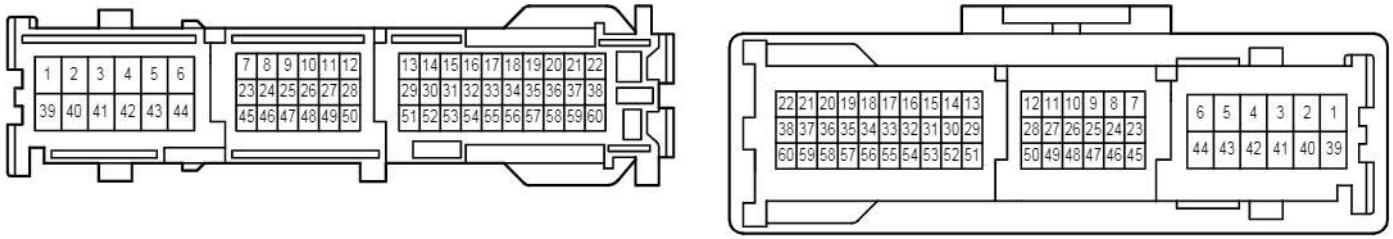


HB2
White




Wire and Wire in Instrument Panel <RHD>

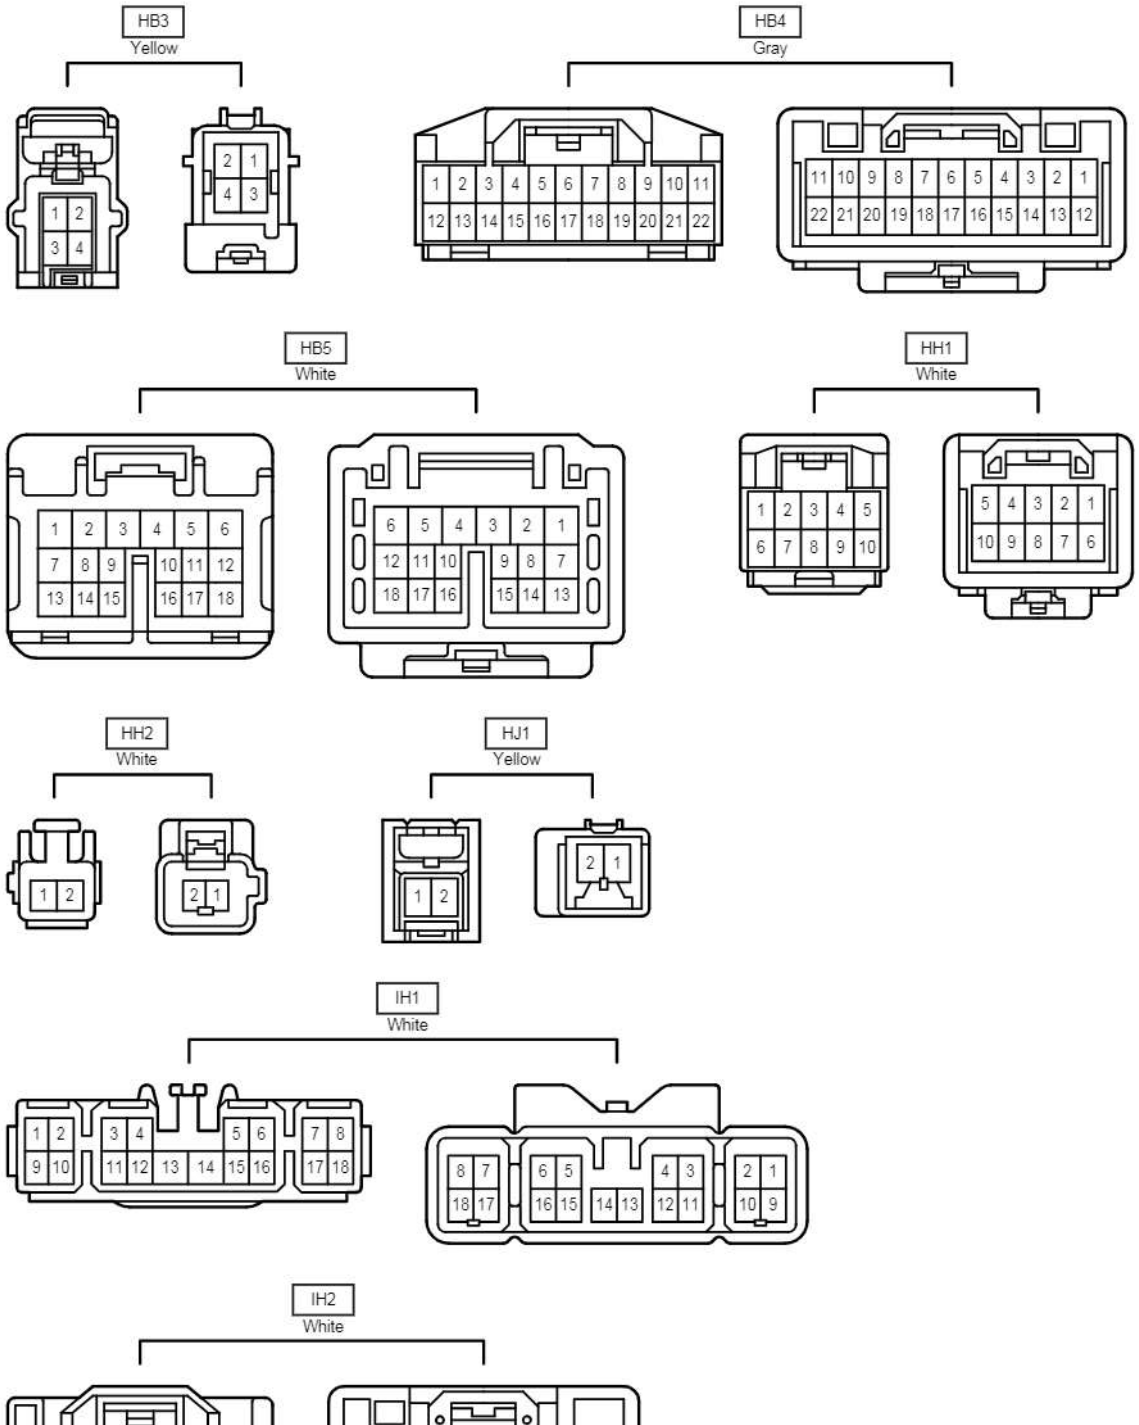


IH4
Gray

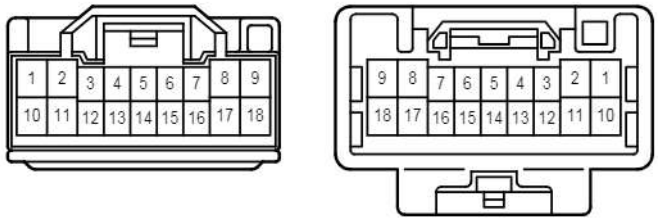


IH5
Gray

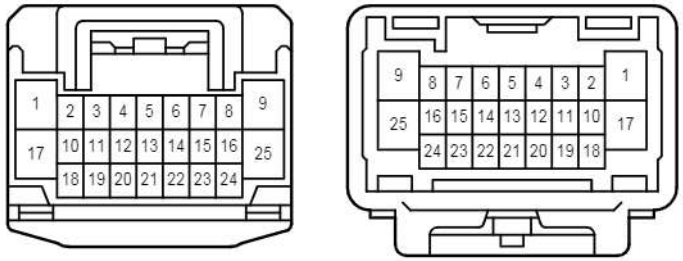


IH6
Gray

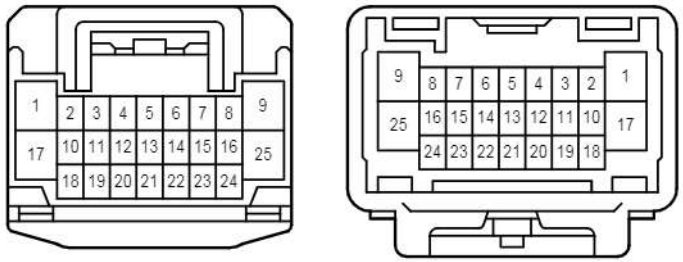


Iu1
White

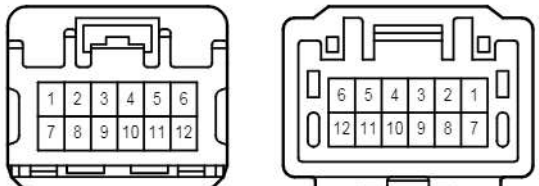


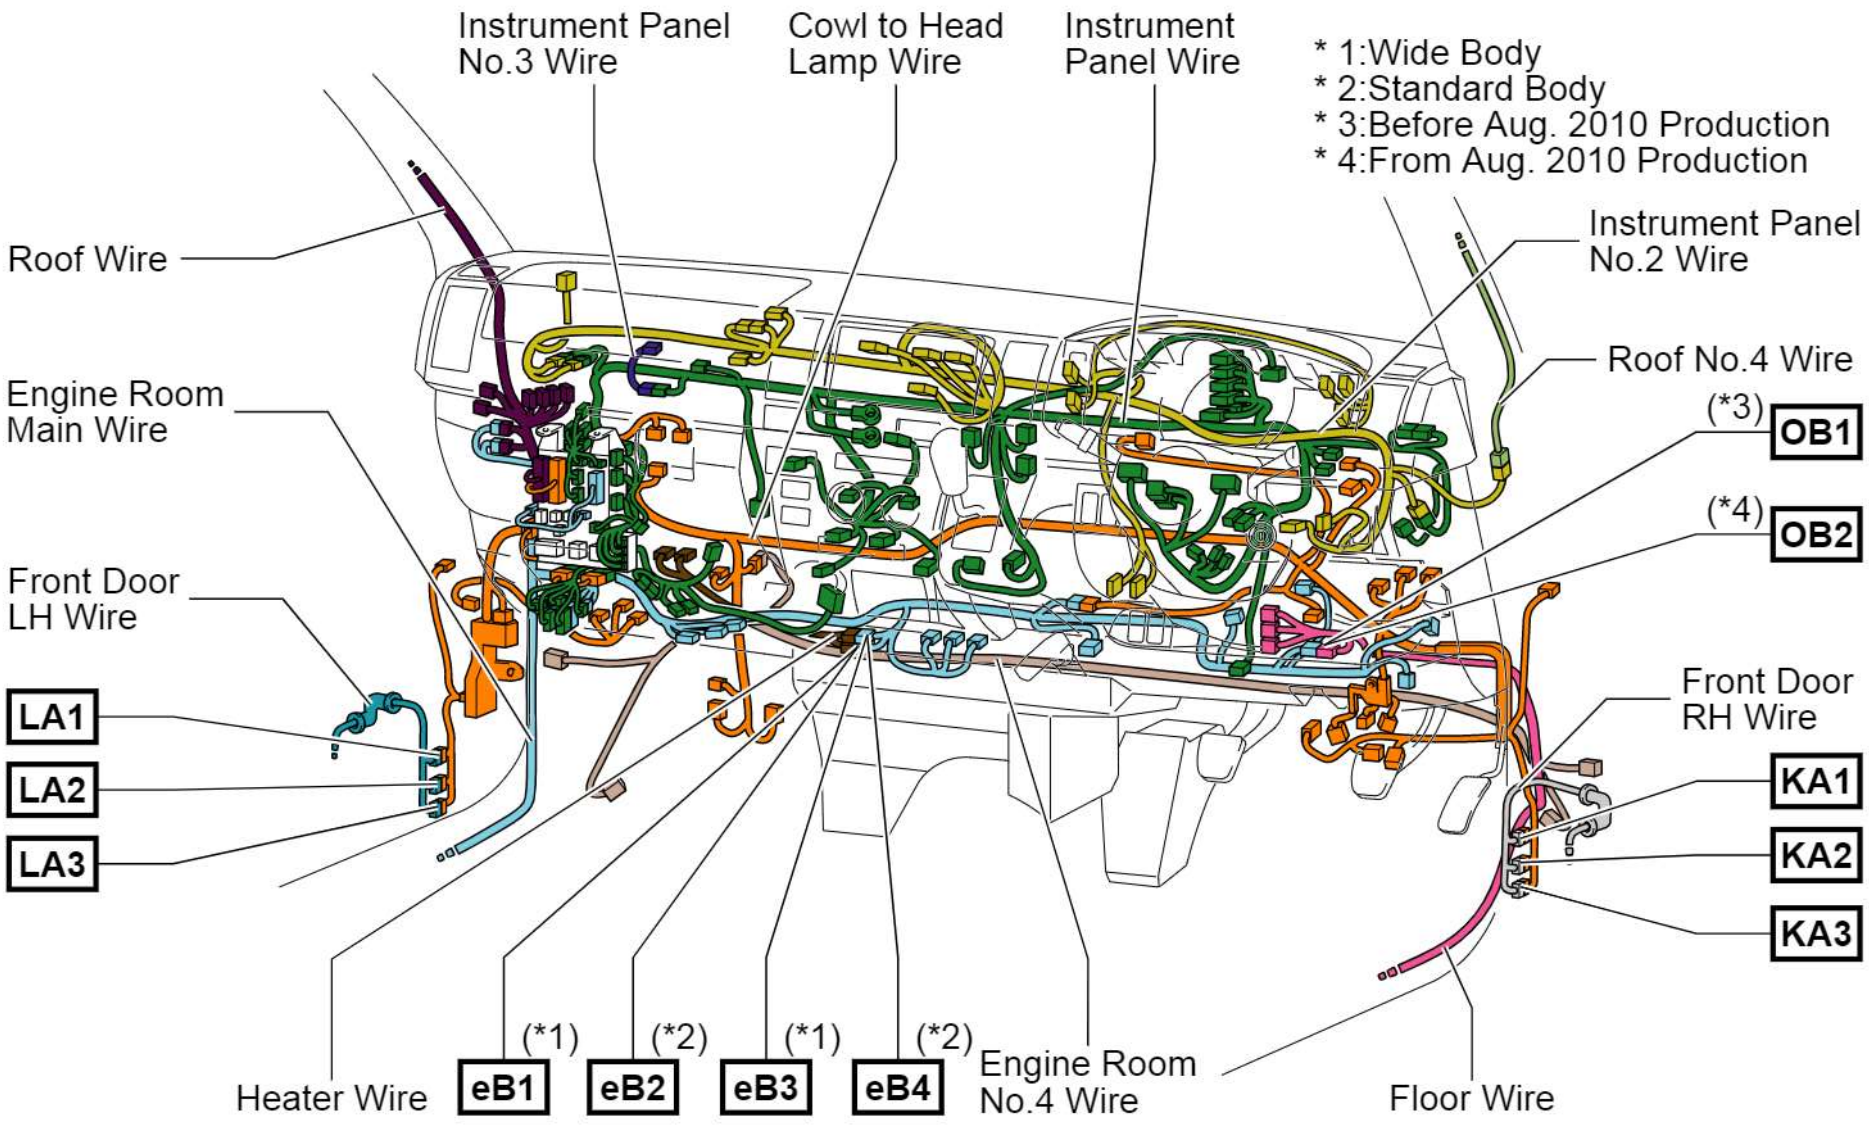
Instrument Panel
No.3 Wire
Cowl to Head
Lamp Wire
Instrument
Panel Wire
* 1:Wide Body
* 2:Standard Body
* 3:Before Aug. 2010 Production
* 4:From Aug. 2010 Production
Roof Wire
Instrument Panel
No.2 Wire
Roof No.4 Wire
Engine Room
Main Wire
(*3)
OB1
(*4)
OB2
Front Door
LH Wire
Front Door
RH Wire
LA1
LA2
LA3
KA1
KA2
KA3
(*1)
(*2)
(*1)
(*2)
Heater Wire
eB1
eB2
eB3
eB4
Engine Room
No.4 Wire
Floor Wire

Wire and Wire in Instrument Panel <RHD>

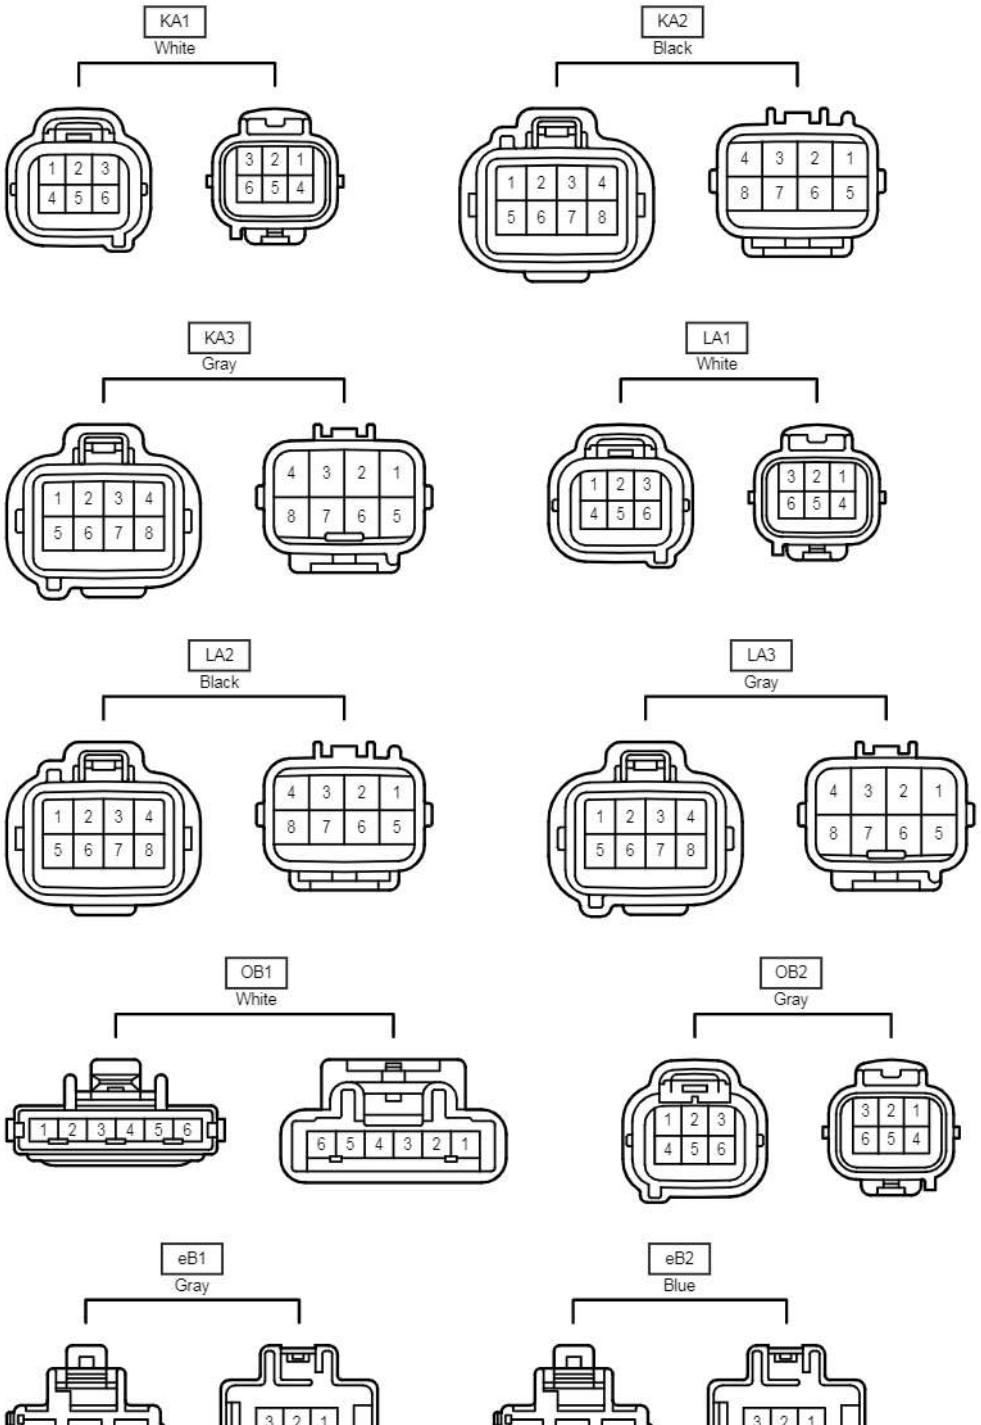


1
2
3
1
2
3

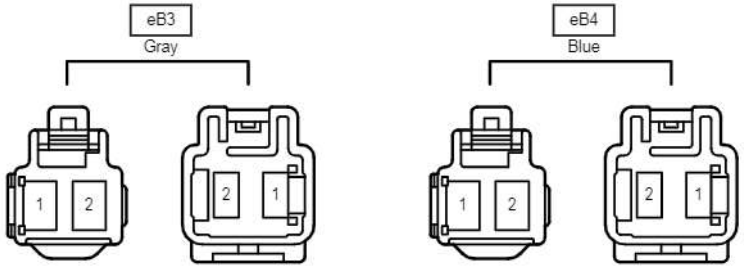
eB3
Gray
1
2
2
1

eB4
Blue
1
2
2
1