

Owner's manual

MMI Navigation plus

Audi
Vorsprung durch Technik

Foreword

You have decided on the MMI Navigation plus - thank you very much for your confidence in us.

With your new Audi, you are receiving a vehicle with a state-of-the art system that allows you the change the vehicle's settings and operate the electronic equipment from a central location using the MMI.

We recommend that you read these Operating Instructions carefully so that you quickly get to know all of the functions and possibilities that the MMI offers and are able to make full use of them while driving.

Please note that these instructions are a supplement to your vehicle Owner's Manual and should only be used in conjunction with your current vehicle Owner's Manual.

We hope you enjoy driving your Audi.

AUDI AG

1515663MH21

About this owner's manual . . . 4

Operation 5
Overview 5
Components at a glance 5
Traffic safety information 5
Care information 6
Notes on software licenses 6

MMI control panel 7
Switching the MMI on and off 7
Adjusting the volume 7
Operation 7
MMI touch 8
Speller letters/numbers 9
Menus and symbols 10

Multifunction steering wheel . 12
Operating 12
Calling 13
Navigation 14
Listening to the radio 15
Playing media 15

Voice recognition system 17
Operating 16
Information about the command overviews 18
Global commands 18
Telephone 18
Audi connect 19
Messages (Audi connect) 19
Navigation 20
Radio 22
Media 22

Media drives/connections 23
Introduction 23
Notes 23
SD card reader 24
DVD player 24
Jukebox 24
Bluetooth audio player 25
Wi-Fi audio player 26
Audi music interface 27
Supported media and file formats . . . 28
Troubleshooting 29

System settings 31
Setting the time/date 31
Adjusting the sound 31
Adjusting system volume 32
Restarting the MMI (Reset) 33
Additional settings 33

Communication 35
Making a phone call 35
Introduction 35
Pairing a cell phone through Bluetooth . . 35
Selecting the telephone 37
Dialing a phone number 38
Storing a phone number 39
Answering and ending calls 39
During a call 40
Messages 40
Listening to voicemail 42
Calling up the directory 42
Searching for a contact 43
Using a contact 43
Importing or exporting contacts 44
Storing a new contact 45
Additional settings 45
Troubleshooting 47

Audi connect 48
Introduction 48
Starting 48
Configuration through myAudi 49
Audi connect services overview 50
Wi-Fi hotspot 53
Configuring the data connection 54
Data usage info 55
About Audi connect 55
Troubleshooting 56

Navigation 57
Navigating 57
Calling up navigation 57
Entering a destination 57
Starting/canceling route guidance . . . 61
Using the map 62

Map display 63
Additional settings 64

Trip information 68
Calling up traffic information 68

Entertainment systems 70
Listening to the radio 70
Selecting the radio 70
Radio functions 71
Additional settings 71
Troubleshooting 72

Playing media 73
Calling up media 73
Media center 74
Additional settings 75

Index 77

This book contains important information, tips, suggestions and warnings for using your vehicle.

Keep this book in your vehicle at all times. This is especially important if you loan your vehicle to others or sell it.

Some sections in this book do not apply to all vehicles. When this is the case, the beginning of the section indicates the **validity**, for example “Applies to vehicles: with multifunction steering wheel” . Optional or vehicle-specific equipment is also identified with an asterisk “*”.

The **illustrations** are designed as schematic images. Some of the details on your vehicle may look slightly different than illustrated.

There is a **Table of Contents** at the beginning of this book that lists all of the topics covered in this book in the order that they appear. There is also an alphabetically arranged **Index** at the end of this book.

All **directions** such as “left”, “right”, “front” and “rear” are based on the vehicle's direction of travel.

* Optional or vehicle-specific equipment.

▶ The section continues on the next page.

⇨ ⚠ Cross reference to a “WARNING” within a section. If a page number is indicated, the WARNING is located outside of the section.

Tips

Text with this symbol contains additional useful information.

WARNING

Text with this symbol contains information about safety and how to reduce the risk of serious personal injury or death.

Note

Text with this symbol contains information about avoiding damage to your vehicle.

For the sake of the environment

Text with this symbol contains information on protecting the environment.

Overview

Components at a glance

The Multi Media Interface, or MMI for short, combines various communication, navigation and entertainment systems in your Audi.*

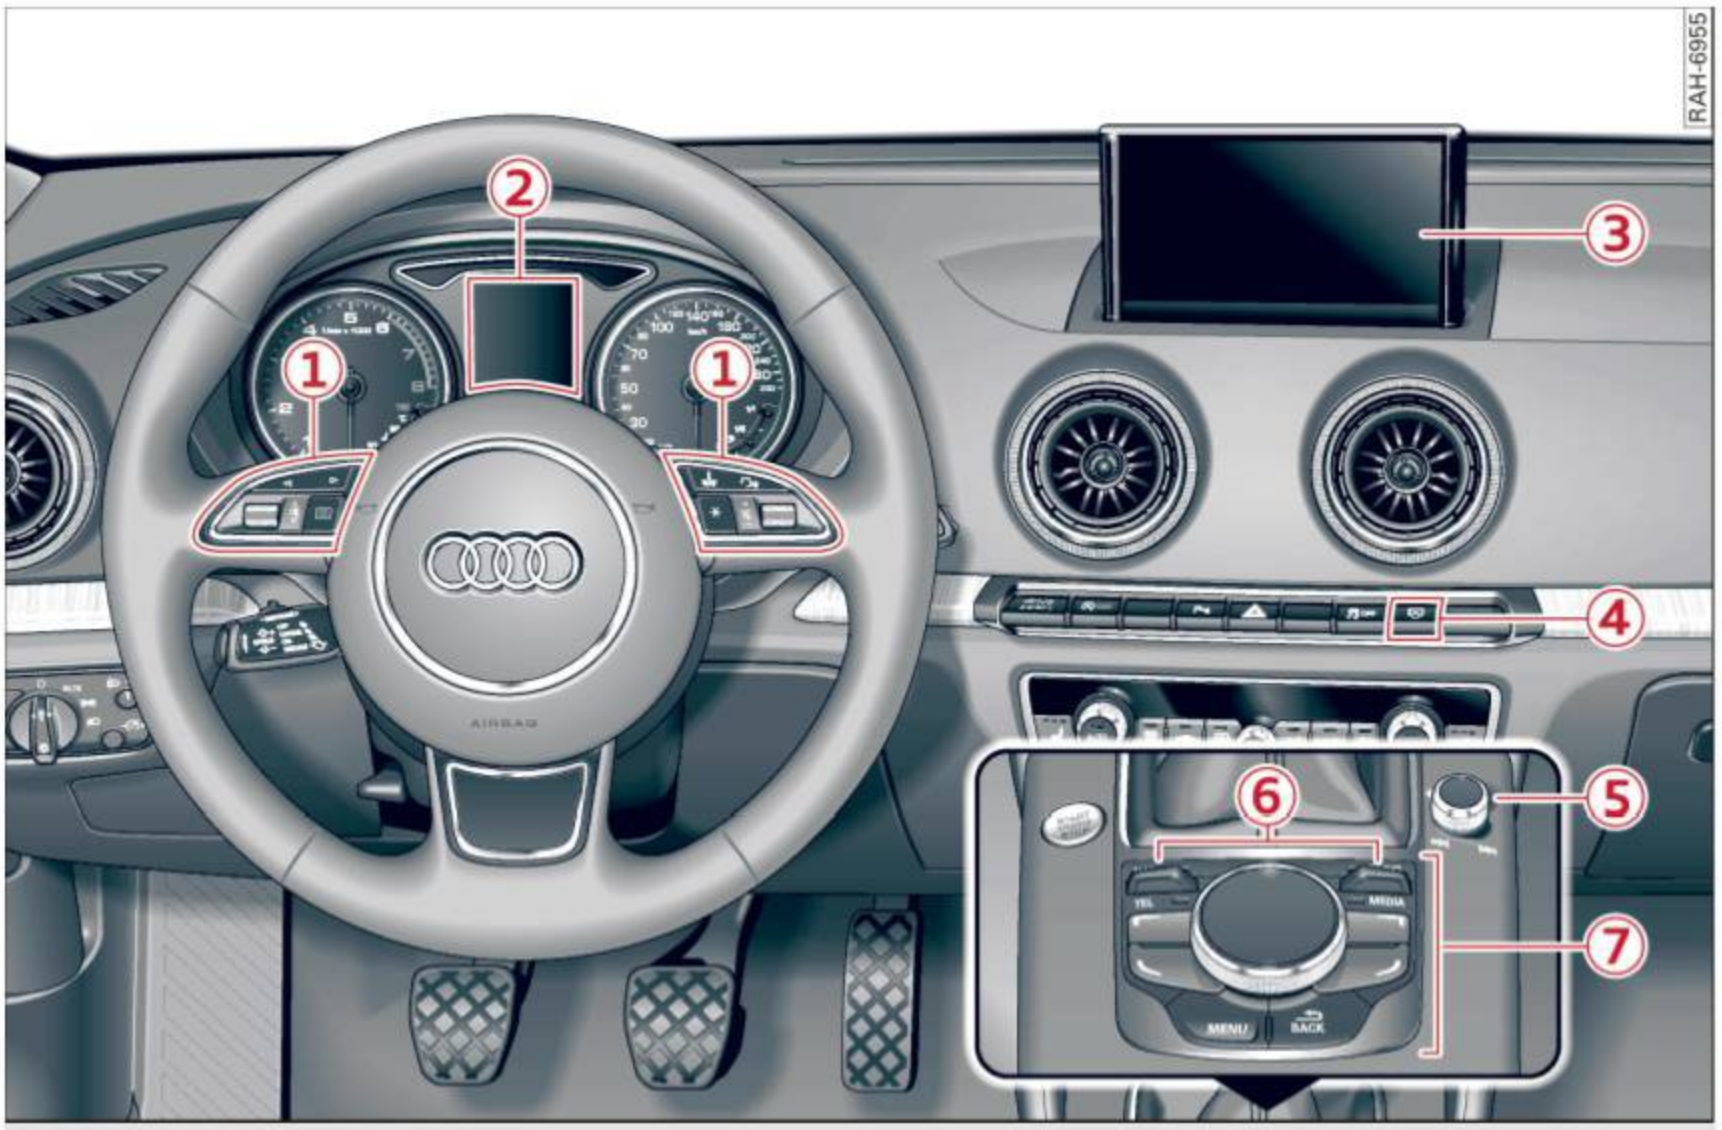


Fig. 1 MMI controls

You can operate the MMI through the MMI control panel, the multifunction steering wheel* or the voice recognition system* ⇨ *fig. 1*:

① Multifunction steering wheel . . 12
② Driver information system 12
③ MMI Display
④ Button for opening/closing the MMI display
⑤ On/Off knob 7
⑥ Buttons for opening menus directly 7
⑦ MMI control panel 7

Tips

– Please note that this manual only describes MMI components. You can find additional information on operating your vehicle in your vehicle Owner's Manual.
– This book describes the **equipment range** specified for this model at the time of the editorial deadline. Individual items of equipment may not yet be available at the time of printing or may only be offered in certain countries.
– On vehicles with right-hand drive steering*, the layout of the system components differs somewhat from what is shown here ⇨ *fig. 1*. The symbols for the controls are the same.

Traffic safety information

Audi recommends only performing certain functions such as entering a destination when the vehicle is stationary. Always remember: ▶

Take a break from using your MMI if needed for the benefit of your safety and the safety of other drivers.

WARNING

- Driving requires your complete and undivided attention. As the driver, you have complete responsibility for safety in traffic. Only use the MMI when traffic conditions permit and always in a way that allows you to maintain complete control over your vehicle.
- Adjust the volume of the audio system so signals from outside the vehicle such as police and fire sirens can be heard easily at all times.
- Obey all applicable laws regarding use of telephones in vehicles.

Care information

For information on cleaning and caring for the Infotainment components, refer to the *Cleaning and Protection* chapter of your vehicle owner's manual.

Notes on software licenses

For information on the software contained in the MMI and the licensing agreements, press the MENU button > **Setup MMI** control button > **Version information** > **Software Info** section. You can also find this information online at www.audi.com/softwareinfo.

MMI control panel

Switching the MMI on and off

The MMI switches on and off automatically with the ignition. It can also be switched on or off manually.

– **Switching on manually**: Press the On/Off knob briefly (5) ⇨ *page 5, fig. 1*. **Or**: Press the MENU button or one of the buttons used to call up a menu (6).

When switched on, the last menu that was selected is displayed and the last audio source that was selected begins playing.

– **Switching off manually**: Press and hold the On/Off knob (5) until the MMI switches off. An MMI that has been switched off manually does *not* switch on again automatically the next time the ignition is switched on.

The MMI can still be operated for approximately ten minutes after switching the ignition off. If you do not press any buttons or the control knob on the MMI control panel within this time, the MMI automatically switches off.

Tips

The MMI switches off automatically when the engine is not running and there is a low battery charge.

Adjusting the volume

The volume of an audio source or a system prompt (for example, from the voice recognition system) can be adjusted directly while the sound is playing using the On/Off knob.

– **Volume higher/lower**: Turn the On/Off knob (5) ⇨ *page 5, fig. 1* to the right or left.
– **Mute/pause**: Press the On/Off knob briefly. **Or**: Turn the On/Off knob to the left.
– **Unmute/resume**: Press the On/Off knob briefly. **Or**: Turn the On/Off knob to the right.

Tips

Volumes that are too high or too low are automatically adjusted to a specified level when the MMI is switched on.

Operation

You can easily access functions in the MMI using an intuitive and standardized operating process.

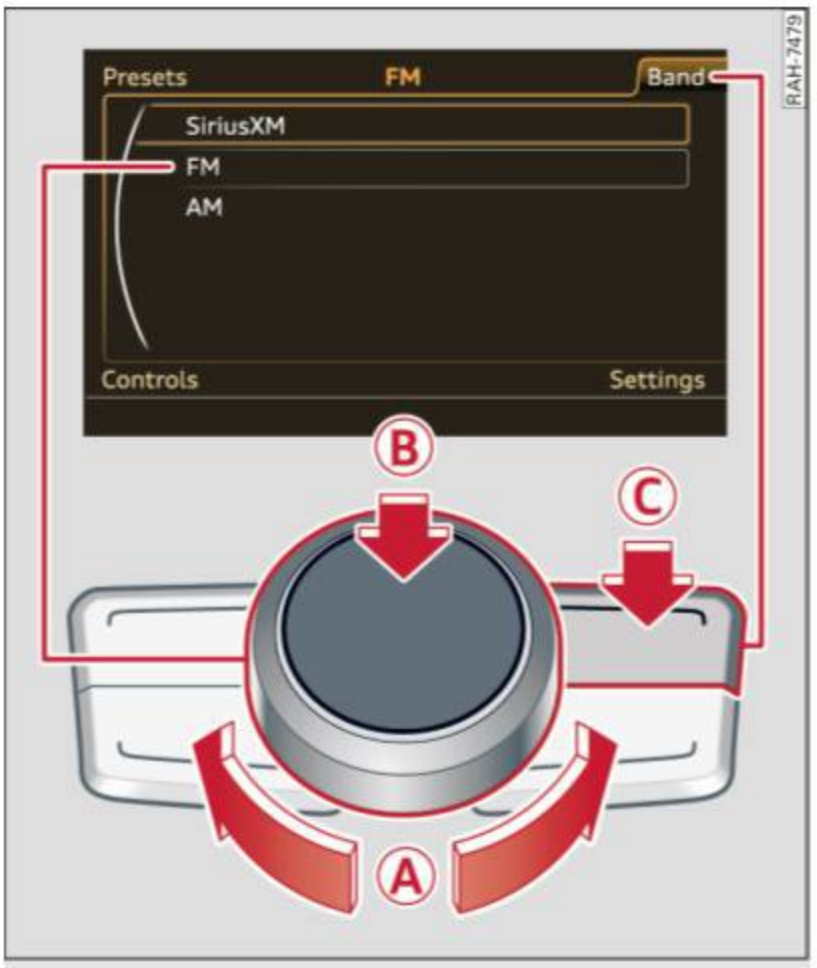


Fig. 2 Operation

Selecting and confirming a function

▸ (A) **Selecting a function**: Turn the control knob to the desired function.
▸ (B) **Confirming a selection**: Press the control knob.

Calling up a function in a corner of the display

▸ Press the control button (C) in the corresponding corner of the display. For example, the upper right control button corresponds to the upper right corner of the display.

Opening the main menu

▸ Press the MENU button (7) ⇨ *page 5, fig. 1*. The MMI menus (such as **Radio**) are displayed. ▶

Calling up a menu directly

▸ Press the respective button ⑥ toward the desired menu (such as RADIO or MEDIA).

Return to functions at higher levels

▸ Press the BACK button ⑦.

MMI touch

The MMI touch touchscreen is located on the interface with the control knob.



Fig. 3 Entering a navigation destination



Fig. 4 Display with MMI touch active

The symbol Ⓐ ⇨ *fig. 4* appears in the MMI display and the edge of the control knob illuminates when it is possible to use the MMI touch touchscreen.

Entering numbers, letters, and symbols

Requirement: Text or numbers can be entered.

– Write letters, numbers or characters on the touchscreen with your finger. Characters that are recognized are shown in the MMI display ① ⇨ *fig. 3* and may be confirmed with an audio prompt. The selected symbol appears in the input field.
– **Selecting alternative characters**: Turn the control knob to the left/right ② and press the knob.
– **Entering spaces**: Move your finger from left to right on the MMI touch touchscreen.
– **Deleting characters**: Move your finger from right to left on the MMI touch touchscreen.
– **Ending input/switching to the selection list**: Press the control knob.

Searching for a contact in the phone book

Requirement: The directory must be open ⇨ *page 42*.

– **Moving to a specific initial letter in the list**: Draw the desired letter on the touchscreen with your finger.
– **Narrowing down the search**: Draw additional letters on the touchscreen with your finger.
– **Ending input/switching to the selection list**: Press the control knob.

Moving the crosshairs/map

Requirement: A map must be displayed ⇨ *page 57*.

– **Moving the crosshairs in the standard map**: Press the control knob. The crosshairs are shown on the map. To move the crosshairs, move your finger in the desired direction on the touchscreen. **Or**: Place your finger on the respective edge of the touchscreen.
– **Moving the online map**: Press the control knob. The crosshairs are shown on the map. To move the map, move your finger in the desired direction on the touchscreen. **Or**: Place your finger on the respective edge of the touchscreen.

Adjusting the sound distribution

Requirement: The balance/fader function must be selected ⇨ *page 31*.

– **Moving the crosshairs for sound distribution**: Move your finger in the desired direction on the touchscreen. ▶

Browsing/selecting album covers

Requirement: The Media menu must be open and a source must be selected ⇨ *page 73*.

– **Browsing album covers**: Move your finger from left to right on the MMI touch control panel.
– **Selecting album covers**: Press the control knob.

Using the DVD main menu

Requirement: A video DVD must be playing ⇨ *page 73*.

– **Selecting a menu item**: Move your finger up/down or left/right on the touchscreen.
– **To confirm your selection**: Press the control knob.

Tips

The volume of the voice guidance prompts for the MMI can be adjusted individually ⇨ *page 32*.

Speller letters/numbers

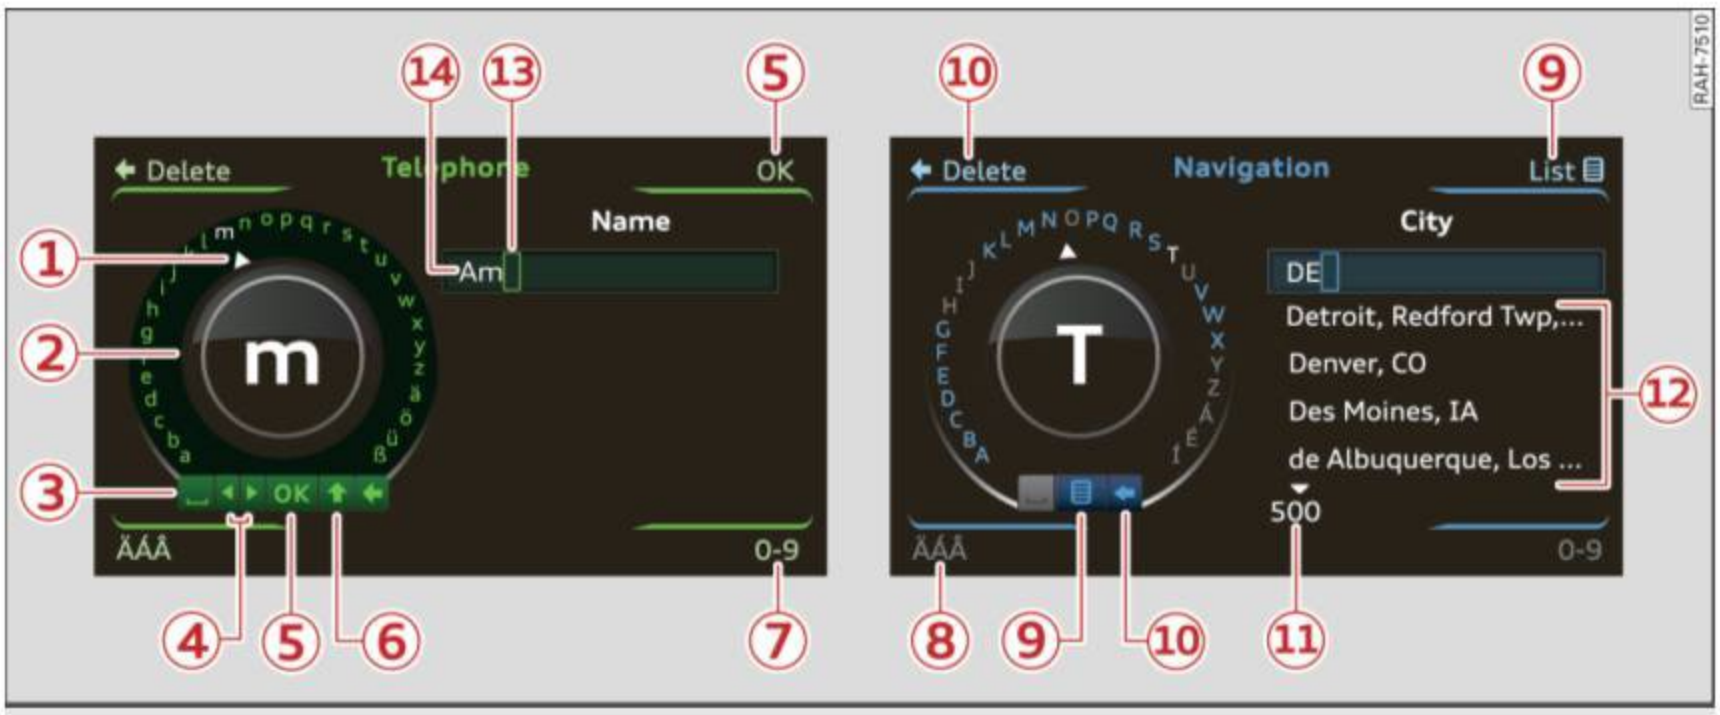


Fig. 5 Speller

– **Entering characters**: Turn the control knob with the selection arrow ① ⇨ *fig. 5* to the desired character. Your selection is shown enlarged in the entry ring ②. Press the control knob to confirm the character. Your input is displayed in the input field ⑭. When you have entered all characters, select and confirm **OK** ⑤.
– **Deleting characters**: Turn the control knob with the arrow to ⬅ ⑩ and press the control knob. To delete all characters in the input field, press and hold the control knob ⬅ until all characters in the input field are deleted.
– **Entering special characters**: Press the **0-9** control button ⑦ ⇨ *fig. 5* and enter the desired special character (for example, a hyphen or period) using the number speller.
– **Input assistance**: In some cases such as in the Navigation* menu, the selection of letters may be limited to available entries. This means that you can select only the letters which are possible at this place in a word.

Overview of symbols in the speller

The symbols in the letter/number speller ⇨ *fig. 5* are explained in the following table: ▶

	Symbol/Description	Explanation
①	Selection arrow	The selected character is highlighted with a white background and appears large in the input ring.
②	Entry ring	The character selected with the selection arrow is displayed large.
③	⎵	A space is added in the input field.
④	◀▶	The cursor moves forward/back in the input field.
⑤	OK	The input is confirmed.
⑥	⬆	Switches from lower case to capital letters or from capital to lower case letters.
⑦	0-9/A-Z	Switches from letter to number input or from number to letter input.
⑧	ÄÁÂ	Language-specific special characters are displayed.
⑨	List	A list of suggestions is displayed.
⑩	⬅/delete	The character to the left of the cursor is deleted.
⑪	Number of entries	The number of list entries that was found is displayed.
⑫	List with suggestions	For example, when entering a destination, major cities are listed first and then additional cities in alphabetical order.
⑬	Cursor	The current editing position is marked.
⑭	Entry field	The current input is displayed.

Menus and symbols

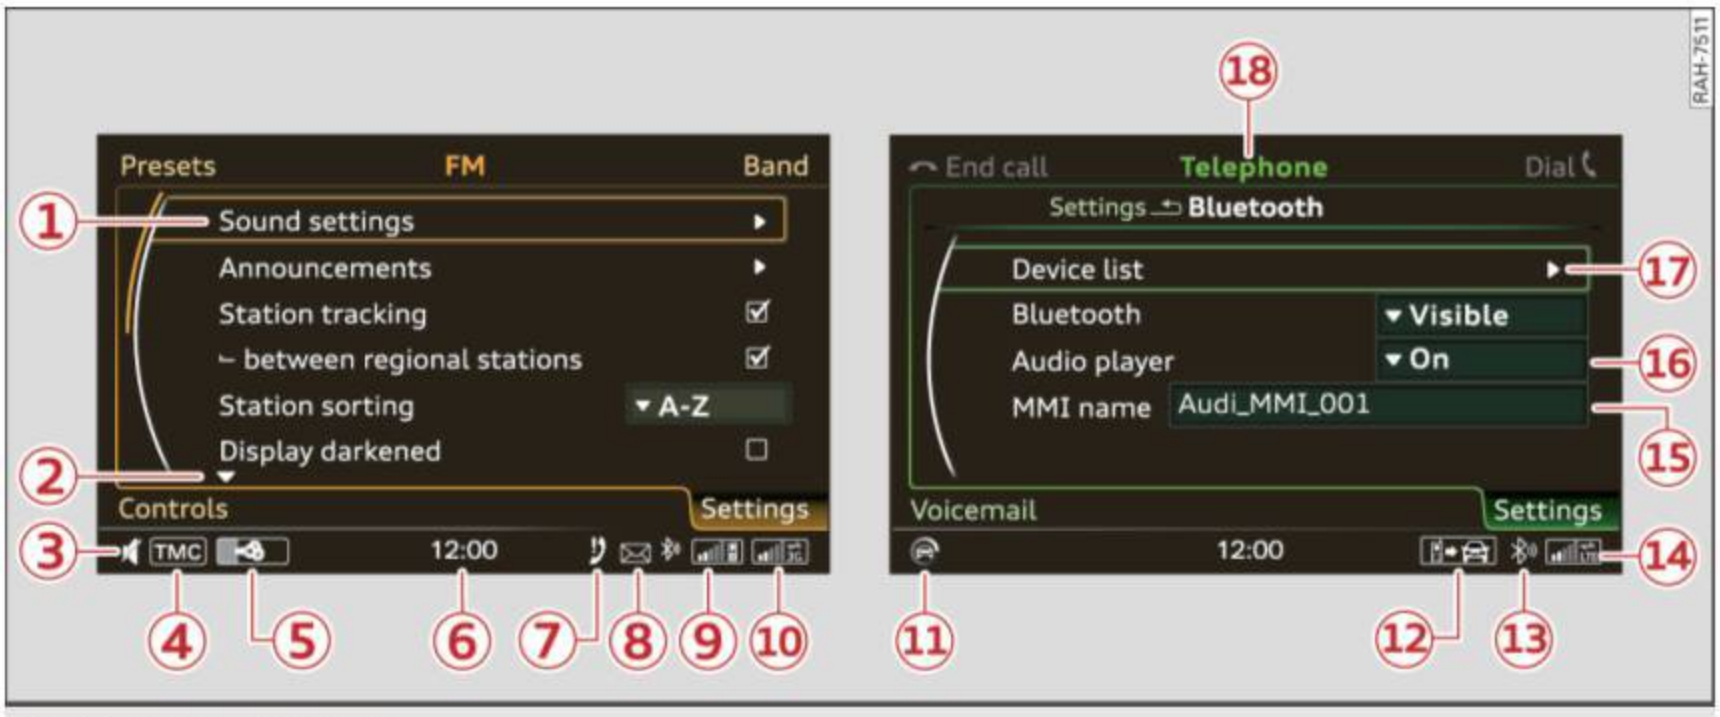


Fig. 6 Menus and symbols

	Symbol/Description	Explanation
①	Selected text	Selected function
②	Arrow down or up	Additional functions for selection
③	Mute	The audio source is muted ⇨ *page 7*

	Symbol/Description	Explanation
④	TMC*	Reception of TMC traffic reports ⇨ *page 68*
⑤	Copying process	Copying audio/video files to the Jukebox ⇨ *page 24*
⑥	Time	Set time ⇨ *page 31*
⑦	Telephone	Missed calls ⇨ *page 38*
⑧	Envelope	Unread texts messages Envelope crossed out Text message memory is full
⑨	Cell phone signal strength bars*	Cell phone network signal strength for a connected cell phone ⇨ *page 36*
⑩	Data connection signal strength bars*	Reception strength of the active data connection or **PIN**: Enter PIN (SIM) **PUK**: Enter PUK **SIM**: Inserting a SIM card ⇨ *page 48*
⑪	Updating process	Updating the navigation database ⇨ *page 33*
⑫	Importing process	Import/update the contacts in the directory or the call lists
⑬	Bluetooth*	Bluetooth device connected ⇨ *page 25* or ⇨ *page 35*
⑭	2G/3G/4G*/LTE*	Network coverage for the active data connection ⇨ *page 45* **2G**: GSM network **3G**: UMTS network **4G**: HSDPA+ network **LTE**: LTE network When a data connection is established, the symbol for an active data connection ① appears in the status line in the MMI display ⇨ *page 54, fig. 39*.
⑮	Entry field	Information that can be changed using the letter/number spell-er ⇨ *page 9*
⑯	Selection list	Settings for the selected function that is called up by pressing the control knob
⑰	Arrow	Submenu with additional functions that are called up by press-ing the control knob
⑱	Title line	Selected menu (such as **Telephone**)

Multifunction steering wheel

Operating

Applies to vehicles: with a multifunction steering wheel

You can operate various MMI functions and the driver information system, change the volume, and turn the voice recognition system on and off with the multifunction steering wheel.*



Fig. 7 Driver information system

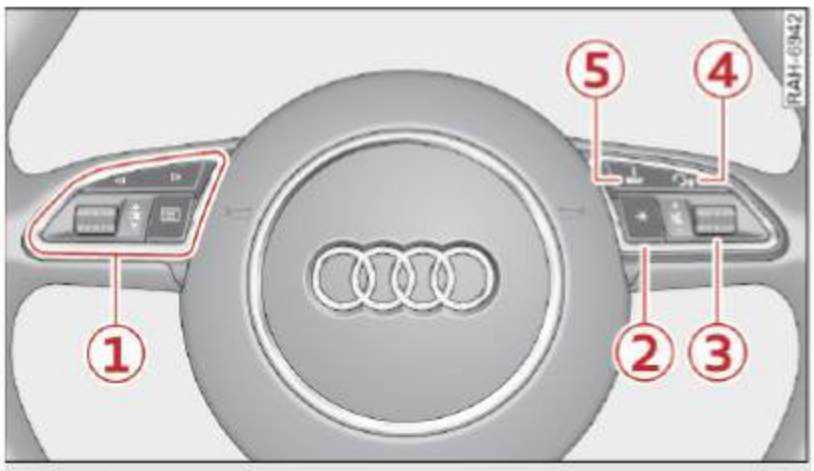


Fig. 8 Controls on the multifunction steering wheel

Requirement: The ignition and the MMI must be switched on ⇨ *page 7*.

① Operating the driver information system

The driver information system contains several tabs Ⓐ in which various information Ⓑ is displayed.

– **Switching tabs**: Press the ◁ ▷ button to the left/right.
– **Selecting a function**: Turn the left thumbwheel to the desired function.
– **Confirming a selection**: Press the left thumbwheel.
– **Quick scrolling through lists**: Turn the left thumbwheel quickly.
– **Displaying/leaving the submenu**: Press the ▤ button.

The following tabs are available depending on vehicle equipment:

– First tab: Vehicle information, assistance systems
– Second tab[1)]: Indicator lights, driver messages, speed warning system
– Third tab: Radio/media ⇨ *page 15*
– Fourth tab: Telephone* ⇨ *page 13*
– Fifth tab: Navigation* ⇨ *page 14*

② Programmable steering wheel button

– **Calling up a function**: Press the ✳ button on the multifunction steering wheel.
– **Changing a function**: Select the MENU button on the MMI > **Car** > **Car systems*** control button > **Vehicle settings** > **Steering wheel button programming**.

③ Adjusting the volume

You can adjust the volume of an audio source or a system message (for example, from the voice recognition system) when the sound is playing.

– **Volume higher/lower**: Turn the right thumbwheel upward/downward.
– **Mute/pause**: turn the right thumbwheel downward. **Or**: Press the right thumbwheel.
– **Unmute/resume**: Turn the right thumbwheel upward. **Or**: Turn the right thumbwheel.

④ Switching the voice recognition system on/off

– **Switching on**: Press the button briefly on the multifunction steering wheel. Say the desired command after the **Beep**. ▶

1) The second tab is only visible if at least one indicator light or message is shown or if that system is switched on.

– **Switching off:** Press and hold the button. **Or**: Say the command **Cancel**.

For more information about the voice recognition system, refer to ⇨ *page 17*.

⑤ Voice guidance during active route guidance*

– **Repeating the last voice guidance command**: Press the button.
– **Adjusting the voice guidance volume**: Turn the right thumbwheel upward/downward while a voice guidance command is playing.

Calling

Overview

Applies to vehicles: with a multifunction steering wheel and telephone



Fig. 9 Directory

Requirement: A cell phone must be connected to the MMI ⇨ *page 36* and the telephone tab must be displayed ⇨ *page 12*.

▸ Select: button.

– **Calling a contact in the directory**: Select and confirm **Directory**. Select and confirm a contact.
– **Calling a contact in the recent calls list**: Select and confirm **Recent calls**. Select and confirm a contact.

Directory contacts: The driver information system only displays directory contacts that have a phone number saved. If several phone numbers are stored in a contact, the list with stored numbers is displayed first when the entry is selected. For more information about the displayed symbols, refer to ⇨ *page 42, fig. 33*.

Recent calls: The recent calls list contains all incoming, outgoing and missed calls.

Tips

– The telephone functions can only be controlled on the multifunction steering wheel if the telephone equipment was installed *at the factory*.
– The telephone functions depend on the cell phone and whether they are supported by your cell phone service provider or not.

Incoming call

Applies to vehicles: with a multifunction steering wheel and telephone

Caller information: The *Name*, *Phone number* or **Unknown** appears in the driver information system display depending on whether the caller has been stored in the directory and if the phone number has been transmitted.

– **Answering a call**: Press the left thumbwheel when there is an incoming call.
– **Rejecting a call**: Select and confirm **Decline** when there is an incoming call.
– **Ending a phone call**: Select and confirm **End call**.

During a phone call

Applies to vehicles: with a multifunction steering wheel and telephone

Requirement: The **3-way calling** function must be switched on for some of the options listed ⇨ *page 46* and there must be a call in progress.

– **Making an additional call**: Select **Hold** > button > **Directory** or **Recent calls** > *Entry in the list*.
– **Answering a call while in a call and there is another call on hold**: Select and confirm **Replace**. The active call is replaced with the incoming call.

Additional functions include: ▸

Mute: If you select and confirm this function, the other caller cannot hear you. You can hear the other caller.

Holding/resuming a call: You can put a current call on hold and resume a call.

Call waiting: You can alternate between two phone calls at the same time. One of the calls will be on hold. **End call** ends the active phone call. A call that was placed on hold stays on hold and can be taken off hold with **Continue**.

Conference: A call on hold and up to five active parties (depending on the network) can be added to a conference call. To make an additional call, put all participants in the current conference call on hold using **Hold**. If you press the button, you can make an additional calls from the directory or the recent calls list. All parties are taken off hold with **Resume**.

Tips

The **Call waiting** function must be activated in your cell phone and in the MMI to be alerted to an incoming call during an active call. The call options depend on the cell phone and service provider. You can obtain more information from your cell phone service provider.

Navigation

Overview

Applies to vehicles: with a multifunction steering wheel and navigation system

Requirement: A destination or a tour plan must be entered ⇨ *page 57*, route guidance must be started ⇨ *page 61* and the navigation tab must be displayed ⇨ *page 12*.

The following functions are available with the button:

– **Show navigation when route guidance is active**: Select and confirm **Route guidance**.
– **Show compass when route guidance is not active**: Select and confirm **Compass**.
– **Cancel active route guidance**: Select and confirm **Cancel route guidance**.
– **Switching voice guidance on/off**: Select and confirm **Voice guidance on**/**Voice guidance off**.
– **Start route guidance to the stored home address**: Select and confirm **Cancel route guidance** if necessary and then **Home address** ⇨ *page 64*.

Display with route guidance started

Applies to vehicles: with a multifunction steering wheel and navigation system



Fig. 10 Lane display



Fig. 11 Turn display

Requirement: A destination or a tour plan must be entered ⇨ *page 57*, route guidance must be started ⇨ *page 61* and the navigation tab must be displayed ⇨ *page 12*.

① Distance to the next step
② Total mileage to the destination/stopover
③ Calculated arrival time
④ Name of the current expressway, highway or street. If the ○ symbol is displayed in front of the street name, you should turn onto the street shown.
⑤ Direction arrow for the upcoming step
⑥ Lane recommendation ▶

⑦ A bar graph appears when a direction arrow is displayed. The fewer bars are shown, the shorter the distance is until the turn.

The following functions are also available when route guidance is active:

– **Repeating the last voice guidance command**: Press the NAV button.
– **Adjusting the voice guidance volume**: Turn the right thumbwheel upward/downward while a voice guidance command is playing.

If you have not started route guidance, a compass will display in the navigation tab.

WARNING

The route calculated by the navigation system is a recommendation for reaching your destination. Obey traffic lights, stopping restrictions, one-way streets, lane change restrictions, etc.

Tips

An asterisk "**!**" in front of the street name indicates that the information about this street or this section of the route is not complete in the navigation data that the MMI contains. Obey traffic laws such as one-way streets or pedestrian zones.

Listening to the radio

Applies to vehicles: with a multifunction steering wheel



Fig. 12 Radio menu

Requirement: The radio/media tab must be displayed ⇨ *page 12*.

▸ Select: button.

The following functions are available with the button:

– **Selecting frequency band**: Select and confirm a band.
– **Selecting a station from the station list**: Select and confirm a radio station.
– **Selecting a station from the presets list**: Select and confirm **Presets** and then a radio station.
– **Accessing media from the Media source list**: Select and confirm an audio source.

Playing media

Applies to vehicles: with a multifunction steering wheel

Requirement: A media drive must contain audio files ⇨ *page 23* and the media tab must be displayed ⇨ *page 12*.

▸ **Playing an audio file**: Select and confirm a track.
▸ **Pausing/continuing playback**: Press the right thumbwheel. To continue playback, press the right thumbwheel again.

The following functions are available with the button:

– **Selecting a source**: Select and confirm a source such as Audi music interface.
– **Calling up a radio station from the source list**: Select and confirm a band and then a station from the station list.

Tips

The media drives do not play files protected by DRM and are identified with the symbol .

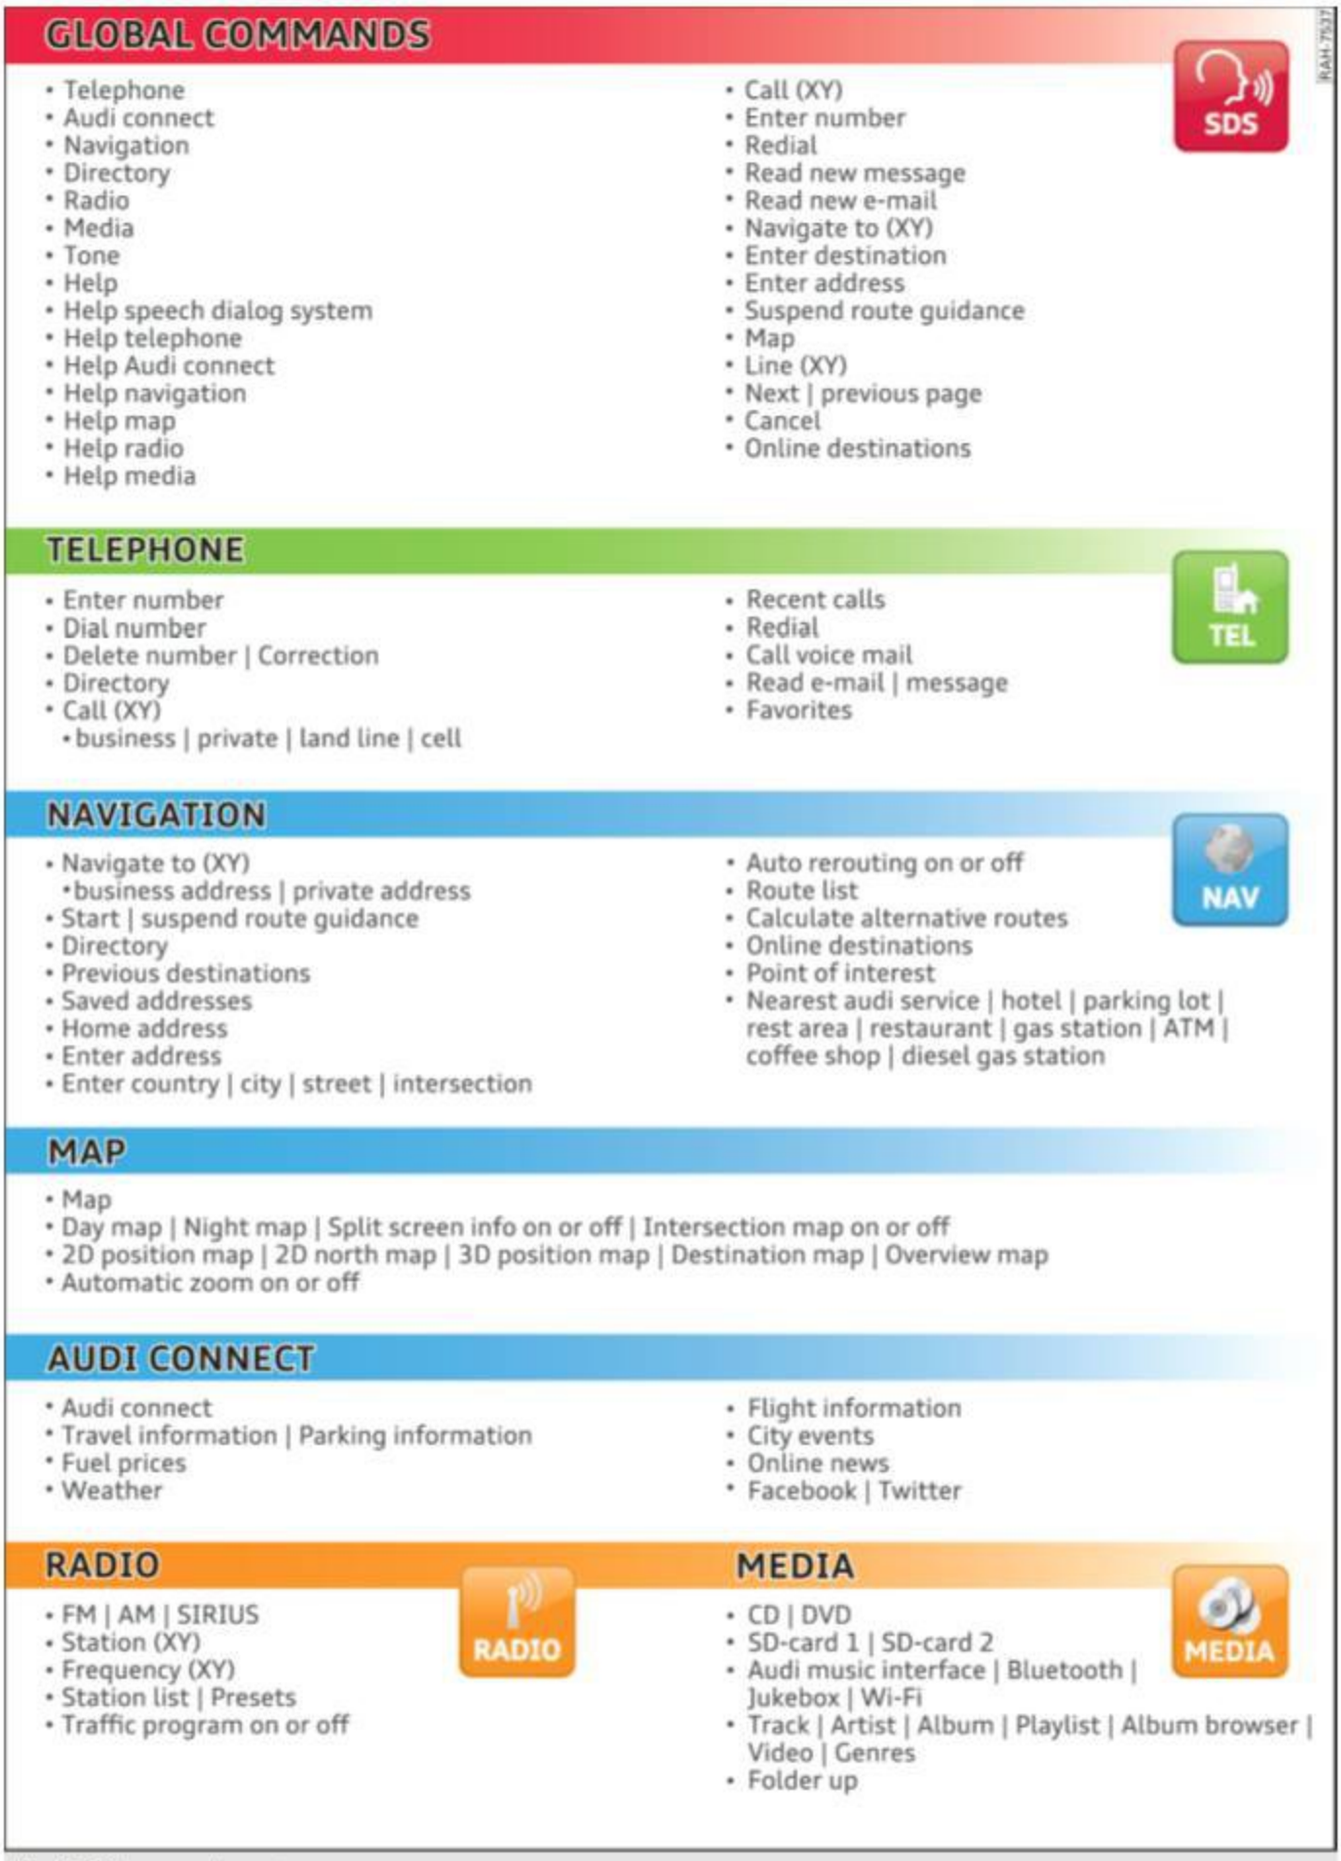


Fig. 13 Command overview

Voice recognition system

Operating

Applies to vehicles: with voice recognition system

You can operate many Infotainment functions comfortably using voice operation.



Fig. 14 Talk button and right thumbwheel

Requirement: The ignition and the MMI must be switched on ⇨ *page 7*, there must be no phone call in progress and the parking system must not be active.

- ▸ **Switching on**: Press the button ⇨ *fig. 14* on the multifunction steering wheel* briefly and say the desired command after the **Beep**.
- ▸ **Switching off:** Press and hold the button. **Or**: Press one of the buttons to open a menu on the MMI control panel (6) ⇨ *page 5, fig. 1*.
- ▸ **Cancel**: Press the button and say a new command. **Or**: Say the command **Cancel**.

Input assistance

The system gives visual and audio confirmation of your input.

- **Visual input assistance**: After turning on speech input, a display with a selection of possible commands appears in the MMI display. The command display can be tuned on or off in the main menu using the **Setup MMI** > **Speech dialog system** control button.
- **Audio input assistance**: To have the possible commands read, turn the voice recognition system on and say **Help**.

For the system to understand you:

Speak clearly and distinctly at a normal volume. Speak louder when driving faster.

Pronounce the commands evenly and do not leave long pauses.

Do not speak a command when the voice recognition system is making an announcement.

Close the doors, the windows and the sunroof* to reduce ambient noise. Make sure that passengers are not speaking when you are giving a voice command.

Do not direct the air vents toward the hands-free microphone near the front interior lights on the headliner.

Only use the system from the driver's position since the hands-free microphone is oriented toward that position.

Additional settings

Additional settings such as **Individual speech training** to your voice, the **Command display** or the **voice recognition volume** can be adjusted in the main menu using the **Setup MMI** control button ⇨ *page 33*.

WARNING

- Direct your full attention to driving. As the driver, you have complete responsibility for safety in traffic. Only use the functions in such a way that you always maintain complete control over your vehicle in all traffic situations.
- Do not use voice recognition system in emergencies because your voice may change in stressful situations. It may take longer to dial the number or the system may not be able to dial it at all. Dial the emergency number manually.

Tips

- The dialog stops when there is an incoming phone call and will continue if you ignore the call. The dialog is canceled if you answer the call. ▸

– Voice guidance* prompts do not play when a dialog is active.
– You can select an item in the list using either the voice recognition system or with the control knob.

Information about the command overviews

Applies to vehicles: with voice recognition system

The following overviews describe the commands that can be used to operate the MMI using the voice recognition system.

Alternative commands are separated using a "|", for example say: **Telephone** | (or) **Directory** | (or) **Radio**.

Action commands that belong together are identified with a ">", for example say: **Enter address** > (then) **Enter country**.

The majority shown are main commands. This system also recognizes synonyms in certain cases. For example, for **Business address**, you can also say **Office address**, **Business**, **Office** or **Work**.

Global commands

Applies to vehicles: with voice recognition system

You can always use the global commands, regardless of the menu selected.

Function	Say:
Calling up a menu	**Telephone** | **Directory** | **Navigation** | **Radio** | **Media** | **Audi connect** | **Car** | **Tone**
Say the commands that are possible	**Help** | **Help speech dialog system** | **Help telephone** | **Help navigation** | **Help map** | **Help radio** | **Help media** | **Help Audi connect**
Telephone functions	**Call (XY)**, for example **Call Ralf Schmidt** | **Enter number** | **Redial** | **Directory** | **Read new message** | **Read new e-mail**
Navigation functions	**Navigate to (XY)**, for example **Navigate to Ralf Schmidt** | **Enter address** | **Cancel route guidance** | **Map** | **Online destinations** | **Online destination (XY)**
Selecting an entry from a list	**Line (XY)**
Scroll through a list	**Next page** | **Previous page**
Switching the voice recognition system off	**Cancel**

Telephone

Applies to vehicles: with voice recognition system and telephone

Requirement: A cell phone must be connected to the MMI ⇨ *page 36* and the **Telephone** menu must be called up ⇨ *page 37*.

Function	Say:
Call a contact from the directory	**Call (XY)**, for example **Call "John Smith"**
Select a specific contact number	**Call (XY) business** | **private** | **land line** | **cell**, for example **Call Ralf Schmidt private**

▶

Function	Say:
Selecting a phone number with an address card open	**Call** | **Call business** | **Call private** | **Call land line** | **Call cell phone business**
Display recent calls	**Recent calls**
Call the last number dialed	**Redialing**
Selecting a phone number	**Enter number** > *After being prompted, say the telephone number in groups of individual numbers*, for example. **0172 12 345 67** > **Dial**
Correcting the phone number that was entered	**Delete number** | **Correction**
Show contact information	**Directory** > *when prompted, say the desired contact*, for example **John Smith**
Calling up favorites	**Favorites** > **Line (XY)**
Listening to messages	**Call voice mail**

Tips

– Contacts in the directory can selected using the full name (“First name last name” and “last name, first name”) as well as with only the first or last name. This applies to cell phones that transmit names separated into first and last names.

– For more information on the supported cell phones visit www.audi.com/bluetooth or your authorized Audi dealer.

Audi connect

Applies to vehicles: with voice recognition system and Audi connect

Requirement: The requirements for Audi connect must be met ⇨ *page 48*.

Function	Say:
Calling up Audi connect services	**Audi connect** > *follow the system prompts*
Audi connect services	**City events** | **Fuel prices** | **Flight information** | **Travel information** | **Online news** | **Parking information** | **Weather** | **Twitter** | **Facebook**
Search areas for Audi connect services	**Vicinity of destination** | **Immediate vicinity** | **In new city**

Tips

Refer to the notes in the chapter **About Audi connect** ⇨ *page 55*.

Messages (Audi connect)

Applies to vehicles: with voice recognition system and Audi connect

Requirement: The requirements for Audi connect must be met ⇨ *page 48*. ▶

Function	Say:
Read messages	**Read text message** | **Read e-mail**
Forward message	**Forward text message**

Tips

– Refer to the notes in the chapter **About Audi connect** ⇨ *page 55*.

Navigation

Applies to vehicles: with voice recognition system and navigation system

Requirement: The **Navigation** menu must be called up ⇨ *page 57*.

You can say the following commands to enter a destination:

Function	Say:
Calling up a navigation list	**Last destinations** | **Saved addresses**
Calling up the home address	**Home address**
Entering a destination type	**Enter destination** > *the destination type*, for example "**Enter address**"
Entering an address with guidance from the system	**Enter address** > *follow the system prompts*
Entering an address directly	**Enter address** > *the house number, the name of the street and the city*, for example "Berlin Bahnhofstraße 2"
Individual commands for entering a destination	**Enter address** > **Enter country** | **Enter city** | **Enter ZIP code** | **Enter street** | **Enter intersection** | **Enter house number** | **Enter downtown**
Making a correction while entering a destination	**Correction**
Navigating to an contact	**Navigate to (XY)**, for example **Navigate to Ralf Schmidt**
Navigating to a certain address for a contact	**Navigate to (XY) business address** | **private address**, for example **Navigate to Ralf Schmidt business address**
Navigating to a saved address	**Saved address** > **Line (XY)** > *start route guidance when prompted*
Starting route guidance with an address card open	**Navigate** | **Navigate to private address** | **Navigate to business address**
Changing an address while route guidance is active	**Enter address** > *enter the desired address when prompted* > *confirm the new destination if prompted*
Adding a stopover when route guidance is active	**Enter address** > *enter desired address when prompted* > **Add as stopover**
Starting route guidance after entering a destination	**Start route guidance**
Canceling current route guidance	**Cancel route guidance**
Calculate three alternative routes	**Calculate alternative routes**

▶

Function	Say:
Entering a point of interest by selecting a search area with guidance from the system	**Point of interest** > *search area when prompted* > *category or subcategory when prompted*,for example “Restaurant”
Destination input categories	**Audi Service** | **ATM** | **Coffee Shop** | **Hotel** | **Restaurant** | **Gas Station** | **Diesel Gas Station*** | **Parking Lot** *etc.*
Entering a point of interest by selecting a search area directly	*Point of interest and search area,* for example “**search gas stations in immediate vicinity**”
Search areas for entering points of interest	**Immediate vicinity** | **Along the route** | **Vicinity of destination** | **Vicinity of stopover** | **In new city** | **Nationwide** | **In new country**
The following points of interest can be entered directly as a destination	**Nearest Audi Service** | **Nearest ATM** | **Nearest Coffee Shop** | **Nearest Hotel** | **Nearest Restaurant** | **Nearest Gas Station** | **Nearest Diesel Gas Station*** | **Nearest Liquefied Petroleum Gas Station*** | **Nearest Charging Station*** | **Nearest Parking Lot**
Entering an online destination by selecting a search area with guidance from the system*	**Online destinations** > **Immediate vicinity** | **Vicinity of destination** | **In new city** > *the search term*
Entering an online destination by selecting a search area directly*	*Online destination and search area,* for example “**Online destination hotel on the ocean in immediate vicinity**”
Displaying online destination*	**Show in list** | **Show on map**

You can say the following commands for more settings in Navigation:

Function	Say:
General map options	**Map** | **Day map** | **Night map** | **Split screen info** | **Split screen info overview map** | **Split screen info off** | **Intersection map on/off**
Map type	**2D position map** | **2D north map** | **3D position map** | **Destination map** | **Overview map** | **Standard map** | **Google Earth map**
Automatic map zoom	**Automatic zoom** | **Automatic zoom off** | **Automatic zoom intersection**
Show route list	**Route list**
Showing the remaining distance/ time when route guidance is active	**Destination information**
Setting voice guidance for active route guidance	**Voice guidance on** | **Voice guidance off** | **Voice guidance shortened** | **Complete voice guidance** | **Traffic voice guidance**
Blocking the next section of the route	**Block route**
Blocking a certain section on the route	**Block route for (XY) miles**

Tips

– Destinations may have to be spelled when entered, depending on the country where you are located and which menu language you have selected.
– Refer to the notes in the chapter **About Audi connect** ⇨ *page 55*.

Radio

Applies to vehicles: with voice recognition system

Requirement: The **Radio** menu must be called up ⇨ *page 70*.

Function	Say:
Selecting frequency band	**FM** | **AM** | **SiriusXM***
Choosing a station from the station list	**Station (XY)** | **Station list** > **Line (XY)**
Choosing a station from the presets list	**Presets** > **Line (XY)**
Selecting the frequency	**Frequency (XY)**

Media

Applies to vehicles: with voice recognition system

Requirement: The **Media** menu must be called up ⇨ *page 73*.

Function	Say:
Selecting a source directly	**Jukebox** | **CD** | **SD card 1** | **SD card 2** | **Audi music interface** | **Bluetooth** | **DVD** | **Wi-Fi**
Selecting an audio/video file* in the Jukebox	**Video** | **Playlists** | **Artist** | **Album** | **Tracks** | **Genres** | **Album browser**
Selecting an iPod audio/video file* (source Audi music interface)	**Video*** | **Playlists** | **Artist** | **Album** | **Tracks** | **Podcasts** | **Genres** | **Composers** | **Audio books**
Navigating a folder structure/list	**Folder up** | **Line (XY)**

Media drives/ connections

Introduction

There are various media drives and connections available in the MMI. For example, you can play audio/video files* through the Jukebox, or you can connect a portable audio device to the Audi music interface and use it through the MMI.

Notes

General information

Media and format restrictions: The MMI (including the SD card reader and the USB storage device connection*) was tested with a variety of products and media on the market. However, there may be cases where individual devices/media and audio/video files* are not recognized or may play only with restrictions or may not play at all.

Data protection: Note that audio/video files* are subject to copyright laws.

The media drives do not play files protected by DRM and that are identified with the symbol.

Data security: Never store important data on the memory cards, the Jukebox, CDs/DVDs or portable audio devices. Audi is not responsible for damaged or lost files and media.

Loading times: The more files/folders/playlists that are on a storage medium, the longer it will take to load the audio/video files*. Audi recommends using storage media that only contain audio/video files*. To decrease the time it takes to load audio/video files*, create subfolders (for example according to artist or album). The loading time will also increase when importing files.

Additional information: When played, audio files are automatically displayed with any additional information that is stored (such as the artist, track and album cover). If this information is not available on the storage medium, the MMI will check the Gracenote metadata database. However, in some cases, the additional information may not be displayed.

Restricted function: If functionality is restricted, reset the **Media** settings to the default factory settings ⇨ *page 33*.

If functionality is restricted, reset the Jukebox to the default factory settings ⇨ *page 33*.

For information on the properties of supported media and file formats, refer to ⇨ *page 28*.

CD/DVD mode

CD/DVD and format restrictions: The functionality of individual storage media may be limited due to the variety of blank CDs/DVDs available and the various capacities. Audio CDs or video DVDs with copy protection, CDs/DVDs that do not conform to the standard, and multisession CDs may not play or playback may be limited. Audi recommends finalizing the recording process when creating multisession CDs. Multisession is not supported for DVDs.

Handling CDs/DVDs and the DVD drive: To ensure good, high-quality sound reproduction and to prevent damage to the drive or disc reading errors, always store CDs/DVDs in a protective sleeve and do not expose them to direct sunlight. Do *not* use:

– Damaged, dirty or scratched CDs/DVDs
– Single CDs/DVDs (3 inch/8 cm diameter)
– CD/DVDs that are not round
– CDs/DVDs with labels
– Protective rings
– Cleaning CDs

Thermal protection switch: CD/DVD playback may be temporarily unavailable if outside temperatures are extremely hot or cold. A thermal protection switch is installed to protect the CD/DVD and the laser.

Laser devices: Laser devices are divided into safety classes 1 to 4 in accordance with DIN IEC 76 (CO) 6/VDE 0837. The optical readers ▶

that are installed conform to safety class 1. The laser uses so little power or is shielded so there is no danger when it is used correctly.

Cover: Do not remove the cover from the device. The device does not contain any parts that the owner can repair.

SD card reader

The SD card reader is located in the glove compartment.

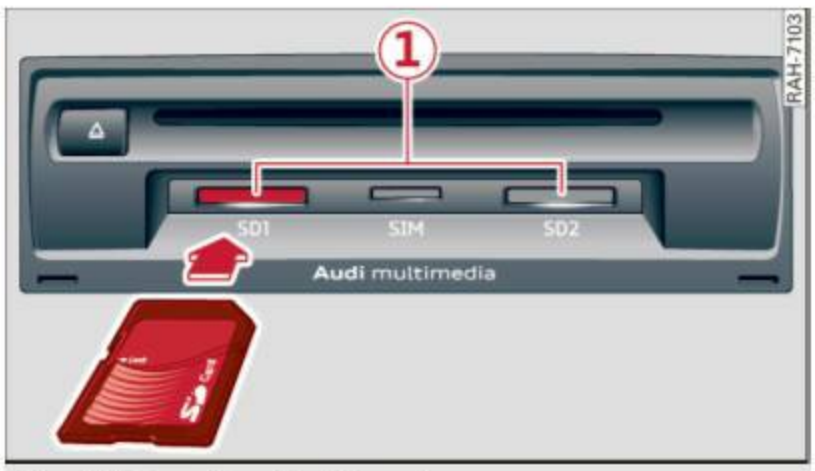


Fig. 15 Inserting the SD card

– **Inserting the SD card**: Slide the SD card in the card reader slot with the label side up (contact surface facing down) (1) ⇨ *fig. 15*. The angled corner of the SD card must point toward the right front. Then push the SD card into the slot until it clicks into place.
– **Removing the SD card**: Press briefly on the SD card. The card is released.

The SD card reader is started and operated through the MMI ⇨ *page 73*.

Note

Only use one-piece SD cards. If adapter cards (SD cards with more than one piece) are used, the card could fall out of the adapter when driving because of vibrations. Individual pieces could then become stuck in the drive and affect the functionality.

Tips

Always keep the SD card in a suitable case to protect it from dirt, dust particles and other damage.

DVD player

The DVD drive is located in the glove compartment.

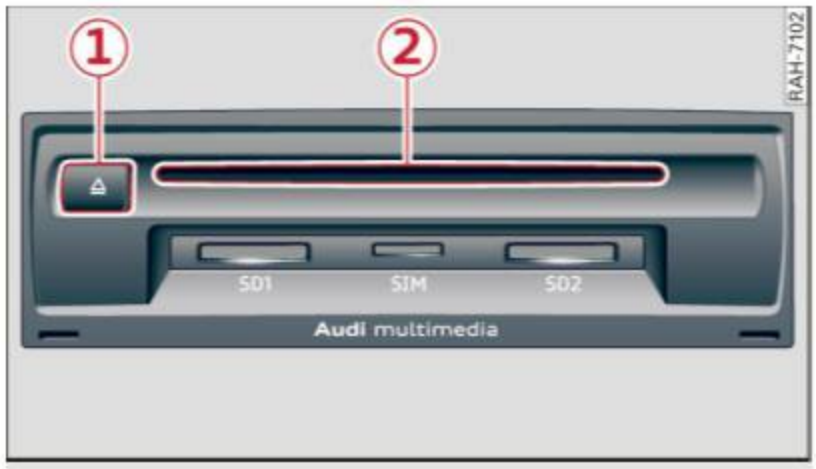


Fig. 16 DVD drive

– **Loading a CD/DVD**: Slide the CD/DVD straight into the DVD slot (2) with the label facing up ⇨ *fig. 16*.
– **Ejecting a CD/DVD**: Press button (1).

The CD/DVD is pulled in again automatically if it is not removed from the DVD slot within ten seconds of ejecting it.

The DVD drive is started and operated through the MMI ⇨ *page 73*.

Note

– Never force a CD/DVD into the drive. The CD/DVD is pulled in automatically.
– Do not insert CDs/DVDs with labels into the drive. Labels can come loose from the CD/DVD and damage the drive.

Tips

The CD/DVD playback can skip with audio files that have a higher data rate.

Jukebox

Audio/video files from a CD/DVD-ROM, a USB storage device or an SD card can be copied to the Jukebox.

▸ Select: MEDIA button > **Settings** control button > **Add to/clear Jukebox**.

The used/free Jukebox memory (maximum 10 GB) as well as the number of stored tracks appear in the MMI display. ▶

Adding to the Jukebox

– **Selecting files/folders**: Select **Copy data to Jukebox** > *Source* > *Files/Folder*. Press the **All** control button to select all files/folders. **Or**: Select and confirm a folder and press and hold the control knob. All files in the folder are selected for copying.
– **Starting the copying process**: Press the **Copy** control button. The status of the copying is shown in the MMI display and in the status bar (5) ⇨ *page 10*.
– **Hiding the copying process** Select and confirm **Continue copying in background**. The copying process is hidden.
– **Canceling the copying process**: Select and confirm **Cancel copying**: **Or**: Remove the source that is being imported. Files already copied remain.

The audio files are automatically sorted into the media center categories using the stored additional information when importing ⇨ *page 74*. The copied video files are stored in the media center under the **Videos** category.

Clearing the Jukebox

Requirement: The Jukebox contains audio/video files.

– **Selecting files/folders**: Select **Delete data from jukebox** > *Jukebox folder structure* > *Files/folders*. Press the **All** control button to select all files/folders. **Or**: Select and confirm a folder and press and hold the control knob. All files in the folder are selected for deleting.
– **Deleting files/folders**: Select the **Start deleting** control button > **Yes, delete files**. The status of the deleting process is shown in the MMI display. Jukebox playback stops during the deletion process and starts again automatically once the deletion is complete.

The Jukebox is started and operated through the MMI ⇨ *page 73*.

Note

Do not import audio/video files when the engine is turned off because this will drain the vehicle battery.

Tips

– Tracks from audio CDs cannot be copied onto the Jukebox for legal reasons.
– Files already imported are recognized and will be grayed out.
– It is not possible to play audio/video files in the DVD drive while copying them.
– The Jukebox does not provide an export function due to legal reasons.
– Files/tracks without stored information are listed as **Unknown**. Audi recommends adding additional information (such as ID3 tags) to audio files.
– Files copied on the Jukebox have the following specifications: mp3, 256 kbs/s CBR, 44.1kHZ.
– Please note that audio/video files are subject to copyright laws. Reset the Jukebox to the original default settings when selling your vehicle.

Bluetooth audio player

Applies to vehicles: with Bluetooth

You can play music wirelessly from your cell phone through the MMI using the Bluetooth audio player.

Requirement: The vehicle must be stationary. The Bluetooth function on the portable audio player and the MMI **Audio player** must be switched on.

Pairing the Bluetooth audio player

▸ Select: Select: MEDIA button > **Source** control button > *Bluetooth audio player* > **Connect new Bluetooth audio player**.

The available Bluetooth audio players are displayed.

▸ Select and confirm the desired Bluetooth audio player from the list.
▸ Select and confirm **Audio player**. The MMI generates a PIN to pair. ▶

▸ Select and confirm **Yes**.
▸ Enter the PIN for the pairing on your cell phone. **Or**: If the PIN is already displayed on your cell phone, confirm it in the cell phone and in the MMI. The time allowed for entering the PIN is limited to approximately 30 seconds.

The media is started and operated through the portable audio device or the MMI depending on the device being used ⇨ *page 73*.

Tips

– Be sure to pay attention to any possible connection prompts on your Bluetooth audio player.
– You only have to pair one time. Bluetooth devices that are already paired automatically connect to the MMI when they are within range and the ignition is switched on.
– Several devices can be connected to the MMI, but only one device can be active.
– Bluetooth A2DP and AVRCP (1.0/1.3) are supported.
– The functions supported in media mode depend on the Bluetooth audio player being used.
– For additional information on supported devices, visit www.audiusa.com or see your authorized Audi dealer.

Wi-Fi audio player

Applies to vehicles: with Audi connect

Wi-Fi capable media players (such as smart phones) can be connected via Wi-Fi hotspots and are controlled with the MMI. Using a UPnP server app, you can access the media center on your Wi-Fi audio player.

Requirement: The Wi-Fi function of the Wi-Fi audio player and the MMI must be activated, a network connection must be configured ⇨ *page 54* and the UPnP server app must be installed on your Wi-Fi audio player.

– **Connecting a Wi-Fi audio player**: Select the MEDIA button > **Source** control button > **Wi-Fi audio player** . A message will appear in the MMI display saying there is no Wi-Fi audio player connected to the MMI. Select **Wi-Fi connection settings**. The access data for the Wi-Fi hotspot is displayed ⇨ *page 53*.
– Select the settings for the Wi-Fi hotspot for the Wi-Fi audio player being used.
– Start the UPnP server app on your Wi-Fi audio player or give media permissions on your device.
– The first song in the media center on your Wi-Fi audio player begins playing.

The Wi-Fi audio player is operated through the MMI ⇨ *page 73*.

The Wi-Fi audio player only needs to be paired one time to the MMI using the Wi-Fi hotspot. Depending on the Wi-Fi audio player being used, an already paired device will connect automatically with the MMI if it is within range.

Up to eight Wi-Fi devices may be connected via the MMI Wi-Fi hotspot, but only the first active Wi-Fi audio player may be selected as the source in the media drive.

WARNING

– As the driver, do not allow usage of the Wi-FI hotspots to distract you from driving, as it could increase the risk of an accident.
– It is only safe to use laptops and similar mobile devices when the vehicle is stationary because, like all loose objects, they could be thrown around the inside of the vehicle in a crash and cause serious injuries. Store these types of devices securely while driving.
– Do not use any Wi-Fi devices on the front seats within range of the airbags while driving. Read and follow the safety precautions in the separate vehicle owner's manual in the "Airbag System" chapter under "Important information about the front airbag system".

▶

Note

You are responsible for all precautions taken for data protection, anti-virus protection and protection against loss of data on mobile devices that are used to access the Internet through the Wi-FI hotspot.

Tips

- Be sure to pay attention to any possible connection prompts on your Wi-Fi audio player.
- For more information about the Wi-Fi audio player and supported devices, visit www.audiusa.com or contact an authorized Audi dealer.
- Refer to the notes in the chapter **About Audi connect** before starting the system ⇨ *page 55*.
- To avoid interruptions from the audio playback, deactivate the energy saving function on the Wi-Fi audio player or connect it to a charger.
- The loading times for the audio data depend on the Wi-Fi audio player used and the number of files that it contains.
- A maximum of 2000 entries per directory are displayed in the MMI display.

Audi music interface

Introduction

You can connect a portable audio device (such as an iPod or USB storage device) to the Audi music interface using a special adapter cable. You can purchase adapter cables* from an authorized Audi dealer or at specialty stores.*

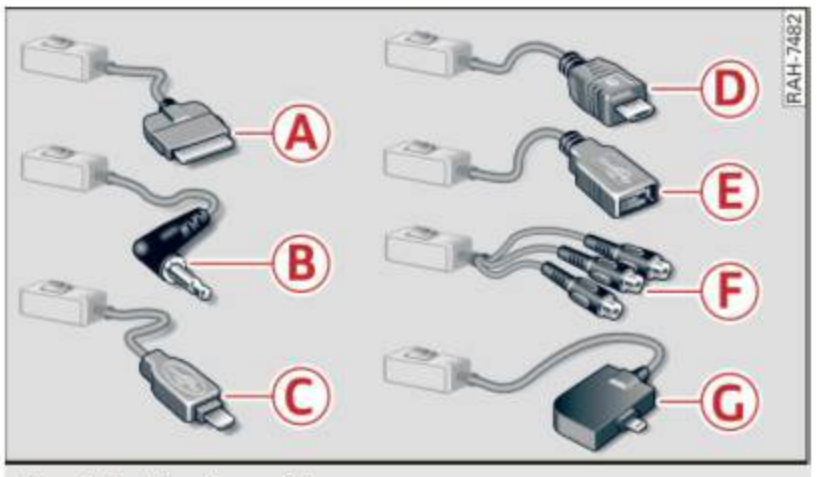


Fig. 17 Adapter cable

Ⓐ iPod adapter cable*/iPod adapter cable plus*

Ⓑ 3.5 mm stereo jack adapter cable*

Ⓒ Mini USB adapter cable*

Ⓓ Micro USB adapter cable*

Ⓔ USB adapter cable*

Ⓕ AV adapter cable*

Ⓖ Adapter cable for Apple devices with Lightning connector*

Note

Handle the adapter cable carefully. Do not allow it to be pinched.

Starting

The Audi music interface is located in the center console under the center armrest.

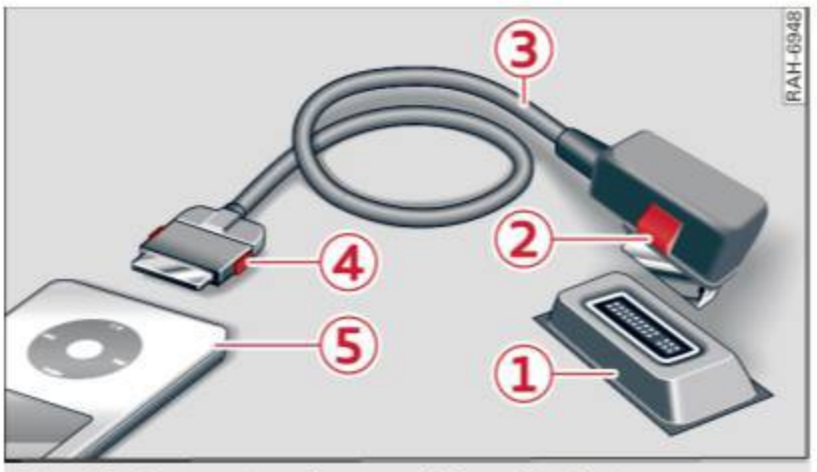


Fig. 18 Connecting the portable audio device

- **Connecting the adapter cable**: Connect the adapter cable * Ⓒ ⇨ *fig. 18* with the interface on Audi music interface ① and then connect with the portable audio device ⑤ (such as an iPod).
- **Disconnecting the adapter cable from the Audi music interface**: Hold the release catch ② down while disconnecting the jack from the Audi music interface.
- **Disconnecting the iPod adapter cable (plus)* from the iPod**: Hold the release catches ④ down while disconnecting the iPod jack from the iPod.

The media is started and operated through the portable audio device or the MMI depending on the device being used ⇨ *page 73*. ▶

Note

– Remove the connector from the Audi music interface carefully so it is not damaged.
– Extremely high or low temperatures which can occur inside vehicles can damage portable audio devices or affect their performance. Never leave a portable audio device in the vehicle in extremely high or low temperatures.

Tips

– Do not use USB extension cables or adapters. They may affect the functionality.
– Functionality is not guaranteed for portable audio devices that do not meet the USB 2.0 specification.
– MTP players and USB hubs are not supported.
– When the vehicle ignition is on, the iPod/iPhone/iPad battery charges through the iPod adapter cable (plus)* once the device is connected to the Audi music interface.
– Only use the iPod/iPhone/iPad adapter cable (plus)* with a red or blue marking to connect the iPod.
– Other iPod versions such as the iPod shuffle cannot be connected with the iPod adapter cable (plus)*. Connect these devices using the optional 3.5 mm stereo jack adapter cable*.
– Some iPod functions, for example, rating music tracks, Cover Flow or adding tracks to the “On-the-go” playlist are not supported. Cover display and video playback are only supported by the iPod adapter cable plus* (red marking).
– For video playback, you can also connect your iPod to the Audi music interface using the optional AV adapter cable*. To connect the iPod to the AV adapter cable*, you also need an Apple AV cable. For more information on the Apple AV cable, refer to your iPod user guide.
– The new Apple Lightning connector does not support video playback.
– For more information about the Audi music interface and supported devices, visit www.audi.com/bluetooth or contact an authorized Audi dealer.
– iPod/iPhone/iPad malfunctions also affect the operation of the MMI. Reset your iPod/iPhone/iPad if this happens.
– For important information on operating your iPod/iPhone/iPad, refer to your iPod/iPhone/iPad owner's manual. Audi recommends updating the iPod/iPhone/iPad software to the latest version.

Supported media and file formats

The CD/DVD drive, Jukebox, SD card reader and USB storage device connection support the following audio/video file properties:*

	Audio files			Video files			
File extension	.mp3	.wma; .asf	.m4a; .m4b; .aac	.mpg; .mpeg	.avi	.mp4; .m4v; .mov	.wmv
Format	MPEG 1/-2 Layer 3	Windows Media Audio 9 and 10	MPEG-2/-4	MPEG-1/-2	ISO-MPEG4; DivX 3, 4 and 5; Xvid	ISO-MPEG4 H. 264 (MPEG4 AVC)	Windows Media Video 9
Playlists	.M3U; .PLS; .WPL; .M3U8; .ASX						

▶

	Audio files	Video files
File system	SD/SDHC/SDXC/MMC memory cards USB storage drive: exFAT, FAT or FAT32, NTFS file system USB storage drive: maximum 4 partitions DVD drive: ISO9660, Joliet, UDF	
Characteristics	up to maximum 320 kbit/s and 48 kHz sampling frequencies	up to maximum 2,000 kbit/s and 720 x 576 px. at maximum 25fps
Number of files	**DVD drive:** max. 1000 files per medium **Jukebox** (max. 10 GB memory): max. 3000 files can be copied; **USB storage device and memory cards**: max. 10000 files per medium	
Supported media	**SD cards**: with a capacity up to 64 GB; **DVD drive**: Audio CDs (up to 80 min.), CD-ROMs with a capacity up to 700 MB; DVD±R/RW; Standard video DVD and video DVD-compatible DVD audio; **Audi music interface**: portable player (such as an iPod ⇨ *page 27*, MTP player, USB storage device in "USB Device Subclass 1 and 6", that conform to USB 2.0: USB sticks, USB MP3 players, that do not have any special driver software, external USB flash drives and hard drives)	
Album covers	**Album covers** up to 800x800 px. (GIF;JPG;PNG): the album cover for the media will display, depending on availability	

Tips

– The media drives do not supported the Windows Media Audio 9 Voice format.
– For compressing MP3 files, Audi recommends a bit rate of at least 160 kbit/s. The display showing the remaining play time may differ for audio files with variable bit rate.
– Special characters (such as those in ID3 tag information) display differently depending on the system language and cannot always be guaranteed.
– The manufacturer of the storage device can provide information about its "USB Device Subclass".
– Some MTP player functions, such as rating music tracks and video playback, are not supported.

Troubleshooting

Problem	Solution
Audi music interface/Bluetooth audio player*: Portable player/ Bluetooth audio player is not supported.	Refer to the information on the Audi music interface ⇨ *page 27*/Bluetooth audio player* ⇨ *page 25*. You can learn about supported devices in the Audi database for mobile devices at www.audi.com/bluetooth.
Audi music interface: When starting the playback through the 3.5 mm stereo jack adapter cable*/AV adapter cable*, the volume is too high.	Adjust the volume of the portable audio device to approximately 70 percent of the maximum output (**Input level**) ⇨ *page 75*.

Problem	Solution
Audi music interface: The audio playback is malfunctioning when operated through the iPod/iPhone/iPad.	The **Audio player** function is switched **On**. Switch this function **Off** ⇨ *page 46*, if you are not using the Bluetooth audio player*.
Audi music interface: The portable audio device is not recognized as a source.	For some cell phones or audio players with a low battery charge, playback is not possible when the charge is too low (less than 5% of its capacity). The portable audio player will only be recognized as a source in the MMI after connecting if the battery charge is sufficient.
Audi music interface: There is static when connecting/disconnecting the 3.5 mm stereo jack*/AV adapter cable* or when connecting/disconnecting the portable audio device to the 3.5 mm stereo jack*/AV adapter cable*.	The Audi music interface source is already selected when connecting/disconnecting. Either mute the portable audio device or switch to another audio source (such as the radio ⇨ *page 70*) before connecting or disconnecting the portable player.
Bluetooth audio player*: Malfunctions during audio playback.	Only *one* interface should be actively used at a time to ensure problem-free playback.
Jukebox: Tracks on the imported playlist are grayed out.	When importing playlists, all of the files themselves must be copied.
Media center: Imported tracks cannot be played or found.	If you cannot find imported tracks in the media center, they may not be supported or may have been moved. To free up space in the memory, select the **Settings** control button > **Add to/clear Jukebox** > **Delete**, **Non-playable files** folder.

System settings

Setting the time/date

You can set the clock time manually or using the GPS.*



Fig. 19 Setting a time zone

▸ Select: MENU button > **Time** control button.

Time

The **Time** can be set manually. The **Time source*** must be adjusted to **Manual** to do this.

Date

The **Date** can be set manually. The **Time source** must be adjusted to **Manual** to do this.

Time source*

Manual: All time functions are set manually.

GPS: The time and date are set by GPS depending on the time zone that was selected manually. Always remember to set the new **Time zone** in the MMI as well if you change time zones with the vehicle.

Auto. daylt. saving time*

When daylight saving time is switched **on**, the time is moved forward or back automatically by one hour when daylight saving time begins or ends.

Man. daylt. saving time

When the function is switched **on**, an hour is added to the set **Time**.

Time zone

When selecting the appropriate time zone, a sampling of countries in this zone will be listed.

Time format

If you select **24h**, the clock will display, for example, **13:00**. If you select **AM/PM**, the clock will display, for example, **1:00 PM**.

Date format

If you select **DD.MM.YYYY**, the date display will show, for example, **31.12.2013**. If you select **MM/DD/YYYY**, the date display will show, for example, **12/31/2013**. If you select **YYYY-MM-DD**, the date display will show, for example, **2013-12-31**.

Adjusting the sound

The sound distribution and volume of the MMI can be adjusted individually. The settings depend on vehicle equipment.

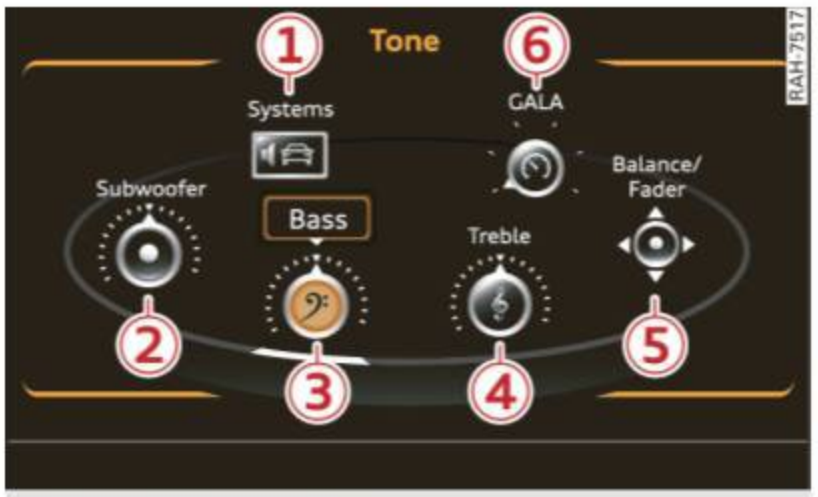


Fig. 20 Sound settings



Fig. 21 Adjusting the balance/fader

▸ Select: MENU button > **Tone**.

① Systems

The volume of the **Telephone***- and **Navigation** functions*, the **Speech dialog system**, the **Traffic announcements** and the **Parking aid*** can be adjusted individually ⇨ *page 32*.

② Subwoofer / ③ Bass / ④ Treble

You can adjust the **Subwoofer**, **Bass** and **Treble** settings by turning the control knob. The changed settings only apply for the audio source that is active at the time. This allows you to adjust the sound settings for each audio source separately.

⑤ Balance/Fader (sound distribution)

- **Adjusting the left/right sound distribution ratio**: Select and confirm **Balance**. Turn the control knob to the left or right to the desired position.
- **Adjusting the front/rear sound distribution ratio**: Select and confirm **Fader**. Turn the control knob to the left or right to the desired position.
- **Adjusting the sound distribution ratio with the MMI touch**: Move your finger in the desired direction on the MMI touch touchscreen.
- **Adjusting the sound distribution***: Select and confirm **Focus** > **All** (symmetrical sound distribution)/**Front**/**Rear** (for a sound distribution oriented toward the front/rear of the vehicle).

⑥ SDV (speed dependent volume control)

You can adjust how much the volume changes to compensate for noise inside the vehicle by turning the control knob.

Surround*

You can adjust the volume of the surround effect by turning the control knob.

Telephone*

Ringtone: see ⇨ *page 45*

Ringtone volume/Microphone sensitivity: You can adjust the selected ringtone volume/call volume by turning the control knob. The volume of the phone conversation (**Microphone sensitivity**) can only be adjusted during a call.

Message volume: The volume of the notification tone when a text message arrives can be adjusted by turning the control knob.

Speech dialog system

You can adjust the volume of the announcements by turning the control knob.

Navigation*

Voice guidance: refer to ⇨ *page 66*

Voice guidance during call: refer to ⇨ *page 66*

Voice guidance volume/Entertainment volume: Volume of voice guidance during active route guidance. Entertainment volume reduction means that the volume of audio playback is temporarily lowered when the parking aid or voice guidance is active.

MMI touch

The volume of the MMI touch voice prompts can be adjusted by turning the control knob.

Parking system*

You can adjust the signal tone volume by turning the control knob.

Adjusting system volume

▸ Select: MENU button > **Tone** > **Systems**.

Restarting the MMI (Reset)

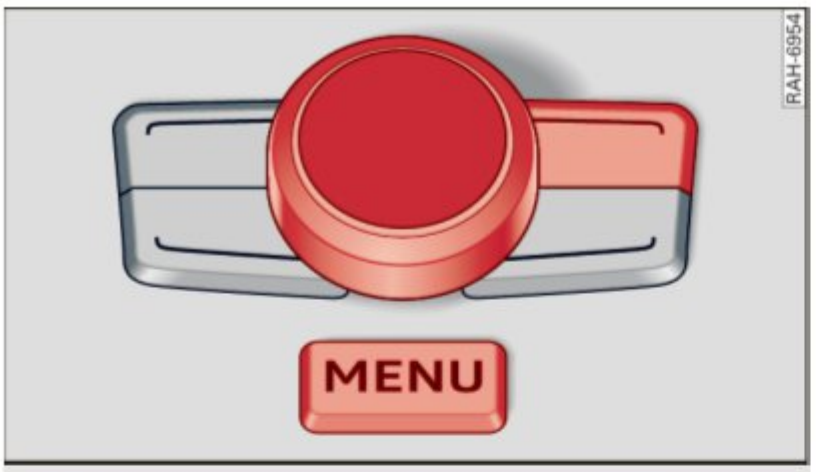


Fig. 22 Button combination to restart the MMI

- Press and hold the MENU button, the control knob and the upper right control button ⇨ *fig. 22 at the same time* briefly and then release the buttons.

Additional settings

- Select: MENU button > **Setup MMI** control button.

Language

The displays in the MMI display and driver information system and the language for the voice guidance* and voice recognition system* can be changed.

English, French and Spanish are available.

Units of measurement

The following measurement units can be set in the MMI display and driver information system.

– **Speed** (mph or km/h)
– **Distances** (miles or kilometers)
– **Temperature** (°F or °C)
– **Pressure** (psi or bar)
– **Fuel consumption** (mpg (US), l/100 km, mpg (UK) or km/l)
– **Volume** (gallon (US), liter or gallon (UK))

Speech dialog system*

Command display: The display of possible commands during voice input can be turned **on**- or **off**.

Short dialog: Prompts in a shorter format can be turned **on** or **off**.

Volume settings: You can adjust the volume of the announcements by turning the control knob.

Individual voice training (only when the vehicle is stationary): You can adapt the voice recognition system to your voice or pronunciation in order to improve the system's ability to recognize your speech. Individual training is comprised of 20 speech entries that consist of commands and sequences of numbers. You can delete the programmed speech training using **Reset speech training**.

Display brightness

You can adjust the MMI display brightness by turning the control knob.

Factory settings

The following functions can be reset to the default factory settings:

– **Sound settings**
– **Radio**
– **Media**
– **Hard drive contents**
– **Phone book***
– **Telephone***
– **Bluetooth***
– **Navigation settings***
– **Navigation and online memory***
– **Speech dialog system***
– **Data encryption password**

You can select the desired functions individually or all at once with the option **Select all entries**. Select and confirm **Restore factory settings**.

System update

The MMI software can be updated using the system update.

– Slide the storage device with the update data into the drive ⇨ *page 23*.
– Select and confirm the drive > **Start update**. ▶

The duration of the process depends on the size of the update.

For more information about the **System update**, visit www.audi.com/bluetooth or contact an authorized Audi dealer.

For more information about the navigation map update service*, visit www.audiusa.com or contact an authorized Audi dealer.

Reset media driver

The selected media driver package is reset to the settings at time of delivery.

Data encryption

You can protect your personal data such as contacts in the directory or navigation destinations* with a personal password. If the unit is replaced, you can only transfer your personal data to the new MMI unit using your password.

Version information

Information on the software version of the MMI and the navigation database* is displayed. The **Software info** function also provides information on the software contained in the MMI and the licensing agreement.

Making a phone call

Introduction

Applies to vehicles: with telephone

Telephone mode

To make calls through the MMI system, you must connect your phone to the MMI with Bluetooth. After connecting your phone to the MM with Bluetooth, you can use the telephone functions comfortably through the MMI.

WARNING

- Medical experts warn that cell phones can interfere with the function of pacemakers. Always maintain a minimum distance of 20 centimeters between the cell phone antenna and the pacemaker.
  - Do not carry the cell phone in a pocket directly over the pacemaker when the phone is switched on.
  - Switch the cell phone off immediately if you suspect it may be interfering with the pacemaker.
- Do not use voice recognition system ⇨ *page 17* in emergencies because your voice may change in stressful situations. It may take longer to dial the number or the system may not be able to dial it at all. Dial the emergency number manually.
- Switch your cell phone off in areas at risk for an explosion. These locations are not always clearly marked. They may include gas stations, equipment that stores or transports fuel or chemicals, or locations where fuel vapors (such as propane or gasoline vapor in vehicles or buildings), chemicals or large quantities of dust particles (such as flour, sawdust or metal) may be present in the air. This also applies to all other locations where you would normally switch your vehicle off.
- The demands of traffic require your full attention. Refer to and follow the guidelines provided in ⇨ *page 5, Traffic safety information*.

Note

- Obey all applicable laws regarding use of telephones in vehicles.
- Switch off the telephone where use of cell phones is prohibited. Obey all applicable instructions and regulations.

Tips

The Bluetooth connection range is limited to inside the vehicle. It also depends on the current circumstances and on interference with other devices.

Pairing a cell phone through Bluetooth

Before beginning

Applies to vehicles: with telephone



Fig. 23 This QR code takes you directly to the database for mobile devices (connection charges apply based on your mobile plan).

To learn which of the functions in your cell phone are supported, check with your cell phone service provider or the database for mobile devices at www.audi.com/bluetooth.

Connecting a cell phone

Applies to vehicles: with telephone

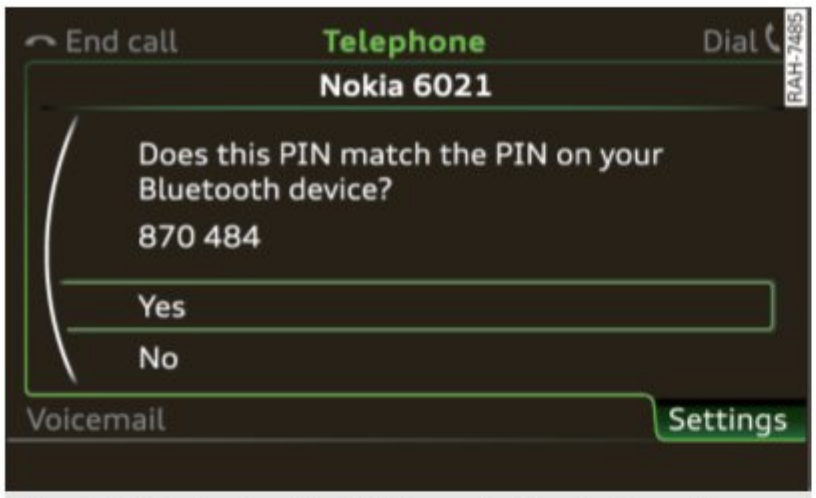


Fig. 24 Displaying the PIN for entering in the cell phone

Requirements

The vehicle must be stationary and the ignition must be switched on.

The Bluetooth function and visibility of the MMI ⇨ *page 46* and cell phone must be turned on.

The MMI and the cell phone to be paired must not be actively connected with any other Bluetooth devices.

Pairing a cell phone

- ▸ Select the TEL button > **Connect cell phone** > **Find new devices**. The available Bluetooth devices are shown in the MMI display. **Or**: Search for the MMI using the Bluetooth device search on your cell phone.
- ▸ Select and confirm the desired cell phone from the list of displayed Bluetooth devices.
- ▸ The MMI generates a PIN for the connection ⇨ *fig. 24*.
- ▸ Select and confirm **Yes**.
- ▸ Enter the PIN for the pairing on your cell phone. **Or**: If the PIN is already displayed on your cell phone, confirm it in the cell phone and in the MMI. The time allowed for entering the PIN is limited to approximately 30 seconds.

Pay attention if necessary to further system prompts displayed on your cell phone, for example if the system should connect automatically in the future. Depending on the cell phone, you may have to confirm downloading the directory separately.

After connecting successfully

After a successful connection, the signal strength bars (9) ⇨ *page 10, fig. 6* and the Bluetooth symbol (13) are displayed in the status line of the MMI display. In addition, the cell phone contacts will be automatically loaded in the MMI directory. Depending on the amount of contacts, this process can take several minutes.

Once all the memory locations are filled, you will be requested to replace the contacts of one cell phone when connecting another cell phone. With the option **Restricted use of telephone**, only contacts in the cell phone and the local memory in the MMI (public) are available ⇨ *page 42*.

Tips

- – Using the telephone through the MMI is only possible using the Bluetooth connection (**Handsfree**).
- – You only have to pair one time. Bluetooth devices that are already paired automatically connect to the MMI when they are within range and the ignition is switched on.
- – Authorizing the MMI connection in your cell phone will speed up the automatic connection.
- – Several cell phones can be connected to the MMI, but only one cell phone can be active.
- – An active connection with a Bluetooth device ends when another device is connected.
- – When leaving the vehicle, the Bluetooth connection to the cell phone is automatically ended.
- – You can obtain more information from your cell phone service provider or from your cell phone owner's manual. For information on using the telephone, visit www.audiusa.com/bluetooth or your authorized Audi dealer.

Using the Audi phone box

Applies to vehicles: with Audi phone box

With the Audi phone box and a USB adapter cable for your cell telephone, you can call via the vehicle antenna and charge your cell phone. Using the external antenna helps when there is a low signal and also provides better reception quality. The Audi phone box is located in the center console under the center armrest.*

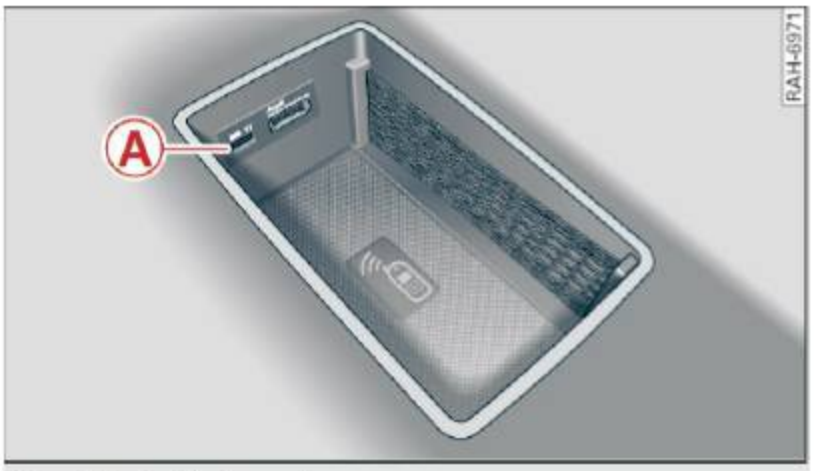


Fig. 25 Audi phone box

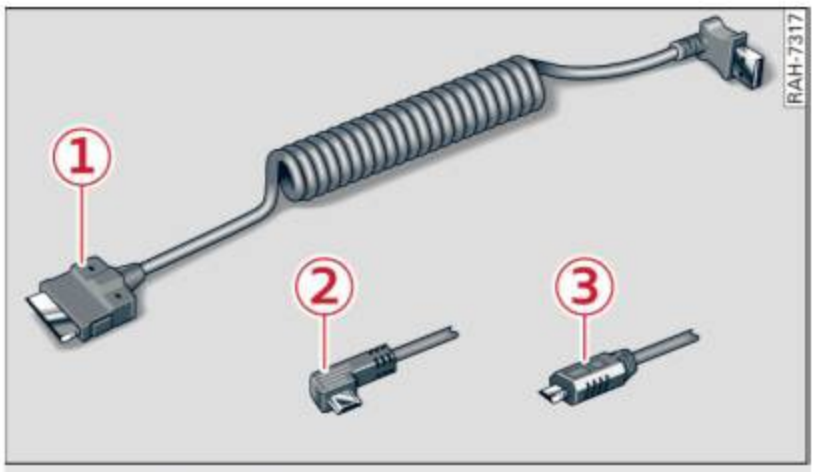


Fig. 26 Available adapter cable

Requirement: A cell phone must be connected via Bluetooth ⇨ *page 36*.

– **Connecting to the external vehicle antenna**: Lay the cell phone on the cell phone symbol in the Audi phone box with the display facing up. Make sure there are no objects between the Audi phone box and the cell phone.
– **Charging the cell phone with the USB adapter cable**: Connecting your cell phone with the USB adapter cable and the 5 Volt socket Ⓐ ⇨ *fig. 25*.

For ease of use, Audi offers a special USB adapter cable* ⇨ *fig. 26*. The following USB adapter cables are available at this time:

① Apple Dock Connector
② Mini USB (angled)
③ Mini USB (straight)

WARNING

Loose objects can be thrown around the vehicle interior during sudden driving or braking maneuvers. This can cause serious injuries and loss of control of the vehicle. Always keep the center armrest closed while driving.

Tips

– The Audi phone box is not available in all countries. For additional information, contact your authorized Audi dealership.
– To prevent malfunctions, make sure the cell phone is positioned correctly in the Audi phone box.
– If the cell phone is placed in the Audi phone box in a bag or protective sleeve this can interfere with the connection to the external antenna.
– Audi recommends using original Audi accessories. Audi has established their reliability, safety and suitability.
– USB adapter cables are available from your authorized Audi dealer or specialty stores.

Selecting the telephone

Applies to vehicles: with telephone

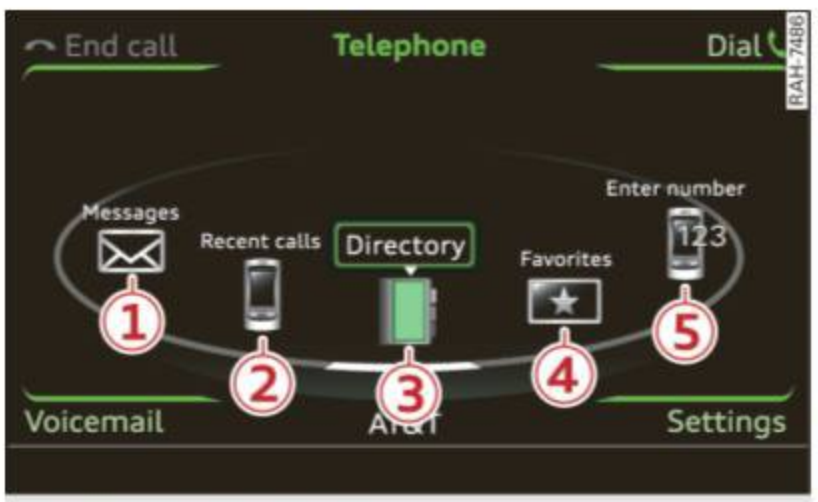


Fig. 27 Telephone functions

Requirement: A cell phone must be connected to the MMI ⇨ *page 36*.

▸ Select: TEL button. ▶

The last active telephone menu is shown in the MMI display. Press the TEL button in the **Telephone** menu to access the telephone functions.

The following telephone functions are available ⇨ *fig. 27*:

① **Messages*** ⇨ *page 40*
② **Recent calls** ⇨ *page 38*
③ **Phone book** ⇨ *page 42*
④ **Favorites** ⇨ *page 39*
⑤ **Enter number** ⇨ *page 38*

Dialing a phone number

From the directory

Applies to vehicles: with telephone

You can select a phone number directly from the directory ⇨ *page 42*.

From a list

Applies to vehicles: with telephone



Fig. 28 Dialing a phone number from the recent calls list

Requirement: A phone number must be in the recent calls list or stored in favorites.

▸ Select: TEL button.

Recent calls

– **Dialing a phone number**: Select and confirm the desired telephone number from the Recent calls list. Select and confirm **Call**.

Call list symbol ⇨ *fig. 28*:

① Dialed calls
② Missed calls
③ Received calls

Favorites

– **Dialing a phone number**: Select and confirm a favorite. Select and confirm **Call**.

Dial control button

– **Dialing a phone number**: Select and confirm the desired telephone number from the **Recent calls** list. Select and confirm **Call**.

Using the speller

Applies to vehicles: with telephone



Fig. 29 Entering telephone numbers using the number speller



Fig. 30 Entering telephone numbers using the letter speller

▸ Select: TEL button **Enter number**.

– **Entering the phone number as a sequence of numbers**: Enter the number using the using the number speller ⇨ *fig. 29*.
– **Entering the phone number as a sequence of letters**: Press the **A-Z** control button. Enter a letter sequence using the letter speller such as *AUDISERVICE*.
– **Dialing a phone number**: Select and confirm **OK**. **Or**: Press the **Dial** control button. ▶

The active audio source is muted when making a call.

– **Deleting individual characters**: Select and confirm ⬅.
– **Delete all characters entered at once**: Turn the speller to ⬅ and press and hold the control knob.

Tone sequences (**DTMF**) can be entered directly into the speller during a phone call.

Storing a phone number

Storing a new phone number

Applies to vehicles: with telephone

You can store a new phone number as a contact in the directory ⇨ *page 45*.

Saving from the recent calls list

Applies to vehicles: with telephone

Phone numbers from the recent calls list can be stored in the directory.



Fig. 31 Storing the phone number in the directory

Requirement: A phone number must be stored in the recent calls list.

▸ Select: TEL button > **Recent calls** > *phone number* > **Store in directory**.

– **Storing a phone number as a new address card**: Select and confirm **New contact**. Enter a **Name**. Enter additional data, if necessary. Select and confirm **Save contact**.
– **Assigning a phone number to an existing address card**: Select and confirm a contact in the list. Select and confirm **Save contact**.

Tips

– The contacts are only stored in the MMI phone book.
– You can edit the phone book ⇨ *page 45*.

Storing in favorites

Applies to vehicles: with telephone

Up to nine contacts can be stored in the favorites list, in addition to the voicemail number.

▸ Select: TEL button > **Favorites**.

– **Storing a new phone number as a favorite**: Select and confirm **Create favorite** > **New contact**. Enter a **Name** and additional data, if necessary. Enter a **Telephone number**. Select and confirm **Save contact**.
– **Storing an existing phone number as a favorite**: Select and confirm **Create favorite** > *a contact in the list*. Select and confirm the desired telephone number, if necessary.
– **Deleting a stored favorite**: Select and confirm *the desired favorite* > **Delete**.

Answering and ending calls

Applies to vehicles: with telephone



Fig. 32 Incoming call

▸ **Answering an incoming call**: Press the **Accept** control button.
▸ **Ignoring an incoming call**: Press the **Reject** control button.
▸ **Ending a call or canceling dialing**: Press the **End call** control button. ▶

Accepting another call: If there is an incoming call during a call, you can select **Answer** to put the existing phone call on hold and answer the incoming call. If you select **Ignore**, the incoming call will be ignored.

Caller information: Depending on whether the caller is saved in the directory and if their number has been transmitted, the *Name*, *telephone number* or **Unknown** may shown in the MMI display.

Tips

- The audio source is muted during an incoming/outgoing call.
- If you have switched off the MMI display and an incoming call is received, the MMI display will automatically switch back on.

During a call

Applies to vehicles: with telephone

Requirement: The **3-way calling** function must be switched on for some of the options listed ⇨ *page 46* and there must be a call in progress.

- **Making an additional call**: Select **Additional call** > **Directory** or **Recent calls** > *entry in the list*.
- **Answering an incoming call during an active call and when there is a call on hold**: Select **Replace**. The active call is replaced with the incoming call.

Select: **Options** control button:

Mute/Unmute: If you select and confirm this function, the other caller cannot hear you. You can hear the other caller.

Hold call/Resume held call: You can put your existing phone call on hold and resume it. **On hold** and the duration of the phone call is shown in the MMI display.

Call waiting: You can alternate between two phone calls at the same time. One of the calls will be on hold. **End call** ends the active phone call. A phone call that is on hold stays on hold and can be remove using the **Options** control button and **Resume held call**.

Join conference: A party on hold and up to five active parties (depending on the network) can be added to a conference call. To make an additional call, put all participants in the current conference call on hold using **Hold conference**. Press the **Options** control button. Choose and select **Additional call** and choose a telephone number from **Recent calls** or the **Directory** or select **Enter number**. To add this party to the conference call, select **Conference call**. With **Resume held conference**, all participants are taken off hold. **Conference participants** shows all participants.

Privacy mode/Switch to hands-free mode: You can switch your current phone call from the MMI to your cell phone with **Privacy mode**. With **Switch to hands-free mode**, you can transfer your call from your cell phone to the MMI.

Telephone menu: The telephone menu opens.

Tips

- The *Call waiting* function must be activated in your cell phone to be alerted to an incoming call during an active call.
- The display of an incoming phone call in the MMI may still be visible for a few seconds depending on the cell phone in use. If you use the **Replace** or **Ignore** functions in the MMI while the display is still visible, the active phone call will end.

Messages

Text messages

Applies to vehicles: with Audi connect and cell phone with Bluetooth Message Access Profile

Depending on the type of cell phone used and the mobile plan, you can receive and send messages through the MMI.

▸ Select: TEL button > **Messages** > or **SMS**.

The text message inbox is shown in the MMI display. ▶

Folder control button

Depending on the type of cell phone used, the available text message folder, such as **Sent messages**, is displayed.

New control button

- **Sending a text message**: Select and confirm **Create new text message**. Enter a recipient. Enter a text using the MMI touch or the speller. Select and confirm **Send**.
- **Sending a text message template**: Select and confirm the desired template from the list. Enter a recipient. Select and confirm **Send**.
- **Saving a text message as a template**: Create a text message. Select and confirm **Save as template**.

Ten text message templates are stored in the MMI. You can save up to ten additional templates.

Read control button

You can have the MMI read an open text message.

Tips

For more information on the supported cell phones visit www.audi.com/bluetooth or your authorized Audi dealer.

E-mail

Applies to vehicles: with Audi connect and cell phone with Bluetooth Message Access Profile

Depending on the type of cell phone used, you can receive and send e-mails through the MMI.

Requirement: The Message Access Profile (MAP is stored in your cell phone's Bluetooth settings.

▸ Select: TEL button > **Messages** > or **E-mail**.

The e-mail inbox is shown in the MMI display.

Folder control button

Depending on the type of cell phone used, the available e-mail folder, such as **Sent messages**, is displayed.

New control button

- **Sending an e-mail**: Select and confirm **Create new e-mail**. Enter a recipient. Enter a text using the MMI touch or the speller. Select and confirm **Send**.
- **Sending an e-mail template**: Select and confirm the desired template from the list. Enter a recipient. Select and confirm **Send**.
- **Saving an e-mail as a template**: Create an e-mail. Select and confirm **Save as template**.

Ten e-mail templates are stored in the MMI. You can save up to ten additional templates.

Read control button

You can have the MMI read an open e-mail.

Tips

For more information on the supported cell phones visit www.audi.com/bluetooth or your authorized Audi dealer.

Message options

Applies to vehicles: with Audi connect and a SIM card inserted with data option/Message Access Profile

Requirement: A text message or e-mail must be open.

▸ Select and confirm **Options**.

Delete: The open text message or e-mail is deleted.

Call: The sender of the open text message or e-mail is called.

Reply: Enter a text using the MMI touch or the speller. **Or**: Select a text from the list of templates.

Forward: The open text message or e-mail can be forwarded to another recipient. ▶

Navigate: If geocoordinates are stored in the sender's contact data you can navigate to the sender of the open text message or e-mail.

Extract number: The phone numbers contained in the text message or e-mail are displayed and can be used.

Tips

Messages that are deleted in the MMI are also deleted in the cell phone automatically.

Listening to voicemail

Applies to vehicles: with telephone

▸ Select: TEL control button > **Voicemail**

– **Enter the voicemail number**: Select and confirm the **List** and select and confirm the desired number. **Or**: Enter the voicemail number using the MMI touch ⇨ *page 8* or the speller ⇨ *page 9*. Select and confirm **OK**.
– **Dialing the voicemail number**: Press the **Voicemail** control button.

Tips

– This service must be set up and activated in advance in the cell phone network. You can obtain more information from your cell phone service provider.
– The voice mail number depends on the cell phone service provider.

Calling up the directory

Applies to vehicles: with telephone

After connecting the cell phone the cell phone contacts are automatically imported into the MMI.



Fig. 33 Contact list

▸ Select: TEL button > **Directory**

– **Dialing a contact**: Select and confirm a contact from the directory. The address card is displayed.

Contacts are displayed in alphabetical order and can be sorted according to first or last name ⇨ *page 46* and are identified with a symbol to tell the location where they are stored ⇨ *fig. 33*.

① **Public MMI directory**: These contacts do not depend on the connected cell phone they are visible and usable for every user.

No cell phone connected: Each new contact will be stored in the public directory ⇨ *page 45*.

Cell phone connected: To save a contact in the public directory so that all users can access it, the contact must be marked as **Visible to all** ⇨ *page 43*.

② **Private MMI directory**: The contact are only visible when the cell phone is connected.

③ **Cell phone**: These contacts are stored in the cell phone and are only visible when the corresponding cell phone is connected.

Once all the memory locations are filled, you will be requested to replace the contacts of one cell phone when connecting another cell ▶

phone. With the option **Restricted use of telephone**, only contacts in the cell phone and the local memory in the MMI (public) are available.

The directory can be opened through the **Telephone*** menu as well as the **Navigation*** menu.

Tips

– Check for any possible request to synchronize on your cell phone. Requests to synchronize the directory must be confirmed so that your cell phone contacts can be loaded into the MMI.
– The phone book contact display in the MMI depends on the cell phone used. For more information on the supported cell phones visit www.audi.com/bluetooth or your authorized Audi dealer.
– The contacts from the cell phone may not be transferred in alphabetical order. If there are too many entries, contacts with different first letters may be missing in the MMI.
– The contacts in the public MMI memory are always visible and can be accessed by other users.

Searching for a contact

Applies to vehicles: with telephone

▸ Select: TEL button > **Directory**

– Select and confirm **Find contact**. Enter the name. **Or**: Select and confirm the contact using the **List**.

Both the first and last names are searched.

Tips

You can scroll through long lists quickly by turning the control knob quickly.

Using a contact

Applies to vehicles: with telephone



Fig. 34 Calling a contact



Fig. 35 Selecting a destination

▸ Select: TEL button > **Directory** > *a contact from the directory*.

– **Call**: Select and confirm the desired telephone number. **Or**: Select the desired telephone number and press the **Call** control button.
– **Navigate**: Select and confirm the desired destination. **Or**: Select the desired destination and press the **Navigate** control button. To start navigation, select and confirm **Start route guidance**.

Visible to all

You can mark a contact as **Visible to all**☑. The contact is then stored in the local MMI memory (public) ① and is available to all MMI users. If a contact is not marked as **Visible to all,** it is stored in the MMI memory (private) ② and is only visible when the cell phone in which the contact is saved is connected or the applicable SIM card is inserted. ▶

Read contact

The MMI automatically creates a name tag for each entry in the directory that can be ready by the MMI.

Send contact

The selected contact can be sent as a text message in vCard format (.vcf) ⇨ *page 40*.

Copy contact

A copy of the contact is stored in the private MMI memory.

You can change the information in the input fields ⇨ *page 45* using the speller ⇨ *page 9* or the MMI touch ⇨ *page 8*.

Delete contact

Only the contacts in the MMI memory (private/public) can be deleted.

Send message*

You can send a text message ⇨ *page 40* or an e-mail ⇨ *page 41* to the selected contact.

Tips

– Contacts edited in the MMI directory cannot be automatically updated in the paired cell phone. Audi recommends editing cell phone contacts directly in the cell phone.
– Only the contacts in the MMI memory (private/public) can be edited/deleted.
– To delete all public or private contacts at one time, select the **Delete shared contacts** or **Delete private contacts** option in the directory settings ⇨ *page 47*.

Importing or exporting contacts

Applies to vehicles: with telephone

Contacts in vCard format (.vcf) can be imported into the directory or exported.

Requirement: A SD card must be in the SD card reader ⇨ *page 24* or a USB storage device must be connected to the Audi music interface ⇨ *page 27*.

▸ Select: TEL button > **Directory** > **Settings** control button

– **Importing contacts from a storage device**: Select and confirm **Import contacts** > **SD Card** or **USB storage device** > *desired contacts* > **Import**.
– **Exporting contacts on a storage device**: Select and confirm **Export contacts** > **SD Card** or **USB storage device** > *desired contacts* > **Export**.
– **Selecting all contacts at once for import or export**: Select and confirm **Import contacts/Export contacts** > **SD card** or **USB storage device** > **All** control button > **Import/Export**.
– **Importing contacts from your myAudi account**[1)]: Select and confirm **Import contacts** > **myAudi Account** > **myAudi PIN** *enter PIN*.

You must have a **myAudi Account** in order to import contacts from the account. You only need to enter the **myAudi PIN** one time. You receive the **myAudi PIN** in your myAudi account once you have stored a vehicle in the account.

Tips

– Refer to the notes in the chapter **About Audi connect** ⇨ *page 55*. ▶

1) The requirements for using Audi connect services must be met and you must have a myAudi account set up at www.audiusa.com/myaudi. You must have a vehicle stored in your myAudi account and you must have contacts stored.

– For additional information on the myAudi account, refer to www.audiusa.com/myaudi.
– The imported contacts are stored in the local phone book memory.
– A maximum of 500 contacts can be imported. You can check the phone book memory capacity at any time ⇨ *page 46*.
– Never save important data on memory cards or USB storage devices. Audi is not responsible for damaged or lost files and media.

Storing a new contact

Applies to vehicles: with telephone



Fig. 36 Storing a new contact

▸ Select: TEL button > **Directory** > **New contact**.

Last name/First name

Enter the first and last name using the speller ⇨ *page 9* or the MMI touch ⇨ *page 8*.

Telephone numbers

You can store up to five telephone numbers in an address card. You can also assign a **Type** (**Business** or **Private**) and a **Category** (**Land line**, **Cell** or **Fax**) to each telephone number. You can also identify a frequently used phone number **As standard number**. That number is then displayed first in the open address card.

Using the **New number** function and the **List** control button, you can import a number from **Recent calls** into the address card.

Business addresses/Private addresses

With the **Delete mailing address** function, you can delete the business or private address.

Structured addresses from a cell phone that have information regarding country, ZIP code, city and street name can be imported directly into the directory.

E-mail*

Enter the e-mail address using the speller ⇨ *page 9* or the MMI touch ⇨ *page 8*.

Tips

– The contacts in the public MMI memory are always visible and can be accessed by other users.
– The new contact will be stored in the memory in the directory that is currently being used.
– The import of new addresses depends on the cell phone.
– Up to 500 contacts can be stored in memory in a private or public phone book.
– Contacts edited in the MMI directory cannot be automatically updated in the paired cell phone. Audi recommends editing cell phone contacts directly in the cell phone.

Additional settings

Telephone settings

Applies to vehicles: with telephone

▸ Select: TEL button > **Settings**.

Telephone settings

Volume settings[1]: Using the **Ringtone** function plays the ringtones. Press the control knob to save the selected ringtone. For the settings **Ringtone volume**/**Microphone sensitivity**/**Message volume**, refer to ⇨ *page 32*. ▶

[1] Depends on the connected cell phone.

Voicemail number Using the **Number** input field, you can enter or edit the voicemail number with the MMI touch or the speller. The **Delete voicemail number** function deletes the stored voicemail number.

Call options

3-way calling: Can be switched **on**-/**off**.

Bluetooth

Device management: Bluetooth devices that have been paired with the MMI are listed. The active connected device is identified with a Bluetooth symbol. To switch between **Hands-free** and **Audio player** when cell phones are connected, select the Bluetooth device when the vehicle is stationary and change the profile using **Connect**. Use **Disconnect** to disconnect the paired profile. To delete paired Bluetooth devices individually, select the device and delete it with the **Delete Bluetooth device** function. The **Find new devices** function searches for Bluetooth devices in range and lists them.

Bluetooth; When the function is switched on, the Bluetooth symbol appears in the MMI display (13) ⇨ *page 10, fig. 6*. The visibility of the MMI for Bluetooth devices can be turned on and off using the **Visible**/**Invisible** settings. However, it is still possible to establish a Bluetooth connection with paired devices that have already been paired when the visibility is switched off. The **Bluetooth** should be switched to **Invisible** when the pairing process is complete so the MMI is not visible to others. **Bluetooth** can be switched **off**. A Bluetooth connection is not possible then.

Bluetooth audio player: The Bluetooth audio player function must be switched **on** to be able to select the Bluetooth audio player as the source in the **Media** menu ⇨ *page 73*. Switch the **Audio player off** if you are not using it to prevent malfunctions in the **Telephone** or **Media** menus.

Bluetooth name: The Bluetooth name in the MMI (for example “AUDI MMI 2613”) is shown and can be changed.

Connections

Refer to ⇨ *page 53*.

Network connection (Wi-Fi)

Refer to ⇨ *page 54*.

Tips

– Several cell phones can be connected to the MMI, but only one cell phone can be active.
– To delete all paired Bluetooth devices, the **Bluetooth** function can be reset to the default factory settings ⇨ *page 33*.

Directory settings

Applies to vehicles: with telephone

▸ Select: TEL button > **Directory** > **Settings** control button

Memory capacity

Shows the **Memory capacity** of the directory.

You can manage up to 10,500 contacts with the directory. You can load up to 2,000 contacts from your cell phone into each private directory. In addition to this, you can import up to 500 contacts into the private MMI memory as well as 500 contacts into the public MMI memory.

Sort order

You can sort the contacts in your directory alphabetically according to **Last name**/**First name**.

Show shared contacts

You can show/not show the public contacts. With **Yes**, all contacts in the local MMI directory (public) are displayed. With **No**, they are hidden when a cell phone is connected to the MMI.

Download directory

To update the contacts in the MMI, you can manually download your cell phone contacts. Depending on the cell phone, the Bluetooth connection may need to be disconnected and reconnected to update the contacts. ▶

Delete contacts

You can delete all contacts in the local memory at once using the option **Delete all contacts**. You can delete all contacts in the local memory (private) using the **Delete private contacts** function. You can delete contacts in the local memory (public) using the **Delete shared contacts** function.

Troubleshooting

Applies to vehicles: with telephone

Problem	Solution
Connecting the cell phone to the MMI failed.	Check if the visibility of the cell phone and MMI is turned on. For many cell phones, the visibility turns off automatically after a short period. **Or** Restart your cell phone. For information on how to do this, see your cell phone owner's manual.
After pairing, **not all contacts/ no contacts** are loaded in the MMI.	Remove special characters from names. Avoid using contact groups.
Some **telephone functions** are turned off or not available	The telephone functions depend on the cell phone service provider and the cell phone you are using. You can obtain more information from your cell phone service provider, in your cell phone owner's manual or in the database for mobile devices at www.audi.com/bluetooth.
Some **telephone functions** are turned off or not available although the cell phone is supported.	In addition, some Bluetooth settings may not be compatible or the cell phone Bluetooth function may be deactivated. You can obtain more information from your system administrator.

Audi connect

Introduction

Applies to vehicles: with Audi connect

With Audi connect services, online information is transmitted and integrated directly in the vehicle.

A mobile end device can be used to access the Internet through a Wi-Fi hotspot, either when the vehicle is stationary or from the rear seat when the vehicle is in motion.

WARNING

- Only use Audi connect services when road and traffic conditions permit to reduce the risk of an accident. Refer to and follow the guidelines provided in ⇨ *page 5, Traffic safety information*.
- Use the Audi connect services with a Wi-Fi hotspot only in the rear seat when the vehicle is in motion or only when the vehicle is stationary to reduce the risk of an accident.

Tips

Refer to the notes in the chapter **About Audi connect** before starting the system ⇨ *page 55*.

Starting

Requirements for Audi connect

Applies to vehicles: with Audi connect

An internet connection is needed to use Audi connect. The following requirements must be met to establish a connection:

- The Audi SIM card must be inserted in the SIM card reader ⇨ *page 48*.
- A data connection must be configured for Audi connect services ⇨ *page 54*.

Using the SIM card reader

Applies to vehicles: with Audi connect



Fig. 37 Inserting the SIM card, Mini SIM card

Requirements

The vehicle must be stationary and the ignition must be switched on.

Using a separate SIM card

- ▸ Slide the included Audi connect SIM card into the card reader slot with the label facing up and the contact surface facing down ⇨ *fig. 37*. The angled corner of the SIM card must be at the left front corner. Then push the SIM card into the slot until it clicks into place.
- ▸ To connect to the Internet automatically in the future, select and then confirm **Yes**.
- ▸ To establish a data connection for Audi connect, confirm the message that appears with **Yes**.

After connecting successfully

After connecting successfully, one or two signal strength bars will appear in the status line in the MMI display, depending on the type of connection (9) / (10) ⇨ *page 10, fig. 6*.

You can now use Audi connect.

- ▸ Select: MENU button > **Audi connect**. ▶

▸ Confirm the prompt asking to connect to the Internet with **Yes**, if an automatic connection has not already been setup.

Removing the SIM card

▸ Press briefly on the SIM card. The card is released from the slot. Remove the SIM card.

Note

Audi connect is designed exclusively for use with the SIM card provided. Do not use alternative SIM cards due to the terms of use of wireless technology. AUDI AG cannot be held responsible for any consequences arising from the use of alternative SIM cards.

Tips

– You can connect a cell phone with Bluetooth to make phone calls ⇨ *page 35*.
– You can specify when the MMI establishes an Internet connection ⇨ *page 54*. The Internet connection disconnects automatically once the requested Audi connect service no longer requires any data packets.
– The data connection for Audi connect services is pre-configured at the factory. However, if you need to adjust the configuration, you can change the data connection at any time ⇨ *page 54*.
– Audi does not provide service support for alternative SIM cards.

Configuration through myAudi

Activating/configuring specific Audi connect services

Applies to vehicles: with Audi connect

Some Audi connect services must be activated/configured through your personal myAudi account before using them for the first time.

– If you do not have your own myAudi account, register online at www.audiusa.com/myaudi.
– Add your vehicle to your myAudi account. This will generate a myAudi PIN for your vehicle.
– Activate/configure the Audi connect services you would like for your vehicle in your myAudi account.
– For some Audi connect services, you may also have to enter the myAudi pin when accessing the service in the MMI in order to connect the vehicle to myAudi.

For more information on configuration, go to www.audiusa.com/myaudi.

Logging into myAudi in the vehicle

Applies to vehicles: with Audi connect

To use some Audi connect services (such as Facebook), you must have the service configured on your myAudi account, and connect your vehicle to your myAudi account.

▸ Select: MENU button > **Audi connect** > **Log-in** (1) ⇨ *page 50, fig. 38*.
▸ Enter your myAudi PIN using the MMI touch ⇨ *page 8* or the speller ⇨ *page 9*.
▸ Confirm your entry with **OK**.

You can then use all of the available Audi connect services.

Tips

You receive your myAudi PIN when you set up your myAudi account. For more information, go to www.audiusa.com/myaudi.

Audi connect services overview

Basic functions

Applies to vehicles: with Audi connect



Fig. 38 Audi connect services

▸ Select: MENU button > **Audi connect** > *the desired Audi connect service*.

The following functions can be selected, depending on which Audi connect service you have selected:

Set search area

– **In immediate vicinity**: Displays the desired information for the area around your current location.
– **In vicinity of destination**: If you have entered a navigation destination, you can display the desired information for the area around the destination.
– **In new city**: You can enter any city for which you would like to receive the desired information using the MMI touch ⇨ *page 8* or the speller ⇨ *page 9*.

Destinations on the map

Shows multiple entries or a single entry on the map.

– Select and confirm an entry and press the **Functions** control button > **Display on map**. The desired entry is displayed on the map.

Read

You can have selected content read by the MMI.

– Select and confirm an entry and press the **Read** control button. The MMI reads the selected entry.

Navigating

If a city was added to an entry (for example, for City Event), you can use it as a navigation destination in the MMI.

– Select and confirm an entry and press the **Navigate** control button. The selected city is transferred to the MMI as a navigation destination and route guidance starts.

Updating

The entries for the selected Audi connect service are updated.

– Select and confirm an entry and press the **Functions** control button > **Update**. The selected entry is updated.

Weather

Applies to vehicles: with Audi connect

Information on current weather conditions as well as weather forecasts for the selected search area (for example, the **Destination**).

Fuel prices

Applies to vehicles: with Audi connect

Information on gas stations with the lowest fuel prices for your vehicle in the selected search area including diesel availability.

Using the **Settings** control button, you can sort fuel prices **By price** or **By distance**. including diesel availability

Travel information

Applies to vehicles: with Audi connect

Information on points of interest and travel tips in the selected search area.

▸ Select and confirm a point of interest to display the details.

Online news

Applies to vehicles: with Audi connect

View the most current headlines in the MMI, either through the included news feeds, or your own RSS feeds.

▸ Select and confirm a headline.

City events

Applies to vehicles: with Audi connect

Information on events in various categories in the desired search area.

▸ Select and confirm a category, such as **Sports**.
▸ Select and confirm an event to display the details.

Facebook

Applies to vehicles: with Audi connect

You can access the most important functions in your Facebook account through your MMI.

Requirement: You must have a Facebook account, have activated and linked Facebook with myAudi, and have connected your vehicle with myAudi ⇨ *page 49*.

▸ Select and confirm a category (for example, **News feed**).

The following categories can be selected in the **Facebook** menu:

– **Nearby**: Friends that are near your location are displayed.
– **Timeline**: Your Facebook timeline is displayed.
– **News feed**: New posts (for example, by friends or groups) are displayed.
– **Events**: Events to which you were invited are displayed.
– **Messages**: Messages you have received are displayed.
– **Friends**: All Facebook friends are displayed.

The following **Functions** are available, depending on the Facebook category you have selected:

– **What's on your mind?**: You can post a new Facebook status using text templates.
– **Where are you?**: You can specify your current location and make it visible.
– **Display on map**: Shows an entry (such as friends nearby) on the map.
– **Update**: The selected Facebook function is updated.

Tips

– Other settings such as account and privacy settings *cannot* be changed in the MMI. These changes must be made on the Facebook website.
– You can only connect *one* Facebook account with your myAudi account.
– You can create more text templates online at www.audiusa.com/myaudi.
– Audi connect makes it possible to access Facebook. Audi cannot guarantee permanent availability, as availability is dependent on Facebook.

Twitter

Applies to vehicles: with Audi connect

You can access the most important functions in your Twitter account through your MMI.

Requirement: You must have a Twitter account, have activated and linked Twitter with myAudi, and have connected your vehicle with myAudi ⇨ *page 49*.

▸ Select and confirm a category (such as **Tweets**).

The following categories can be selected in the **Twitter** menu:

– **Tweets**: All Tweets you have posted are listed.
– **Homepage**: The Tweets for everyone you follow are displayed.
– **Following**: All people who you follow are displayed.
– **Followers**: All people who follow you are displayed. ▶

The following **Functions** are available, depending on the Twitter category you have selected:

– **New Tweet**: You can send a Tweet using text templates.
– **Update**: The selected Twitter function is updated.
– **Favorite**: Favorite a Tweet to show you liked it.
– **Retweet**: You can quote a Tweet to share it with others.

Tips

– Other settings such as account, language, Tweet security and location settings *cannot* be changed in the MMI. These changes must be made on the Twitter website.
– You can only connect *one* Twitter account with your myAudi account.
– Audi connect makes it possible to access Twitter. Audi cannot guarantee permanent availability, as availability is dependent on Twitter.

Flight information

Applies to vehicles: with Audi connect

Information on flights and current arrival/departure times in the selected search area.

▸ Enter a flight number or select a search area for a flight using the MMI touch ⇨ *page 8* or the speller ⇨ *page 9*.

Parking information

Applies to vehicles: with Audi connect

Information on parking locations, static and real-time parking spot availability, and fees in the selected search area.

Using the **Settings** control button, you can sort parking locations by **available parking spaces**.

Audi connect services in navigation

Applies to vehicles: with Audi connect

The following Audi connect services are currently available through the navigation menu:

– Navigation with **Online map service** ⇨ *page 63* and **Online Street View** ⇨ *page 63*.
– **Point of Interest (POI) search with voice recognition** (such as restaurants): Find Points of Interest (POI), and plan route guidance using the MMI controls ⇨ *page 58* or the voice recognition system ⇨ *page 20*.
– Setting up a destination in the MMI using your **myAudi account** or **Online Maps** ⇨ *page 60*.
– **Picturebook navigation**: Use pictures with geographical information from the **SD card**, your **myAudi account** or **Online Street View** for navigation ⇨ *page 59*.
– **Navigation map update service***: Import navigation map updates from the SD card to your MMI.

Tips

For the Audi connect service navigation map update service*, check the current software version in your vehicle ⇨ *page 34* and compare it with www.audiusa.com/myaudi to see if a new version is available. You can also have the new navigation data installed by an Audi dealer, which can be done for an additional charge.

Audi connect services on the phone

Applies to vehicles: with Audi connect

The following Audi connect service is currently available:

– Storing contacts on your computer using your **myAudi Account** and loading the contacts into the MMI directory ⇨ *page 44*.

Wi-Fi hotspot

Applies to vehicles: with Audi connect

Your MMI has a built-in Wi-Fi hotspot, which allows you to connect up to eight wireless devices to the Internet. While driving, only restricted use of non-secured, light, small Wi-Fi devices is possible from the rear of the vehicle.

Requirement: The ignition must be switched on.

▸ Select: TEL button > **Settings** control button > **Wi-Fi connection**.

The following settings can be modified in the **Wi-Fi connection** menu:

Wi-Fi active

The MMI Wi-Fi hotspot is deactivated at the factory. Ensure that the Wi-Fi hotspot is **on** before attempting to establishing a connection between your vehicle and your Wi-Fi device.

– **on**: The MMI Wi-Fi hotspot is active and can be used for an Internet connection.
– **off**: The MMI Wi-Fi hotspot is deactivated. An Internet connection is not possible.

Wi-Fi settings

The Wi-Fi connection between your vehicle and your wireless device (laptop, cell phone) is encrypted. To establish a connection, dependent on your device, you may need to enter one or more of the following values when setting up your wireless connection. You can change them if necessary. If any setting is changed, you must select **Apply settings** to transfer the changed settings to the MMI. You must then update the changes in your mobile wireless device.

– **Network ID (SSID)**: Name of the Wi-Fi network
– **Encryption type**: WEP, WPA or WPA2 (WPA2 is the newest and most secure encryption technology).
– **Password**: Depending on the encryption type, a password may be generated in the MMI that is used to encrypt the Wi-Fi connection. The password can be changed. Be sure to select a secure password. For the WEP encryption type, the password must be exactly 13 characters. For the WPA or the WPA2 encryption types, the password must be at least 8 (maximum of 63) characters.
– **Wi-Fi visible**: The visibility of your Wi-Fi network can be switched **on**/**off**.

WARNING

– As the driver, do not allow usage of the Wi-FI hotspots to distract you from driving, as it could increase the risk of an accident.
– It is only safe to use laptops and similar mobile devices when the vehicle is stationary because, like all loose objects, they could be thrown around the inside of the vehicle in a crash and cause serious injuries. Store these types of devices securely while driving.
– Do not use any Wi-Fi devices on the front seats within range of the airbags while driving. Read and follow the safety precautions in the separate vehicle owner's manual in the "Airbag System" chapter under "Important information about the front airbag system".

Note

You are responsible for all precautions taken for data protection, anti-virus protection and protection against loss of data on mobile devices that are used to access the Internet through the Wi-FI hotspot.

Tips

– The receiving of data packets from the Internet through the Wi-Fi hotspot may result in faster consumption of your data plan. You can obtain more information from your Audi connect wireless service provider.
– For more information on Audi connect services, visit http://audiusa.com/audiconnect or contact an authorized Audi dealer.

Configuring the data connection

Applies to vehicles: with Audi connect

To use Audi connect services in the vehicle, a data connection must be configured.

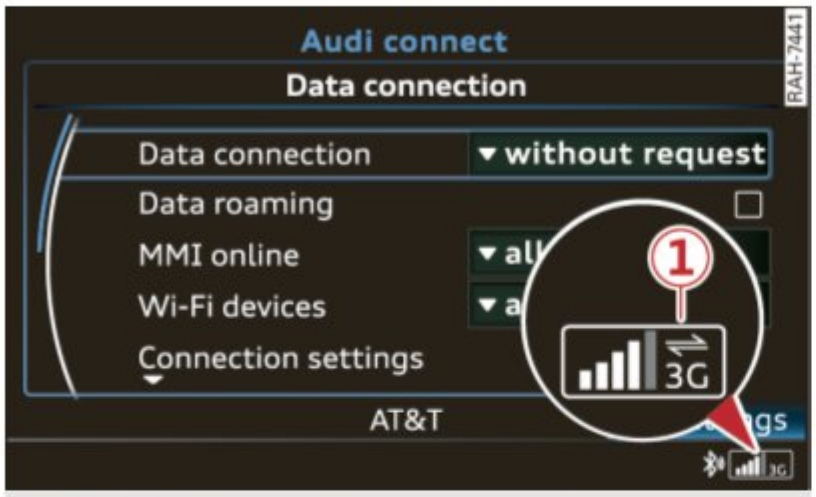


Fig. 39 Configuring the data connection

▸ Select: MENU button > **Audi connect** > **Settings** control button > **Data connection**.

The following items can be selected in the **Data connection** menu:

Connection

– **Ask**: A data connection is only established when confirmed.
– **Always** (recommended): A data connection is automatically established for using Audi connect services.
– **Never**: A data connection is not established. Audi connect services cannot be accessed.

When a data connection is established, the symbol for an active data connection appears in the status line in the MMI display ① ⇨ *fig. 39*.

An active data connection can be ended manually by selecting **Never** under the **Data connection** menu.

Data roaming

Data roaming is switched off at the factory. To use a data connection outside of the USA, **Data roaming** must be switched on (✓).

MMI Online

With the **MMI Online** function, you can **Allow** or **Not allow** the use of Audi connect services when the connection is set to **Always** or **Ask** > **Yes**.

Wi-Fi devices

Using the **Wi-Fi devices** function, you can **Allow** or **Not allow** a connection to the Internet.

Connection settings

The connection is configured automatically based on the SIM card being used. These values can, but should not be changed. You can obtain more information from your Audi connect wireless service provider.

– **APN**: The access point depends on the Audi connect wireless service provider and is assigned automatically.
– **User name**: The user name for your online profile is provided by the cell phone service provider.
– **Password**: The password for your online profile is provided by the cell phone service provider.
– **Authentication**: Depending on your cell phone service provider, authentication (validating the identity check) may be necessary. If this is the case, select **Secure**. If not, select **Normal**.

The changed settings are saved once you leave the **Connection settings** menu using the BACK button.

Start automatic configuration

An online profile is set up and configured automatically. The connection settings that you changed manually are reset to the default settings.

Tips

– When traveling in a different country, the data connection may be stopped to prevent unplanned roaming charges, depending on the factory settings. You can only use Audi connect services in another country once you have activated the **Data roaming** option. ▶

– When using online map view , you are prompted again to allow roaming before connecting to a foreign mobile network.
– For more information on roaming charges, contact your cell phone service provider.
– Data connections speed may vary based on vehicle location, the service provider coverage area, or when the recommended service provider is not used.

Data usage info

Applies to vehicles: with Audi connect

▸ Select: TEL button > **Settings** control button > **Connections** > **Data usage info**.

The number of data packets that are sent/received through the MMI is displayed. You can reset the data usage info to zero using the **Reset data usage** option.

About Audi connect

Audi connect services

Applies to vehicles: with Audi connect

Tips

– Audi connect services are available in the USA. Audi connect services are not available in Canada and Mexico at this time.
– Audi connect services are only available with the included Audi connect SIM card. The receiving of data packets from the Internet may result in faster consumption of your data plan. You can obtain more information from your Audi connect wireless service provider.
– A one-time registration/initial activation as well as some individual configuration on the myAudi platform at www.audiusa.com/myaudi is needed to use individual services. Your authorized Audi dealer, or an Audi Customer Advocate at the Audi connect Customer Helpline (877-505-AUDI [2834]), will be happy to provide information on options for extending usage and any costs that may result.
– Usage of any Audi connect service(s) is dependent on having an active Audi connect SIM card installed in the vehicle.
– Full Audi connect functionality requires wireless and data service subscriptions that are provided by the wireless carrier with whom you have contracted. Your wireless provider may be able to determine the vehicle's location if required to do so by law, court order, subpoena or other legal requirement. For more information about your wireless provider's privacy practices, please read your wireless provider's privacy policy and terms of use.
– The availability of Audi connect services such as weather information depends on the service provider. For more information about your service provider's privacy practices, please read your service provider's privacy policy and terms of use.
– The Audi connect services are a wireless/internet-based system. If the system does not function correctly even though all of the requirements have been met, please try again later or contact Audi connect services at 877-505-AUDI (2834).
– For more information on Audi connect and the applicable terms of use, visit www.audiusa.com/audiconnect.

Privacy protection

Applies to vehicles: with Audi connect

Tips

– Your privacy is important to us.
– In providing Audi connect's in-car services, Audi of America may collect, process, transmit, use, and share information about you and your vehicle, including location information. For information about these practices, see the "About Audi connect" tab in your vehicle's MMI: MENU button > **Audi connect** > **About Audi connect**.
– For information about our privacy practices associated with the Audi connect ▶

mobile application please refer to the application's privacy policy. For more information about the my.audiusa.com website, or other applications, websites, or online services associated with Audi, please visit www.audiusa.com/privacy.

Troubleshooting

Applies to vehicles: with Audi connect

Problem	Solution
Audi connect services: Individual Audi connect services are grayed out or not available.	Some Audi connect services must be activated/configured through your personal myAudi account before using them for the first time. You can find detailed information online at www.audiusa.com/myaudi.
Wi-Fi hotspot: Problems establishing a Wi-Fi connection	Delete all existing Wi-Fi connection on your mobile device and restart it.

Navigating

Calling up navigation

Applies to vehicles: with navigation system

The navigation system directs you to your destination, around traffic incident and on alternative routes, if desired.

▸ Select: NAV button.

After selecting Navigation, the last menu that was open is displayed.

– **Calling up the map**: Press the NAV button again.

WARNING

– The demands of traffic require your full attention. Refer to and follow the guidelines provided in ⇨ *page 5, Traffic safety information*.
– Obey all traffic laws when driving.
– The route calculated by the navigation system is a recommendation for reaching your destination. Obey traffic lights, stopping restrictions, one-way streets, lane change restrictions, etc.

Note

– If the driving directions conflict with traffic laws, obey the traffic laws.
– Adjust the volume of the navigation system so signals from outside the vehicle such as police and fire sirens can be heard easily at all times.

Tips

– Snow and objects on the GPS antenna or shade from trees and large buildings can prevent satellite reception and affect the system's ability to determine the vehicle position. Several deactivated or malfunctioning satellites can also interrupt GPS reception and affect the system's ability to determine the vehicle position.
– Because street names sometimes change, the names stored in the MMI may in rare cases differ from the actual street name.
– Contact your authorized Audi dealer for information on updating the navigation information.

Entering a destination

Entering an address

Applies to vehicles: with navigation system



Fig. 40 Entering a destination city

▸ Select: NAV button > **Route guidance** control button > **Address**.

– **Entering a destination using a house number**: Select and confirm**No.**. Enter a house number. Enter the additional information for **Street**, **City/ZIP Code Country**, if necessary. Start route guidance.

Assistance when entering an address: When entering an address, locations that have been entered in the past are provided as suggestions in the input field. By pressing the **List** control button, you can accept the suggested location as a destination. Additional locations that match the input are listed below (major cities are listed first, then in alphabetical order). The number of found locations is also listed ① ⇨ *fig. 40*.

Entering a destination using an intersection

▸ Select: NAV button > **Route guidance** control button > **Intersection**.

Select and confirm **Street**. Enter a street. Enter additional information, if necessary. Start route guidance.

Selecting a destination from the map

Applies to vehicles: with navigation system

A location on the map can be used as a destination or be entered in the directory.



Fig. 41 Selecting a destination from the map

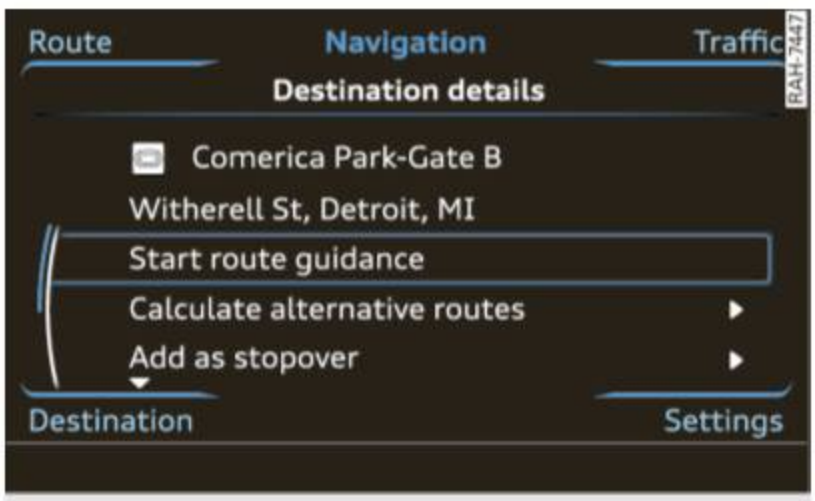


Fig. 42 Setting a map location as the destination

– **Calling up the map**: Press the NAV button multiple times.
– **Adjusting the scale (to move the crosshairs more quickly)**: Turn the control knob to the left or to the right.
– **Moving the crosshairs**: Press the control knob. Use the MMI touch to slide the crosshairs to the destination ⇨ *page 8*.
– **Selecting the destination**: Press the control knob. Select the symbol ① in the side menu ⇨ *fig. 41*. Select and confirm **Start route guidance**.

Stacked map content: When there are multiple points of interest in the immediate vicinity, the symbols are shown stacked on the map ②.

Additional information in the crosshairs location: If you select an item on the map with the crosshairs, available information is displayed ③ (such as the address or traffic information).

Entering a point of interest

Applies to vehicles: with navigation system

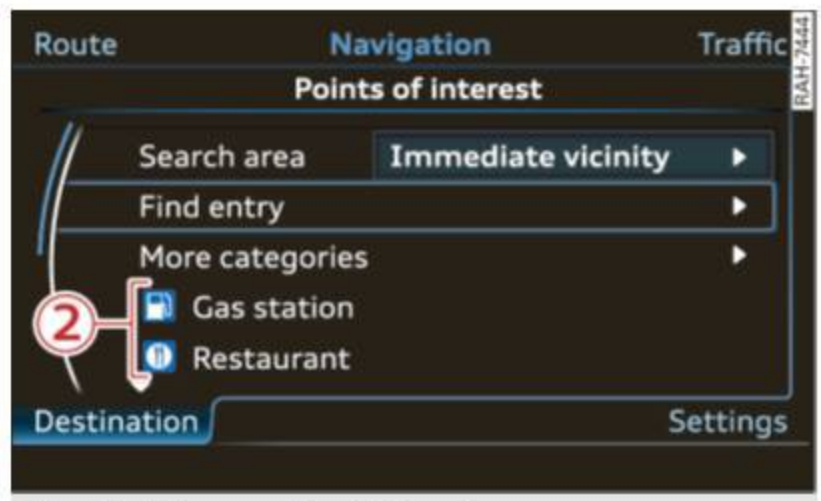


Fig. 43 Enter a point of interest

▸ Select: NAV button > **Route guidance** control button > **Points of interest**.

– **Searching for the name/category of a point of interest in the selected search area**: Select a search area. Select and confirm a category, such as **Restaurants**.

The following search categories are available:

In immediate vicinity: Points of interest can be selected from various categories. The points of interest are listed starting from the immediate vicinity of the vehicle location up to a radius of approximately 120 miles.

Along the route: Special destinations along the route can only be selected during active route guidance. The special destination is in the immediate vicinity of the calculated route.

In vicinity of destination: The points of interested can be selected from various categories, for example you can search for a hotel at the destination.

Tips

– Distances to points of interest are first displayed as a straight-line distance (arrow not filled in) from your current location. The actual distance from your current location to the point of interest is updated automatically (solid arrow).
– There may be entries in the list that cannot be displayed completely due to their length. If you select these entries with the control knob, a pop-up window ▶

containing detailed information about the selected list entry will open.

Picturebook Navigation

Applies to vehicles: with navigation system

Pictures with geo-data can be imported into the MMI from an SD card, a USB memory device or your myAudi account and used directly for route guidance.



Fig. 44 Selecting an image file for import

▸ Select: NAV button > **Route guidance** control button > **Picture destinations**.

Filling the picture box

– **Selecting files**: Select the **Settings** control button > **Fill picture box** > **SD card**, **USB** or **myAudi**. The folders/image files contained in the source are displayed. Select and confirm the desired file. To select all files within a directory, press the **All** control button. When importing pictures from **myAudi**, enter the **myAudi PIN** for your myAudi account, if necessary. You only need to enter the **myAudi PIN** one time. You receive the **myAudi PIN** in your myAudi account once you have stored a vehicle in the account.
– **Starting the copying process**: Press the **Copy** control button. The status of the copying process is shown in the MMI display.
– **Hiding the copying process** Select and confirm **Resume in background**.
– **Canceling the copying process**: Select and confirm **Cancel copying**:

Using pictures

– **Filtering the picture display**: Press the **Filter** control button.

The following filters are available:

All: All imported pictures are shown.

Creation date: All imported images are sorted according to creation date.

Location: Pictures that show the vicinity of the location or the vicinity of the destination entered are displayed.

Street View: Pictures that were created using the **Street View** function **Save** (2) ⇨ *page 63* are displayed

myAudi: All pictures imported from your myAudi account are displayed.

– **Showing functions for the selected picture destination**: Press the control knob.

The following functions are available:

– **Start route guidance**
– Showing **Alternative routes** for the picture destination
– **Entering as a stopover**
– **Show destination on map**
– **Storing in the directory** ⇨ *page 64*
– Showing **Additional information** stored in the picture

Deleting pictures

– **Deleting pictures individually**: Select the **Settings** control button > **Delete pictures** > **Delete single pictures**.
– **Deleting pictures according to the import source**: Select the **Settings** control button > **Delete pictures** > **Delete all by import source** > *desired source*.

Tips

– Refer to the notes in the chapter **About Audi connect** ⇨ *page 55*.
– Up to 1,500 pictures can be imported into the picture box.
– To display all imported picture destinations on the map, **Map POIs Picture destinations** must be displayed ⇨ *page 65*.

Online destinations

Applies to vehicles: with navigation system and Audi connect

You can search for points of interest in the Internet.

Requirement: The requirements for Audi connect services must be met ⇨ *page 55*.

- ▸ Select: NAV button > **Route guidance** control button > **Online destinations**.

– **Online search in the immediate vicinity/in vicinity of destination or stopover**: Select and confirm **Search in immediate vicinity** or **Search at destination/stopover**. Enter a search term, such as restaurant, and confirm the input with **OK**. Select and confirm a point of interest > **Start route guidance**.
– **Online search in a new city**: Select and confirm **Search in new city** > **Find city**. Enter the name of the city and confirm the input with **OK**. Enter a search term, such as restaurant, and confirm the input with **OK**. Select and confirm a point of interest > **Start route guidance**.
– Entering a destination using your myAudi account: Select and confirm **Find destinations from myAudi account**. Enter your myAudi PIN. The contacts stored in your myAudi account are displayed. Select and confirm a contact. Select a private/public navigation destination > **Start route guidance**.

You only need to enter the myAudi PIN one time. You receive the myAudi PIN in your myAudi account once you have stored a vehicle.

You can display additional information about online destinations in the **Destination details** menu .

Tips

– Refer to the notes in the chapter **About Audi connect** before starting the system ⇨ *page 55*.
– Destinations added to the myAudi account before a specific vehicle was added to the account, will not display in that vehicle.

Using a favorite/home address as a destination

Applies to vehicles: with navigation system

Favorites make it easier to enter a destination that you often use.

Requirement: A favorite or home address must be stored ⇨ *page 64*.

- ▸ Select: NAV button > **Route guidance** control button > **Favorites**.
- ▸ Select and confirm a favorite or the home address.
- ▸ Start route guidance.

Tips

– You are able to display, call up, edit and delete your stored favorites/home addresses in the map ⇨ *page 64*.
– Favorites are displayed in the map at a scale of up to 1.5 mi.

Loading a previous destination

Applies to vehicles: with navigation system

Your previous destinations are stored automatically and can be loaded directly as destinations.

- ▸ Select: NAV button > **Route guidance** control button > **Last destinations**.
- ▸ Select and confirm a destination from the list of last destinations. Start route guidance.

Tips

The list of previous destinations can be erased ⇨ *page 66*.

Using a destination from the directory

Applies to vehicles: with navigation system

You can navigate directly to destinations in the directory.

Requirement: The directory must contain contacts with private/business addresses stored as destinations ⇨ *page 45*.

- ▸ Select: NAV button > **Route guidance** control button > **Directory** > *a contact*.
- ▸ Select and confirm a private/business address.
- ▸ Start route guidance.

Entering a destination using geocoordinates

Applies to vehicles: with navigation system

- ▸ Select: NAV button > **Route guidance** control button > **Address** > **Coordinates**.
- ▸ Select and confirm the **Latitude** and **Longitude**. Start route guidance.

Entering a stopover/route plan

Applies to vehicles: with navigation system

You can enter up to nine stopovers directly in the route plan or using the destination input options.

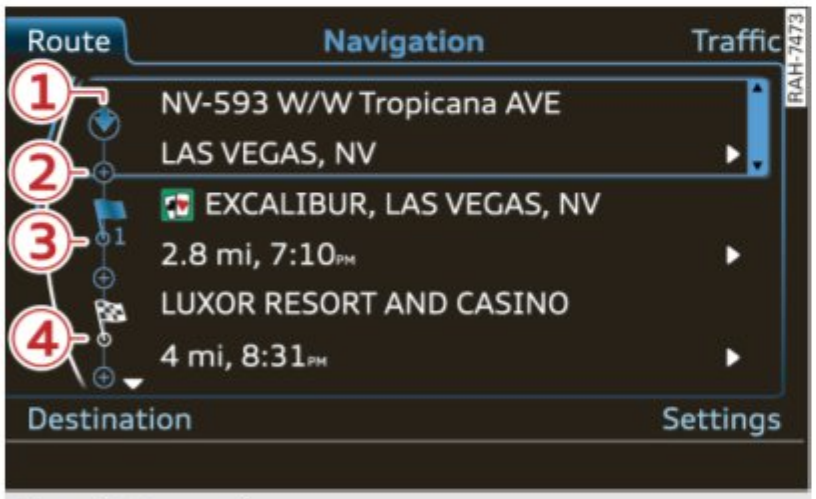


Fig. 45 Route plan

Requirement: A destination must be entered ⇨ *page 57*.

- ▸ Select: NAV button > **Route** control button.

– **Entering a destination as a stopover**: Enter a destination ⇨ *page 57*. In the **Destination details** menu, select and confirm **Add as stopover**.

– **Changing the route plan**: Press the **Route** control button. Select and confirm the destination/stopover and then **Move**, **Delete** or **Start route plan from here**.

– **Save route**: Press the **Route** control button. Select and confirm **Route memory** and then **Save route**. Enter a location and confirm the input with **OK**.

– **Load route/deleting route**: Press the **Route** control button. Select and confirm **Route memory** and then the desired route. Select and confirm **Start route guidance** or **Delete**.

– Showing the **Route list**: Press the **Route** control button. Select and confirm the **Route list**. The route list is visible only when route guidance is active and contains information regarding the route, the names of the streets and the length of the route sections. When traveling on highways, possible parking lots and rest areas are shown, which you can select as a stopover.

The following information appears in the side menu for tour plan ⇨ *fig. 45*:

① Vehicle location
② Symbol for entering a stopover
③ Entered stopover
④ Destination

Starting/canceling route guidance

Applies to vehicles: with navigation system

– **Starting route guidance when entering a new destination**: Select the NAV button > **Route guidance** control button > *enter destination* > **Start route guidance**.

– **Restarting/stopping last route guidance**: Select the NAV button > **Route guidance** control button > **Start/Cancel**.

When entering a new destination, the following functions are also available for selection in the **Map menu**:

Show destination on map: The destination entered is displayed on the map.

Using the map

Applies to vehicles: with navigation system



Fig. 46 Map with crosshairs turned off



Fig. 47 Map with crosshairs turned on

– **Calling up the map**: Press the NAV button multiple times.
– **Turning the crosshairs on**: Press the control in the map view
– **Turning the crosshairs off**: Press the BACK button.

When the crosshairs are turned off:

① Orientation: The map is either oriented to the **North** or according to the **Dir. of travel**.

② Scale: Turn the control knob to the left or right to decrease or increase the scale.

③ Distance and calculated arrival time to the destination/stopover

④ Calculated delay based on traffic conditions. Refer to ⇨ *page 68*.

⑤ Altitude display

⑥ Vehicle location

⑦ Display of an upcoming turn

⑧ Map split screen ⇨ *page 65*

When the crosshairs are turned on:

⑨ Additional information about the crosshairs location: If you select a location on the map with the crosshairs, available information such as the address is displayed.

⑩ Map content, such as traffic information, favorites or restaurants

⑪ Display of the geocoordinates where the crosshairs are located (latitude and longitude)

⑫ Moving along the route: This function can be used while route guidance is active. Turn the control knob to the left or right to move the map along the current route.

⑬ Destination details menu: Display of available details about the crosshairs location, such as address or the name of a point of interest. The location of the crosshairs can be set as the destination or stopover, stored in the directory or called up .

⑭ Calculating alternative routes to the destination that is currently entered ⇨ *page 66*

Map display

Applies to vehicles: with navigation system and Audi connect

With online map view, you can display the map with satellite images.



Fig. 48 Online map view



Fig. 49 Street View map view

Requirement: The requirements for Audi connect services must be met ⇨ *page 48*.

▸ Select: NAV button > **Settings** control button > **Google/std map** > **Google Earth**.

The map display is based on data packets received from the Internet in the form of satellite images, which are then combined with the roadways from the **Standard** map display. There are two gigabytes of memory space on the MMI hard drive that can be used to temporarily save the map/navigation data that was received. This is roughly the amount required for the map/navigation data from a 4,000 km route. As long as the satellite images that loaded for route guidance are stored on the hard drive, you can use them without having an active data connection.

Street View

With Street View, you can explore many places in the world through the eyes of a pedestrian. Street View is available when the symbol (1) ⇨ *fig. 48* is displayed in the side menu.

To activate the Street View, turn the control knob to a scale of less than 30 m.

The following functions are available:

– **Exploring an area step-by-step**: Press the control knob when the symbol (4) ⇨ *fig. 49* is displayed.
– **Increasing/decreasing the current view in four stages**: Turn the control knob to the left or to the right (3).
– **Turning the view to the left/right or upward/downward**: Move your finger on the MMI touch in the desired direction.

If available, Street View displays a picture of your destination during the last two maneuvers when route guidance is active. The **Split screen info** function must be turned **On** for this to occur ⇨ *page 65*.

Additional information

Displays of additional information in the MMI display such as Panoramio photos of attractions/point of interests can be switched on in the **Map content** ⇨ *page 65* menu. To display the map content, move the crosshairs onto something in the map and press the control knob. You can now view information such as photos of the attraction or point of interest in the **Additional information** menu.

Tips

– Refer to the notes in the chapter **About Audi connect** before starting the system ⇨ *page 48*.
– The stored data for the online map view can be deleted with **Factory settings** ⇨ *page 33*.
– The online map display is an Audi connect service and is updated regularly when the function is opened. The process may take several seconds. ▶

– When the online map display is switched on with the 3D position map type, the MMI display automatically switches to the 2D position when driving through tunnels.
– For safety reasons, the online Street View functions can only be used when the vehicle is stationary.

Additional settings

Storing a favorite/home address

Applies to vehicles: with navigation system

Favorites are stored automatically as a contact in the directory.

▸ Select: NAV button > **Route guidance** control button > **Favorites**.

– **Storing a favorite**: Select **Create favorite**. Select and confirm a favorite with the displayed functions.
– **Storing a home address**: Select **Home address**. Select and confirm a home address with the displayed functions.

A home address can be stored for each cell phone/SIM card that is connected to the MMI as well as the public MMI directory. It is only visible when the respective directory is active ⇨ *page 42*.

Additional functions include:

– **Call**: Select and confirm a favorite or the home address. Select and confirm **Call**.
– **Change**: Select and confirm a favorite or the home address. Select and confirm **create new favorite/home address**.
– **Showing on the map**: Select and confirm a favorite or the home address. Select and confirm **Show destination on map**.
– **Delete**: Select and confirm a favorite or the home address. Select and confirm **delete favorite/home address**.

Tips

For privacy protection, note that the display of the favorites and home address depends on the cell phone that is connected. To use the favorites and home address regardless of the connected cell phone, store the favorites and home address in the MMI public directory **Visible to all**) ⇨ *page 43*. In this case, all favorites and the home address will be accessible to all MMI users.

Storing a destination in the directory

Applies to vehicles: with navigation system

Two addresses can be assigned as destinations (private/business) to each contact in the directory.

▸ Select: NAV button > **Route guidance** control button > *entered destination* > **Store in directory**.

– **Storing a destination as a new address card**: Select **New contact**. Enter a name. Enter additional data, if necessary. Select and confirm **Save contact**.
– **Assigning the destination to an existing address card**: Select and confirm an address card. Select and confirm **Save contact**. If you already have an address card for a destination, the old destination will be overwritten.

Add to favorites: To be able to access a destination quickly, the destination can be displayed in the list of favorites when the ☑ function is turned on ⇨ *page 60*.

General settings

Applies to vehicles: with navigation system

▸ Select: NAV button > **Settings** control button. ▶

Route criteria

HOV lanes[1)]: With the **Avoid** function, HOV lanes are excluded when calculating routes. With **Allow**, the MMI will route you through HOV lanes and show them on the map.

Highways/Scenic route/Toll roads/Tunnels/Ferries/Motorrail: Select the **Avoid** option if the navigation system should not include highways, scenic routes/toll roads, tunnels, ferries or motorrails when calculating a route. With the **Scenic route** option, you also set which countries have a scenic route.

Time restricted roads: Using **Minimize** excludes time restricted roads, such as pedestrian zones, from the route calculation. When using **Auto**, the MMI decides if the time restricted roads should be included when calculating the route guidance based on the entries stored in the navigation data.

Seasonal closing: Using **Minimize** excludes seasonally closed roads, such as mountain passes, from the route calculation. When using **Auto**, the MMI decides if the seasonally closed roads should be included when calculating the route guidance based on the entries stored in the navigation data.

Day/night map

Day/Night: The map is displayed with a light/dark background.

auto: The map display changes from day to night when the headlights are switched on.

Map type

Destination: The map shows the destination and is oriented to the north.

2D - heading up/2D - north up: The current vehicle position is displayed. The map is oriented in the direction of travel or to the north.

3D: When this function is switched on, the current vehicle position is shown on a three-dimensional map and oriented in the direction of travel. At a scale of 100 km and larger, the map is oriented to the north.

Overview: The entire route from the vehicle location to the destination is displayed on the map. The map scale depends on the length of the route. The map is oriented to the north.

Map view

Standard ⇨ *page 62*

Google Earth ⇨ *page 63*

Traffic ⇨ *page 68*

Map POIs

Map contents such as traffic information, favorites or restaurants can be displayed ☑ or hidden.

Split screen info

Requirement: Route guidance must be started ⇨ *page 61*.

Route info: During route guidance, up to three upcoming maneuvers are displayed with the calculated distance ⑧ ⇨ *page 62, fig. 46*. The current street traveled, the upcoming maneuver, traffic information or points of interest on the current route are also displayed. The next maneuver is shown in the bottom line.

Overview map: The entire route from the vehicle position to the destination is show in the map split screen.

off: No map split screen info is shown.

Intersection map

When this function is switched **On**, a detailed view of the intersection is shown temporarily in the map split screen when there are upcoming maneuvers.

Auto zoom

on: The map scale is selected automatically depending on the type of road traveled (interstate, highway, other roads). When there are upcoming maneuvers, the scale is ▶

1) High occupied vehicle

automatically reduced to provide a better detailed view. The zoom process is shown in the map side menu ② ⇨ *page 62, fig. 46*.

Intersection: When the route guidance is on, upcoming turns are temporarily zoomed at a detailed scale so that you can see the street route.

off: The map scale you have chosen is kept.

Low fuel routing

When this function is **On**, a message appears in the MMI display when the fuel gauge goes below the reserve marking. When this message is confirmed, a list of gas stations in the area is displayed. When a gas station is selected, route guidance from the current vehicle position is calculated.

Speed limit display

The maximum speed limits for expressways, highways and main streets can be switched **On**-/**Off** if they are stored in the navigation data.

Voice guidance

Voice guidance: The voice guidance prompts can be **Complete** or **Shortened**. With the **Traffic** function, voice guidance prompts are only given when there are traffic incidents on your route. When **Off** is selected, no voice guidance prompts are given.

Voice guidance during call: Voice can be turned on ☑ or off during a phone call.

Entertainment volume: refer to ⇨ *page 32*

Voice guidance volume: refer to ⇨ *page 32*

Delete favorites

Stored favorites can be deleted individually, or all at once.

Delete last destinations

The destinations you have entered last are automatically stored. They can be deleted individually or all at once.

Presentation mode

The **Presentation mode** helps you effectively plan and display a route by showing map contents or route criteria. You can **Set starting point** when you would like to calculate a route starting from a location other than the vehicle position. Start **Presentation mode** to simulate route guidance.

Tips

If avoiding any criteria makes route guidance impossible, that criteria will still be used when calculating the route.

Tour settings

Applies to vehicles: with navigation system

▸ Select: NAV button > **Route** control button.

Calculate alternative routes

Up to three suggested routes and your criteria are shown in the map side menu.

The route that was calculated according to the criteria you selected is shown on the map. The distance to the destination and the calculated arrival time is also shown. You can select the possible routing in the alternative routes using the control knob.

Route list

The route list is visible only when route guidance is active and contains information regarding the route, the names of the streets and the length of the route sections. When traveling on highways, possible parking lots and rest areas are shown, which you can select as a stopover.

Avoid route ahead

When route guidance is active, the calculated route will avoid the area you have specified, if possible. The navigation system calculates an alternative route.

The route to be avoided that you have entered applies only to the current route and must be reset if necessary. ▶

The areas you have selected to avoid will appear with red and white shading on the map.

Troubleshooting

Applies to vehicles: with navigation system

Problem	Solution
The **home address** that was previously stored is no longer displayed.	A different home address can be defined for each directory (public/private). A public stored home address is only visible when there is *no* cell phone connected ⇨ *page 35* and *no* SIM card inserted in the SIM card reader ⇨ *page 48*. If a cell phone is connected, the home address for the corresponding private directory is displayed instead of the public home address. Therefore, storing a home address for both the public directory and each cell phone used is recommended. For additional information about the directory, refer to ⇨ *page 42*.
Favorites that were previously stored are no longer displayed.	The favorites in the MMI public directory are available for all users in the vehicle If a cell phone is connected, both the favorites for the private directory and the favorites stored in the public directory are displayed If a favorite should be available for all users, it must be stored in the public MMI directory. A favorite in the private directory must be marked as **Visible to all** if it should be available for all users ⇨ *page 43*.

Trip information

Calling up traffic information

Optimized route

Applies to vehicles: with navigation system

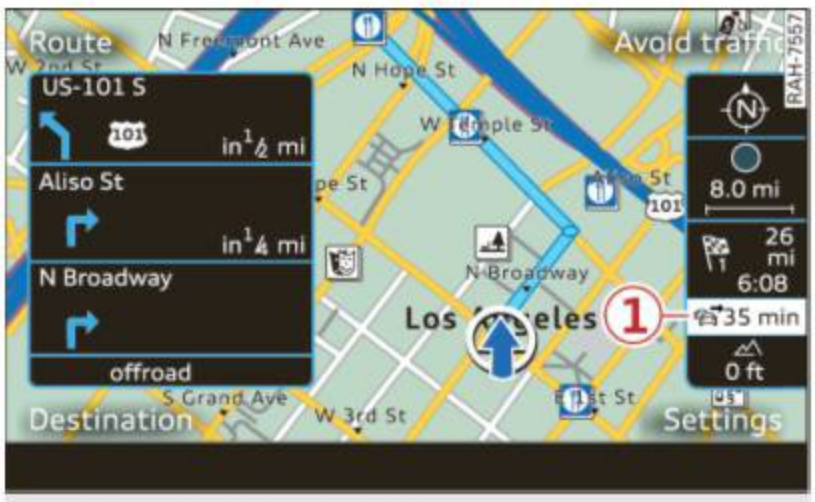


Fig. 50 Optimized route display



Fig. 51 Displaying optimized route

Requirement: Route guidance must be active ⇨ *page 57* and the map must be displayed ⇨ *page 58*.

By receiving traffic information from the TMC satellite - depending on availability - the MMI calculates an optimized route and the possible time saved for the current route guidance. You can decide yourself which route you would like to use.

Displaying optimized route

You can recognize that the MMI has calculated an optimized route for the current route guidance if the symbol (1) appears in the side menu ⇨ *fig. 50*.

– **White symbol**: The MMI is suggesting an optimized route for the current route guidance.
– **Gray symbol**: There is no alternative route for the current route guidance.

Selecting the optimized route

If the MMI has calculated an optimized route, you can display this route.

– Press the **Avoid traffic** control button. The alternative route and the potential time saved are displayed ⇨ *fig. 51*.
– Select and confirm (2) **Show optimized route** ⇨ *fig. 51*. The current route and the optimized route with the calculated arrival time are displayed.
– Select and confirm the control knob and the desired route.

Traffic information (TMC)

Applies to vehicles: with navigation system

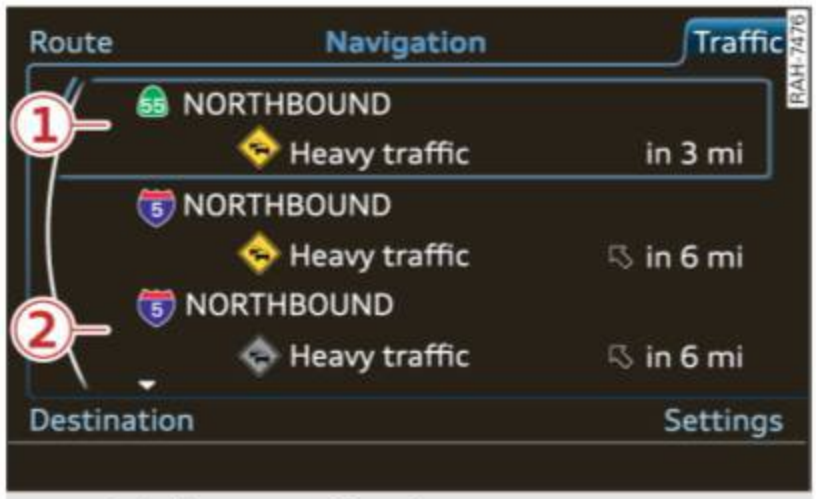


Fig. 52 Calling up traffic information

▸ Select: NAV button > **Traffic** control button.

Reception of traffic information is indicated by the **TMC** symbol in the status line.

TMC symbol	Meaning
Displayed	TMC stations are available and dynamic navigation is switched **On** ⇨ *page 65*.
Is grayed out	TMC stations are *not* available and dynamic navigation is switched **On**.
Not displayed	Dynamic navigation around a traffic jam is switched **Off**.

▶

– **Calling up a detailed view of traffic information**: Select and confirm a traffic report in the list.
– **Calling up the next traffic report**: Press the control knob.
– **Displaying the selected traffic information on the map**: Select and confirm **Show on map**. The shaded line shows the street and the length of the traffic jam.
– **Displaying the next traffic report on the map**: Press the control knob.

Traffic information display

① ⇨ *fig. 52* **Colored warning symbols**: Traffic incidents on your route are shown in the upper section of the list, sorted according to distance.

Warning symbols with ⮌: Avoided traffic incidents

② ⇨ *fig. 52* **Grayed out warning symbols**: Traffic incidents that are not on your route They are sorted according to road type (interstate, highway, other road), country and name).

Tips

To use the traffic message channel (TMC), you must contact the SiriusXM* service provider.

Traffic information (Sirius)

Applies to vehicles: with navigation system and Audi connect

The MMI can receive real-time traffic information about accidents, road construction and other incidents by satellite.



Fig. 53 Colored markings

– **Turning on the traffic map display**: Select the NAV button > **Settings** control button > **Google/std map** > **Traffic**.

Traffic information display (Sirius)

① **green**: traffic is moving freely

② **orange**: stop-and-go traffic

③ **red**: Congestion

Shaded markings indicate the length of the congestion.

Colored warning symbols: There is a traffic incident immediately head on the route.

Grayed out warning symbols: Traffic incidents that are not on your route

The display of colored markings, warning symbols, etc. can be set in the **Map POIs** menu ⇨ *page 65*.

You can also display the traffic information in the online map view ⇨ *page 63*.

Tips

Traffic information (Sirius)* is not available in Canada.

Listening to the radio

Selecting the radio

The radio supports three bands: FM, AM and SiriusXM (satellite radio). With an HD Radio receiver*, you also receive FM/AM radio stations in digital format.*



Fig. 54 Station list (HD radio)

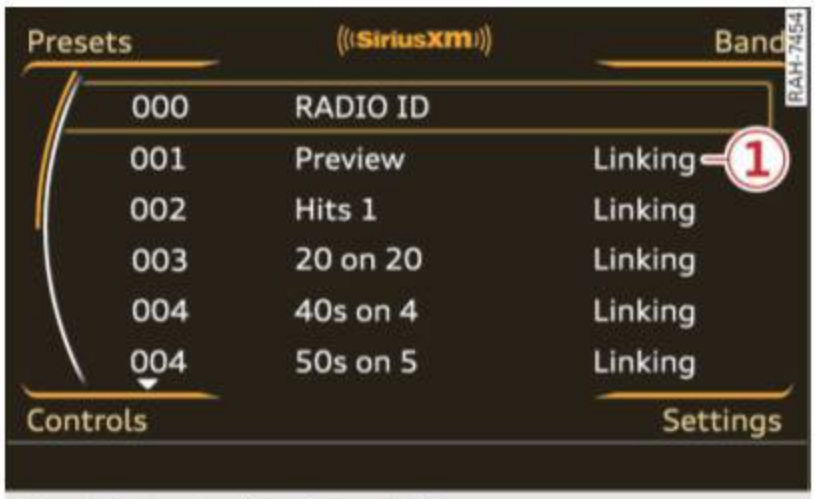


Fig. 55 Station list (SiriusXM)

▸ Select: the RADIO button.

After selecting the radio, the last menu that was open is displayed.

– **Show station list**: press the RADIO button again. The receivable stations are shown on a radio station list ⇨ *fig. 54* and can be selected directly.
– **Select a station**: select and confirm a station from the station list (FM only max. 61 stations, FM+HD max. 90 stations, AM max. 50 stations, SirusXM* max. 384 stations) When the FM/AM station is available in digital format, the HD symbol appears in the FM/AM station list Ⓑ ⇨ *fig. 54*. If the digital signal is lost, the radio switches automatically to the analog FM/AM station. Digital FM HD Radio channels may have several additional channels*. The available additional channels* are listed under the related radio station. When leaving the reception area, additional channels* that are not received are identified with the symbol Ⓐ.
– **Tag a song for iTunes* (SiriusXM*/HD Radio*)**: connect your Apple device to the Audi music interface in your MMI. Press the control in the station list. Select and confirm **Tag this song for iTunes**. A for the track that is currently playing is stored on your Apple device. Synchronize it with iTunes. The tagged track will display the next time you open your iTunes media center.

You can also store the tagged track temporarily in the MMI (up to 50 tracks). Once you connect your Apple device to the MMI, the tags are stored on the device.

– **Store a station**: select and confirm a station from the station list . Press and hold the control knob until *station name* **store here** appears in the presets list. Select and confirm the desired presets location.
– **Updating the station list**: To update the station list in the AM reception range, select and confirm **Update station list**. The station lists in the FM and SiriusXM* bands are updated automatically. If the station currently selected in the SiriusXM* band is no longer available, station 001 (Preview) is automatically stored.
– **Select the band**: press the **Band** control button. Select and confirm the desired band. The current band is shown in the title line. **Or**: press the RADIO button repeatedly until the desired band is displayed.
– **Enable SiriusXM* satellite radio**: select and confirm the **SiriusXM*** band. The station list is displayed. Select **000 Sirius ID**. The Electronic Serial Number is displayed. If the radio signal is lost, radio stations that are not currently received are displayed in the station list with the following system information:

LINKING: The tuner is currently not receiving any satellite signal ① ⇨ *fig. 55* ▶

ANTENNA: No antenna is connected to the tuner.

The system information turns off when the radio stations are received again.

Tips

- The stations in the AM station list are still displayed after leaving the reception area. Reception is lost.
- To receive satellite programs, you must contact the SiriusXM* service provider.
- Objects such as buildings, tunnels, bridges, terrain, other vehicles or objects on the roof of the vehicle can result in decreased performance.
- Satellite Radio reception is not available in Alaska and Hawaii.
- HD Radio reception is not available in Canada.
- Not all broadcasting services support **iTunes Tagging***.

Radio functions

Fig. 56 FM band functions

▸ Select: RADIO button > **Controls** control button.

The following functions can be selected, depending on the band that is selected ⇨ *fig. 56*:

① Store station

The selected station is stored in the next empty position in the presets list. Select and confirm the desired presets location. Each station/frequency can only be stored once in the presets list.

② Information (i)

The radio text such as the station name, artist or title or the information accompanying the program are shown in the MMI display. The availability of Radio text is also indicated by a symbol in the information window.

③ Previous/next station

The previous |◀ or next ▶| frequency that can be received is selected. **Or**: turn the on/off knob to the left/right (|◁◁ / ▷▷|).

④ Manual search

The frequency bars are displayed. Select and confirm the desired frequency.

⑤ SCAN

All stations are played for several seconds each. To stop the **SCAN**, select and confirm **SCAN** again or press one of the buttons to open a menu. The current station is selected.

⑥ Presets list

The presets list can contain up to 50 stations from all frequency bands.

- **Store station**: select the **Store** > *station name/frequency* **here** control button. The selected station is stored in the next empty position in the presets list. Select and confirm the desired presets location.
- **Select a stored station**: press the **Presets** control button. Select and confirm a station from the presets list.
- **Move a stored station**: press the **Presets** control button. Select and confirm the station from the station list and then **move** *station name/frequency*. Select and confirm the desired presets location.

Additional settings

▸ Select: RADIO button > **Settings** control button.

The following settings can be selected, depending on the band that is selected: ▶

Sound settings

Refer to ⇨ *page 31*

Show station information (SiriusXM*)

If information such as the artist or title is available for the current track, it will be displayed in a pop-up window if this function is activated.

Station names (FM)

Fixed: The current station name stays in the display.

Variable: Different station names for FM stations are displayed.

Enable now playing screen*

When this function is switched on ☑ and the station or presets list is open, various information for the current station (such as the station name, the artist or current photos of the artist) is displayed after several seconds.

Channel display order (SiriusXM*)

- **Channel number**: The channels are listed by channel number in ascending order.
- **Channel name**: The channel are listed by channel name in alphabetical order.
- **Category and channel number**: The channels are listed by category and then by channel number.
- **Category and channel name**: The channels are listed by category and then by channel name.

Category filter (SiriusXM*)

The channels that are displayed in the channel list can be filtered according to your personal desires as to type of program. The selection of program categories depends on what your provider offers. If you select the option **Deactivate filter**, all filter options are deactivated and all available channels are displayed in the satellite channel list.

Radio ID

The Electronic Serial Number is displayed.

Deleting presets entries

Requirement: A station must be stored in the presets list ⇨ *page 71*.

Stored stations can be deleted individually, or all at once.

Troubleshooting

Problem	Solution
A station with poor reception will no longer be displayed in the station list once you switch to a different station.	Store the station ahead of time and then select it from the presets list later ⇨ *page 71*.

Playing media

Calling up media

You can start and operate various media drives through the MMI control panel.



Fig. 57 Possible sources



Fig. 58 Playlist

Requirement: A media drive must contain audio/video files ⇨ *page 23*.

▸ Select: MEDIA button.

The source overview or the last played file is displayed after calling up the media type.

– **Selecting a source**: Press the **Source** control button. Select and confirm a source from the list. **Or**: Press the MEDIA button multiple times until the desired source is displayed.
– **Playing audio/video files**: Select the **Browse** control button > *category* (such as **Artists**) > *folder* > *track*. Depending on availability, the track ① ⇨ *fig. 58*, the artist ②, the playing time ③ and the album cover ④ are displayed.
– **Moving one level up in the folder structure**: Press the BACK button. **Or**: Select and confirm **Go up**.
– **Moving to the highest level in the folder structure**: Press the MEDIA button.
– **Selecting the previous/next track/chapter**: Move the On/Off knob briefly to the left/right (|◁◁ / ▷▷|).
– **Fast forwarding/rewinding an audio/video file**: Move the On/Off knob to the left/right (|◁◁ / ▷▷|) until the desired position is reached.
– **Pausing/resuming playback**: Press the On/Off knob briefly.
– **Displaying a playlist**: Press the **Now playing** control button.

Possible sources are ⇨ *fig. 57*:

① Jukebox ⇨ *page 24*
② SD card reader ⇨ *page 24*
③ DVD drive ⇨ *page 24*
④ Audi music interface (for example, an iPod, USB or an external audio/video input*) ⇨ *page 27*
⑤ Bluetooth audio player* ⇨ *page 25*
⑥ Wi-Fi audio player* ⇨ *page 26*

Tips

– You can scroll through long lists of folders/tracks quickly by turning the control knob quickly. The scrolling speed depends on the number of folders/tracks.
– The video image is only displayed when the vehicle is stationary for safety reasons. You will only hear the video while you are driving.
– Video playback through the iPod/iPhone/iPad does *not* continue after stopping and starting the vehicle.

Media center

Various categories for selecting audio/video files are available in the media center.



Fig. 59 SD card categories (level 1)

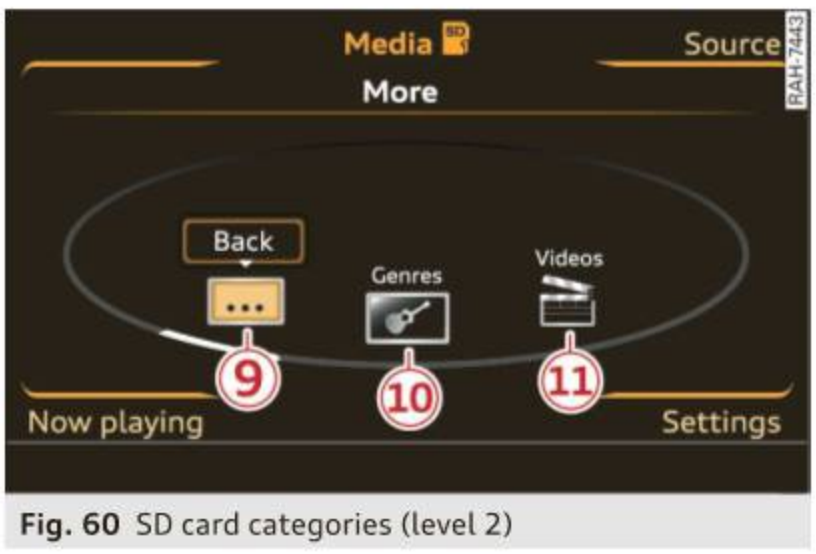


Fig. 60 SD card categories (level 2)

▸ Select: MEDIA button > **Browse** control button.

Depending on the active source, audio/video files from the following categories an be selected and added to the playlist ⇨ *fig. 59*, ⇨ *fig. 60*:

① Track

All available tracks are displayed. Select and confirm a track.

② Artists

All available artists are displayed. Select and confirm an artist, an album and then a track.

③ Albums

All available albums are displayed. Select and confirm an album and then a track.

④ Album browser

All available album covers are displayed. Select and confirm an album cover from the overview. The first track in the selected album is played.

⑤ Music search

Enter a search term (artist, album or track). Select and confirm **OK** and then an audio file.

⑥ Directories

The folder structure or the track/chapter list in the selected source is displayed. Select a folder, if necessary. Select and confirm a track.

⑦ Playlists

All available playlists are displayed. Select and confirm a playlist and then a track.

⑧ More

The second level of the media center is displayed.

⑨ Back

The first level of the media center is displayed.

⑩ Genres

All available genres are displayed. Select and confirm a genre (such as **Pop**), an artist, an album and then a track.

⑪ Videos

All available video files are displayed. Select and confirm a video file from the list.

Repeat

Requirement: A category (such as **Albums**) must be selected.

The playlist can be restricted using the **Repeat** control button. For example, if you would like to add all tracks from a selected genre to the playlist, select the *Category* (such as **Genres**) > *desired genre* (such as **Pop**) > **Repeat** control button. If you would like to repeat a single track, select the desired track within a folder and press the **Repeat** control button. The selected track is repeated. ▶

Tips

- Only the categories supported by the medium are available. For example, CD/DVD-ROM tracks cannot be selected with categories such as **Artists**, **Albums** or **Genres**. With an iPod (Audio music interface source), the categories **Podcasts**, **Audio books** and **Composers** are also available.
- The video image is only displayed when the vehicle is stationary for safety reasons. You will only hear the video while you are driving.
- When changing sources in the **Media** menu, the **Repeat** function is automatically switched off.
- Video playback through the iPod/iPhone/iPad does *not* continue after stopping and starting the vehicle.
- Some DVDs let you select, for example, the audio track, the subtitle or the track/chapter while it is playing.
- When synchronizing a portable audio device with "Cloud" services, playlists may display incorrectly in the MMI. Use the local media center for the corresponding device.

Additional settings

Requirement: A source must be selected.

▸ Select: MEDIA button > **Settings** control button.

The following settings can be selected depending on the active source and the storage medium:

Sound settings

Refer to ⇨ *page 31*

Input level

Requirement: Requirement: A portable player must be connected with a 3.5 mm stereo jack adapter cable*/AV adapter cable*/iPod adapter cable (plus)* ⇨ *page 27*, .

The volume of the portable audio device is adapted to the MMI. Audi recommends adjusting the volume of the portable audio device to 70 percent of the maximum output.

Shuffle

With the function ☑ switched on, all files in the playlist are played and displayed in random order.

Video picture settings

Aspect: The picture format can be adjusted automatically with **auto**. The picture width varies depending on the film format. The formats **4:3** and **16:9** can also be displayed. The picture is expanded to fill the entire MMI display using the **Zoom** function and is displayed in the stored picture format using **Original**. With the **cinemascope** function, image is displayed in the format 47:20.

AV standard[1)]: You can select **PAL**, **NTSC** or **auto** for an externally connected device. The same standard must be selected on the playback device. Selecting the incorrect AV Standard can cause a poor-quality image, no image or no color at all.

Brightness: Reduce/increase the brightness.

Contrast: Reduce/increase the contrast.

Color: Reduce/increase the intensity of the color.

Additional track information

With the function switched on ☑ and a playlist open, various information about the current track (such as artist, album and embedded album cover*) as well as the playing time and the remaining playing time are displayed. By pressing the control knob in this view, you can also select and confirm a new track are select the desired location in the play bar of the current track. ▶

1) Applies to portable players that are connected using the iPod adapter cable plus*/AV adapter cable*.

Show full screen

Requirement: A video file must be playing and the vehicle must be stationary.

The video image expands to fill the entire MMI display. Press the BACK button or a control button to switch off the full screen display. The chapter list is displayed.

Show DVD menu

Requirement: A video DVD must be playing and the vehicle must be stationary.

The DVD main menu is shown in the MMI display. To select a menu item, move your finger on the MMI touch touchscreen and press the control knob.

Audio track

Requirement: A video DVD must be playing.

The audio track (language and audio format) can be manually adjusted. The language and audio format depend on the video DVD.

Subtitle

Requirement: A video DVD must be playing.

Subtitles can be selected manually for playback. The languages available depends on the DVD.

Parental control

Requirement: A video DVD must be playing and the password must be entered (the password set at the factory is "1234").

Playback of video DVDs can be restricted using parental controls. Select and confirm a security level (such as **Level 5**). Eight different **content ratings** can be selected for parental control. If you select Level 5*, for example, for the parental control level, all DVDs from level 1-5 can be played. Video DVDs with a higher level will not play. All restrictions are canceled when the function is switched to **Off**.

You can change the current password using the **Change password** function.

Add to/clear Jukebox

Refer to ⇨ *page 24*

Tips

- The video image is only displayed when the vehicle is stationary for safety reasons. You will only hear the video while you are driving.
- The **Repeat track** and **Shuffle** functions switch off automatically when the source changes in the **Media** menu.
- The DVD drive supports DTS (Digital Theater Systems) only ⇨ *page 24*.
- The security levels for the **Parental control** are based on the US standards from the Motion Picture Association of America (MPAA). Note that the age levels for video DVDs in European countries may differ.
- Not all video DVDs have parental control.
- When changing sources in the **Media** menu, the **Shuffle** function is automatically switched off.
- Password entry will be locked for approximately one minute if you enter the incorrect password for **Parental control** three times in a row. The password can only be reset by an authorized Audi dealer.

A

Adapter cable (Audi music interface) 27
Address
Entering as a destination 57
also refer to Destination input 57
Adjusting the language 33
Adjusting the sound (Tone) 31
Adjusting the volume
MMI control panel 7
Multifunction steering wheel 12
Adjusting volume
Multifunction steering wheel 17
Voice recognition system 32
Audi connect 48
Activating 48
Apps 50
Configuring 53
Data connection 54
Functions 50
Logging into myAudi 49
Notes 55
Online destinations (points of interest) . 60
Requirements 48
Services 50
Troubleshooting 56
Using the SIM card reader 48
Audi connect services
Street View 63
Audi music interface 27
Adapter cable 27
Connecting/disconnecting 27
Screen settings 75
Audio file
Fast forwarding/rewinding 73
Playing 73
Previous/next 73
Audio player
refer to Bluetooth 25
Audio track (DVD) 75
Audi phone box 37
Automatic zoom 64
AV standard 75

B

Balance (sound) 31
Band
refer to Selecting frequency band 70
Bass (sound) 31
Bluetooth
Audio player 25
Device search 45
Pairing a cell phone 36
Settings 45
Browsing album covers 8, 74
Buttons
MMI control panel 7
Multifunction steering wheel 12

C

Cable (Audi music interface) 27
Calculating alternative routes 61
Call
Accept/decline 13
Answer/reject 39
Holding/resuming 13
Placing on hold/resuming 40
Calling
Multifunction steering wheel 13
Voice recognition system 18
Calling up menus (operation) 7
Call waiting 13, 40
Care 6
CD
ejecting 24
loading 24
Multifunction steering wheel 15
Player 24
also refer to Media 73
Cell phone
Audi phone box 37
pairing 36
Playing music 25
also refer to Cell phone 36
also refer to Telephone 35
Cell phone compartment
refer to Audi phone box 37
Cell phone preparation
refer to Telephone 35
Characters
MMI control panel 10
Charging or replacing batteries 37

City events 51
Cockpit overview 5
Command (Voice recognition system) 17
Conference call 40
Connecting/disconnecting an MP3 player . 25
Connections
refer to Media drives 23
Contact
Accessing 43
calling 13
Deleting 43, 46
dialing 42
Editing 43
Favorites 39
Importing/exporting 44
Navigating 61
Reading 43
Searching 43
Sending as a text message 43
Storing 45
Using as a destination 43
Control buttons 7
Control knob 7
Controls
MMI control panel 5, 7
Multifunction steering wheel 12
Overview 5
Correcting problems
Audi connect 56
Media drives 29
Cover flow
refer to Browsing album covers 8, 74
Cover Flow
refer to Browsing album covers 8, 74

D

Data connection
Configuring 54
Data roaming 54
Resetting the configuration 54
Usage counter 54
Data encryption 33
Data protection
Media drives 23
Storing a contact 45
Data usage info 55
Date 31
Daylight saving time 31
Default factory settings 33
Deleting
Bluetooth device 45
Contact 43, 46
E-Mail 41
Favorites/home address 64
Favorites (contact) 39
Favorites (navigation) 64
Input 8, 9
Jukebox 24
Last destinations 64
Recent calls 45
Station 71
Text message 41
Voicemail number 45
Demo mode (navigation) 64
Destination details 61
Destination input 57
Destination input (point of interest) 58
Destination on map
Displaying 61
Selecting 58
Directory 42
Memory capacity 46
MMI touch 8
Multifunction steering wheel 13
Saved location 42
Settings 46
Sorting order 46
Storing an address 45
Directory entry
refer to Contact 43
Display
Brightness 33
MMI control panel 10
Multifunction steering wheel 12
Navigation display 62
Settings 33, 75
Traffic information 68
also refer to Screen settings 75
Driver information system 12
Drives
refer to Media drives 23
Driving noise compensation (SDV) 31
DTMF tones 38

DVD
Audio track 75
AV standard 75
Drive 24
ejecting 24
Full screen 75
loading 24
Main menu 75
MMI touch 8
Multifunction steering wheel 15
Parental control 75
Screen settings 75
Subtitles 75
Voice recognition system 22
also refer to Media 73
Dynamic route
refer to Traffic rerouting 64
Dynamic volume
refer to Entertainment volume 32

E

E-mail 41
End call 13
Ending a phone call 13
Entering address
Voice recognition system 20
Entering a destination
Geocoordinates 61
Home address 60
Loading from the directory 61
Online destinations (points of interest) . 60
Picturebook Navigation 59
Voice recognition system 20
Entering an address
MMI control panel 45
Entering destination
Favorites 60
Entering letters/characters (Speller) 9
Enter letters (Speller) 9
Entertainment volume 32
Entry
using the Voice recognition system 17

F

Facebook 51
Fader (sound) 31
Fast forwarding/rewinding (audio/video file) 73
Fast forwarding (audio/video file) 73
Favorites
Deleting 64
Displaying on the map 64
Editing/deleting 39, 64
Entering as a destination 60
Storing 39, 64
File formats (Media devices) 28
Fixing problems
Radio 72
Flight information 52
Fuel prices 50
Full screen (DVD) 75

G

Global commands (Voice recognition system) 18
GPS (time) 31

H

Help
Audi connect 56
Media drives 29
Navigation 67
Radio 72
Telephone 47
Voice recognition system 18
Home address
Editing/deleting 64
Storing 64

I

Importing/exporting (contacts) 44
Incoming call
refer to Telephone 35
Individual voice training 33
Information
Care 6
Owner's Manual 4
Traffic Safety 5
Info (traffic information) 68

Input
using the MMI touch 8
using the Speller 9
Input level (media) 75
Internet
Connecting 48
also refer to Audi connect 48
iPod
refer to Audi music interface 27

J

Join conference 13
Jukebox 24
deleting 24
filling 24
Memory 24

L

Last destinations
Deleting 64
Loading 60
Licensing agreements 6
Listening to music
refer to Playing media 73
Listening to the radio
MMI control panel 70
Multifunction steering wheel 15
Voice recognition system 22
Loss of reception
Radio 72
Low fuel routing 64

M

Making a call
MMI control panel 35
Map
calling up 57
Display traffic information 68
Entering a destination 58
Traffic 69
Voice recognition system 20
Map display 62, 63, 64
Measurement units 33
Media
Calling up 73
Formats 28
Pause 73
Picture format 75
Previous/next track/chapter 73
Repeat range 75
Selecting source 73
Shuffle 75
Media center
Album browser 74
Albums/videos 74
Artists 74
Genre 74
Music search 74
Playlists 74
Track 74
Media devices
Supported formats 28
Media drives
Audi music interface 27
Bluetooth audio player 25
DVD drive 24
Jukebox 24
Restrictions 23
SD card reader 24
Troubleshooting 29
Wi-Fi audio player 26
Memory
Jukebox 24
Memory card
refer to SD card reader 24
Menu language 33
Messages (text/e-mail) 40
Microphone on/off 13
MMI components 5
MMI control panel 5
Controls 5
Operation 7
Restarting 33
Switching on/off 7
Symbols/menus 10
System update 33
MMI touch
Adjusting sound distribution 8
Browsing album covers 8
Directory 8

DVD 8
Input (deleting) 8
Moving the map 8
Moving the crosshairs 58
Multifunction steering wheel
Button 12
Calling 13
Cancel route guidance 14
Compass 14
Directory 13
Home address as a destination 14
Listening to the radio 15
Navigation 14
Operating 12
Pause 12
Playing media 15
Recent calls 13
Switching tabs 12
Voice guidance 12
Voice guidance on/off 14
Voice recognition system 12
Music collection
refer to Jukebox 24
Mute 7, 12
Muting/unmuting the microphone 40
myAudi
Activating Audi connect services 49
Configuring Audi connect services 49
Importing contacts 44

N

Navigating 57
also refer to Route guidance 57
Navigation
Multifunction steering wheel 14
Route plan 66
Storing a destination in the directory .45, 64
Troubleshooting 67
Voice recognition system 20
Navigation destination
refer to Destination input 57
Navigation display
Display 62
MMI display 63
Navigation with pictures 59
Network connection (Wi-Fi) 53
Network selection (telephone mode) 45
Network settings 45
New destination
refer to Destination input 57
Note
Audi music interface 27
Notes
Audi connect 48, 55
CD/DVD 23
Data protection (media drives) 23
Data protection (storing a contact) 45
Making a call 35
Media drives 23
Software licenses 6
Voice recognition system 17, 18

O

On/Off knob 7
Online destinations 20
Online map display
Calling up 63
Street View 63
Traffic 69
Online news 51
Online services
refer to Audi connect 48
Operating
Multifunction steering wheel 12
Voice recognition system 17
Operation
MMI control panel 7
Orientation
refer to Map display 62, 64
Overview
Controls 5
Menus and symbols 10
Voice recognition system 17

P

Parental control (DVD) 75
Parking information 52
Pause (audio/video file 73
Pause (audio/video file) 12
Pausing/continuing playback 15
Pausing/resuming playback 73
Phone book
refer to Directory 42

Phone number
Dialing 38
entering 38
Saving from the recent calls list 39
storing 39
Picturebook Navigation 59
Player
refer to DVD 24
Playing media 73
MMI control panel 73
Multifunction steering wheel 15
Voice recognition system 22
Point of interest 58, 61
entering 20
Presentation mode 64
Presets list 71
Previous/next track 73
Privacy protection
Audi connect 55
Problem-solving
Telephone 47
Problem solving
Navigation 67
Programming a button (multifunction steering wheel) 12
Prompt (Voice recognition system) 17

R

Radio
Announcements 71
Deleting stations 71
iTunes Tagging 70
Moving a station 71
Presets list 71
Previous/next station 71
Station tracking 71
Storing a station 71
Storing stations 70
Troubleshooting 72
Read aloud
E-mail 41
Possible commands 18
Text messages 40
Traffic information 68
Reading aloud
Contact 43
Recent calls
MMI control panel 38
Multifunction steering wheel 13
Voice recognition system 18
Redial 45
Regional stations (radio) 71
Requirements
Audi connect 48
Pairing a cell phone 36
Phone calls 37
Resetting (data connection) 54
Reset (Restart) 33
Restart (Reset) 33
Restricted use of phone 36
Rewinding (audio/video file) 73
Ringtone settings 32
Roaming
refer to Data connection 54
Route criteria 64
Route guidance
In the display 62
in the MMI display 63
Starting/canceling 61
also refer to Navigation 14
Route list 66
Route plan 61
Route list 66
Settings 66
also refer to Route plan 61

S

Safety
Making a call 35
Voice recognition system 17
when navigating 57
Saved location (directory) 42
Screen
refer to Display 12
Screen settings 75
SD card reader 24
SDV (speed dependent volume control) . . 31
Search
Point of interest 58
Search areas (point of interest) 58
Searching
Online destinations 60

Security
Audi connect 53
Data protection (media drives) 23
Data protection (storing a contact) 45
Seek (Radio) 71
Selecting a frequency 71
Selecting a source
Multifunction steering wheel 15
Voice recognition system 22
Selecting downtown 61
Selecting frequency band 70
Selecting source
MMI control panel 73
Sending a tone sequence 38
Settings
Directory 46
Media 75
Navigation 64
Radio 71
System 33
Telephone 45
Voice recognition system 17, 33
Setting up a destination 60
Setup MMI (system settings) 33
Short dialog 33
Showing shared (public) contacts 46
Shuffle (media) 75
SIM card reader 48
Software licenses 6
Software version 33
Speech dialog system
Settings 33
Volume 32
Speed display 64
Speller 9
Station assignment (radio) 71
Station name (radio) 71
Station sorting (radio) 71
Station tracking (radio) 71
Steering wheel
refer to Multifunction steering wheel . . . 12
Stopover 61
Storage space
Directory 46
Stored address
entering as a destination 20
Street View 63
Subwoofer (sound) 31
Switching tabs
refer to Multifunction steering wheel . . . 12
Symbols 4
MMI control panel 10
Navigation 14
Traffic information 68
System settings 31
Systems (sound) 31
System update 33

T

Telephone 35
Main functions 37
Microphone on/off 40
Options during a call 40
Options during a phone call 13
Settings 45
Switching microphone on/off 13
Troubleshooting 47
Text message
Deleting 41
Sending a contact 43
Settings 45
Text message dictation license 45
Text messages 40
reading 19
also refer to Text message 40
Time 31
TMC/TMCpro
refer to Traffic information 68
Tone (sound) 31
Traffic information
Optimized route 68
Sirius 69
TMC 68
Traffic rerouting 64
Traffic Safety 5
Travel information 50
Treble (sound) 31
Twitter 51

U

Update Software 33

Using Audi connect services
MMI control panel 48
Voice recognition system 19

V

Version information 33
Video file
Fast forwarding/rewinding 73
Playing 73
Previous/next chapter 73
Video image settings 75
Voice guidance 64
also refer to Multifunction steering wheel 12
Voicemail 42
Deleting the voicemail number 45
Entering the voicemail number 42, 45
Listening to voicemail 42
Voice recognition system 17
Audi connect 19
Calling 18
Command 17
Help commands 18
Individual voice training 33
Input assistance 17
Listening to the radio 22
Multifunction steering wheel 12
Navigation 20
Operating 17
Overview 17
Playing media 22
Settings 17
Switching on/off 17
Volume 12, 17
Volume 7
Entertainment volume 32
Input level 75
MMI touch 32
Parking aid 32
System volume 32
Telephone 32
Voice recognition system 12, 17

W

Weather 50
Wi-Fi
Hotspot 53
Wi-FI
Settings 53
Wi-Fi audio player 26

Z

Zoom (automatic) 64
Zoom (map) 20
Zoom (scale)
refer to Map display 62, 64

© 2013 AUDI AG

It has always been Audi's policy to continuously improve its products. Audi, therefore, reserves the right to make changes in design and specifications, and to make additions or improvements in its products without incurring any obligation to install them on products previously manufactured. Text, illustrations and specifications in this book are based on the most up-to-date information available at the time of printing.

May not be reproduced or translated in whole or in part without the written consent of AUDI AG. All rights reserved by AUDI AG. Subject to alteration or amendment. Printed in Germany.

Editorial deadline: 8/30/2013

For the sake of the environment

Printed on environmentally friendly paper (bleached without chlorine, recyclable)

Owner's manual
MMI Navigation plus
Englisch Nordamerika 11.2013
151.566.3MH.21

1515663MH21

www.audi.com