



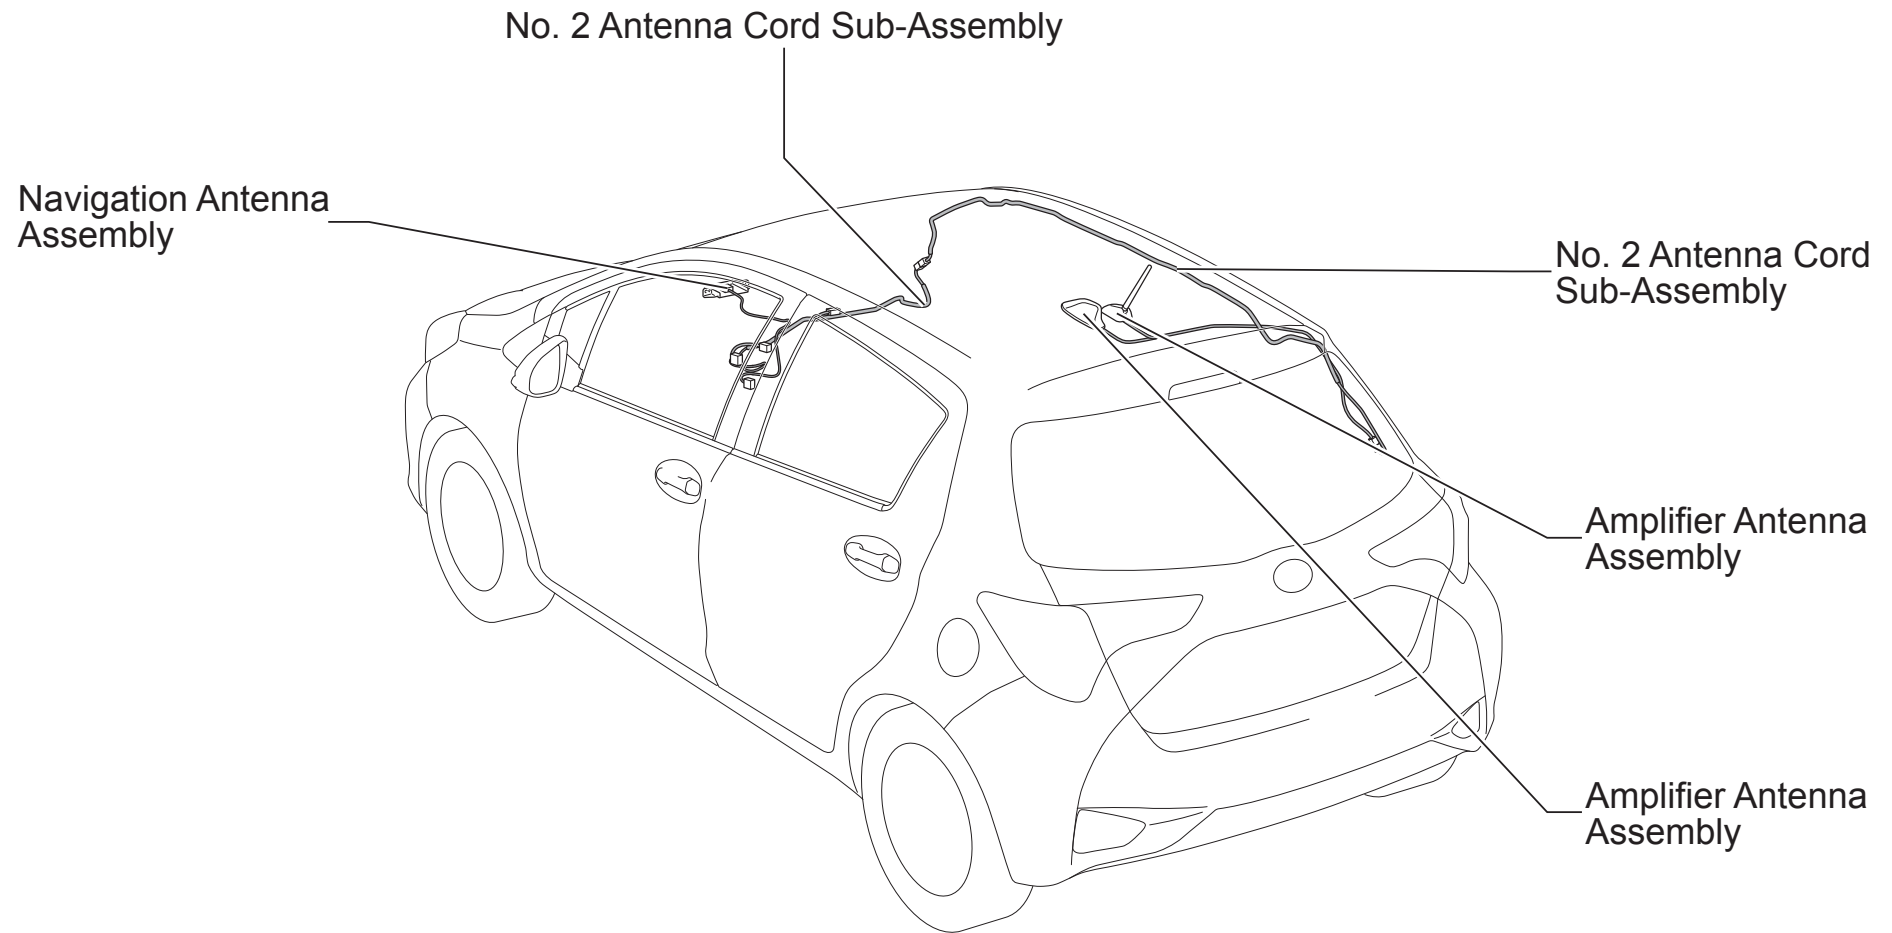



Position of Parts in Body <LHD>

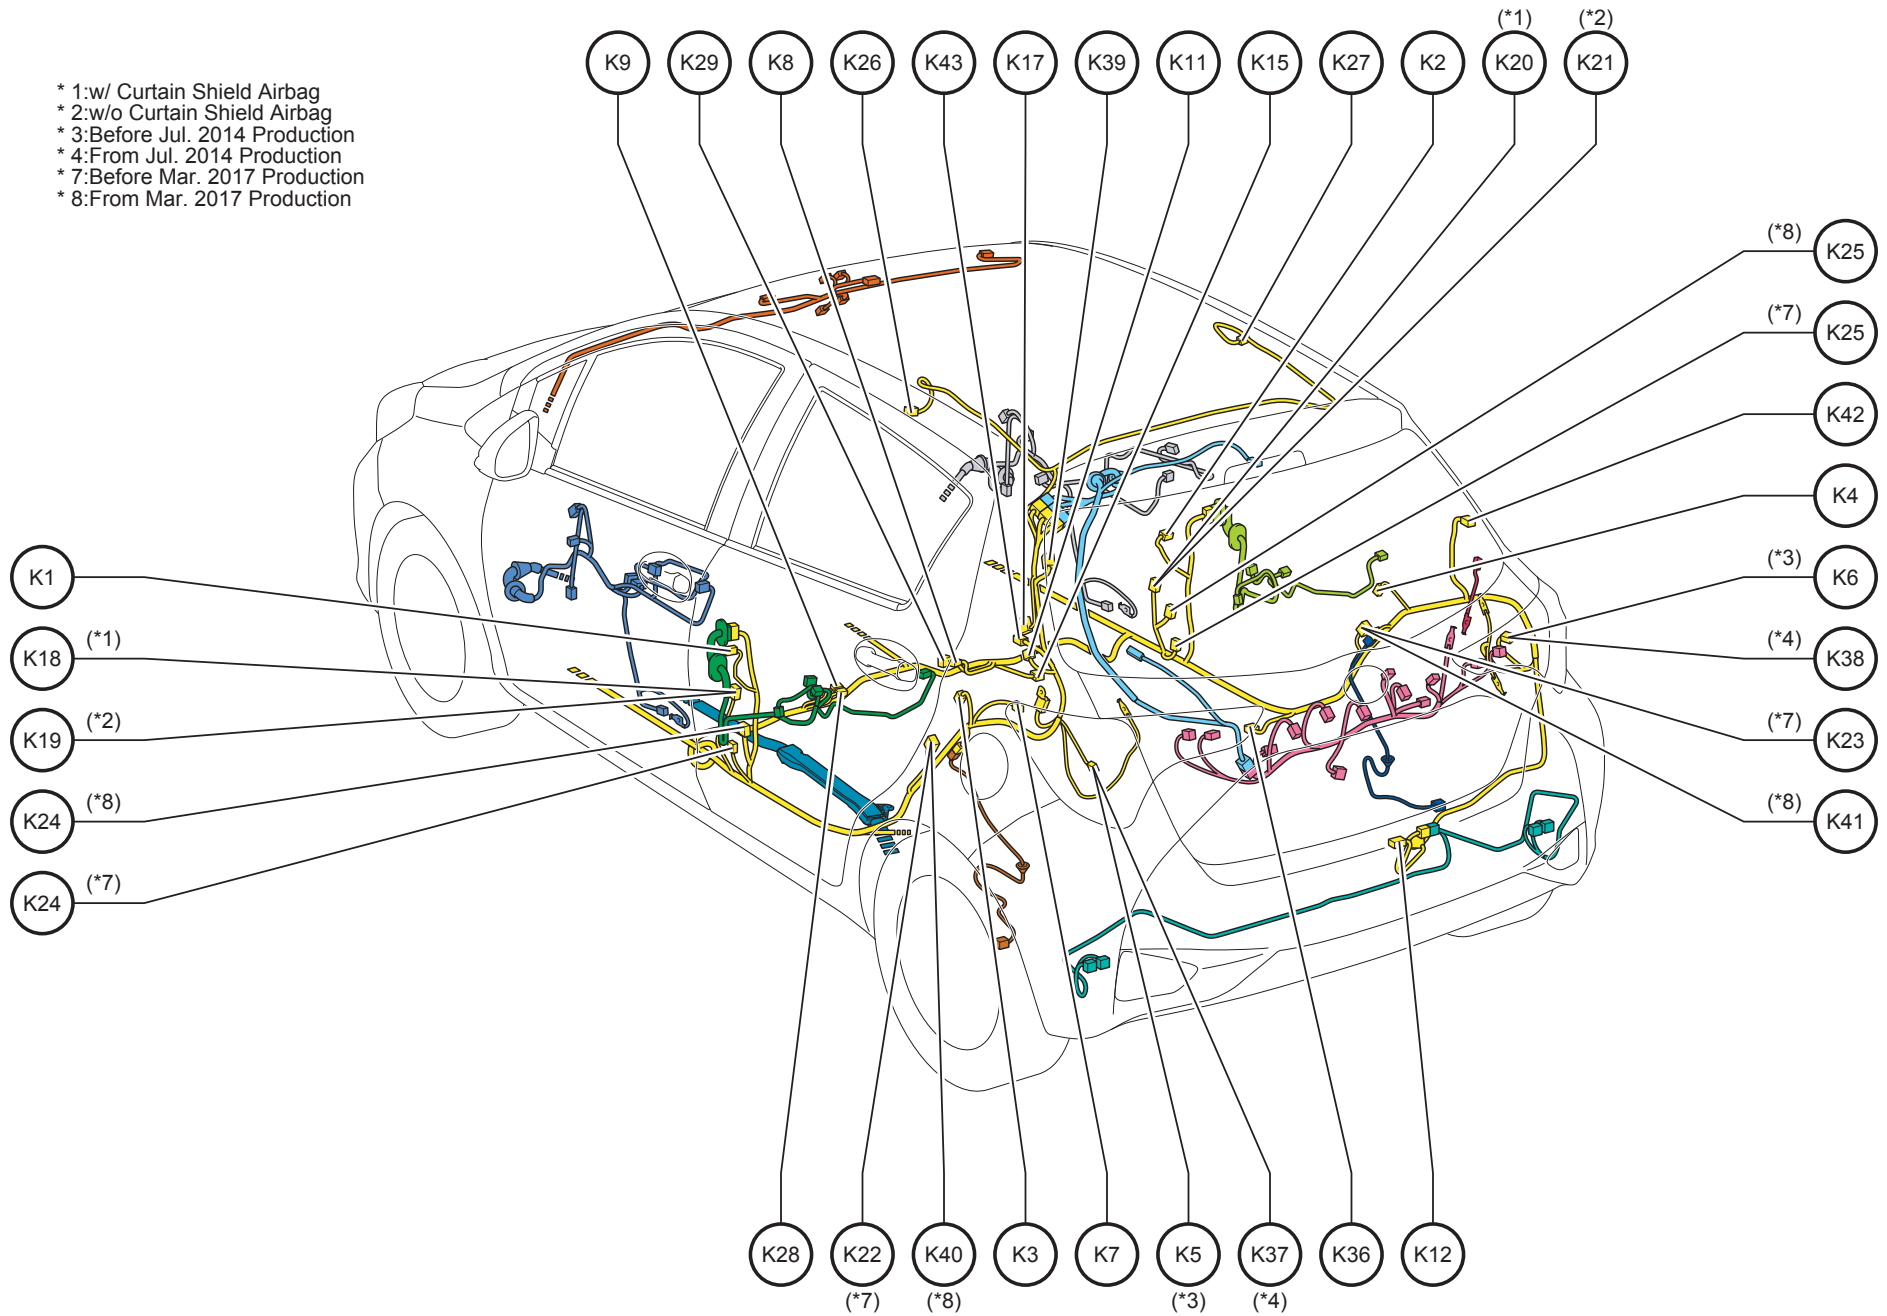


- K 1 Front Door Courtesy Light Switch Assembly LH
- K 2 Front Door Courtesy Light Switch Assembly RH
- K 3 Rear Door Courtesy Light Switch Assembly LH
- K 4 Rear Door Courtesy Light Switch Assembly RH
- K 5 Rear Combination Light Assembly LH
- K 6 Rear Combination Light Assembly RH
- K 7 No. 1 Luggage Compartment Light Assembly
- K 8 Front Seat Inner Belt Assembly RH
- K 9 Front Seat Inner Belt Assembly LH
- K 11 Door Control Receiver
- K 12 Electrical Key Antenna
- K 15 Stereo Component Amplifier Assembly
- K 17 Noise Filter
- K 18 Side Airbag Sensor Assembly LH
- K 19 Side Airbag Sensor Assembly LH
- K 20 Side Airbag Sensor Assembly RH
- K 21 Side Airbag Sensor Assembly RH
- K 22 No. 2 Side Airbag Sensor Assembly LH
- K 23 No. 2 Side Airbag Sensor Assembly RH
- K 24 Front Seat Outer Belt Assembly LH
- K 25 Front Seat Outer Belt Assembly RH
- K 26 Curtain Shield Airbag Assembly LH
- K 27 Curtain Shield Airbag Assembly RH
- K 28 Front Seat Airbag Assembly LH
- K 29 Front Seat Airbag Assembly RH
- K 36 Battery Thermometer Sensor
- K 37 Rear Combination Light Assembly LH
- K 38 Rear Combination Light Assembly RH
- K 39 Tire Pressure Warning ECU and Receiver (Tire Pressure Monitor Receiver Assembly)
- K 40 No. 2 Side Airbag Sensor Assembly LH
- K 41 No. 2 Side Airbag Sensor Assembly RH
- K 42 Rear Seat 3 Point Type Belt Assembly Outer RH
- K 43 Rear Seat 3 Point Type Belt Assembly Outer LH

Position of Parts in Body <LHD>

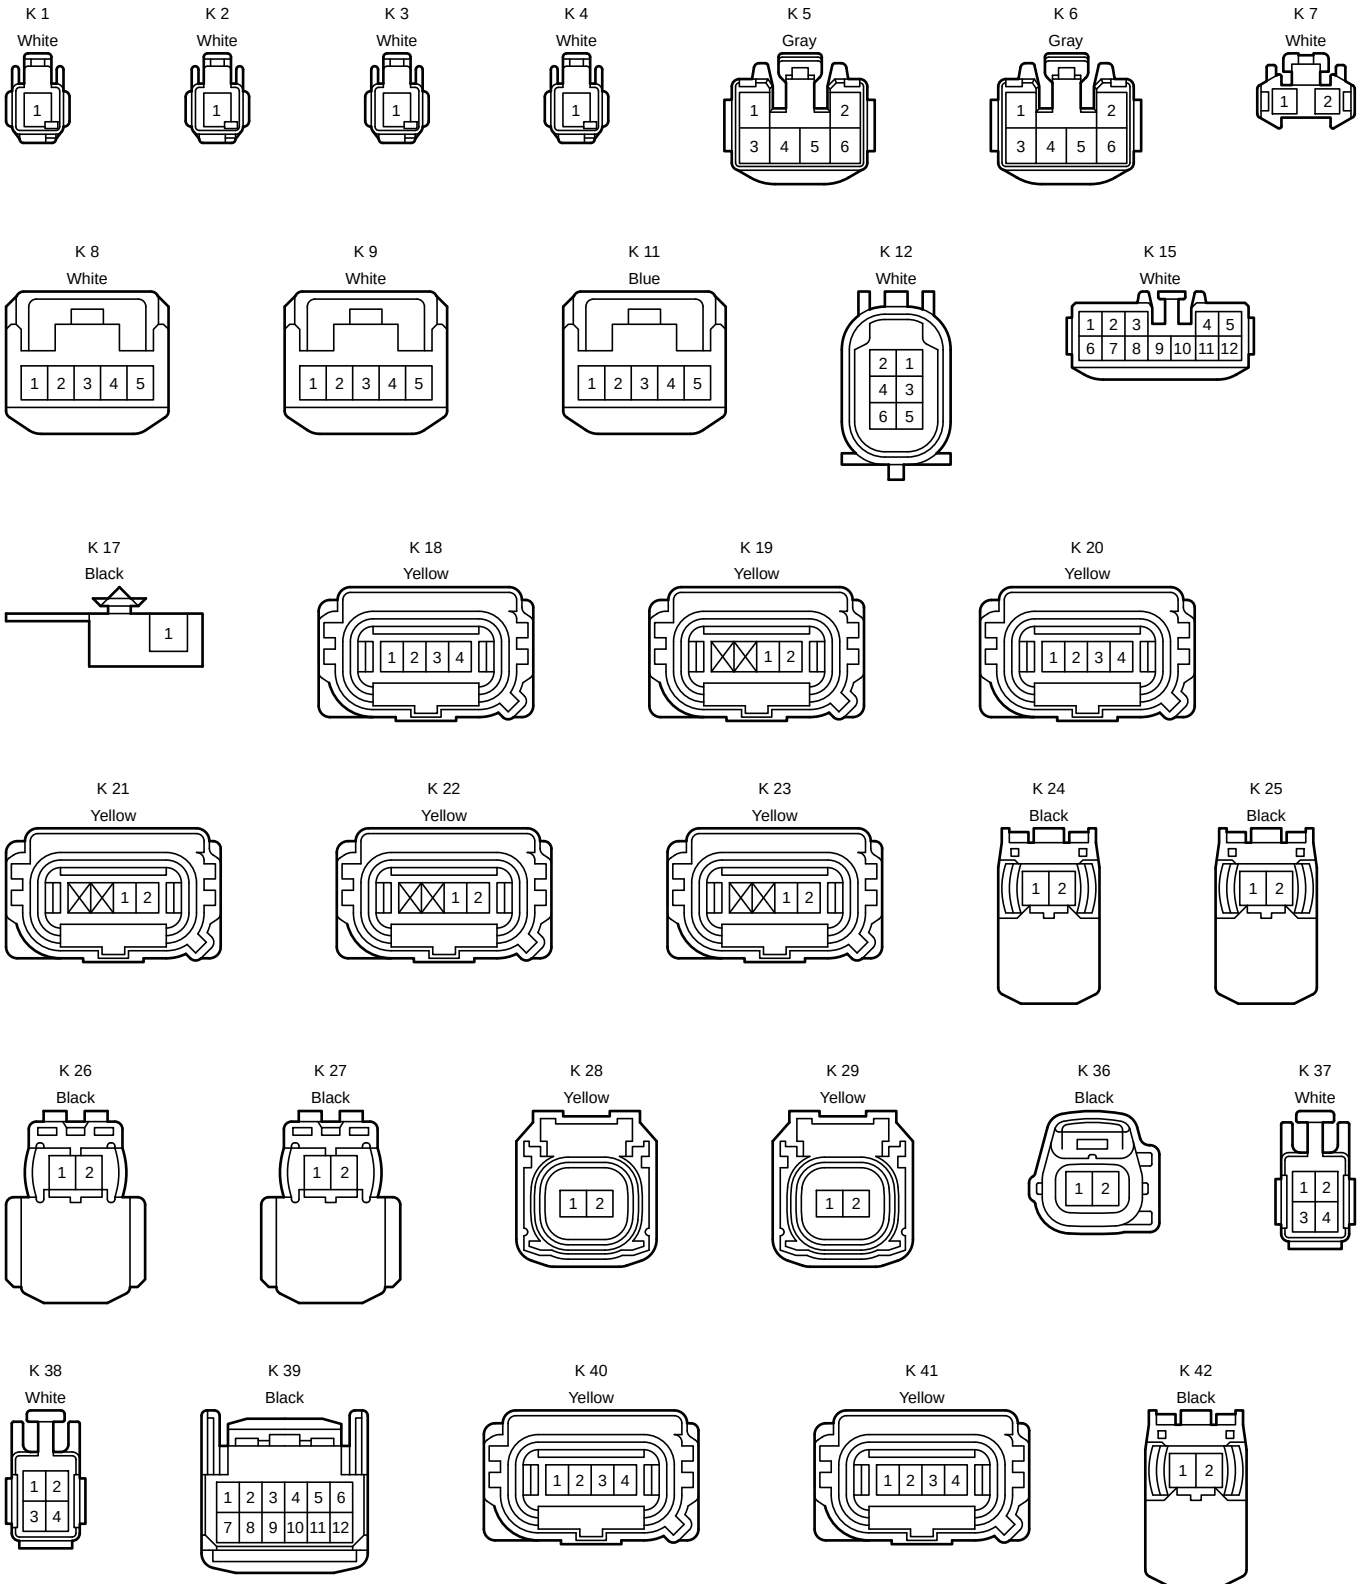



Position of Parts in Body <LHD>

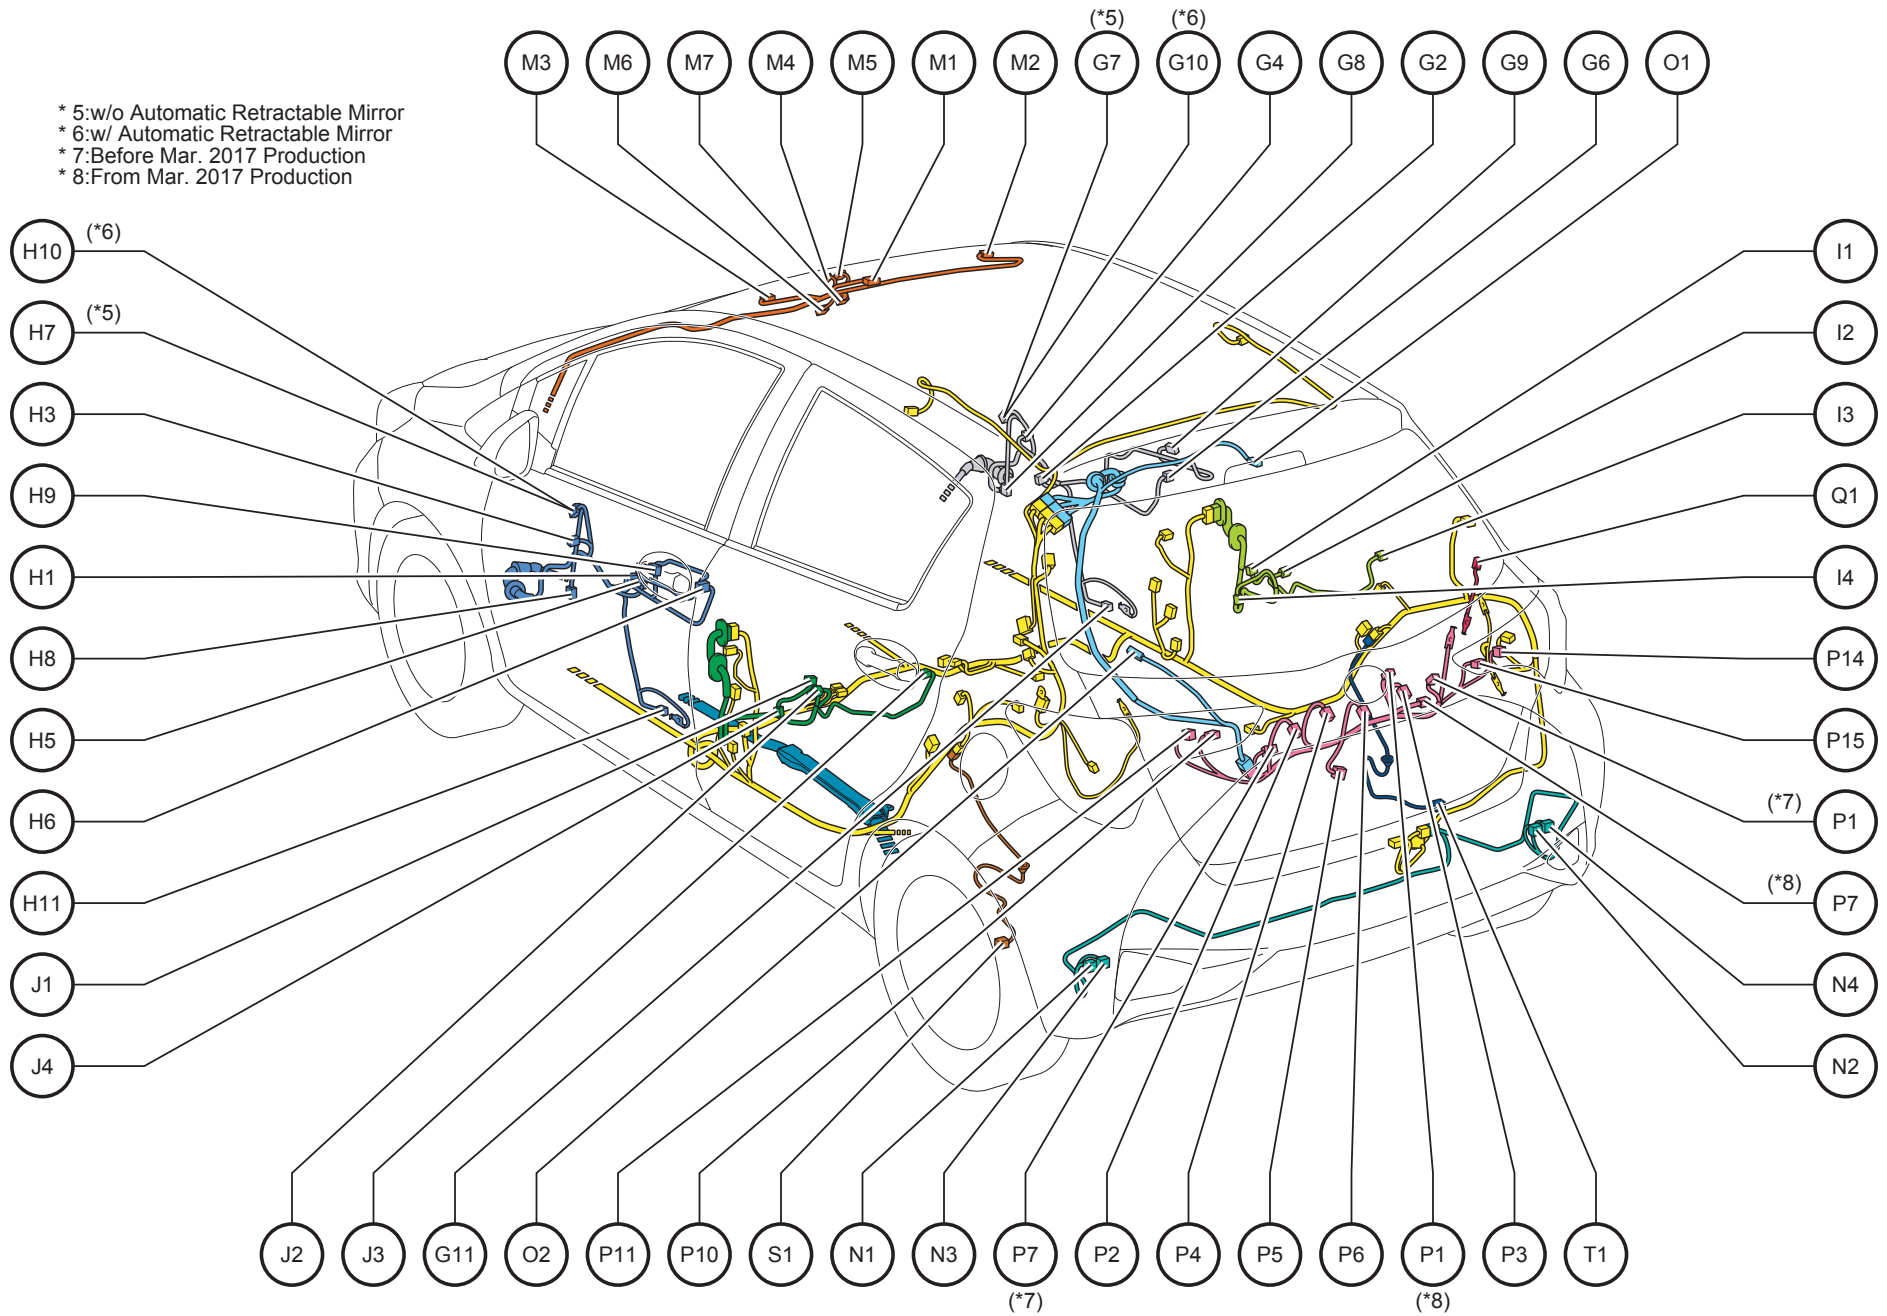

- G 2 Power Window Regulator Switch Assembly
- G 4 Power Window Regulator Motor Assembly RH
- G 6 Front Door Lock with Motor Assembly RH
- G 7 Outer Rear View Mirror Assembly RH
- G 8 Front No. 1 Speaker Assembly RH
- G 9 Front Door Outside Handle Assembly RH
- G 10 Outer Rear View Mirror Assembly RH
- G 11 Door Side Airbag Sensor RH

- H 1 Power Window Regulator Master Switch Assembly
- H 3 Power Window Regulator Motor Assembly LH
- H 5 Door Control Switch Assembly
- H 6 Front Door Lock with Motor Assembly LH
- H 7 Outer Rear View Mirror Assembly LH
- H 8 Front No. 1 Speaker Assembly LH
- H 9 Front Door Outside Handle Assembly LH
- H 10 Outer Rear View Mirror Assembly LH
- H 11 Door Side Airbag Sensor LH

- I 1 Rear Power Window Regulator Switch Assembly
- I 2 Rear Power Window Regulator Motor Assembly RH
- I 3 Rear Door Lock with Motor Assembly RH
- I 4 Rear Speaker Assembly RH

- J 1 Rear No. 2 Power Window Regulator Switch Assembly
- J 2 Rear Power Window Regulator Motor Assembly LH
- J 3 Rear Door Lock with Motor Assembly LH
- J 4 Rear Speaker Assembly LH

- M 1 Map Light Assembly
- M 2 Vanity Light Assembly RH
- M 3 Vanity Light Assembly LH
- M 4 Inner Rear View Mirror Assembly
- M 5 Rain Sensor
- M 6 Pre-Crash Safety City Sensor
- M 7 Pre-Crash Safety City Heater (Pre-Crash Safety City Heater Wire)

- N 1 Rear Fog Light Assembly LH
- N 2 Rear Fog Light Assembly RH
- N 3 Back Up Light Assembly LH
- N 4 Back Up Light Assembly RH

- O 1 Center Stop Light Assembly
- O 2 Rear Window Defogger (Back Door Glass)





























- P 1 Rear Wiper Motor Assembly
- P 2 Rear Television Camera Assembly
- P 3 License Plate Light Assembly RH
- P 4 License Plate Light Assembly LH
- P 5 Back Door Lock Assembly
- P 6 Back Door Opener Switch Assembly
- P 7 Back Door Key Switch (Door Unlock Switch Sub-Assembly)
- P 10 Rear Light Assembly LH
- P 11 Rear Light Assembly LH
- P 14 Rear Light Assembly RH
- P 15 Rear Light Assembly RH

- Q 1 Rear Window Defogger (Back Door Glass)

























S 1 Rear Speed Sensor LH


T 1 Rear Speed Sensor RH

Position of Parts in Body <LHD>

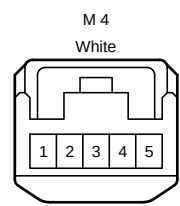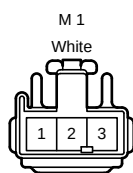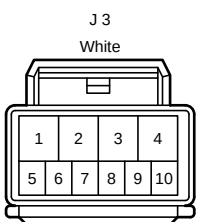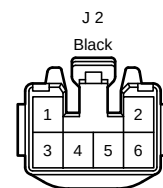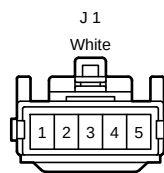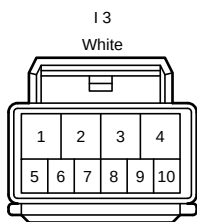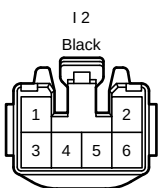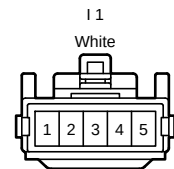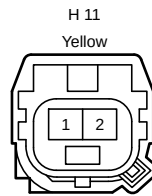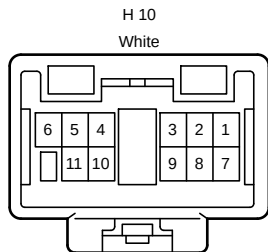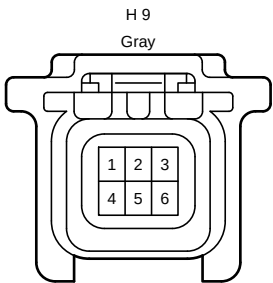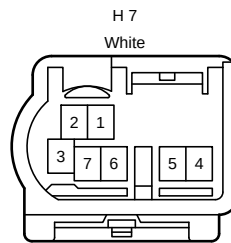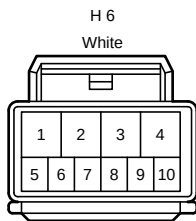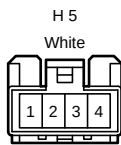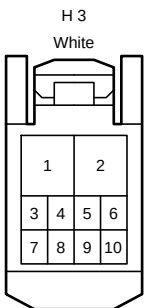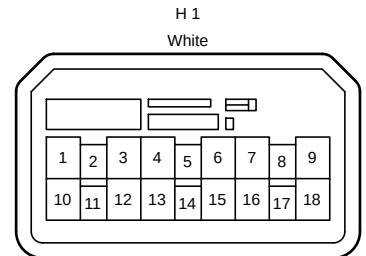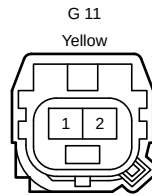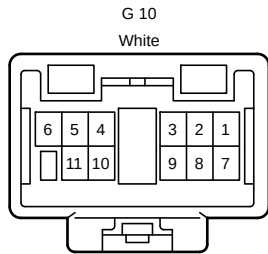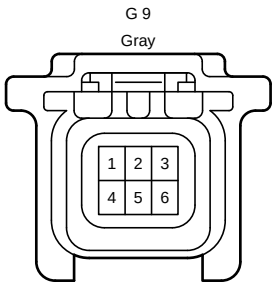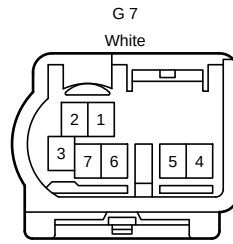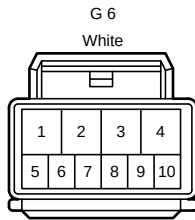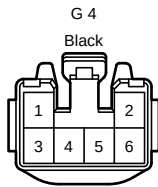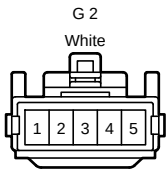

Position of Parts in Body <LHD>

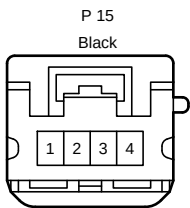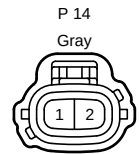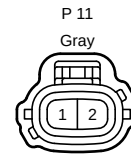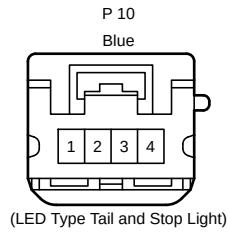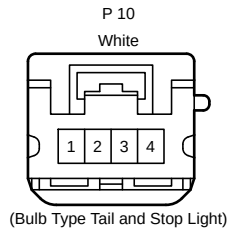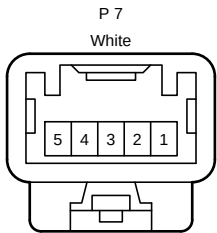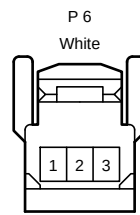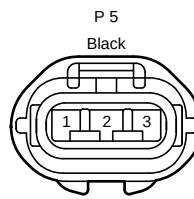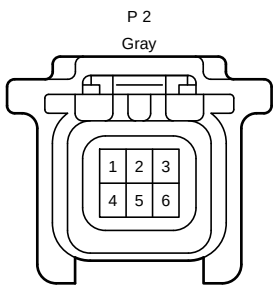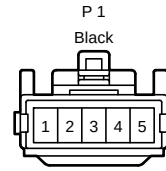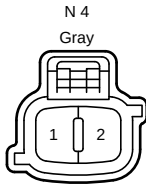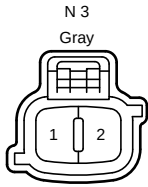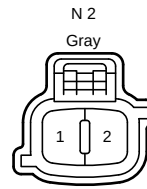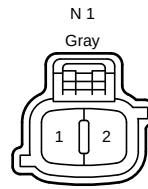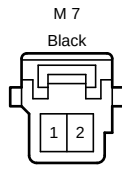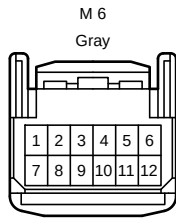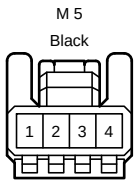

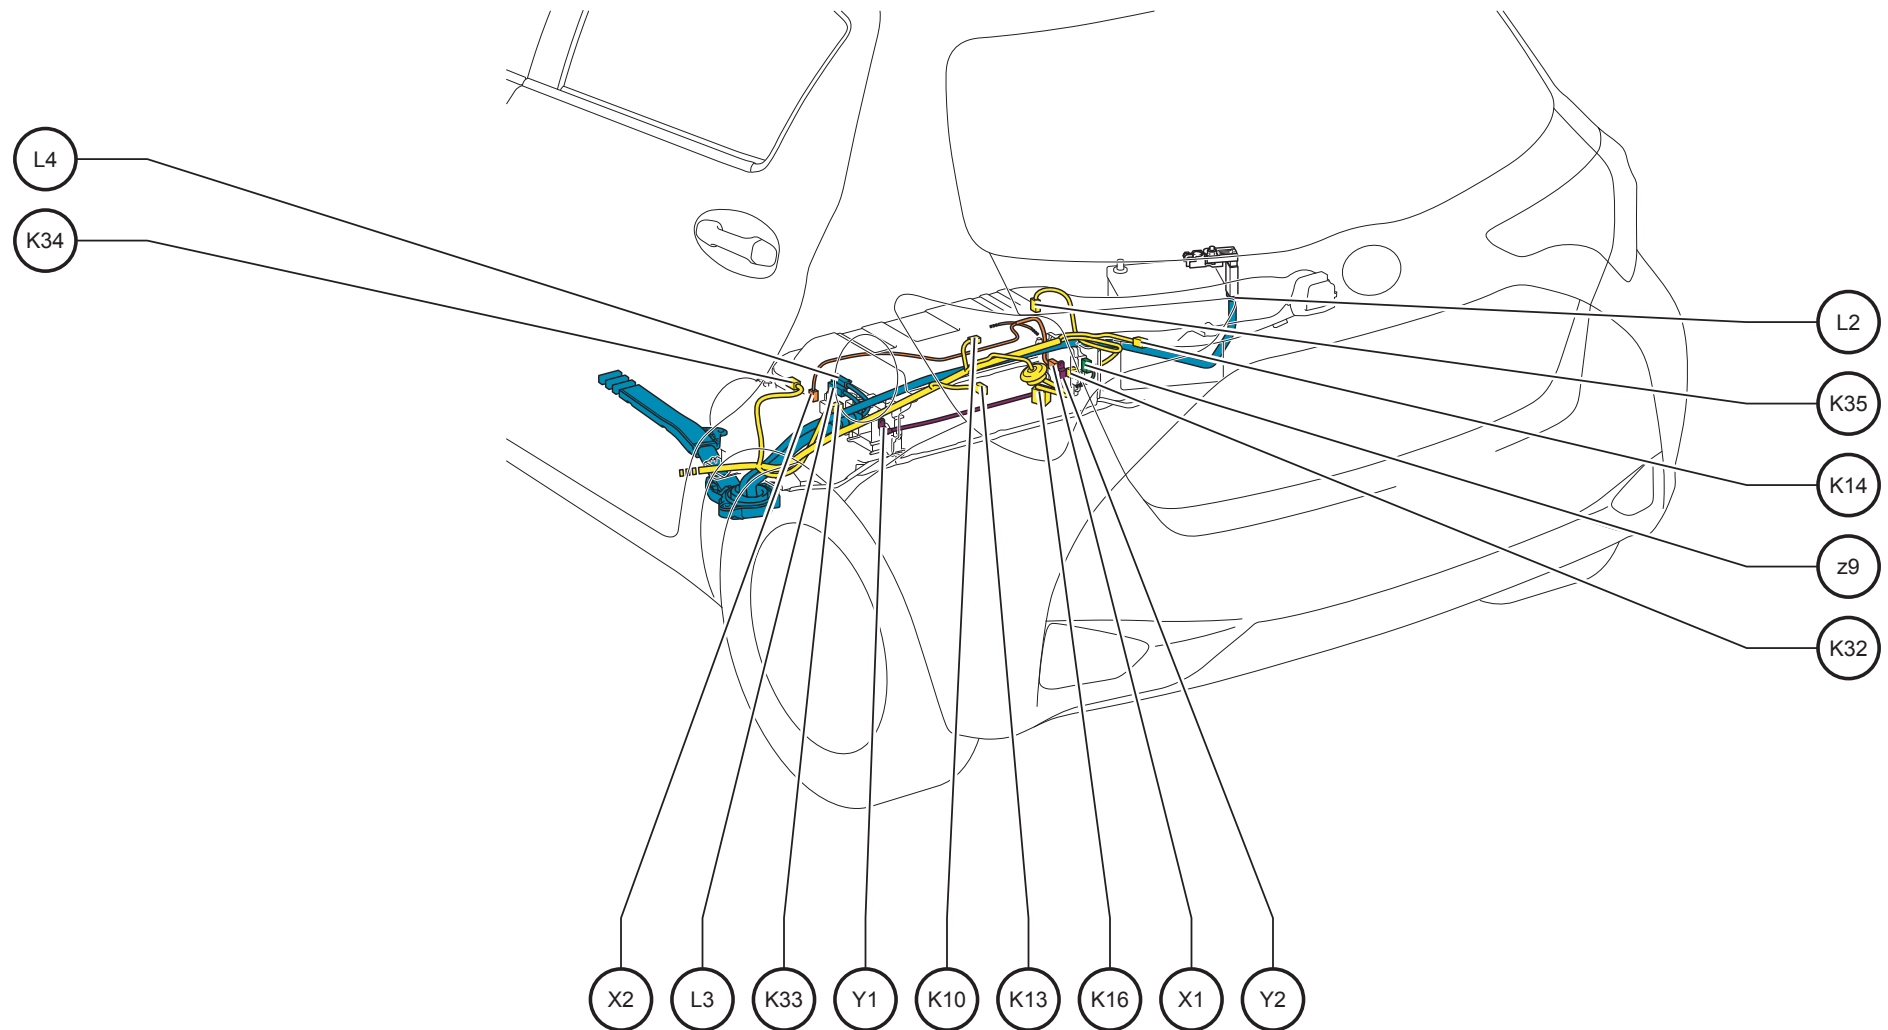

- K 10 No. 2 Indoor Electrical Key Antenna Assembly
- K 13 Rear Seat Inner Belt with Center Assembly LH
- K 14 Rear Seat Inner Belt with Center Assembly RH
- K 16 Fuel Suction Tube with Pump and Gage Assembly
- K 32 Battery Voltage Sensor
- K 33 Hybrid Battery Junction Block Assembly
- K 34 Battery Cooling Blower Assembly
- K 35 Interlock Switch (Service Plug Grip)
















- L 2 Fusible Link Block Assembly
- L 3 Hybrid Battery Junction Block Assembly
- L 4 Hybrid Battery Junction Block Assembly


- X 1 Battery Voltage Sensor , HV Supply Battery Assembly
- X 2 Hybrid Battery Junction Block Assembly

- Y 1 Hybrid Battery Junction Block Assembly
- Y 2 HV Supply Battery Assembly



- z 9 Battery Voltage Sensor , HV Supply Battery Assembly

Position of Parts in Body <LHD>

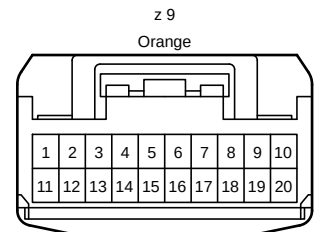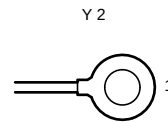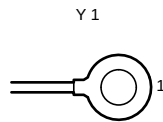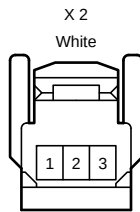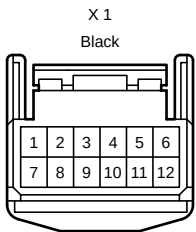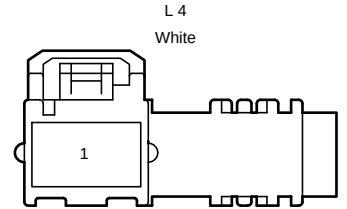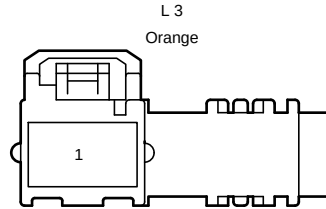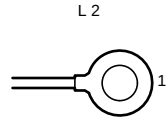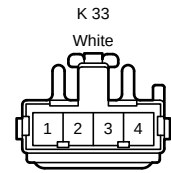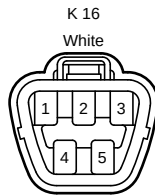
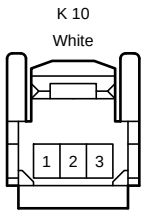


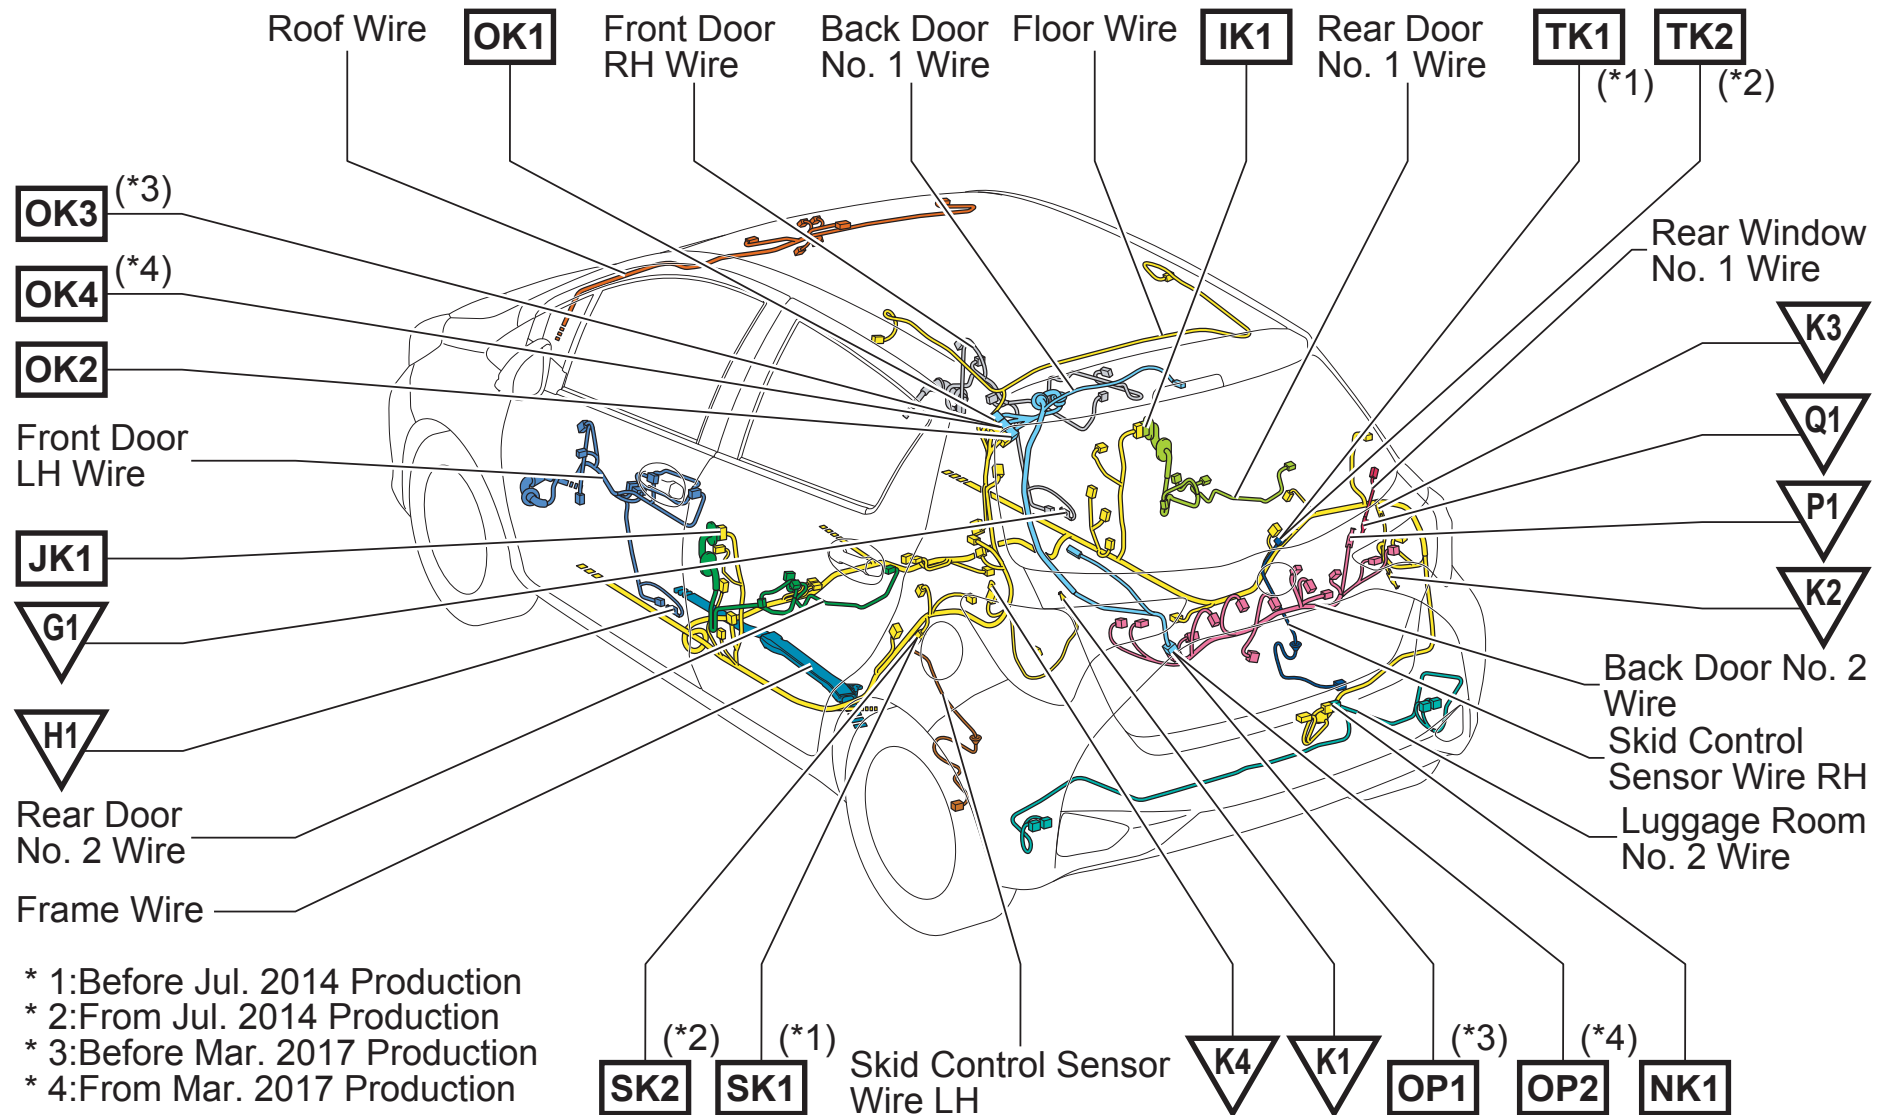


IK1
White

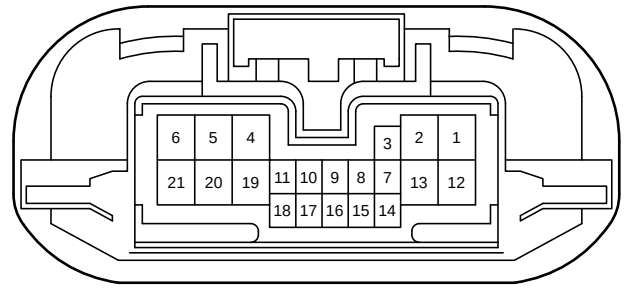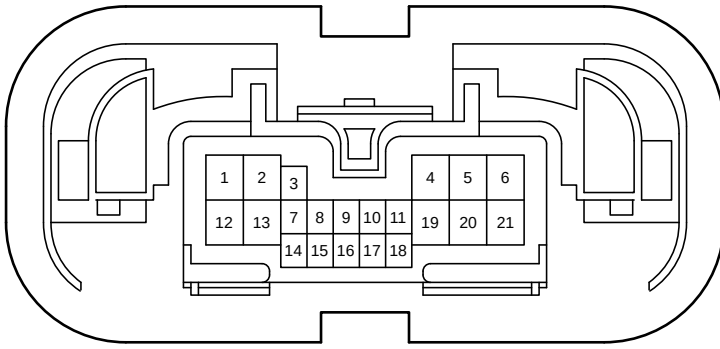


JK1
White

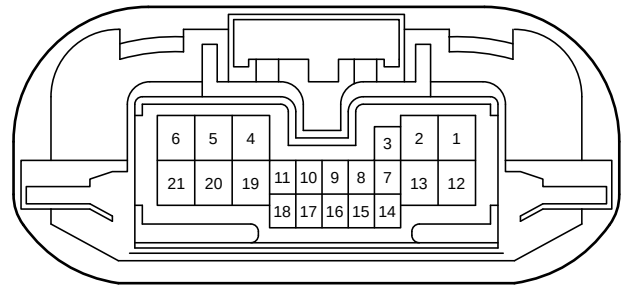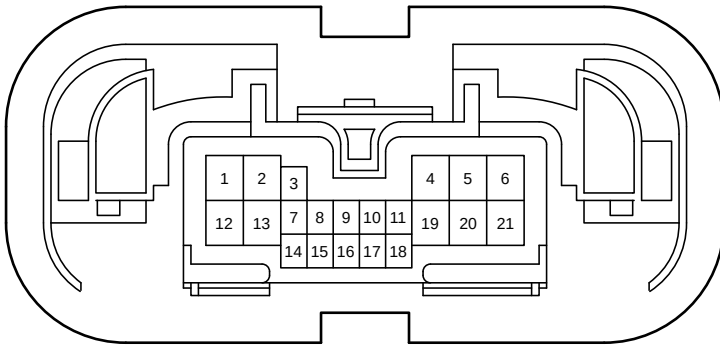



NK1
White

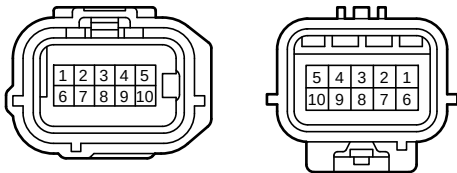


OK1
White

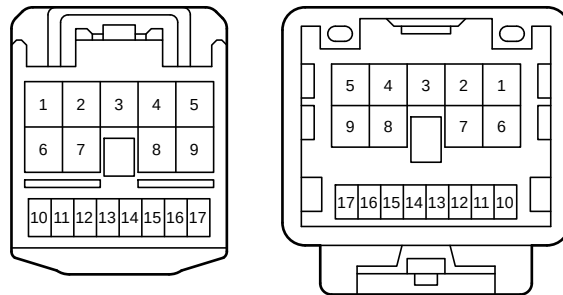

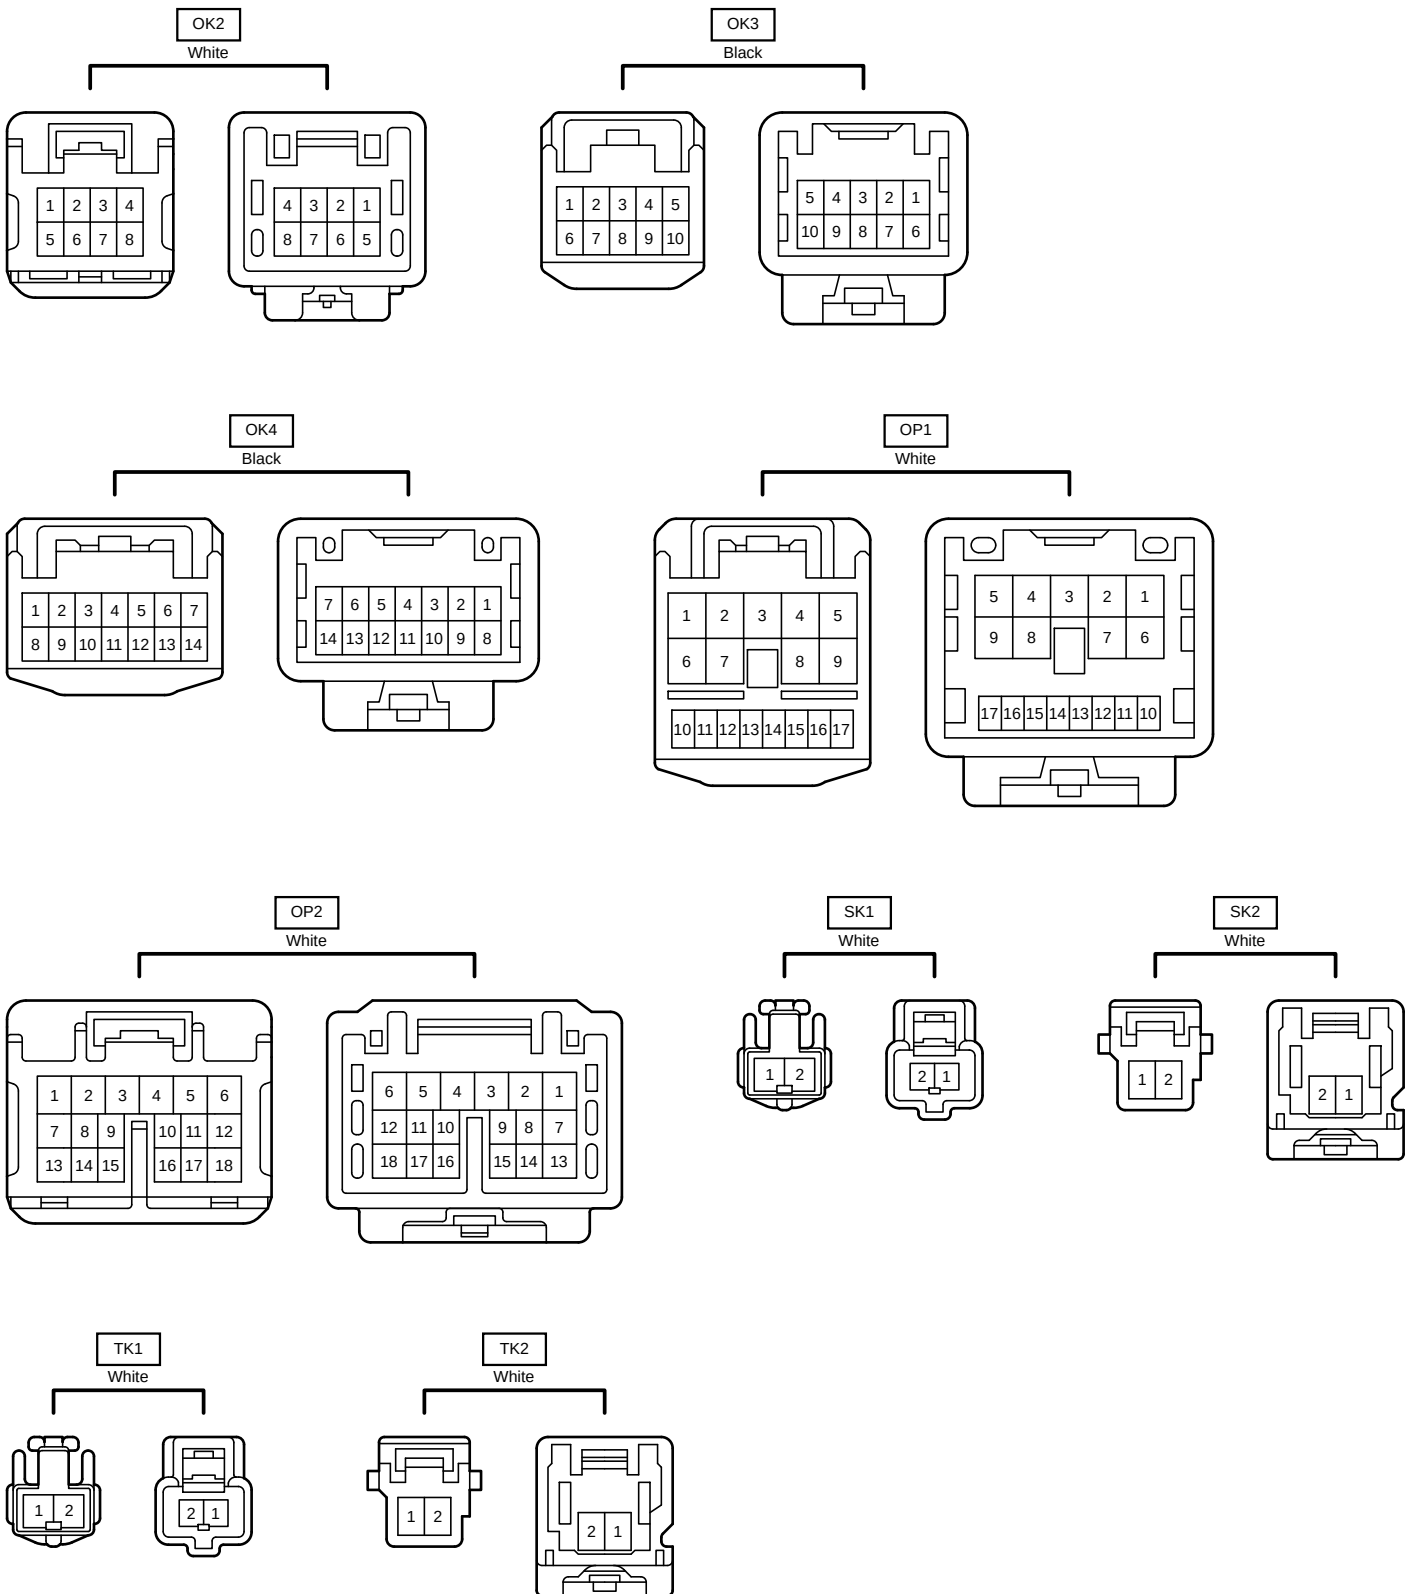

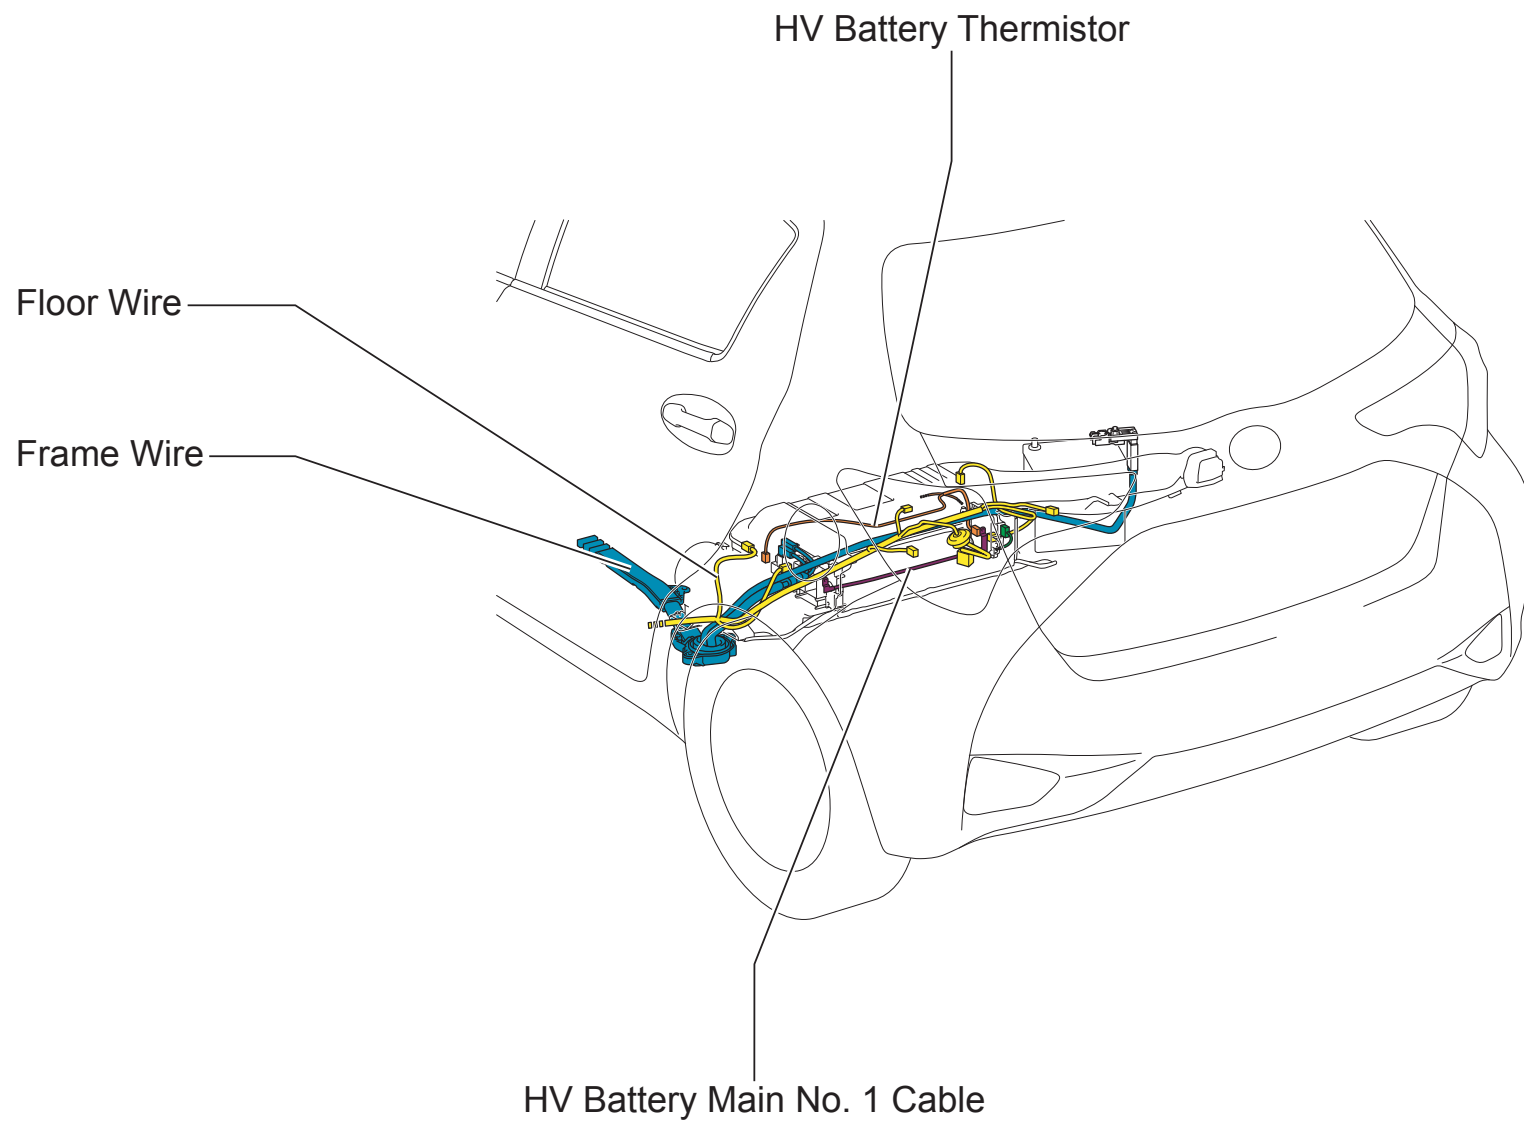



Position of Parts in Body <RHD>

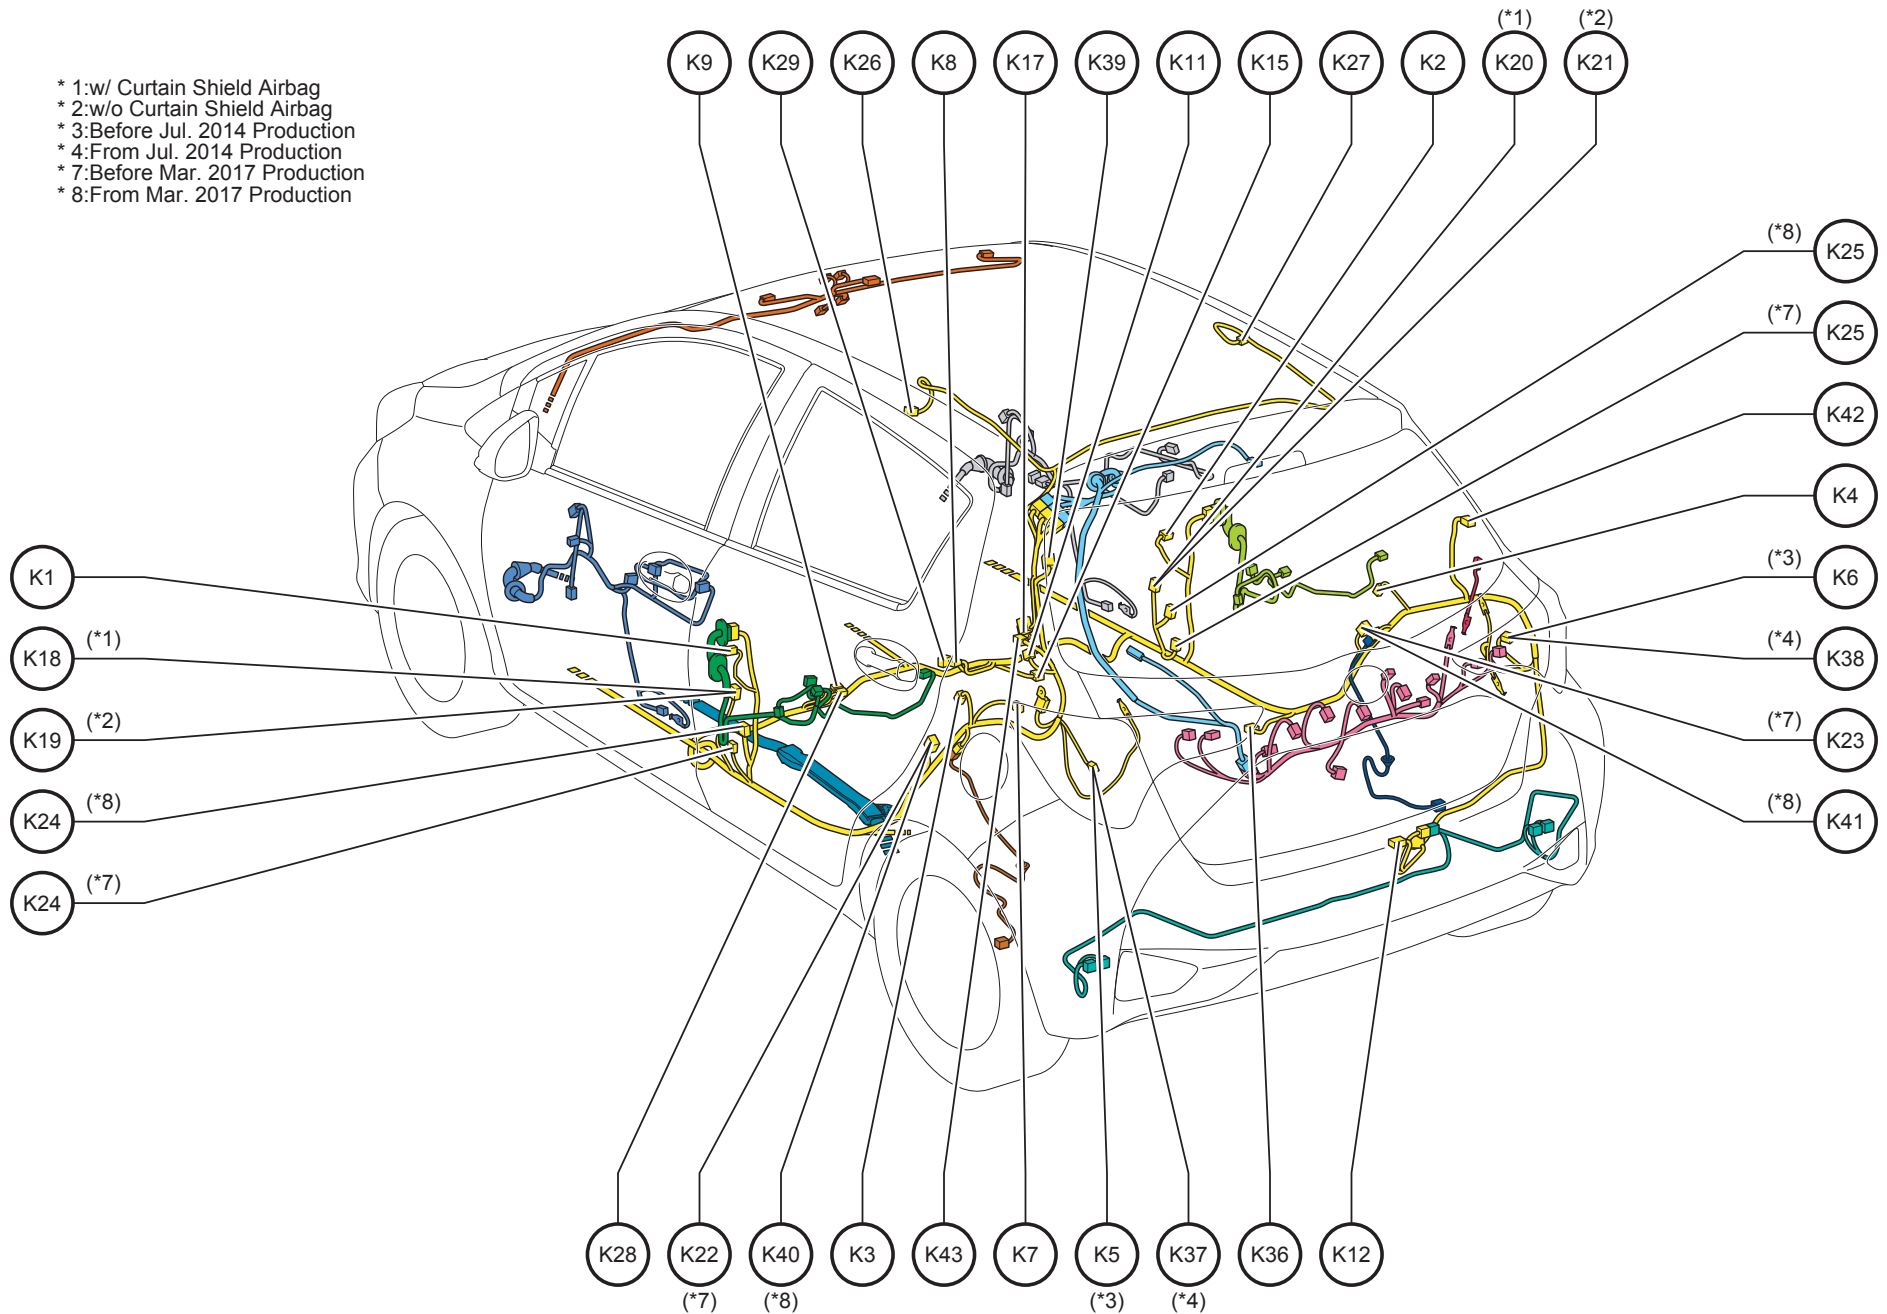


- K 1 Front Door Courtesy Light Switch Assembly LH
- K 2 Front Door Courtesy Light Switch Assembly RH
- K 3 Rear Door Courtesy Light Switch Assembly LH
- K 4 Rear Door Courtesy Light Switch Assembly RH
- K 5 Rear Combination Light Assembly LH
- K 6 Rear Combination Light Assembly RH
- K 7 No. 1 Luggage Compartment Light Assembly
- K 8 Front Seat Inner Belt Assembly RH
- K 9 Front Seat Inner Belt Assembly LH
- K 11 Door Control Receiver
- K 12 Electrical Key Antenna
- K 15 Stereo Component Amplifier Assembly
- K 17 Noise Filter
- K 18 Side Airbag Sensor Assembly LH
- K 19 Side Airbag Sensor Assembly LH
- K 20 Side Airbag Sensor Assembly RH
- K 21 Side Airbag Sensor Assembly RH
- K 22 No. 2 Side Airbag Sensor Assembly LH
- K 23 No. 2 Side Airbag Sensor Assembly RH
- K 24 Front Seat Outer Belt Assembly LH
- K 25 Front Seat Outer Belt Assembly RH
- K 26 Curtain Shield Airbag Assembly LH
- K 27 Curtain Shield Airbag Assembly RH
- K 28 Front Seat Airbag Assembly LH
- K 29 Front Seat Airbag Assembly RH
- K 36 Battery Thermometer Sensor
- K 37 Rear Combination Light Assembly LH
- K 38 Rear Combination Light Assembly RH
- K 39 Tire Pressure Warning ECU and Receiver (Tire Pressure Monitor Receiver Assembly)
- K 40 No. 2 Side Airbag Sensor Assembly LH
- K 41 No. 2 Side Airbag Sensor Assembly RH
- K 42 Rear Seat 3 Point Type Belt Assembly Outer RH
- K 43 Rear Seat 3 Point Type Belt Assembly Outer LH

Position of Parts in Body <RHD>

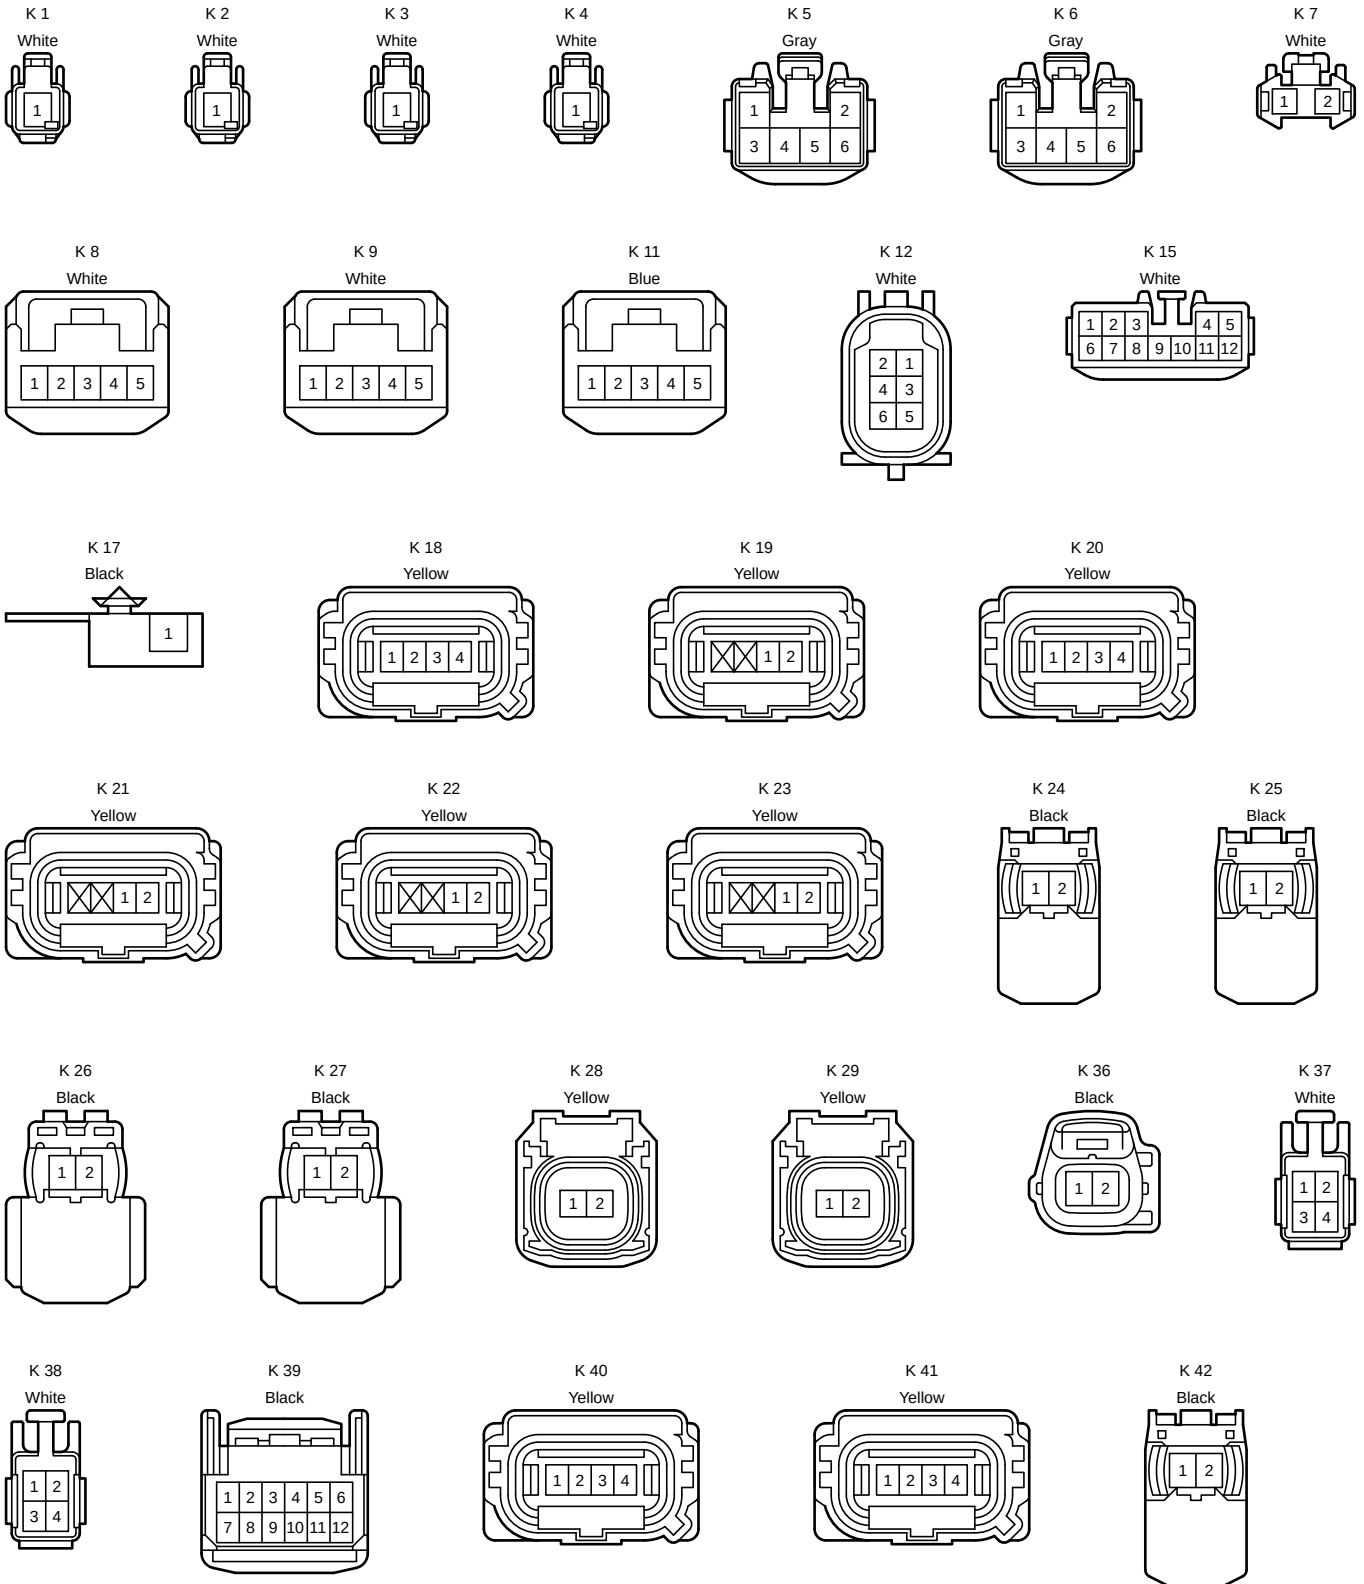



Position of Parts in Body <RHD>

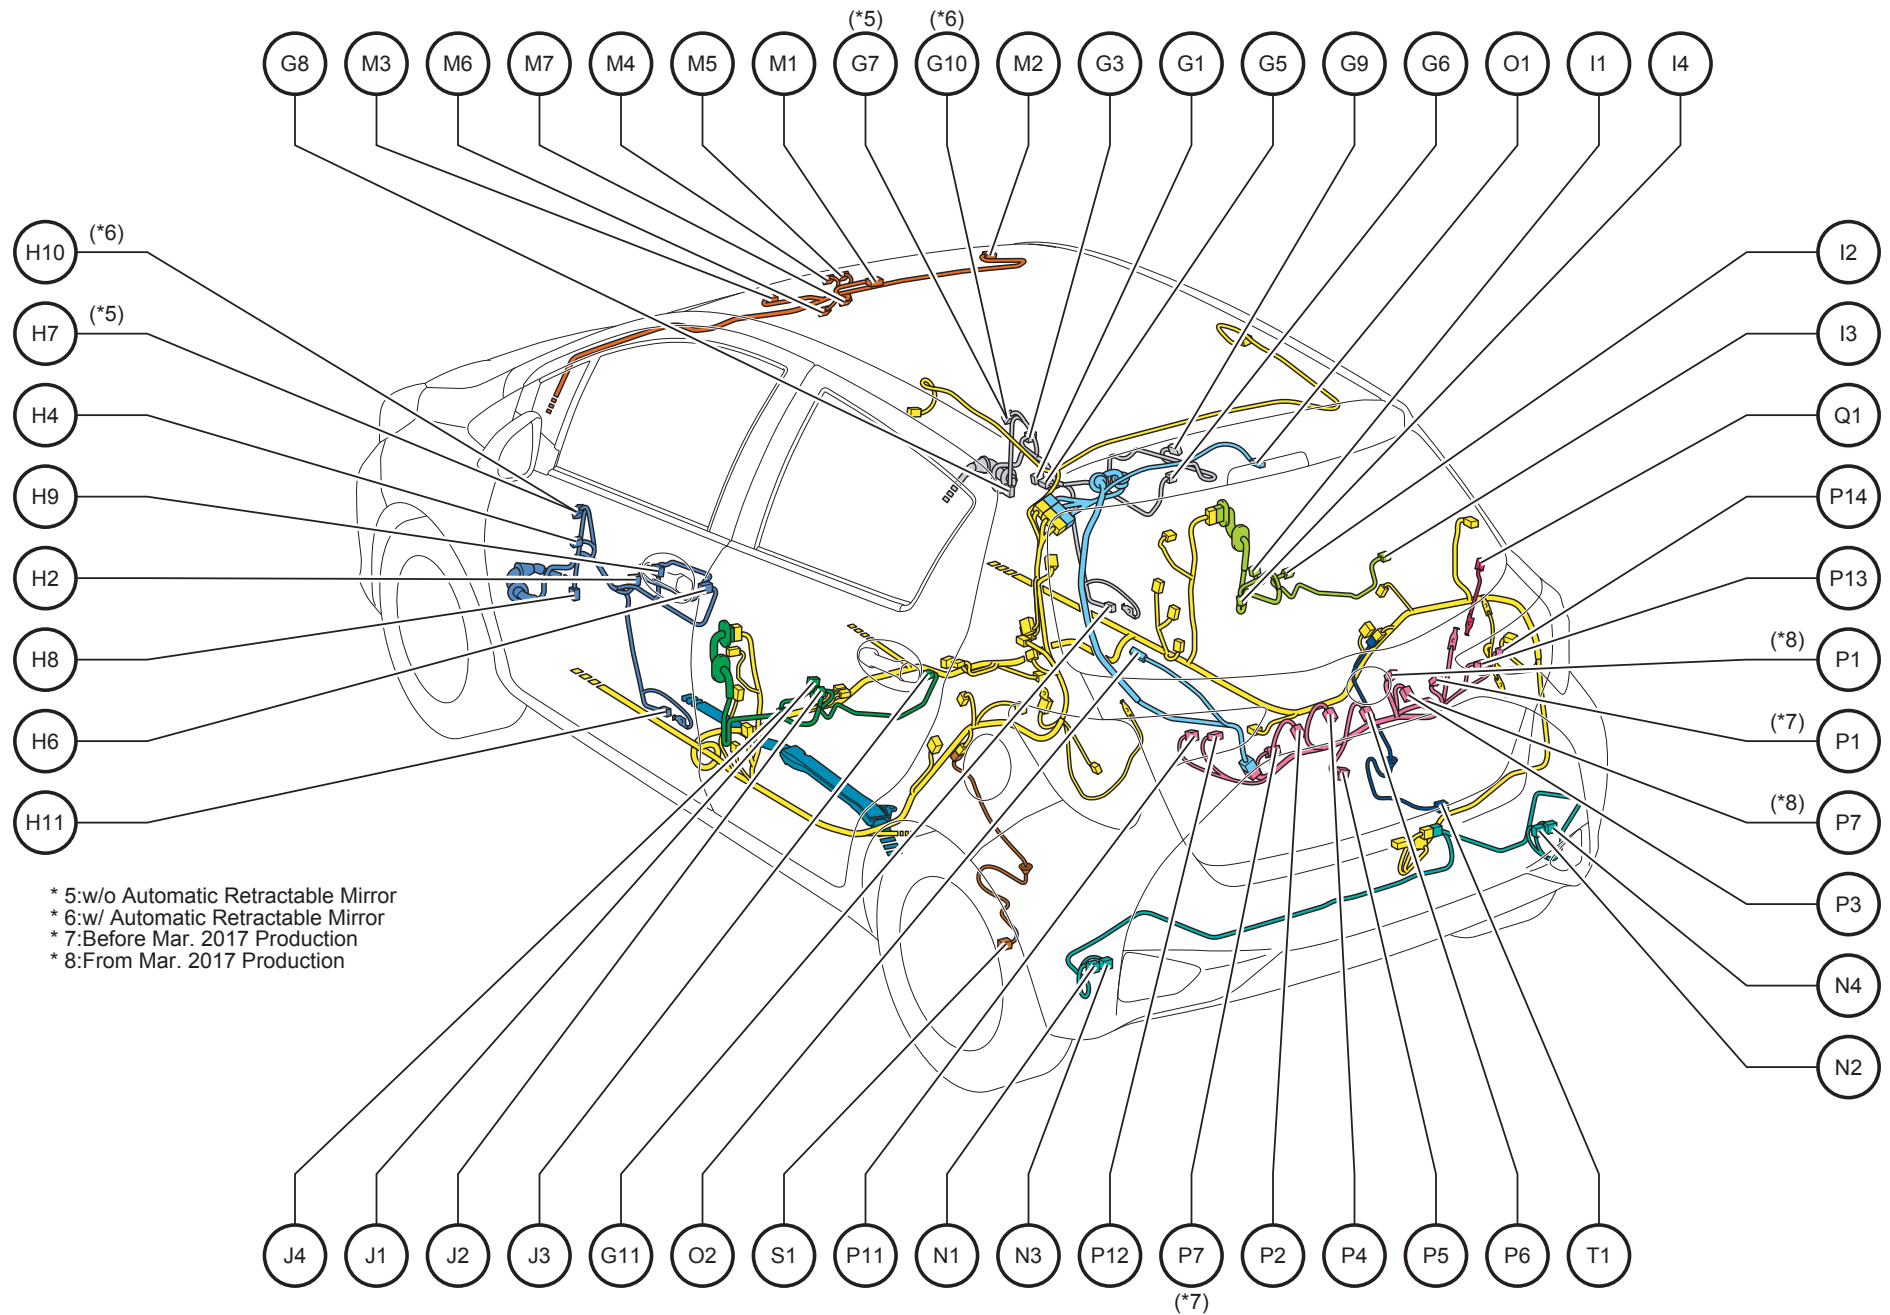

- G 1 Power Window Regulator Master Switch Assembly
- G 3 Power Window Regulator Motor Assembly RH
- G 5 Door Control Switch Assembly
- G 6 Front Door Lock with Motor Assembly RH
- G 7 Outer Rear View Mirror Assembly RH
- G 8 Front No. 1 Speaker Assembly RH
- G 9 Front Door Outside Handle Assembly RH
- G 10 Outer Rear View Mirror Assembly RH
- G 11 Door Side Airbag Sensor RH

- H 2 Power Window Regulator Switch Assembly
- H 4 Power Window Regulator Motor Assembly LH
- H 6 Front Door Lock with Motor Assembly LH
- H 7 Outer Rear View Mirror Assembly LH
- H 8 Front No. 1 Speaker Assembly LH
- H 9 Front Door Outside Handle Assembly LH
- H 10 Outer Rear View Mirror Assembly LH
- H 11 Door Side Airbag Sensor LH

- I 1 Rear Power Window Regulator Switch Assembly
- I 2 Rear Power Window Regulator Motor Assembly RH
- I 3 Rear Door Lock with Motor Assembly RH
- I 4 Rear Speaker Assembly RH

- J 1 Rear No. 2 Power Window Regulator Switch Assembly
- J 2 Rear Power Window Regulator Motor Assembly LH
- J 3 Rear Door Lock with Motor Assembly LH
- J 4 Rear Speaker Assembly LH

- M 1 Map Light Assembly
- M 2 Vanity Light Assembly RH
- M 3 Vanity Light Assembly LH
- M 4 Inner Rear View Mirror Assembly
- M 5 Rain Sensor
- M 6 Pre-Crash Safety City Sensor
- M 7 Pre-Crash Safety City Heater (Pre-Crash Safety City Heater Wire)

- N 1 Rear Fog Light Assembly LH
- N 2 Rear Fog Light Assembly RH
- N 3 Back Up Light Assembly LH
- N 4 Back Up Light Assembly RH

- O 1 Center Stop Light Assembly
- O 2 Rear Window Defogger (Back Door Glass)





























- P 1 Rear Wiper Motor Assembly
- P 2 Rear Television Camera Assembly
- P 3 License Plate Light Assembly RH
- P 4 License Plate Light Assembly LH
- P 5 Back Door Lock Assembly
- P 6 Back Door Opener Switch Assembly
- P 7 Back Door Key Switch (Door Unlock Switch Sub-Assembly)
- P 11 Rear Light Assembly LH
- P 12 Rear Light Assembly LH
- P 13 Rear Light Assembly RH
- P 14 Rear Light Assembly RH

- Q 1 Rear Window Defogger (Back Door Glass)
























S 1 Rear Speed Sensor LH


T 1 Rear Speed Sensor RH

Position of Parts in Body <RHD>

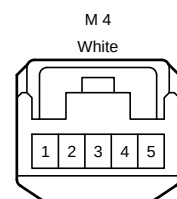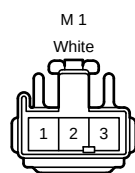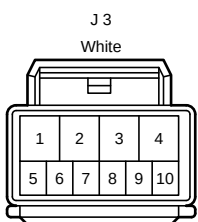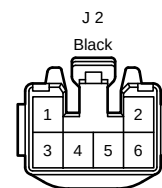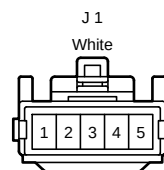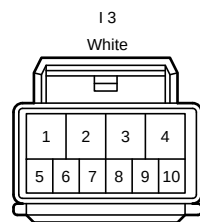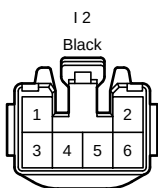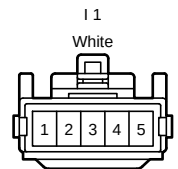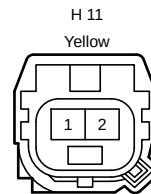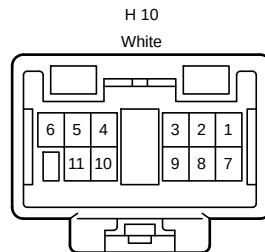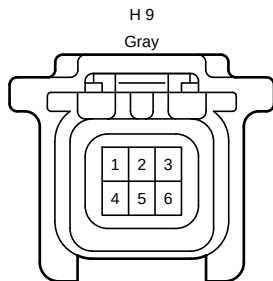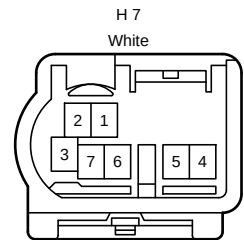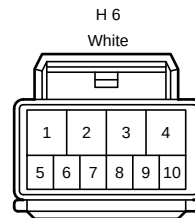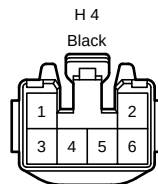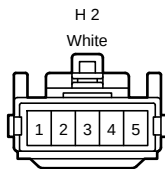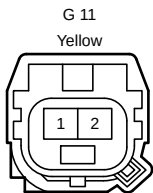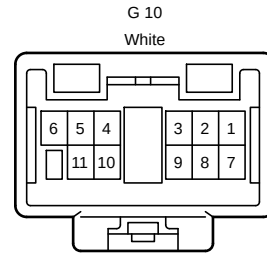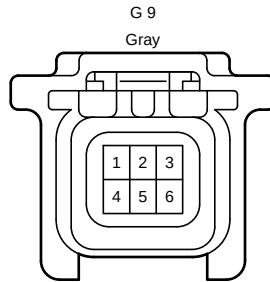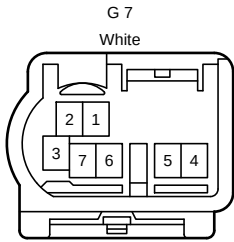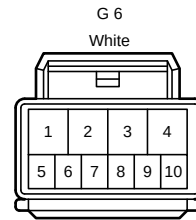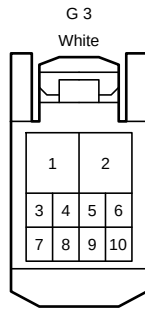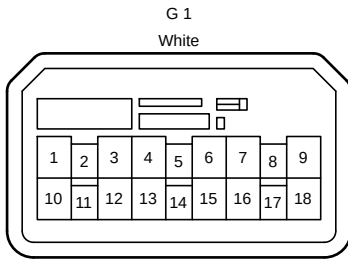

Position of Parts in Body <RHD>

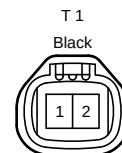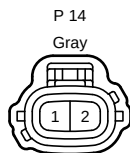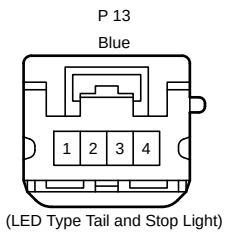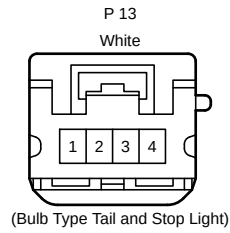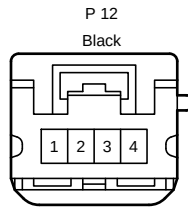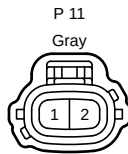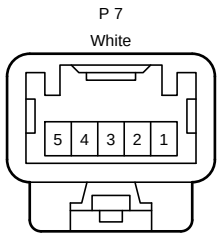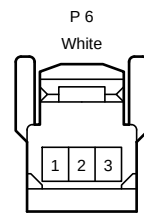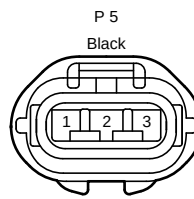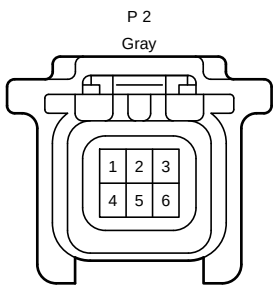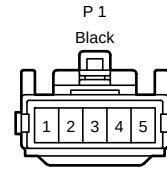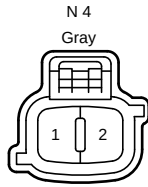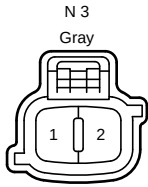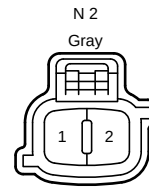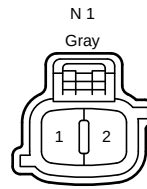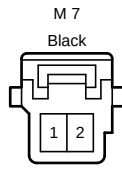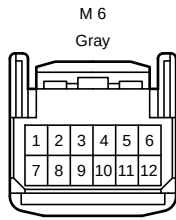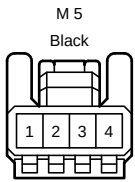

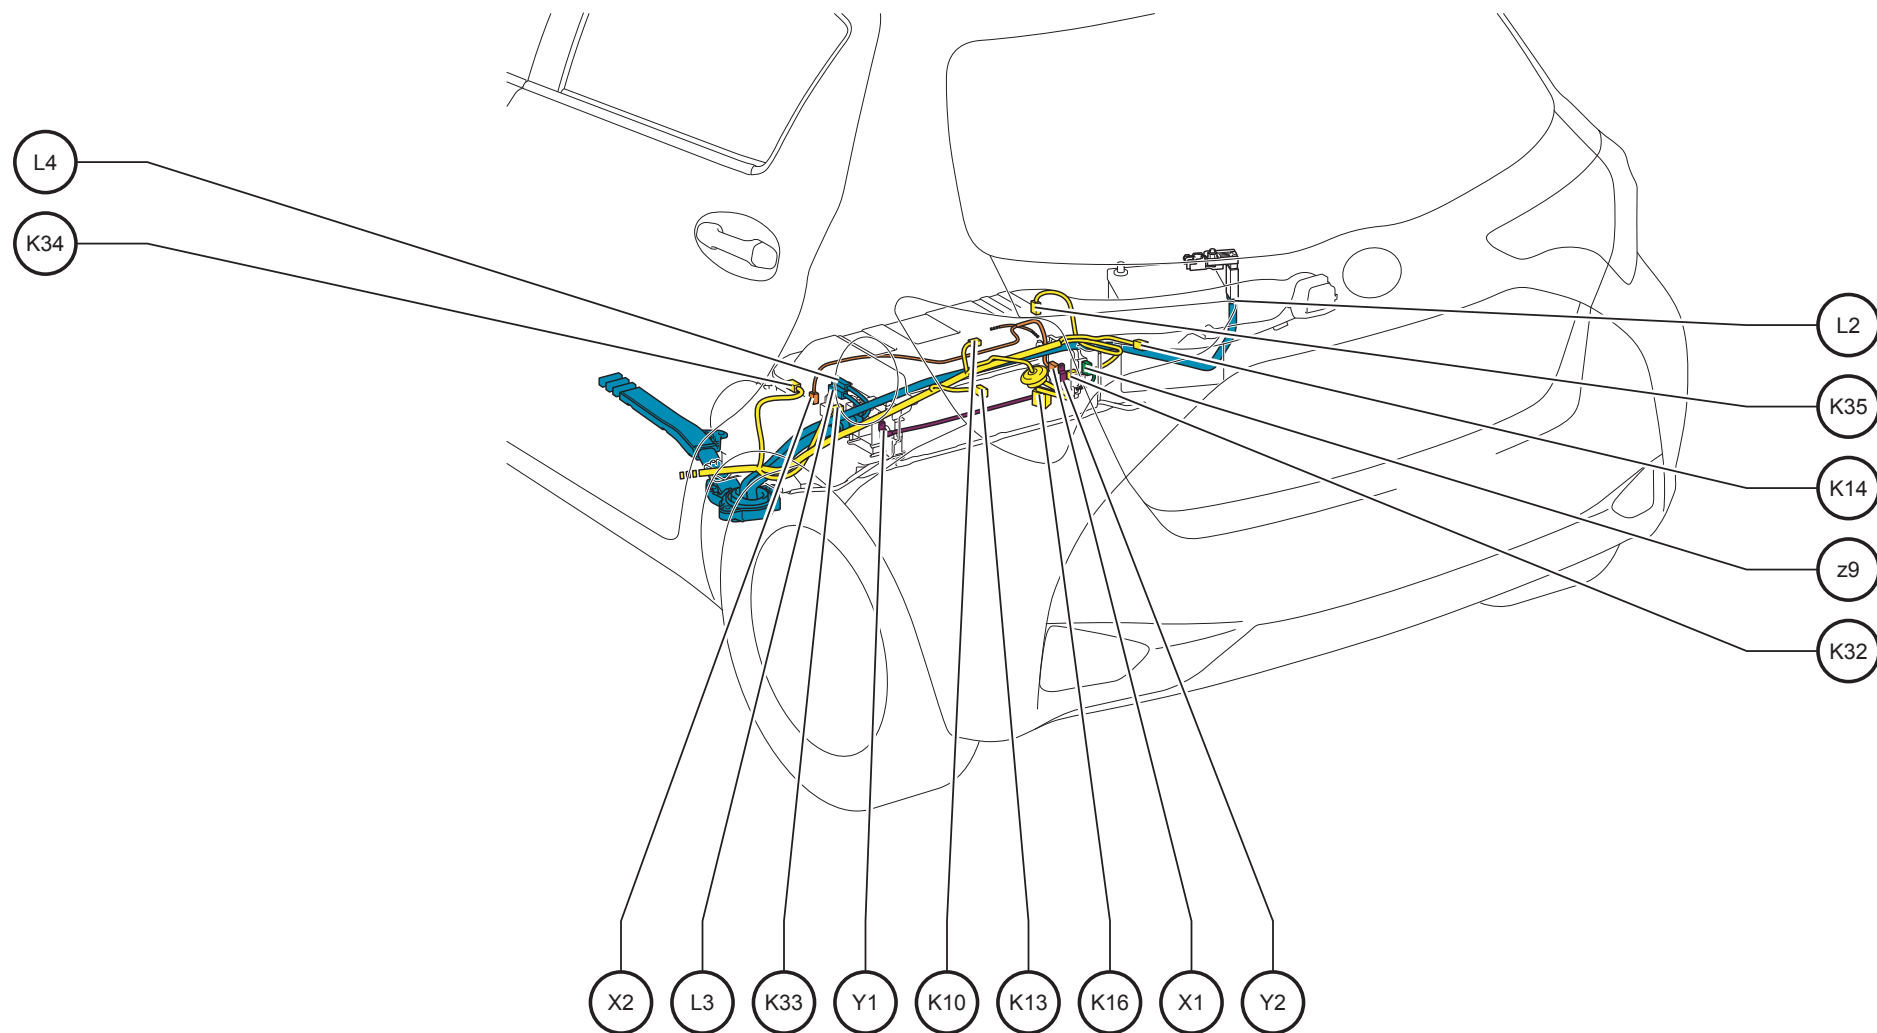

- K 10 No. 2 Indoor Electrical Key Antenna Assembly
- K 13 Rear Seat Inner Belt with Center Assembly LH
- K 14 Rear Seat Inner Belt with Center Assembly RH
- K 16 Fuel Suction Tube with Pump and Gage Assembly
- K 32 Battery Voltage Sensor
- K 33 Hybrid Battery Junction Block Assembly
- K 34 Battery Cooling Blower Assembly
- K 35 Interlock Switch (Service Plug Grip)
















- L 2 Fusible Link Block Assembly
- L 3 Hybrid Battery Junction Block Assembly
- L 4 Hybrid Battery Junction Block Assembly


- X 1 Battery Voltage Sensor , HV Supply Battery Assembly
- X 2 Hybrid Battery Junction Block Assembly

- Y 1 Hybrid Battery Junction Block Assembly
- Y 2 HV Supply Battery Assembly



- z 9 Battery Voltage Sensor , HV Supply Battery Assembly

Position of Parts in Body <RHD>

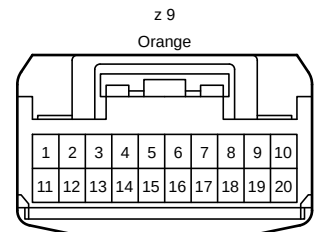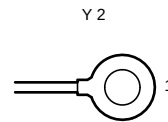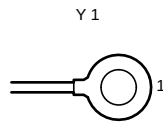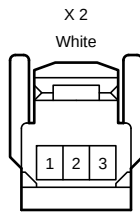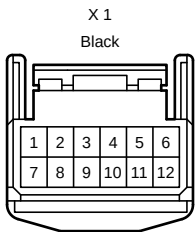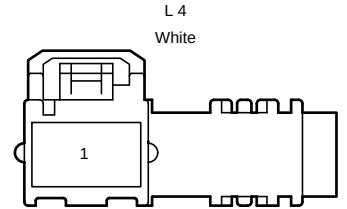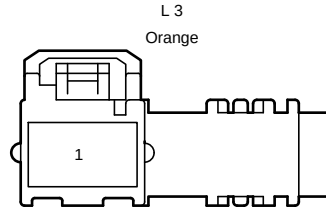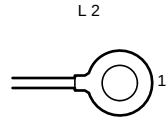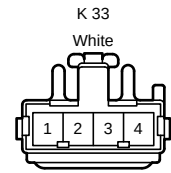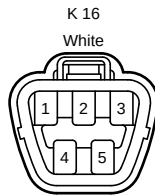
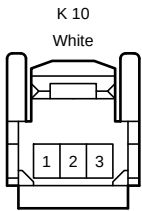


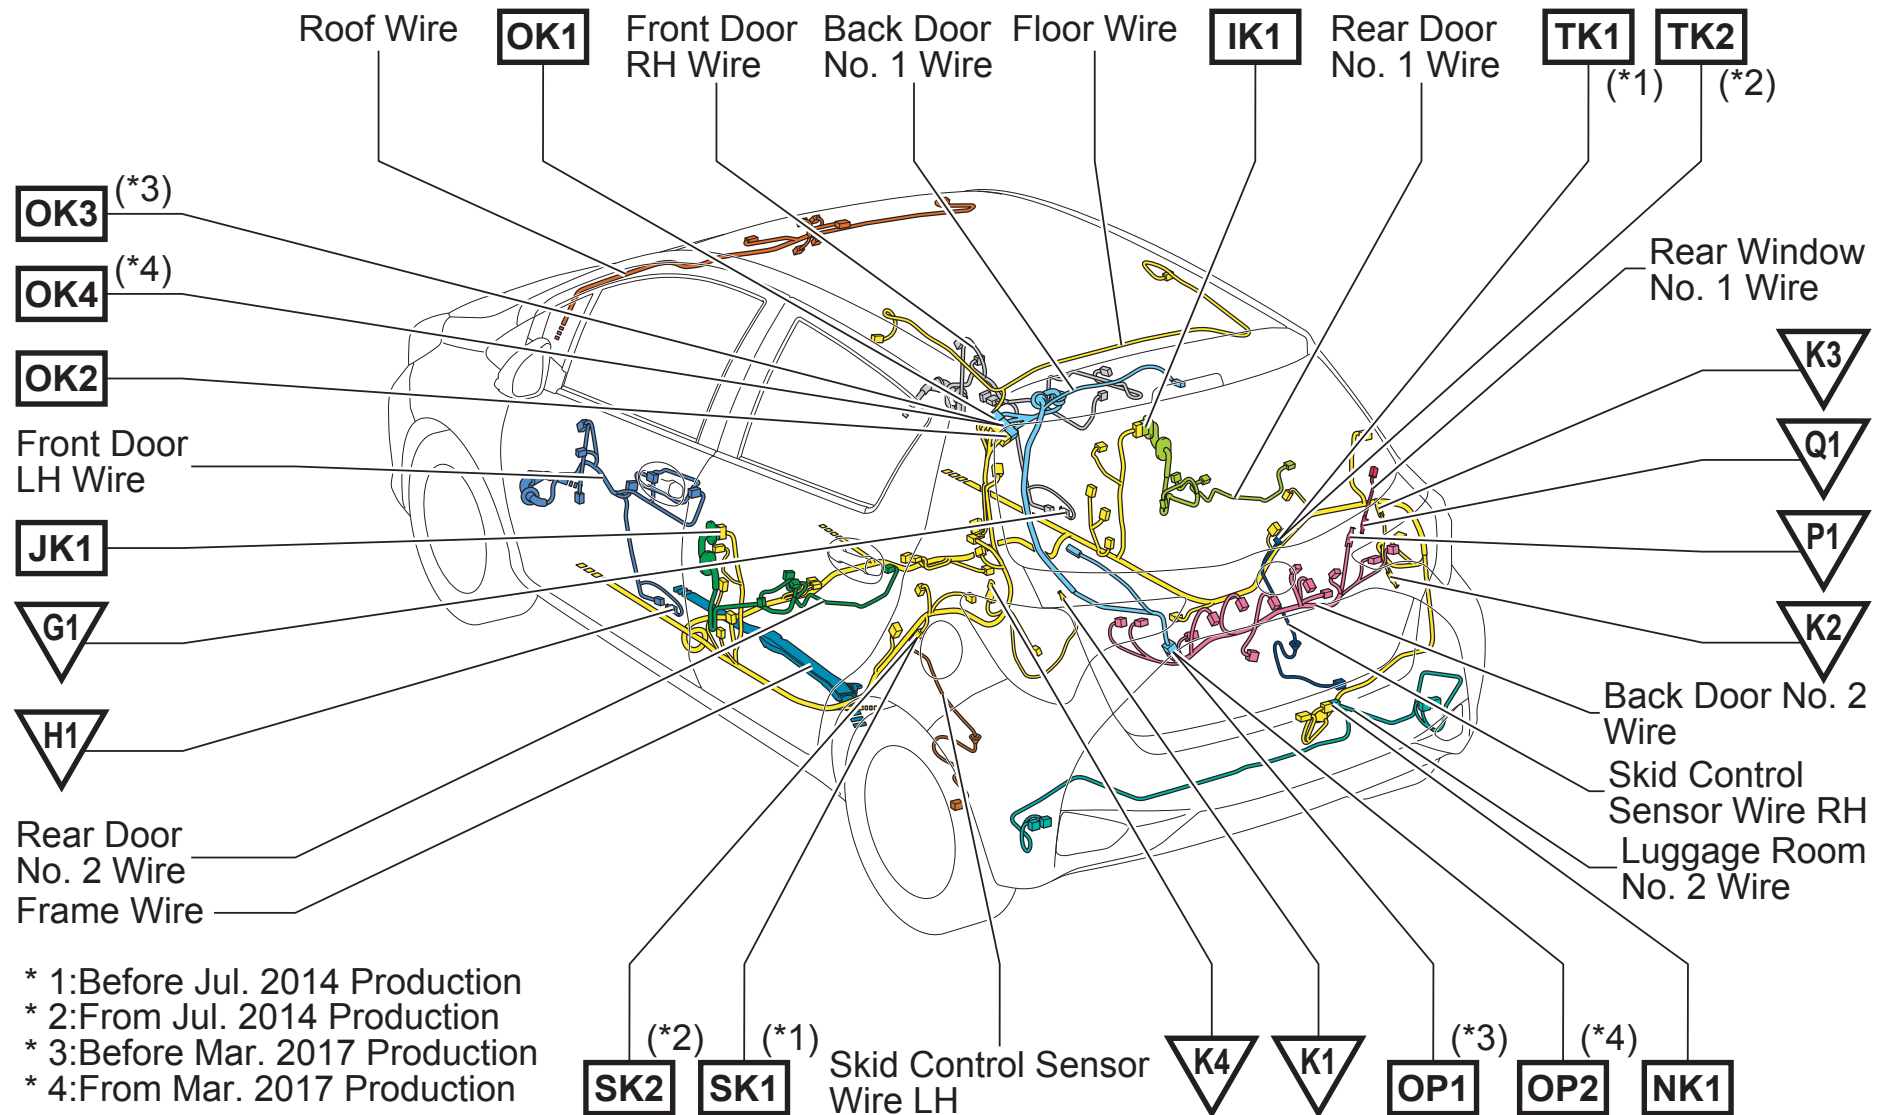



IK1
White

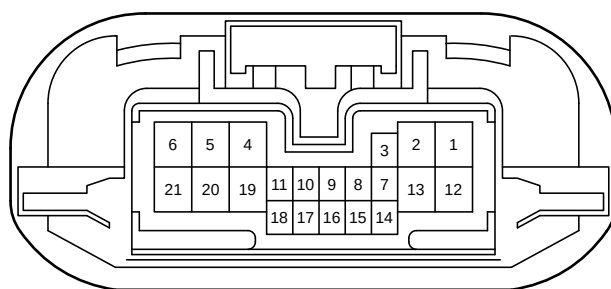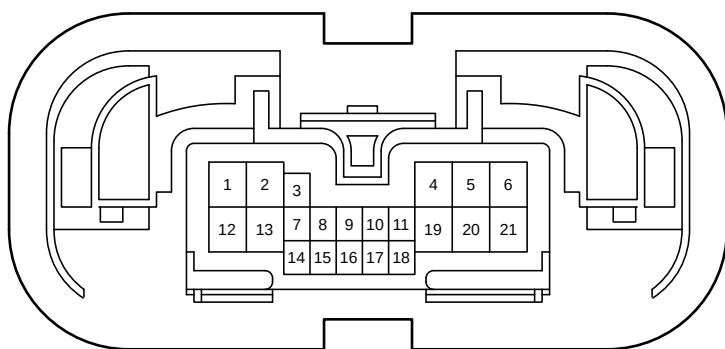



JK1
White

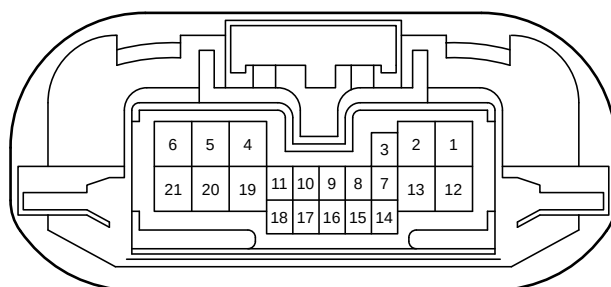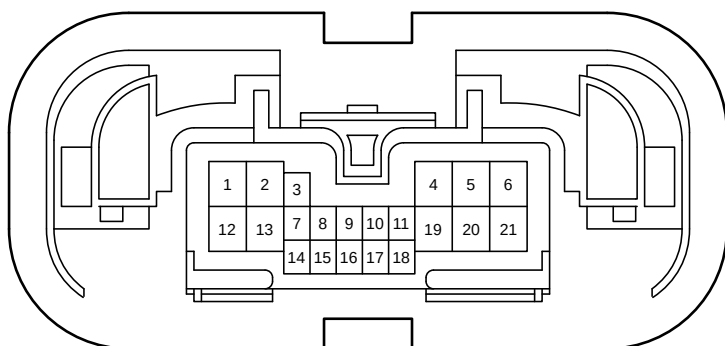



NK1
White

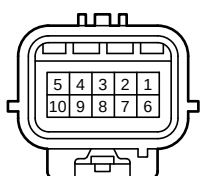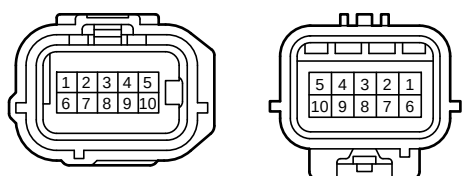

OK1
White

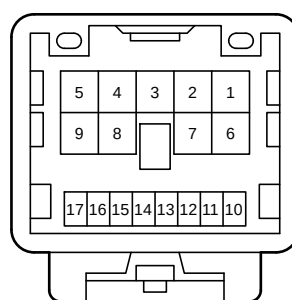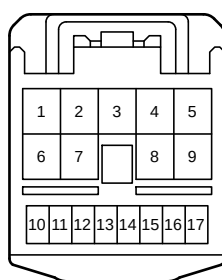


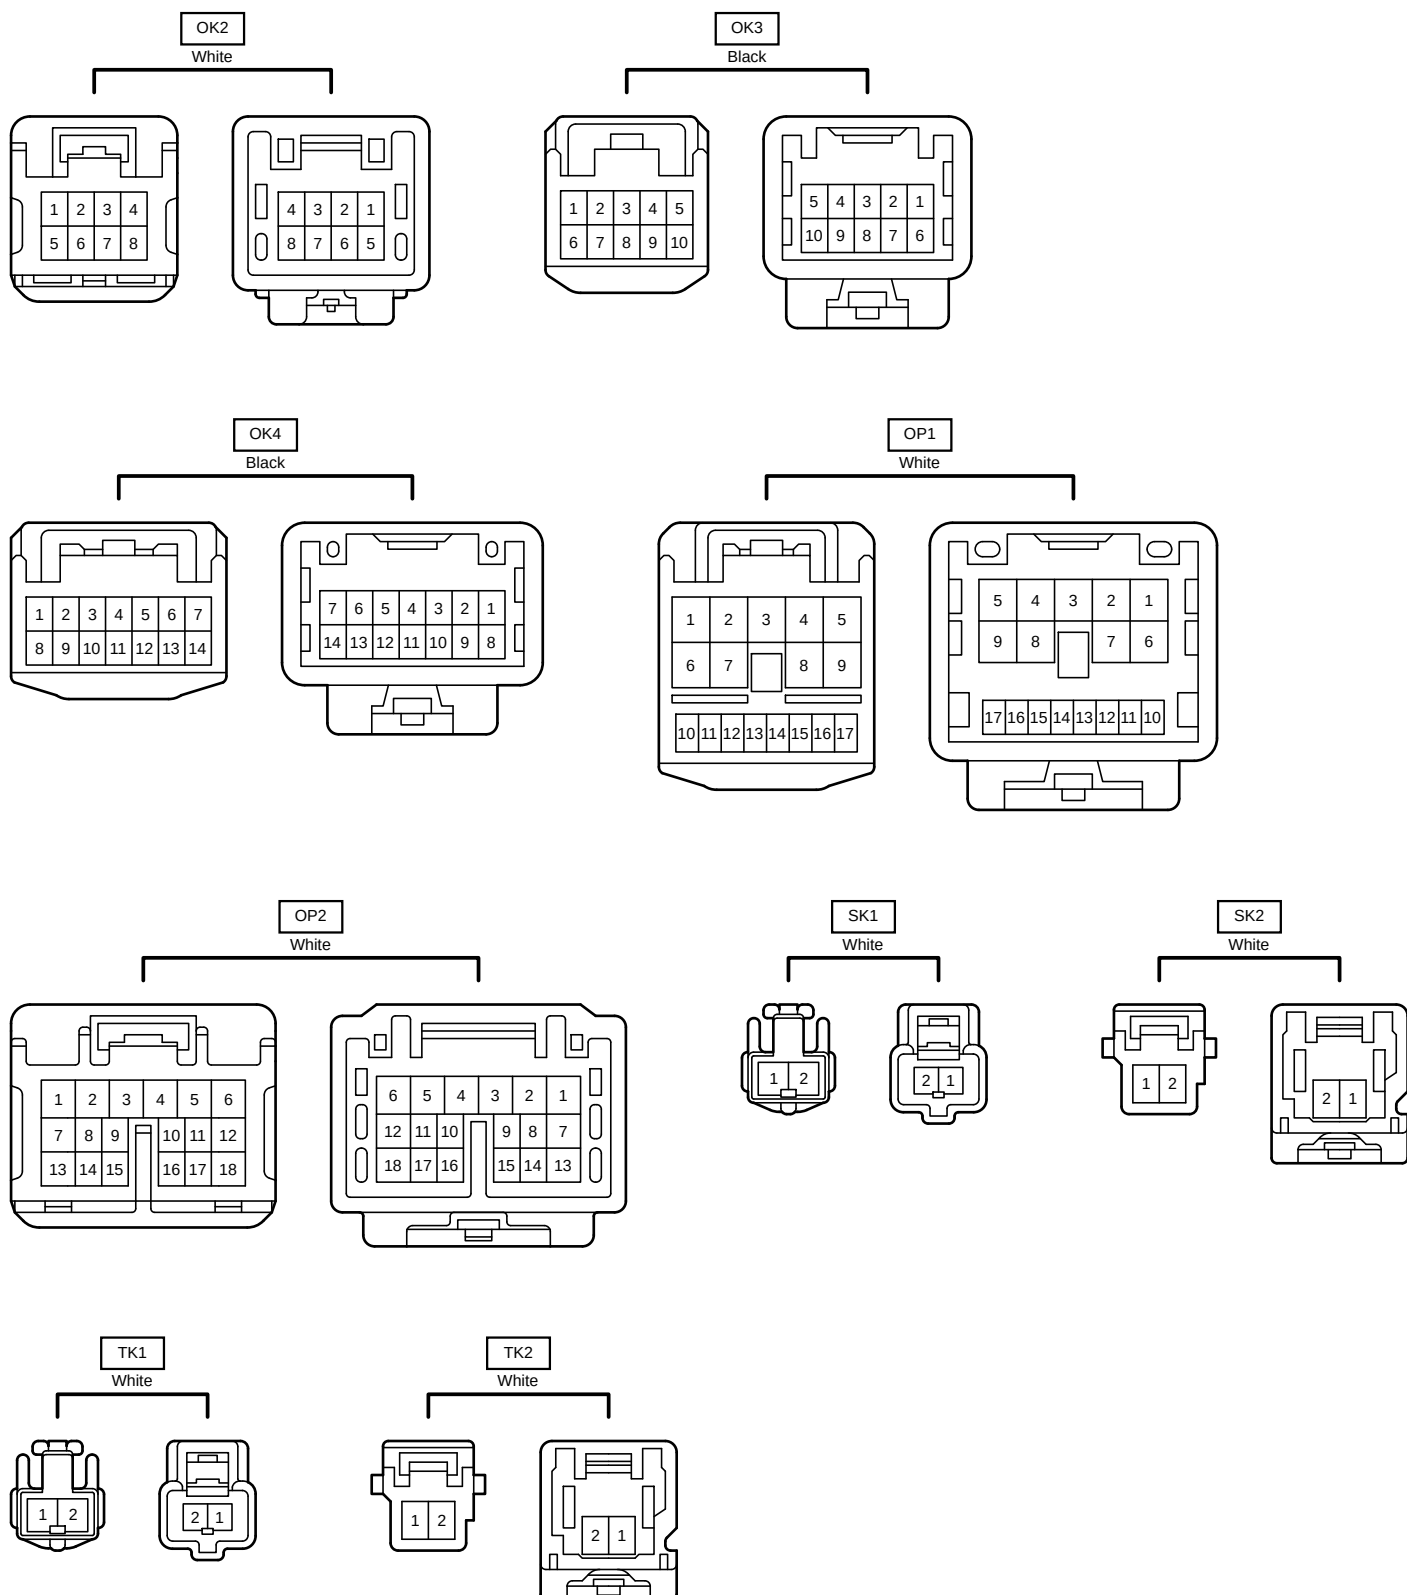

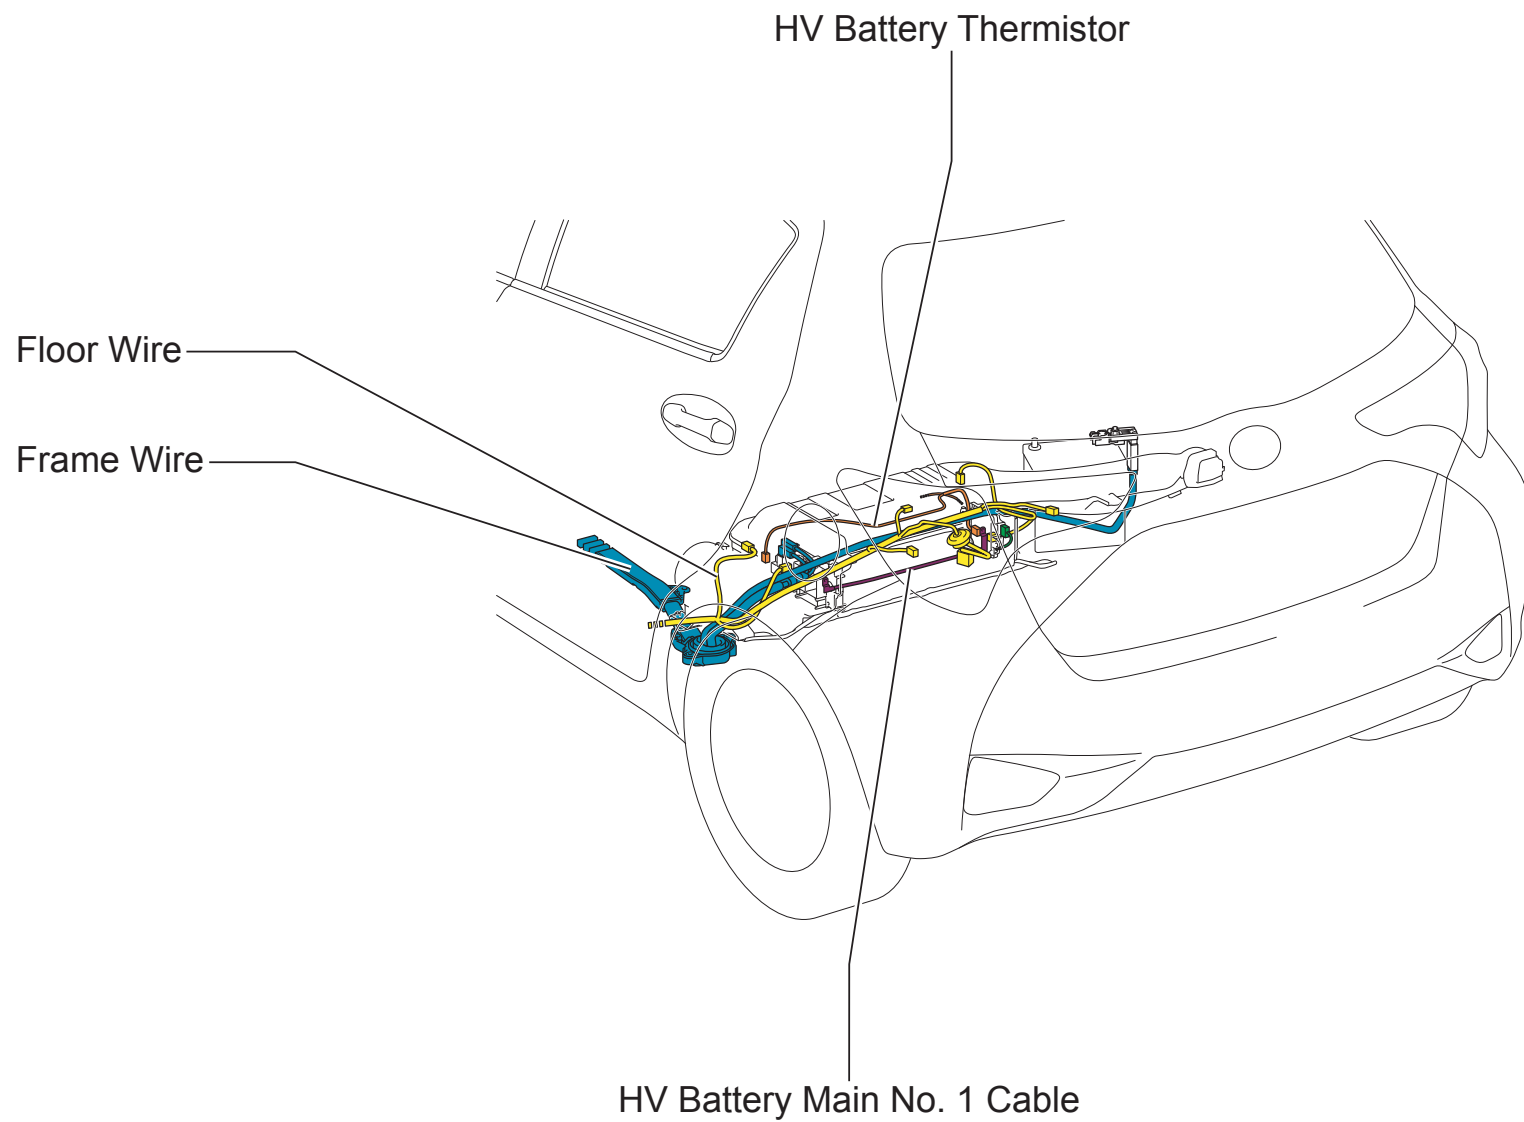


Position of Parts in Engine Compartment <LHD>

* 3: Before May 2018 Production
* 4: From May 2018 Production

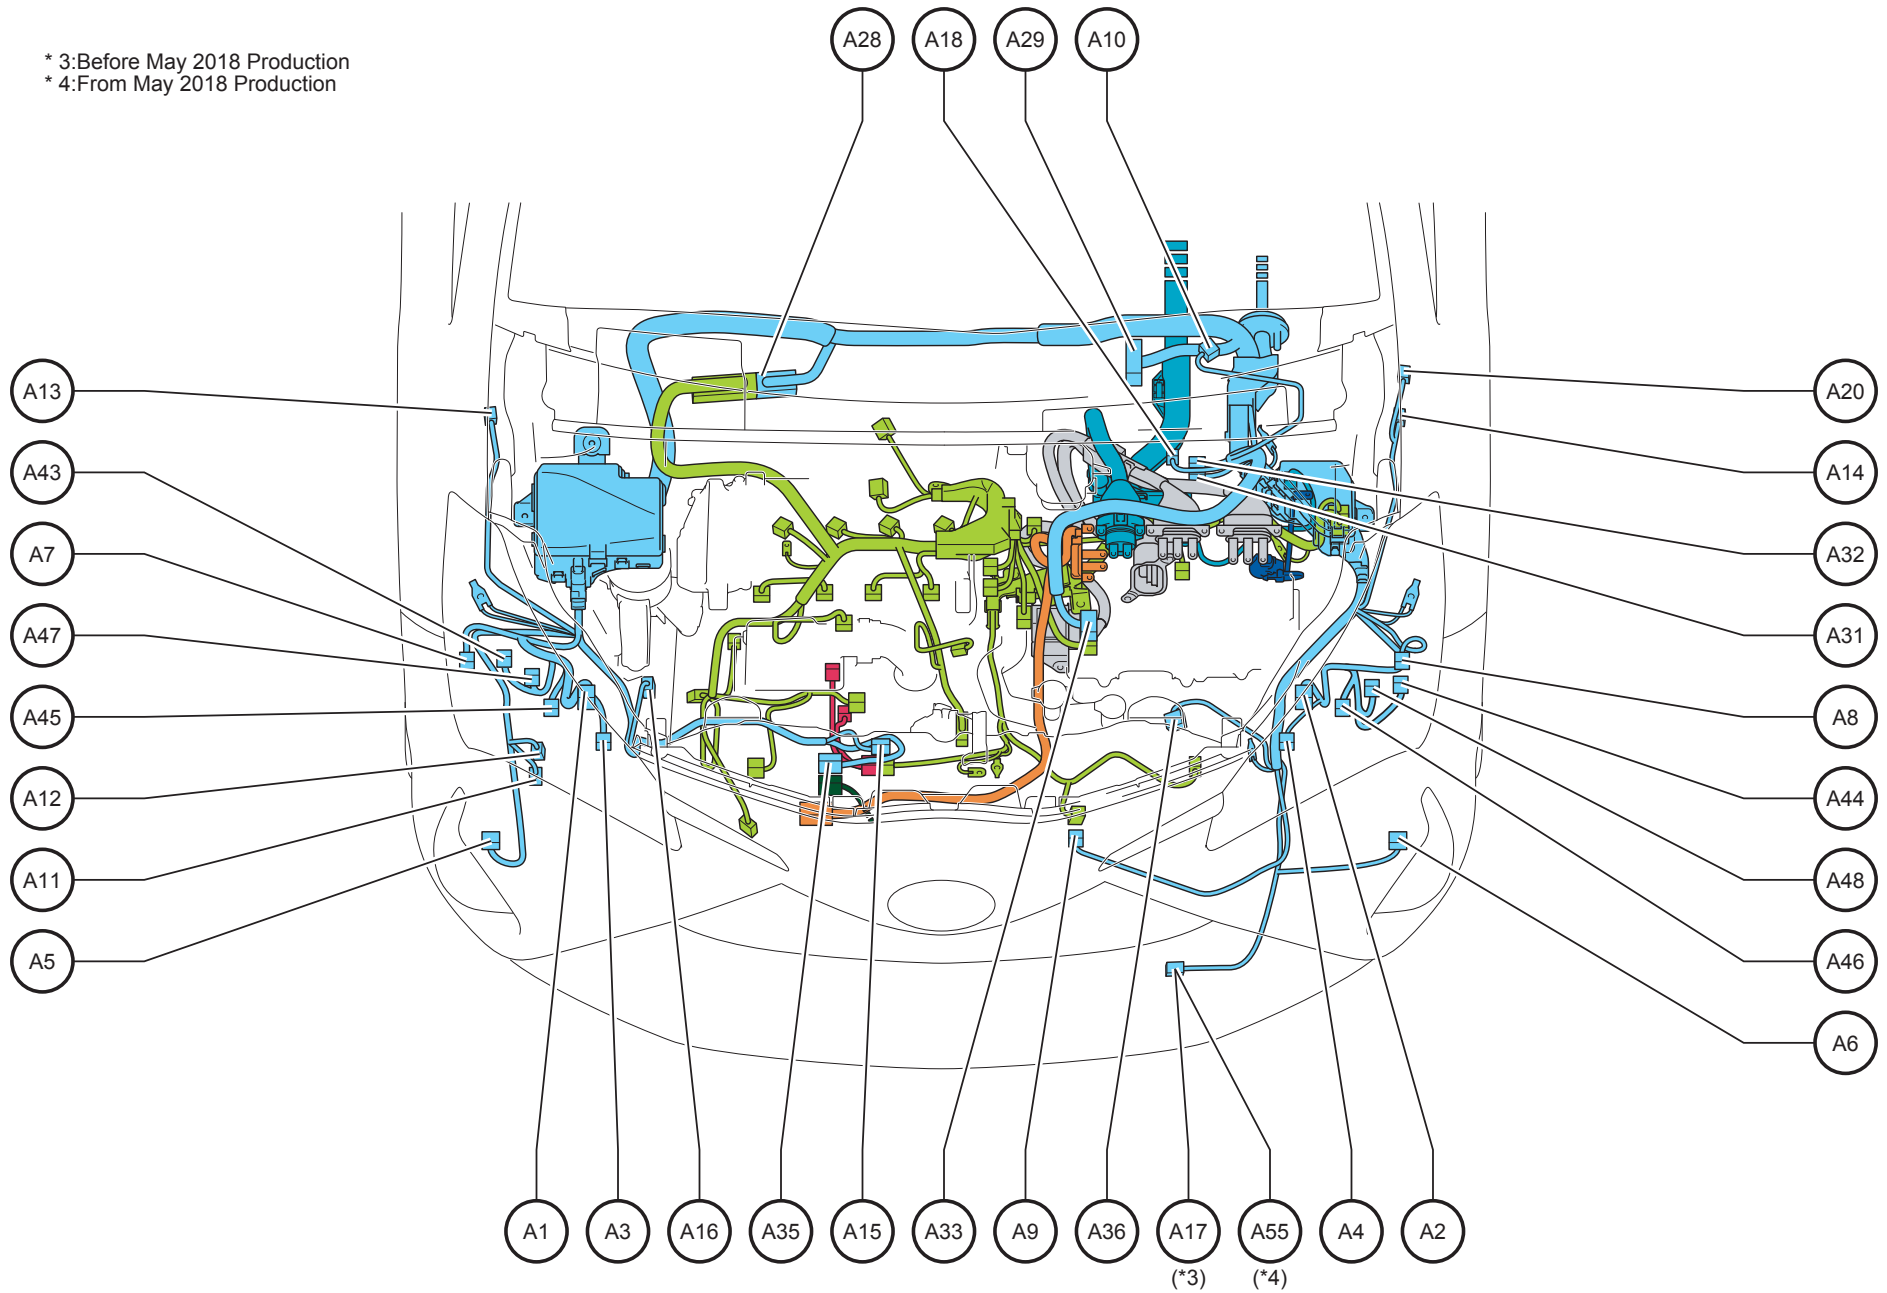


- A 1 Headlight Unit RH
- A 2 Headlight Unit LH
- A 3 Headlight Unit RH
- A 4 Headlight Unit LH
- A 5 Fog Light Assembly RH
- A 6 Fog Light Assembly LH
- A 7 Headlight Unit RH
- A 8 Headlight Unit LH
- A 9 Low Pitched Horn Assembly
- A 10 Windshield Wiper Motor Assembly
- A 11 Windshield Washer Motor and Pump Assembly
- A 12 Rear Washer Motor and Pump Assembly
- A 13 Front Speed Sensor RH
- A 14 Front Speed Sensor LH
- A 15 Front Airbag Sensor
- A 16 A/C Pressure Sensor (Liquid Tube Sub-Assembly)
- A 17 Ambient Temperature Sensor (Thermistor Assembly)
- A 18 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
- A 20 Wireless Door Lock Buzzer
- A 28 ECM
- A 29 Skid Control ECU with Actuator (Brake Booster with Master Cylinder Assembly)
- A 31 Brake Booster Pump Assembly
- A 32 Brake Booster Pump Assembly
- A 33 Inverter with Converter Assembly
- A 35 Cooling Fan ECU
- A 36 Inverter Water Pump Assembly
- A 43 Headlight Unit RH
- A 44 Headlight Unit LH
- A 45 Headlight Unit RH
- A 46 Headlight Unit LH
- A 47 Headlight Unit RH
- A 48 Headlight Unit LH
- A 55 Ambient Temperature Sensor (Thermistor Assembly)


Position of Parts in Engine Compartment <LHD>

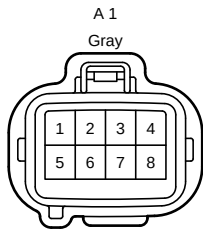


(Low, High, Daytime Running Light and Clearance Light)

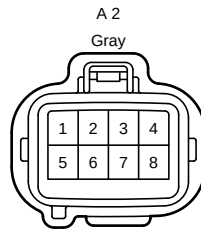




(Low, High, Daytime Running Light and Clearance Light)

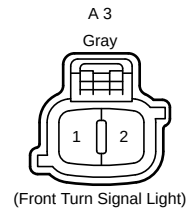


(Front Turn Signal Light)

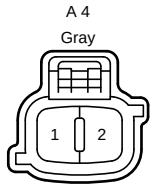











(Front Turn Signal Light)

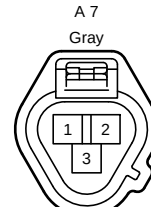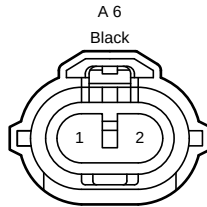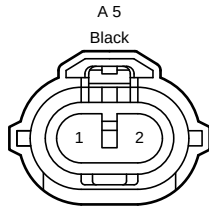













(Headlight Leveling Motor)

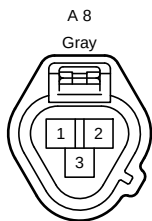

(Headlight Leveling Motor)

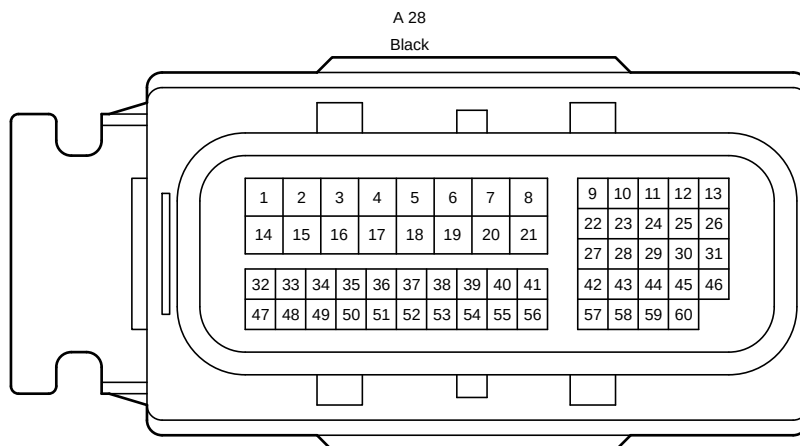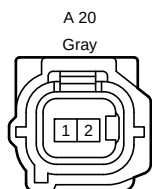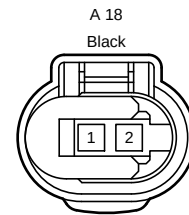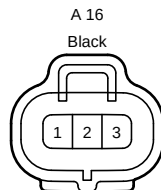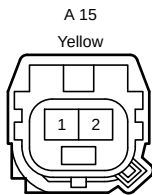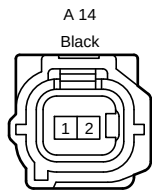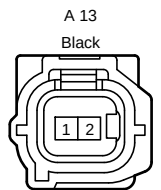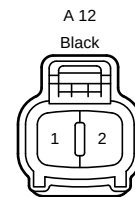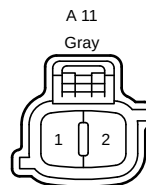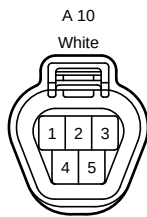


Position of Parts in Engine Compartment <LHD>

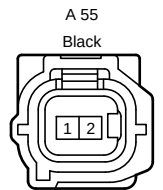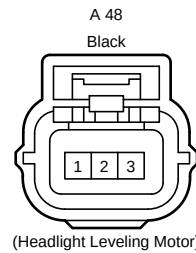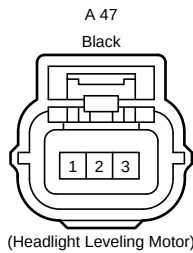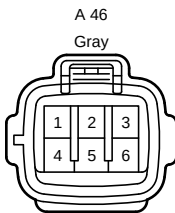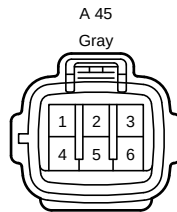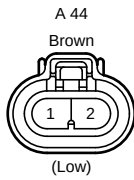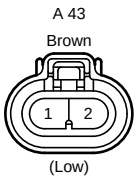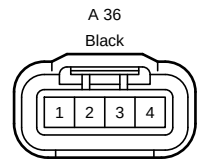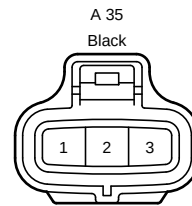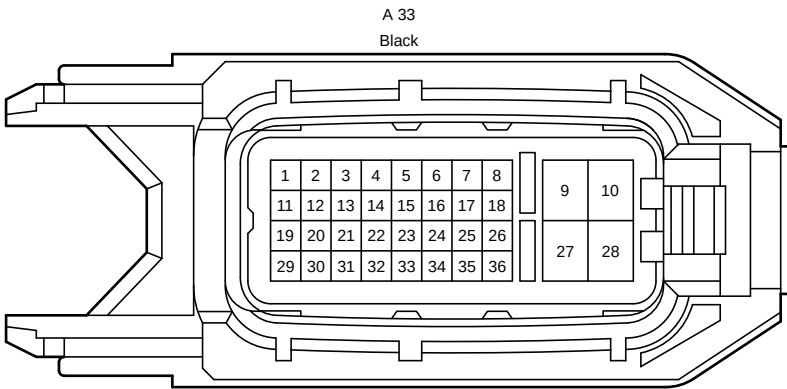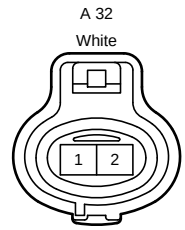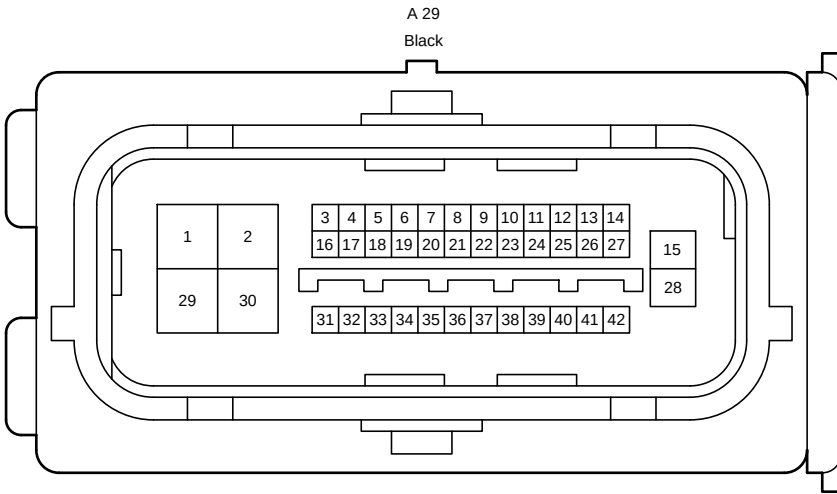


Position of Parts in Engine Compartment <LHD>

- * 1: Before Jun. 2013 Production
- * 2: From Jun. 2013 Production
- * 5: Before Jul. 2016 Production
- * 6: From Jul. 2016 Production
















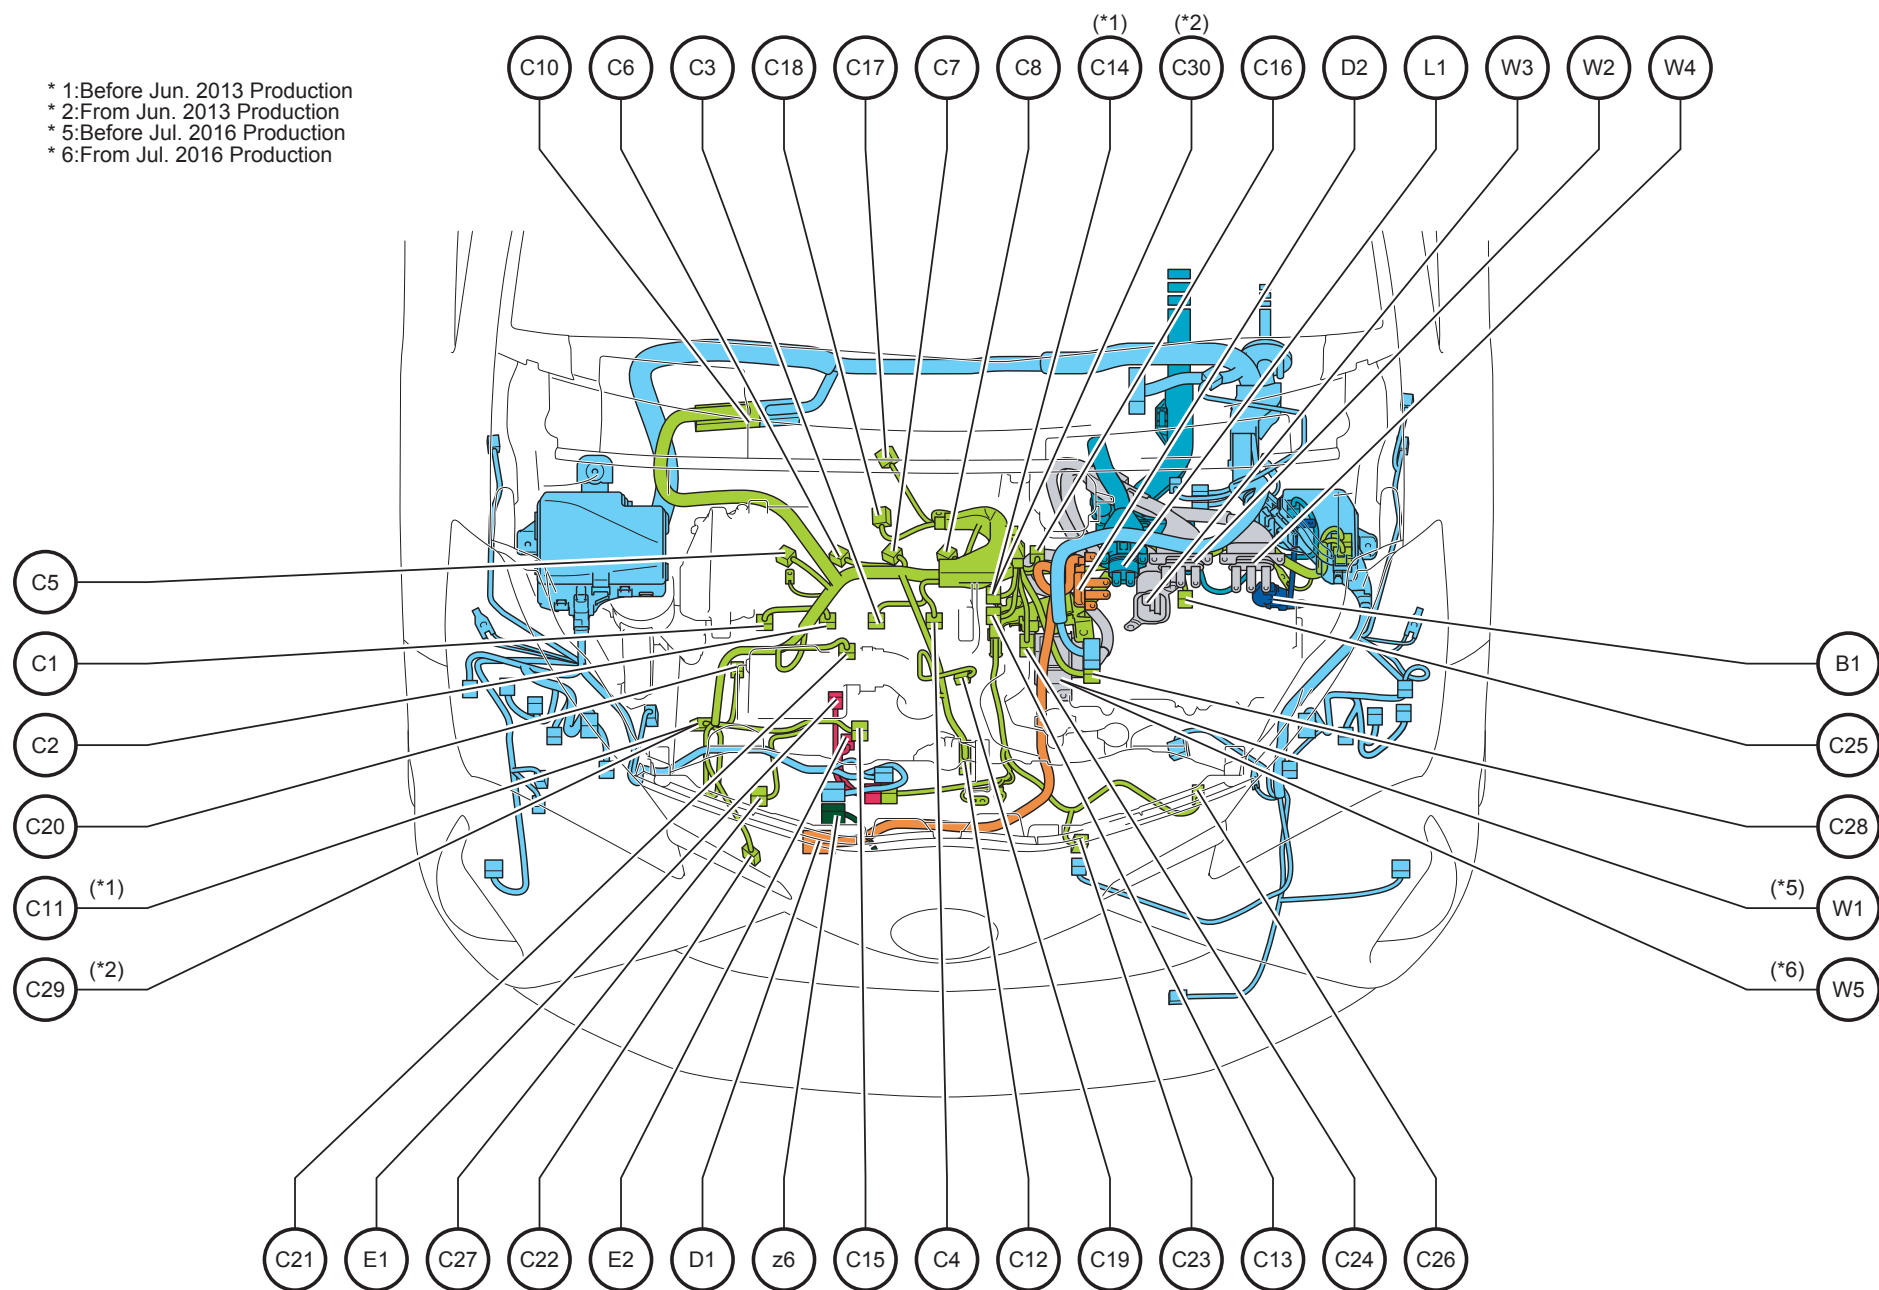



- B 1 Inverter with Converter Assembly
- C 1 Fuel Injector Assembly No. 1
- C 2 Fuel Injector Assembly No. 2
- C 3 Fuel Injector Assembly No. 3
- C 4 Fuel Injector Assembly No. 4
- C 5 Ignition Coil No. 1
- C 6 Ignition Coil No. 2
- C 7 Ignition Coil No. 3
- C 8 Ignition Coil No. 4
- C 10 ECM
- C 11 Crank Position Sensor
- C 12 Throttle Body with Motor Assembly
- C 13 Cam Position Sensor
- C 14 E.F.I. Engine Coolant Temperature Sensor
- C 15 E.F.I. Vacuum Sensor Assembly
- C 16 Oxygen Sensor (Bank 1 Sensor 2)
- C 17 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- C 18 EGR Valve Assembly
- C 19 Purge VSV
- C 20 Camshaft Timing Oil Control Valve Assembly (Bank 1)
- C 21 Intake Mass Air Flow Meter Sub-Assembly
- C 22 Compressor with Motor Assembly
- C 23 Shift Lever Position Sensor
- C 24 Hybrid Vehicle Transaxle Assembly
- C 25 Hybrid Vehicle Transaxle Assembly
- C 26 Hybrid Vehicle Transaxle Assembly
- C 27 Engine Water Pump Assembly
- C 28 Inverter with Converter Assembly
- C 29 Crank Position Sensor
- C 30 E.F.I. Engine Coolant Temperature Sensor
- D 1 Compressor with Motor Assembly
- D 2 Inverter with Converter Assembly
- E 1 Knock Control Sensor (Bank 1)
- E 2 Engine Oil Pressure Switch Assembly
- L 1 Inverter with Converter Assembly
- W 1 Hybrid Vehicle Transaxle Assembly
- W 2 Inverter with Converter Assembly
- W 3 Hybrid Vehicle Transaxle Assembly
- W 4 Inverter with Converter Assembly
- W 5 Hybrid Vehicle Transaxle Assembly
- z 6 Cooling Fan ECU , Cooling Fan Motor

Position of Parts in Engine Compartment <LHD>

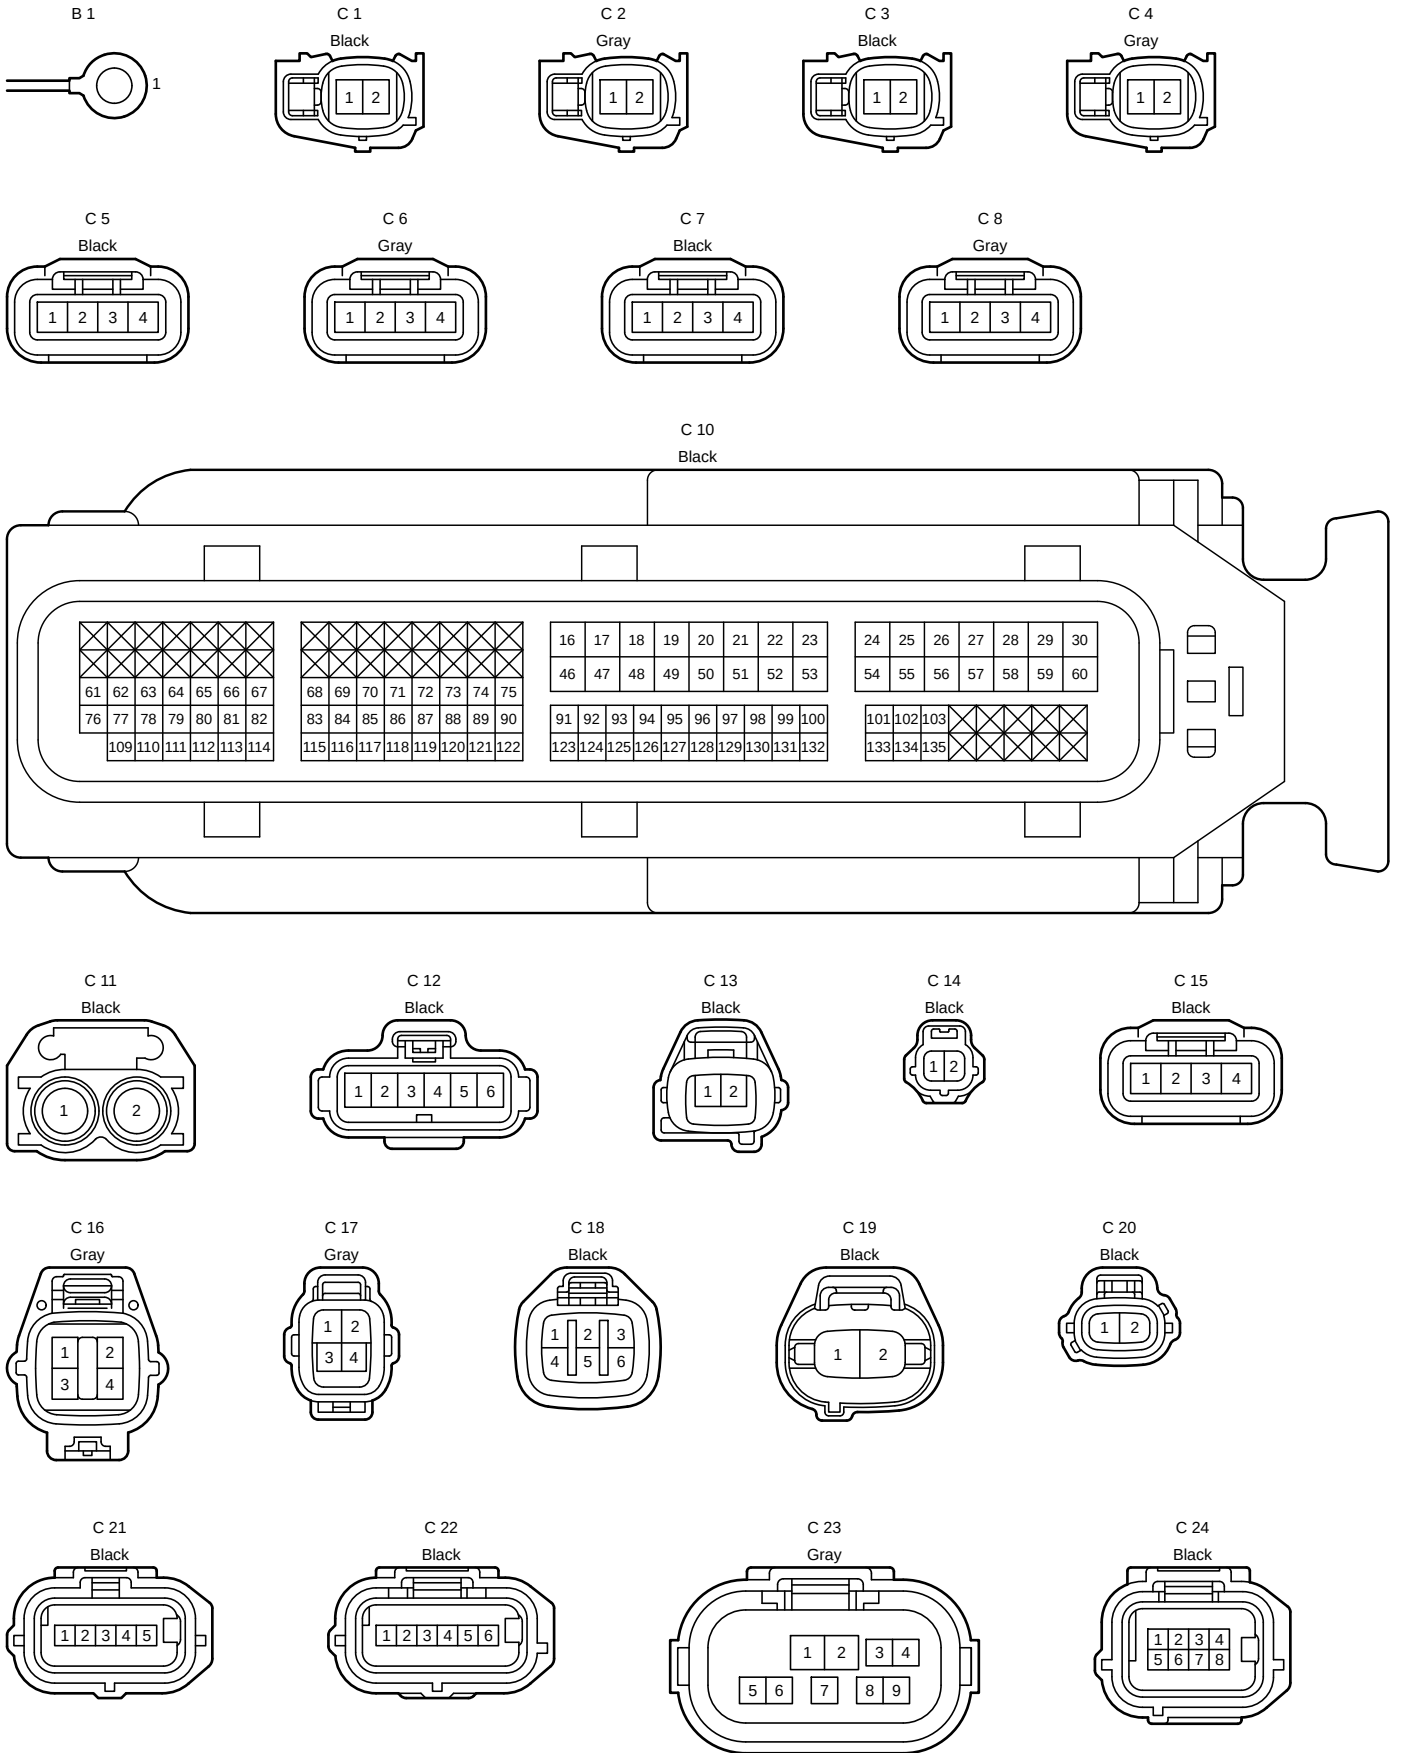


Position of Parts in Engine Compartment <LHD>

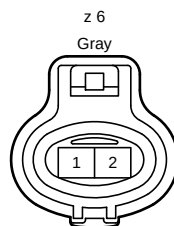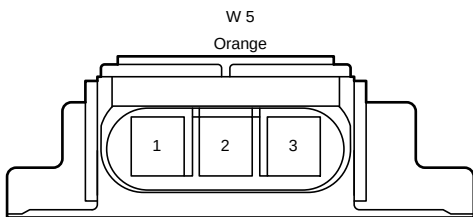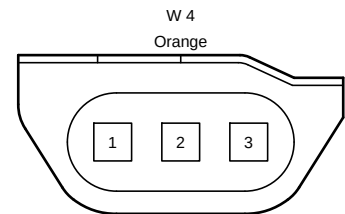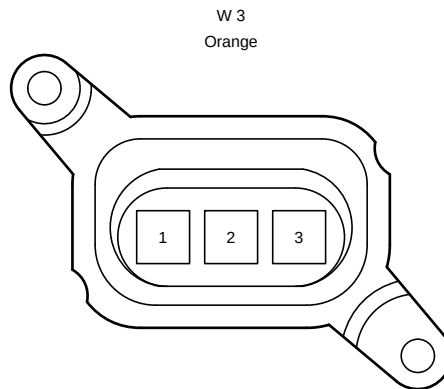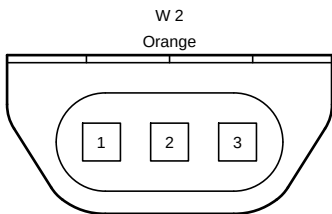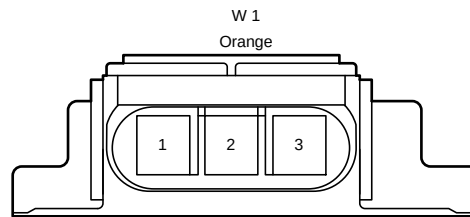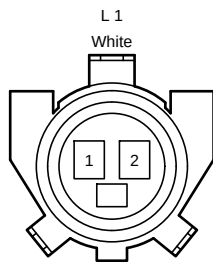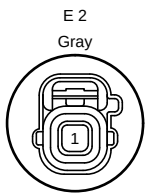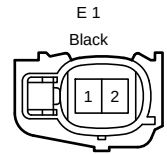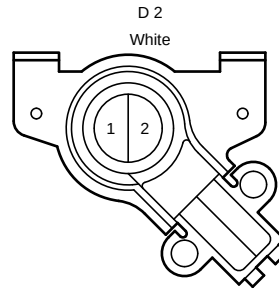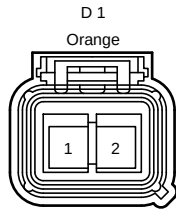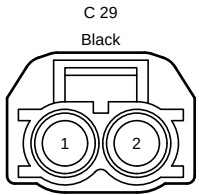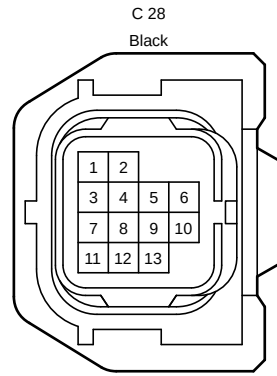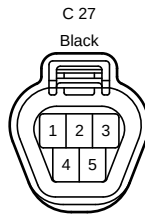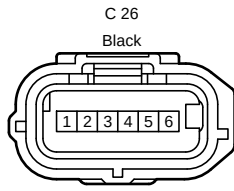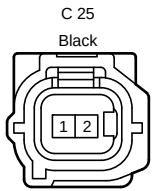

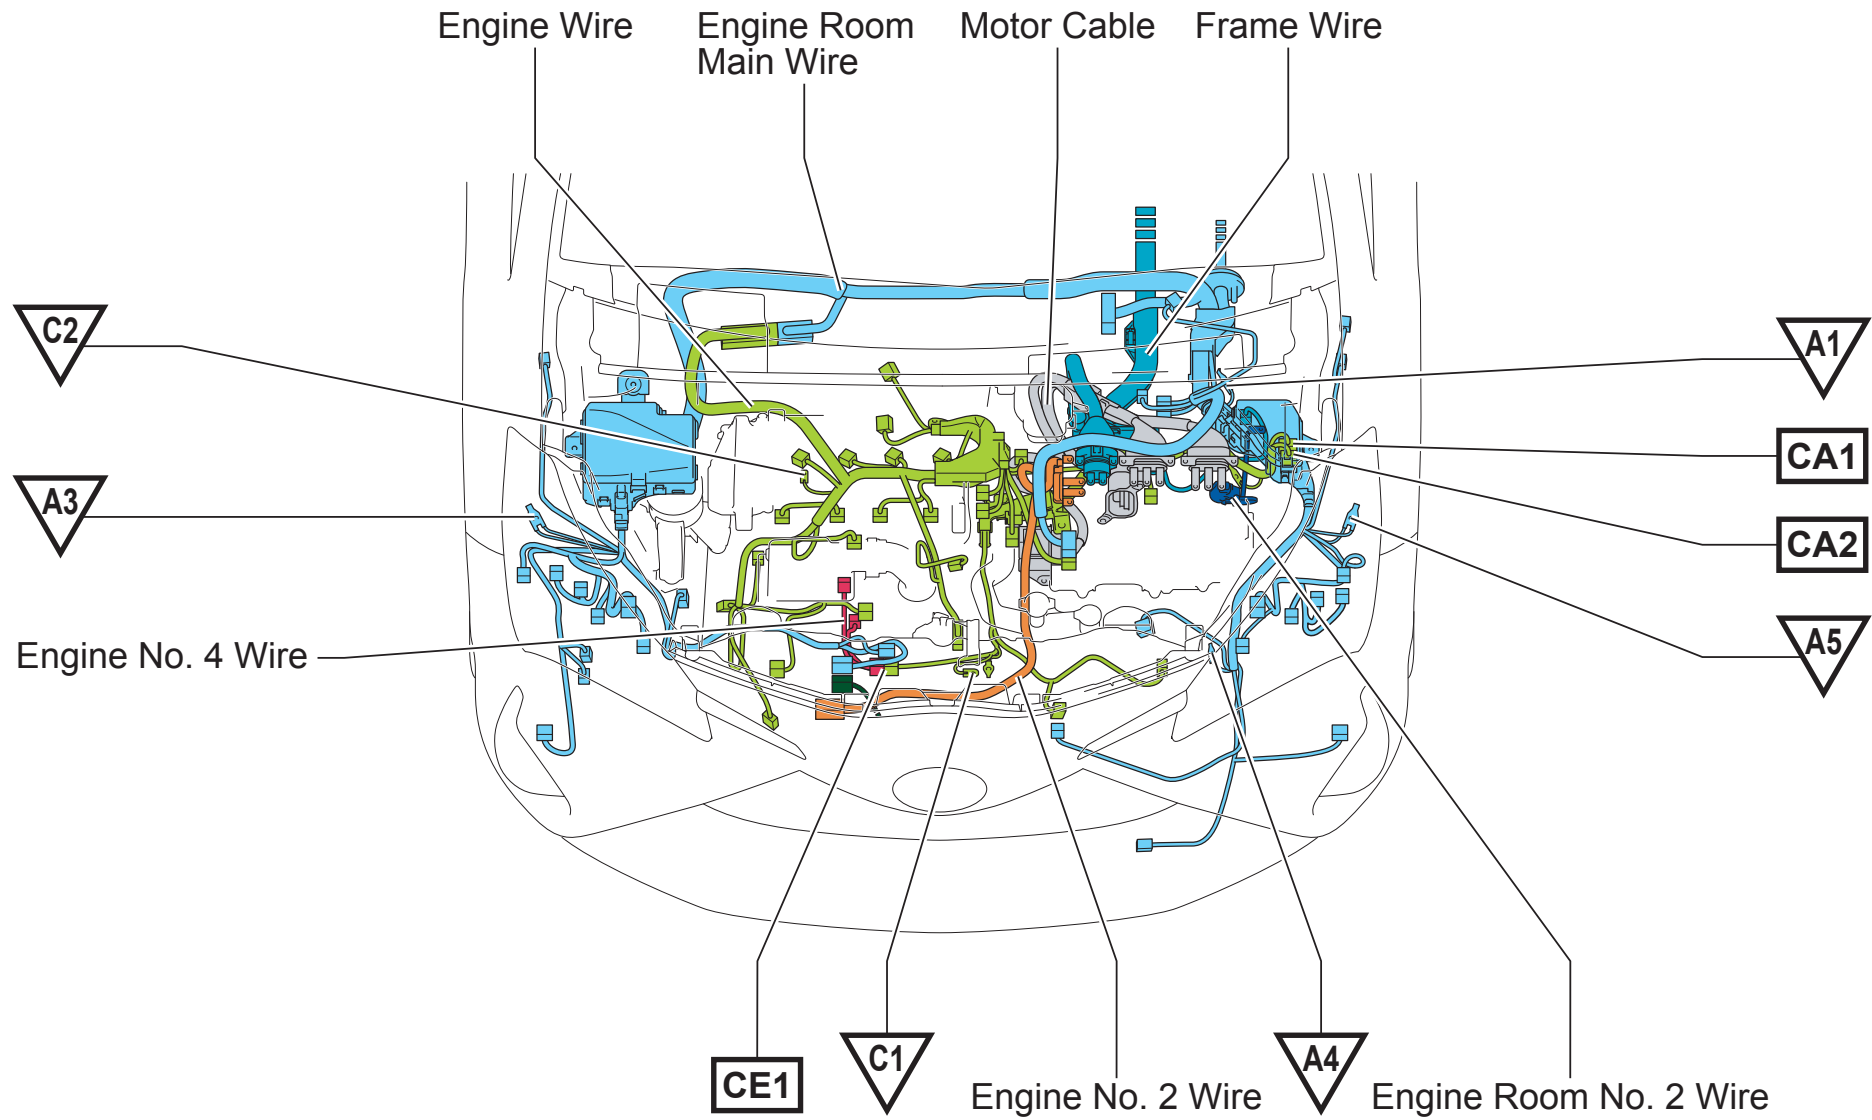


Wire and Wire , Ground Points in Engine Compartment <LHD>

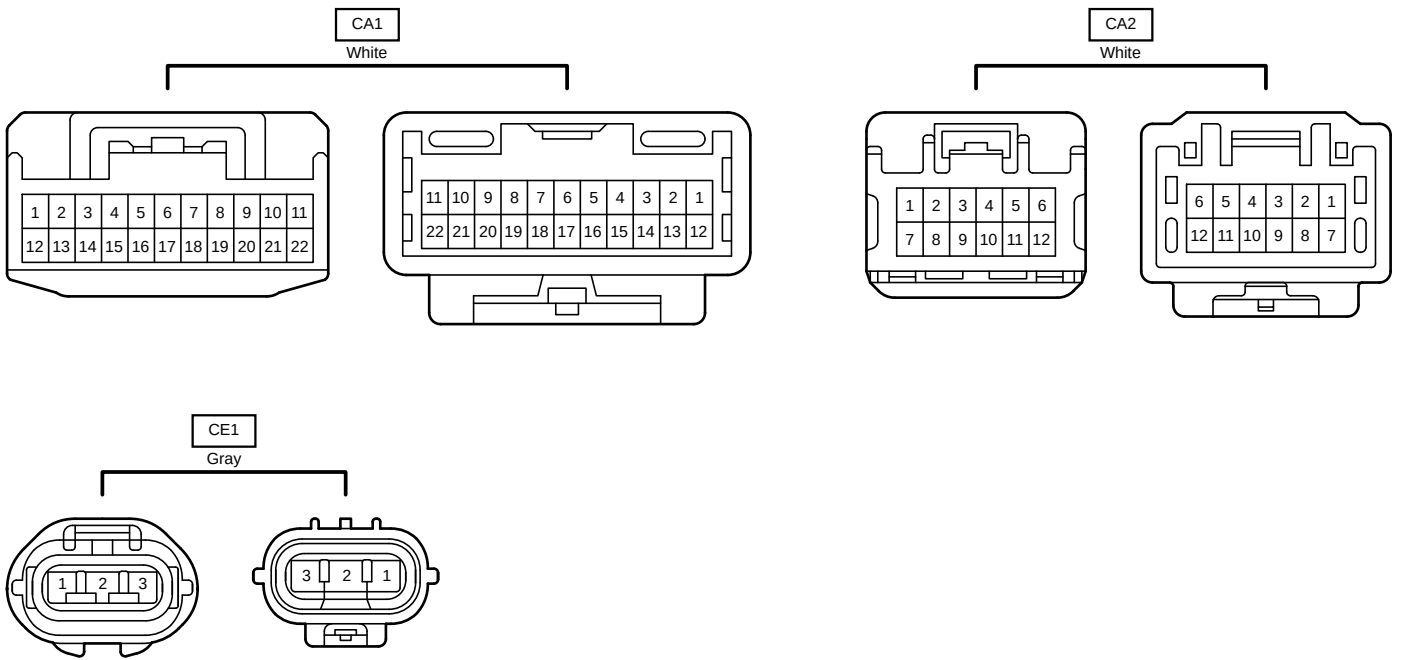


Position of Parts in Engine Compartment <RHD>

* 3: Before May 2018 Production
* 4: From May 2018 Production

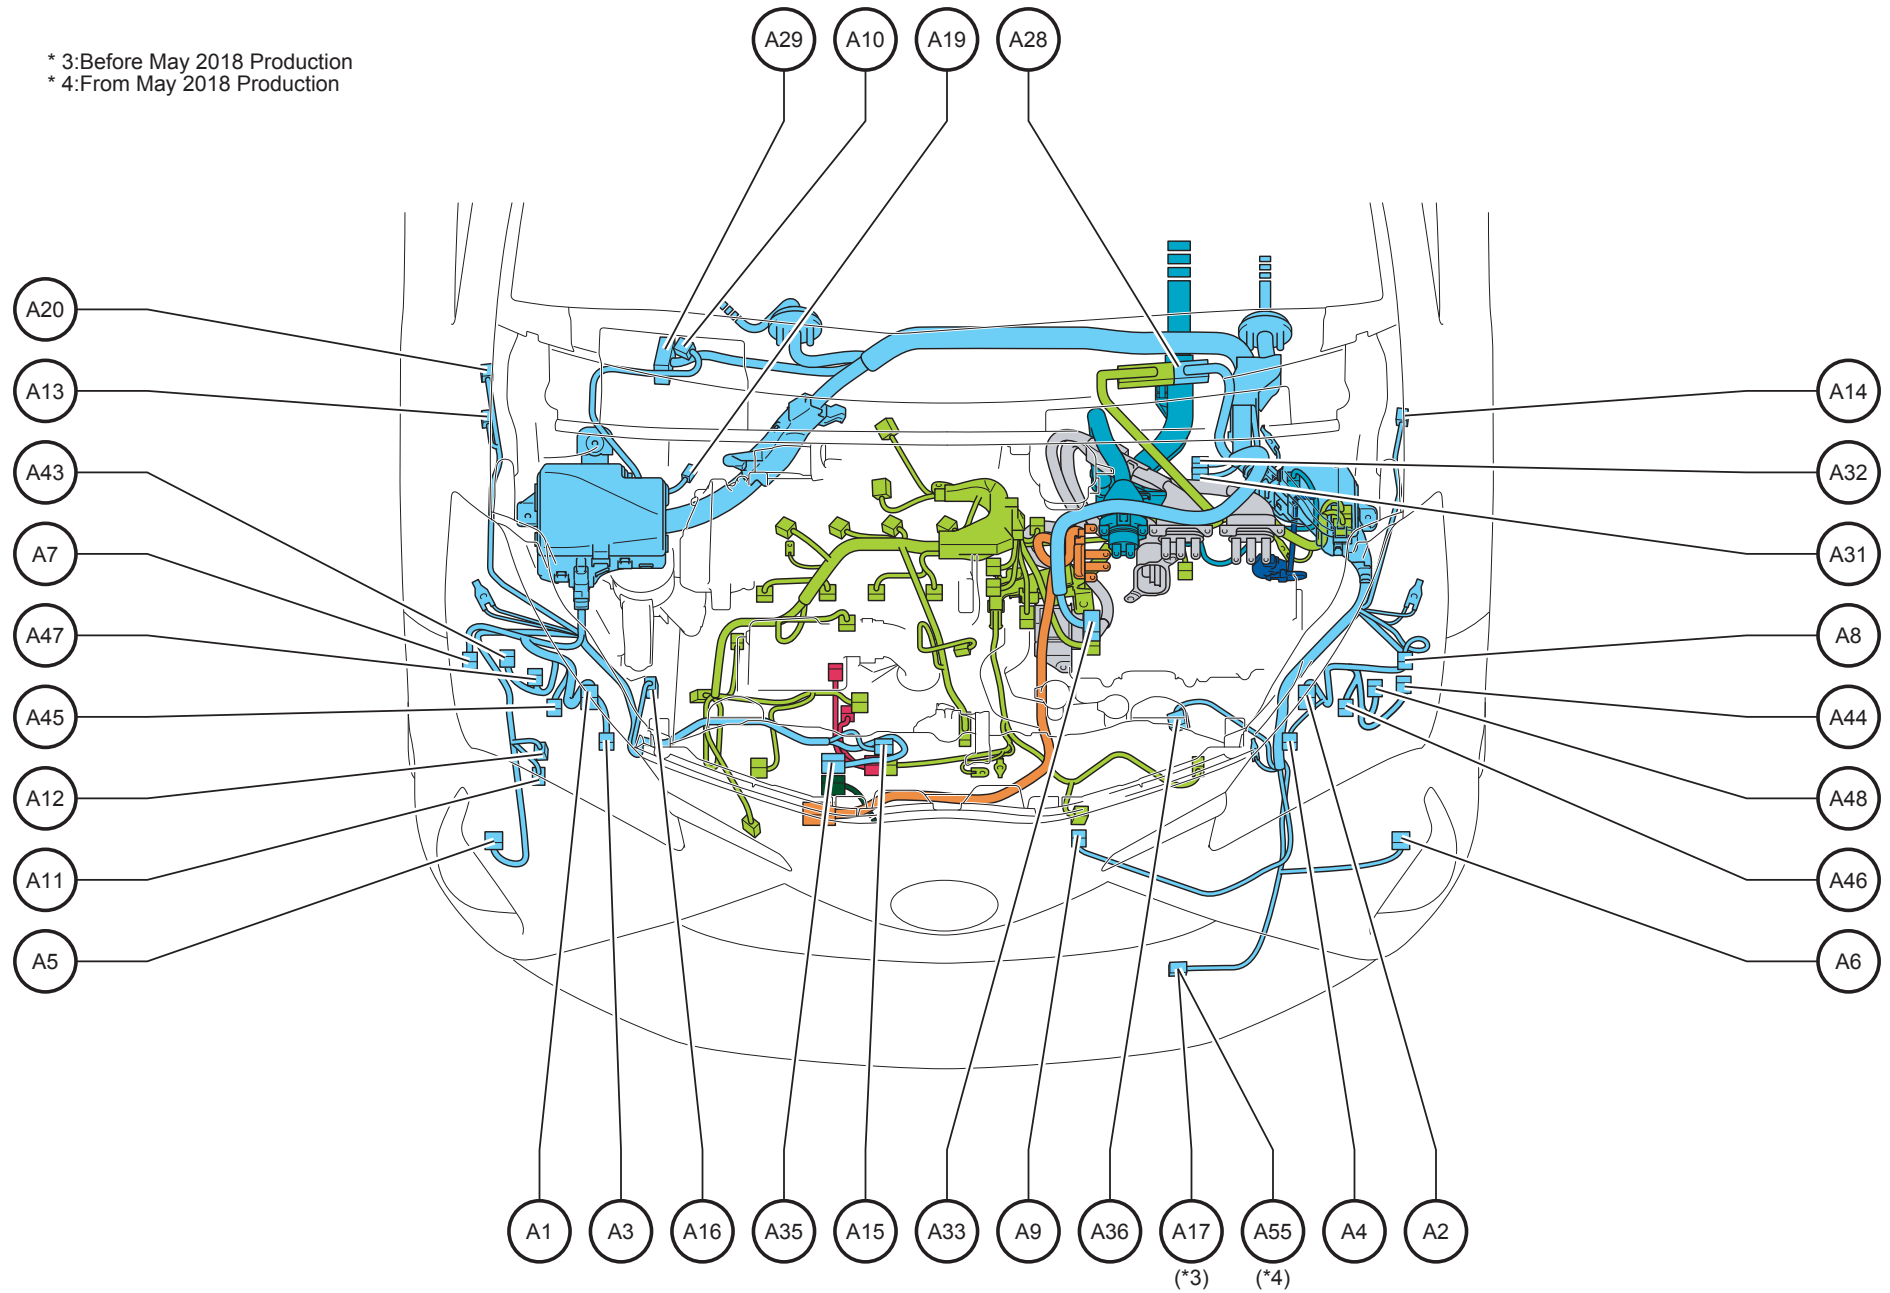


- A 1 Headlight Unit RH
- A 2 Headlight Unit LH
- A 3 Headlight Unit RH
- A 4 Headlight Unit LH
- A 5 Fog Light Assembly RH
- A 6 Fog Light Assembly LH
- A 7 Headlight Unit RH
- A 8 Headlight Unit LH
- A 9 Low Pitched Horn Assembly
- A 10 Windshield Wiper Motor Assembly
- A 11 Windshield Washer Motor and Pump Assembly
- A 12 Rear Washer Motor and Pump Assembly
- A 13 Front Speed Sensor RH
- A 14 Front Speed Sensor LH
- A 15 Front Airbag Sensor
- A 16 A/C Pressure Sensor (Liquid Tube Sub-Assembly)
- A 17 Ambient Temperature Sensor (Thermistor Assembly)
- A 19 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
- A 20 Wireless Door Lock Buzzer
- A 28 ECM
- A 29 Skid Control ECU with Actuator (Brake Booster with Master Cylinder Assembly)
- A 31 Brake Booster Pump Assembly
- A 32 Brake Booster Pump Assembly
- A 33 Inverter with Converter Assembly
- A 35 Cooling Fan ECU
- A 36 Inverter Water Pump Assembly
- A 43 Headlight Unit RH
- A 44 Headlight Unit LH
- A 45 Headlight Unit RH
- A 46 Headlight Unit LH
- A 47 Headlight Unit RH
- A 48 Headlight Unit LH
- A 55 Ambient Temperature Sensor (Thermistor Assembly)


Position of Parts in Engine Compartment <RHD>

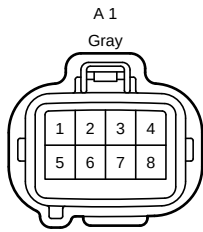


(Low, High, Daytime Running Light and Clearance Light)

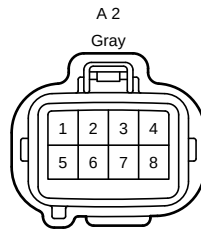




(Low, High, Daytime Running Light and Clearance Light)

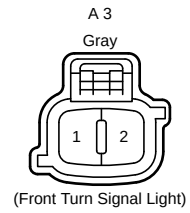


(Front Turn Signal Light)

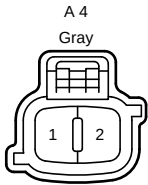










(Front Turn Signal Light)

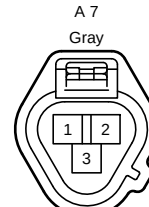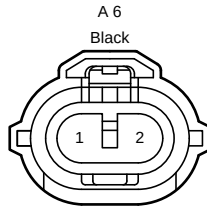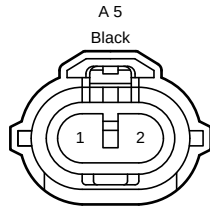









(Headlight Leveling Motor)

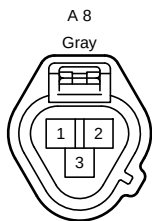


(Headlight Leveling Motor)

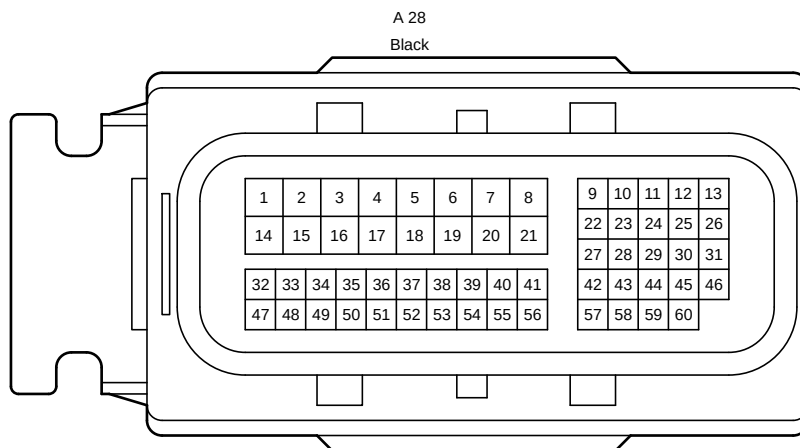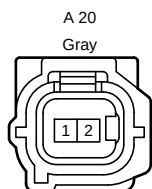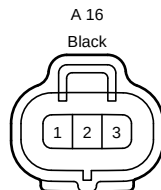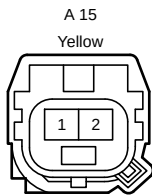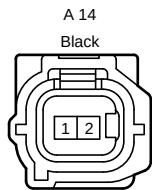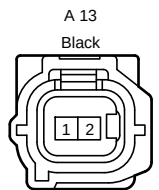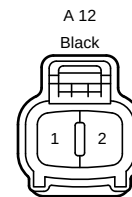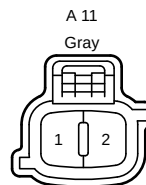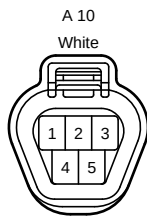


Position of Parts in Engine Compartment <RHD>

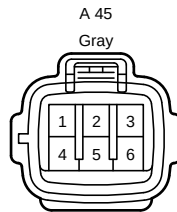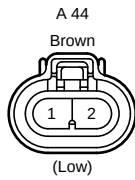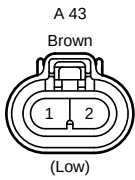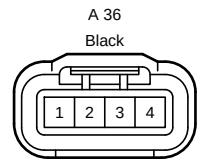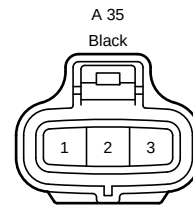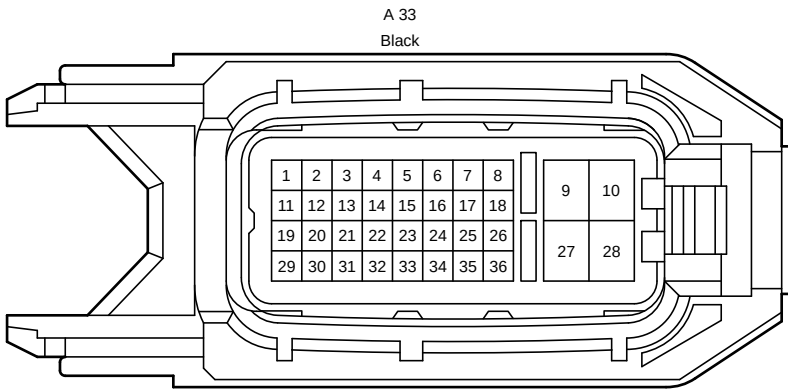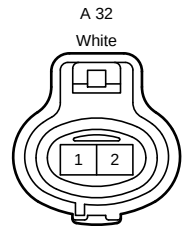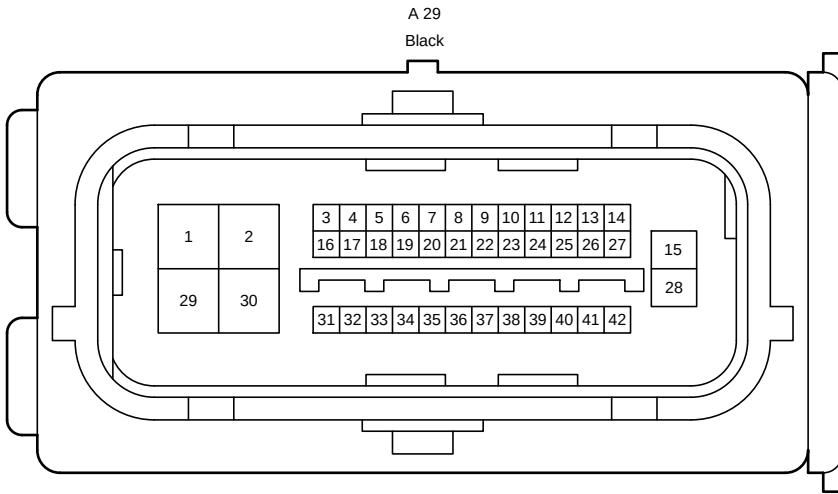


(High, Front Turn Signal Light, Daytime Running Light and Clearance Light)

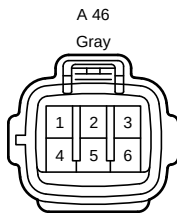


(High, Front Turn Signal Light, Daytime Running Light and Clearance Light)

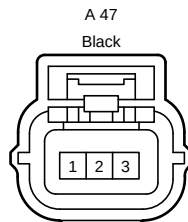

(Headlight Leveling Motor)

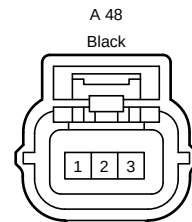


(Headlight Leveling Motor)

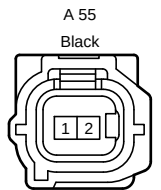

Position of Parts in Engine Compartment <RHD>

- * 1: Before Jun. 2013 Production
- * 2: From Jun. 2013 Production
- * 5: Before Mar. 2017 Production
- * 6: From Mar. 2017 Production

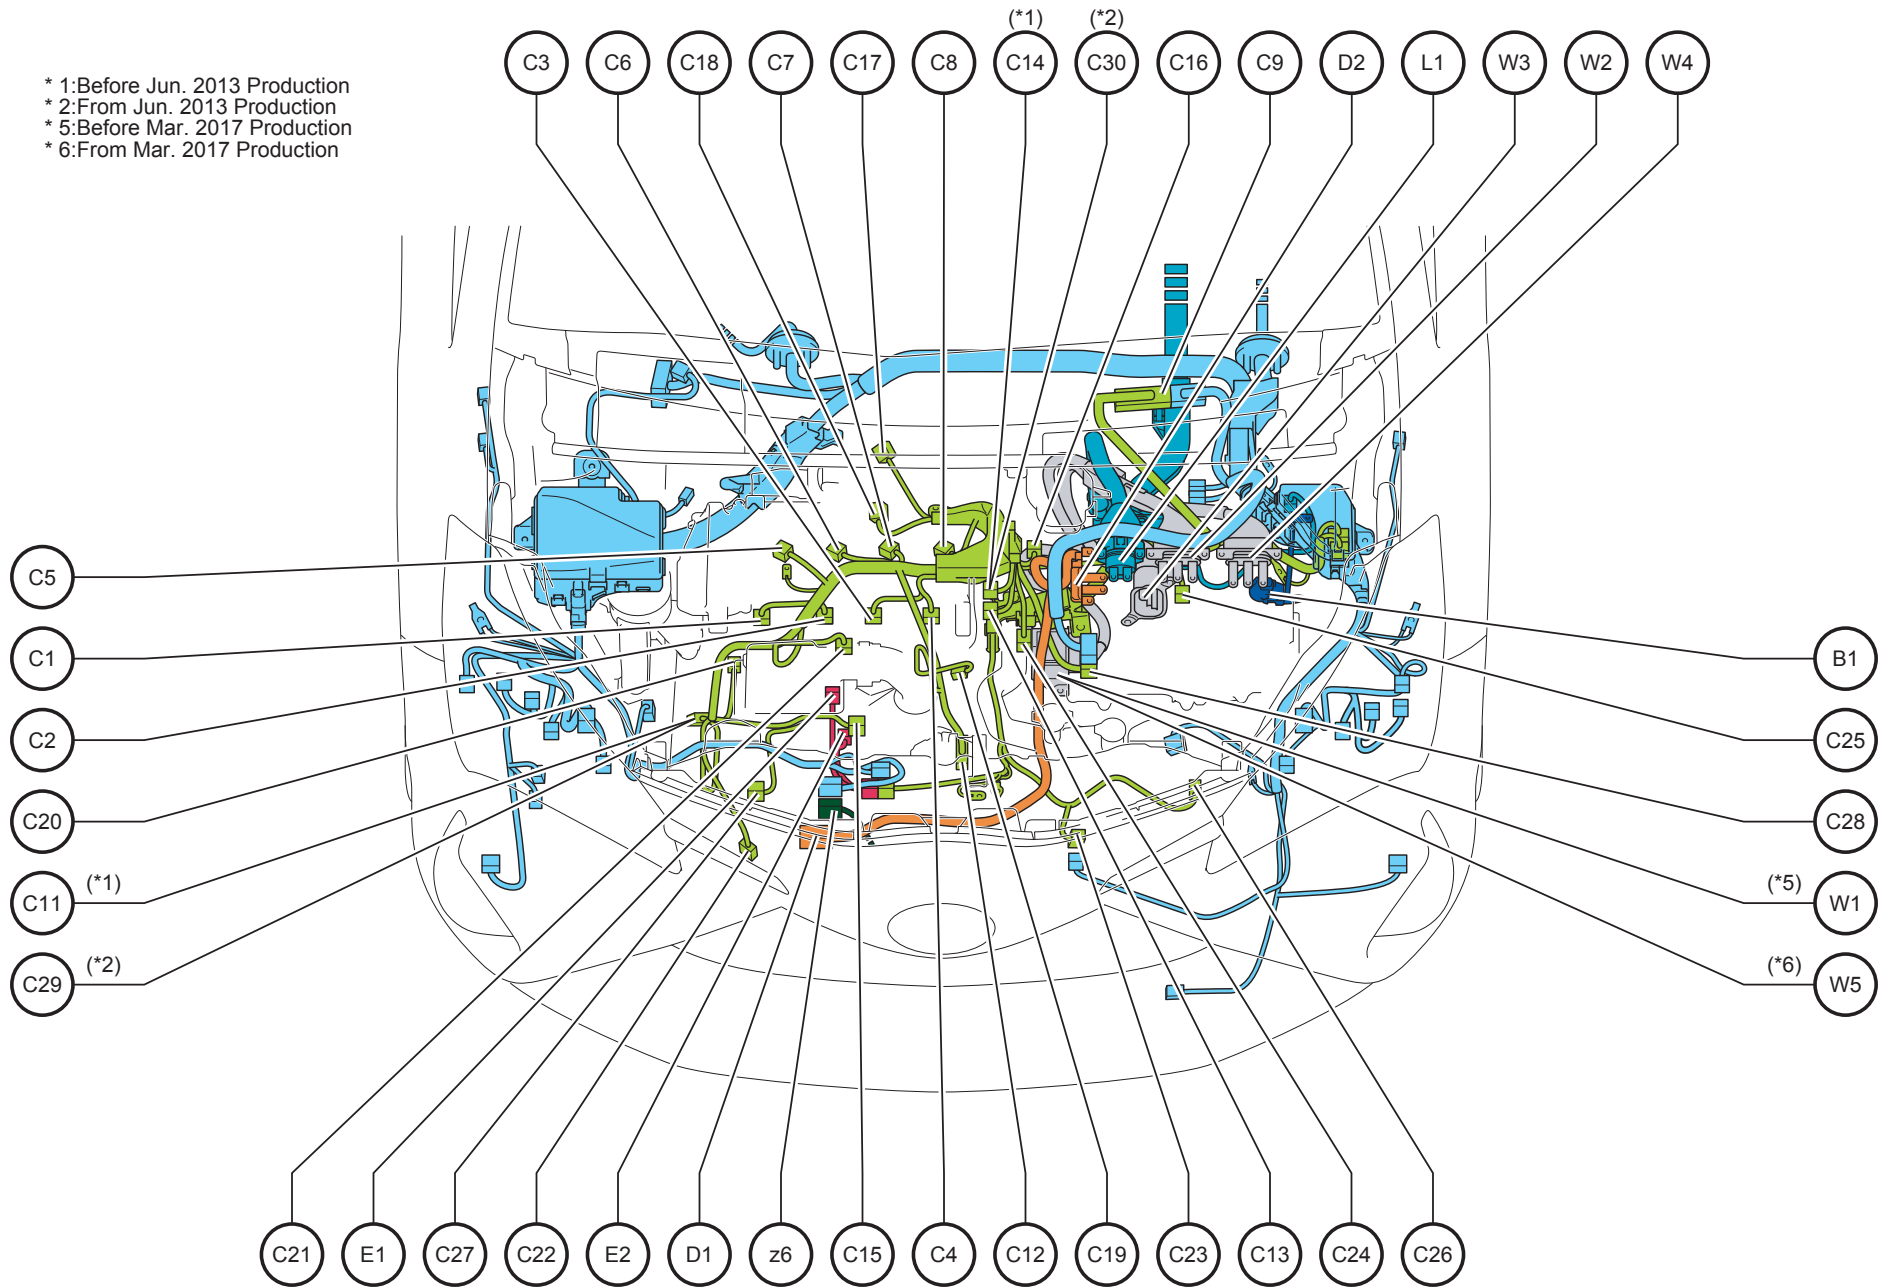

- B 1 Inverter with Converter Assembly

- C 1 Fuel Injector Assembly No. 1
- C 2 Fuel Injector Assembly No. 2
- C 3 Fuel Injector Assembly No. 3
- C 4 Fuel Injector Assembly No. 4
- C 5 Ignition Coil No. 1
- C 6 Ignition Coil No. 2
- C 7 Ignition Coil No. 3
- C 8 Ignition Coil No. 4
- C 9 ECM
- C 11 Crank Position Sensor
- C 12 Throttle Body with Motor Assembly
- C 13 Cam Position Sensor
- C 14 E.F.I. Engine Coolant Temperature Sensor
- C 15 E.F.I. Vacuum Sensor Assembly
- C 16 Oxygen Sensor (Bank 1 Sensor 2)
- C 17 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- C 18 EGR Valve Assembly
- C 19 Purge VSV
- C 20 Camshaft Timing Oil Control Valve Assembly (Bank 1)
- C 21 Intake Mass Air Flow Meter Sub-Assembly
- C 22 Compressor with Motor Assembly
- C 23 Shift Lever Position Sensor
- C 24 Hybrid Vehicle Transaxle Assembly
- C 25 Hybrid Vehicle Transaxle Assembly
- C 26 Hybrid Vehicle Transaxle Assembly
- C 27 Engine Water Pump Assembly
- C 28 Inverter with Converter Assembly
- C 29 Crank Position Sensor
- C 30 E.F.I. Engine Coolant Temperature Sensor

- D 1 Compressor with Motor Assembly
- D 2 Inverter with Converter Assembly


- E 1 Knock Control Sensor (Bank 1)
- E 2 Engine Oil Pressure Switch Assembly

- L 1 Inverter with Converter Assembly

- W 1 Hybrid Vehicle Transaxle Assembly
- W 2 Inverter with Converter Assembly
- W 3 Hybrid Vehicle Transaxle Assembly
- W 4 Inverter with Converter Assembly
- W 5 Hybrid Vehicle Transaxle Assembly


- z 6 Cooling Fan ECU , Cooling Fan Motor

Position of Parts in Engine Compartment <RHD>

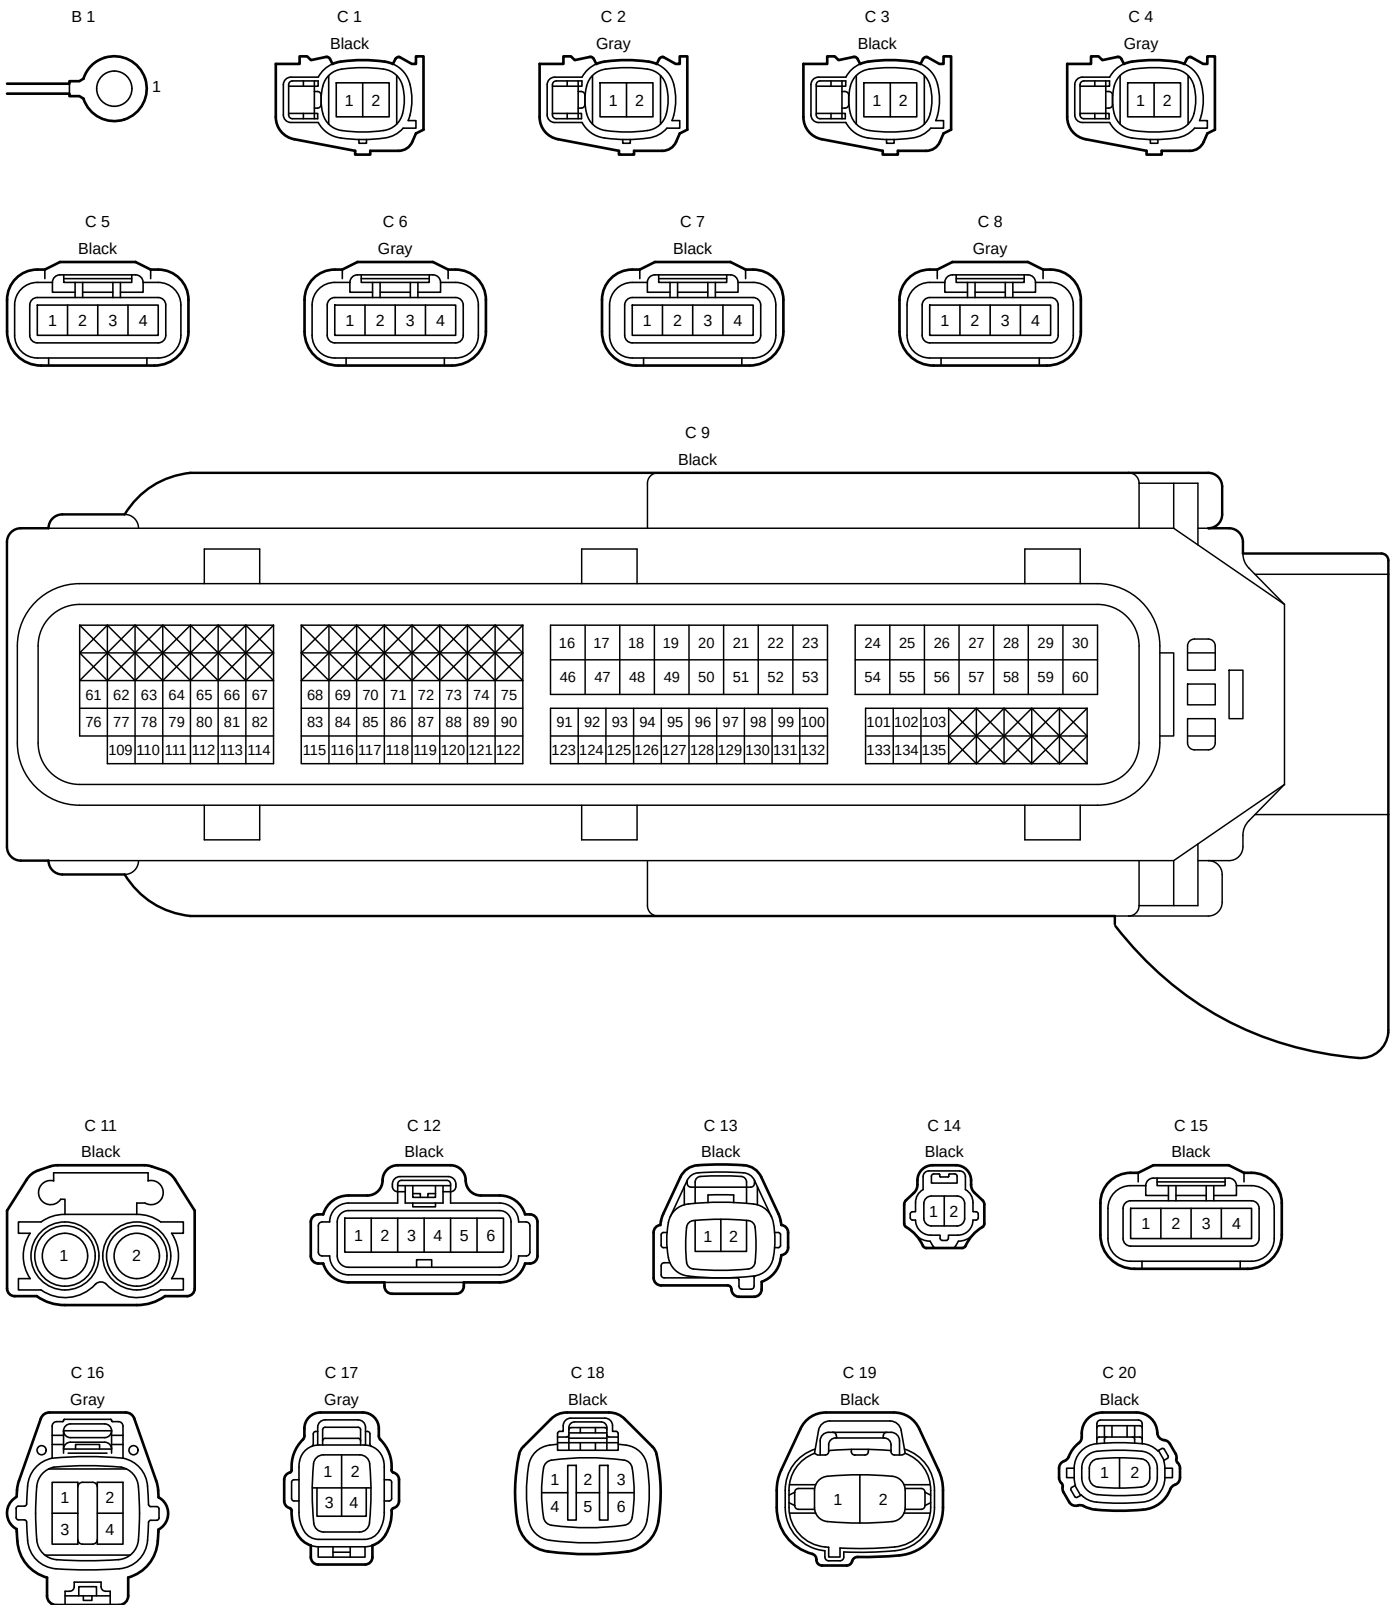


Position of Parts in Engine Compartment <RHD>


C 21
Black

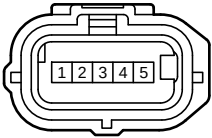


C 22
Black

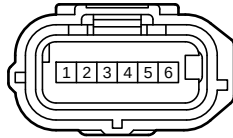


C 23
Gray

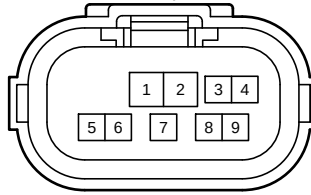


C 24
Black

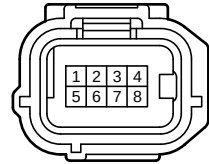

C 25
Black

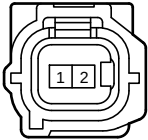


C 26
Black

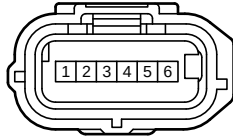


C 27
Black



C 28
Black

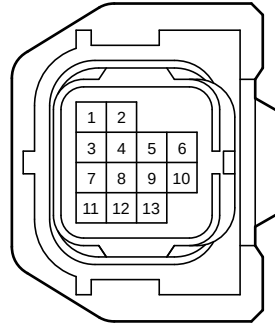


C 29
Black

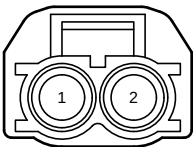


C 30
Black




D 1
Orange

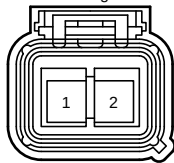

D 2
White

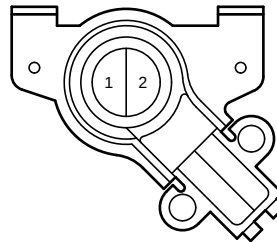


E 1
Black




E 2
Gray




L 1
White

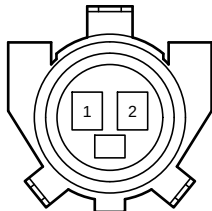


W 1
Orange

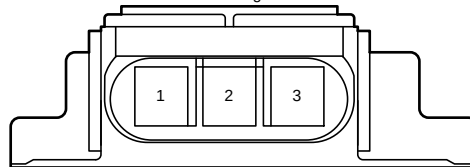


W 2
Orange


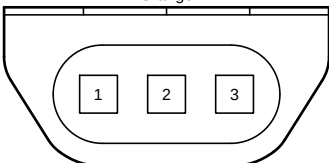



W 3
Orange

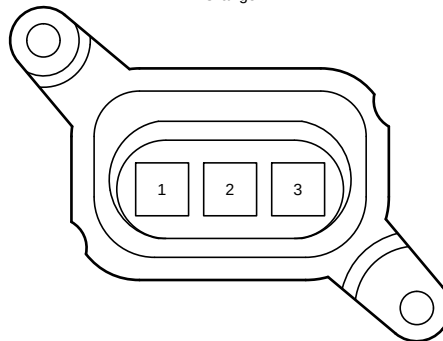


W 4
Orange

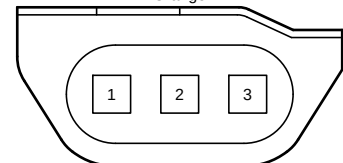


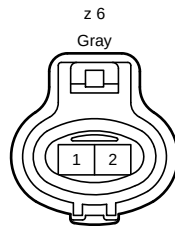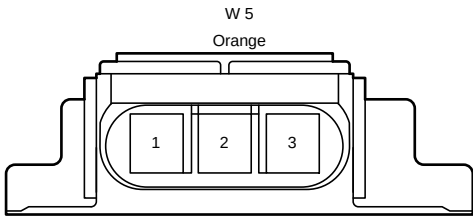

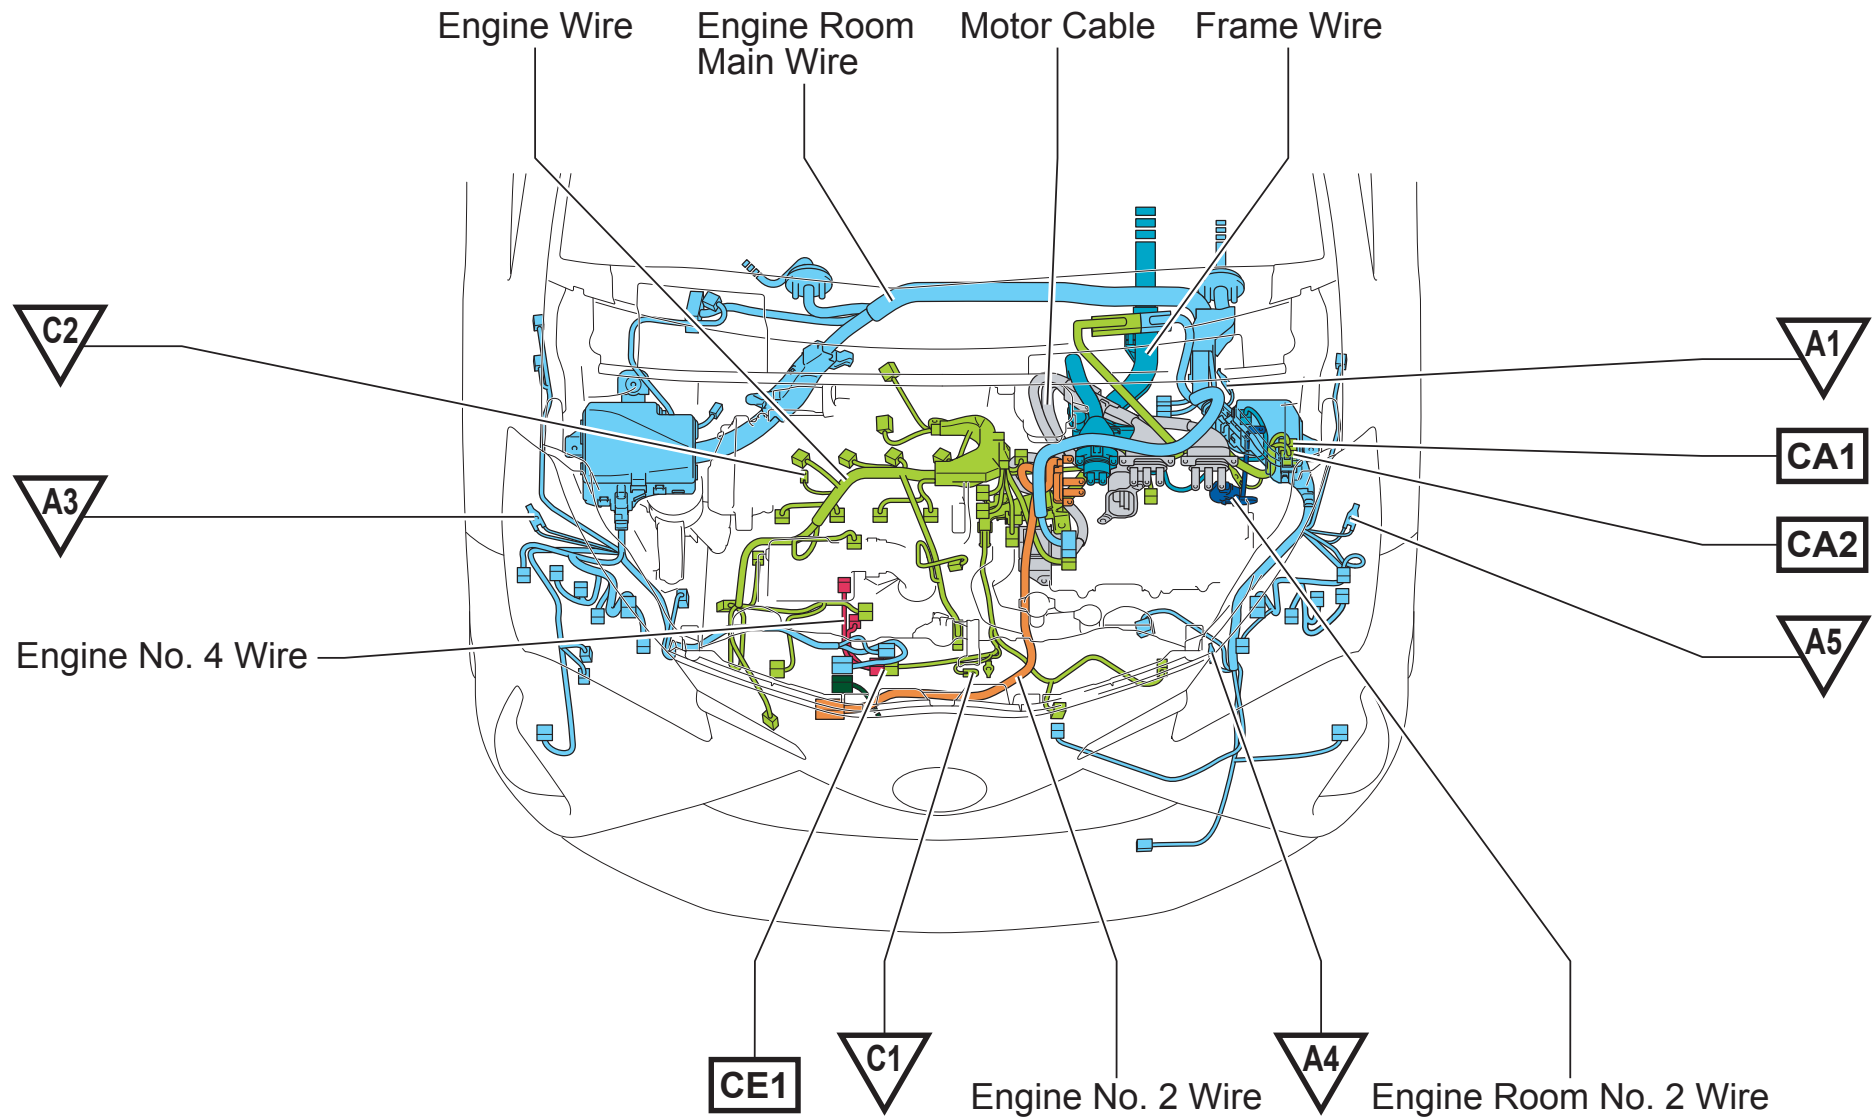


Wire and Wire , Ground Points in Engine Compartment <RHD>

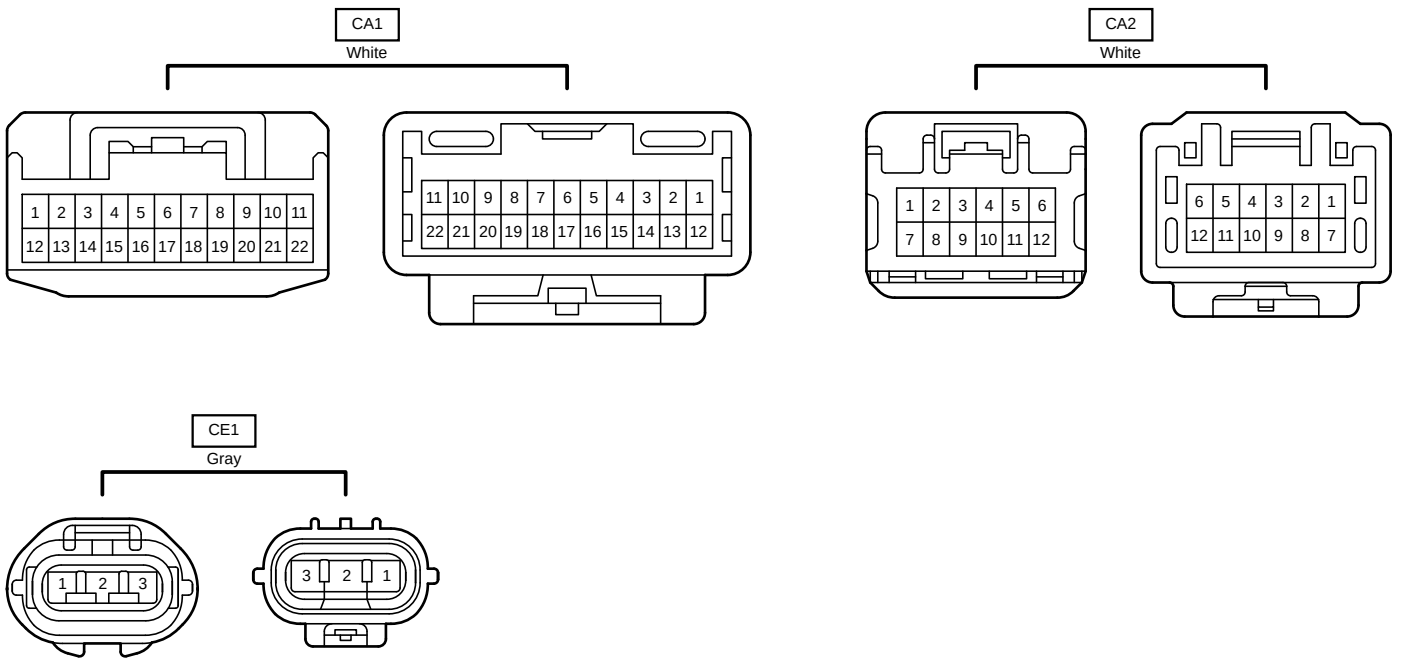

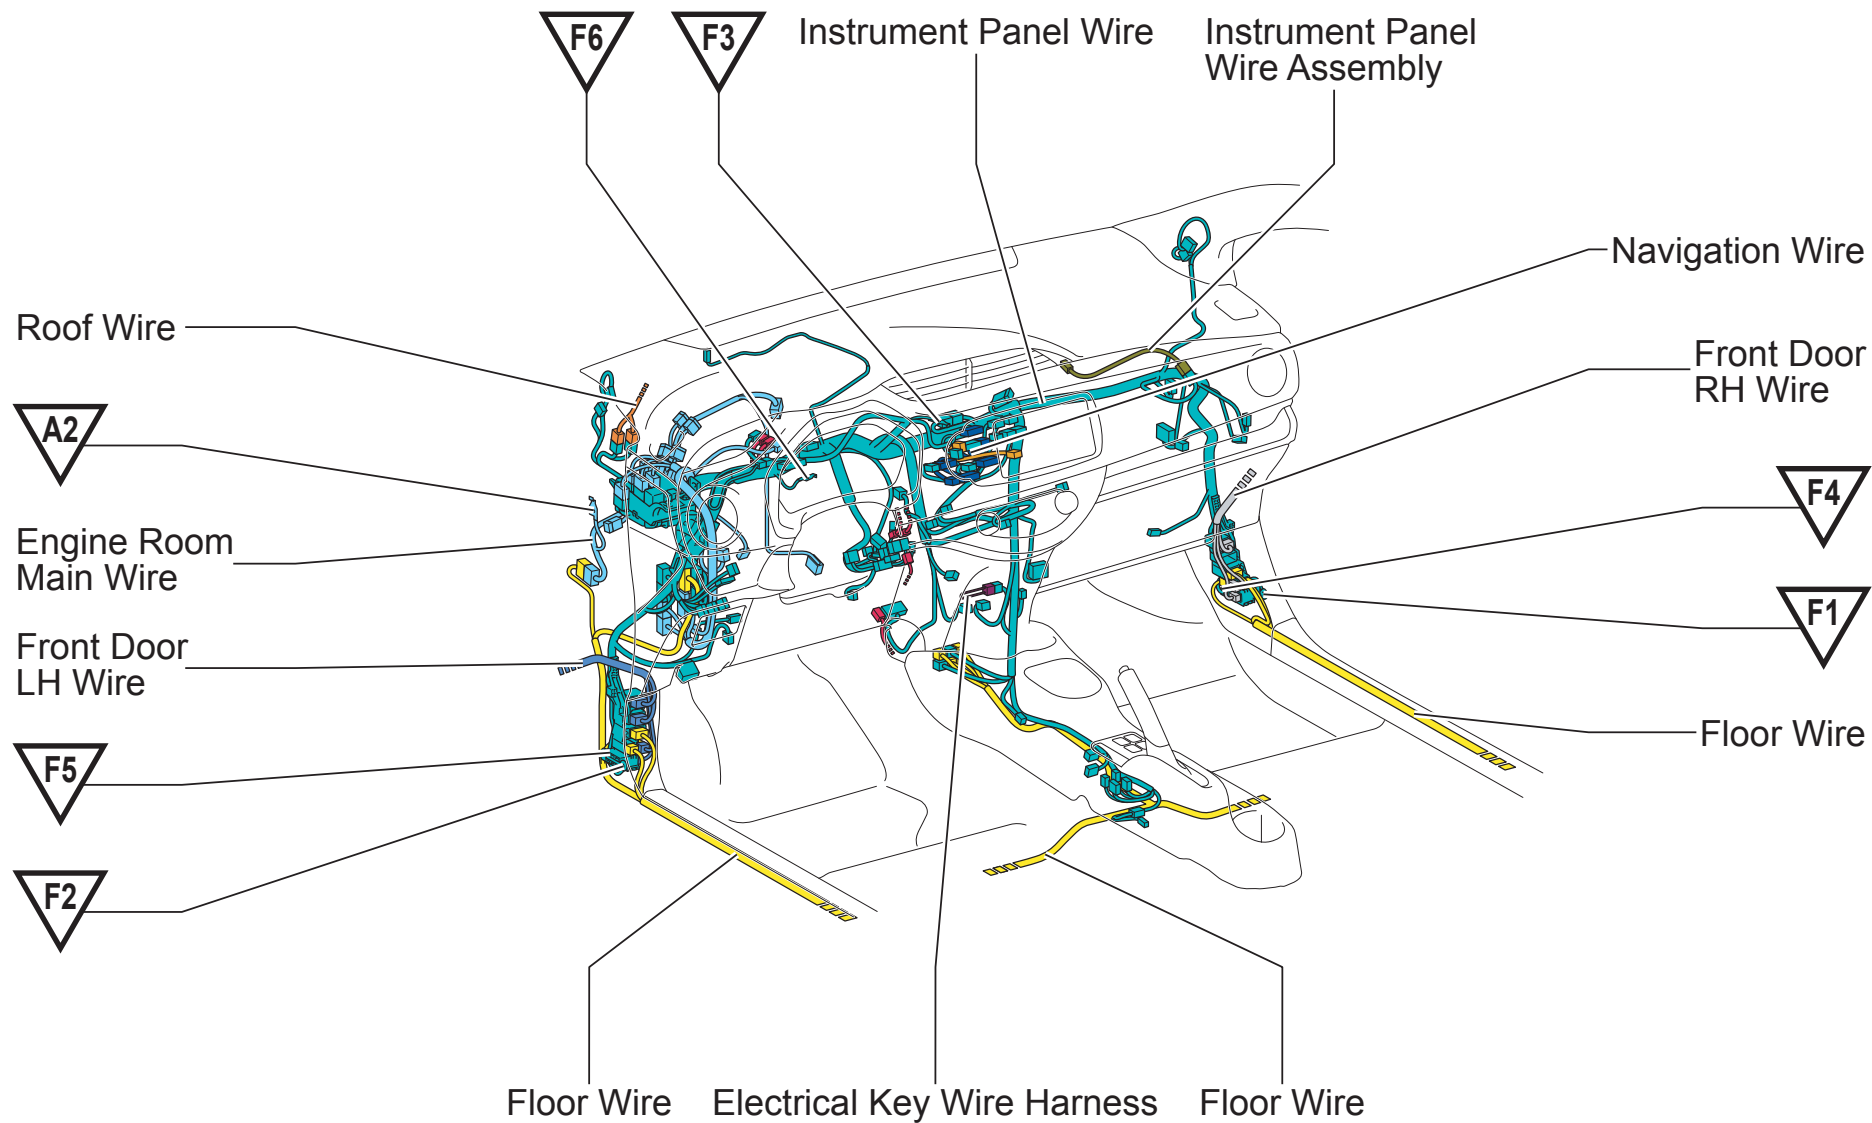


Position of Parts in Instrument Panel <LHD>

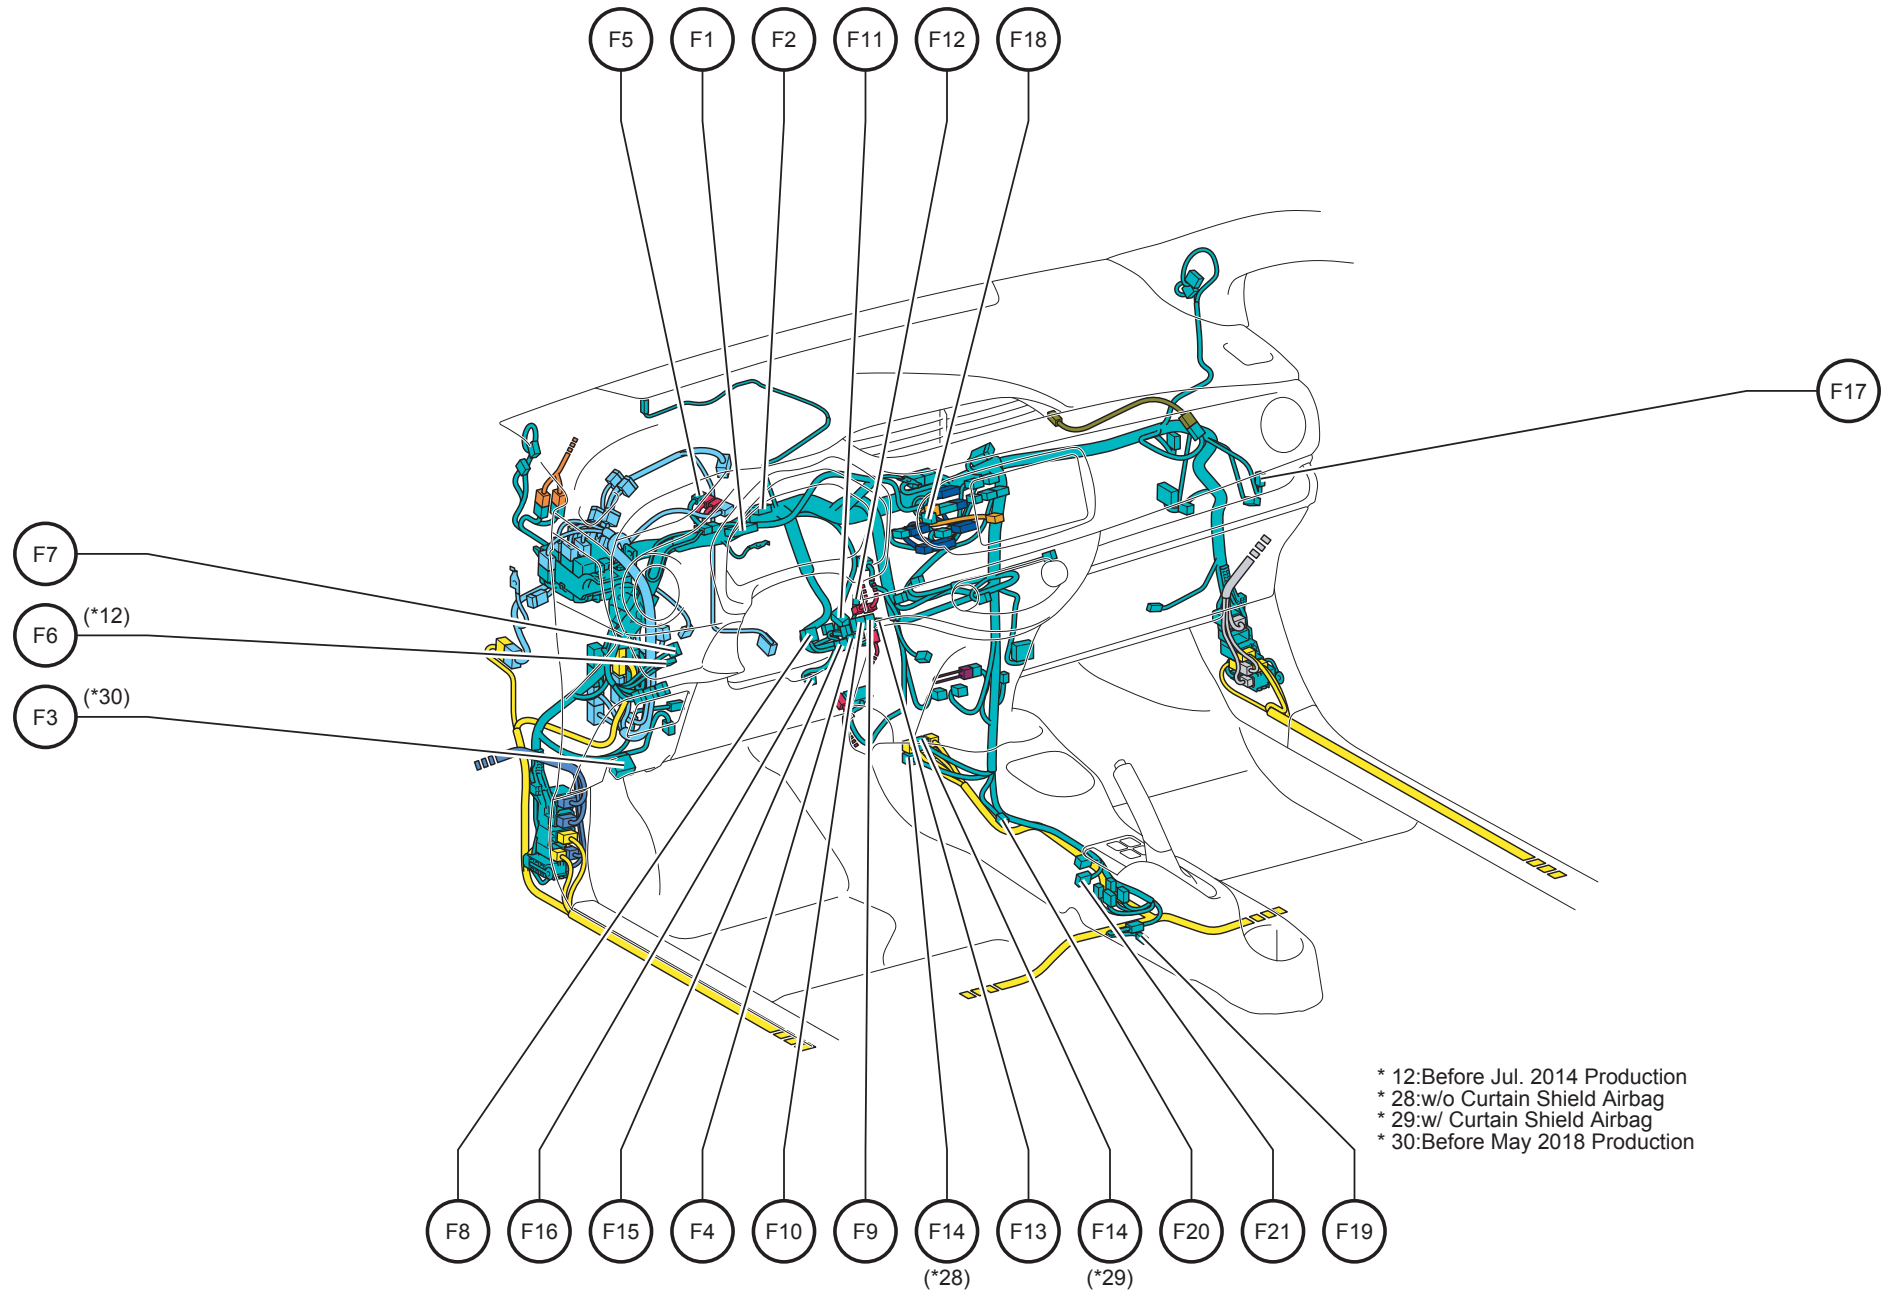


- F 1 Combination Meter Assembly
- F 2 Combination Meter Assembly
- F 3 DLC3
- F 4 Spiral Cable Sub-Assembly
- F 5 Power Steering ECU Assembly
- F 6 Outer Mirror Switch Assembly
- F 7 Headlight Leveling Switch
- F 8 Headlight Dimmer Switch Assembly
- F 9 Windshield Wiper Switch Assembly
- F 10 Windshield Wiper Switch Assembly
- F 11 Ignition or Starter Switch Assembly
- F 12 Key Inter Lock Solenoid
- F 13 Un-Lock Warning Switch Assembly
- F 14 Airbag Sensor Assembly
- F 15 Spiral Cable Sub-Assembly
- F 16 Lower No. 1 Instrument Panel Airbag Assembly
- F 17 Airbag Cut Off Switch Cylinder Sub-Assembly
- F 18 Telltale Light Assembly
- F 19 Parking Brake Switch Assembly
- F 20 Shift Lock Control Unit Assembly
- F 21 Shift Position Indicator (Indicator Light Wire Sub-Assembly)

Position of Parts in Instrument Panel <LHD>


F 1
Black

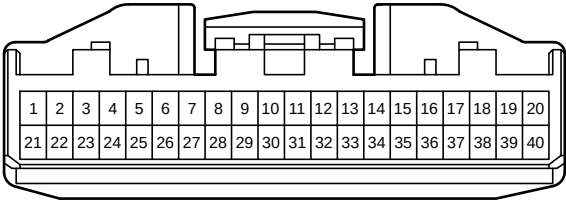


F 2
White

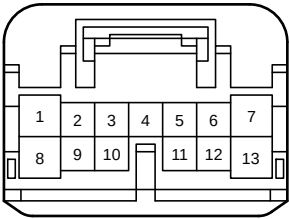


F 3
White

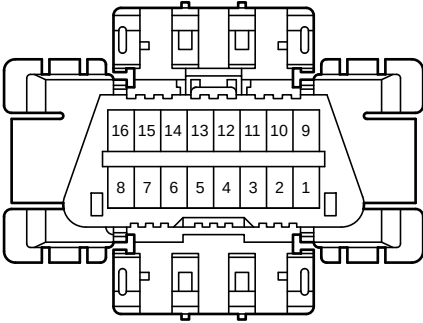


F 4
Black

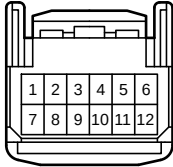


F 5
Black

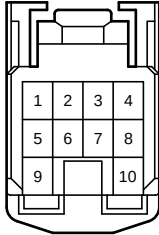


F 6
White

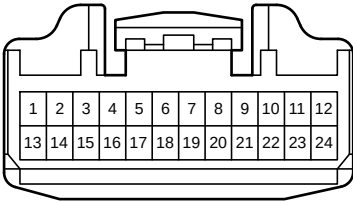


F 7
Black




F 8
Black

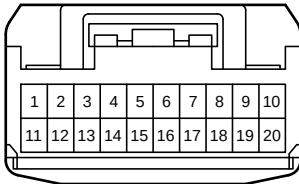


F 9
White

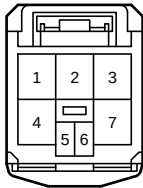

F 10
White

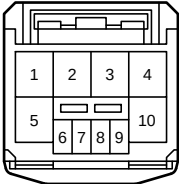

F 11
White

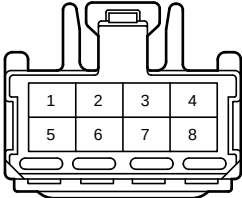


F 12
Black




F 13
White




F 14
Yellow

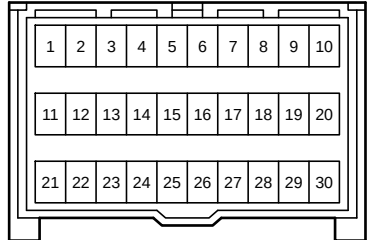

F 15
Yellow

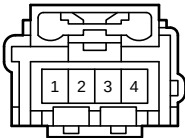


F 16
Black



F 17
White




F 18
Black

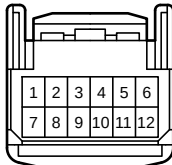


F 19
White



F 20
White

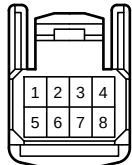


F 21
White

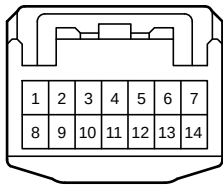


Position of Parts in Instrument Panel <LHD>


- * 1:Refer to the Service Bulletin for the installation position of the parts.
- * 2:w/ Power Switch
- * 3:w/o Power Switch
- * 4:Radio Receiver Assembly Type
- * 12:Before Jul. 2014 Production
- * 13:From Jul. 2014 Production
- * 20:Before May 2015 Production

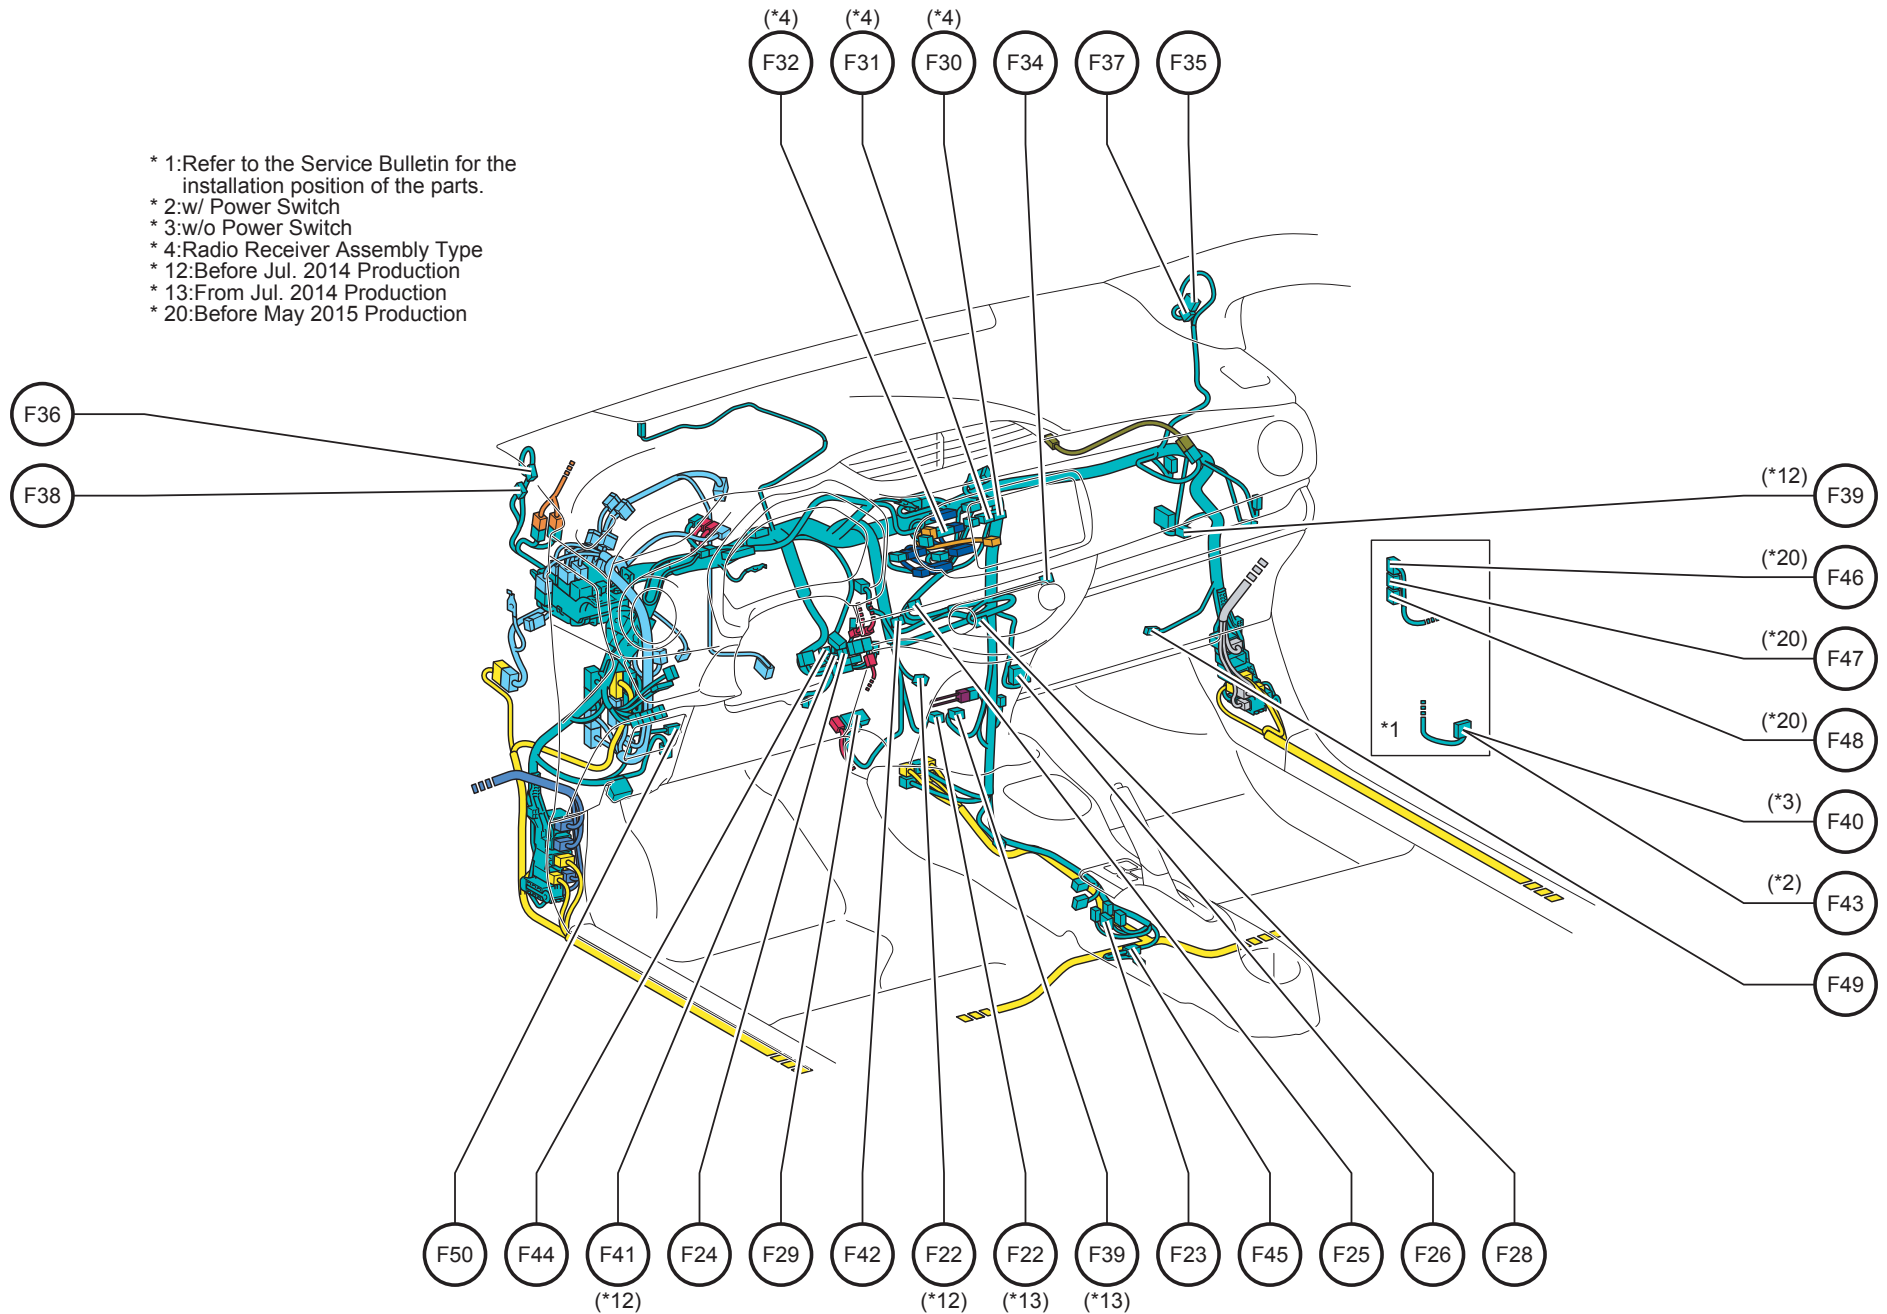


- F 22 Cigarette Lighter Assembly or No. 3 Power Outlet Socket Assembly
- F 23 Seat Heater Switch
- F 24 Steering Sensor
- F 25 Cooler (Room Temperature Sensor) Thermistor
- F 26 Blower Motor with Fan Sub-Assembly
- F 28 A/C Control Assembly
- F 29 A/C Amplifier Assembly
- F 30 Radio Receiver Assembly
- F 31 Radio Receiver Assembly
- F 32 Radio Receiver Assembly
- F 34 Amplifier Microphone Assembly
- F 35 Front No. 2 Speaker Assembly RH
- F 36 Front No. 2 Speaker Assembly LH
- F 37 Front No. 2 Speaker Assembly RH
- F 38 Front No. 2 Speaker Assembly LH
- F 39 No. 1 Stereo Jack Adapter Assembly
- F 40 Transponder Key ECU Assembly
- F 41 Transponder Key Amplifier
- F 42 Power Switch
- F 43 ID Code Box
- F 44 Steering Lock Actuator Assembly
- F 45 No. 1 Indoor Electrical Key Antenna Assembly
- F 46 Certification ECU
- F 47 Certification ECU
- F 48 Certification ECU
- F 49 No. 1 Interior Illumination Light Assembly RH
- F 50 No. 1 Interior Illumination Light Assembly LH

Position of Parts in Instrument Panel <LHD>

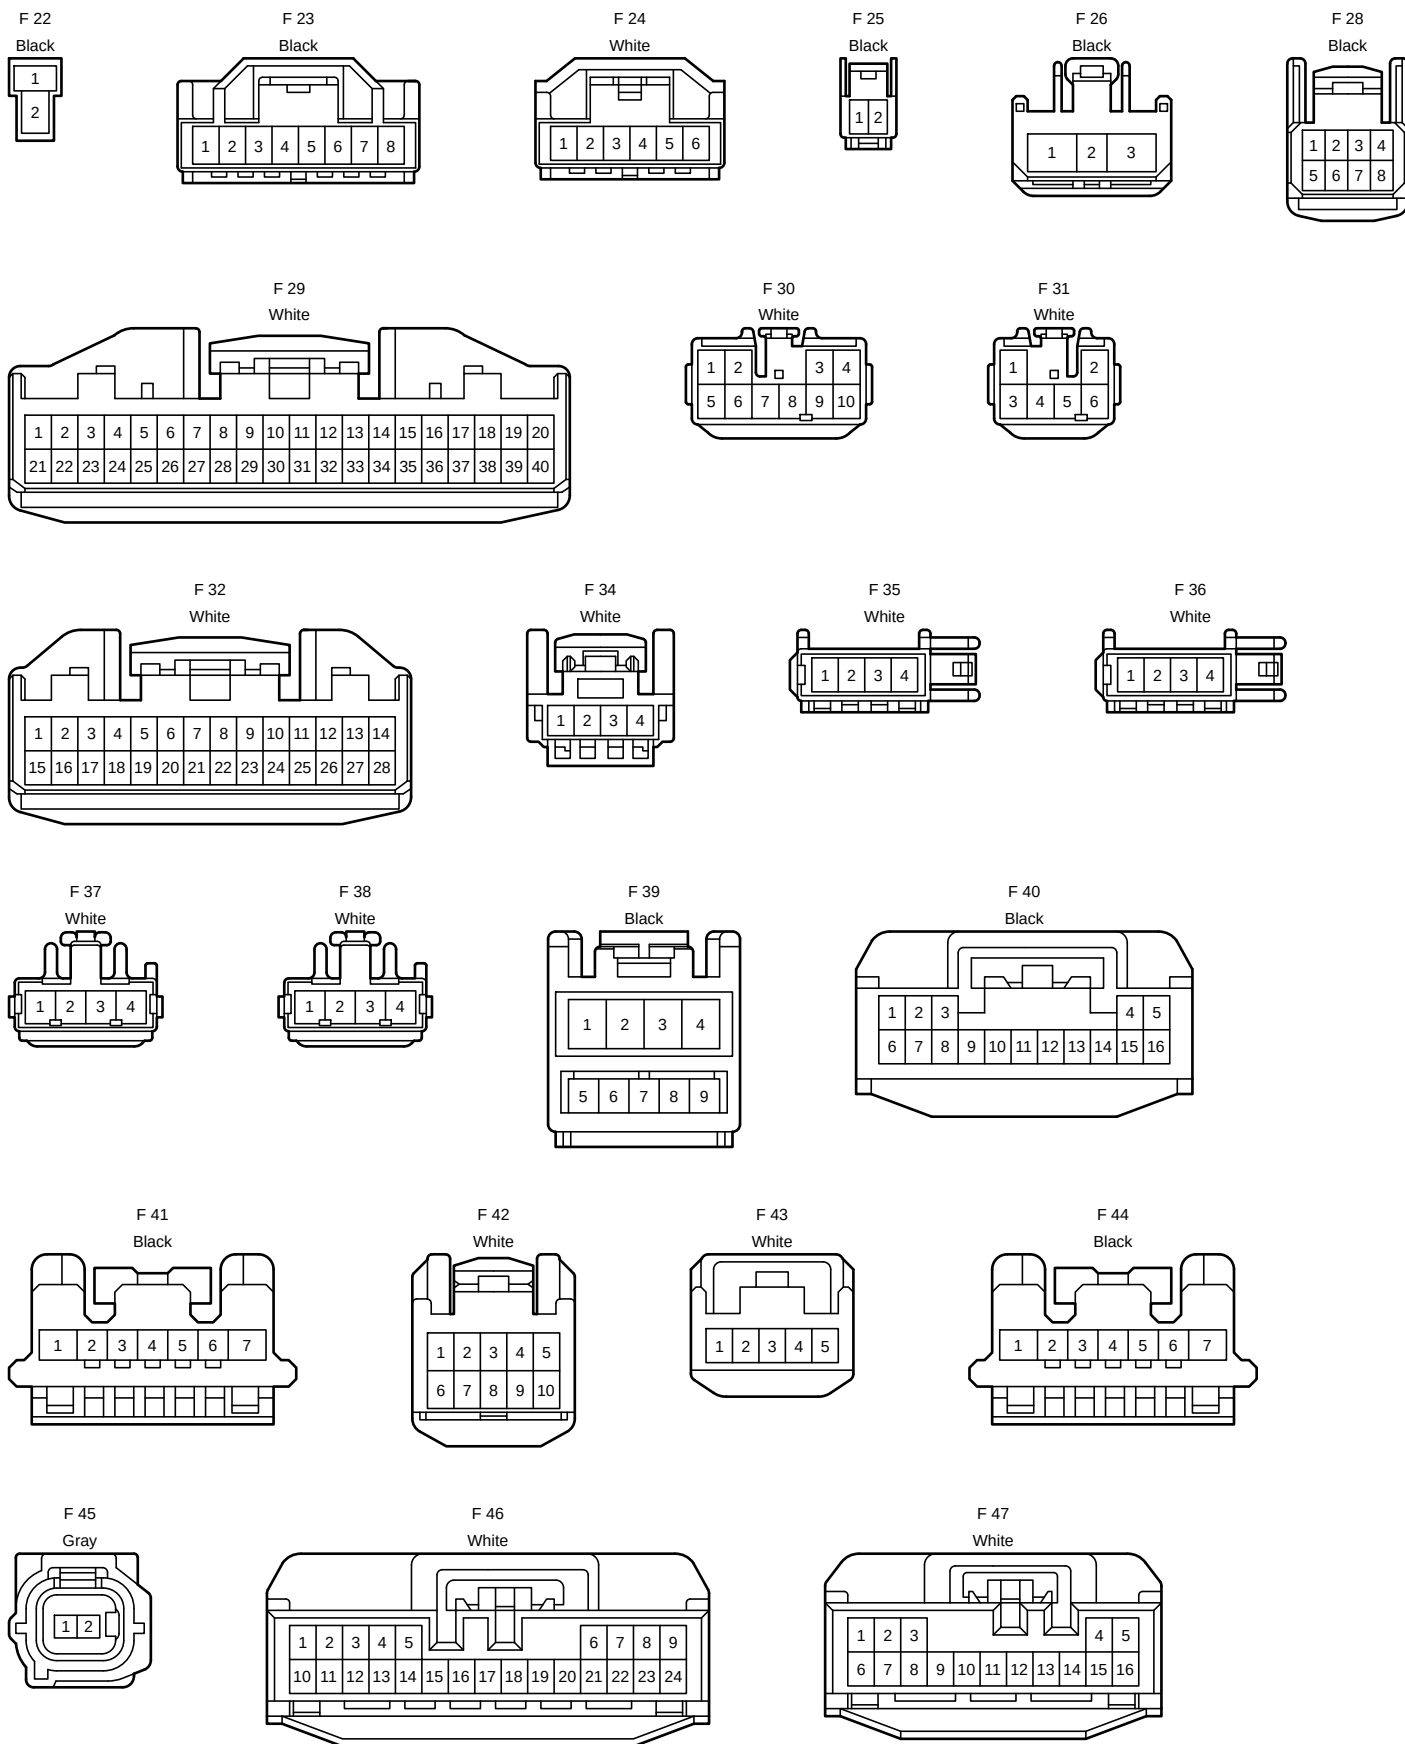

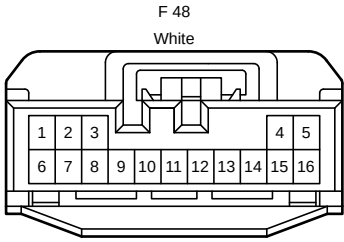


Position of Parts in Instrument Panel <LHD>

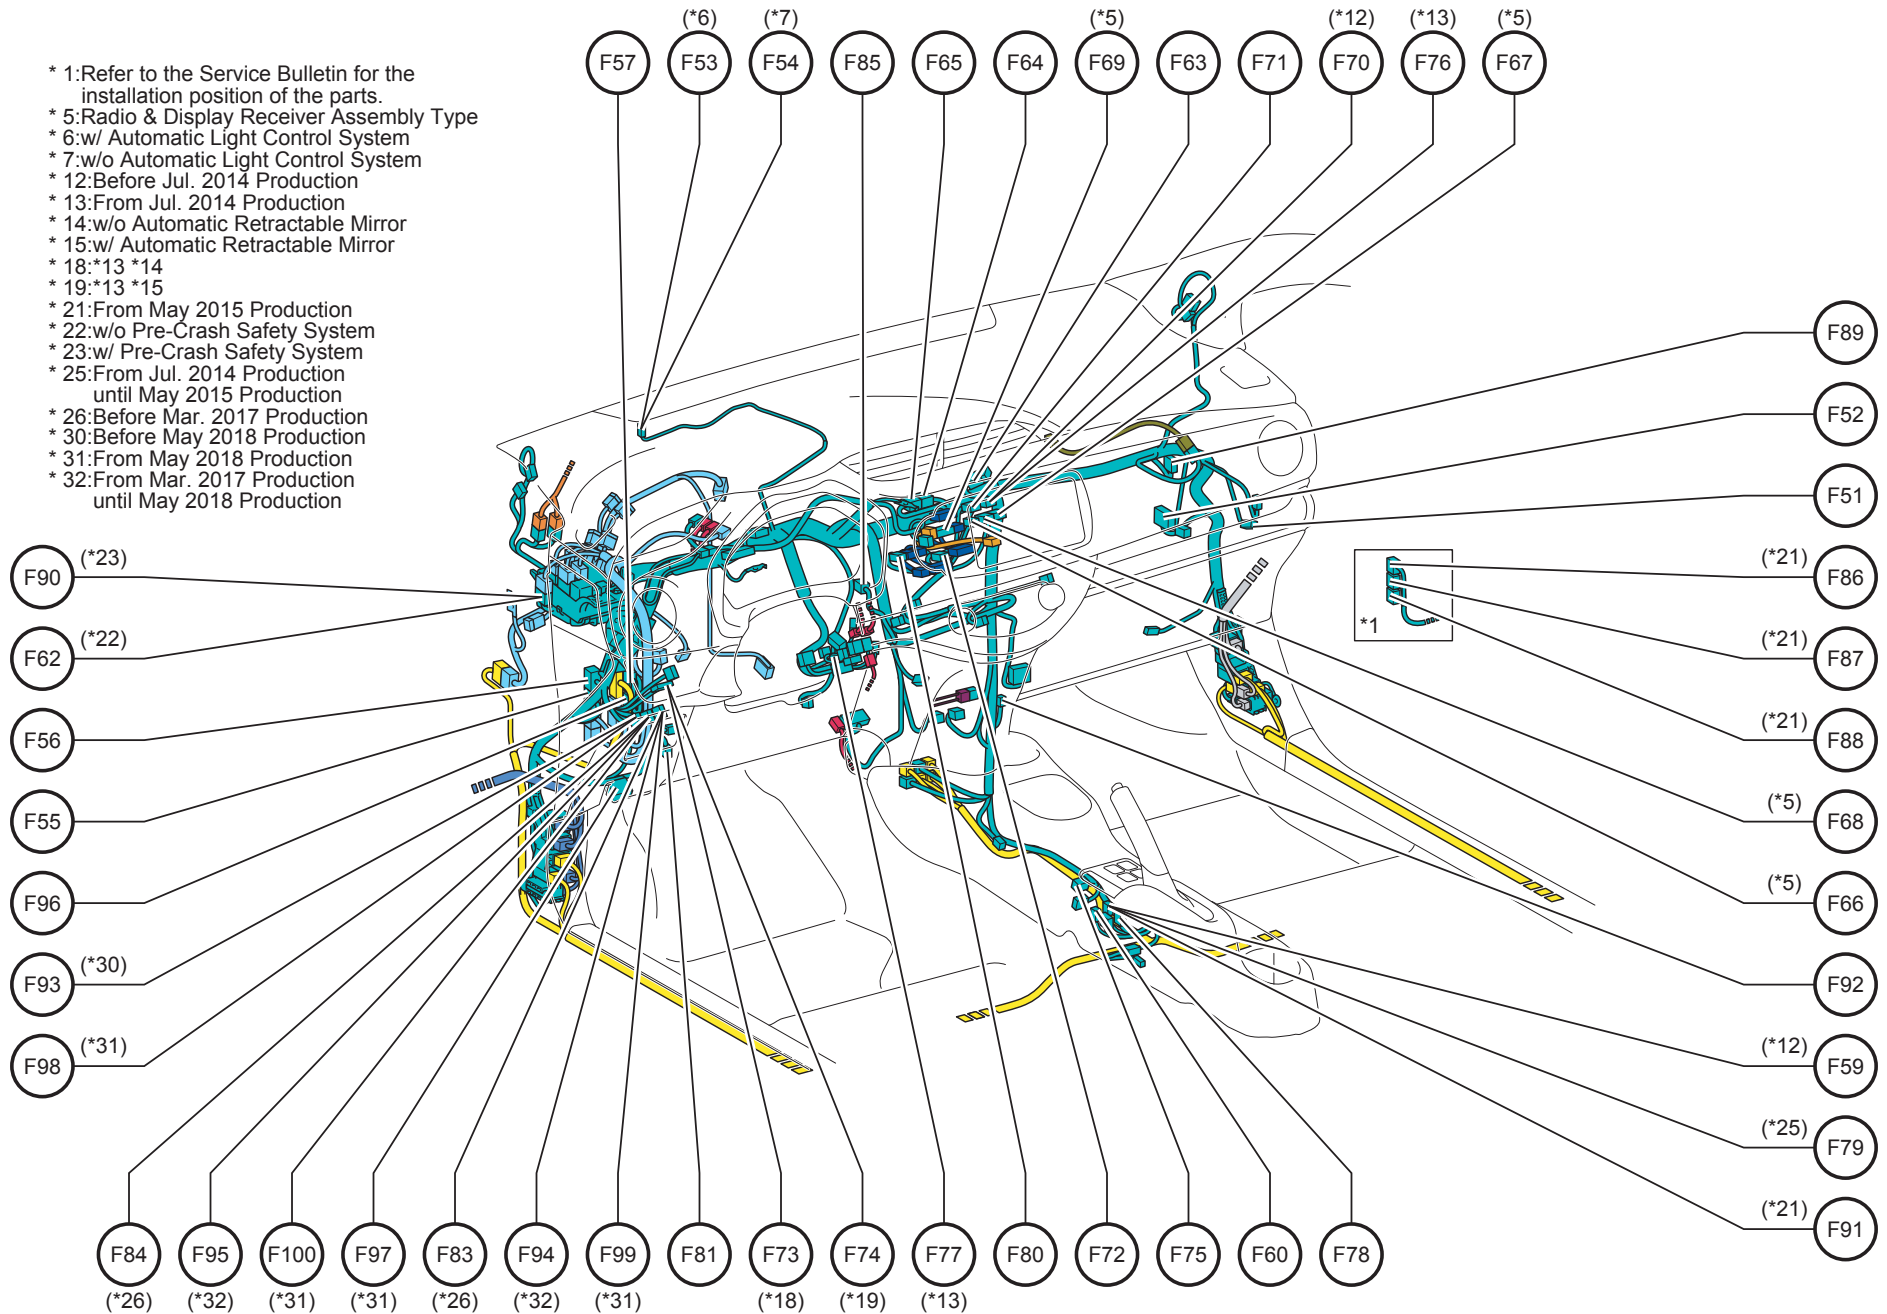


- F 51 Glove Box Light Assembly
- F 52 Windshield Wiper Relay Assembly
- F 53 Automatic Light Control Sensor
- F 54 Cooler (Solar Sensor) Thermistor
- F 55 Power Management Control ECU or Hybrid Vehicle Control ECU Assembly
- F 56 Power Management Control ECU or Hybrid Vehicle Control ECU Assembly
- F 57 Main Body ECU
- F 59 ECO Switch Assembly
- F 60 Pattern Select Switch Assembly
- F 62 Junction Connector
- F 63 Junction Connector
- F 64 Junction Connector
- F 65 Junction Connector
- F 66 Radio Receiver Assembly
- F 67 Radio & Display Receiver Assembly
- F 68 Radio & Display Receiver Assembly
- F 69 Radio & Display Receiver Assembly
- F 70 Radio & Display Receiver Assembly
- F 71 Radio & Display Receiver Assembly
- F 72 Navigation ECU
- F 73 Outer Mirror Switch Assembly
- F 74 Outer Mirror Switch Assembly
- F 75 Shift Position Indicator (Indicator Light Wire Sub-Assembly)
- F 76 Radio & Display Receiver Assembly
- F 77 Transponder Key Coil
- F 78 VSC Off Switch
- F 79 ECO Switch Assembly
- F 80 Radio & Display Receiver Assembly
- F 81 Tire Pressure Warning Reset Switch (No. 1 Tire Pressure Warning Switch)
- F 83 Pre-Crash System Cancel Switch Assembly
- F 84 Auto High Beam Switch
- F 85 Pre-Crash Safety City Buzzer
- F 86 Certification ECU
- F 87 Certification ECU
- F 88 Certification ECU
- F 89 Network Gateway ECU
- F 90 Junction Connector
- F 91 ECO Switch Assembly
- F 92 Diode (Shift Position Indicator)
- F 93 Lane-Keeping Assist Main Switch
- F 94 Pre-Crash System Cancel Switch Assembly
- F 95 Auto High Beam Switch
- F 96 Main Body ECU
- F 97 DLC3
- F 98 Lane-Keeping Assist Main Switch
- F 99 Pre-Crash System Cancel Switch Assembly
- F 100 Auto High Beam Switch

Position of Parts in Instrument Panel <LHD>

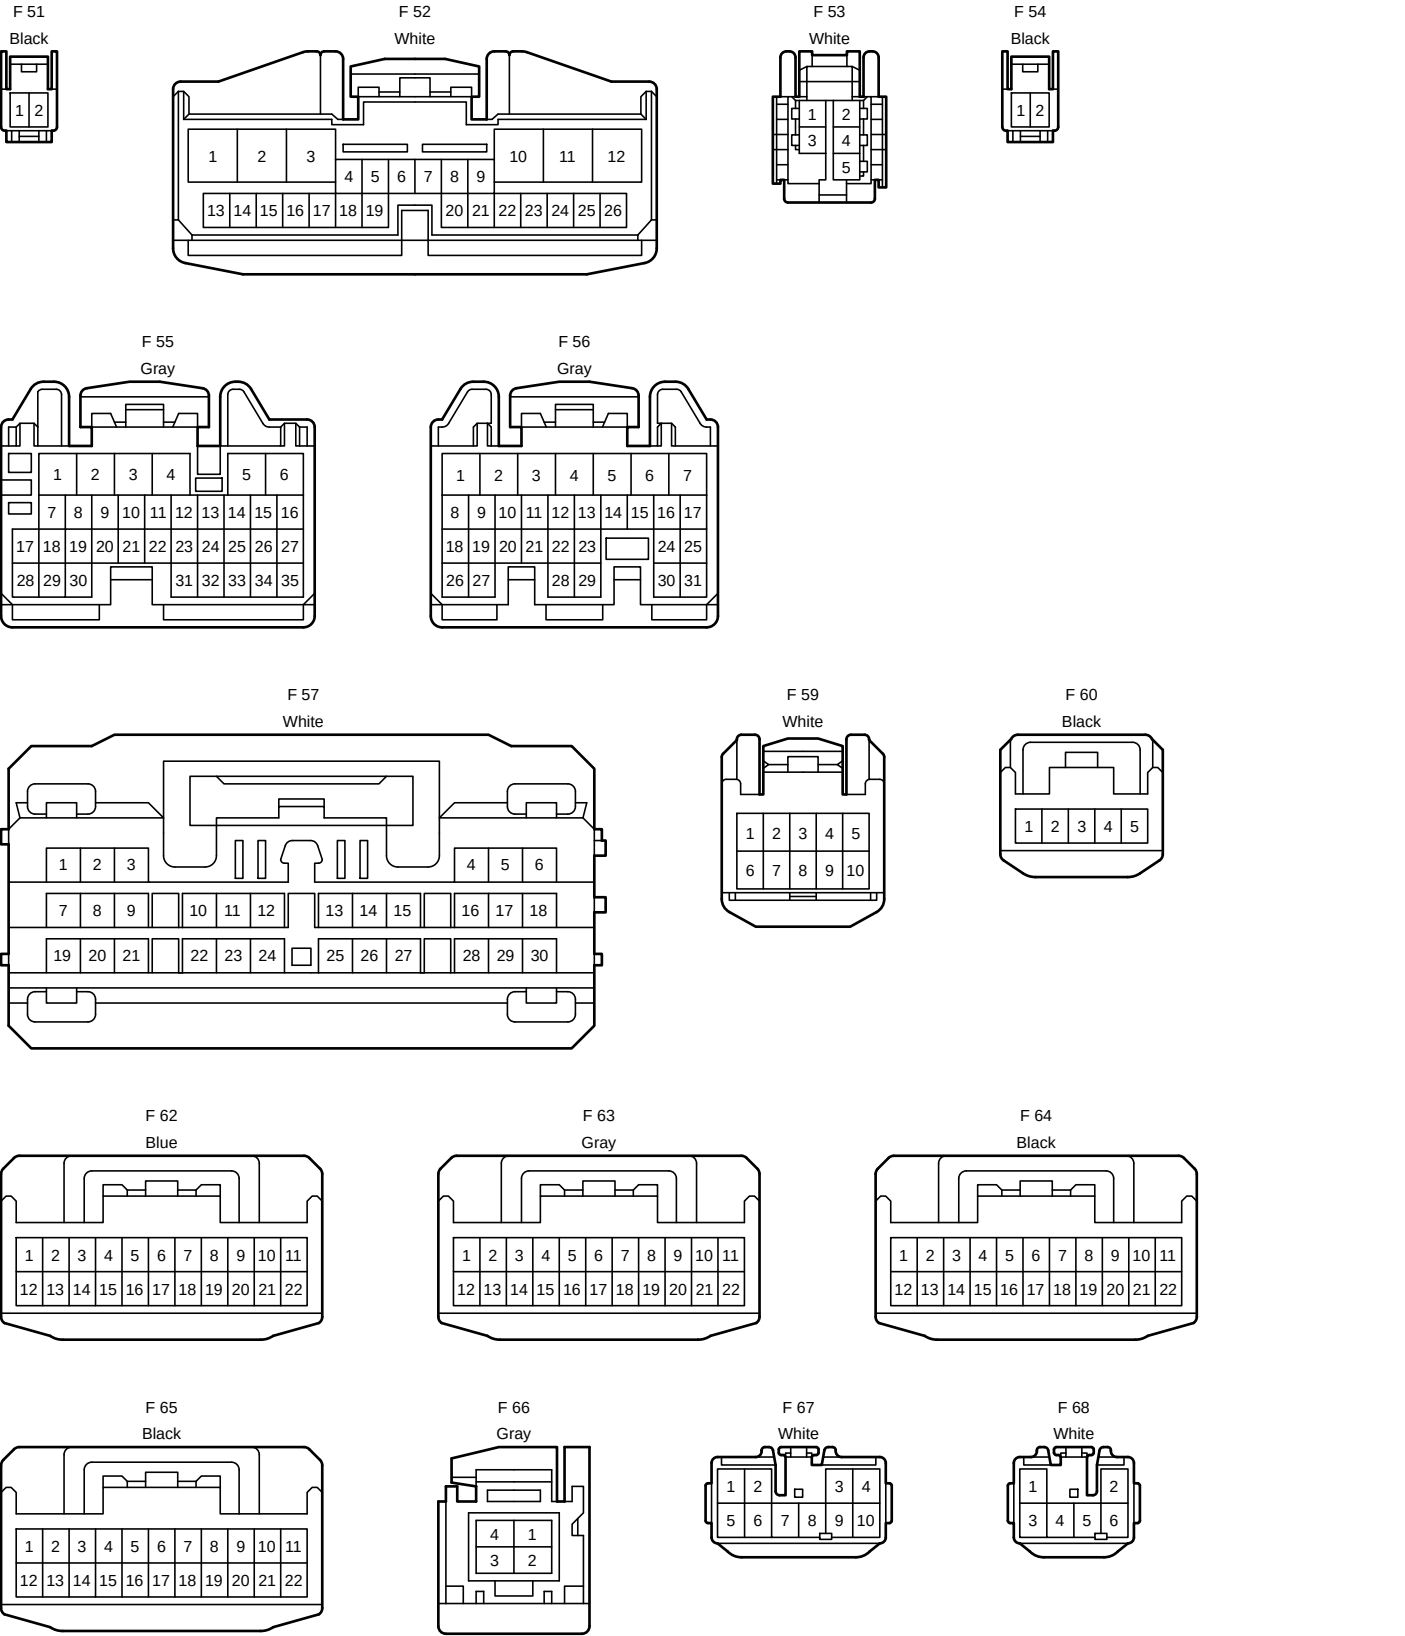


cardiagn.com


White

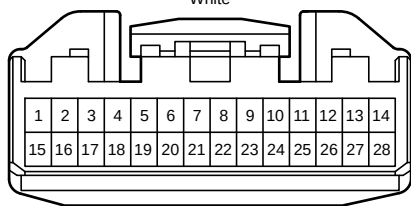


Black

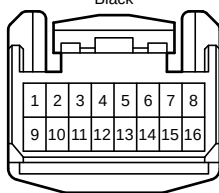


Gray

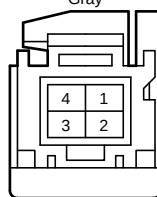


Gray

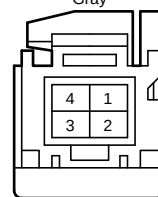

White

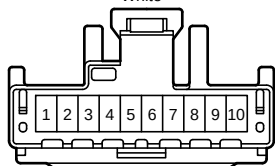


White

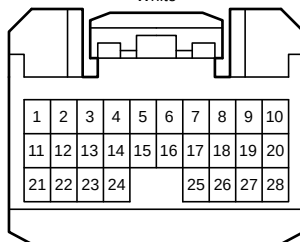


White




White

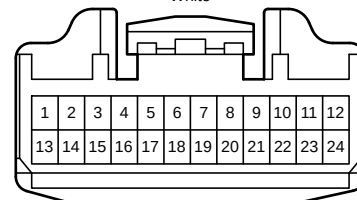


Black

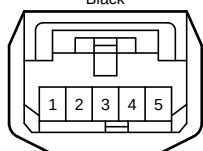


Grav

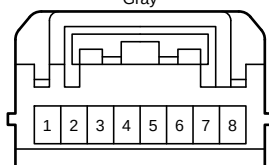


Black

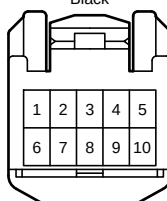


Grav

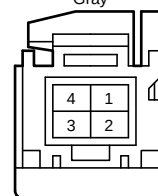


Black




Black

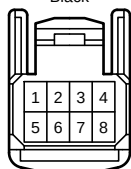


Gray

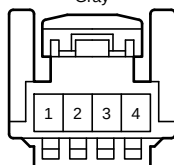


Blue




White

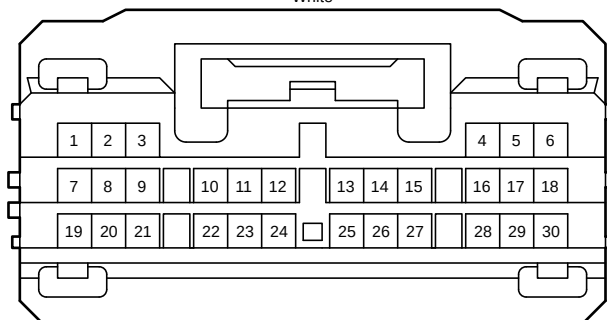

White

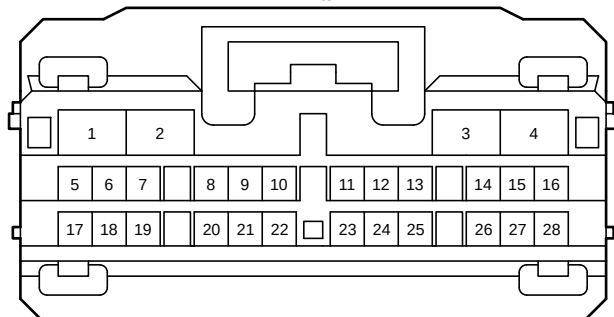


White

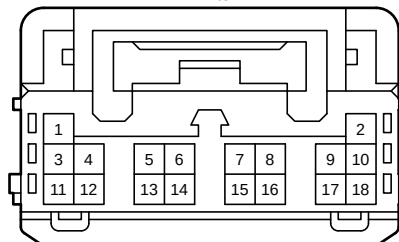


Position of Parts in Instrument Panel <LHD>


F 89
Black

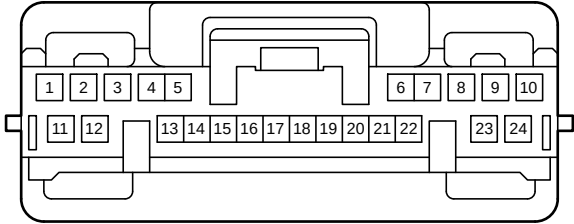

F 90
White

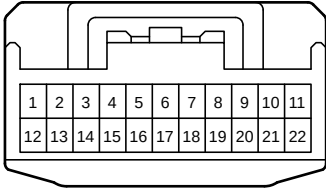


F 91
White

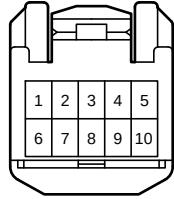


F 92
White




F 93
White

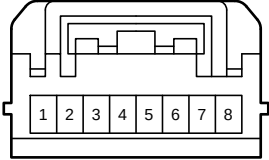


F 94
Gray

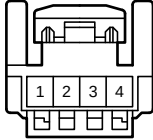


F 95
Black

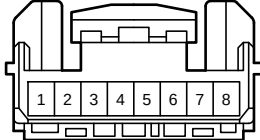


F 96
White

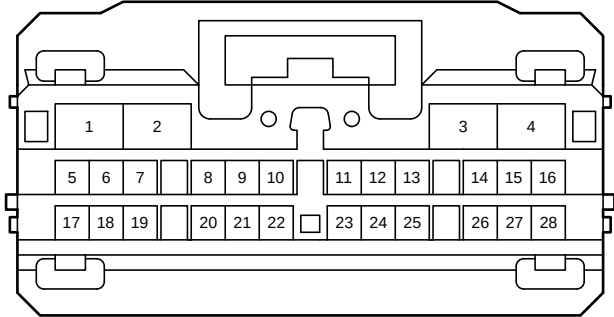


F 97
White

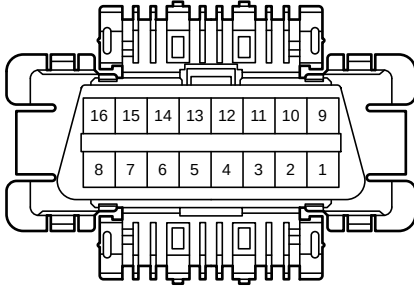


F 98
Blue

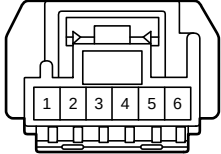


F 99
Black

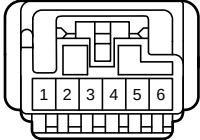

F100
White

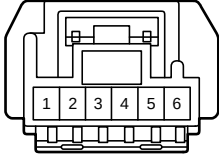

Position of Parts in Instrument Panel <LHD>

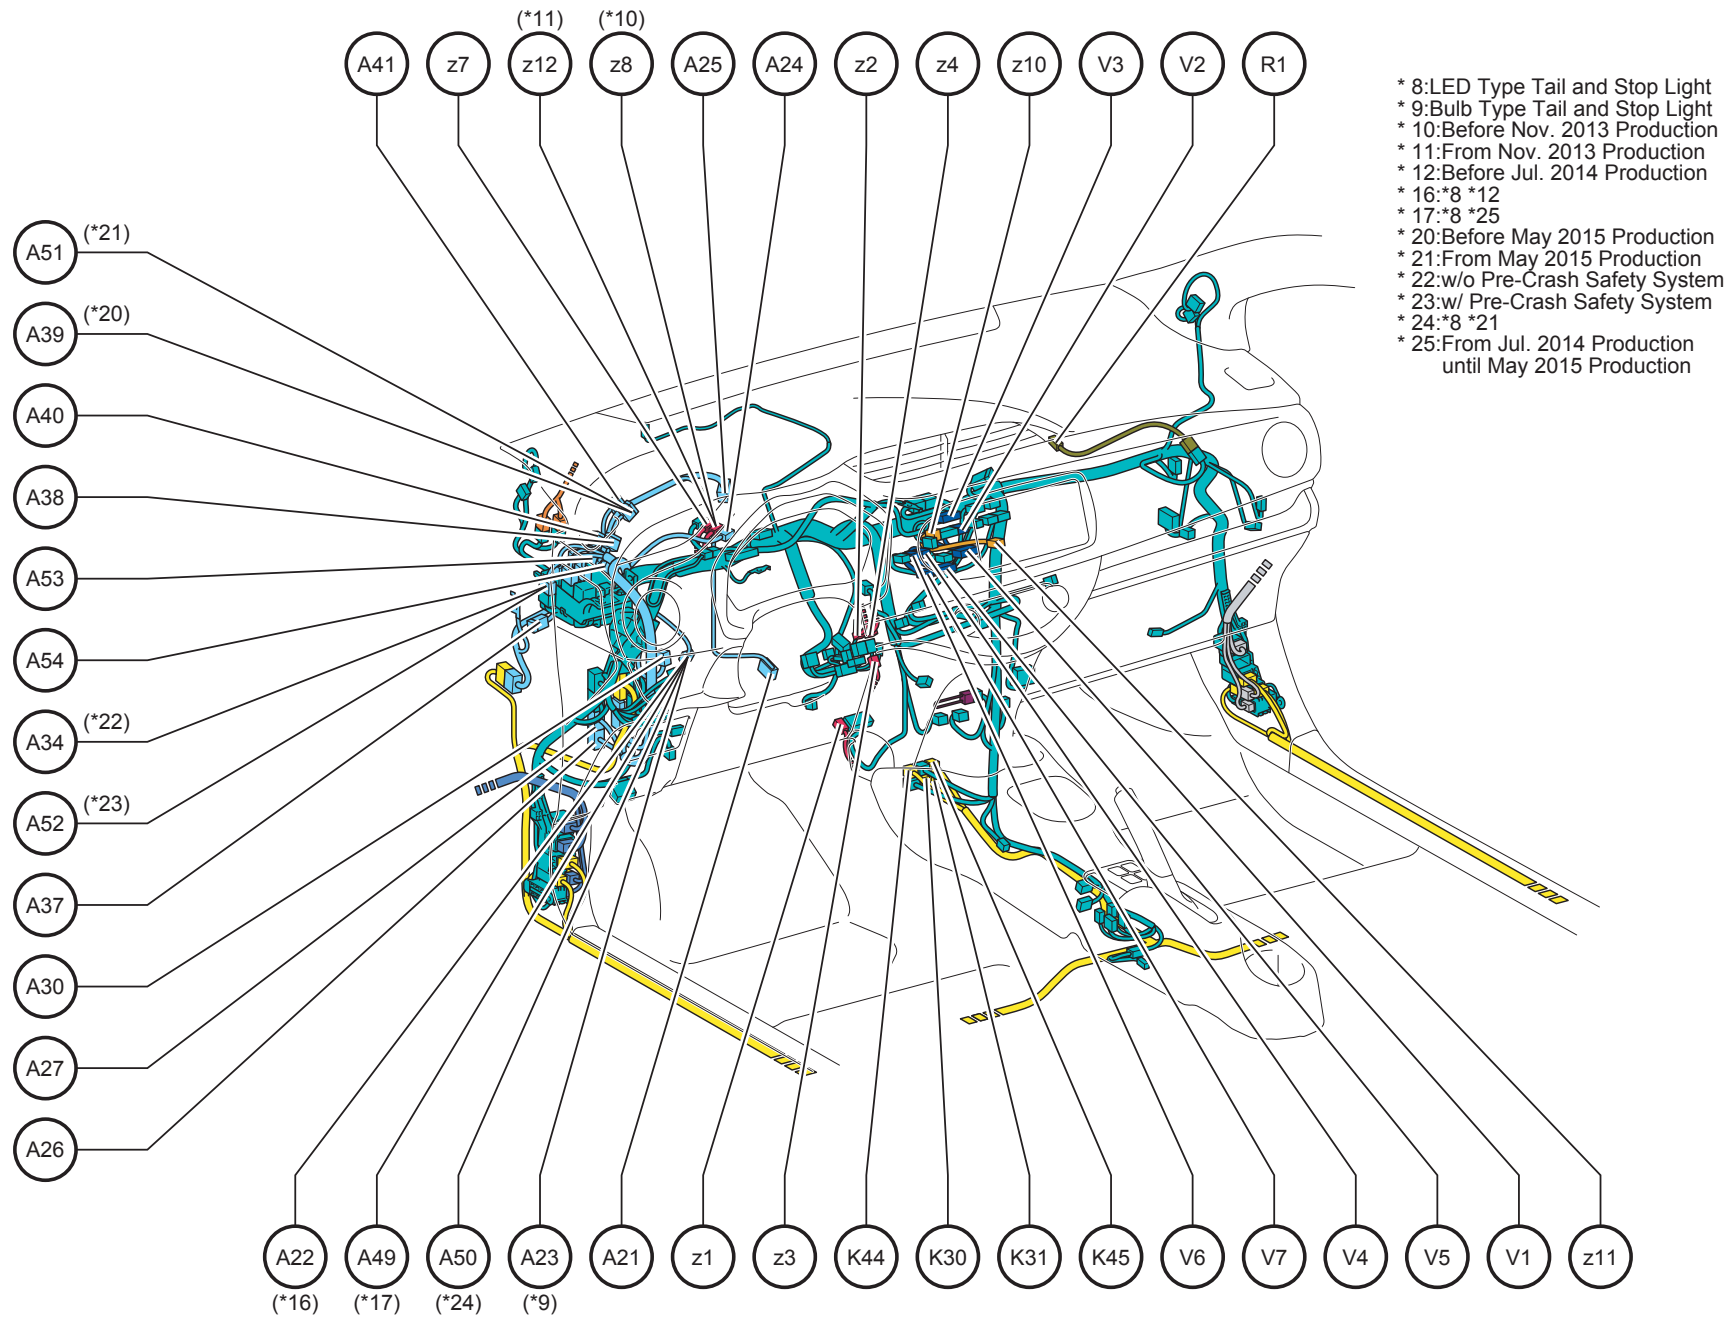

- A 21 Accelerator Pedal Sensor Assembly
- A 22 Stop Light Switch Assembly
- A 23 Stop Light Switch Assembly
- A 24 Power Steering ECU Assembly
- A 25 Quick Heater Assembly
- A 26 Power Management Control ECU or Hybrid Vehicle Control ECU Assembly
- A 27 Power Management Control ECU or Hybrid Vehicle Control ECU Assembly
- A 30 Brake Pedal Stroke Sensor Assembly
- A 34 Junction Connector
- A 37 Junction Connector
- A 38 Junction Connector
- A 39 Junction Connector
- A 40 Junction Connector
- A 41 Junction Connector
- A 49 Stop Light Switch Assembly
- A 50 Stop Light Switch Assembly
- A 51 Junction Connector
- A 52 Junction Connector
- A 53 Diode (No. 1 Pre-Crash Safety City Heater)
- A 54 Diode (No. 2 Pre-Crash Safety City Heater)

- K 30 Airbag Sensor Assembly
- K 31 Airbag Sensor Assembly
- K 44 Airbag Sensor Assembly
- K 45 Airbag Sensor Assembly

- R 1 Instrument Panel Passenger Airbag without Door Assembly


- V 1 Navigation ECU
- V 2 Radio & Display Receiver Assembly
- V 3 Radio & Display Receiver Assembly
- V 4 Radio & Display Receiver Assembly
- V 5 Navigation ECU
- V 6 Radio & Display Receiver Assembly
- V 7 Radio & Display Receiver Assembly

- z 1 A/C Amplifier Assembly , A/C Unit (A/C Harness Assembly)
- z 2 Spiral Cable Sub-Assembly , Steering Pad Switch Assembly
- z 3 Driver Side Squib Circuit (Horn Button Assembly) , Spiral Cable Sub-Assembly
- z 4 Cruise Control Main Switch , Spiral Cable Sub-Assembly
- z 7 Electric Power Steering Column Sub-Assembly , Power Steering ECU Assembly
- z 8 Power Steering ECU Assembly , Power Steering Motor Assembly
- z 10 Radio & Display Receiver Assembly
- z 11 Navigation ECU
- z 12 Power Steering ECU Assembly , Power Steering Motor Assembly

Position of Parts in Instrument Panel <LHD>


A 21

Black

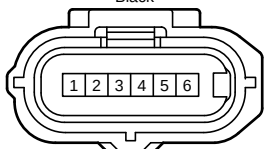


A 22

Black

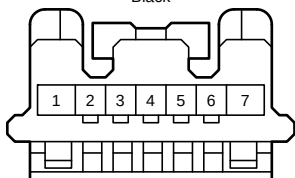


A 23

White

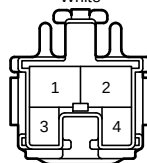

A 24


Black

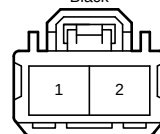

(Before Mar. 2017 Production)

A 24


White

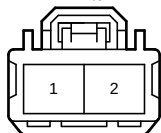

(From Mar. 2017 Production)


A 25

White

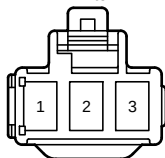


A 26

Gray

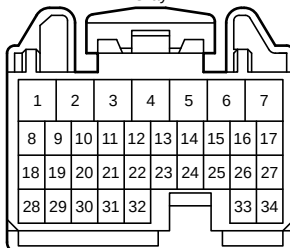


A 27

Gray

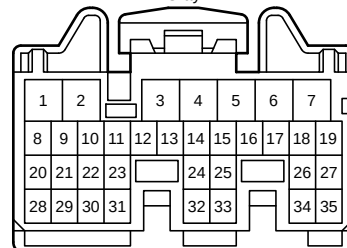


A 30

Black

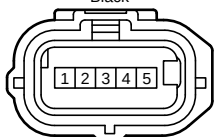


A 34

Blue

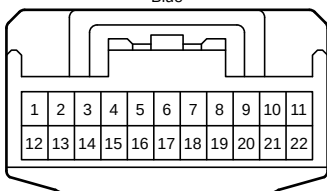


A 37

White

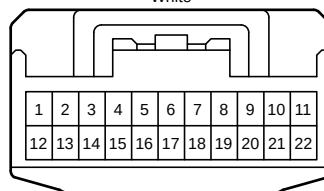


A 38

Black




A 39

Black




A 40

Black




A 41

Black




A 49

Blue

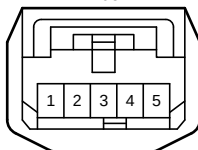


A 50

Black

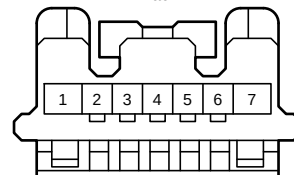


A 51

Black



A 52

Blue

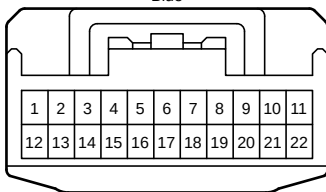

A 53

White




A 54

Black




K 30

Yellow

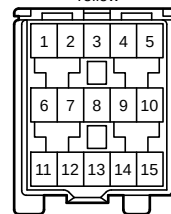


K 31

Yellow

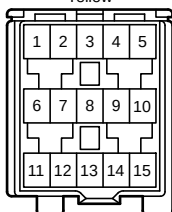


K 44

Yellow

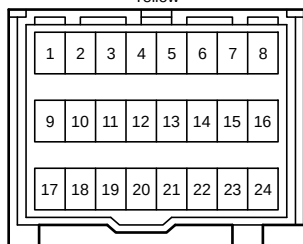


K 45

Yellow
















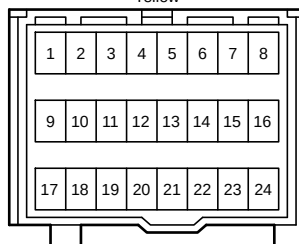



R 1

Orange

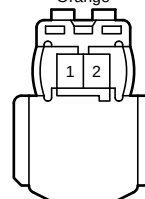



Position of Parts in Instrument Panel <LHD>

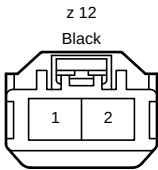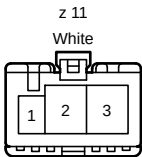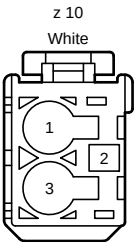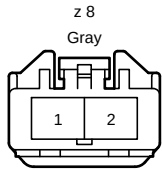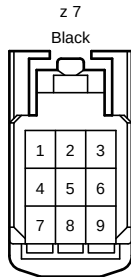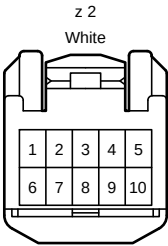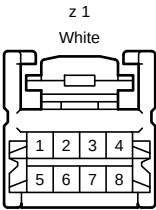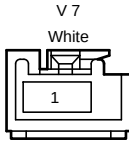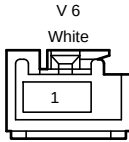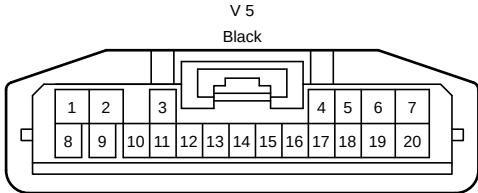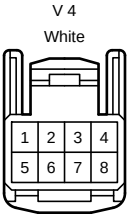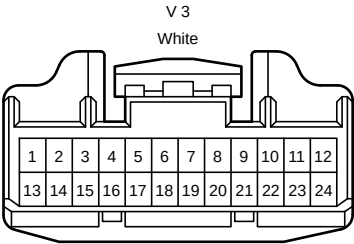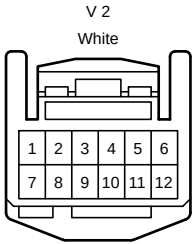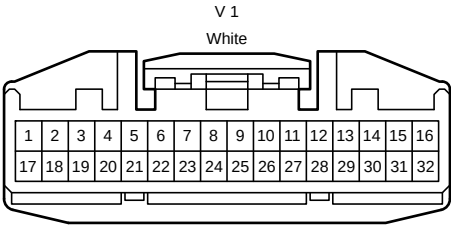




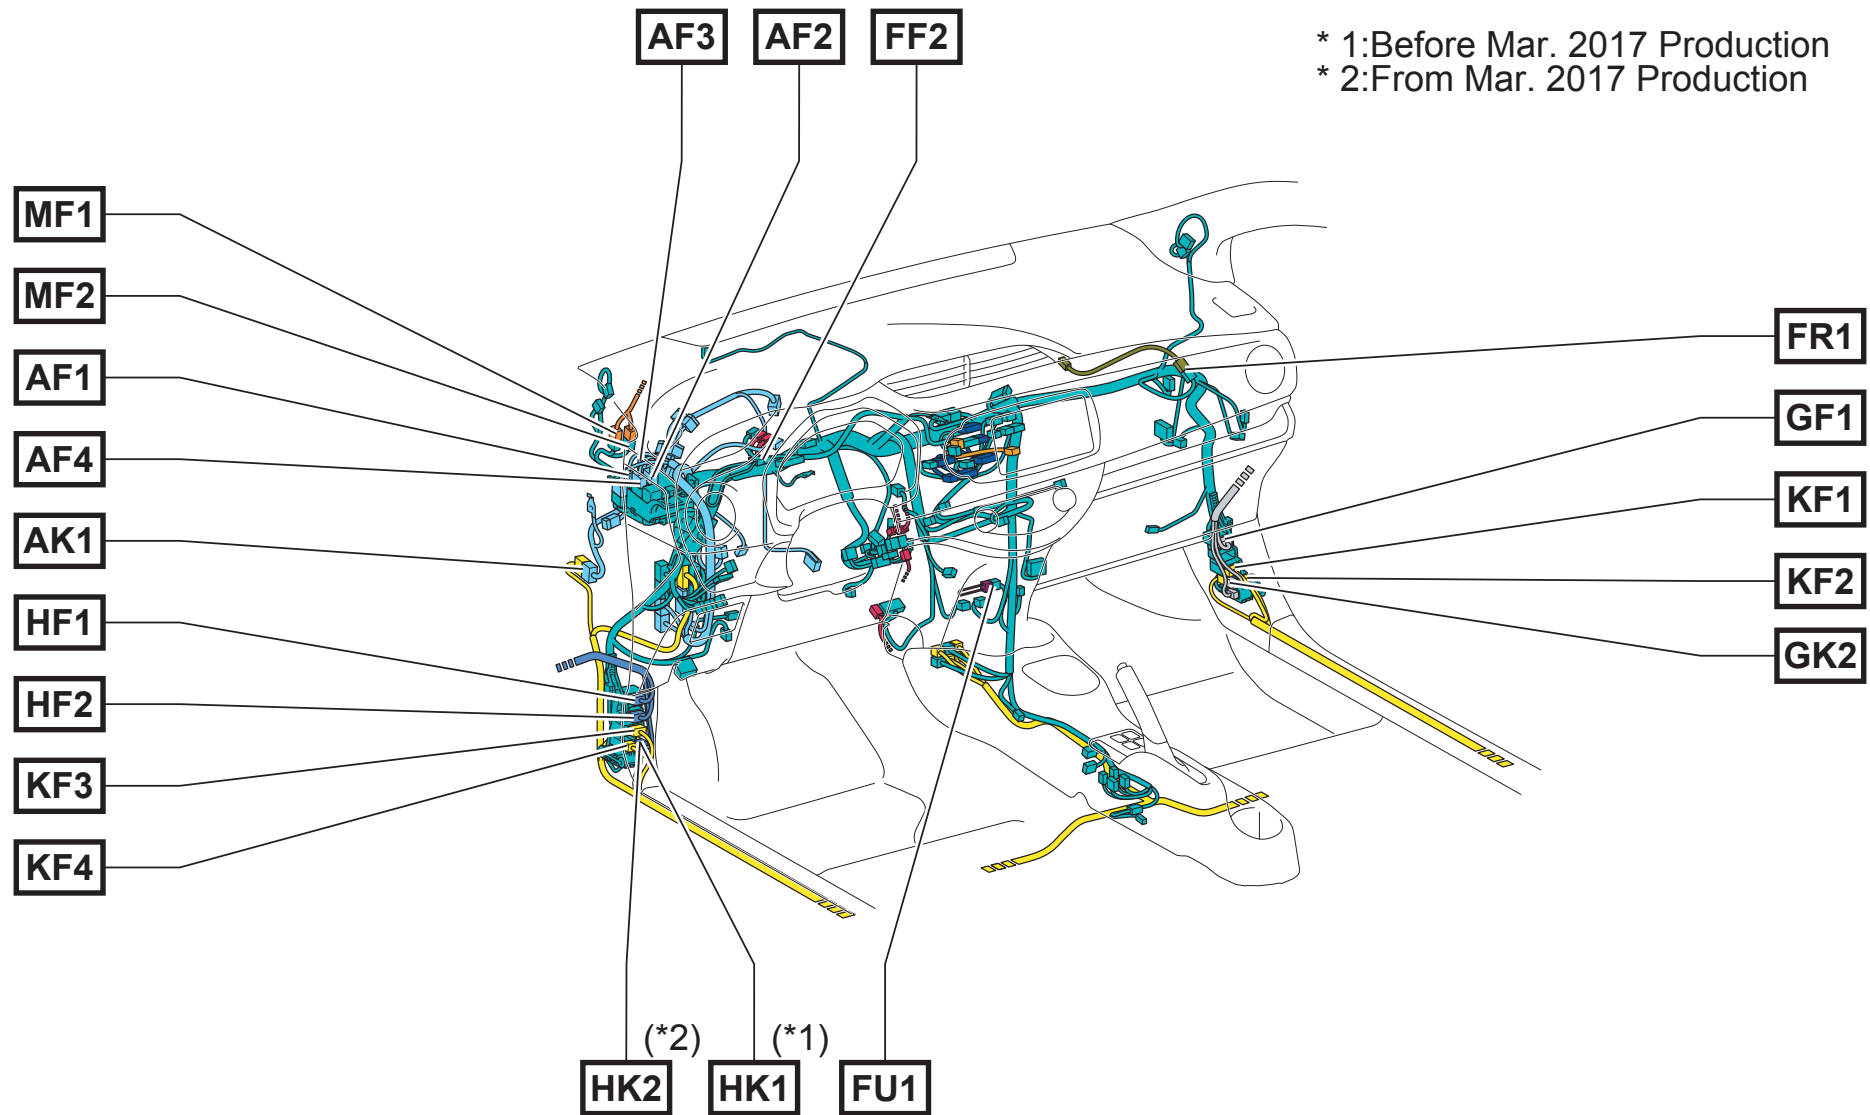



Wire and Wire in Instrument Panel <LHD>

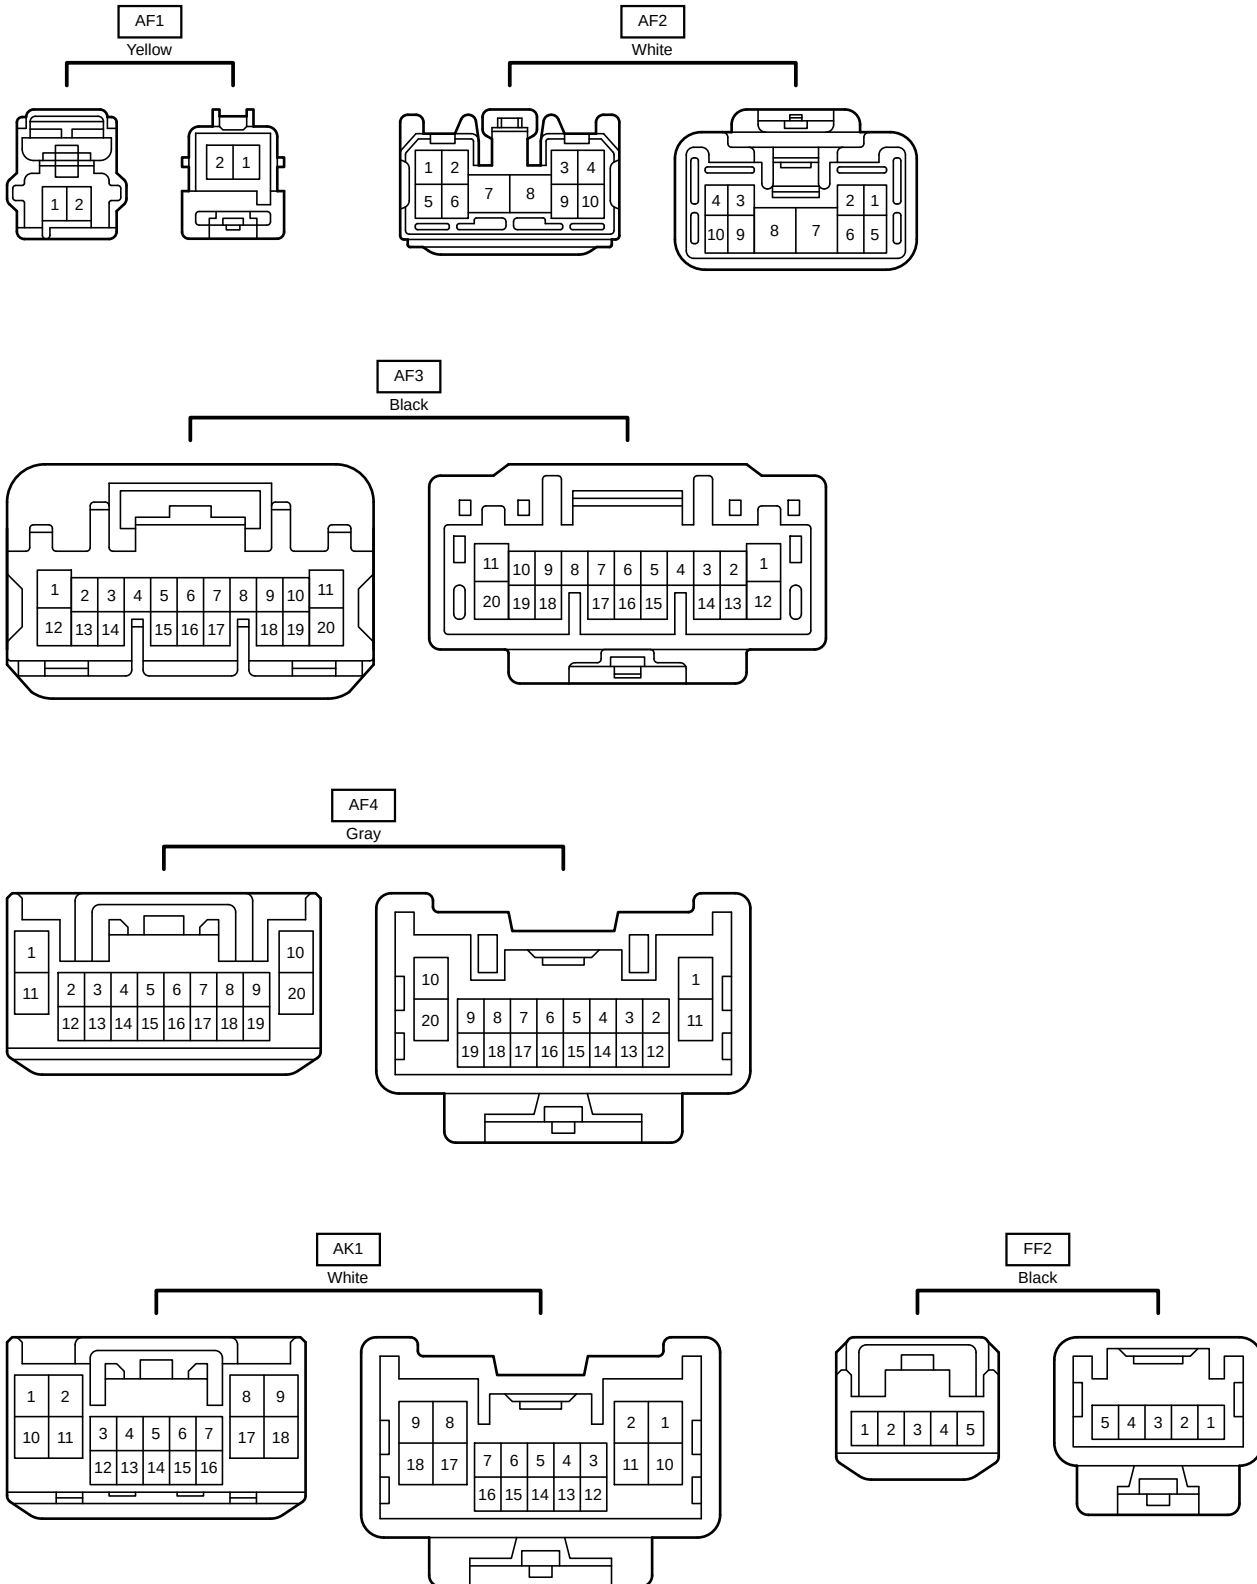


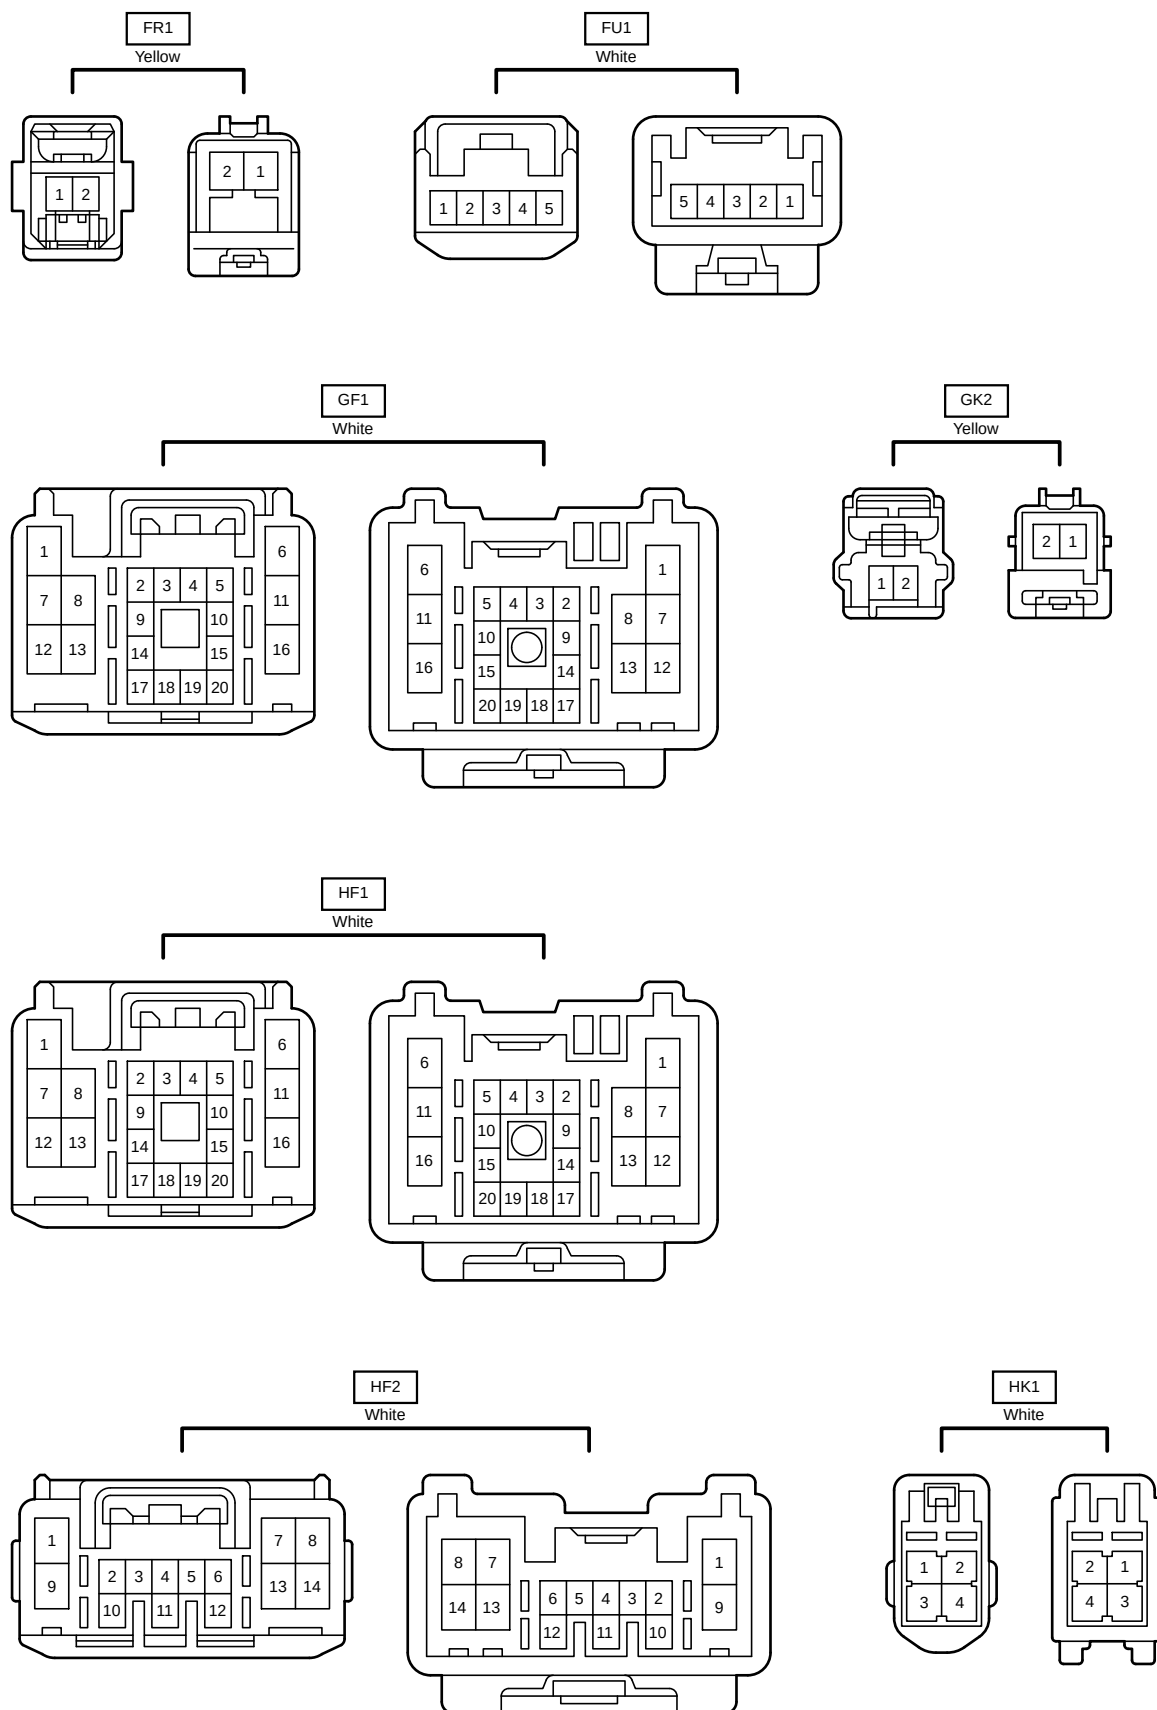


Wire and Wire in Instrument Panel <LHD>

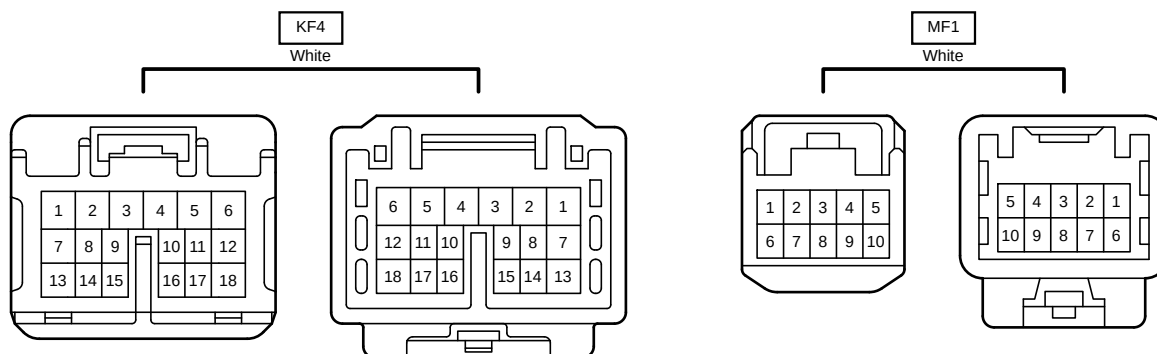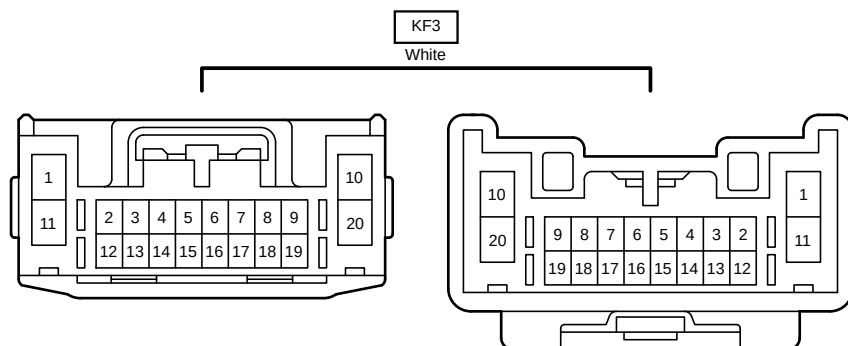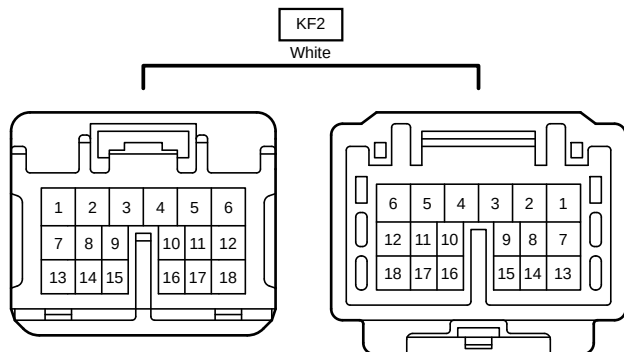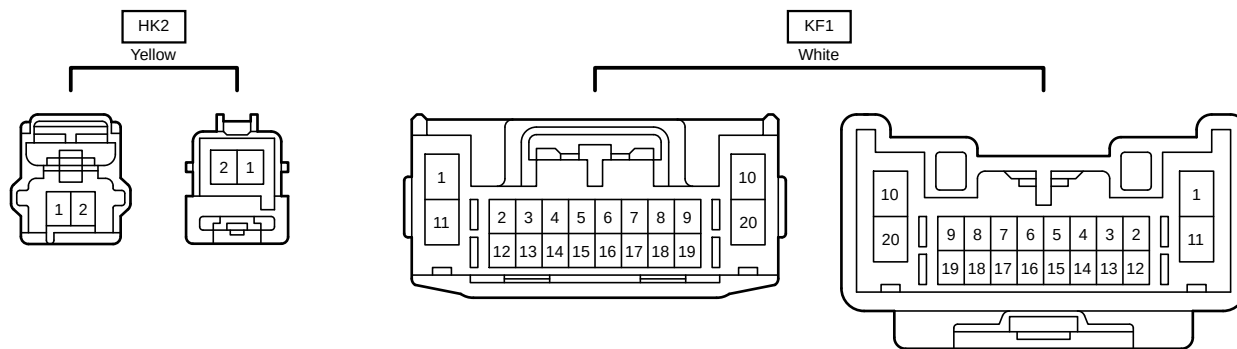

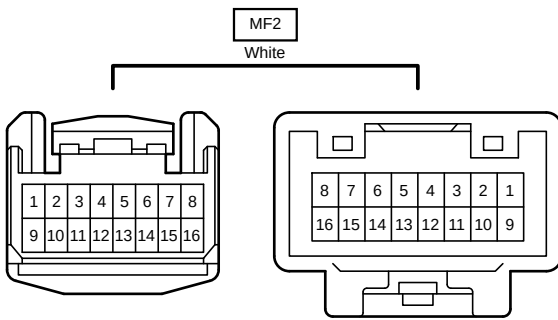



















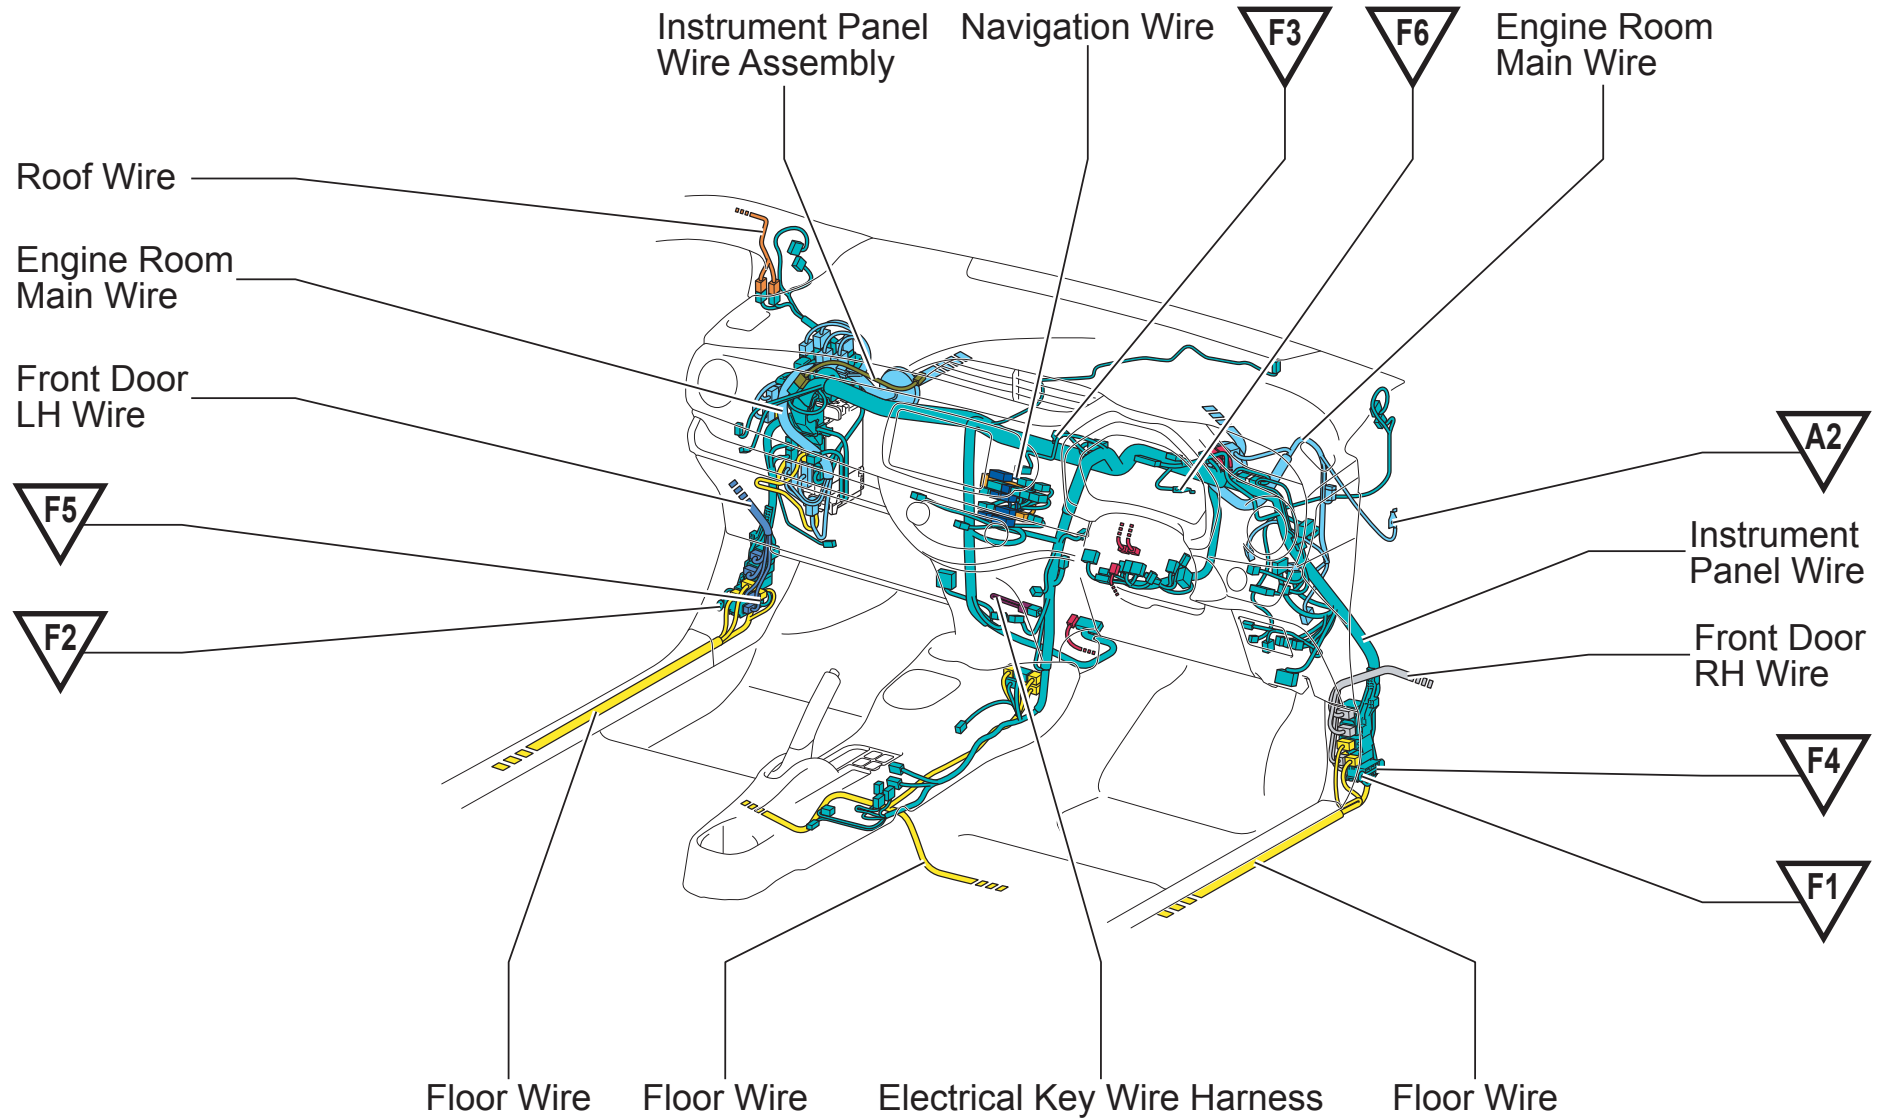


Position of Parts in Instrument Panel <RHD>

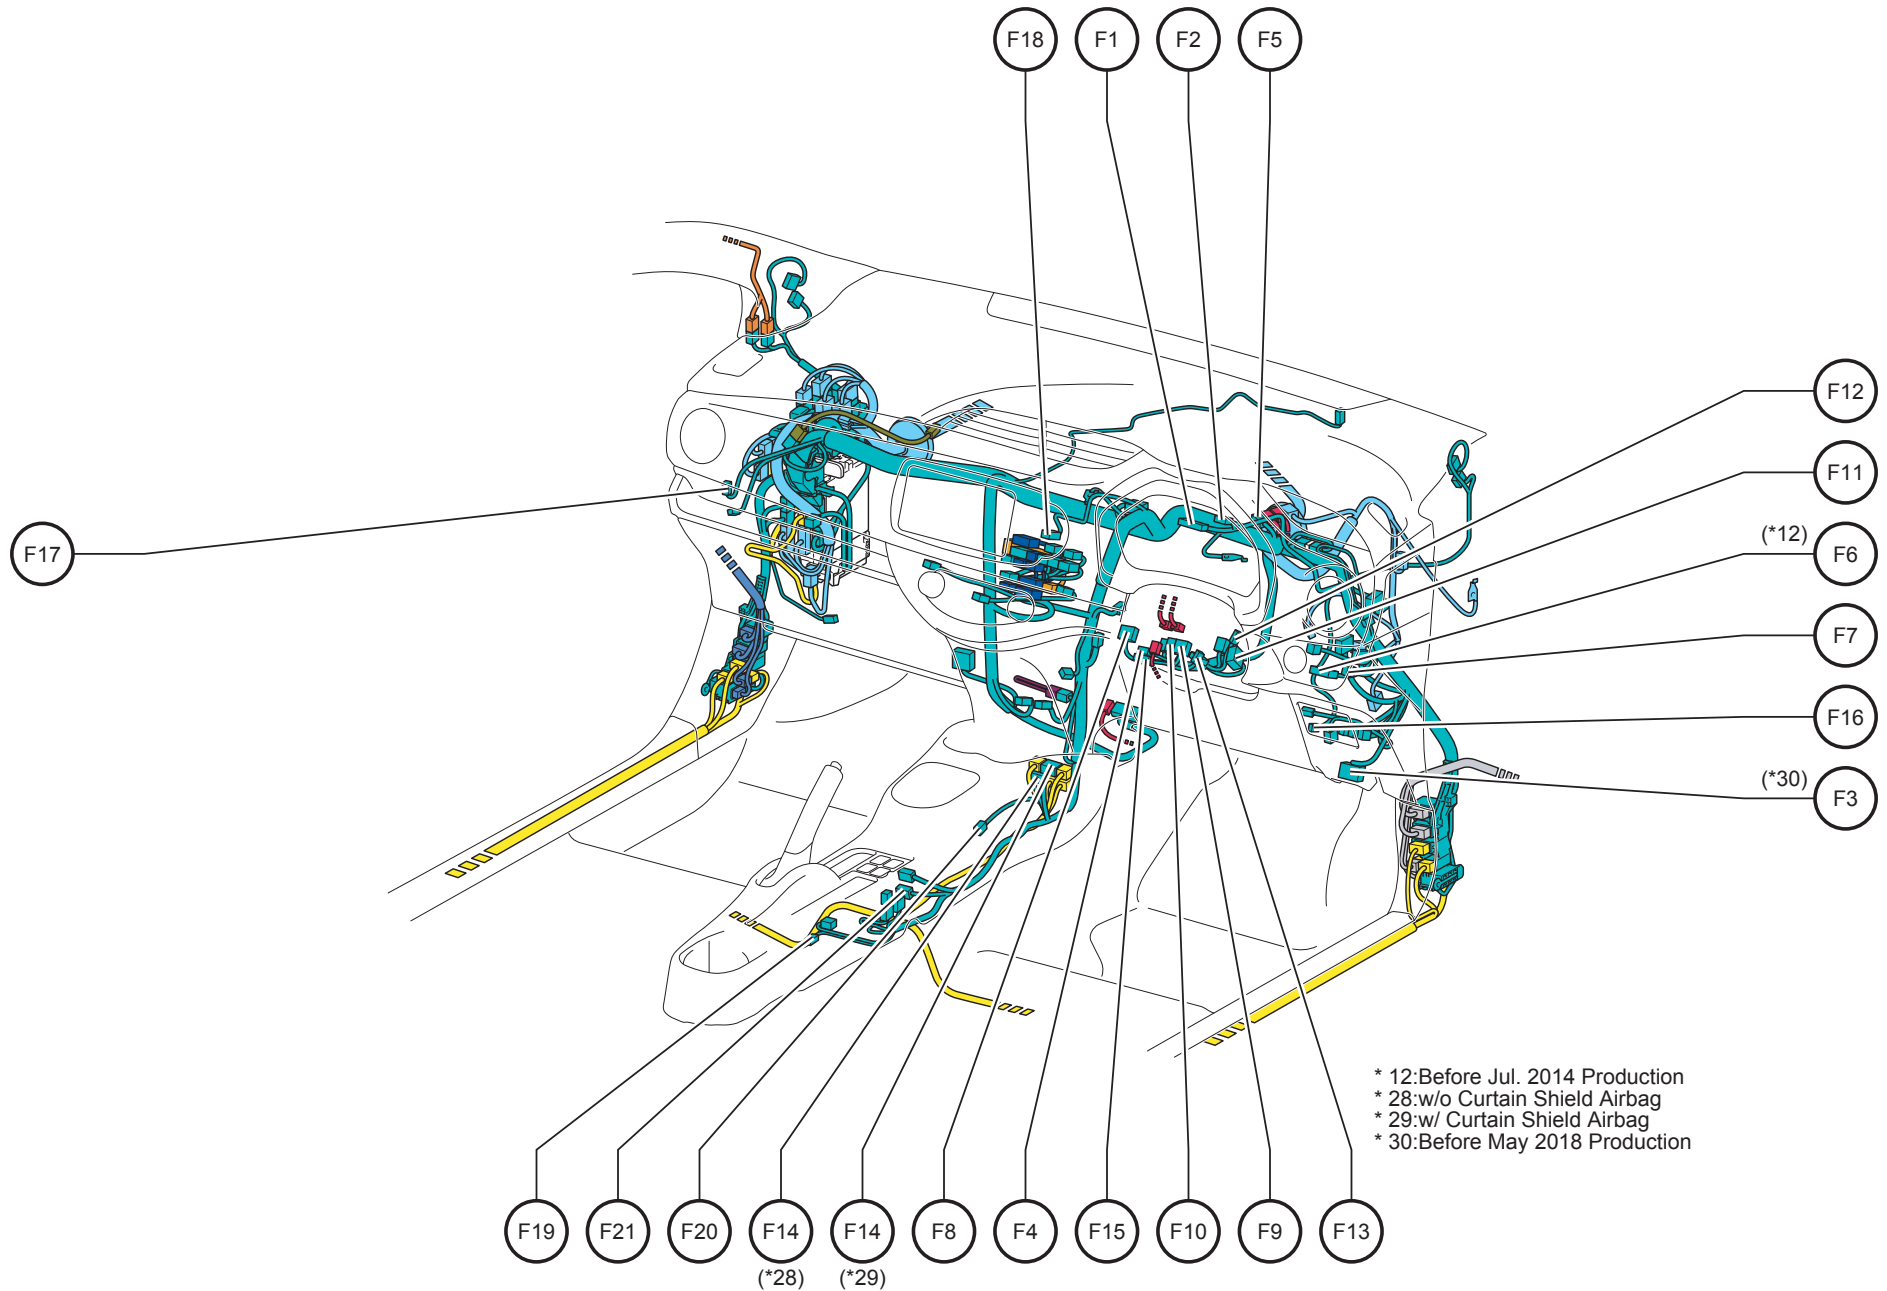


- F 1 Combination Meter Assembly
- F 2 Combination Meter Assembly
- F 3 DLC3
- F 4 Spiral Cable Sub-Assembly
- F 5 Power Steering ECU Assembly
- F 6 Outer Mirror Switch Assembly
- F 7 Headlight Leveling Switch
- F 8 Headlight Dimmer Switch Assembly
- F 9 Windshield Wiper Switch Assembly
- F 10 Windshield Wiper Switch Assembly
- F 11 Ignition or Starter Switch Assembly
- F 12 Key Inter Lock Solenoid
- F 13 Un-Lock Warning Switch Assembly
- F 14 Airbag Sensor Assembly
- F 15 Spiral Cable Sub-Assembly
- F 16 Lower No. 1 Instrument Panel Airbag Assembly
- F 17 Airbag Cut Off Switch Cylinder Sub-Assembly
- F 18 Telltale Light Assembly
- F 19 Parking Brake Switch Assembly
- F 20 Shift Lock Control Unit Assembly
- F 21 Shift Position Indicator (Indicator Light Wire Sub-Assembly)

Position of Parts in Instrument Panel <RHD>

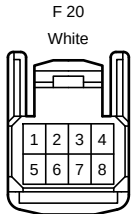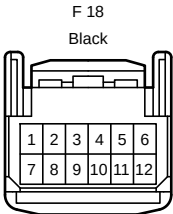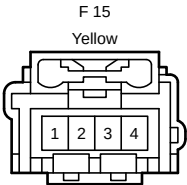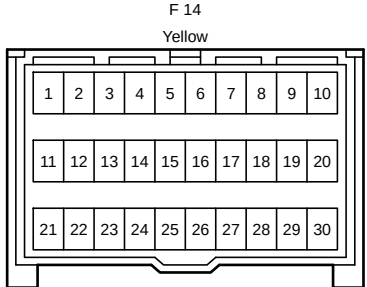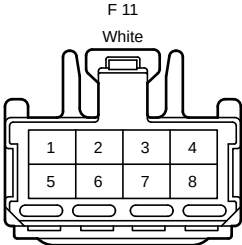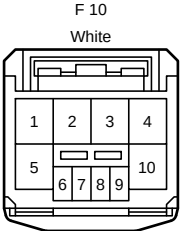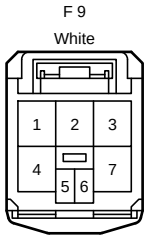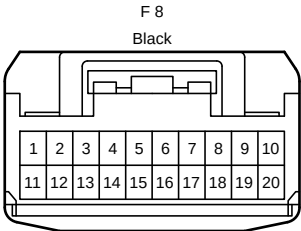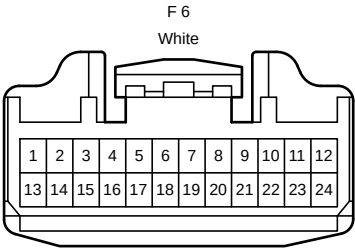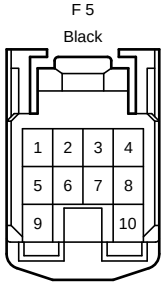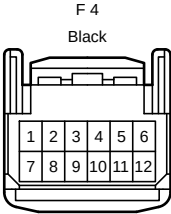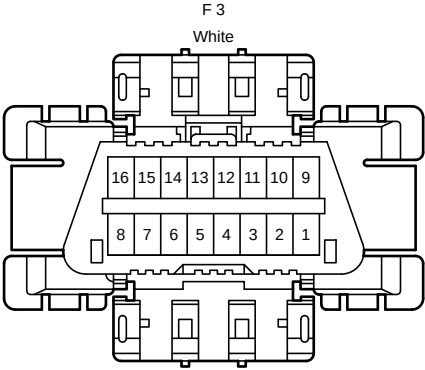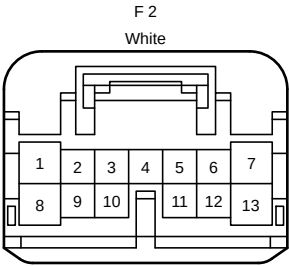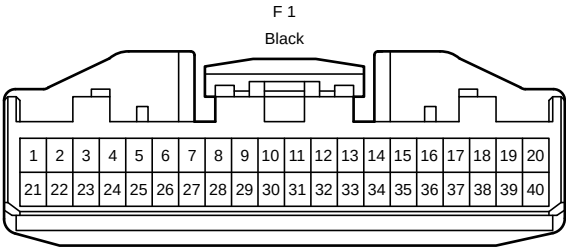

F 21
White

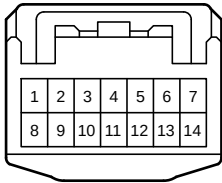

Position of Parts in Instrument Panel <RHD>

* 1:Refer to the Service Bulletin for the installation position of the parts.

* 2:w/ Power Switch


* 3:w/o Power Switch

* 4:Radio Receiver Assembly Type

* 12:Before Jul. 2014 Production

* 13:From Jul. 2014 Production

* 20:Before May 2015 Production

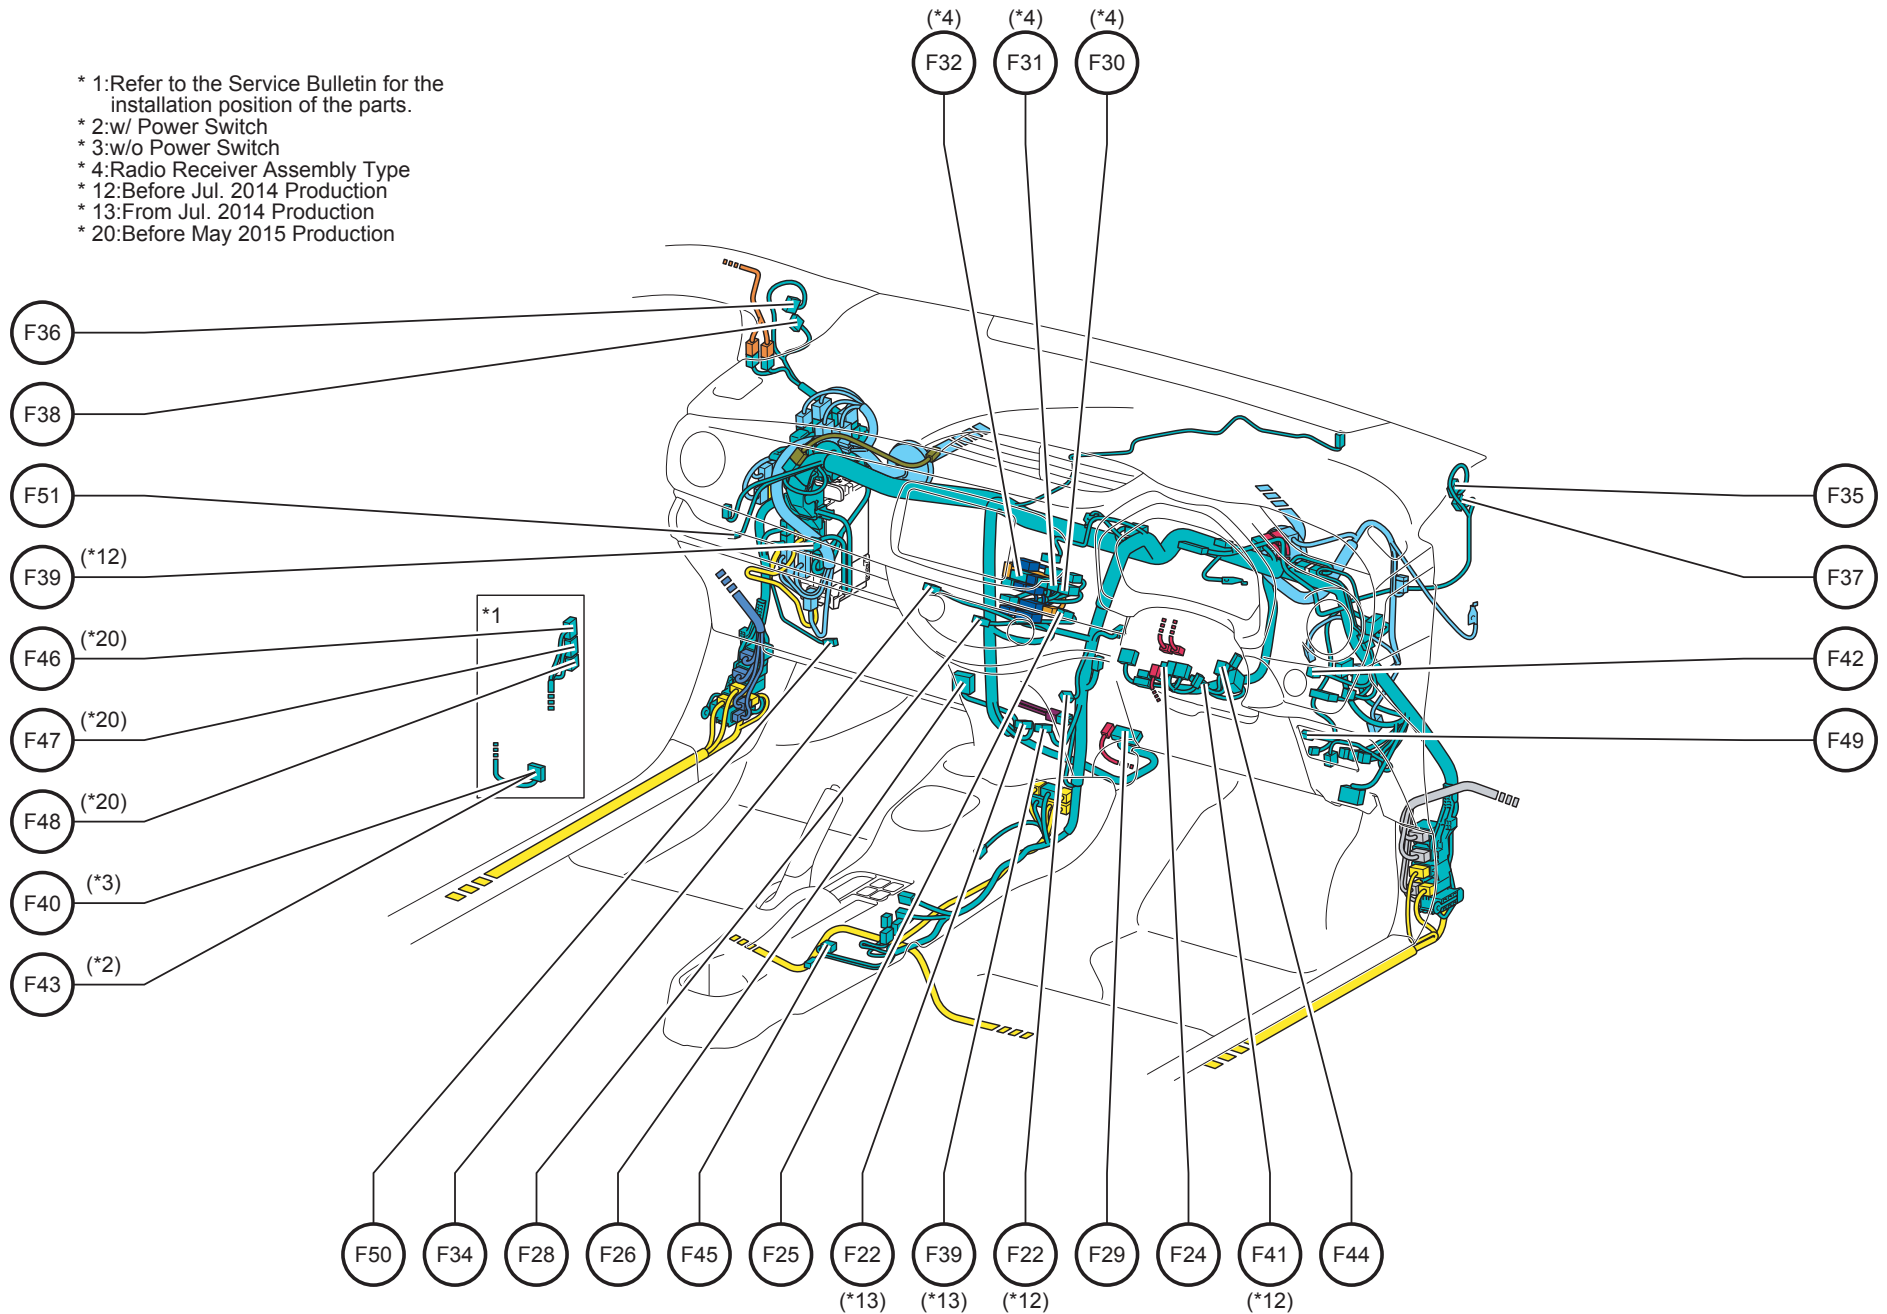


- F 22 Cigarette Lighter Assembly or No. 3 Power Outlet Socket Assembly
- F 24 Steering Sensor
- F 25 Cooler (Room Temperature Sensor) Thermistor
- F 26 Blower Motor with Fan Sub-Assembly
- F 28 A/C Control Assembly
- F 29 A/C Amplifier Assembly
- F 30 Radio Receiver Assembly
- F 31 Radio Receiver Assembly
- F 32 Radio Receiver Assembly
- F 34 Amplifier Microphone Assembly
- F 35 Front No. 2 Speaker Assembly RH
- F 36 Front No. 2 Speaker Assembly LH
- F 37 Front No. 2 Speaker Assembly RH
- F 38 Front No. 2 Speaker Assembly LH
- F 39 No. 1 Stereo Jack Adapter Assembly
- F 40 Transponder Key ECU Assembly
- F 41 Transponder Key Amplifier
- F 42 Power Switch
- F 43 ID Code Box
- F 44 Steering Lock Actuator Assembly
- F 45 No. 1 Indoor Electrical Key Antenna Assembly
- F 46 Certification ECU
- F 47 Certification ECU
- F 48 Certification ECU
- F 49 No. 1 Interior Illumination Light Assembly RH
- F 50 No. 1 Interior Illumination Light Assembly LH
- F 51 Glove Box Light Assembly

Position of Parts in Instrument Panel <RHD>

F 22
Black




F 24
White

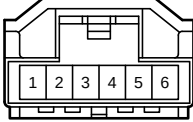


F 25
Black




F 26
Black

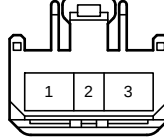


F 28
Black

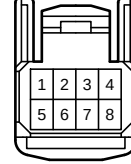


F 29
White

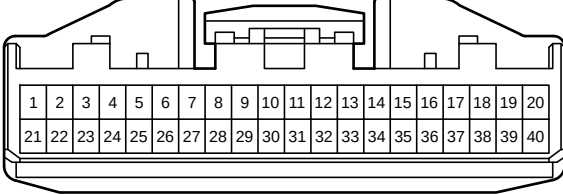


F 30
White




F 31
White




F 32
White

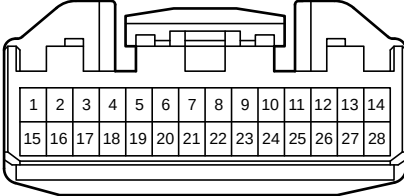


F 34
White

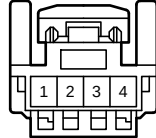


F 35
White




F 36
White




F 37
White




F 38
White




F 39
Black

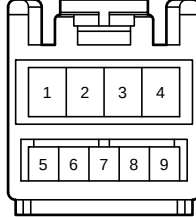


F 40
Black

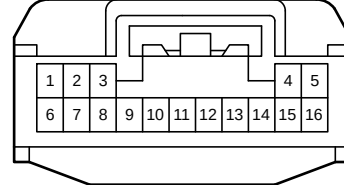


F 41
Black

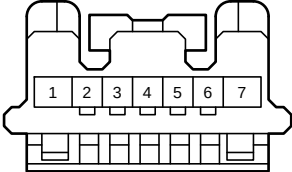


F 42
White

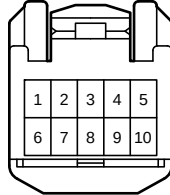


F 43
White

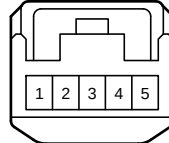


F 44
Black

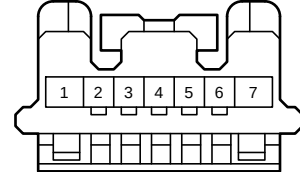


F 45
Gray

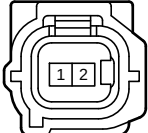


F 46
White

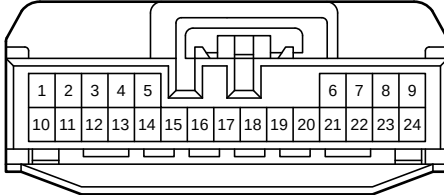

F 47
White

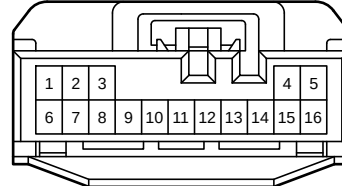


Position of Parts in Instrument Panel <RHD>

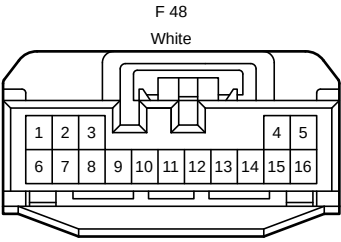




















Position of Parts in Instrument Panel <RHD>

- * 1:Refer to the Service Bulletin for the installation position of the parts.
- * 5:Radio & Display Receiver Assembly Type
- * 6:w/ Automatic Light Control System
- * 7:w/o Automatic Light Control System
- * 12:Before Jul. 2014 Production
- * 13:From Jul. 2014 Production
- * 14:w/o Automatic Retractable Mirror
- * 15:w/ Automatic Retractable Mirror
- * 18:*13 *14
- * 19:*13 *15
- * 21:From May 2015 Production
- * 22:From Jul. 2014 Production until May 2015 Production
- * 23:w/o Pre-Crash Safety System
- * 24:w/ Pre-Crash Safety System
- * 26:Before Mar. 2017 Production
- * 30:Before May 2018 Production
- * 31:From May 2018 Production
- * 32:From Mar. 2017 Production until May 2018 Production
















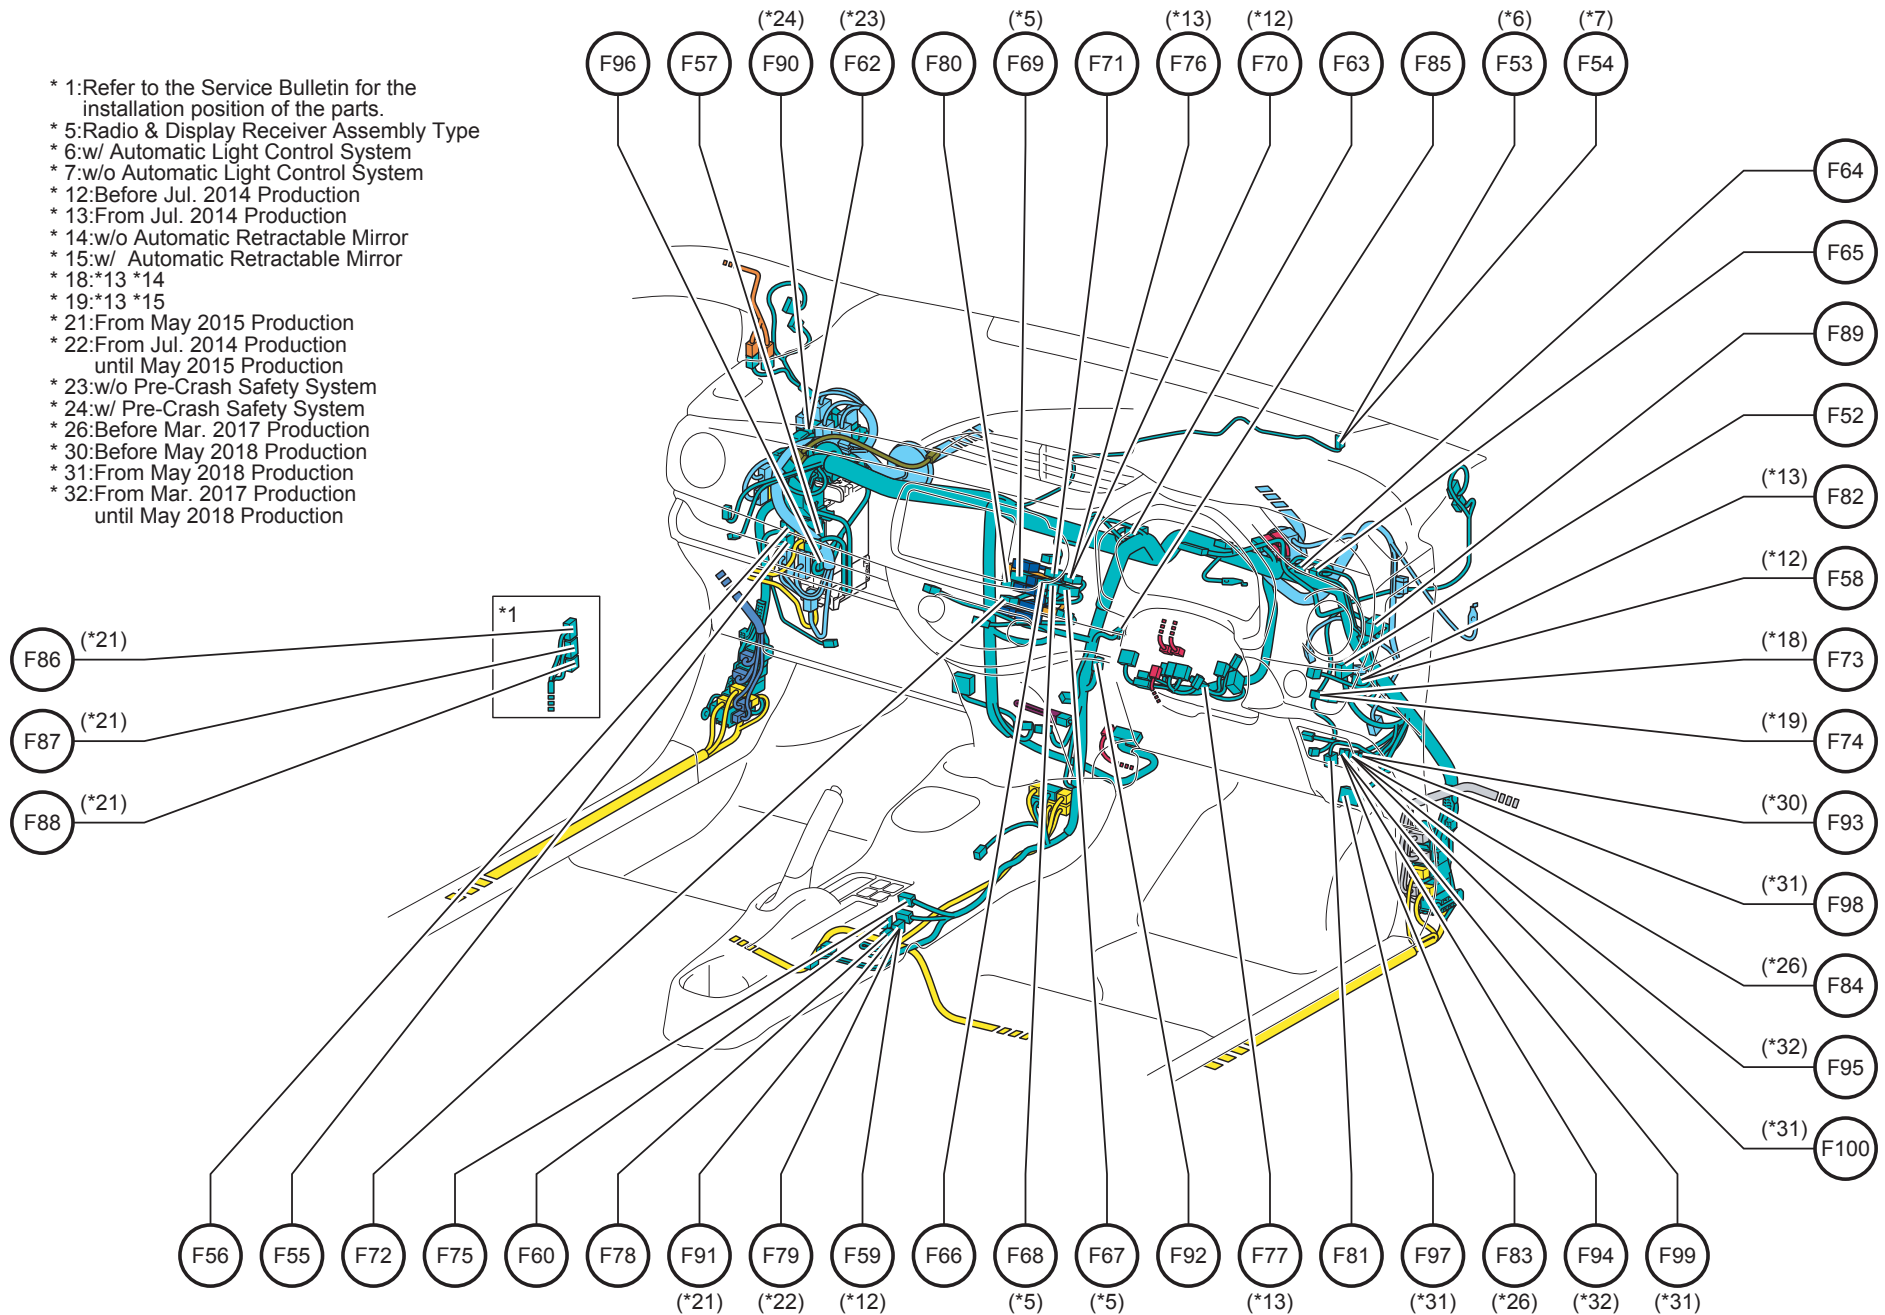


- F 52 Windshield Wiper Relay Assembly
- F 53 Automatic Light Control Sensor
- F 54 Cooler (Solar Sensor) Thermistor
- F 55 Power Management Control ECU or Hybrid Vehicle Control ECU Assembly
- F 56 Power Management Control ECU or Hybrid Vehicle Control ECU Assembly
- F 57 Main Body ECU
- F 58 Double Lock Door Control Relay Assembly
- F 59 ECO Switch Assembly
- F 60 Pattern Select Switch Assembly
- F 62 Junction Connector
- F 63 Junction Connector
- F 64 Junction Connector
- F 65 Junction Connector
- F 66 Radio Receiver Assembly
- F 67 Radio & Display Receiver Assembly
- F 68 Radio & Display Receiver Assembly
- F 69 Radio & Display Receiver Assembly
- F 70 Radio & Display Receiver Assembly
- F 71 Radio & Display Receiver Assembly
- F 72 Navigation ECU
- F 73 Outer Mirror Switch Assembly
- F 74 Outer Mirror Switch Assembly
- F 75 Shift Position Indicator (Indicator Light Wire Sub-Assembly)
- F 76 Radio & Display Receiver Assembly
- F 77 Transponder Key Coil
- F 78 VSC Off Switch
- F 79 ECO Switch Assembly
- F 80 Radio & Display Receiver Assembly
- F 81 Tire Pressure Warning Reset Switch (No. 1 Tire Pressure Warning Switch)
- F 82 Double Lock Door Control Relay Assembly
- F 83 Pre-Crash System Cancel Switch Assembly
- F 84 Auto High Beam Switch
- F 85 Pre-Crash Safety City Buzzer
- F 86 Certification ECU
- F 87 Certification ECU
- F 88 Certification ECU
- F 89 Network Gateway ECU
- F 90 Junction Connector
- F 91 ECO Switch Assembly
- F 92 Diode (Shift Position Indicator)
- F 93 Lane-Keeping Assist Main Switch
- F 94 Pre-Crash System Cancel Switch Assembly
- F 95 Auto High Beam Switch
- F 96 Main Body ECU
- F 97 DLC3
- F 98 Lane-Keeping Assist Main Switch
- F 99 Pre-Crash System Cancel Switch Assembly
- F 100 Auto High Beam Switch

cardiagn.com

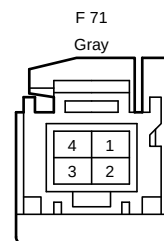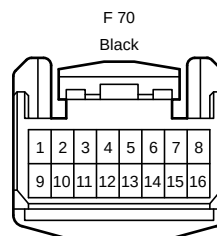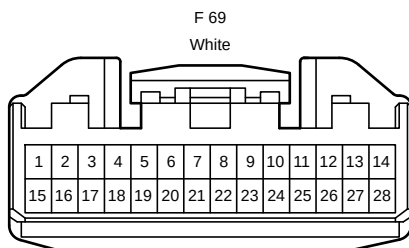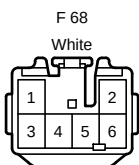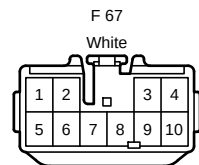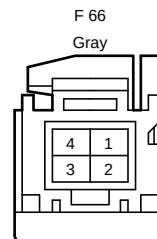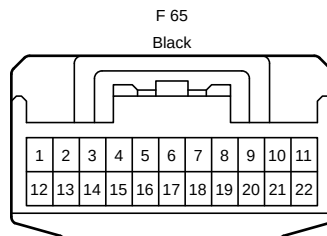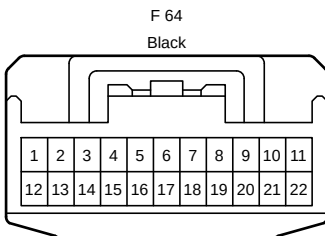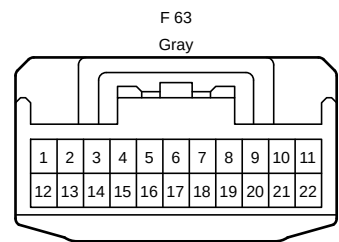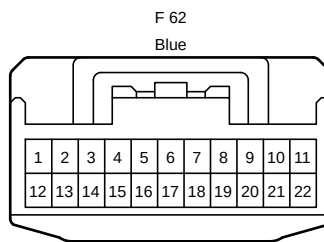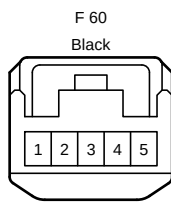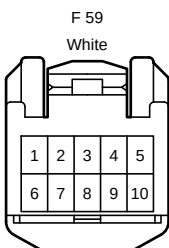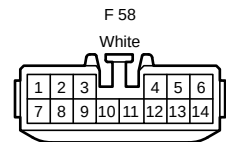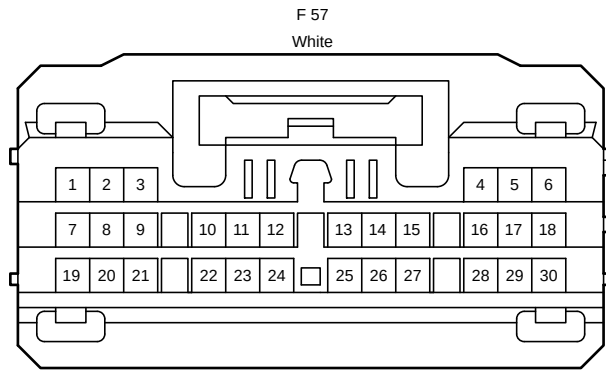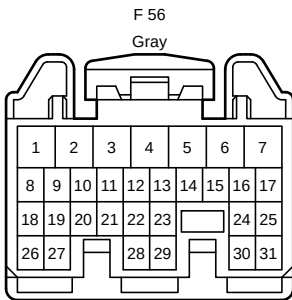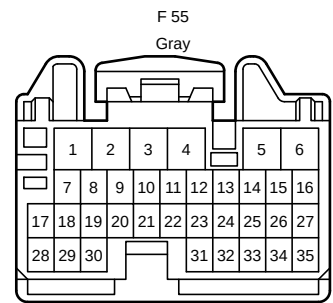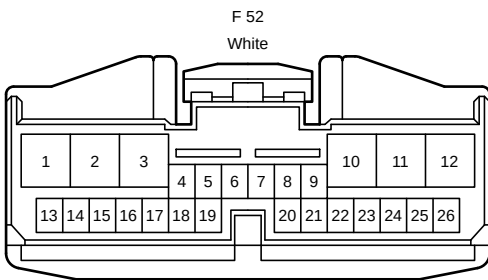


Position of Parts in Instrument Panel <RHD>

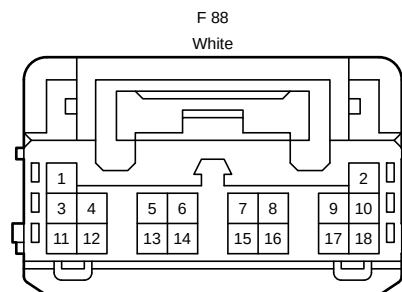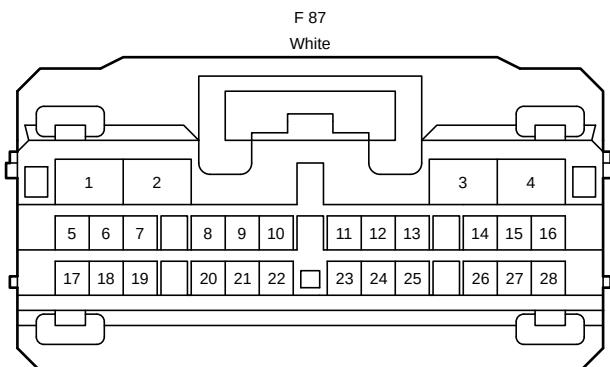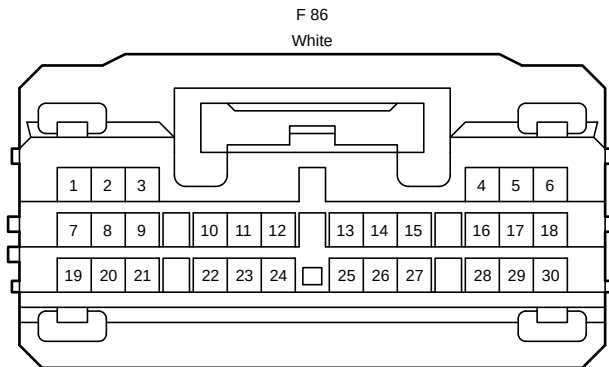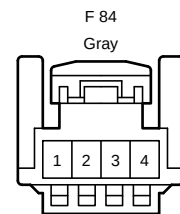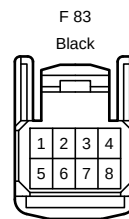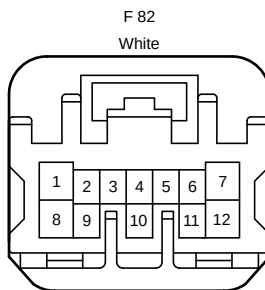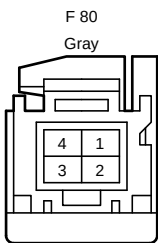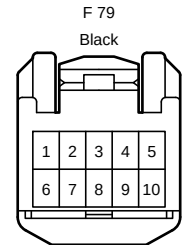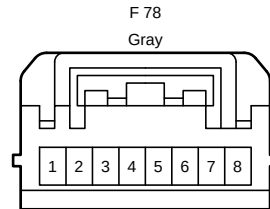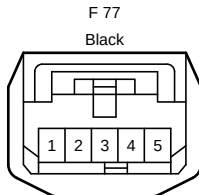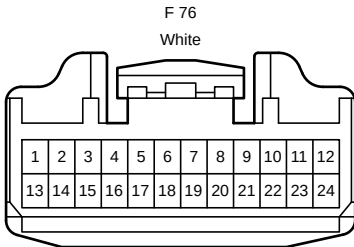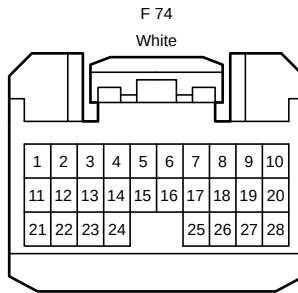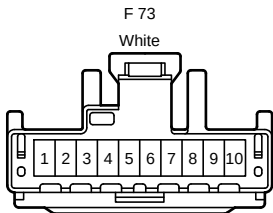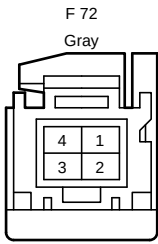


Position of Parts in Instrument Panel <RHD>


F 89
Black

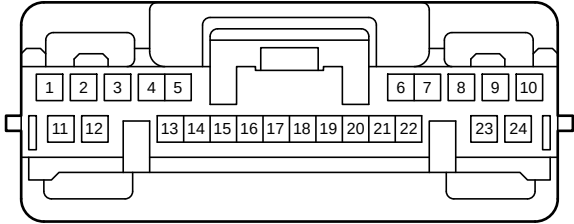

F 90
White

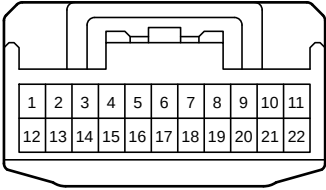


F 91
White

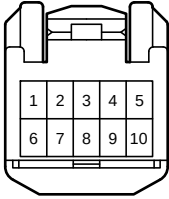


F 92
White




F 93
White

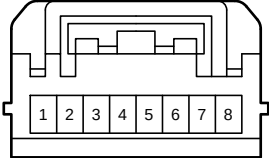


F 94
Gray

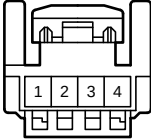


F 95
Black

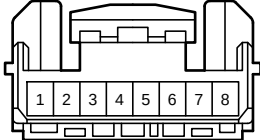


F 96
White

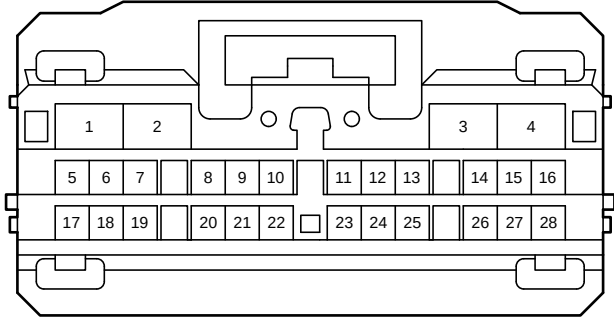


F 97
White

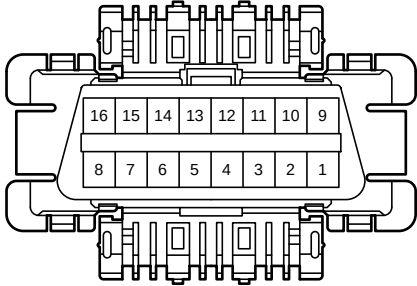


F 98
Blue

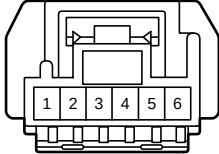

F 99
Black

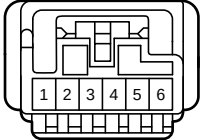


F100
White

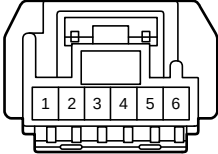

Position of Parts in Instrument Panel <RHD>

- * 8:LED Type Tail and Stop Light
- * 9:Bulb Type Tail and Stop Light
- * 10:Before Nov. 2013 Production
- * 11:From Nov. 2013 Production
- * 12:Before Jul. 2014 Production
- * 16:*8 *12
- * 17:*8 *22
- * 21:From May 2015 Production
- * 22:From Jul. 2014 Production until May 2015 Production
- * 23:w/o Pre-Crash Safety System
- * 24:w/ Pre-Crash Safety System
- * 25:*8 *21

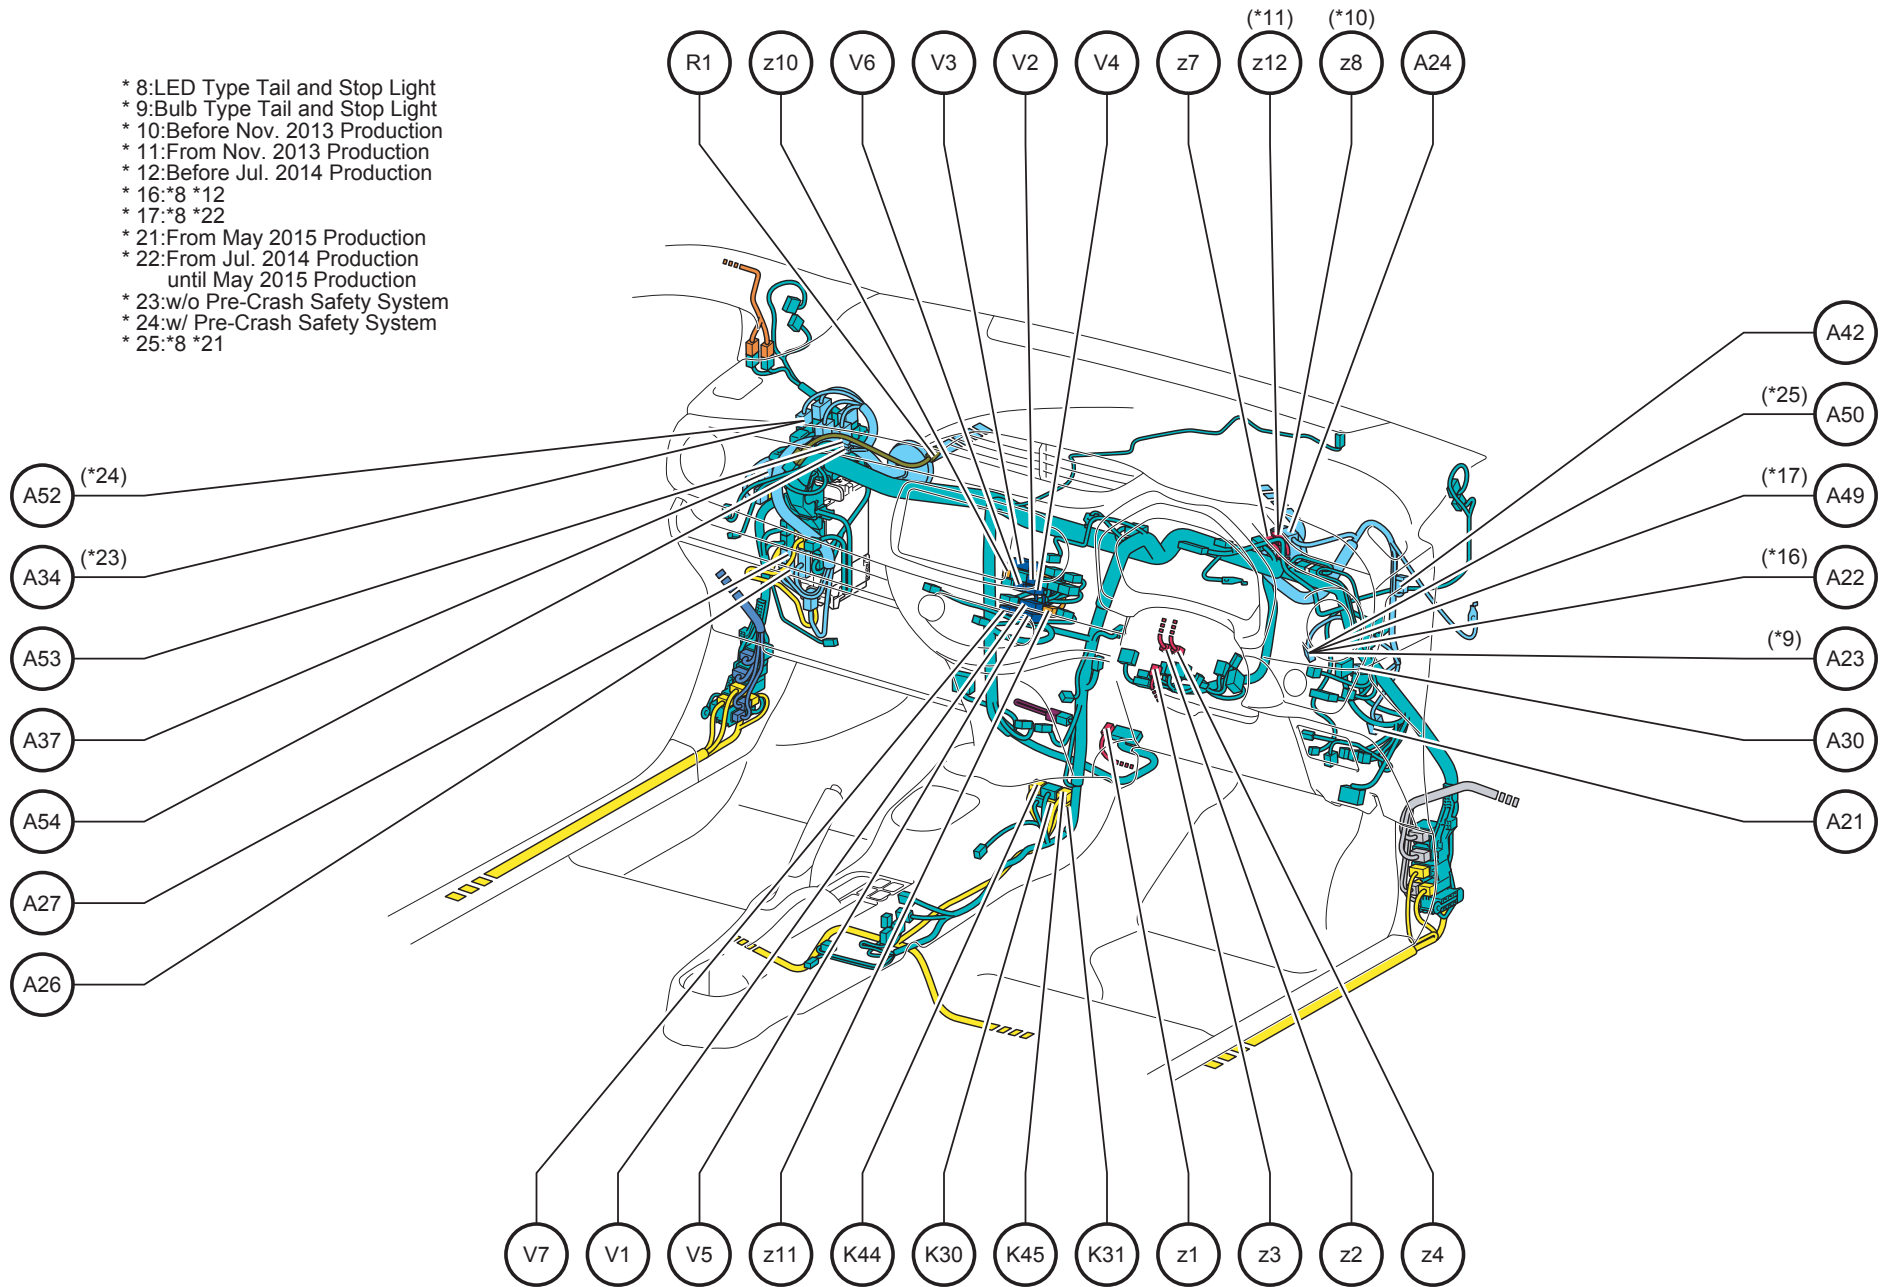

- A 21 Accelerator Pedal Sensor Assembly
- A 22 Stop Light Switch Assembly
- A 23 Stop Light Switch Assembly
- A 24 Power Steering ECU Assembly
- A 26 Power Management Control ECU or Hybrid Vehicle Control ECU Assembly
- A 27 Power Management Control ECU or Hybrid Vehicle Control ECU Assembly
- A 30 Brake Pedal Stroke Sensor Assembly
- A 34 Junction Connector
- A 37 Junction Connector
- A 42 Junction Connector
- A 49 Stop Light Switch Assembly
- A 50 Stop Light Switch Assembly
- A 52 Junction Connector
- A 53 Diode (No. 1 Pre-Crash Safety City Heater)
- A 54 Diode (No. 2 Pre-Crash Safety City Heater)

- K 30 Airbag Sensor Assembly
- K 31 Airbag Sensor Assembly
- K 44 Airbag Sensor Assembly
- K 45 Airbag Sensor Assembly


- R 1 Instrument Panel Passenger Airbag without Door Assembly

- V 1 Navigation ECU
- V 2 Radio & Display Receiver Assembly
- V 3 Radio & Display Receiver Assembly
- V 4 Radio & Display Receiver Assembly
- V 5 Navigation ECU
- V 6 Radio & Display Receiver Assembly
- V 7 Radio & Display Receiver Assembly


- z 1 A/C Amplifier Assembly , A/C Unit (A/C Harness Assembly)
- z 2 Spiral Cable Sub-Assembly , Steering Pad Switch Assembly
- z 3 Driver Side Squib Circuit (Horn Button Assembly) , Spiral Cable Sub-Assembly
- z 4 Cruise Control Main Switch , Spiral Cable Sub-Assembly
- z 7 Electric Power Steering Column Sub-Assembly , Power Steering ECU Assembly
- z 8 Power Steering ECU Assembly , Power Steering Motor Assembly
- z 10 Radio & Display Receiver Assembly
- z 11 Navigation ECU
- z 12 Power Steering ECU Assembly , Power Steering Motor Assembly

Position of Parts in Instrument Panel <RHD>


A 21
Black

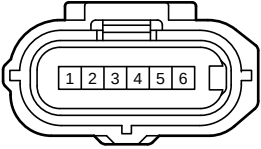


A 22
Black

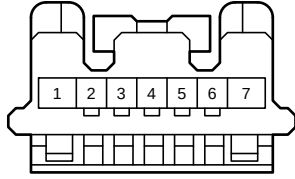

A 23
White

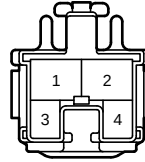


A 24
Black

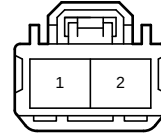


(Before Mar. 2017 Production)

A 24
White

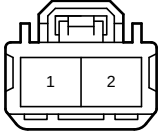


(From Mar. 2017 Production)

A 26
Gray

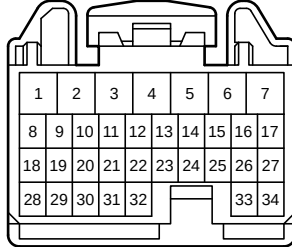


A 27
Gray

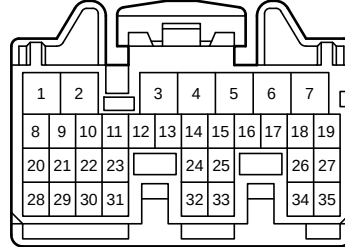


A 30
Black




A 34
Blue

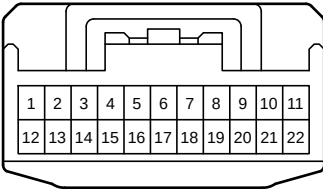


A 37
White

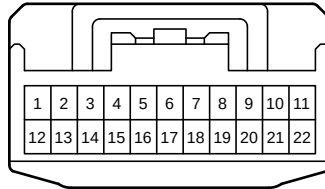


A 42
White

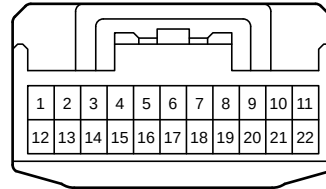


A 49
Blue

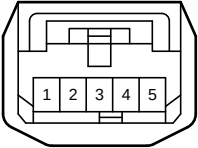

A 50
Black

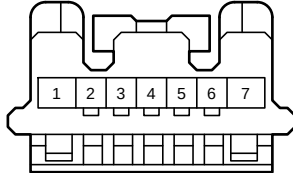

A 52
Blue

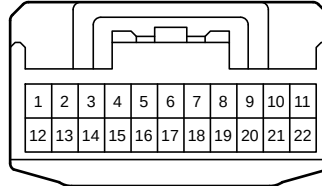


A 53
White




A 54
Black




K 30
Yellow

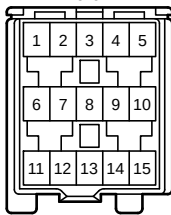



















K 31
Yellow

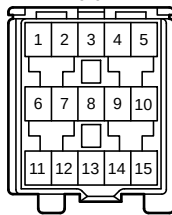


K 44
Yellow

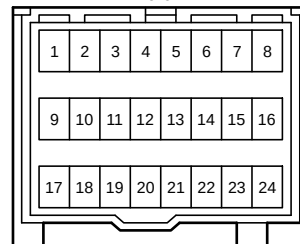

Position of Parts in Instrument Panel <RHD>

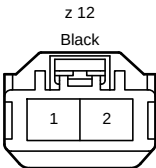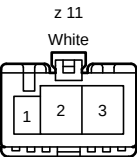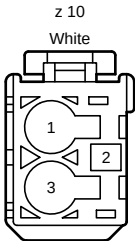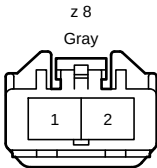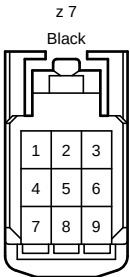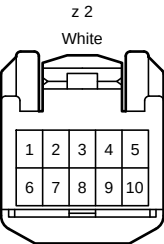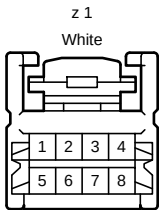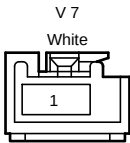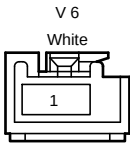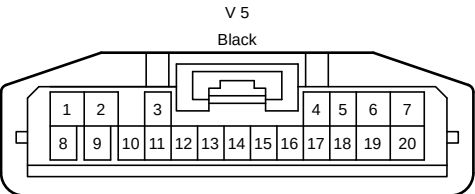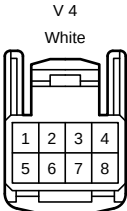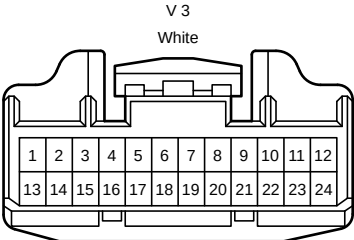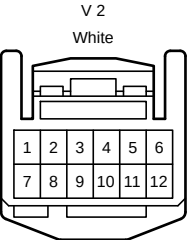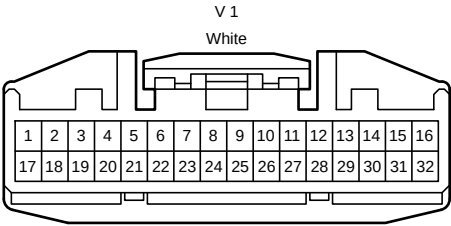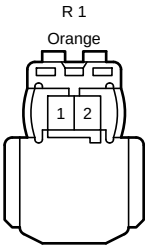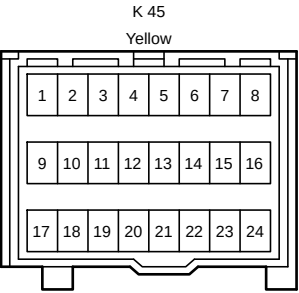

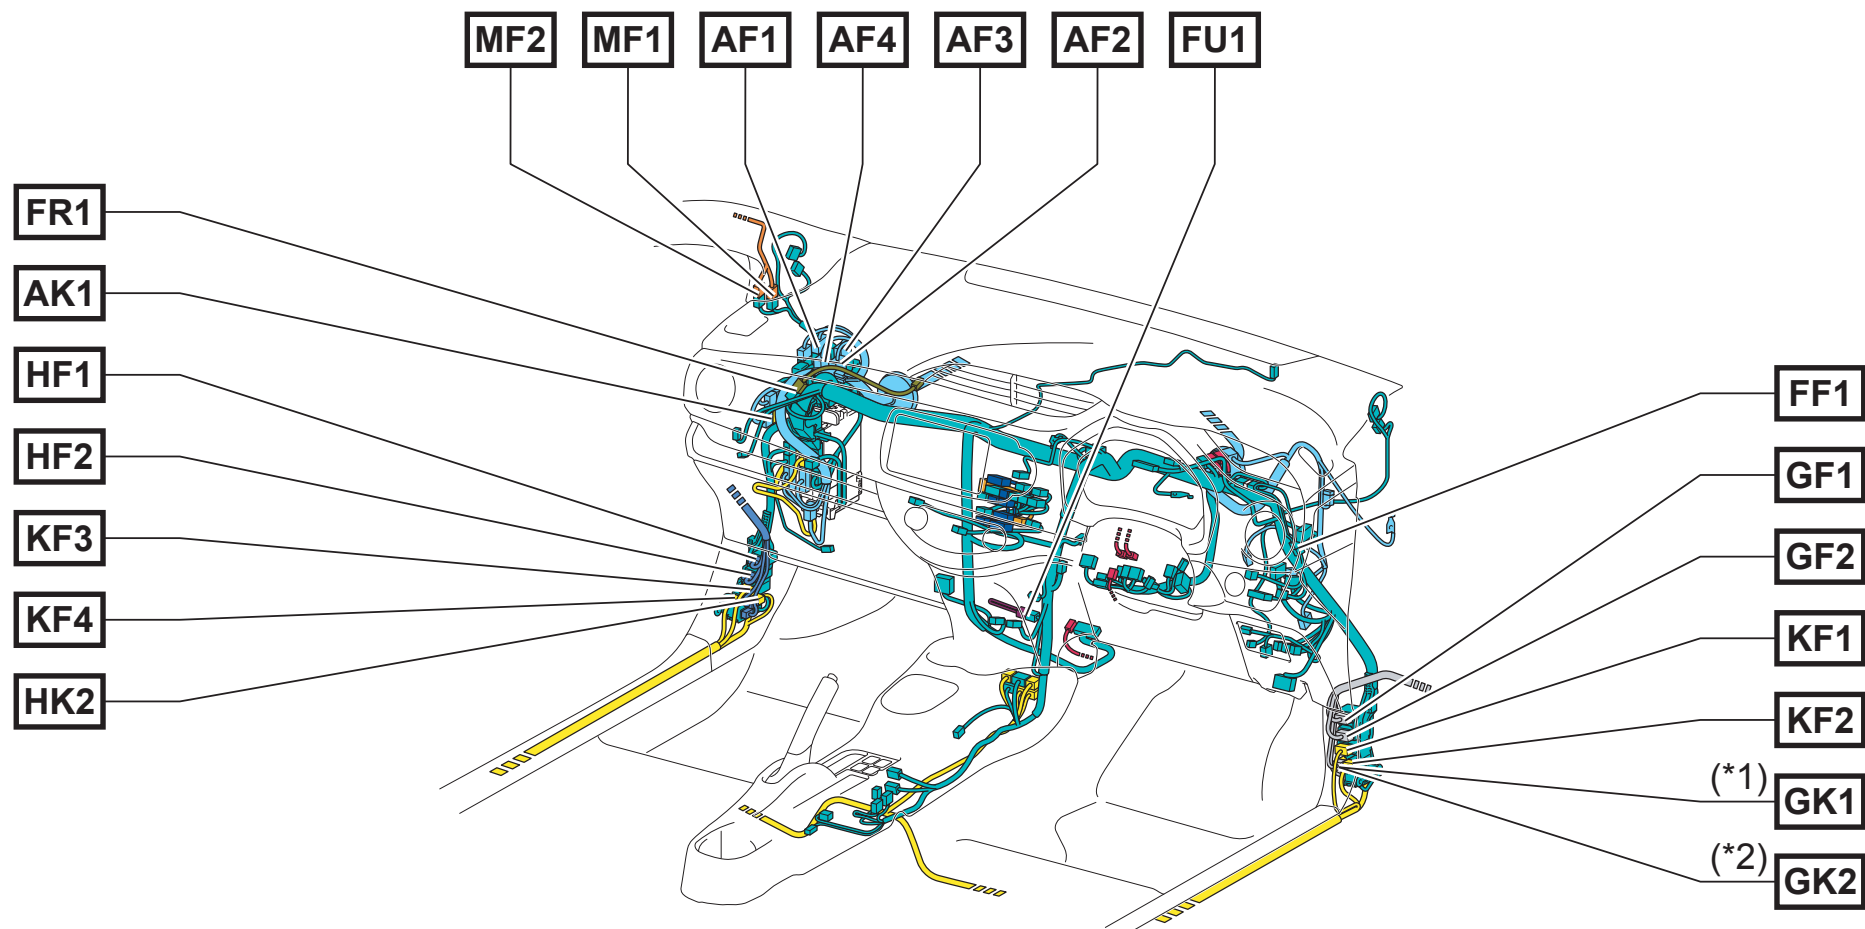

* 1: Before Mar. 2017 Production
 * 2: From Mar. 2017 Production

Wire and Wire in Instrument Panel <RHD>

