



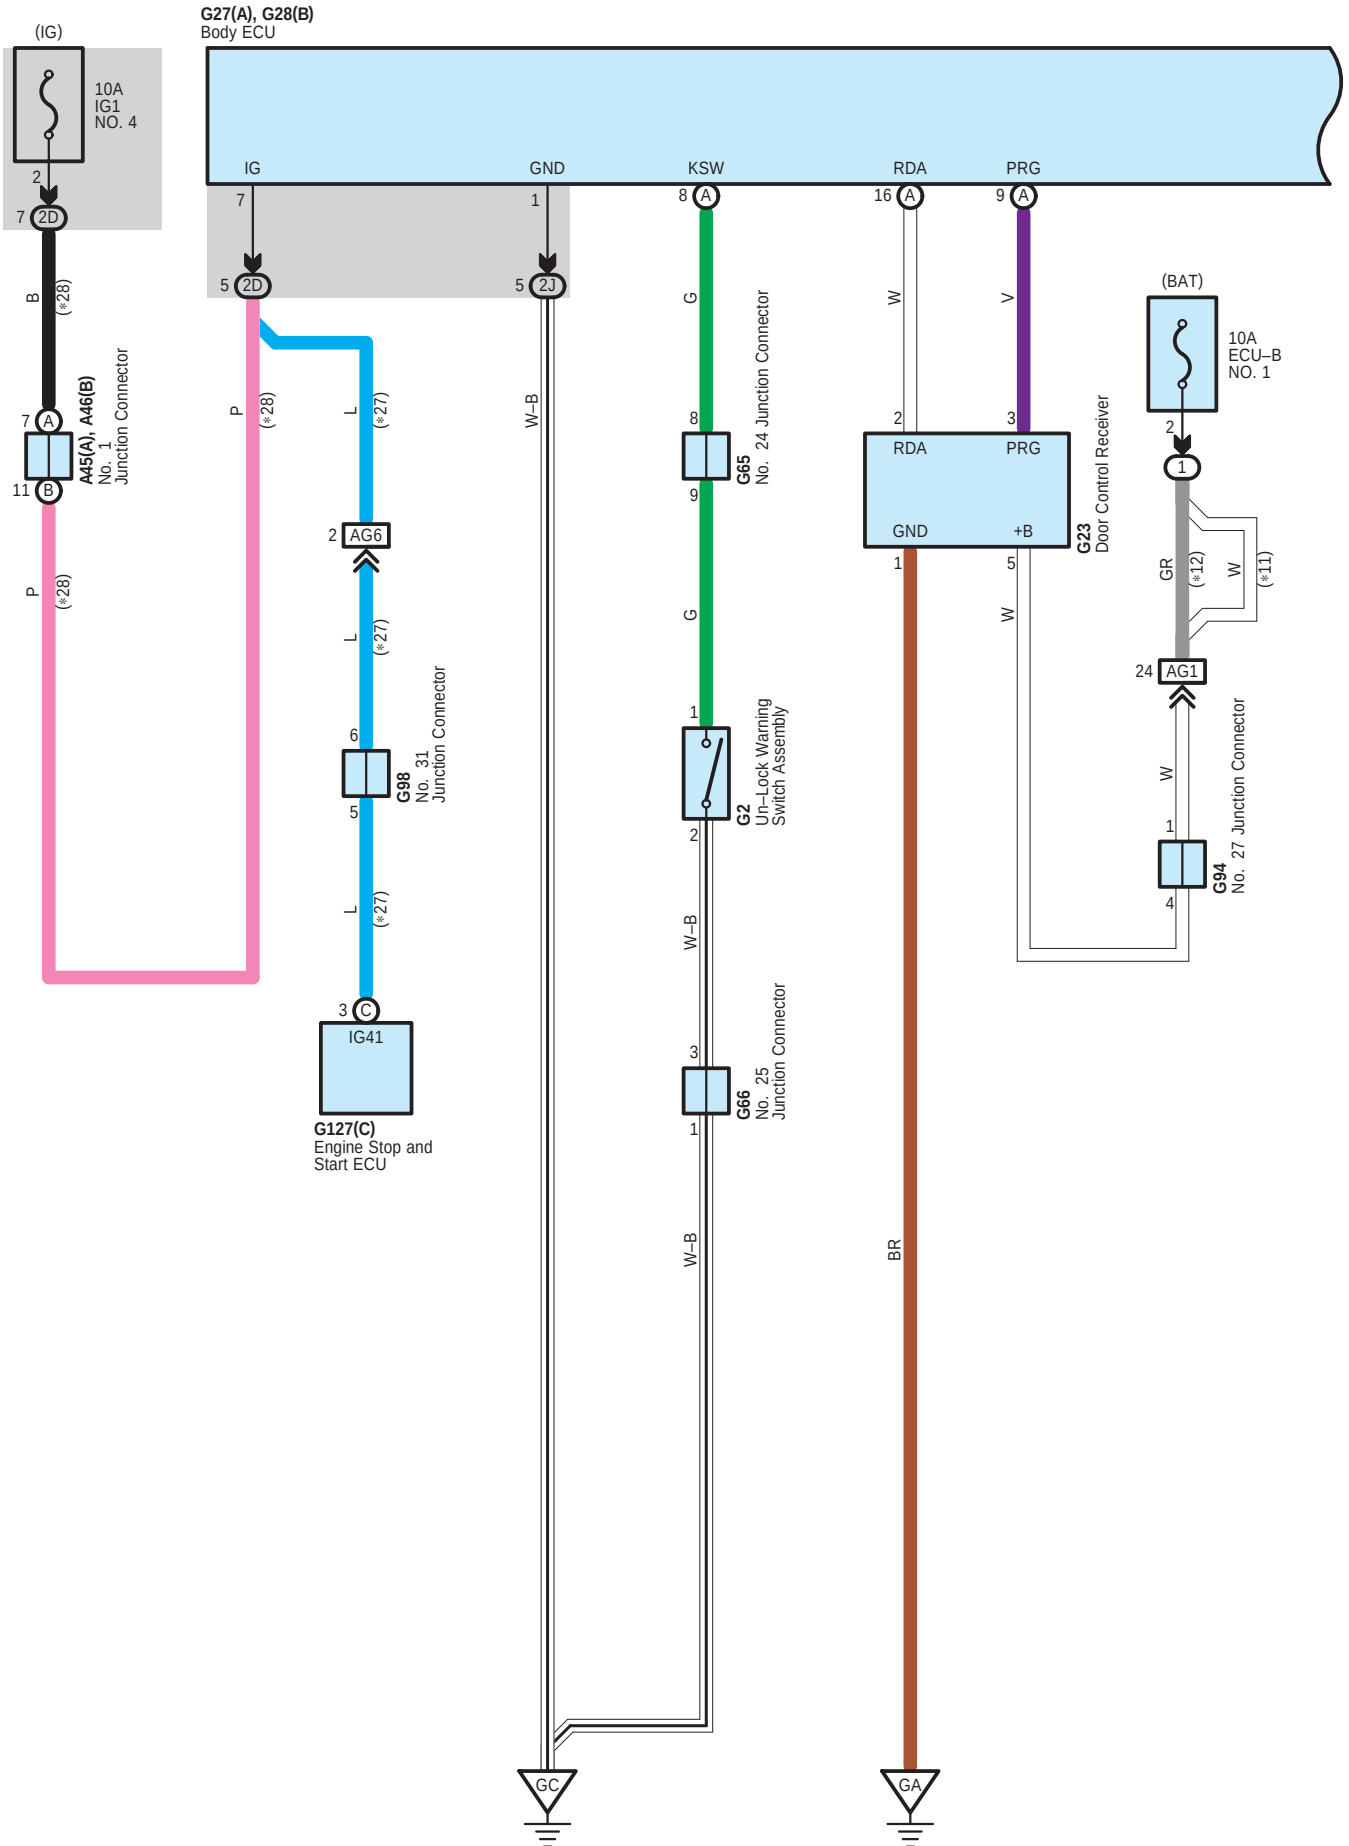


Wireless Door Lock Control (RHD w/o Entry & Start System)

G27(A), G28(B)
Body ECU

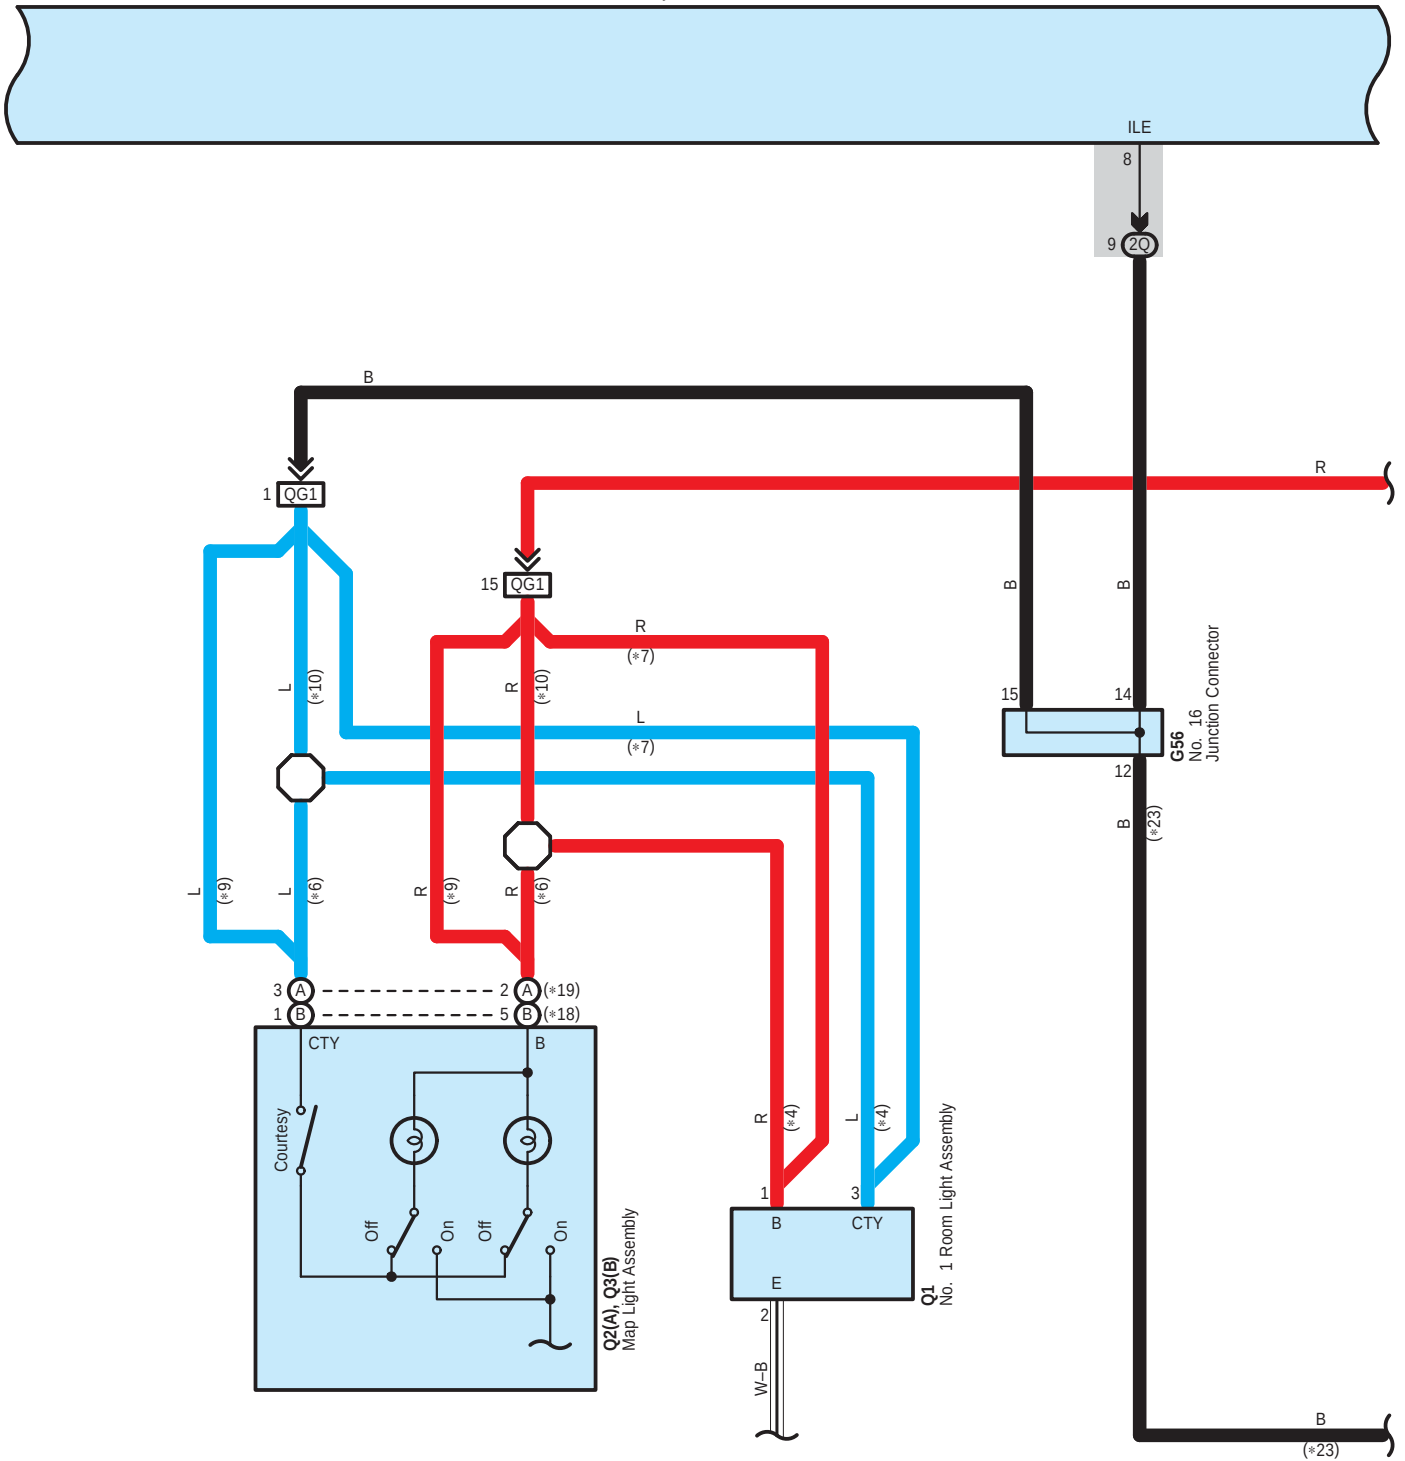

- * 4 : Double Cab w/ No. 1 Room Light Assembly, Extra Cab w/ No. 1 Room Light Assembly
- * 6 : Double Cab w/ Overhead Console, Extra Cab w/ Overhead Console
- * 7 : Single Cab w/ No. 1 Room Light Assembly
- * 9 : Single Cab w/ Overhead Console
- * 10 : Double Cab, Extra Cab
- * 11 : 1GD-FTV, 2GD-FTV
- * 12 : 1KD-FTV, 2KD-FTV, 1GR-FE, 1TR-FE, 2TR-FE
- * 18 : w/ Microphone, w/ Intrusion Sensor
- * 19 : w/o Microphone w/o Intrusion Sensor
- * 23 : w/ Immobiliser System
- * 27 : w/ Stop & Start System
- * 28 : w/o Stop & Start System


Wireless Door Lock Control (RHD w/o Entry & Start System)

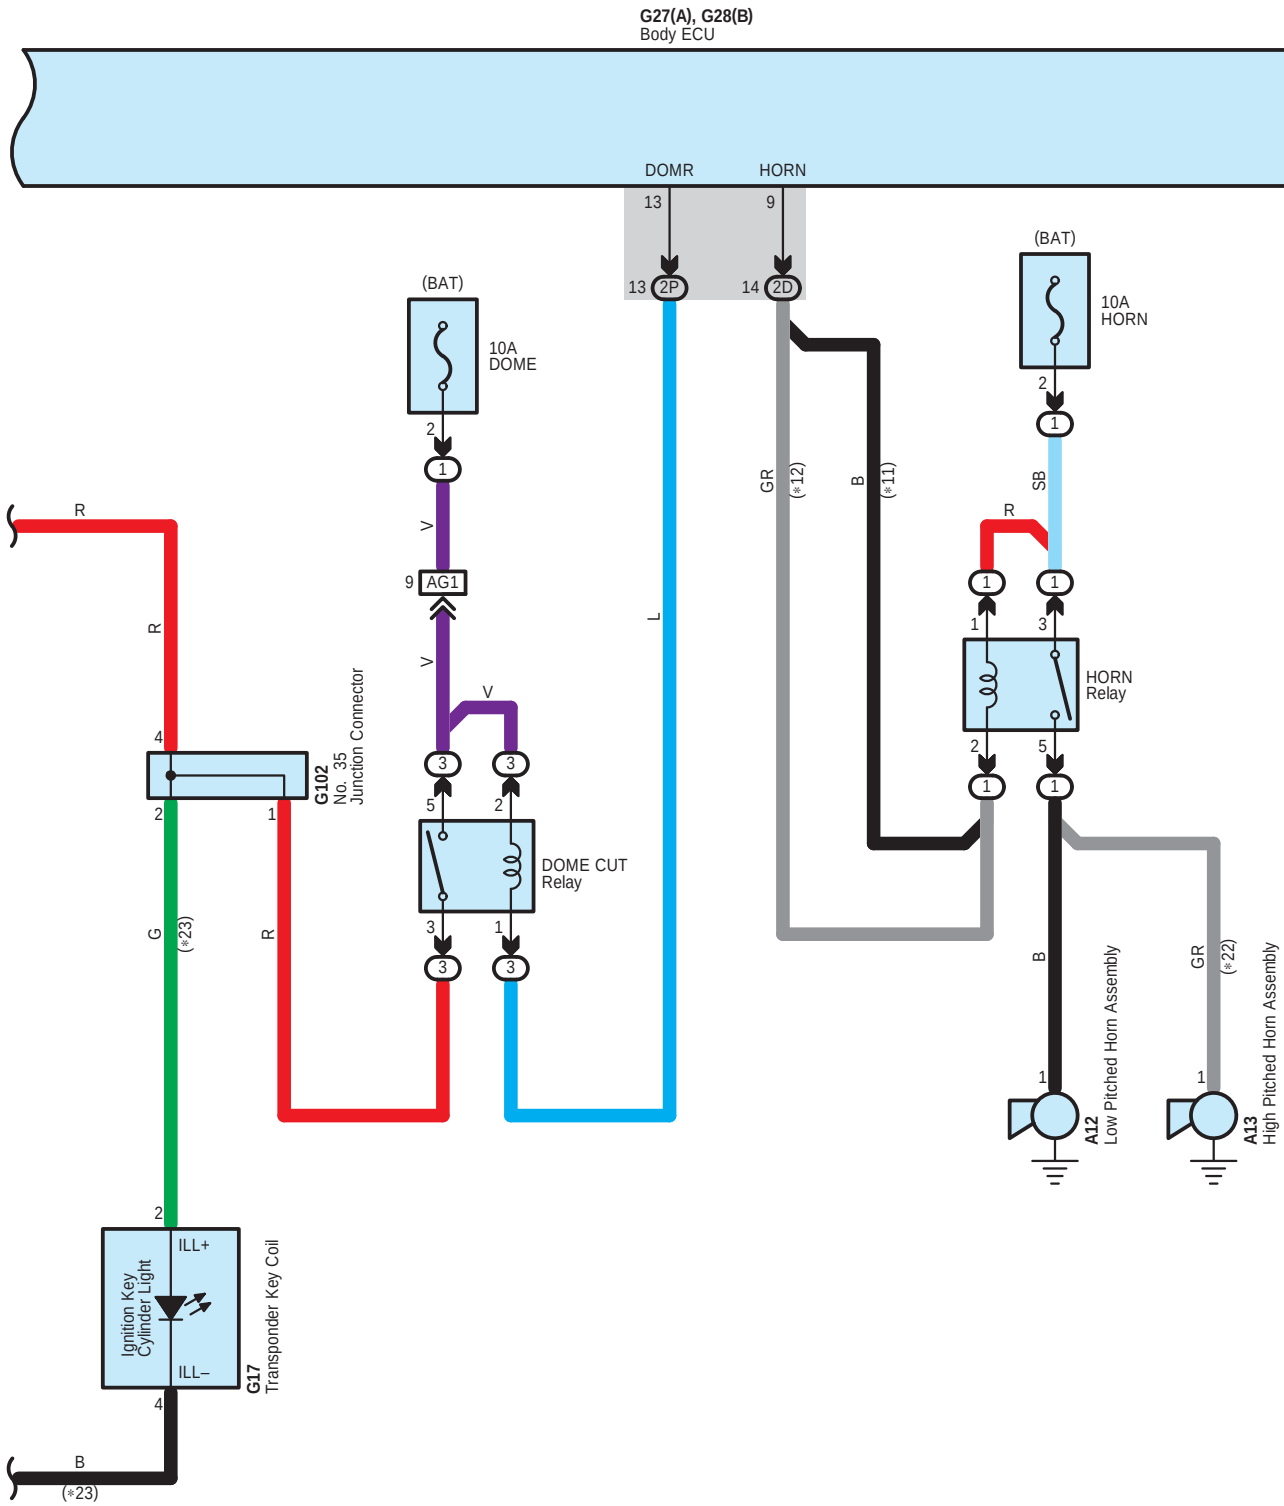


- *11 : 1GD-FTV, 2GD-FTV
- *12 : 1KD-FTV, 2KD-FTV, 1GR-FE, 1TR-FE, 2TR-FE
- *20 : w/ Door Control Battery
- *21 : w/o Door Control Battery
- *22 : w/ High Pitched Horn Assembly
- *23 : w/ Immobiliser System



Wireless Door Lock Control (RHD w/o Entry & Start System)

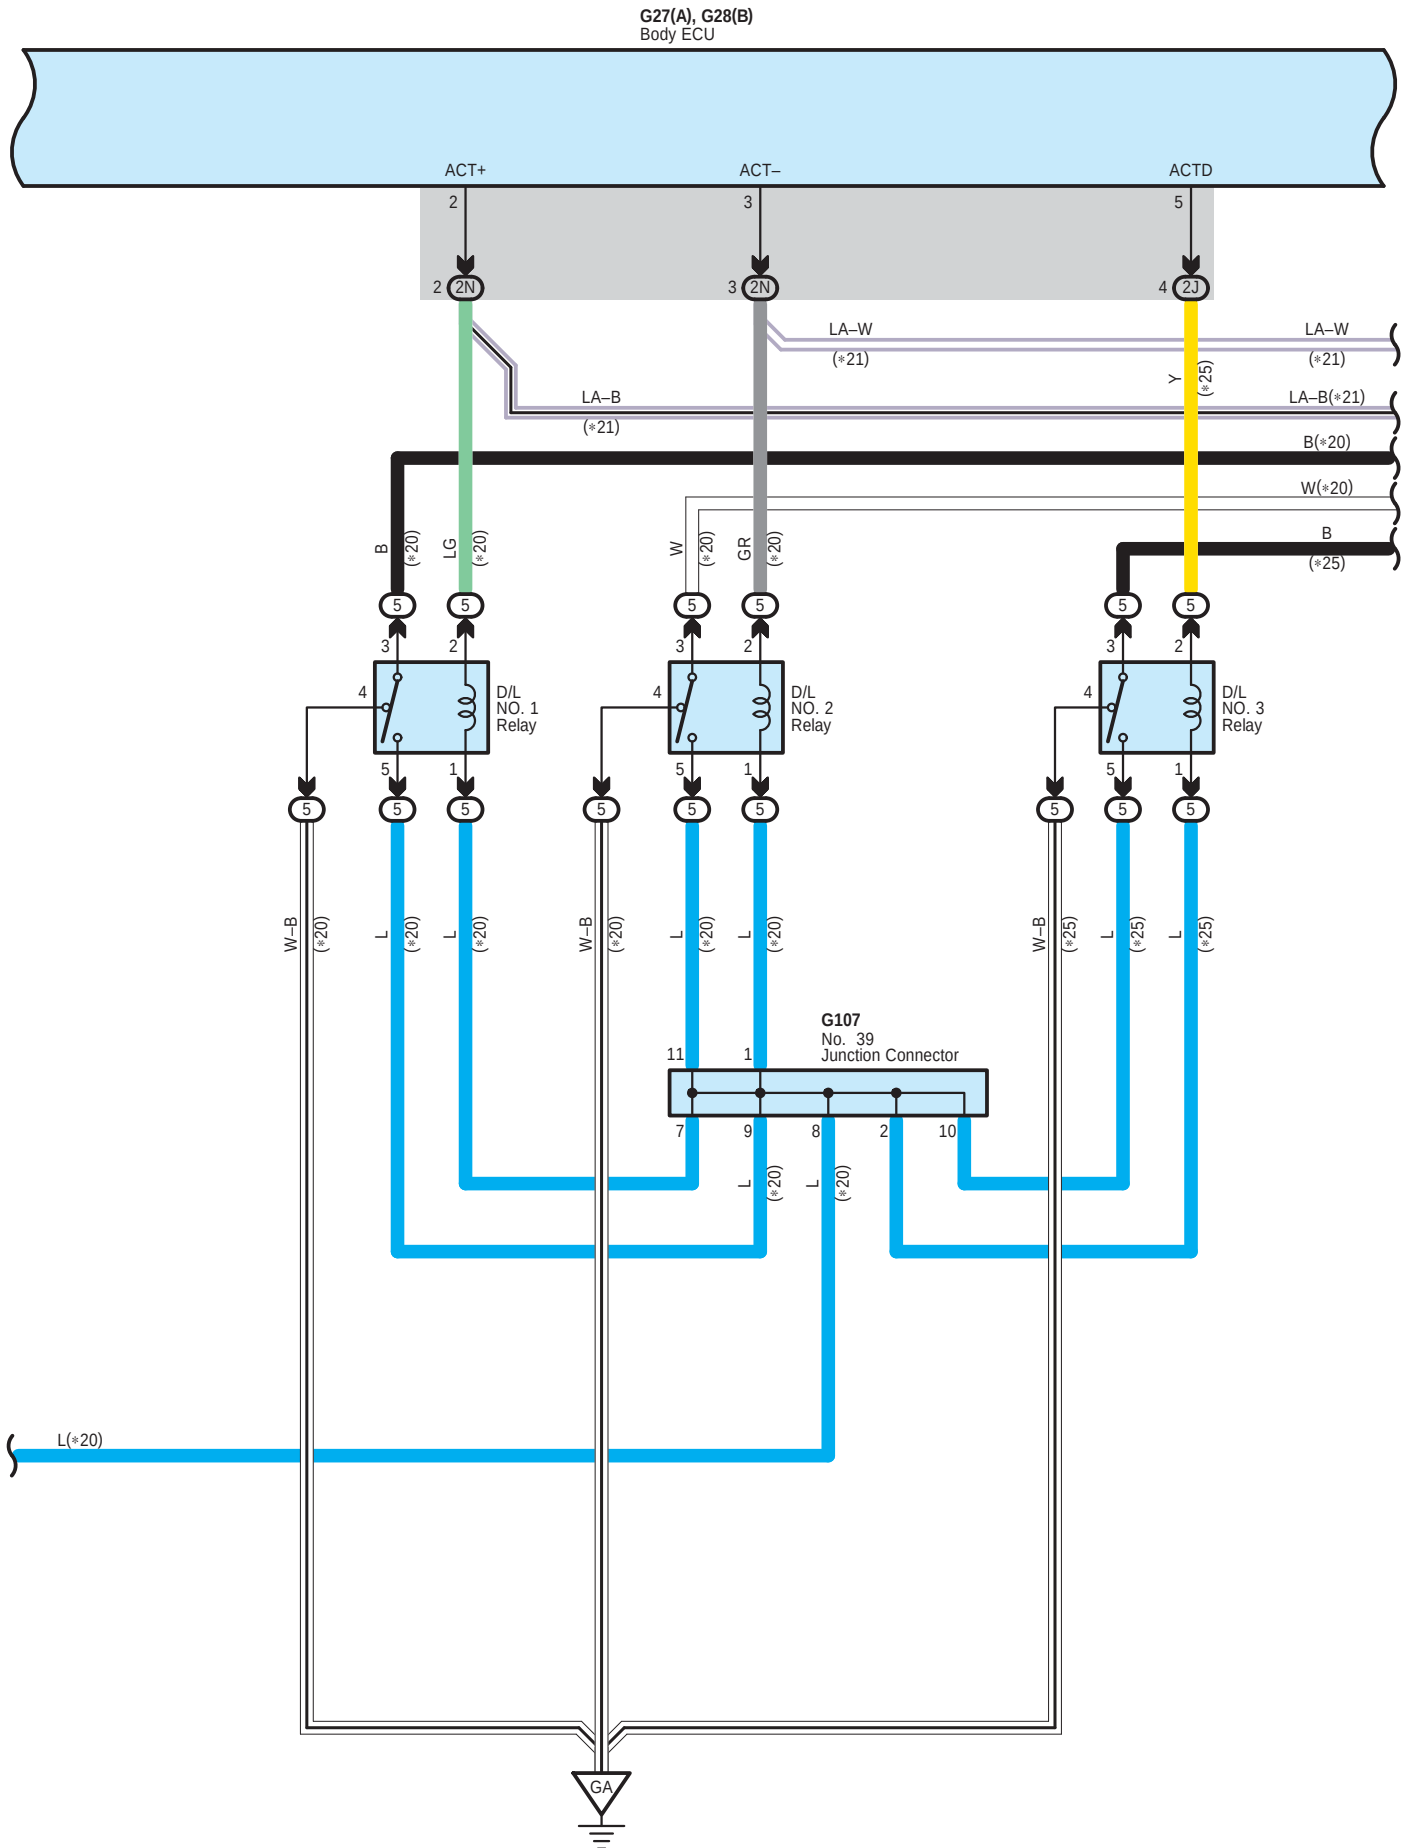


LSWD

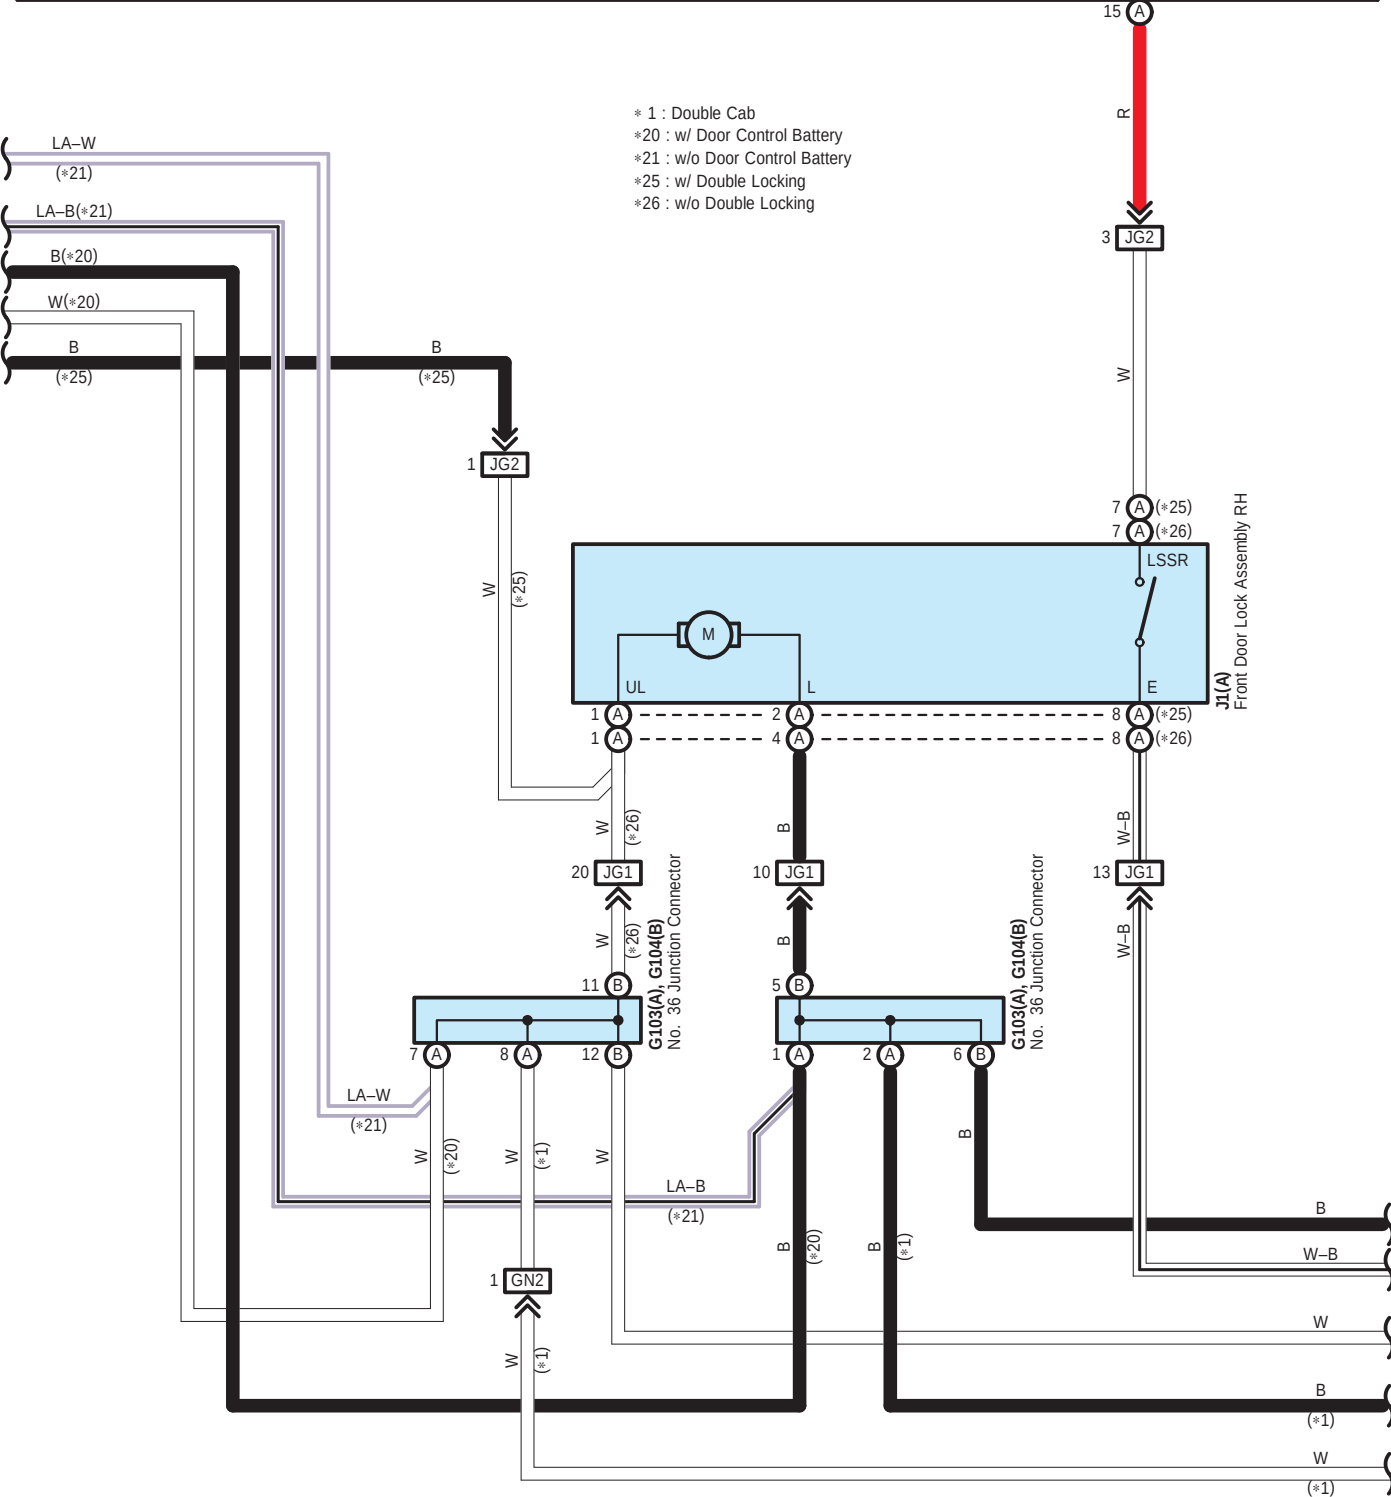


Wireless Door Lock Control (RHD w/o Entry & Start System)

G27(A), G28(B)
Body ECU

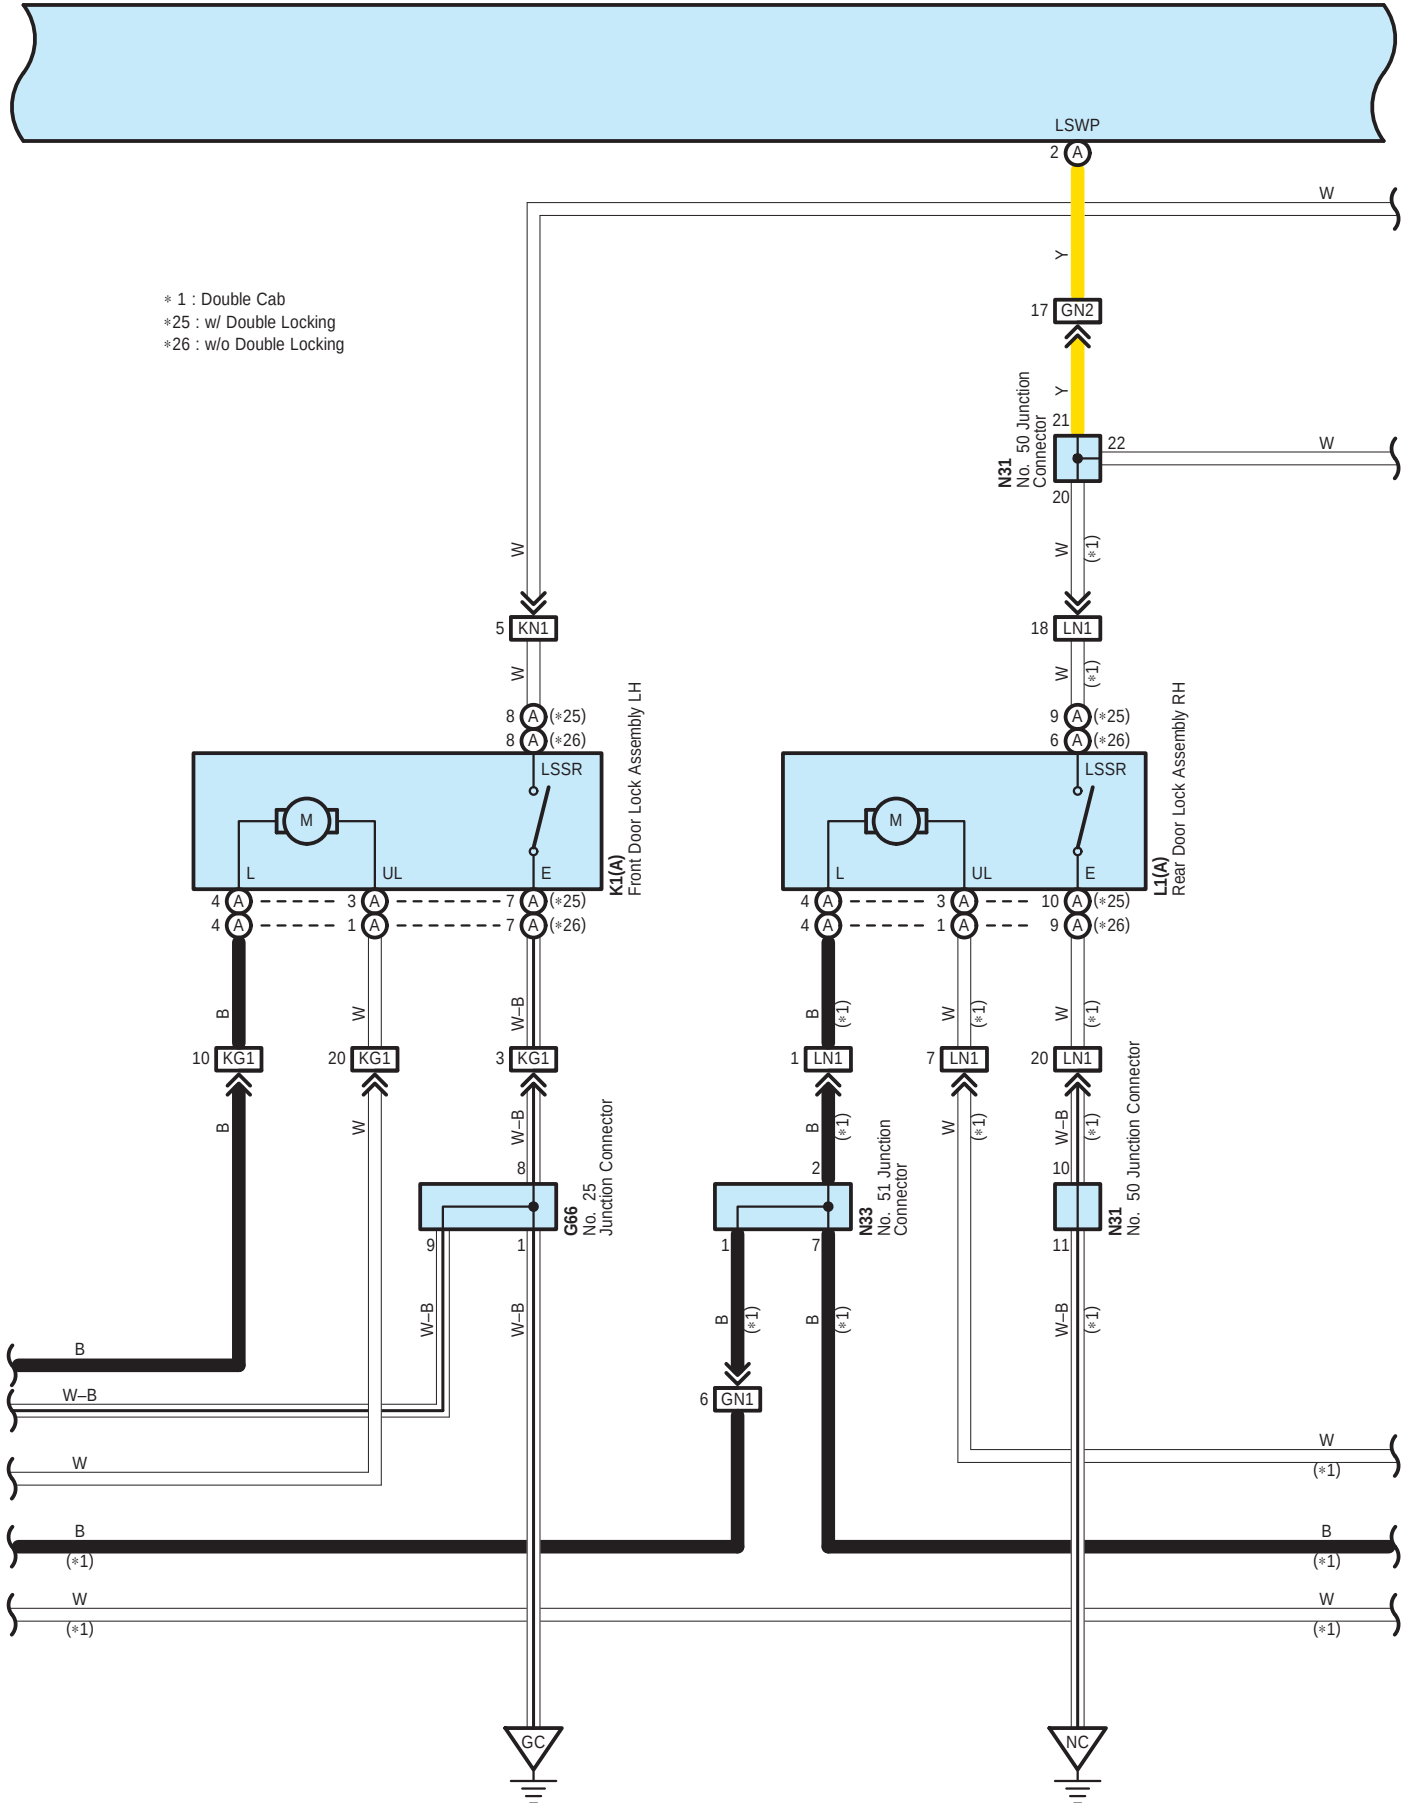
















Wireless Door Lock Control (RHD w/o Entry & Start System)

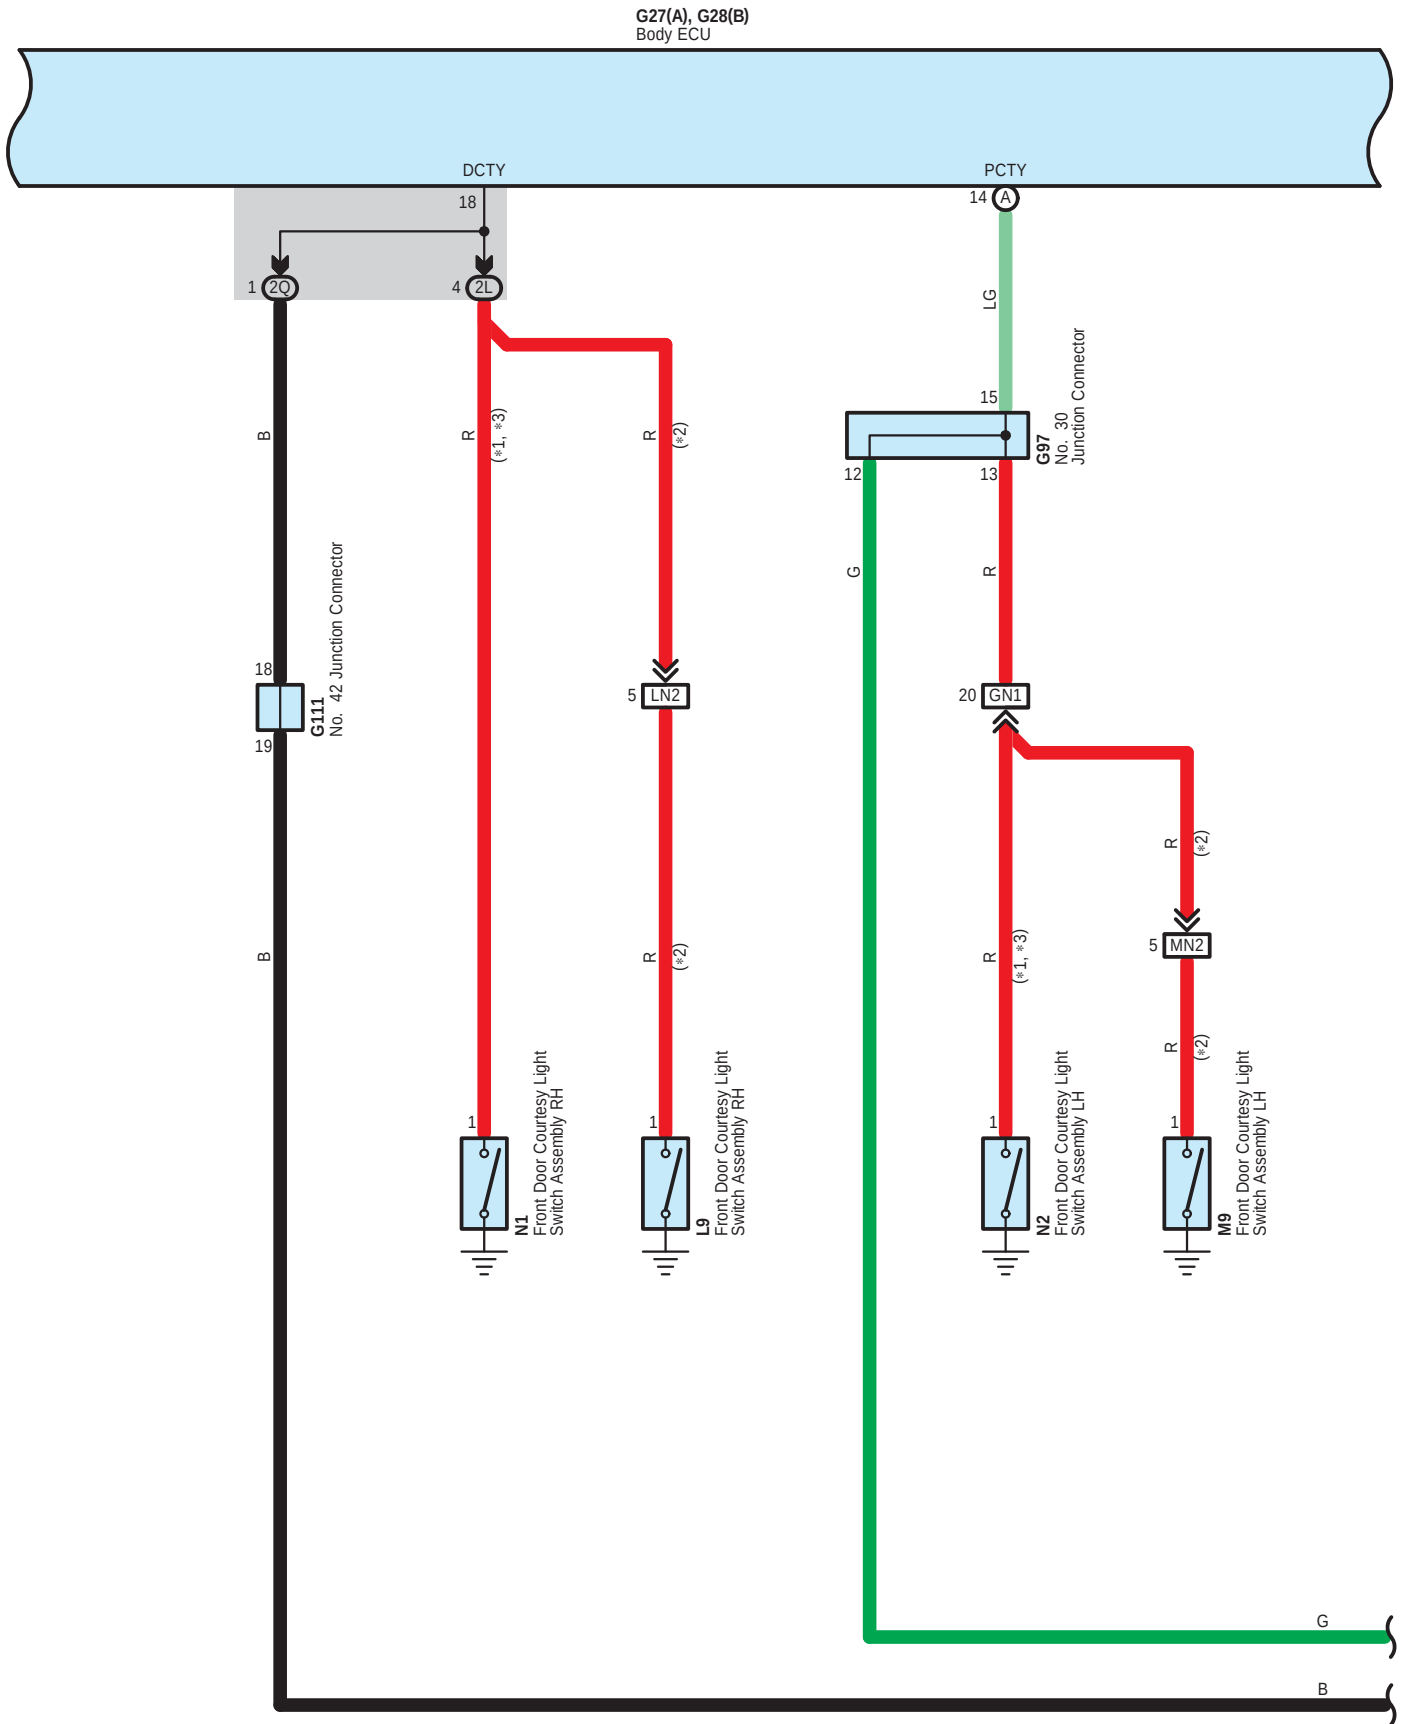

Wireless Door Lock Control (RHD w/o Entry & Start System)

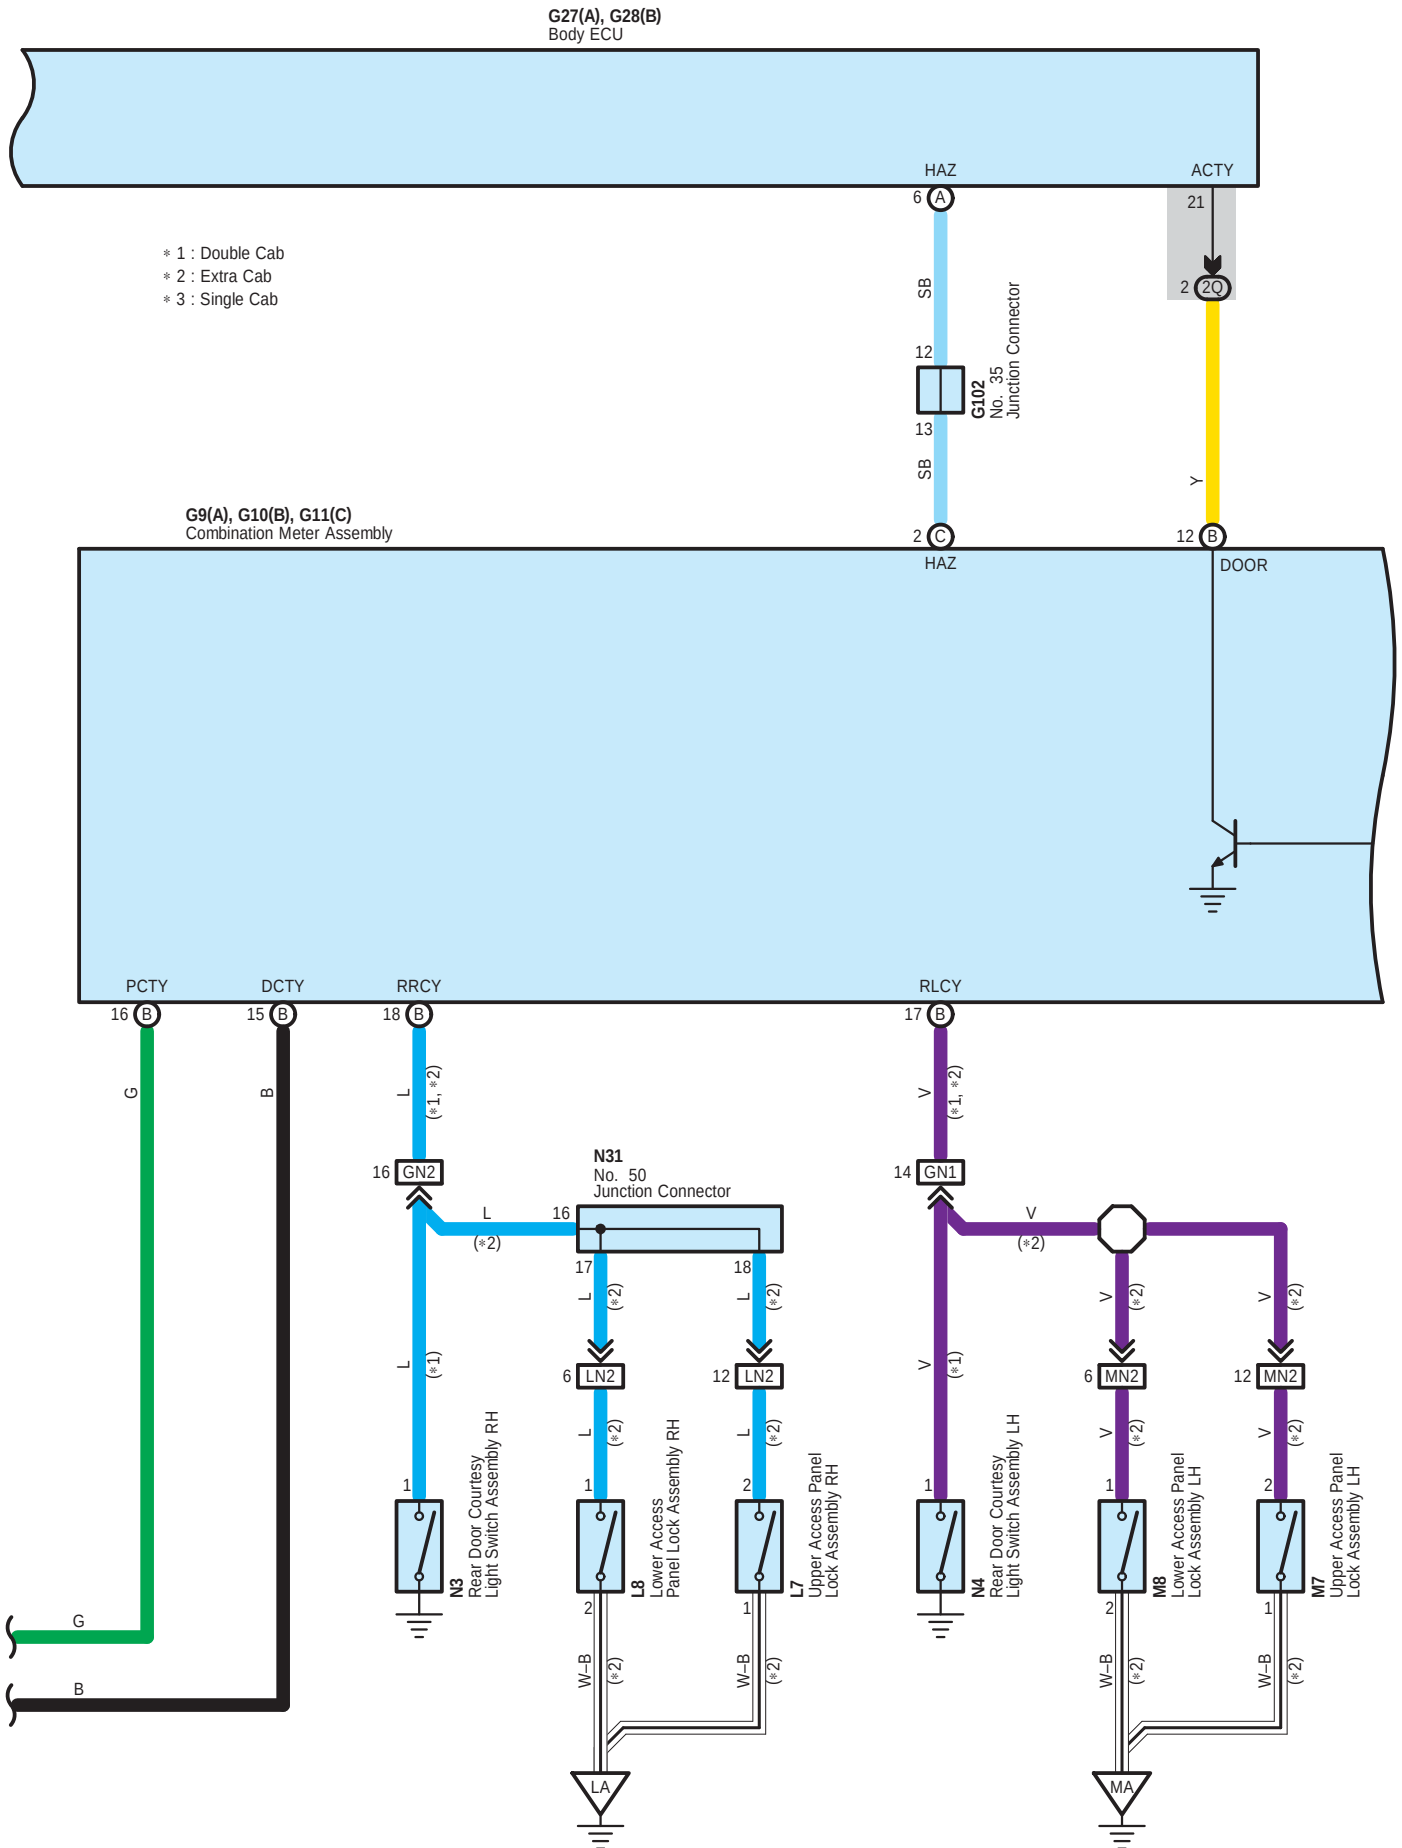


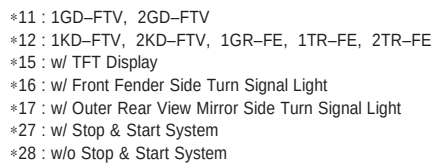

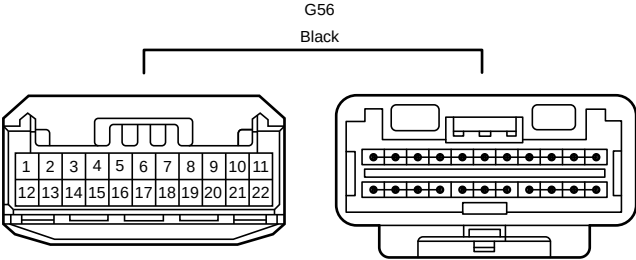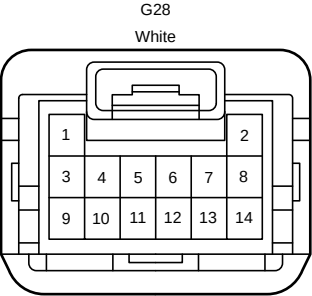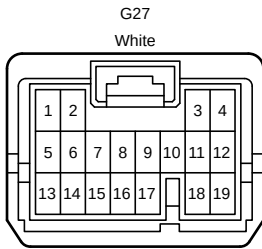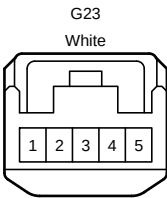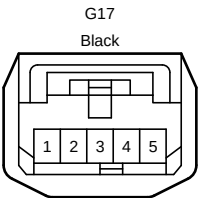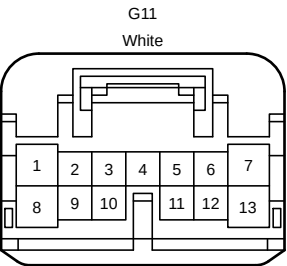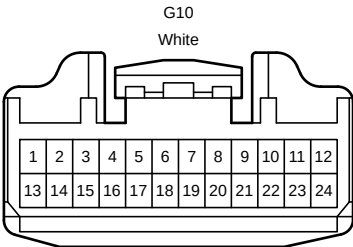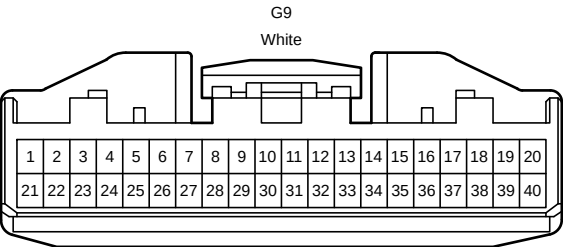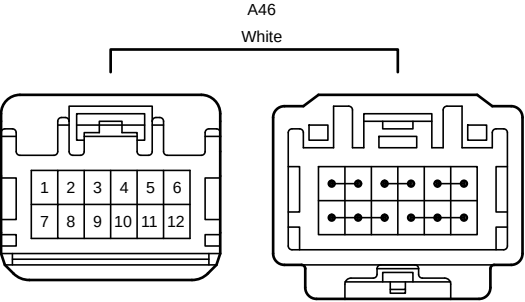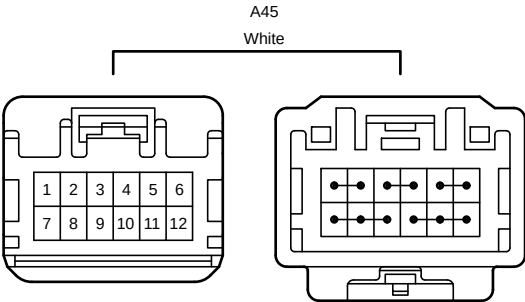


Wireless Door Lock Control (RHD w/o Entry & Start System)

G65
Black

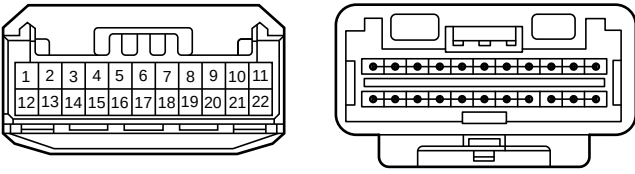


90980-12B54

G66
Black

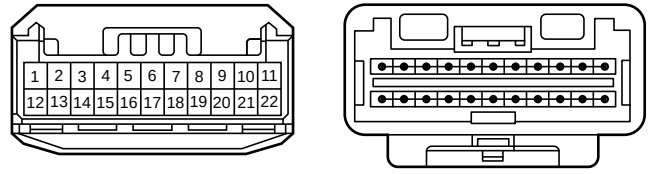


90980-12B54

G94
Black

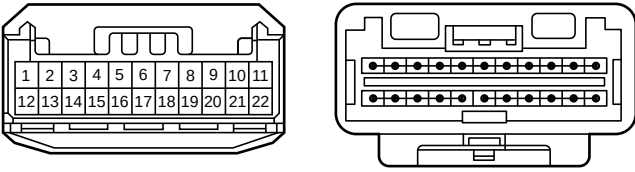


90980-12B54

G97
Black

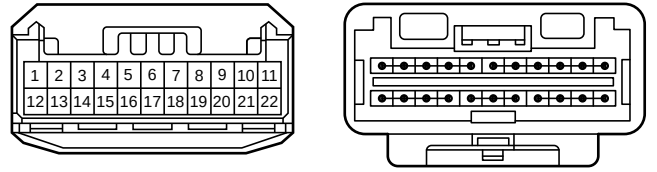


90980-12B54

G98
Black

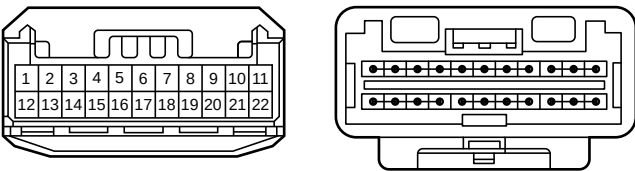


90980-12B54

G102
Black

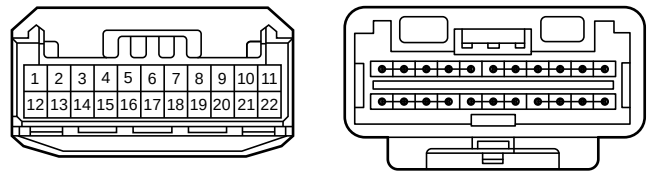


90980-12B54

G103
White

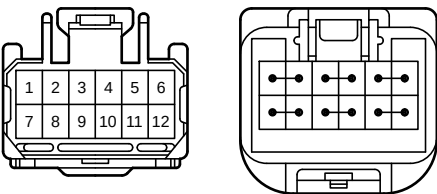


90980-11661

G104
White

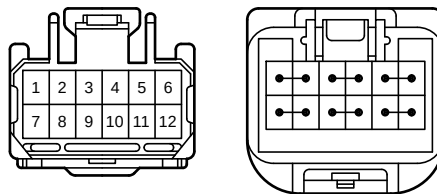


90980-11661

G107
White

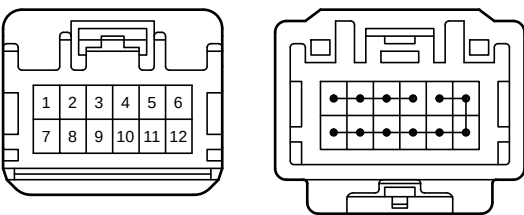
















90980-12737

G108
Black

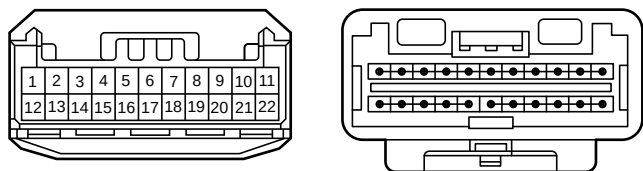


90980-12B54


Wireless Door Lock Control (RHD w/o Entry & Start System)

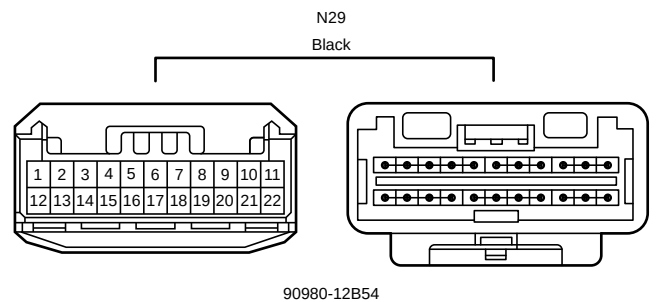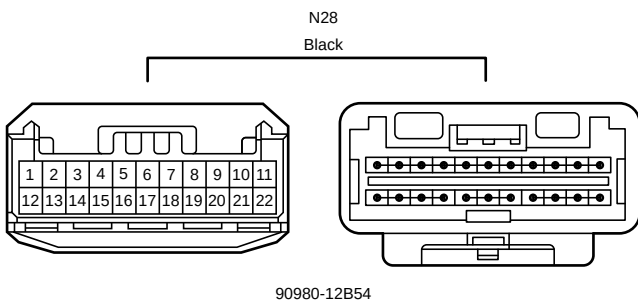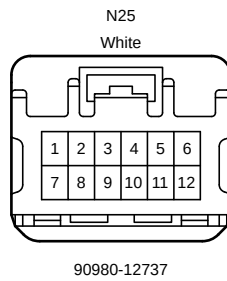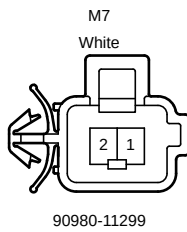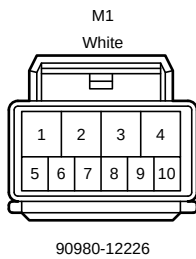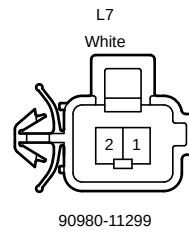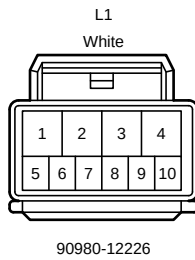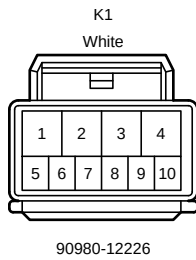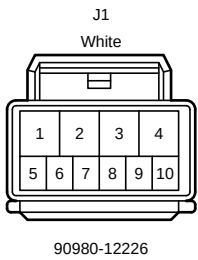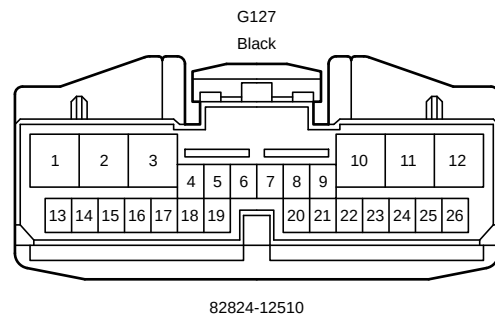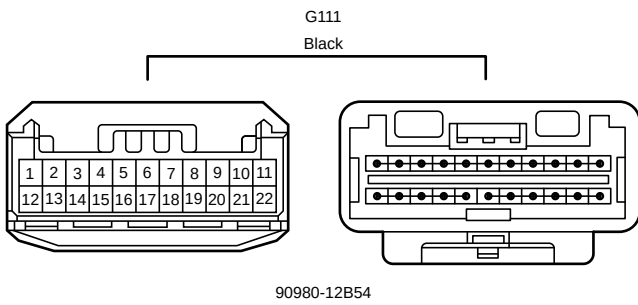


Wireless Door Lock Control (RHD w/o Entry & Start System)

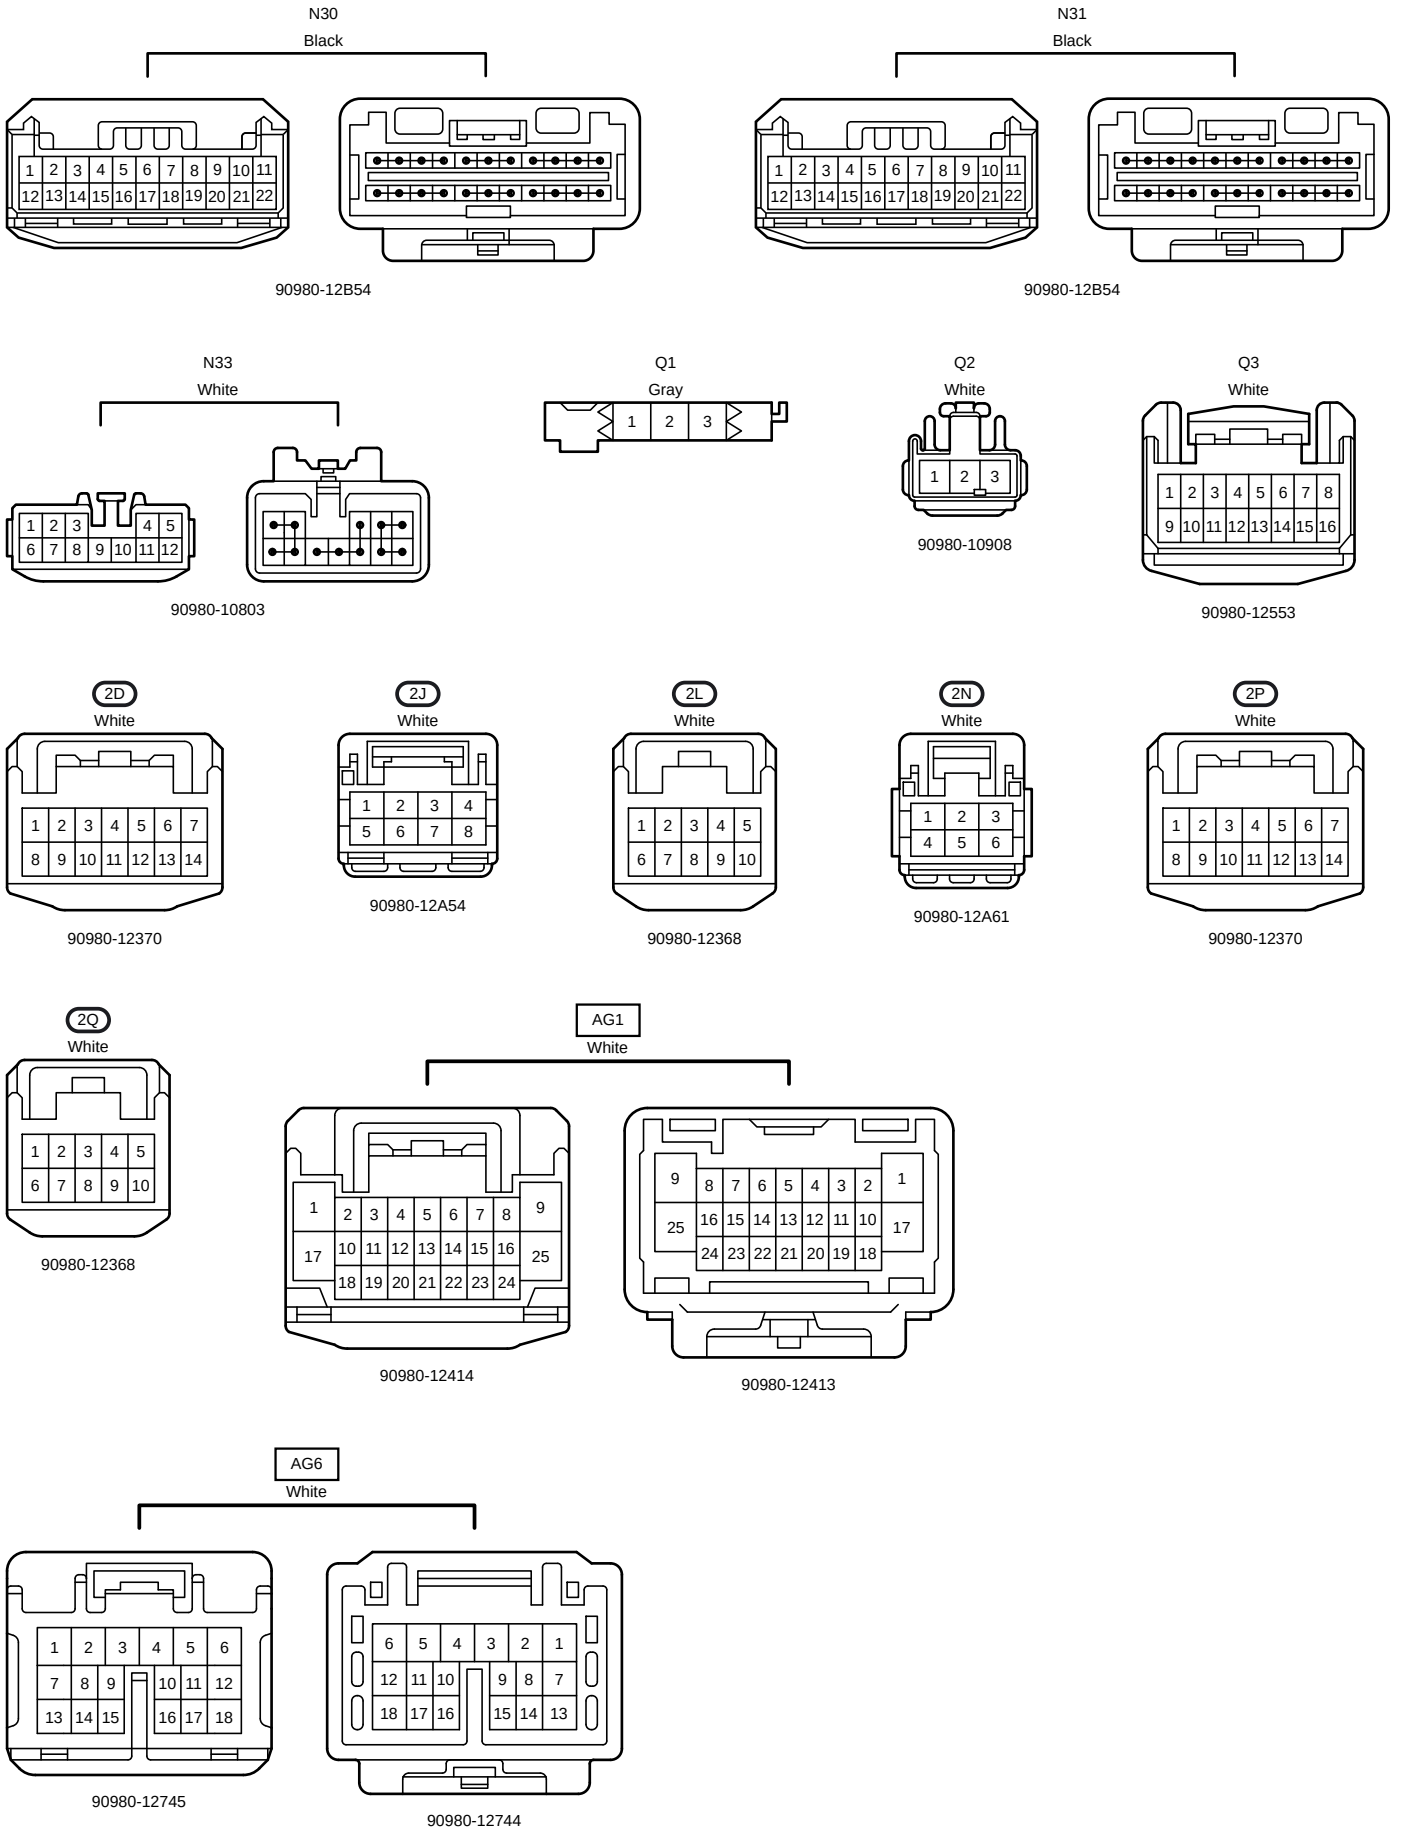

GN1
White

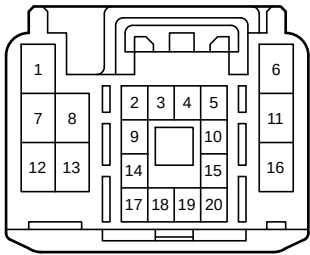


82824-52530

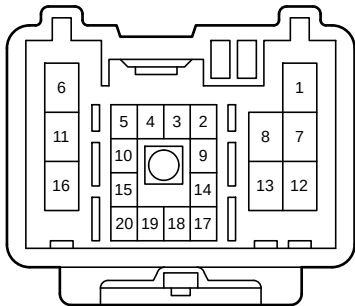


82824-52520

GN2
White

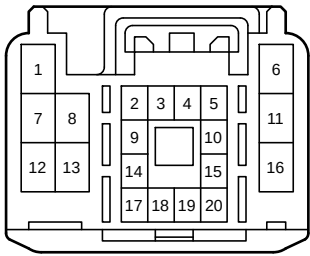


82824-52530

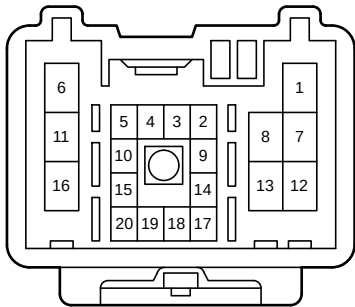


82824-52520

GN4
White

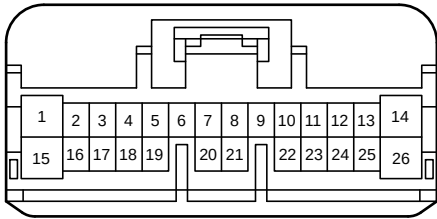


90980-12771

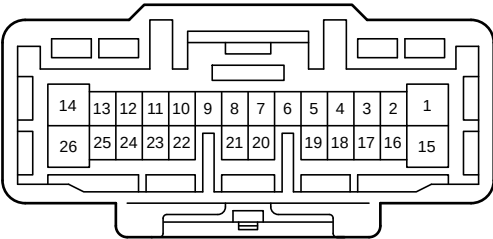


90980-12770

JG1
White

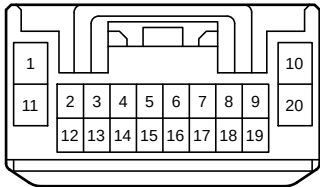


90980-12A22

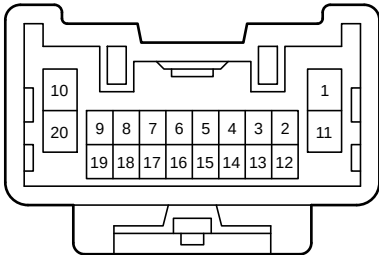


90980-12377

JG2
White

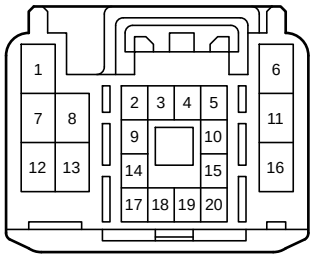


82824-52530

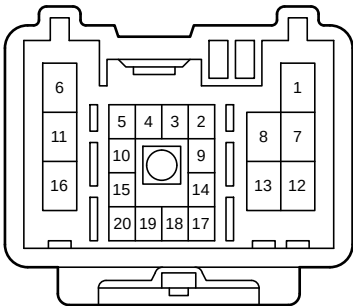


82824-52520

KG1
White

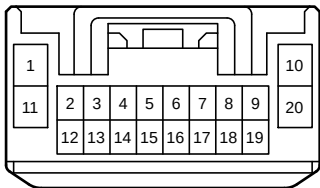


90980-12A22

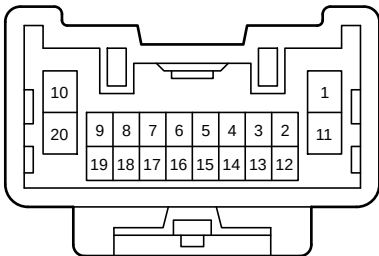


90980-12377

KN1
White

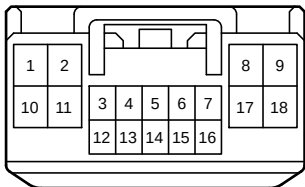


90980-12A21

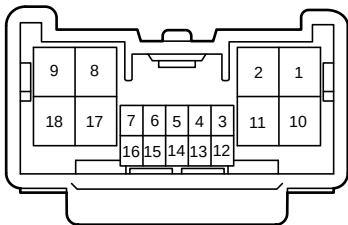


90980-12B07

LN1
White

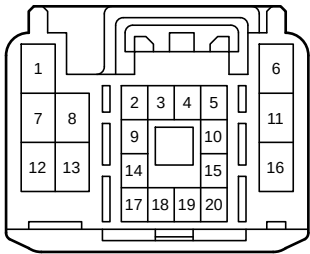


82824-52530

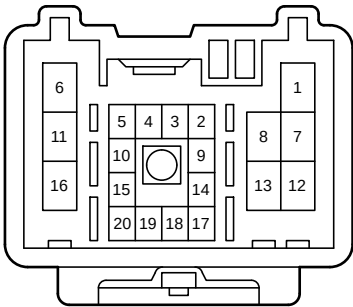


82824-52520

LN2
White

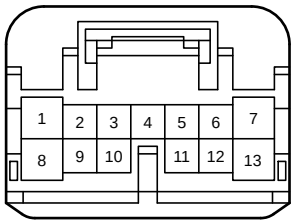


90980-12767

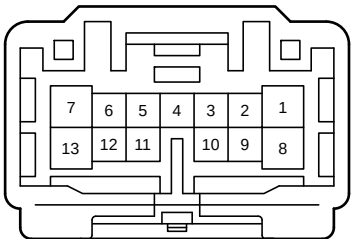


90980-12766

MN1
White

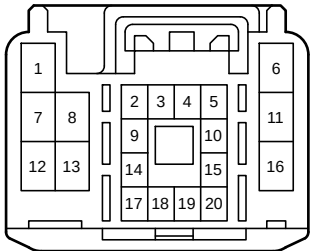


82824-52530

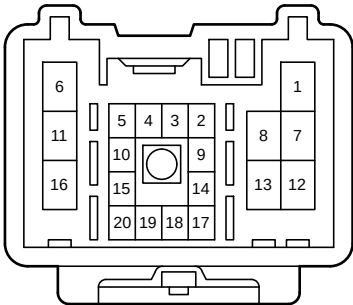


82824-52520

MN2
White

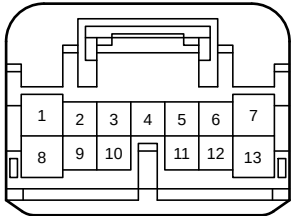


90980-12767

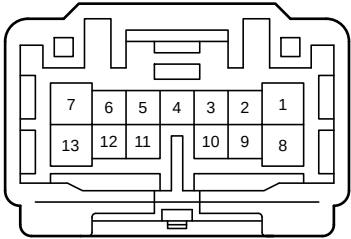


90980-12766

QG1
White

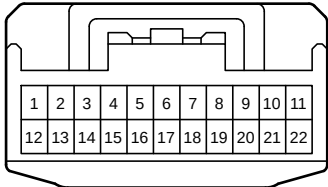

90980-12372

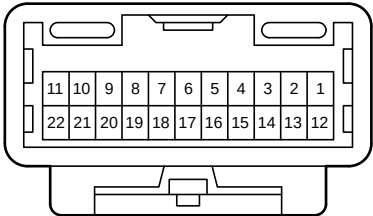

90980-12371