


Porsche Panamera 2010 – 2016 fuse box diagram

Fuse box on left side of dashboard

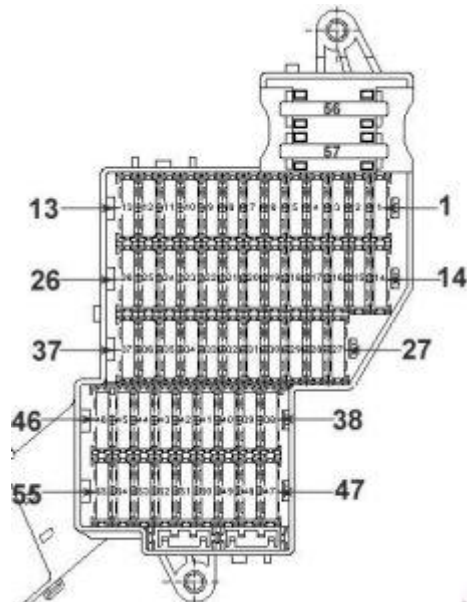

Porsche Panamera – fuse box diagram – fuse box on left side of dashboard

Fuse	Fuse function	Ampere rating [A]
1	Steering column switch	7,5
2	Instrument cluster	7,5
3	PCM 3.1/CDR 31	10
4	Additional instrument	5
5	Air conditioning, front + rear	10
6	Rear view camera Surround View (2014-2016)	5

7	HD: Electric parking brake button	5
8	2010-2013: LHD: Central locking for rear left door RHD: Central locking for left doors	10
9	LHD: Steering column adjustment	15
	2014-2016: Hybrid: Tiptronic S control unit	
10	LHD: PDK control unit	25
11	Power windows, rear left	25
12	Power windows, front left	25
13	2010-2013: ParkAssist 2014-2016; Hybrid: Pedal sensor	5
14	2010-2013: Xenon headlight, left	15
	2014-2016: Xenon/Bi-Xenon/LED headlights, left	
15	Interior mirror Diagnostic socket ParkAssist (2014-2016) Front camera (2014-2016)	5
16	LHD: PDK control unit, clutch sensor RHD: Air conditioning, sun sensor	5

	LHD; Hybrid: Transmission control unit, transmission selector lever (2014-2016)	10
17	Hybrid: Power electronics, spindle actuator	5
18	Hybrid: Power steering	5
19	2014-2016: PDLS/PDLS PLUS control unit	5
20	LHD: Ignition lock control unit, light switch RHD: TV tuner	5
21	LHD; 2010-2013: Central locking for front left door	10
	LHD; 2014-2016: Central locking for front left door	25
	RHD: Mobile phone charger	5
22	Steering column lock	5


23	LHD: Turn signal, rear right Marker light, front left Low beam headlight, right High beam headlight, right Side direction indicators, front Cornering light, front left Ignition lock Two-tone horns PSM Starter relay Emergency flasher switch LED Ignition lock lighting Turn signal, front left/right Footwell lights Ignition lock anti-removal lock Power steering control valves Heatable washer jets	30
24	LHD: Turn signal, rear left Marker light, front right Low beam headlight, left High beam headlight, left Cornering light front right Shutter elements, right/left Active brake ventilation open/closed Heatable washer jets Engine compartment lid Headlight beam adjustment	30
25	LHD: Steering column lock Filler flap closed/open Windshield washer pump, front/rear Servotronic (2014-2016)	15
26	LHD: Headlight cleaning system	30

27	Ignition coils	15
28	2014-2016: Hybrid: Camshaft controller bank 1, camshaft controller bank 2, resonance flap valve	15
	2014-2016: GTS: Valve, air cleaner flap	5
29	Oil level sensor, camshaft sensor	7,5
30	Oxygen sensors behind catalytic converter	7,5
31	Electric control valves for engine	15
	2014-2016: Hybrid: Relay for secondary air pump 1, relay activator for vacuum pump, tank leakage diagnostic pump	5
32	Engine control unit	20
33	2010-2013: Fan activation, tank leakage detection	10
	2014-2016: Fan actuator	5
34	Valves for engine	10
	2014-2016: Hybrid: Valve for flow control, tank vent, cooling water shut-off valve, valve for oil pressure control, valve for secondary air 1, valve for secondary air 2, valve for main water pump, water valve 3 electric machine	30

35	Oxygen sensors ahead of catalytic converter	10
36	2014-2016: Not hybrid: Tank leakage detection/cooling water shut-off valve Hybrid: Relay for transmission oil pump	5
37	2014-2016: Hybrid: Coolant run-on pump, oil level sensor, water pump for high-temperature circuit	15
38	Front cigarette lighter, luggage compartment socket	20
39	Seat adjustment front left without memory	30
40	RHD: Sockets in center console, glove box	20
41	PSM control unit	10
42	Interior light in overhead console	7,5
43	2014-2016: Adaptive cruise control (ACC)	5
44	2014-2016: Hybrid: Spindle actuator	30
45	2014-2016: Hybrid: Power electronics	5
46	2014-2016: Hybrid: High-voltage battery system	15

47	Slide/tilt roof	30
48	Windshield wipers	30
49	Engine control unit	5
50	2014-2016: Hybrid: 2/3-way valve, Water pump relay, Air conditioner relay	7,5
51	Seat adjustment front left with memory	30
52	Seat adjustment, rear left	20
53	Circulating pump	10
54	Rain sensor	5
55	2014-2016: Auxiliary heater	30
56	—	—
57	Air-conditioning system fan	40

Fuse box in right side of dashboard

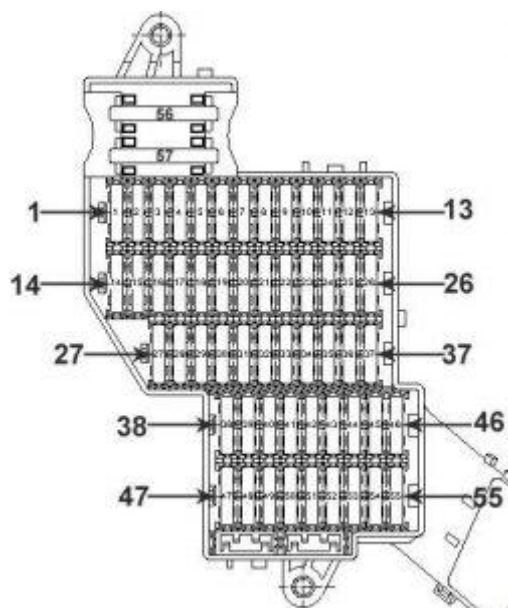

Porsche Panamera – fuse box diagram – fuse

box on right side of dashboard

Number	Fused function	Ampere rating [A]
1	Tire Pressure Monitoring control unit	5
2	—	—
3	Seat heating, front	30
4	Seat heating, rear	30
5	Seat adjustment, rear right	20
6	—	—
7	—	—
8	Seat adjustment front right with memory	30

9	RHD: Electric parking brake button	5
10	LHD: Handset, mobile phone charger	5
	RHD: Steering column adjustment	15
11	LHD: TV tuner	5
	RHD: PDK control unit	25
12	LHD: Telephone	5
13	—	—
14	2010-2013:Xenon headlight right	15
	2014-2016: Xenon/Bi-Xenon/LED headlights, right	7,5
15	—	—
16	RHD; 2010-2013:Diagnostic socket 2014-2016: Front camera	5
17	PSM control unit	5
18	LHD: Air conditioning, sun sensor, refrigerant pressure sensor (2014-2016), air quality sensor (2014-2016) RHD: PDK control unit clutch sensor	5
	2014-2016: RHD; Hybrid: Transmission control unit, transmission selector lever	10


19	Garage door opener	10
20	Airbag control unit	7,5
21	2014-2016: Weight detection feature control unit	5
22	Steering column switch	5
23	Adaptive cruise control (ACC)	5
24	Seat ventilation, front seats	7,5
25	Seat ventilation, rear seats	7,5
26	—	—
27	Center console socket front, cigarette lighter rear	20
28	Seat adjustment front right without memory	30
29	LHD: Socket in center console rear, socket in glove box, socket in large center console rear	20
30	2014-2016: 110 V socket in large rear center console	30
31	Cool box	15
32	Rear Seat Entertainment	7,5

33	RHD: Turn signal, rear right Marker light, front left Low beam headlight, right High beam headlight, right Side direction indicators, front Cornering light, front left Ignition lock Two-tone horns PSM Starter relay Emergency flasher switch LED Ignition lock lighting Turn signal, front left/right Footwell lights Ignition lock anti-removal lock Power steering control valves Heatable washer jets	30
34	RHD: Turn signal, rear left Marker light, front right Low beam headlight, left High beam headlight, left Cornering light, front right Shutter elements, right/left Active brake ventilation open/closed Heatable washer jets Engine compartment lid Headlight beam adjustment	30
35	RHD: Steering column lock Filler flap closed/open Windshield washer pump, front/rear Servotronic (2014-2016)	15
36	RHD: Headlight cleaning system	30

37	—	—
38	—	—
39	PSM control unit	25
40	2010-2013: LHD: Central locking for front/rear right door	10
41	Power windows, front right	25
42	Power windows, rear right	25
43	Alarm horn	5
44	Vehicle Tracking System VTS	5
45	2014-2016: Hybrid: High-voltage charger	5
46	—	—
47	Fuel pump control unit	25
48	Horn (two-tone horns)	15
49	Diagnostic socket	5
50	2010-2013: RHD: Ignition lock control unit, light switch	5


51	2010-2013: RHD: Central locking for front right door	10
52	2010-2013: RHD: Steering column lock	5
53	—	—
54	—	—
55	—	—
56	—	—
57	2010-2013: PSM pump control unit	40

Fuse box in trunk

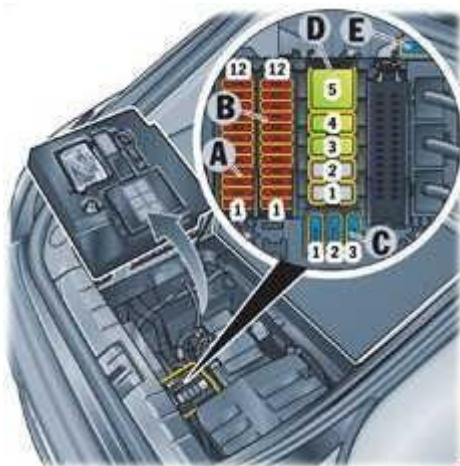

. Porsche Panamera – fuse box diagram – trunk

Panamera S E-Hybrid

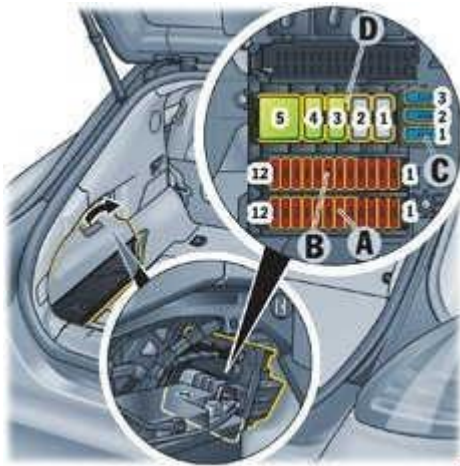

. Porsche Panamera S E-Hybrid – fuse box diagram

– trunk

Number	Fused function	Ampere rating [A]
Fuse carrier A		
1	—	—
2	2014-2016: Spoiler flap (Turbo)	10
3	2010-2013: Audio amplifier (Burmester)	30
	2010-2013: Audio amplifier (ASK Sound, Bose)	25
4	Start/Stop control unit	30
5	Start/Stop control unit	30
6	Differential lock	10
7	Differential lock	30

	2014-2016: Hybrid: Audio amplifier (ASK Sound, Bose)	25
8	Subwoofer (Bose, Burmester)	30
9	Powerlift tailgate	25
10	PASM control unit	25
11	Luggage compartment lights	25
12	PDCC control unit	10
Fuse carrier B		
1	Daytime driving lights, right Tail light, right Reversing light, right Rear fog light, left Brake light, right Raised brake light Sun blind Electric steering column lock Rear wiper Heated rear window Interior surveillance/inclination sensor PASM Engine control unit Safety/curb lights, front doors Interior light/reading light front Interior light rear Orientation light Licence plate light Engine speed hall senders 1 +3 Interior light	15

2	Daytime driving lights, left Tail light, left Reversing light, left Rear fog light, right Brake light, left Safety/curb lights, rear doors Exhaust flap control Filler flap dosed Extend/retract spoiler	15
3	Tailgate closing mechanism Filler flap open Retract/extend rear spoiler Sun blind	30
4	Alarm horn	15
5	Gateway control unit	5
6	Heated rear window	20
7	PASM control unit	5
8	Gateway control unit	5
9	Electric parking brake	5
10	Differential lock	10
11	PDCC control unit	10
	2014-2016: Hybrid: High-voltage battery system	

Relay carrier C		
1	PASM compressor	40
2	Electric parking brake	40
3	—	—
Relay carrier D		
1	Heated rear window	—
2	—	—
3	Spoiler flap (Turbo) Hybrid: Shut-off valve for chiller relay (heat exchanger)	—
4	Spoiler flap (Turbo)	—
5	PASM compressor	—
Fuse carrier E (not hybrid engine)		
—	Standard audio amplifier	5
—	ASK Sound, Bose® audio amplifier	25
—	Burmester® audio amplifier	30