



REMOVAL

1. REMOVE INSTRUMENT PANEL SUB-ASSEMBLY LOWER (See page [IP-10](#))
2. REMOVE CLUTCH PEDAL SPRING (WITHOUT TURN OVER)
3. REMOVE CLUTCH MASTER CYLINDER PUSH ROD CLEVIS WITH HOLE PIN
 - (a) Remove the clip and hole pin.

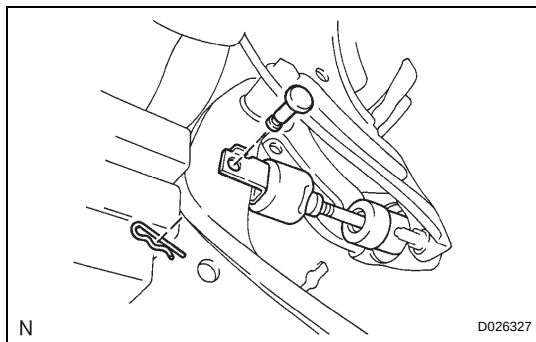


4. REMOVE CLUTCH PEDAL SUPPORT SUB-ASSEMBLY

- (a) with Cruise control:
Disconnect the clutch switch assembly connector.
- (b) Disconnect the clutch start switch assembly connector.
- (c) Remove the 2 nuts, bolt and clutch pedal support assembly.

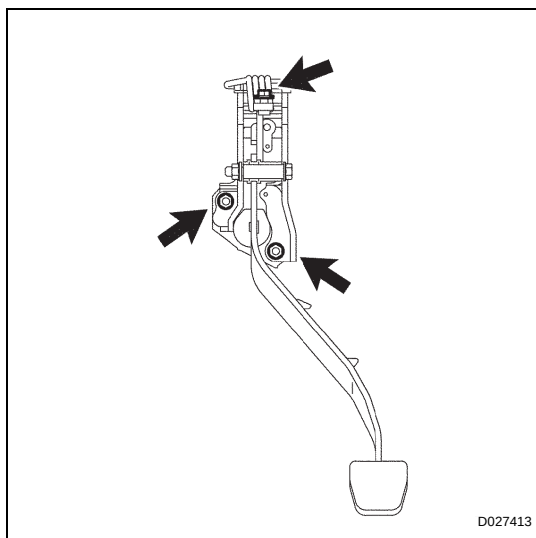


5. REMOVE TURN OVER SPRING SEAT COMPRESSION SPRING (WITH TURN OVER)

- (a) Mount the clutch pedal in a soft jaw vise.
- (b) Using a screwdriver, remove the spring.

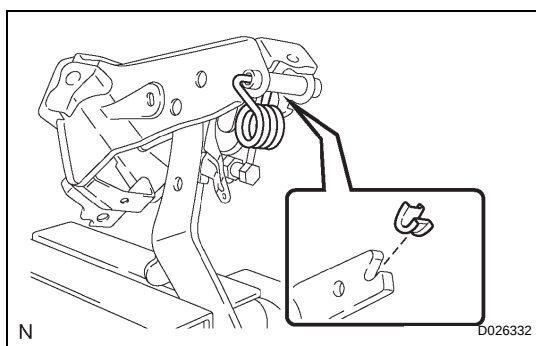


6. REMOVE CLUTCH PEDAL TURNOVER BUSH (WITH TURN OVER)

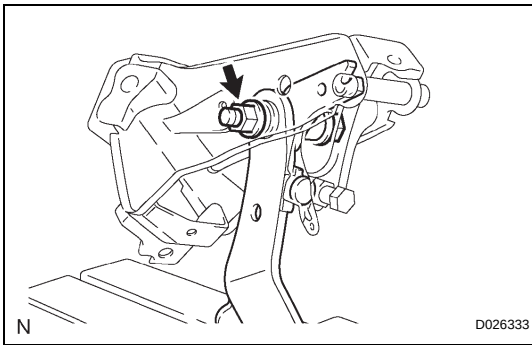

7. REMOVE CLUTCH PEDAL SUB-ASSEMBLY


- Remove the bolt and nut.
- Remove the clutch pedal sub-assembly from the clutch pedal support.

8. REMOVE CLUTCH PEDAL PAD

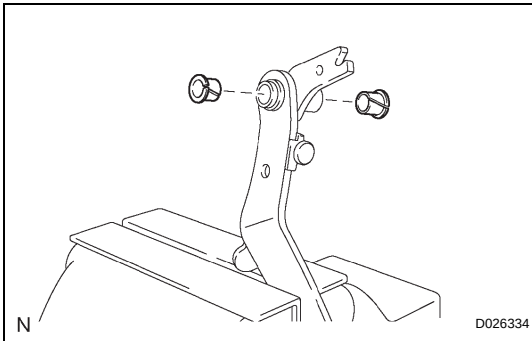


9. REMOVE CLUTCH PEDAL BUSH

- Remove the 2 bushes from the clutch pedal.

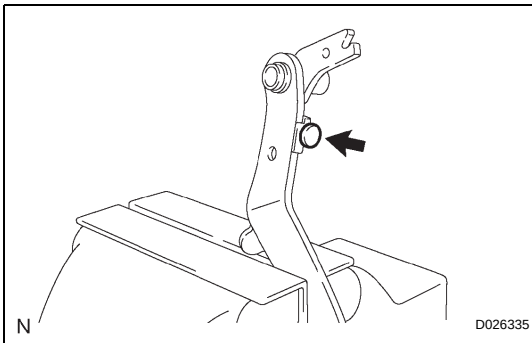


10. REMOVE NO. 1 CLUTCH PEDAL CUSHION

- Using needle-nose pliers, remove the No. 1 cushion from the clutch pedal.

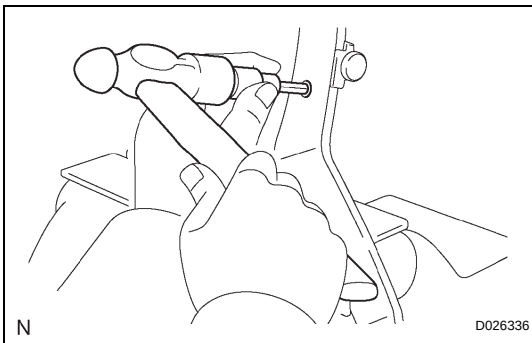

11. REMOVE CLUTCH MASTER CYLINDER PUSH ROD CLEVIS BUSH

- Using a 8 mm hexagon wrench and a hammer, remove the clevis bush from the clutch pedal sub-assembly.

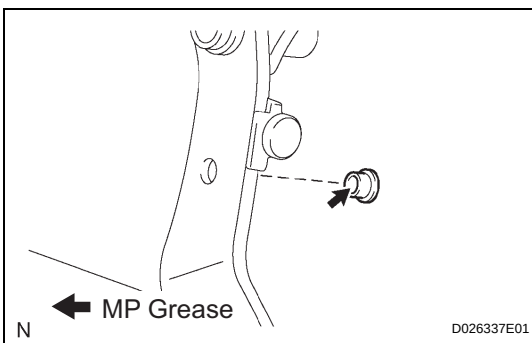


INSTALLATION

1. INSTALL CLUTCH MASTER CYLINDER PUSH ROD CLEVIS BUSH

- Apply MP grease to inside of a new clevis bush.
- Install the clevis bush to the clutch pedal.


HINT:

Install the clevis bush from the right side of the vehicle.

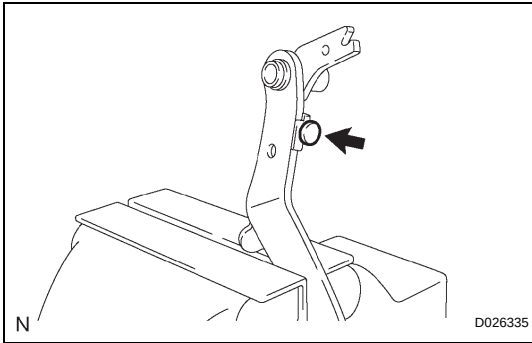

2. INSTALL NO. 1 CLUTCH PEDAL CUSHION


- (a) Using needle-nose pliers, install the No. 1 cushion to the clutch pedal.

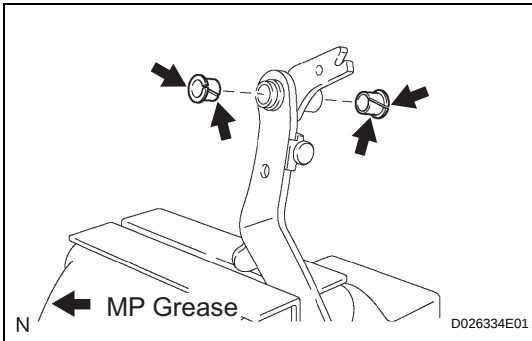

3. INSTALL CLUTCH PEDAL BUSH

- (a) Apply MP grease to both side of 2 new bushes.
(b) Install the 2 bushes to the clutch pedal.

4. INSTALL CLUTCH PEDAL PAD

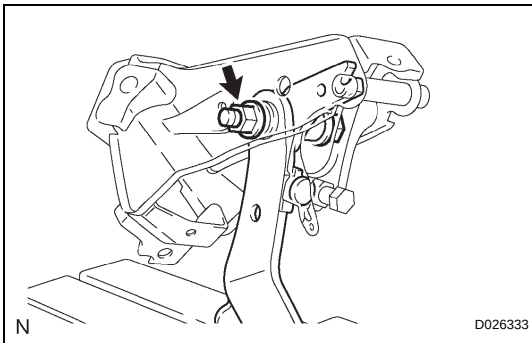


5. INSTALL CLUTCH PEDAL SUB-ASSEMBLY

- (a) Install the clutch pedal sub-assembly to the clutch pedal support with the bolt and nut.

Torque: 37 N*m (375 kgf*cm, 27 ft.*lbf)

HINT:

Install the bolt from the right side of the vehicle.

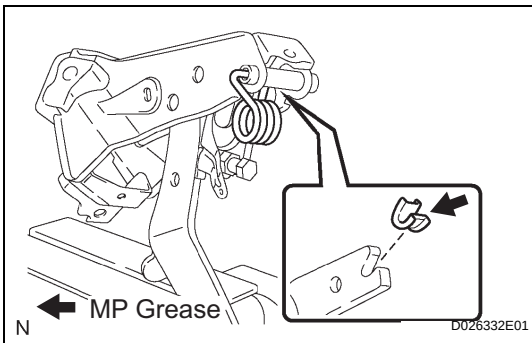


6. INSTALL CLUTCH PEDAL TURNOVER BUSH (WITH TURN OVER)

- (a) Apply MP grease to inside of the turn over bush.
(b) Install the turn over bush to the clutch pedal sub-assembly.

7. INSTALL TURN OVER SPRING SEAT COMPRESSION SPRING (WITH TURN OVER)

- (a) Apply MP grease to the contact surface of the bush and spring.
(b) Install the spring to the clutch pedal sub-assembly and clutch pedal support.

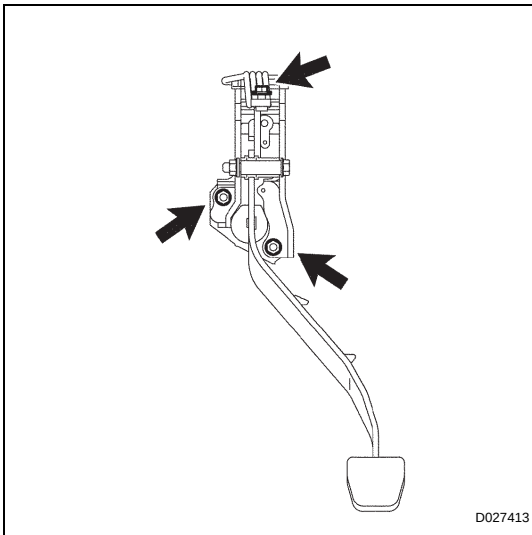**8. INSTALL CLUTCH PEDAL SUPPORT SUB-ASSEMBLY**

- (a) Install the clutch pedal support to the vehicle with the 2 nuts and bolt.


Torque: Bolt

19 N*m (195 kgf*cm, 14 ft.*lbf)

Nut

12 N*m (120 kgf*cm, 9 ft.*lbf)

- (b) Connect the clutch start switch assembly connector.
(c) with Cruise control: Connect the clutch switch assembly connector.

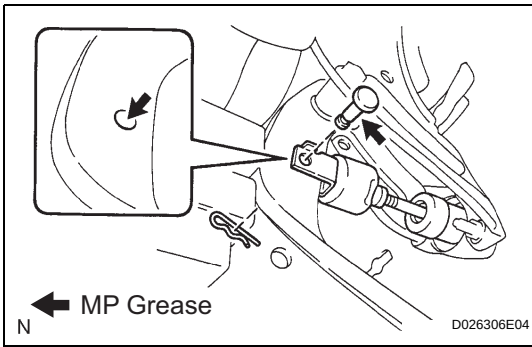**9. INSTALL CLUTCH MASTER CYLINDER PUSH ROD CLEVIS WITH HOLE PIN**

- (a) Apply MP grease to the contact surface of the hole pin and clevis bush.
(b) Connect the clevis to the clutch pedal sub-assembly with the hole pin.

HINT:

Install the hole pin from the right side of the vehicle.

- (c) Install the clip to the hole pin.

10. INSTALL CLUTCH PEDAL SPRING (WITHOUT TURN OVER)**11. INSTALL INSTRUMENT PANEL SUB-ASSEMBLY LOWER****12. INSPECT SRS WARNING LIGHT****13. INSPECT AND ADJUST CLUTCH PEDAL SUB-ASSEMBLY (See page [CL-4](#))**