


INSTALLATION

1. **INSTALL CLUTCH MASTER CYLINDER ASSEMBLY**
 - (a) Install the clutch master cylinder assembly with the 2 nuts.

Torque: 12 N*m (120 kgf*cm, 9 ft.*lbf)

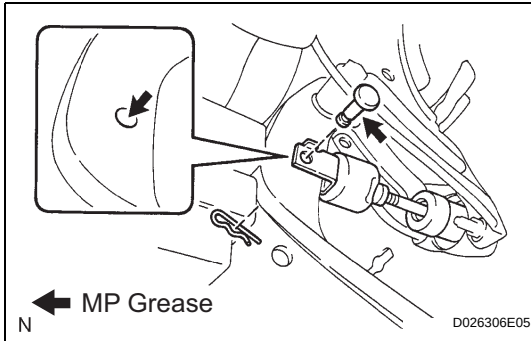

2. **INSTALL CLUTCH MASTER CYLINDER PUSH ROD CLEVIS WITH HOLE PIN**

- (a) Apply MP grease to the contact surface of the hole pin and clevis bush.
- (b) Connect the clevis to the clutch pedal sub-assembly with the hole pin.

HINT:

Install the hole pin from the right side of the vehicle.

- (c) Install the clip to the hole pin.


3. **INSTALL CLUTCH PEDAL SPRING (WITHOUT TURN OVER)**

4. **CONNECT CLUTCH MASTER CYLINDER TO FLEXIBLE HOSE TUBE**

- (a) Using SST, connect the flexible hose tube.

Torque: 15 N*m (155 kgf*cm, 11 ft.*lbf)

SST 09023-00101

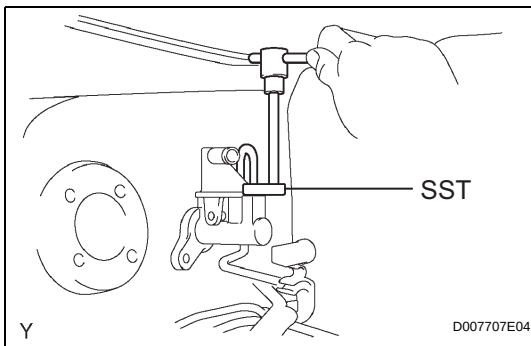


5. **CONNECT CLUTCH RESERVOIR TUBE**

- (a) Connect the clutch reservoir tube with the clip to the clutch master cylinder assembly.

NOTICE:

Facing the white mark upward.

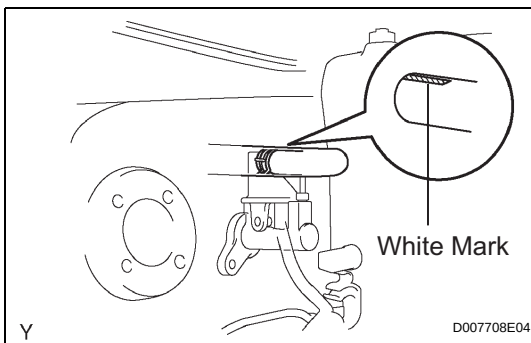

6. **INSTALL BRAKE BOOSTER ASSEMBLY** (See page [BR-26](#))

7. **INSTALL BRAKE MASTER CYLINDER SUB-ASSEMBLY** (See page [BR-19](#))

8. **BLEED BRAKE LINE** (See page [BR-3](#))

9. **BLEED CLUTCH PIPE LINE**

- (a) Fill the brake reservoir tank with clutch fluid and bleed clutch system.

Torque: 8.4 N*m (85 kgf*cm, 74 in.*lbf)

10. **INSPECT AND ADJUST BRAKE PEDAL HEIGHT** (See page [BR-10](#))

11. **INSPECT AND ADJUST CLUTCH PEDAL SUB-ASSEMBLY** (See page [CL-4](#))

12. **INSPECT FOR BRAKE FLUID LEAK**

13. **INSPECT FOR CLUTCH FLUID LEAK**

14. **CHECK FLUID LEVEL IN RESERVOIR**