



Fuse/Relay Information


– Under-dash Fuse/Relay Box

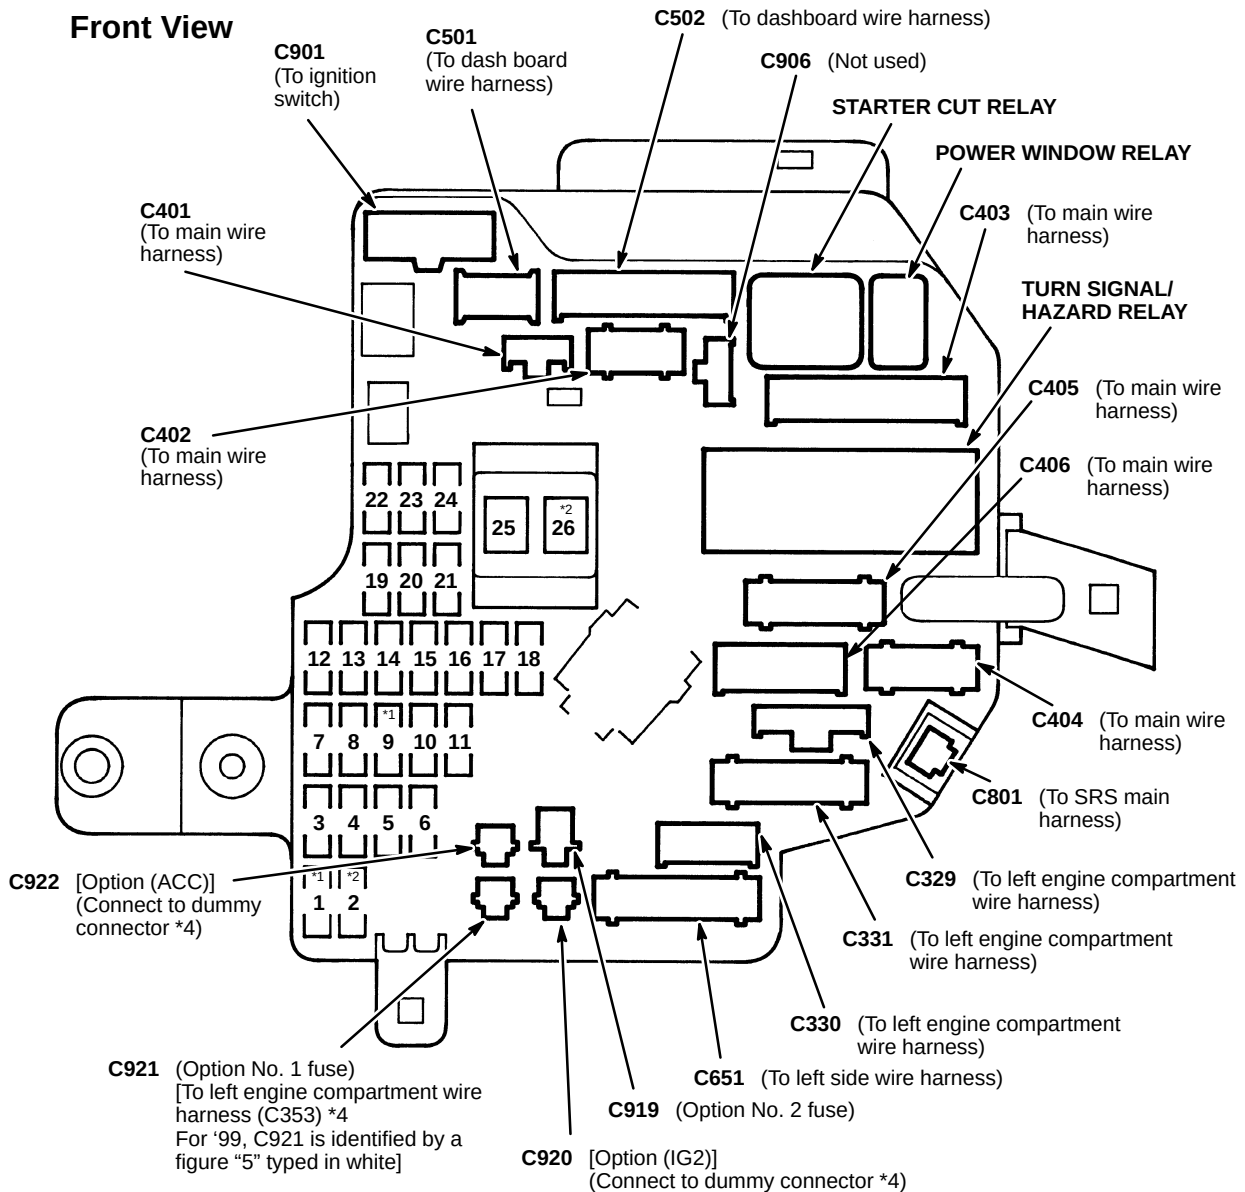

Rear View

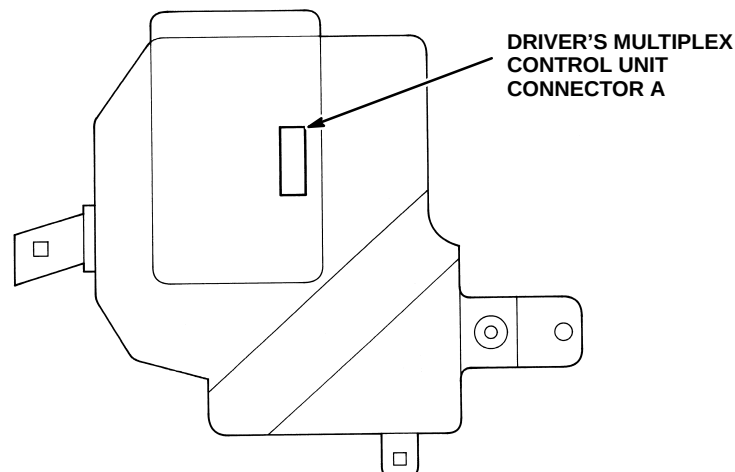

- *1 : Not Used ('96-'98)
- *2 : Not Used
- *3 : '96-'98
- *4 : '99-'04



Fuse/Relay Information

– Under-dash Fuse/Relay Box

Fuse Number	Fuse Name	Amps	Page	Component or Circuit Protected
1 (*3)	(OP +B)	–	–	Not used
1 (*10)	SMALL LIGHT	15A	10-2	Exterior and Interior lights, Taillight relay
2	(OP)	–	10-1	Not used
3	CONDENSER FAN RELAY COOLING FAN RELAY	7.5	10-6	A/C compressor clutch relay, Blower controls, Climate control unit, Condenser fan motor, Fans
4	ACC RADIO	10	10-5	Accessory power socket, Cigarette lighter, Navigation display unit, Navigation unit, OnStar control unit (*9)
5	A/C CLUTCH (FR HEATED SEAT)	20	10-2	A/C compressor clutch, Seat heaters
6	ECU	20	10-2	Data link connector, Immobilizer control unit, PGM-FI main relay
7	SRS	10	10-10	SRS unit
8	DR POWER SEAT RECLINING & RR HEIGHT	20	10-3	Power seats
9 (*10)	BOSE SYSTEM	20	10-3	Bose sound system
10	(RUNNING LIGHT)	10	10-3	Daytime running lights control unit
11	DR POWER SEAT SLIDE & FR HEIGHT	20	10-4	Power seats
12	(RUNNING LIGHT)	7.5	10-6	Daytime running lights control unit
13 (*3)	METER	7.5	10-10	Back-up lights, Gauge relay, Keyless receiver unit, Multiplex control unit, Seat belt tension reducer, Vehicle speed sensor (VSS)
13 (*10)	METER SUN ROOF	7.5	10-10	Automatic dimming mirror, Back-up lights, Brake light failure sensors, Gauge relay, Keyless receiver unit, Moonroof, Multiplex control unit, Seat belt tension reducer, Vehicle speed sensor (VSS), Windshield wiper motor relay
14	STARTER SIGNAL	7.5	23-1	PGM-FI main relay, Powertrain control module (PCM)
15	ACG	7.5	10-4	Alternator
16 (*3)	(BOSE SYSTEM)	20	10-4	Bose sound system
16 (*10)	ACC SOCKET	10	10-4	Accessory power socket
17	POWER WINDOW MPCS	20 7.5 (*5)	120 120-4 (*2) 120-8 (*4) 120-13 (*8)	Multiplex control unit (door)

*1: '96-'97

*2: '98

*3: '96-'98

*4: '99-'01

*5: '98-'04

*6: '96-'99

*7: '00-'04

*8: '02-'04

*9: '02-'04 USA

*10: '99-'04





Fuse/Relay Information

– Under-dash Fuse/Relay Box

Fuse Number	Fuse Name	Amps	Page	Component or Circuit Protected
18	POWER WINDOW MPCS or FR-R	20 30 (*2)	120 120-4 (*2) 120-8 (*4) 120-13 (*8)	Power windows
19	R/C MIRROR	7.5	10-7	ABS control unit, Power mirrors, Rear window defogger relay, VSA system (*7), Automatic lighting control unit
20	ECU	20	10-8	Alternator, Automatic lighting control unit (USA), Clock, Cruise control, DPMS, Gauge assembly, Immobilizer control unit (*3), PGM-FI, Power seats, Shift lock solenoid, TCS (*6), Turn signal/hazard relay, VSA system (*7)
21	POWER WINDOW RR-L	20 30 (*2)	120 120-4 (*2) 120-8 (*4) 120-13 (*8)	Power windows
22	FUEL PUMP	20	10-11	Fuel pump relay, PGM-FI main relay, SRS unit
23 (*3)	SUN ROOF WASHER	10	10-12	Moonroof, Multiplex control unit, Wiper/washer
23 (*9)	SRS	7.5	10-12	Occupant position detection system (*9)
24	POWER WINDOW RR-R	20 30 (*2)	120 120-4 (*2) 120-8 (*4) 120-13 (*8)	Multiplex control unit, Power windows
25	IG COIL	30	10-11	Ignition system
26	–	–	10-1	Not used

*1: '96-'97

*2: '98

*3: '96-'98

*4: '99-'01

*5: '98-'04

*6: '96-'99

*7: '00-'04

*8: '02-'04

*9: '99-'04

