


Connector Views

11. Front Passenger's Window Switch


- Gray
- Mounted to the front passenger's door panel
- On front passenger's door wire harness

'96-'97:

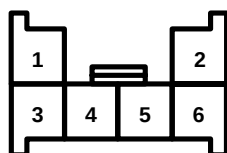


- 1 BLU/WHT (Motor control)
- 2 BLK/GRN (Main switch enable)
- 3 WHT/YEL (Switched power)
- 4 BLU/RED (Motor control)
- 5 BLK/RED (Master switch control – down)
- 6 BLU/BLK (Master switch control – up)

'99-'01:

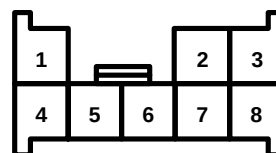


- 1 GRN (Motor control)
- 2 RED (Motor control)
- 3 BLK/GRN (Main switch enable)
- 4 RED (Illumination (–))
- 5 WHT/YEL (Switched power)
- 6 RED/BLK (Illumination (+))
- 7 BLU/BLK (Master switch control – up)
- 8 BLK/RED (Master switch control – down)

'98:

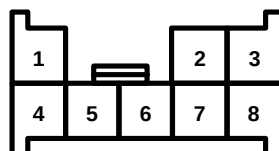

- 1 GRN (Motor control)
- 2 RED (Motor control)
- 3 BLK/GRN (Main switch enable)
- 4 RED (Illumination (–))
- 5 WHT/YEL (Switched power)
- 6 RED/BLK (Illumination (+))
- 7 BLU/BLK (Master switch control – up)
- 8 BLK/RED (Master switch control – down)

'02-'04:

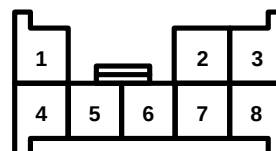

- 1 GRN (Motor control)
- 2 RED (Motor control)
- 3 BLK/GRN (Main switch enable)
- 4 RED (Illumination (–))
- 5 WHT/YEL (Switched power)
- 6 RED/BLK (Illumination (+))
- 7 BLU/BLK (Master switch control – up)
- 8 BLK/RED (Master switch control – down)

