


Connector Views

75. SRS Unit


- Yellow
- Behind audio unit

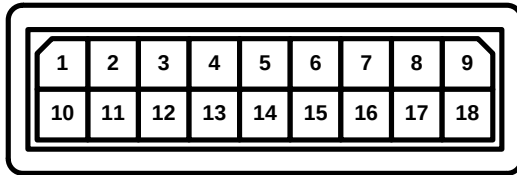

'96-'98:

- On SRS main wire harness

- 1 GRY or GRN (Driver's inflator)
- 2 —
- 3 GRY or GRN (Fuse 7)
- 4 GRY or GRN (Driver's seat belt tensioner)
- 5 GRY or GRN (Frt. pass. seat belt tensioner)
- 6 GRY or GRN (SRS indicator control)
- 7 GRY (Fuse 22)
- 8 GRY or GRN (MES)
- 9 GRY or GRN (Service check connector input)
- 10 GRY or GRN (Frt. pass. inflator)
- 11 GRY or GRN (Driver's seat belt tensioner)
- 12 GRY or GRN (Frt. pass. seat belt tensioner)
- 13 GRY or GRN (Driver's inflator)
- 14 GRY or GRN (Frt. pass inflator)
- 15 GRY or GRN (DLC input/output)
- 16 GRY or GRN (G801)
- 17 GRY or GRN (G801)
- 18 GRY or GRN (MES)

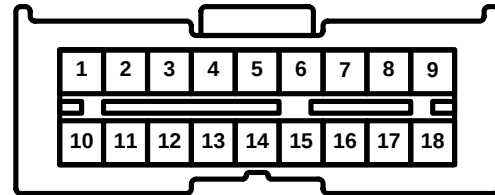

'99-'04:

Connector A

- On SRS main wire harness

- 1 GRN or GRY (Fuse 22)
- 2 GRN (Fuse 7)
- 3 GRN (Service check connector input)
- 4 GRN (SRS indicator control)
- 5 GRN (DLC input/output)
- 6 GRN (MES)
- 7 GRN (Frt. pass. 2nd inflator)
- 8 GRN (Frt. pass. 1st inflator)
- 9 GRN (Driver's inflator)
- 10 GRN (Dr. seat belt switch input)
- 11 GRN (Dr. seat belt switch input)
- 12 GRN (Frt. pass. seat belt switch input)
- 13 GRN (Frt. pass. seat belt switch input)
- 14 GRN (G801)
- 15 GRN (G801)
- 16 GRN (Frt. pass. 2nd inflator)
- 17 GRN (Frt. pass. 1st inflator)
- 18 GRN (Driver's inflator)

Connector B

- On SRS floor wire harness

- 1 GRN (Dr. side impact sensor)
- 2 GRN (Dr. side inflator)
- 3 GRN (Frt. pass. side inflator)
- 4 GRN (Dr. side seat belt tensioner)
- 5 GRN (Dr. side seat belt tensioner)
- 6 GRN (Frt. pass. seat belt tensioner)
- 7 GRN (Dr. side impact sensor)
- 8 GRN (Frt. pass. side impact sensor)
- 9 GRN (Frt. pass. side impact sensor)
- 10 GRN (OPDS unit input)
- 11 GRN (Frt. pass. side impact sensor)
- 12 GRN (Dr. side impact sensor)
- 13 GRN (Dr. side impact sensor)
- 14 GRN (Frt. pass. side impact sensor)
- 15 GRN (Frt. pass. side inflator)
- 16 GRN (Dr. side inflator)
- 17 GRN (Frt. pass. seat belt tensioner)
- 18 '02-'04 USA: GRN (OnStar system)

