


Connector Views

110. Power Seat Control Unit

– Underside of driver's seat

Connector A


- Black
- On driver's power seat wire harness

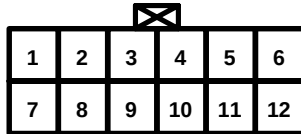

- 1 LT GRN/RED (Communication line)
- 2 —
- 3 —
- 4 GRN/BLK (Common)
- 5 BLK/YEL (Ignition input)
- 6 WHT/YEL (Fuse 56)
- 7 BLK/WHT (Communication line)
- 8 —
- 9 —
- 10 —
- 11 —
- 12 BLK
- '96-'98: (G401)
- '99-'04: (G251)

Connector C


- Gray or Black
- On driver's power seat wire harness

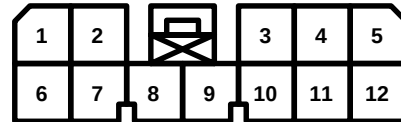

- 1 BLK (G651)
- 2 GRN (Rear up-down motor control)
- 3 RED (Recline motor control)
- 4 YEL (Slide motor control)
- 5 RED/WHT (Fuse 11)
- 6 BLK (G651)
- 7 BLU/GRN (Rear up-down motor control)
- 8 BRN/WHT (Front up-down motor control)
- 9 ORN (Front up-down motor control)
- 10 GRY (Recline motor control)
- 11 LT GRN (Slide motor control)
- 12 WHT/RED (Fuse 8)

Connector B

- Black
- On driver's power seat wire harness

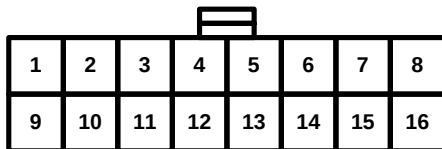

- 1 YEL/BLK (Front up-down position input)
- 2 YEL/GRN (Slide position input)
- 3 GRN/ORN (Rear up input)
- 4 GRN/BLU (Front up input)
- 5 WHT/YEL (Recline forward input)
- 6 BLU (Slide forward input)
- 7 —
- 8 —
- 9 WHT (Rear up-down position input)
- 10 WHT/RED (Recline position input)
- 11 BRN/BLK (Rear down input)
- 12 RED/BLK (Front down input)
- 13 ORN/GRN (Recline backward input)
- 14 ORN/BLU (Slide backward input)
- 15 —
- 16 BRN (Common)

