

Connector Views


111. ABS Control Unit ('96-'99)

– Above right kick panel

'96-'97:

Connector A

– Orange
– On main wire harness




1 RED/BLU (FL-IN)	14 YEL/BLU (FL-OUT)
2 RED/BLK (FR-IN)	15 YEL/BLK (FR-OUT)
3 RED/WHT (R-IN)	16 YEL/WHT (R-OUT)
4 WHT/RED (FLP)	17 GRN (MCK)
5 WHT/BLU (CHG)	18 GRY/WHT (RLP)
6 WHT/GRN (FRP)	19 YEL (P-SW)
7 —	20 GRY/BLK (RRP)
8 —	21 —
9 —	22 —
10 RED (SCS)	23 —
11 GRN/RED (PARK)	24 BLU/WHT (WARN 2)
12 BLK (FR-GND)	25 BLK (FL-GND)
13 WHT/BLK (+ B2)	26 BLK (L-GND)

'98-'99:

Connector A


– Orange
– On main wire harness

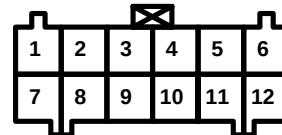

1 BLU/WHT (WALP)	7 BLK (GND2)
2 BLK (GND1)	8 YEL (RR-IN)
3 BLK/ORN (RR-OUT)	9 RED/BLU (FL-IN)
4 YEL/BLU (FL-OUT)	10 RED/WHT (RL-IN)
5 YEL/WHT (RL-OUT)	11 RED/BLK (FR-IN)
6 YEL/BLK (FR-OUT)	12 YEL/RED (PMR)

Connector B


– Orange
– On main wire harness



1 YEL/GRN (FSR)	12 GRN/WHT (STOP)
2 BRN (FLW (-))	13 LT BLU (RLW (+))
3 GRN/BLU (FLW (+))	14 GRY (RLW (-))
4 GRN (FRW (-))	15 GRN/YEL (RRW (+))
5 GRN/BLK (FRW (+))	16 BLU/YEL (RRW (-))
6 —	17 —
7 —	18 BLK/ORN (COM (-))
8 —	19 —
9 —	20 BLU/WHT (WARN 1)
10 BLK (R-GND)	21 YEL/RED (PMR)
11 YEL/BLK (IG2)	22 BLK (L-GND)

Connector B

– Orange
– On main wire harness



1 BLK (GND3)	12 BLK (GND4)
2 —	13 GRY/WHT (RLP)
3 WHT/RED (FLP)	14 RED (SCS)
4 GRN/RED (PARK)	15 GRY/BLK (RRP)
5 WHT/GRN (FRP)	16 GRN (MCK)
6 BRN (FLW (-))	17 LT BLU (RLW (+))
7 GRN/BLU (FLW (+))	18 GRY (RLW (-))
8 GRN (FRW (-))	19 GRN/YEL (RRW (+))
9 GRN/BLK (FRW (+))	20 BLU/YEL (RRW (-))
10 GRN/WHT (STOP)	21 YEL/GRN (FSR)
11 YEL/BLK (IG2)	22 RED (DLC)

