



Connector to Harness Index

Left Engine Compartment Wire Harness

Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
C124	2-GRY	Left side of engine compartment	Engine wire harness	
C171	14-GRY	Left side of engine compartment	A/T sub-harness	
C301	5-BRN	Left side of engine compartment	Under-hood fuse/relay box	
C302	2-BRN	Left side of engine compartment	Under-hood fuse/relay box	
C303	3-BRN	Left side of engine compartment	Under-hood fuse/relay box	
C304	1-BLK	Left side of engine compartment	Under-hood fuse/relay box	
C305	7-BRN	Left side of engine compartment	Under-hood fuse/relay box	
C306	9-GRY	Left side of engine compartment	Under-hood fuse/relay box	
C307	11-GRY	Left side of engine compartment	Under-hood fuse/relay box	
C309	2-ORN	Left side of engine compartment	ABS left front wheel sensor	
C310	4-GRY	Left side of engine compartment	Cruise control actuator	
C311	3	Behind left headlight	Left headlight (low/high beam)	*2
C311	2-GRY	Behind left headlight	Left headlight (low beam)	*6
C312	3	Behind left fog light	Left fog light	*2
C312	3-BLK	Behind left headlight	Left headlight (high beam)	*6
C313	2	Behind left front parking light	Left front parking light	*2
C314	2-BRN	Behind left front turn signal light	Left front turn signal light	*2
C314	3-WHT	Behind left turn signal/parking light	Left front turn signal/parking light	*6
C315	2-BLU	Behind left front side marker light	Left front side marker light	
C316	2-BLK	Left side of engine compartment	EVAP control canister vent shut valve	*3
C317	5-GRY	Under cowl cover	Windshield wiper motor	
C318	2-BRN	Inside of left fender	Windshield washer motor	
C319	3-GRY	Left side of engine compartment	Fuel tank pressure sensor	*3
C320	2-BLK	Left side of engine compartment	EVAP bypass solenoid valve	*3
C321	1-BLK	Left side of engine compartment	Brake fluid level switch (+)	
C322	1-BLK	Left side of engine compartment	Brake fluid level switch (-)	
C324	7-BRN	Under left side of dash	Main wire harness	
C325	20-GRY	Under left side of dash	Main wire harness	
C326	18-GRY	Under left side of dash	Main wire harness	
C327	22-GRN	Under left side of dash	Main wire harness	
C328	12-GRY	Under left side of dash	Main wire harness	*2
C328	14-GRY	Under left side of dash	Main wire harness	*6
C329	3-BLU	Behind left side kick panel	Under-dash fuse/relay box	
C330	5-BLU	Behind left side kick panel	Under-dash fuse/relay box	
C331	16-BLU	Behind left side kick panel	Under-dash fuse/relay box	
C332	2-GRY	Under right side of radiator	Radiator fan control sensor	
C333	2-GRY	Under right side of radiator	Radiator fan motor	
C334	2-GRY	Under condenser fan motor	Condenser fan motor	
C335	5-BLK	Front of engine compartment	Fog light relay	
C336	5	Middle of engine compartment	ABS rear fail-safe relay	*1
C336	5-BLK	Front of engine compartment	Horn relay	*5
C337	5	Middle of engine compartment	ABS front fail-safe relay	*1
C337	5-BLK	Middle of engine compartment	ABS fail-safe relay	*4
C338	5-BLK	Front of engine compartment	Windshield wiper motor relay	
C339	5-BLK	Front of engine compartment	Gauge relay	
C340	5	Middle of engine compartment	Power window master switch relay	*1
C340	5-BLK	Middle of engine compartment	Taillight relay	*6

*1: '96-'97

*2: '96-'98

*3: '96-'99

*4: '98-'99

*5: '98-'04


*6: '99-'04

*7: '98


*8: '99

*9: '00-'04





Connector to Harness Index

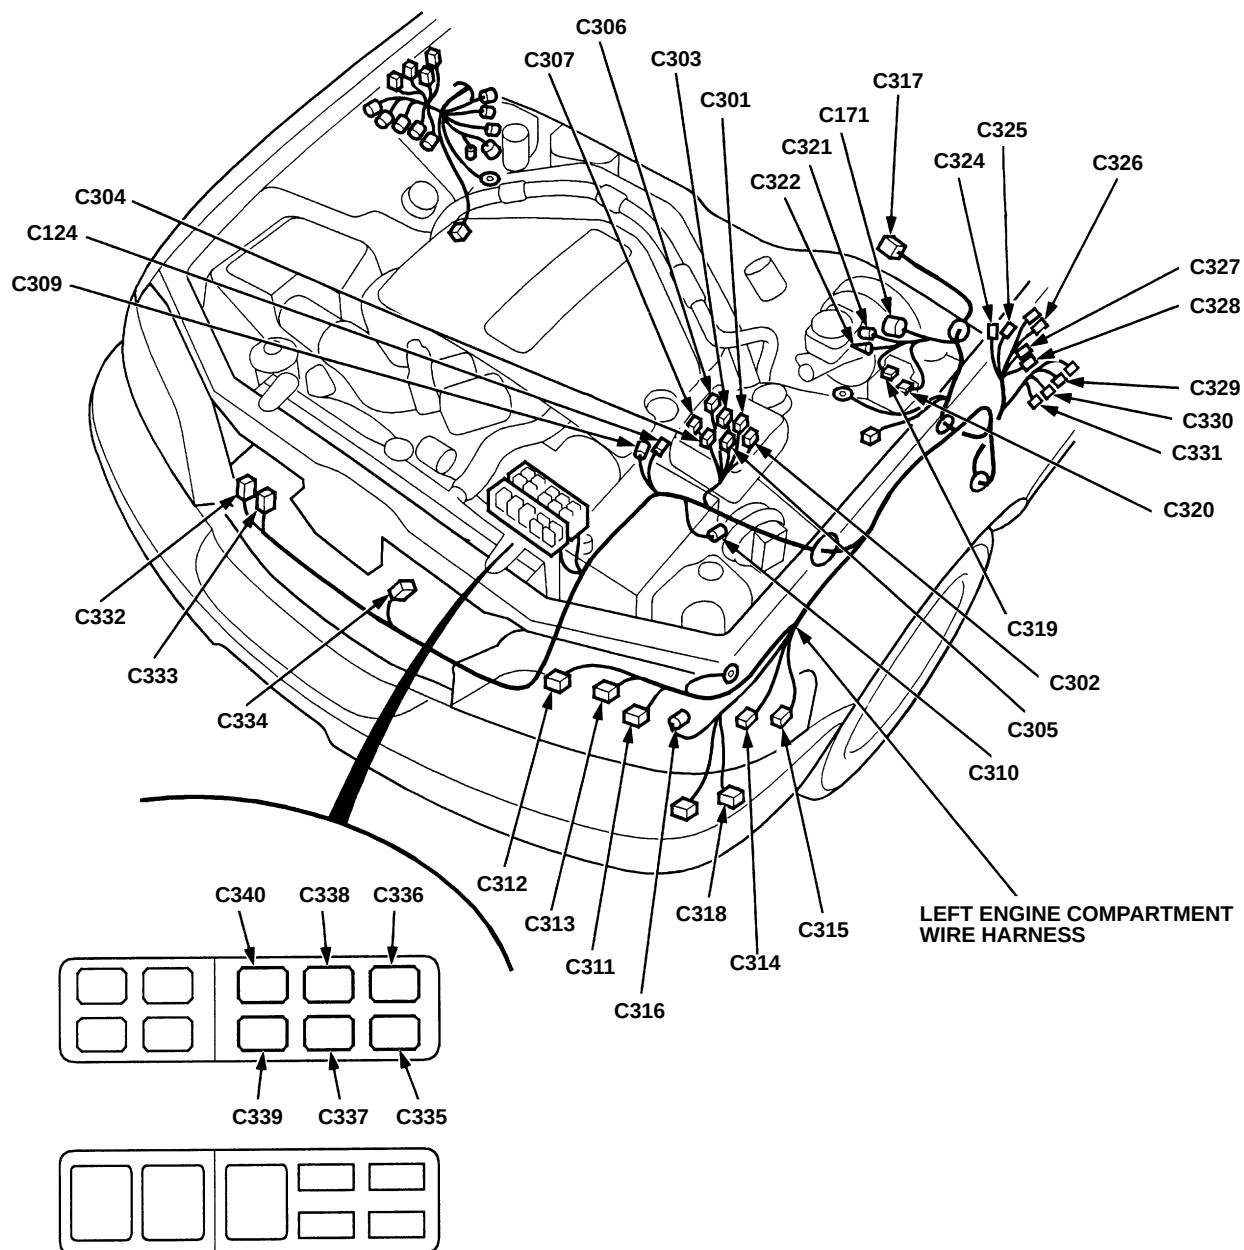



Connector to Harness Index

Left Engine Compartment Wire Harness

Connector or Terminal	Cavities/Color	Location	Connects to	Notes
C341	5-BLK	In under-hood relay box C	A/T reverse relay	
C342	5-BLK	In under-hood relay box C	TCS fail-safe relay	*3
C342	5-BLK	In under-hood relay box C	Sub-throttle motor fail-safe relay	*9
C343	5-BLK	In under-hood relay box C	Radiator fan relay	
C344	4-NAT	In under-hood relay box A	A/C compressor clutch relay	
C345	4-NAT	In under-hood relay box A	Condenser fan relay	
C346	4	Middle of engine compartment	Low beam cut relay	Canada *2
C346	4-NAT	In under-hood relay box A	Security horn relay	*6
C347	5-NAT	In under-hood relay box A	Radiator fan main relay	
C348	5-NAT	In under-hood relay box A	Rear window defogger relay	
C349	5-NAT	In under-hood relay box A	Windshield wiper intermittent relay	
C350	5	In under-hood relay box C	Seat heater relay	*7
C350	5-BLK	Middle of engine compartment	Accessory power socket relay	*6
C351	3-BLK	Behind left side of front bumper	Left fog light	*6
C352	2-BLK	Behind left kick panel	Diode (Lighting)	*8, USA *9
C352	3	Left side of engine compartment	Diode (Lighting)	Canada *9
C353	1-BRN	Behind left kick panel	Under-dash fuse/relay box	*6
C354	4	Middle of engine compartment	Low beam cut relay	Canada *9
C355	2-GRY	Left side of engine compartment	Precharge pump motor	*9
G301		Left side of engine compartment	Body ground, via left engine compartment wire harness	
G302		Behind front parking light	Body ground, via left engine compartment wire harness	

*1: '96-'97

*4: '98-'99

*7: '98

*2: '96-'98

*5: '98-'04


*8: '99

*3: '96-'99

*6: '99-'04

*9: '00-'04





Connector to Harness Index

