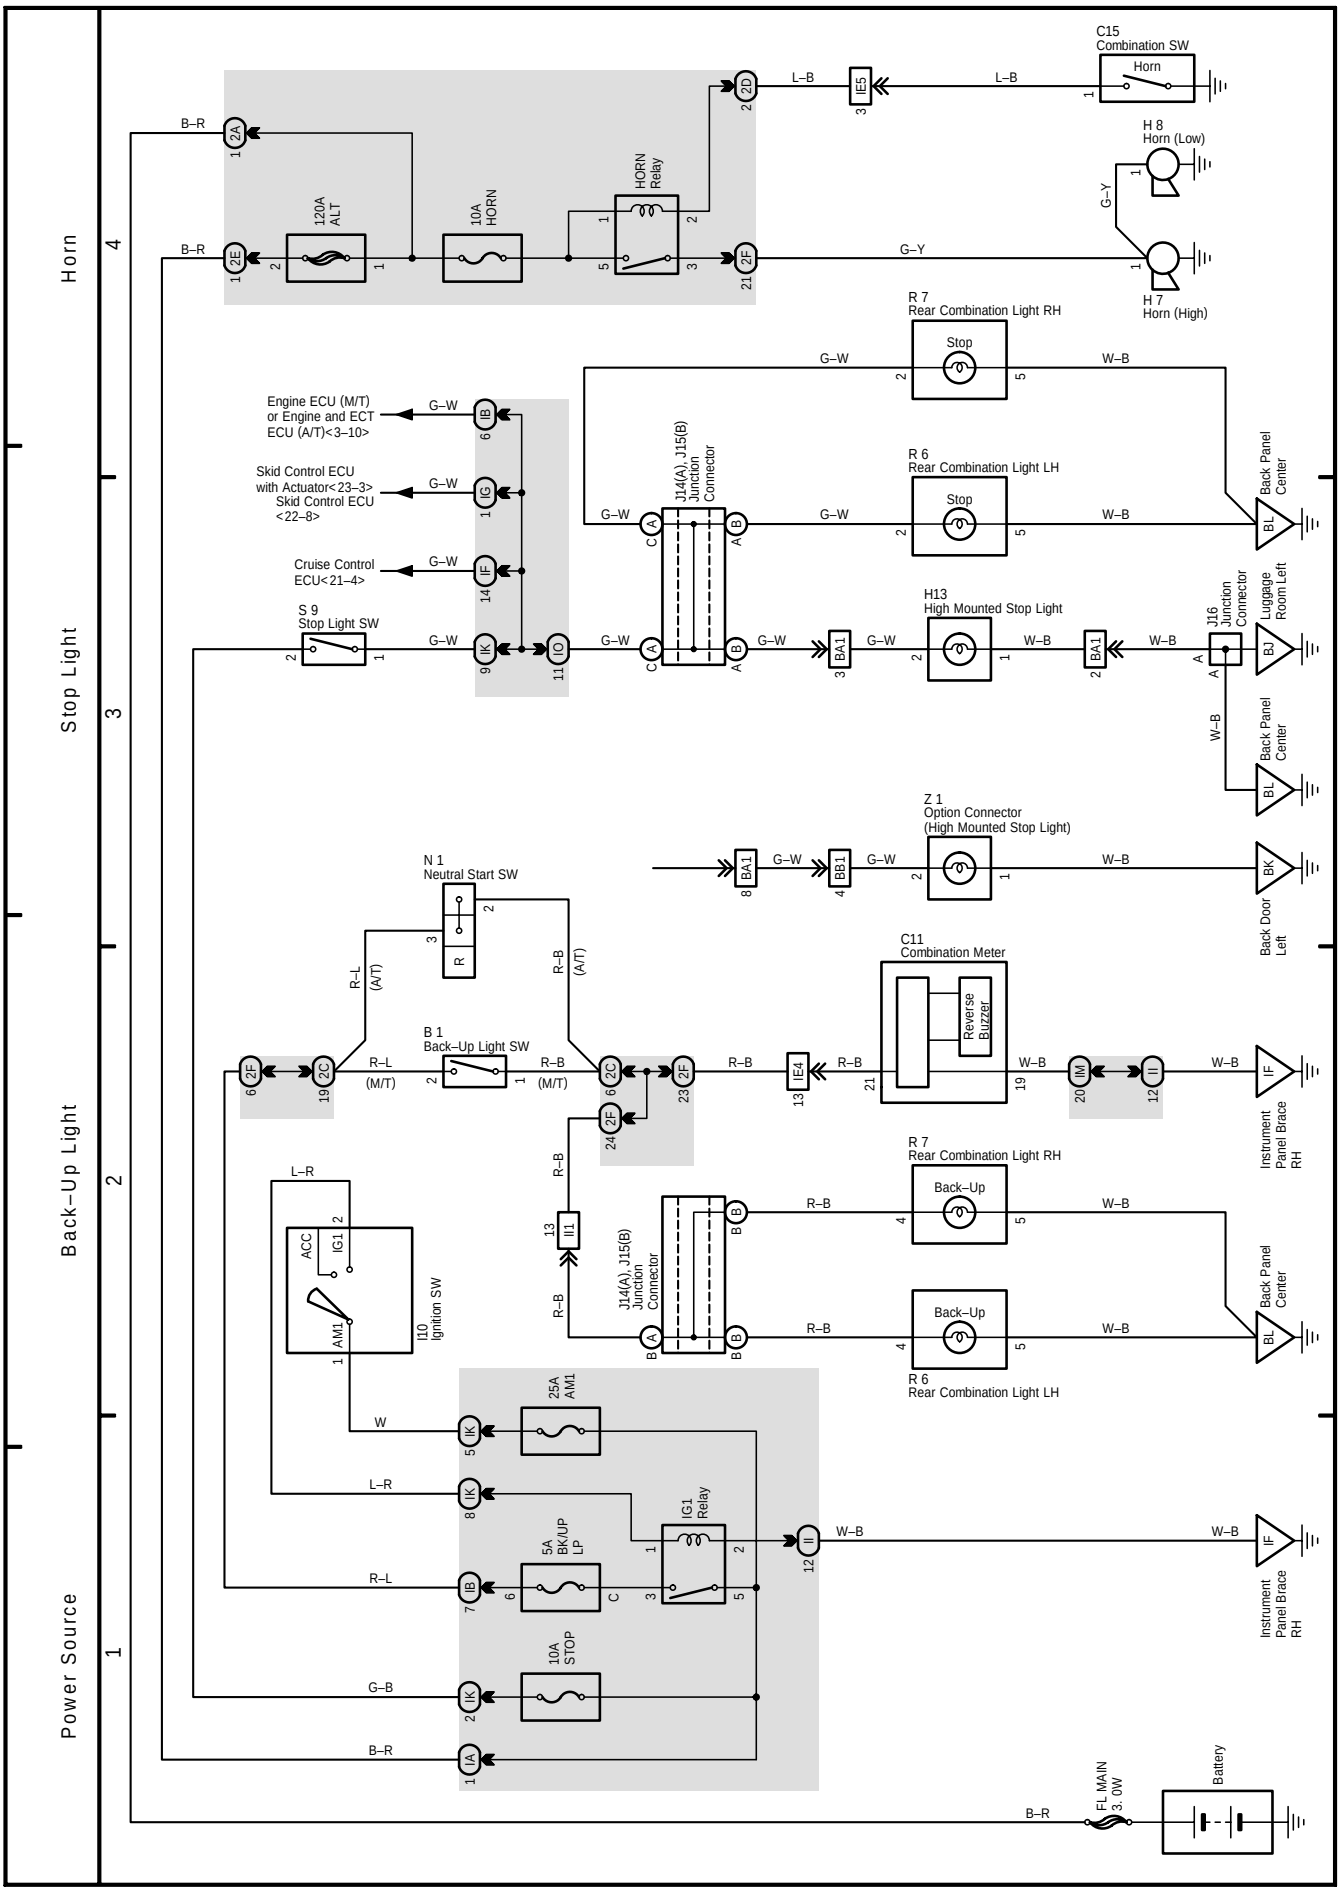
Horn
Stop Light
Back–Up Light
Power Source
C15
Combination SW
Horn
H 8
Horn (Low)
H 7
Horn (High)
HORN
Relay
120A
ALT
10A
HORN
R 7
Rear Combination Light RH
Stop
R 6
Rear Combination Light LH
Stop
Engine ECU (M/T)
or Engine and ECT
ECU (A/T)<3–10>
Skid Control ECU
with Actuator<23–3>
Skid Control ECU
<22–8>
Cruise Control
ECU<21–4>
S 9
Stop Light SW
J14(A), J15(B)
Junction
Connector
H13
High Mounted Stop Light
J16
Junction
Connector
Back Panel
Center
Luggage
Room Left
Z 1
Option Connector
(High Mounted Stop Light)
Back Door
Left
N 1
Neutral Start SW
B 1
Back–Up Light SW
C11
Combination Meter
Reverse
Buzzer
Instrument
Panel Brace
RH
Back–Up
I10
Ignition SW
ACC
IG1
AM1
25A
AM1
5A
BK/UP
LP
IG1
Relay
10A
STOP
FL MAIN
3. 0W
Battery